

# DPHx DIGITAL PORTABLE RADIO

 **BK RADIO**



PRG  
1--12345

1	2	3	FCN
4	5	6	PRI
7	8	9	ENT
* (Star)	U	# (Hash)	CLR

---

# TABLE OF CONTENTS

---

How To Program Radios.....	2
Keypad Programming .....	2
General Settings (Channel 0).....	4
A. Group Password .....	5
B. Automatic Numeric Identification (ANI) .....	5
C. Transmitter Time-Out Timer.....	6
D. Scan Delay Time.....	6
E. Priority 1 Channel .....	7
F. Priority 2 Channel .....	7
G. Channel 0 Group One Functions .....	8
H. Channel 0 Group Two Functions .....	10
I. Channel 0 Group Three Functions.....	12
J. Backlight Duration.....	14
K. Group Labels .....	14
L. Review Channel 0 Values .....	16
Channel Settings.....	16
A. Channel Bandwidth.....	16
B. Receive Frequency .....	17
C. Receive Mode .....	17
D. Receive Analog Channel Guard .....	17
E. Receive NAC .....	18
F. Squelch Mode .....	19
G. Transmit Frequency .....	19
H. Transmit Mode .....	20
I. Transmit Analog Channel Guard .....	20
J. Transmit NAC .....	21
K. Talk Group ID.....	21
L. Channel Label.....	22
M. Review Channel Settings.....	22
N. Program Another Channel .....	22
Exit Programming Mode.....	22
Cloning Radio Settings .....	23
A. Special Cloning Instructions.....	25
B. Scan List Cloning .....	26
CTCSS Channel Guard Values .....	27
CDCSS Channel Guard Values .....	28
Quick Reference – Channel 0.....	29

---

## HOW TO PROGRAM RADIOS

---

There are three different ways to program BK Radio radios:

- **BY KEYPAD** A radio can be programmed with its keypad and a programming plug, LAA0701. That procedure is described in this section.
- **BY CLONING** You can transfer the programmed settings to another radio of the same frequency band by using a cloning cable. See "Cloning Radio Settings" on page 23 of this manual.
- **BY COMPUTER** With a computer, DPHx programming software, and an LAA 0725 interface cable. That procedure is not described in this manual. Contact BK Radio for the required programming cable and software.


---

## KEYPAD PROGRAMMING

---

Radios are shipped with a door covering the keypad and display. Before programming, remove the door by removing the battery pack, engaging the door just below the speaker grill, and sliding the door downward. Replace the battery pack.

Make sure the battery pack is charged.

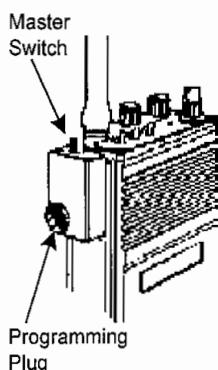

1. Insert the programming plug into the side connector of the radio. The push-button master switch will be on the top.

**NOTE:** The cloning cable can be used as a substitute for the programming plug by inserting the end with the push-button master switch into the side connector of the radio.

2. Select a channel group to be programmed (not necessary in 16-channel radios). See "Select A Group/Channel" in the Owner's Manual.



3. Press and hold the master switch.
4. While holding the master switch, press and hold the **[FCN]** key. After approximately three seconds the LCD will display '- - - ID.'
5. Release the **[FCN]** key and the master switch. The radio is now in the Password Entry Mode.
6. Enter the six-digit password code for the selected group. Without the correct password code, you cannot proceed with programming.

**NOTE:**

New radios shipped from the factory are assigned the password code **000000**.

While entering the password code the display will not change, but a beep will sound for each key pressed. If the password code is entered incorrectly, the radio will reset to normal operation. Try again, starting at step 2.



7. Press the **[ENT]** key to proceed to Programming Mode. The display will change to **PRG CH 00**.

**NOTE:**

**YOUR RADIO MAY HAVE BEEN SET UP TO BLOCK KEYPAD PROGRAMMING ACCESS TO SOME OR ALL VARIABLES. CONTACT YOUR BK RADIO DEALER IF YOU FEEL YOU NEED ACCESS TO THESE FIELDS.**

## GENERAL SETTINGS (CHANNEL 0)

Channel 0 settings for each group must be programmed separately.

**NOTE:** Settings listed as Group One Functions, Group Two Functions, and Group Three Functions refer to programming function groups, not channel groups.

Press the **[FCN]** key repeatedly to view the settings in Channel 0 and then loop back to the **CH 00** entry point.

### Channel 0 settings include:

Group Password

Automatic Numeric Identification (ANI)

Transmitter Time-Out Timer

Scan Delay Time

Priority 1 Channel

Priority 2 Channel

Channel 0 Group One Functions: 1-12345

Battery Saver Inhibit (Function 1)

Group Scan List (Function 2)

Transmit on Priority 1 (Function 3)

Priority 1 Lock (Function 4)

Scan List Lock (Function 5)

Channel 0 Group Two Functions: 2-12345

User Channel Guard Selection (Function 1)

Busy Channel Operation (Functions 2 & 3)

ANI/DTMF Mode (Functions 4 & 5)

Channel 0 Group Three Functions: 3-12345

Reserved (Functions 1 & 2)

Backlight on Display Change (Function 3)

Backlight on Key Press (Function 4)

Alphanumeric/Numeric Display Mode (Function 5)

 
Backlight Duration

Group Label

## A. Group Password



PRG  
CH 00



PRG  
P123456

1. After entering Programming Mode the display will show 'PRG CH 00.'
2. Press the **[FCN]** key.
3. The display will indicate the password for the selected group.
- 4a. If no change is needed for the group password, press the **[FCN]** key to advance to the next field.
- 4b. To enter a new password, press the **[CLR]** key, then enter a new six-digit password. Press the **[ENT]** key to store the new password and advance to the next field.

## B. Automatic Numeric Identification (ANI)



PRG ID  
0000000

1. After the group password is set, the display will indicate the ANI ID number (as many as seven digits may be used). The ID number can be used for either radio management or transmitted as a DTMF tone burst for ANI purposes. The ANI can be enabled or disabled. See "ANI/DTMF Mode" on page 12 of this manual.
- 2a. If no change is needed for the ID number, press the **[FCN]** key to advance to the next field.
- 2b. To enter a new number, press the **[CLR]** key and then the number keys. The digits will appear at the right of display and move to the left. Press the **[ENT]** key to store the new ID number and advance to the next field.

### C. Transmitter Time-Out Timer

PRG TX
225 SEC

After the ID number is set, the display annunciators will indicate 'PRG TX.' This is the duration of the transmitter Time-Out Timer. **0 SEC** means the Time-Out Timer is disabled.

Press the **[FCN]** key to advance to the next field if no change is needed.

1. Press the **[PRI]** key to increase the Time-Out Timer duration by 15 seconds, with a maximum of 225 seconds (3 minutes, 45 seconds). Press the **[PRI]** key again to change the duration from 225 seconds to zero.
2. Press the **[CLR]** key to set the Time-Out Timer duration to zero.
3. Press the **[ENT]** key to store the changed setting and advance to the next field.

### D. Scan Delay Time

 
PRG	SCN
2.0	SEC

After the Time-Out Timer is set, the upper display will indicate 'PRG SCN.' This is the Scan Delay time in seconds.

Press the **[FCN]** key to advance to the next field if no change is needed.

1. Press the **[PRI]** key to increase the scan delay time by .5 seconds, up to 7.5 seconds. Press the **[PRI]** key again to change the time from 7.5 seconds to 0.
2. Press the **[CLR]** key to reset the scan delay time to 0.
3. Press the **[ENT]** key to store the changed setting and advance to the next field.

## E. Priority 1 Channel



PRG  
PR1 ON

After the Scan Delay is set, the display will indicate 'PRG PR1.' The Priority 1 Channel can be programmed as a fixed channel, tied to the Channel Selector knob, or programmed OFF. If the radio is programmed to transmit on the Priority 1 Channel, transmissions will occur on PR1, if PR1 isn't programmed OFF, when operating in Single or Dual Priority Scan Mode.


If PR1 is a fixed channel, and the [PRI] key on the keypad is not locked out, during normal radio operation the user can move the channel selector to a new channel and press the [PRI] key to choose a new PR1 channel.

1. Press the [PRI] key to cycle through the priority channel options, or enter a fixed priority channel using the number keys.

Setting the channel to ON ties the PR1 channel to the Channel Selector knob. Pressing [CLR] or the [0] key turns the PR1 channel OFF.

2. Press the [ENT] key to store the new priority channel and advance to the next field.

## F. Priority 2 Channel

 

PRG  
PR2 OFF

After the Priority 1 Channel is set, the display will indicate 'PRG PR2.' The Priority 2 Channel can be programmed as a fixed channel, tied to the Channel Selector knob, or programmed OFF.

The PR2 channel cannot be altered during normal radio operation.

1. Press the [PRI] key to cycle through the priority channel options, or enter a fixed priority channel using the number keys.



Setting the channel to ON ties the PR2 channel to the Channel Selector knob. Pressing **[CLR]** or the **[0]** key turns the PR2 channel OFF.

2. Press the **[ENT]** key to store the new priority channel and advance to the next field.


### Old-Style BK Priority Scan

 The radio can be programmed to mimic the Old-Style BK Priority Scan Modes as follows:

Mode	PR1	TX on PR1	PR2
A	On	No	Off
B	Fixed Channel #	No	Off
C	Fixed Channel #	Yes	Off

See "Priority Scan" in the Owner's Manual for operational details of the Old-Style BK Priority Scan Modes.


### G. Channel 0 Group One Functions



A rectangular display box with the label "PRG" in the top left corner. The display shows "1--12345".

After the Priority 2 Channel is set the display will show 'PRG 1-12345.' This is a group of five individual functions that can be enabled or disabled.

 When a function is enabled, the corresponding number in the display will flash. When the function is disabled the number is steady. If you wish to change the function from enable to disable or vice versa, press the number key corresponding to that function.




A rectangular display box with the label "PRG" in the top left corner. The display shows "1--12345". A downward-pointing arrow is positioned above the number "4".

**EXAMPLE:** If function 4 (Priority 1 Lock) is disabled, the 4 in the display will not be flashing. If the **[4]** key is pressed, the 4 in the display will flash, signifying that Priority 1 Lock is enabled. A subsequent press of the **[4]** key will disable Priority 1 Lock.

### 1. Battery Saver Inhibit

 
When function 1 is enabled (flashing) the battery saver is turned off. The battery saver should be turned off only for getting proper voltage readings during service or for systems requiring fast squelch attack time.



**NOTE:** BK Radio current drain and battery life specifications are based on performance with the battery saver on.


### 2. Group Scan List

 When function 2 is enabled (flashing) the current group will be scanned when the radio is operating in Group Scan Mode.




### 3. Transmit On Priority 1

 When function 3 is enabled (flashing) transmissions will occur on PR1, if PR1 isn't programmed OFF, when operating in Single or Dual Priority Scan Mode. To simulate BK Radio's Old-Style Priority Mode C, Transmit on Priority 1 must be enabled, with Priority 2 channel set to OFF.




### 4. Priority 1 Lock

 When function 4 is enabled (flashing) the [PRI] key is locked out in the Operating Mode. The user will not be able to change the designation of the Priority 1 Channel.



When function 4 is disabled (steady) the user will be able to change the channel that is designated as Priority 1 Channel. See "Dual Priority Scan" in the Owner's Manual.

## 5. Scan List Lock

 

When function 5 is enabled (flashing), the user will not be able to change the channels in the Scan List. When disabled (steady), the user can enter or delete channels from the Scan List. See "Change the Scan List" in the Owner's Manual.

## Store Group One Settings

 
Once each function 1-5 is set as desired, you can store the changes, discard the changes, or disable all 5 functions.

Press the **[CLR]** key to disable all Group One functions (steady).

Press the **[ENT]** key to store new Group One settings into memory and advance to the next field.


Press the **[FCN]** key to advance to the next field without saving changes.

## H. Channel 0 Group Two Functions




After Group One functions are set, the display will show 'PRG 2-12345' for Group Two functions. As with Group One functions, the enabled function numbers will flash. The disabled functions remain steady.

### 1. User Channel Guard Selection

 


When function 1 is enabled (flashing) the user will be able to press the keypad to independently select the Channel Guard values that are programmed into Channels 1 through 16 while operating on any Channel 1 through 16. When function 1 is disabled the user will be unable to use the keypad for Channel Guard selection. See "User Selected Channel Guard" in Owner's Manual.

## 2 & 3. Busy Channel Operation

 


Functions two and three are used to set Busy Channel operation. There are three types of busy channel operation available. They are described more fully under "Busy Channel" in the Owner's Manual.


### Busy Channel Modes include:

 

 **Busy Channel Indicator** - The yellow LED illuminates when a signal is received on the channel selected, with or without the programmed receive Channel Guard setting.



 **Busy Channel Lockout** - The yellow LED illuminates and the transmitter PTT is disabled when a signal is received without the programmed receive Channel Guard setting.




**Busy Channel Override** - This function is similar to Busy Channel Lockout except the transmitter PTT can be activated by rotating the Squelch knob clockwise off the Channel Guard detent.


To set Busy Channel operation, use the following chart:

Busy Channel	Function 2	Function 3
Indication	Disable (Steady)	Enable (Flashing)
Lockout	Enable (Flashing)	Enable (Flashing)
Override	Enable (Flashing)	Disable (Steady)


## 4 & 5. ANI/DTMF Mode

 

 When function 4 is enabled (flashing) the ANI ID number will be transmitted (as a DTMF tone sequence) with each press of the PTT switch. See "Automatic Numeric Identification (ANI)" on page 5 of this manual for instructions on setting the ANI number.



 When function 5 is enabled (flashing) the keypad becomes active for manual DTMF operation.



When functions 4 and 5 are both enabled (flashing) the ANI tone sequence will be transmitted only after the **[ENT]** key is pressed while the transmit PTT switch is activated. A sidetone of the ANI number transmitted will also be heard through the speaker.

## Store Group Two Settings

 
Once each function 1-5 is set as desired, you can store the changes, discard the changes, or disable all 5 functions.

Press the **[CLR]** key to disable all Group Two functions (steady).

Press the **[ENT]** key to store new Group Two settings into memory and advance to the next field.


Press the **[FCN]** key to advance to the next field without saving changes.

## I. Channel 0 Group Three Functions




After Group Two functions are set, the display will show 'PRG 3-12345' for Group Three functions. As with Group One and Group Two functions, the enabled function numbers will flash. The disabled functions remain steady.

 1. Function 1 is reserved for future enhancements.
2. Function 2 is reserved for future enhancements.
3. Backlight On Display Change




When function 3 is enabled (flashing), the display backlight will illuminate each time the display receives input. This includes displayed changes in the selected channel or scan channel, and the **PR**, **TX**, and **SCN** annunciators. The display will not illuminate if backlight duration is set to **LITE OFF**. See "Backlight Duration" on the next page.

 4. Backlight On Key Press



When function 4 is enabled (flashing), the display backlight will illuminate each time a key is pressed, even if pressing the key has no other effect. The display will not illuminate if backlight duration is set to **LITE OFF**. See "Backlight Duration" on the next page.

 5. Alphanumeric/Numeric Display Mode



When function 5 is enabled (flashing), the display operates in Alphanumeric Mode, enabling the display of channel labels. When disabled (steady), the display operates in Numeric Display Mode. This mode displays channel numbers instead of labels.

### Store Group Three Settings

Once each function 1-5 is set as desired, you can store the changes, discard the changes, or disable all 5 functions.

Press the **[CLR]** key to disable all Group Three functions (steady).

Press the **[ENT]** key to store new Group Three settings into memory and advance to the next field.

Press the **[FCN]** key to advance to the next field without saving changes.

## J. Backlight Duration

PRG  
LITE OFF

PRG  
1 SEC ON

PRG  
6 SEC ON

After Group Three functions, the display will show the current backlight duration setting. Available settings are **LITE OFF**, **1 SEC ON**, 1-second increments up to **6 SEC ON** and **LITE ON**.

**NOTE:** Excessive battery drain will result if **LITE ON** is set and used for extended periods of time.

If no change is needed, press the **[FCN]** key to advance to the next field.

Press the **[CLR]** key to set backlight duration to zero and display **LITE OFF**.

Press the **[PRI]** key to increase backlight duration by 1 second increments from **LITE OFF**, to **1 SEC ON**, **2**, **3**, **4**, **5**, **6 SEC ON**, **LITE ON** (illumination remains on constantly) then back to **LITE OFF**.

Press the **[ENT]** key to store changes and advance to the next field.

Press the **[FCN]** key to advance to the next field without storing changes.

## K. Group Labels

PRG  
GROUP 1

After the backlight duration setting, the display will show the current label for the channel group. Each channel group can have a label of up to eight characters or spaces. The characters can include **0-9**, **A-Z**, **-**, **\***, **\$**, **/**, **+**, **%**, **\**, **|**, **\_**, **<**, **>**, **h**, or blank.

If no change is needed, press the **[FCN]** key to go back to the starting point for Channel 0 settings.

Press the **[CLR]** key to erase the current label. Press the **[CLR]** key a second time to restore the current label.

**NOTE:** Special software available from BK Radio lets you enter group labels and channel labels from a computer. Contact your dealer for information.

## 1. Changing The Group Label

Press the **[CLR]** key. The display becomes blank.

Press number keys to enter 0-9 in positions 1-7. The digits start in position 7, then move left.

Press the **[#]** key to toggle a decimal on or off to the right of the character in position 7.

The decimal moves left with the number in position 7 as new numbers are entered.

Use the following steps to enter a number in position 8 or characters in positions 1-8:

- a. Press the **[PRI]** key repeatedly to cycle through characters **0-9, A-Z, -, \*, \$, /, +, %, \, |, \_, <, >, h**, blank, then back to the start again.

If you pass the desired character, press the **[PRI]** key repeatedly until you return to the start and reach that character again.



- b. Press the **[FCN]** key to shift the display left by one position, leaving position 8 blank.
- c. Press the **[PRI]** key repeatedly to enter the next character, or press the **[FCN]** key a second time to enter a blank space.
- d. To abandon changes, press the **[CLR]** key, restoring the original label.

 
Press the **[ENT]** key to store changes and go back to the starting point for Channel 0 settings.

## L. Review Channel 0 Values

Press the **[FCN]** key repeatedly to display each value in Channel 0, and then return to the Channel 0 starting point.


## CHANNEL SETTINGS

At the starting point for Channel 0, the display shows 'PRG CH 00.' At this point, a channel number can now be pressed to allow access to per-channel variables such as frequencies and Channel Guard values for that channel.




Press '1' and the display will show 'PRG CH 01.' This is the starting point for entering channel 1 values.

## A. Channel Bandwidth

 

At this point, pressing the **[#]** key will toggle the channel's bandwidth setting. An 'N' will appear to the right of the channel number when the channel is set for 12.5/15 kHz channel bandwidth using the narrow band receiver filter. When there is no 'N' the channel is set for 25/30 kHz channel bandwidth.


## B. Receive Frequency

 

PRG RX  
161.50000

1. Press the **[FCN]** key and the upper part of the display will show 'PRG RX.' This is the receive frequency for channel 1 (in MHz).
2. If the displayed frequency is correct, press the **[FCN]** key to advance to the next field.
3. If a new frequency is desired, press the **[CLR]** key followed by the digits of the desired frequency. Then press the **[ENT]** key to store this frequency and automatically advance to the next field.

## C. Receive Mode

 


PRG RX  
MODE--X

After the receive frequency is set, the upper part of the display will show 'PRG RX', and the lower part of the display will show 'Mode-X', where X can be 'A' for Analog Mode, 'D' for Digital Mode, or 'M' for Mixed Mode.

1. If the mode is correct, press the **[FCN]** key to advance to the next field.
2. If a new mode is desired, press the **[PRI]** key to cycle through the mode settings. Press **[ENT]** to store the new mode and automatically advance to the next field.

## D. Receive Analog Channel Guard

 

PRG RX CG  
000.0

The next field is the Analog Channel Guard value for Channel 1 receive. This value is only used if the receive mode selected was Analog or Mixed, or if User Channel Guard is activated. The upper display will show 'PRG RX CG' and the lower part of the display will show the programmed guard.

**NOTE:** 0.0 indicates carrier squelch operation (no Channel Guard).

1. If the displayed value is correct, press the **[FCN]** key to advance to the next field.
2. If a new value is desired, press the **[CLR]** key to reset the display to 0.0. Press the number keys 0 thru 9 to enter a CTCSS Channel Guard value. See "CTCSS Channel Guard Values" on page 27 of this manual. Press the **[ENT]** key to store the new value and automatically advance to the next field.
3. To enter a CDCSS Channel Guard value press the **[#]** key, causing the letter 'D' to appear followed by three zeros. Enter the desired code using keys 0 thru 7 (keys 8 & 9 do not respond). See "CDCSS Channel Guard Values" on page 28 of this manual. Pressing the **[PRI]** key after the three-digit code has been entered allows the code to be inverted (a dash appears to the right of the number). When the displayed value is correct, press the **[ENT]** key to store the Channel Guard value and automatically advance to the next field.

PRG	RX	CG
0365-		

## E. Receive NAC

 
PRG	RX	ID	CG
NACXXXX			

The next field is the Network Access Code (NAC) for Channel 1 receive. This value is only used if the receive mode selected was Digital or Mixed, or if User Channel Guard is activated. The upper part of the display will show 'PRG RX ID CG'. The lower part of the display will show 'NACXXXX' where XXXX is the Network Access Code in decimal.

1. If the NAC is correct, press the **[FCN]** key to advance to the next field.

2. If a new NAC is desired, press the **[CLR]** key followed by the digits of the desired NAC. Then press the **[ENT]** key to store this NAC and automatically advance to the next field.

## F. Squelch Mode



PRG RX ID  
SQL--XXX


The next field is the Receiver Squelch Mode for Channel 1. This setting is only used if the receive mode selected was Digital or Mixed, or if User Channel Guard is activated. The upper part of the display will show 'PRG RX ID'.

The lower part of the display will show 'SQL-XXX' where XXX is 'NRM' for normal squelch or 'SEL' for selective squelch.

Normal squelch opens on a matching NAC and any Talk Group ID or Individual Unit ID. Selective squelch requires the correct NAC and the correct Talk Group ID, and for Unit-to-Unit calls, requires a matching Individual ID.

1. If the Squelch Mode is correct, press the **[FCN]** key to advance to the next field.
2. If a different Squelch Mode is desired, press the **[PRI]** key to toggle the setting. Then press the **[ENT]** key to store this setting and automatically advance to the next field.

## G. Transmit Frequency

 


PRG TX  
148.00000

The upper part of the display will show 'PRG TX.' This is the transmitter frequency for Channel 1.

1. If it is correct, press the **[FCN]** key to advance to the next field.
2. If a new frequency is desired, press the **[CLR]** key followed by the digits of the desired frequency. Then press the **[ENT]** key to store this frequency and automatically advance to the next field.

3. If you want to operate this channel as a receive-only channel, press the **[CLR]** key (setting the display to 0.0) followed by the **[ENT]** key. The transmitter will be locked off for this channel.

## H. Transmit Mode

 


PRG TX  
MODE--X

After the transmit frequency is set, the upper part of the display will show 'PRG TX', and the lower part of the display will show 'Mode-X', where X can be 'A' for Analog Mode, 'D' for Digital Mode, or 'M' or Mixed Mode.

1. If the mode is correct, press the **[FCN]** key to advance to the next field.
2. If a new mode is desired, press the **[PRI]** key to cycle through the mode settings. Press **[ENT]** to store the new mode and automatically advance to the next field.

## I. Transmit Analog Channel Guard

 


PRG TX CG  
000.0

The next field is the Analog Channel Guard value for Channel 1 transmit. This value is only used if the transmit mode selected was Analog or Mixed, or when User Channel Guard is activated. The upper display will show 'PRG TX CG' and the lower part of the display will show the programmed guard.

1. If the displayed value is correct, press the **[FCN]** key to advance to the next field.
2. If a new value is desired, press the **[CLR]** key to reset the display to 0.0. Press the number keys 0 thru 9 to enter a CTCSS Channel Guard value. See "CTCSS Channel Guard Values" on page 27 of this manual. Press the **[ENT]** key to store the new value and automatically advance to the next field.

3. To enter a CDCSS Channel Guard value press the **[#]** key, causing the letter 'D' to appear followed by three zeros. Enter the desired code using keys 0 thru 7 (keys 8 & 9 do not respond). See "CDCSS Channel Guard Values" on page 28 of this manual. Pressing the **[PRI]** key after the three-digit code has been entered allows the code to be inverted (a dash appears to the right of the number). When the displayed value is correct, press the **[ENT]** key to store the Channel Guard value and automatically advance to the next field.

## J. Transmit NAC

 


The screenshot shows a rectangular display area. The top line contains the text 'PRG TX ID CG' in a monospaced font. The bottom line contains the text 'NACXXXX' in a larger, bold monospaced font.

The next field is the Network Access Code (NAC) for Channel 1 transmit. This value is only used if the transmit mode selected was Digital or Mixed, or if User Channel Guard is activated. The upper part of the display will show 'PRG TX ID CG'. The lower part of the display will show 'NACXXXX' where XXXX is the Network Access Code in decimal.

1. If the NAC is correct, press the **[FCN]** key to advance to the next field.
2. If a new NAC is desired, press the **[CLR]** key followed by the digits of the desired NAC. Then press the **[ENT]** key to store this NAC and automatically advance to the next field.

## K. Talk Group ID

 

The screenshot shows a rectangular display area. The top line contains the text 'PRG ID' followed by a small phone handset icon. The bottom line contains the text 'TGXXXXX' in a larger, bold monospaced font.

The next field is the Talk Group ID. This value is only used if the transmit mode selected was Digital or Mixed, or if User Channel Guard is activated. The upper part of the display will show 'PRG ID' and the phone icon. The lower part of the display will show 'TGXXXXX' where XXXXX is the Talk Group ID.

1. If the displayed value is correct, press the **[FCN]** key to advance to the next field.
2. If you wish to change it, press the **[CLR]** key followed by the digits for the new TGID, then **[ENT]** to store the new value and automatically advance to the next field.

## L. Channel Label

 
The last field is the channel label.

1. If this label is correct, press the **[FCN]** key to proceed to the entry point.
2. If a new channel label is desired, follow the instructions under "Group Labels" on page 14 of this manual.

## M. Review Channel Settings


After the channel label is set, the display will return to the Channel 1 starting point. If you wish to review the Channel 1 settings, subsequent pressing of the **[FCN]** or **[ENT]** key will show each value and then return to the Channel 1 starting point.

## N. Program Another Channel



At the starting point for Channel 1, the display will show 'PRG CH 01'. Press the number keys for another channel number to gain access to the frequencies, etc. for that channel. Each channel is then programmed using the same steps described for Channel 1.

## EXIT PROGRAMMING MODE

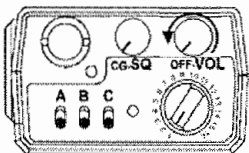

1. Rotate the OFF-VOL knob counterclockwise to the OFF position.
2. The radio will be in normal Operating Mode the next time it is turned on.


---

## CLONING RADIO SETTINGS

---

Any "Master" radio (a DPHx with the desired radio frequencies and settings) is capable of transferring its program to another DPHx or "slave" radio. The radio receiving the program is also referred to as the "clone." The LAA0700 cloning cable will be required in the following procedure. Contact your BK Radio dealer for information on cloning between DPHx radios and other BK Radio products.


**NOTE:** Some groups may be "locked" by PC programming to prevent them from being overwritten. Only "unlocked" groups will accept incoming clones.

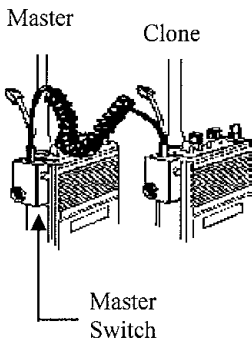

1. Make sure the battery packs for both radios are charged.
2. Attach the master switch end of the cloning cable to the side connector of the Master radio.

**NOTE:** One plug of the cloning cable has a push-button master switch. This plug must be attached to the Master radio.

 3. Turn on the Master radio.
4. Select the group to be cloned from the Master radio.
5. Put the Master radio in Programming Mode by pressing and holding the master switch then pressing and holding the **[FCN]** key until the display shows '- - - ID.' Enter the password of the selected group. The display shows 'PRG CH 00.'
6. Review the values programmed in the radio by pressing the **[FCN]** or **[ENT]** key at each CHXX prompt. Any required changes must be made now.
7. Connect the other plug of the cable to the side connector of the radio you want to clone.








8. Turn on the clone and set it to the desired channel group.
  9. Press the **[\*]** key on the Master radio keypad. The display will flash '**PROG**' signifying that the radio is ready to download its program to the clone.
  10. Press the **[FCN]** key on the Master radio keypad. The program in the master will then be downloaded to the clone.
  11. If the download was successful, the display on the master will resume flashing '**PROG**.'
    - To clone another channel group, turn off both radios and go back to Step 3, changing the channel group as required.
    - If cloning is finished, turn off the clone and disconnect the cloning cable. Normal radio operation will occur when you turn on the clone.
  12. If the download was not successful, the master will display '**FAIL**' and multiple beeps will follow. Failure of downloading can be due to:
    - Improper connection
    - Failure to turn on the clone
    - Setting the clone in Programming Mode
    - Group 'locked' by PC Programming
- NOTE:** To stop the '**FAIL**' Mode, press **[CLR]**, turn off both radios, and try again, starting with Step 1 on the previous page.

## A. Special Cloning Instructions

 It is possible to change Channel 0 values on the Master radio, hold them in a temporary memory, and download them to the Clone without actually entering them into the permanent memory of the Master radio. This is convenient for sequential identification numbers used to identify a series of portables in a radio system.

Assuming that the frequencies, Channel Guard values, and other CH 0 values are common for all radios in the system, but that the radio identification number should be unique to each radio, the following method would be used to clone additional radios for the system.

1. Program the Master radio with all frequencies, Channel Guard values, and Channel 0 values that will be common to all radios to be cloned.
2. Advance the display to show the Master radio's ID number - for example, 100.
3. Press the **[CLR]** key; press **125**. Do not press the **[ENT]** key. Now 125 is in temporary memory.
4. Press the **[\*]** key, connect the cable to the radios and download to the Clone by pressing the **[FCN]** key. ID number 125 is now stored in permanent memory of the Clone.
5. After download, press the **[CLR]** key on the Master radio. Disconnect the Clone. The Master radio display will show that 125 is still being held in the temporary memory of the Master radio.



6. Press the **[PRI]** key. This will increment the ID number one digit to 126.

**NOTE:** Any new number can be entered at this point by pressing the **[CLR]** key and using the digit keys to enter the new number.

7. Press the **[\*]** key. Connect the cable to the second Clone and download by pressing **[FCN]**.
8. Any number of radios can be coded with different or sequential ID numbers using this technique. The ID number in the permanent memory of the Master radio will remain unchanged as 100.

## **B. Scan List Cloning**

When a Master radio downloads to a Clone, the Scan List is also transferred. See the appropriate operating instructions in the Owner's Manual for changing the Scan List.

---

## CTCSS CHANNEL GUARD VALUES

---

The CTCSS Channel Guard system may be set for any frequency in the range of 67 to 255.9 Hz. However, since most systems adhere to the Electronic Industry Association (EIA) standards, tones should be selected from the following EIA list. In order to insure optimum performance, tone selection for use on the same radio frequency (RF) channel or adjacent channels in the same coverage area should be made from one of the Groups A, B, or C to the maximum degree possible.

GROUP A		GROUP B		GROUP C
67.0 (XZ)	*151.4 (5Z)	71.9 (XA)	146.2 (4B)	74.4
77.0 (XB)	162.2 (5B)	82.5 (YZ)	156.7 (5A)	79.7
88.5 (YB)	173.8 (6A)	94.8 (ZA)	167.9 (6Z)	85.4 (YA)
*100.0 (1Z)	186.2 (7Z)	103.5 (1A)	*179.9 (6B)	91.5 (ZZ)
107.2 (1B)	203.5 (M1)	110.9 (2X)	192.8 (7A)	
114.8 (2A)	218.1 (M3)	*118.8 (2B)	210.7 (M2)	
123.0 (3Z)	233.6	127.3 (3A)	225.7 (M4)	
131.8 (3B)	250.3	136.5 (4Z)	241.8	
141.3 (4A)				

\* 50/60 Hz power distribution systems could cause falsing.

The assignments in a given area shall be made from within one of the Groups: A, B, or C.

---

## CDCSS CHANNEL GUARD VALUES

---

Codes for the CDCSS Channel Guard system may be chosen from the following list. Since there are no EIA standards for the performance or compatibility of CDCSS Channel Guard systems it is recommended that an operational test be made on the intended system before wholesale assignments are made. In some cases either or both transmit and receive codes will require an inverted code to operate with existing systems. This can be done during the code programming of the system. Usually systems using direct Unit-to-Unit transmission (systems without mobile relays, repeaters, remote control, etc.) may use codes from the table. Systems with relays, etc., may use code variations for systems control and operational efficiency. The system operator or engineer should be consulted regarding the operational requirement on such systems.

023	065	131	165	245	315	411	466	612	703
025	071	132	172	251	331	412	503	624	712
026	072	134	174	261	343	423	506	627	723
031	073	143	205	263	346	431	516	631	731
032	074	152	223	265	351	432	532	632	732
043	114	155	226	271	364	445	546	654	734
047	115	156	243	306	365	464	565	662	743
051	116	162	244	311	371	465	606	664	754
054	125								

---

# QUICK REFERENCE – CHANNEL 0

---

## RADIO KEYPAD PROGRAMMING

Group Password

Automatic Numeric Identification (ANI)

Transmitter Time-Out Timer

Scan Delay Time

Priority 1 Channel

Priority 2 Channel

Channel 0 Group One Functions

Battery Saver Inhibit	1-12345
Group Scan List	1-12345
Transmit On Priority 1	1-12345
Priority 1 Lock	1-12345
Scan List Lock	1-12345

Channel 0 Group Two Functions

User Channel Guard Selection	2-12345
Busy Channel Operation	2-12345
ANI/DTMF Mode	2-12345

Channel 0 Group Three Functions

Reserved for Future Enhancements	3-12345
Backlight on Display Change	3-12345
Backlight on Key Press	3-12345
Alphanumeric/Numeric Display Mode	3-12345

Backlight Duration

Group Label

Flashing number indicates active function.



BK Radio  
7100 Technology Drive  
West Melbourne, FL 32904  
Telephone: (321) 984-1414  
FAX: (321) 984-0434  
[www.relm.com](http://www.relm.com)

© Copyright 2004 RELM Wireless Corporation. All rights reserved.