

Maintenance Manual

Simulcast Transmit Site RS-232 Version

Volume 1

Common Equipment

Table of Contents

<u>Tab</u>	<u>Description</u>	<u>Publication</u>
1	Site Grounding	LBI-39067
2	Electrostatic Discharge Protection	LBI-38737
3	Simulcast System Drawings	LBI-39131
4	Simulcast Cable Drawings	LBI-38878
5	Transmit Site Cross Connect Panel	LBI-38490
6	MUX Cross Connect	AE/LZB 119 1654
7	Universal Synchronizer Shelf Assembly	LBI-38476
8	Simulcast EDACS® Interface Panel	LBI-39183
9	Cross Connect Interface Panel	LBI-39182
10	Power Supplies:	
	Simulcast & MSC II Reduntant	LBI-38670
	Base Station	LBI-38550
	Fuse Panel	LBI-39177
	DC Option Panel	LBI-39196
11	Connectorized Jackfields.	ADCP-80-320
12	WWVB Disciplined Oscillator	Model 8165
13	Signal Selector	Model 8143

NOTICE!

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

NOTICE!

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

NOTICE!

The software contained in this device is copyrighted by the Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© September 1995, Ericsson Inc.

Ericsson Inc.
Private Radio Systems
Mountain View Road
Lynchburg, Virginia 24502
1-800-528-7711 (Outside USA, 804-528-7711)

Printed in U.S.A.

Maintenance Manual

Simulcast Transmit Site RS-232 Version

Volume 2

EDACS® MASTR® III STATION

Table of Contents

<u>Tab</u>	<u>Description</u>	<u>Publication</u>
1	MASTR III Station Alignment for Simulcast	LBI-39068
2	MASR III Transmitter Combination Manual	LBI-38775
3	800 MHz RF Package	LBI-39025
4	EDACS Interface Manual	LBI-38812
5	Station GETC	LBI-38894
6	AC Outlet Strip	LBI-4841
7	Fan, 120 VAC	LBI-4842
8	Power Supply	LBI-38551

NOTICE!

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

NOTICE!

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

NOTICE!

The software contained in this device is copyrighted by the Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© September1995, Ericsson Inc.

Ericsson Inc.
Private Radio Systems
Mountain View Road
Lynchburg, Virginia 24502
1-800-528-7711 (Outside USA, 804-528-7711)

Printed in U.S.A.

Maintenance Manual

Simulcast Transmit Site RS-232 Version

Volume 3

Alarm System

Table of Contents

<u>Tab</u>	<u>Description</u>	<u>Publication</u>
1	Alarm Shelf 19D902821P1 & P2	LBI-38496
2	Test Unit Alarm Interface and Control Channel Monitor	LBI-38498
3	Buffer Board 19C336920G1 EDACS Voter Applications	LBI-38236

NOTICE!

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

NOTICE!

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

NOTICE!

The software contained in this device is copyrighted by the Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© May1995, Ericsson Inc.

Ericsson Inc.
Private Radio Systems
Mountain View Road
Lynchburg, Virginia 24502
1-800-528-7711 (Outside USA, 804-528-7711)

Printed in U.S.A.