

# **Maintenance Manual**

## **GPS Simulcast Transmit Site**

### **Volume 2**

### **STATION EQUIPMENT RACK**

#### **Table Of Contents**

<b><u>Tab</u></b>	<b><u>Description</u></b>	<b><u>Publication</u></b>
1	EDACS GPS Simulcast MASTR III Station Alignment.....	LBI-39197
2	MASTR III Transmitter Combination Manual .....	LBI-38775
3	800 MHz RF Package .....	LBI-39025
4	EDACS GPS Interface Panel .....	LBI-39198
5	Station GETC .....	LBI-38894
	GETC Interface Module .....	AE/LZB 119 1659
	GETC Protector .....	AE/LZB 119 1660
6	AC Outlet Strip .....	LBI-4841
7	Fan, 120 VAC .....	LBI-4842
8	Power Supply .....	LBI-38551

**NOTE**

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

**NOTICE!**

The software contained in this device is copyrighted by Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© October 1995, Ericsson Inc.

**Ericsson Inc.**  
Private Radio Systems  
Mountain View Road  
Lynchburg, Virginia 24502  
1-800-528-7711 (Outside USA, 804-528-7711)

Printed in U.S.A.