

Operator's Manual

EDACS[®] ALLEGRA
VEHICLE HANDSFREE

NOTICE!

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

NOTICE!

The software contained in this device is copyrighted by Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© February 1995, Ericsson Inc.

TABLE OF CONTENTS

	<u>Page</u>
Vehicle Handsfree Package	4
Using Your Handsfree Unit.....	4
Inserting The Radio	4
Operating Instructions	5
Charging Your Radio Battery	6
Removing The Radio.....	7
Care And Maintenance	8
Troubleshooting	9

VEHICLE HANDSFREE PACKAGE

The VEHICLE HANDSFREE Package lets you talk on a portable radio in your car without taking your hands off the wheel. Your radio operates as usual, except that you use an external microphone, speaker, and antenna.

The HANDSFREE powers the radio and charges its battery (standard or slim-line only).

USING YOUR HANDSFREE UNIT

INSERTING THE RADIO

Before inserting the radio remove the following:

- the round rubber plug in the antenna port on the back of the radio.
- the system connector plug from the bottom of the radio.

INSERT THE RADIO INTO THE HANDSFREE HOLDER

1. Slide the radio straight down parallel to the back of the holder.
2. Push the radio all the way down to make sure the system connector is properly seated.
3. Push the radio back until the side tabs of the handsfree unit lock into place.

OPERATING INSTRUCTIONS

Service Available Indicator

The indicator light on the top edge of the radio shows a steady green light when service is available from the service network.

Answering A Call

Refer to your radio user's guide to select an answering option. Most radios have at least three options:

- answer with the SEND key
- answer with any key except VOLUME keys
- answer automatically after a number of rings

Adjusting The Speaker Volume

When the radio is in the cradle and turned on, you can adjust the speaker volume using the volume keys. The radio stores two volume settings independently--one for when the radio is used as a portable, and one for the speaker volume when the radio is in the HANDSFREE unit. Both settings remain unchanged after the radio is turned off.

CHARGING YOUR RADIO BATTERY

When your radio is on and in standby mode in the HANDSFREE unit, the radio battery is automatically charged. You can charge your radio battery by leaving the phone in the cradle overnight. However, continuously charging the battery in this

way for more than a week can temporarily weaken the vehicle battery.

- When your radio is in the HANDSFREE unit, the radio display will indicate charge status. The indicator alternates between C for “Charging” and the charge level (0 through 9). When the battery is fully charged, the display shows an “F” for “Full Charge.”
- The HANDSFREE unit recharges a standard battery in less than two hours and a similar battery in less than an hour.

NOTE: Charging pauses when a call is in progress, but a trickle charge maintains the battery charge level.

- To use your radio in the HANDSFREE unit if the radio battery is completely discharged (i.e., the radio will not turn on), place the radio in the unit and wait 10 minutes before placing a call.

REMOVING THE RADIO

1. To release the radio from the HANDSFREE unit, squeeze the tabs on both sides of the holder until the radio tilts slightly forward.
2. Slide the radio straight up out of the holder so that the HANDSFREE system connector detaches from the base of the phone.

CARE AND MAINTENANCE

- Carefully follow the instructions on Inserting and Removing the radio from the HANDSFREE unit.
- Do not attempt to service the HANDSFREE unit or components yourself. Doing so will void the warranty.
- Follow all safety precautions and user guidelines

TROUBLESHOOTING

RADIO PROBLEM	PROBABLE CAUSE	REMEDY
The LED does not light when the vehicle power is supplied.	The holder is not receiving power, or vehicle power polarity is reversed.	Check the power connections and fuse. Be sure the radio battery is charged.
The portable radio functions outside the holder, but not in the holder.	Radio is not properly seated in the holder, or the system connector contacts are dirty, or the external antenna is disconnected or defective.	Be sure the radio is properly seated in the holder. If system connector contacts are dirty, carefully clean them.
The other party of the radio connection cannot hear sound.	The microphone jack is not inserted into the connection box.	Clean the microphone plug and insert it into the connection box.
No audio	The speaker jack is not inserted into the connection box.	Clean the speaker plug and insert it into the connection box.

NOTES

WARRANTY

A. Ericsson Inc. (hereinafter "Seller") warrants to the original purchaser for use (hereinafter "Buyer") that Equipment manufactured by Seller shall be free from defects in material, workmanship and title, and shall conform to its published specifications. With respect to any Equipment not manufactured by Seller (except for integral parts of Seller's Equipment to which the warranties set forth above shall apply). Seller gives no warranty, and only the warranty, if any, given by the manufacturer shall apply. Batteries are excluded from this warranty but are warranted under a separate Nickel-Cadmium Battery Warranty.

B. Seller's obligations set forth in Paragraph C below shall apply only to failures to meet the above warranties (except as to title) occurring within the following periods of time from date of sale to the Buyer and are conditioned on Buyer's giving written notice to Seller within thirty (30) days of such occurrence:

1. for fuses, incandescent lamps, vacuum tubes and non-rechargeable batteries, operable on arrival only.
2. for parts and accessories (except as noted in B.1) sold by Seller's Service Parts Operation, ninety (90) days.
3. for all other Equipment of Seller's manufacture, one (1) year.

C. If any Equipment fails to meet the foregoing warranties, Seller shall correct the failure at its option (i) by repairing any defective or damaged part or parts thereof, or (ii) by making available at Seller's factory any necessary repaired or replacement parts. Any repaired or replacement part furnished thereunder shall be warranted for the remainder of the warranty period of the Equipment in which it is installed. Where such failure cannot be corrected by Seller's reasonable efforts, the parties will negotiate an equitable adjustment in price. Labor to perform warranty service will be provided at no charge only for the Equipment covered under Paragraph B.3, and only during the first three (3) months following the date of sale to the Buyer. Thereafter, labor will be charged at prevailing rates. To be eligible for no-charge labor, service must be performed by an Authorized Service Center or other Services approved for these purposes either at its place of business during normal business hours, for mobile or personal equipment, or at the Buyer's location, for fixed location equipment. Service on fixed location equipment more than thirty (30) miles from the Service Center or other approved Service's place of business will include a charge for transportation. Equipment located off-shore is not eligible for no-charge labor.

D. Seller's obligations under Paragraph C shall not apply to any Equipment, or part thereof, which (i) has been modified or otherwise altered other than pursuant to Seller's written instructions or written approval or, (ii) is normally consumed in operation or, (iii) has a normal life inherently shorter than the warranty periods specified in Paragraph B, or (iv) is not properly stored, installed, used, maintained or repaired, or, (v) has been subjected to any other kind of misuse or detrimental exposure, or has been involved in an accident.

E. The preceding paragraphs set forth the exclusive remedies for claims (except as to title) based upon defects in or nonconformity of the Equipment, whether the claim is in contract, warranty, tort (including negligence), strict liability or otherwise, and however instituted. Upon the expiration of the warranty period, all such liability shall terminate. The foregoing warranties are exclusive and in lieu of all other warranties, whether oral, written, expressed, implied or statutory. NO IMPLIED OR STATUTORY WARRANTIES OF MERCHANTABILITY

Ericsson Inc.

Private Radio Systems

Mountain View Road

Lynchburg, Virginia 24502

1-800-528-7711 (Outside USA, 804-528-7711)

AE/LZT 123 1873 R1A

Printed in U.S.A.