

NØXAS ID-O-Matic

Morse ID Timer / Annunciator

The ID-O-Matic kit uses a microprocessor based, single chip ID timer/annunciator intended for Amateur Radio and other applications. Several modes of operation make it suitable for use in the shack or as an automatic Morse code ID for beacons, repeaters and “fox hunt” transmitters. The ID-O-Matic chip is a compact, single 18-pin package ideal for standalone use or integration into transmitter or transceiver. These instructions detail the assembly and use of the ID-O-Matic kit.

ID-O-Matic Features

(Firmware version 2.10)

- Supply voltage up to 24V with on-board regulator
- Low parts count, easy to assemble
- Serial interface for setup from PC or terminal
- Dual color LED for green/yellow/red indicator
- Reminder mode for shack use
- Delays from 1 second to over 9 hours may be set
- All memory and parameter settings retained with power off
- Auto ID mode with repeater inputs
- Morse code speed adjustable from 5 to 60 WPM
- INHIBIT input to delay ID
- START input to prevent repeater “beaconing” on quiet channel
- Repeater beacon timer to announce at regular intervals when desired
- Separate normal and beacon ID messages can be used, up to 64 characters each
- Special ID message for power failure or other alert condition
- Optional, variable length courtesy beep for repeater mode use
- Variable delay before courtesy beep
- Independent audio frequencies for Morse ID and courtesy beep
- Adjustable PTT hang time
- PTT time-out timer
- Audio (MCW), CW and PTT outputs
- CW and PTT outputs drive MOSFETs for direct connection to many rigs
- AR, BT, SK prosigns and new @ character supported

Kit Construction:

Keep all semiconductor parts in the anti-static packaging until you are ready to use them. Always use good static prevention practices when working with static sensitive parts. This means you should wear a grounding strap when possible, or work on a static-dissipative work surface. Use a grounded tip soldering iron. When soldering small parts it is a good idea to use a small, pencil-type soldering iron of no more than 25 Watts or so, or preferably a temperature controlled soldering station. Use pliers, clamps or alligator clips as heat sinks to prevent heat damage to parts while soldering. If you are not fairly experienced with soldering small parts, you may want to practice on some scrap parts first or get some help.

Work in an area with good lighting. You may want to use a magnifying lens to do some of the small soldering required. Insert each component from the top of the board (the side with the white silkscreen lettering), in the order shown in the instructions below. As each component is installed, solder the leads and trim off excess leads with a small pair of side cutters.

1. Install the 10K Ohm resistor (brown-black-orange) in the location marked R1.
2. Install the 470 Ohm resistor (yellow-violet-brown) in the location marked R2.
3. Install the 1K Ohm resistor (brown-black-red) in the location marked R3.
4. Install a 2.2K Ohm (red-red-red) resistor in location R4.
5. Install a 2.2K Ohm (red-red-red) resistor in location R5.
6. Install the .1 μ F capacitor (marked 104) in location C1.
7. Install the .33 μ F capacitor (marked 334) in location C2.
8. Install 2N7000 MOSFET transistors in locations Q1, Q2, Q3 and Q4. Make sure the transistors are oriented with the flat side as shown on the board. DO NOT trim the excess leads from Q1 yet.
9. Install the 18-pin IC socket in location U1. Make sure the notch in one end of the socket is positioned to match the board outline. Do not install the chip yet.
10. Install the 78L05 voltage regulator in location VR1. Check for proper orientation with outline on board. **NOTE:** If you wish to use battery power or a 5V DC power supply, do not install VR1. Instead, solder a jumper wire between pins 1 & 3 of the position marked VR1. This will bypass the voltage regulator option.
11. Carefully install the small 4 MHz cylindrical crystal in location X1. **NOTE:** This part is easy to damage with excess heat while soldering. *Be extra careful!*
12. Install the DB-9 connector in location J1.
13. Locate the small 1/8 Watt, 100K Ohm resistor (brown-black-yellow). This resistor will be installed on the underside of the board. Loop one of the resistor leads around the center lead (gate) of Q1. Loop the other resistor lead around the grounded lead of Q1 – this will be the lead closest to the edge of the printed circuit board. Carefully solder the resistor leads and trim all leads close.
14. Mount the Dual-color LED in the position indicated. Mount the LED so the shortest lead (red cathode) and flat side of the LED base is toward the bottom of the board, closest to the board edge. You can also mount the LED remotely using any convenient length of wire.

Powering the ID-O-Matic:

Power can be supplied by battery or a DC power source up to 24V if you have installed VR1 and C2. Connect the power input to the two points on the circuit board marked PWR; polarity is marked by '-' and '+' signs below the pads. **Warning: There is**

no diode to protect against reversed power leads – double check your connections!! You can use any suitably sized SPST power switch to fit your application.

If you opt for low voltage and jumpered out VR1 in Step 10, any smooth, regulated DC voltage from 3 to 5.25 V should work fine. Three AA alkaline cells should last quite a while for shack use as a simple ID reminder. If you plan to build your ID-O-Matic into a rig or a repeater controller, don't worry about battery backup; all memory and parameter settings are retained in non-volatile EEPROM memory and will be automatically recalled when power is applied.

Check the power supply voltage at pins 5 (GROUND) and 14 (POWER) on the 18-pin IC socket. Once you have verified that there is a safe voltage between 2.5 and 5.25 Volts, remove power and install the ID-O-Matic chip in the socket. Make sure to orient the chip properly, with the Pin 1 dot and notch toward the notch indicated by the silkscreened outline on the PCB.

Off-Board Connections

You will probably want to install a RESET switch, speaker, etc. Pads are provided to connect a SPST normally open pushbutton switch to reset the timer. There are also two pads marked SPK for audio Morse code output to a speaker or to connect to your equipment. A small speaker is provided that you can mount in a convenient location.

A series of six pads (marked JP1) are provided along the edge of the board opposite the serial connector. These connections may be left unconnected, or can be used as follows:

Pad	Function
JP1-1	TEST/ALT MSG input; see text.
JP1-2	INHIBIT input; active low logic level input.
JP1-3	START input; active low logic level input for COR or squelch signal.
JP1-4	PTT output; open-drain MOSFET, 60 V 200 mA max.
JP1-5	CW output; open-drain MOSFET, 60 V 200 mA max.
JP1-6	Ground

Operation

Simple timer mode:

For shack use as a simple ID reminder, simply turn the ID-O-Matic on. The LED should show green for nine minutes, then turn yellow. At nine minutes thirty seconds, the LED will begin to blink yellow and red. After ten minutes the LED will turn solid red and the ID-O-Matic will beep at you to remind you to ID, then automatically reset and start a new timing cycle. The open-drain PTT output can be used to drive an external indicator such as a lamp or LED. Push the RESET button to start a new cycle any time you ID.

Auto ID mode:

Similar to the simple timer mode, this will send a Morse ID at regular intervals. The INHIBIT input can be used to delay the ID if needed. Note that two Morse outputs are provided; there is CW output that is used for on-off keyed devices (CW transmitters, etc) and an audio output. The PTT signal is also active in Auto ID mode. The ID message will be sent every time the ID timer reaches zero, and the timer will automatically reset and begin counting again. This can be useful for “fox” transmitters, beacons, etc.

Repeater mode:

In this mode of operation, the START input is used to indicate that the transmitter has been keyed. It is normally connected to either a receiver COR/COS output, or to the PTT line normally connected to the transmitter. When the START input first goes low (active), the ID timer is loaded with your specified ID interval and starts counting down. At this time the LED will begin flashing green. When the ID timer reaches 60 seconds, the LED goes to solid yellow. At 30 seconds, the LED begins alternating red and yellow until the timer expires. At that point the LED goes solid red and the ID message is sent. The yellow and blink times are configurable using the setup menu.

If the interval since the last ID message has been longer than the ID interval – for instance, if your ID interval is set to 10 minutes and the repeater has been idle for more than 10 minutes since the last ID -- an ID will be sent 10 seconds after the first

time START goes active. The ID timer is then reset with the normal ID interval. During this phase, a “polite” ID is used; the ID message will not be sent until START is released OR the normal ID interval is reached.

The INHIBIT Line can be used to hold off the ID until the repeater is not busy. As long as INHIBIT is held low, the ID message or beacon message will not be sent. As soon as it is released, any pending message will be sent. The only exception to this rule is if you have PTT MAX (time-out timer) set; the ID-O-Matic will send its ID when PTT MAX is reached, regardless of the state of INHIBIT.

The PTT output is always active when the ID or beacon message is being sent. It is also active:

- If PTT hang time is set (not zero), the entire time START is active plus the length of the PTT hang time setting;
- If a courtesy beep is set, the entire time START is active plus half a second and the length of the courtesy beep;
- If both are set, the entire time START is active, plus the courtesy beep and hang time delays.

The **TEST/ALT MSG** pin is a dual purpose input. If this input is held LOW when power is applied or the ID-O-Matic is reset, it will send the version number, **ID Msg**, **Beacon Msg** and **Alternate Msg** (if they are set), separated by slant bars. After initial power up, this input can be used to select the **Alternate Msg** (if it is set) to be sent in place of the **ID Msg**. This can be used to send an alternate ID message when needed to indicate primary power failure or for whatever other purpose you may have in mind.

Setup

For beacon, foxhunt or repeater use, connect your ID-O-Matic to a PC or other serial terminal device using a straight-through 9 pin serial cable. If you have built your own custom device using the ID-O-Matic chip, you can use the kit schematic as a guide to build your own interface level converter. If using a PC you can use the HyperTerminal program provided with Windows, or just about any other serial communications program such as Procomm or Minicom. Set your communication parameters for 9600 baud, eight bits, no parity, one or two stop bits and no handshake or flow control. As a quick check to see if your serial port and communication software is set up correctly, connect a serial cable to the computer but not to the ID-O-Matic. Connect pins 2 & 3 together at the end of your serial cable. Anything you type should be echoed back to your computer.

Connect the ID-O-Matic and turn the power on. You should see the version number printed on your screen. Tap the ENTER key twice to enter the setup menu. You will be prompted for several bits of information. In each case you can hit RETURN to keep the current setting, which will be displayed in parenthesis after the prompt.


- **ID Time:** Enter the delay time, in seconds. This will be the time between ID reminders or Morse announcements.
- **Yellow time:** Enter the number of seconds from zero at which you want the LED to turn solid yellow. Setting this value to zero disables turning the LED yellow.
- **Blink time:** Enter the number of seconds from zero at which you want the LED to begin blinking red/yellow. Setting this value to zero disables red/yellow blinking.
- **ID Msg:** Enter up to 64 characters for your desired Morse code ID. Common punctuation and prosigns are supported:
 - Type a dash (-) for BT
 - Type a semicolon (;) for AR
 - Type a greater-than (>) for SK
 - @ will be sent as the new Morse @ sign character (.-.-.)
 - Comma, period, slash and question mark signs are sent as typed
 - To send a steady tone or CW carrier for a specified length of time (such as for a propagation beacon), type **:nnn**: where **nnn** is the number of seconds from 1 to 255.
 - Less-than (<) and other characters will be ignored.
 - Spaces, including trailing spaces, will be sent. **Note that entering a space as the first character of a message will delete the message.**
- **Beacon Msg:** Similar to the ID message, this message will be sent if the beacon time is set. If the beacon time is set and this message is empty, the ID message will be sent at beacon time instead.
- **Alternate Msg:** This message, if present, will be sent in place of the **ID msg** if the TEST/ALT MSG input is active (low) when the timer expires.
- **Auto CW ID:** Type Y to use the Morse code ID, or N for a simple beeping ID reminder.
- **CW Speed:** Enter the desired Morse code speed in words per minute. This will also affect the rate of beeping if Auto CW ID is off.

- **ID Audio Tone:** Enter the desired Morse ID audio frequency in Hz between 250 3500. The ID-O-Matic will set a speed as close as possible to your selection. The value displayed will be the actual calculated frequency.
- **Repeater mode?:** Type Y if you intend to use the START input. Type N if you do NOT plan to use the START input, even if it will be used in a repeater.
- **Courtesy beep tone:** This prompt will only appear if you answered “Y” to Repeater mode. With the courtesy beep tone set to an audio frequency (in Hz) between 250 and 3500, the ID-O-Matic will send a short beep about 500 milliseconds after the START input goes inactive (high).
- **Courtesy beep delay time:** This is the delay, in tenths of a second, between the time the START input goes inactive (high) and the courtesy beep. The valid range is from 0 (no delay) to 255 (25.5 seconds). For example, the default value of 5 gives you a half-second delay; 20 would be a 2 second delay and so on.
- **Courtesy beep mult:** If you have selected Repeater mode, this allows you to “stretch” the length of the courtesy beep. Enter a number indicating the length of the desired courtesy beep as a multiple of “dit” times – this means the courtesy beep length is determined by the current Morse code speed selected. *Set this to zero to disable the courtesy beep.*
- **Beacon time:** This prompt will only appear if you answered “Y” to Repeater mode. Setting this to other than zero will cause the ID-O-Matic to send a Morse message at regular intervals if nothing is seen on the START input while in repeater mode. This can be set to 3600 to announce the repeater every hour, for example, if the repeater is idle. Enter the number of seconds you wish to have between beacons, up to 65535. The beacon message is used if it is set, otherwise the ID message will be used. Set this to zero to disable beaconing.
- **PTT hang time:** This value is specified in seconds. While in repeater mode, the PTT output will be active as soon as the START input goes low and will remain active for the specified number of seconds after the START input goes high and any ID or courtesy beep is finished. With PTT hang time set to 0, PTT drops immediately after the courtesy beep.
- **PTT Max:** This setting will specify the maximum number of seconds the ID-O-Matic will allow PTT to be active. If the START input is active for longer than this setting, the ID-O-Matic will send “TOT” (for “Time-Out Timer”), then send the ID message and disable PTT until the START input is inactive.

Status LED colors and what they mean	
Green (solid)	Timer is operating; timer is more than 60 seconds from expiring.
Green (blinking)	In repeater mode, START input has been seen and ID timer is running.
Yellow	Timer is within 60 seconds (or YELLOW time) of expiring.
Yellow/Red Blinking	Timer is within 30 seconds (or BLINK time) of expiring
Red	Timer has expired. In repeater mode, ID is being transmitted (or is pending, being delayed until START and/or INHIBIT go inactive).

Morse code audio:

A square wave audio signal is provided on Pin 9. You can drive small loads such as many piezo speakers directly from the pin or through a capacitor, or use a small audio amp and filter if you wish. More elaborate solutions might include an audio amplifier such as an LM386 with filtering to "round off" the square wave to produce a more comfortable tone. If you are feeding the audio to a repeater, crossband rig or other device you'll probably want to use a simple circuit such as the one shown here to block DC voltage and allow you to adjust the audio level. The Connection Kit available from HamGadgets.com includes an audio amp/mixer as well as other functions.

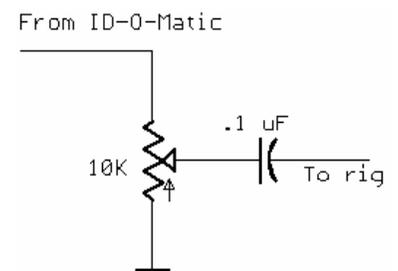


Connecting to your equipment:

The PTT and CW outputs are open-drain MOSFET outputs, and can be directly connected to inputs that do not exceed 60V or 200 mA at any time. They can be used to drive low current relays if needed. If you intend to use the ID-O-Matic with equipment requiring grid-block or cathode keying or any other application that will exceed 60 Volts or 200 mA, you will need to add a grid-block keying adapter such as the Universal Keying Adapter 2 or some other suitable output arrangement.

The INHIBIT, START and TEST/ALT MSG inputs may be left floating (unconnected) if not used. These inputs are active-low logic signals, meaning they are active when driven below 1V. **Be careful not to exceed 5V input on these inputs.** If

your equipment uses active high outputs, you can use a simple 1-transistor inverter. If your equipment uses voltages exceeding 5V, you can use a simple Zener diode circuit to reduce the voltage to a compatible level. Some examples of interface circuits are shown below:

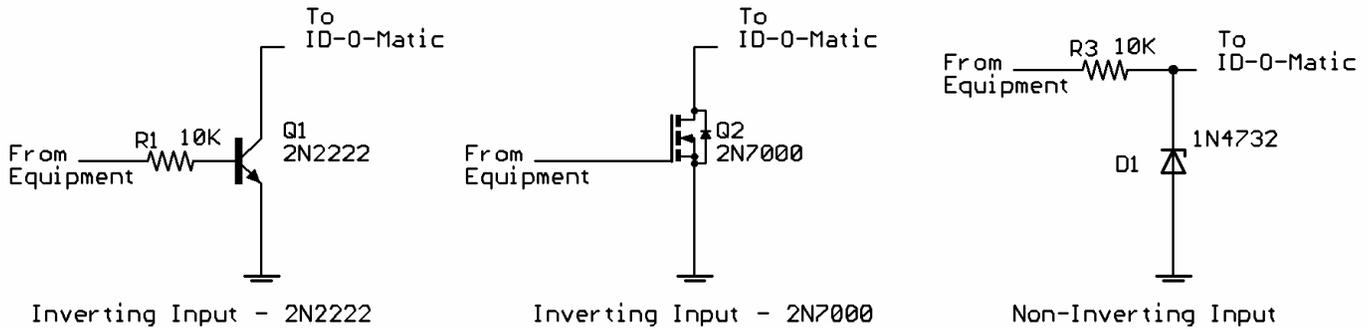


The Connection Kit can make connecting your ID-O-Matic to other equipment much easier. It provides inverting and non-inverting inputs, voltage limiting, an audio amp/mixer/filter, and optional PTT for many handheld transceivers. It is designed to plug directly onto the ID-O-Matic board “piggy-back” style. You can check out the Connection Kit at HamGadgets.com.

Troubleshooting:

Symptom	Check this:
No green LED with power applied	<ul style="list-style-type: none"> • 5V DC from IC pin 5 (GND) to pin 14 (+5)? • Chip inserted backward? • VR1 & Q1 exchanged? • Crystal damaged by excessive heat • R1 shorted to ground – check for 5V across RESET pads
No sound from attached speaker	The ID-O-Matic can only supply a few mA of audio drive. The included micro speaker should be used, or an audio amp connected.
LED blinks and turns RED as soon as power is applied	ID delay time set to zero. Try hitting ENTER repeatedly as you apply power or reset using RESET pads to get into setup menu.
No version notice when power is applied	<ul style="list-style-type: none"> • Possible serial communication issue (see below). • Q2 bad. • R4 open or shorted.
Version notice appears, but the ID-O-Matic won't respond when you hit ENTER a number of times	<ul style="list-style-type: none"> • Possible serial communication issue (see below). • Q1 bad. • R5 open or shorted.
No voltage on JP1-4 or JP1-5	These are active low, open-drain outputs. See instruction manual. Use a pull-up resistor if needed.

Troubleshooting Serial Communications Problems

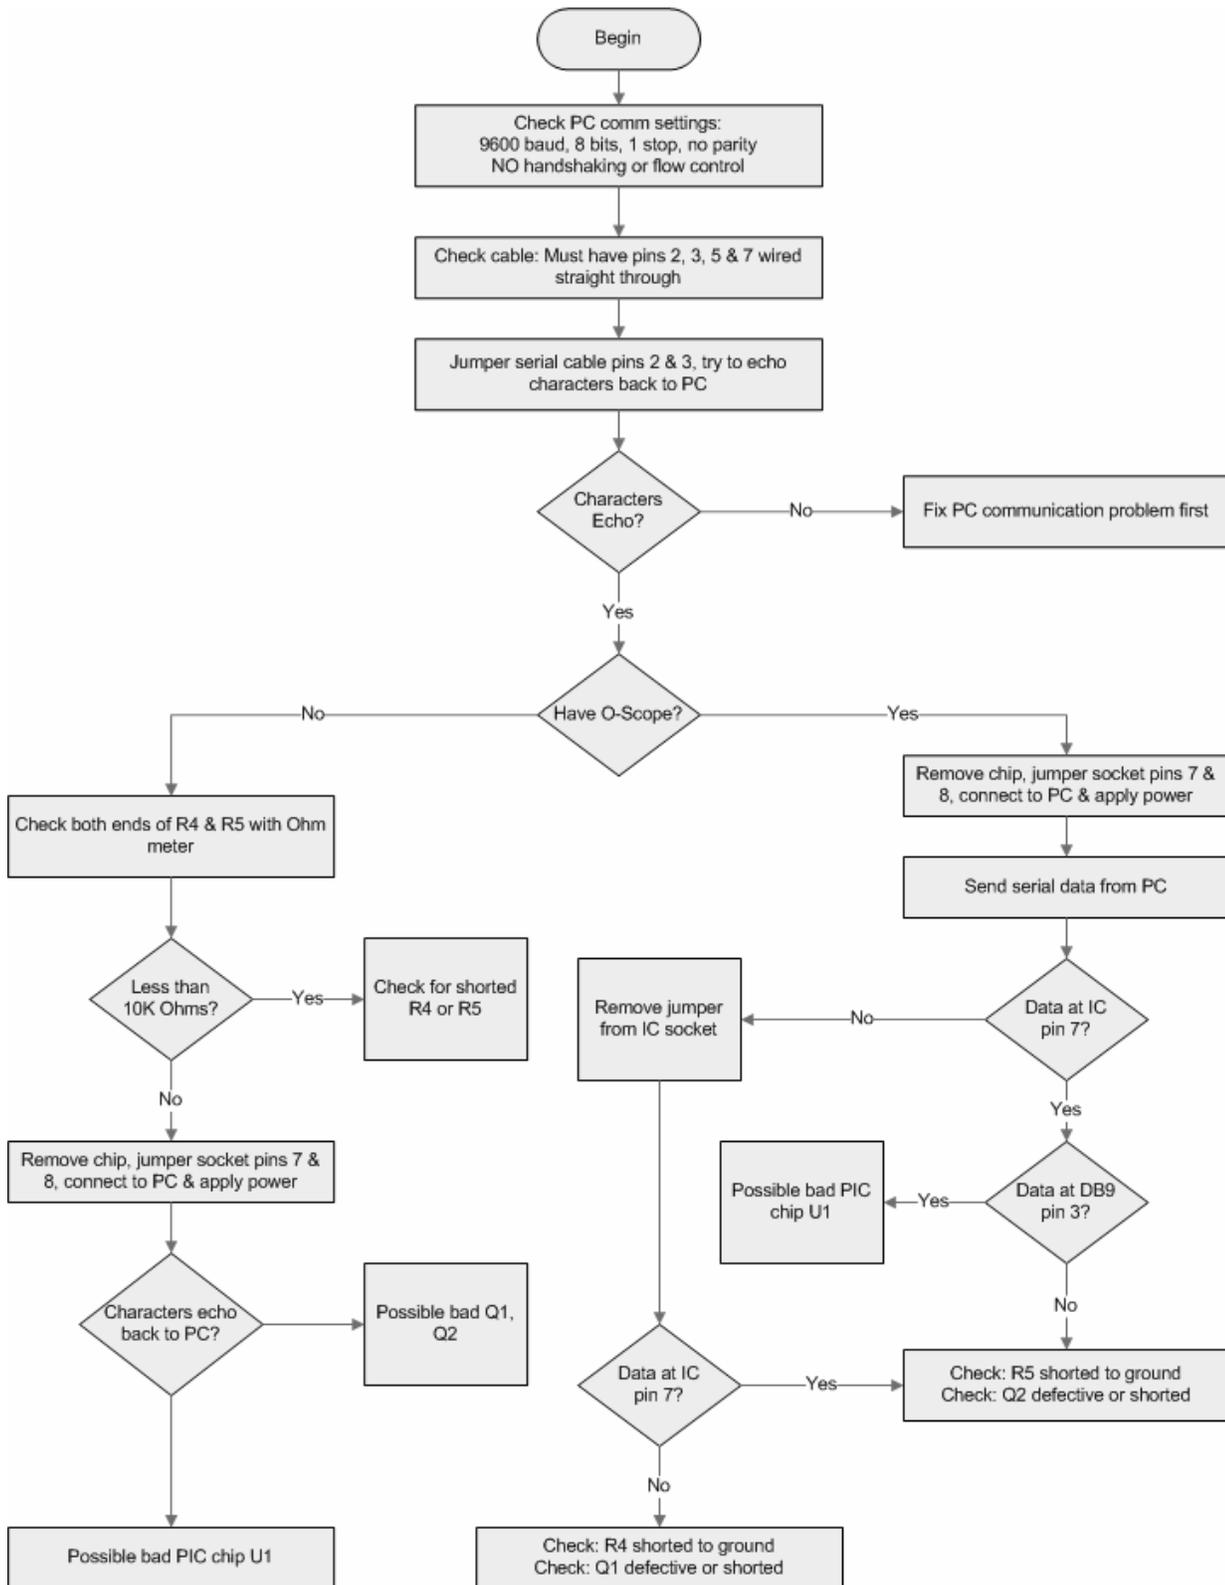

Also see http://www.HamGadgets.com/pdf/ID-O-Matic_Setup_Troubleshooting.pdf

Support:

Should you need support, have questions, have feature requests or bug/problem reports, please feel free to contact me via email at n0xas@botkin.org or n0xas@arrl.net. I will make every effort to respond as quickly as possible. Documentation and troubleshooting information can be found at <http://www.HamGadgets.com>.

Warranty:

All parts are guaranteed against defects for 90 days from date of purchase. This warranty does not cover damage due to incorrect assembly, improper soldering or wiring, overvoltage, static damage or other misuse or abuse. If you have problems, please contact me via email to arrange for an exchange or replacement part. If you accidentally damage a part, don't panic – just contact me, replacements are not expensive.

Schematic of ID-O-Matic Kit:

