



- NOTES:
- 1) INACTIVITY TIME IS CALCULATED AS FOLLOWS
 - 2) AFTERTRANSMISSION TIME IS CALCULATED AS FOLLOWS
 - 3) REFER TO MANUAL 68P440435 FOR JUMPER
 - 4) POTENTIOMETER R51 IS USED TO ADJUST DELAY IS ADJUSTED FROM 0-20 SEC.
 - 5) NOT USED ON EARLIER VERSIONS.
 - 6) 1 MEG. USED ON EARLIER VERSIONS.