

# Connection Notes STM32-DVM to Motorola 16/20 pin Accessory Connector

### **Cable Information:**

STM32- DVM	Signal	Simplex	Duplex TX Radio	Duplex RX Radio
1	N/A			
2	$\rightarrow \rightarrow$ TX Audio (Flat / 9600 Baud) $\rightarrow \rightarrow$	5	5	
3	←← DVM Inhibit (Act. Low) ←←	8*		8*
4	←← RSSI ←←	15#		15#
5	ightarrow  ightarrow  ho PTT $ ightarrow  ightarrow$	3	3	
6	←← RX Audio (Discriminator) ←←	11^		11^
7	N/A			
8	$\leftarrow\leftarrow$ Ground $\rightarrow\rightarrow$	7	7	7
9	←← +12V →→	13&		13&

#### **NOTES:**

- \* This pin is "special use" and typically only used in duplex Analog/Digital dual-mode systems.
- & Pin 13 can be used/programmed for ignition sense, or to feed power to the STM32-DVM if the optional 12v buck converter has been installed.

#### DO NOT use on pre-version 3 boards!

- ^ Ensure JU551 is in position "A" in Motorola Maxtrac style radios.
- # Only connect for RSSI on CDM series radios.

## Suggested "Inversion" Settings:

Model	RXInvert	TXInvert
GM300	0	1
CDM1550	0	0

