

Mini Amplifier/Speaker

277-1008C

Thank you for purchasing your Mini Amplifier/Speaker from **RadioShack**. Please read this user's guide before installing, setting up, and using your new speaker.



Rotate to turn the speaker on/off and adjust the volume. Turn the speaker off when not in use.



Input 1/8" jack
Connect to a CB, scanner, 2-way radio or Ham Radio transceiver to boost the volume of incoming transmissions.

EXT SPKR 1/8" jack
Connect to an external speaker or earphone.

DC 9V
(Optional) Connect to a 9VDC adapter (not supplied) for power.

Headphone Safety

- Set the volume to the lowest setting before listening. Then, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- After you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort can still damage your hearing.

Install Battery

You can use a 9V battery (not supplied) to power your speaker.

- ① Loosen the screw on the back and remove the cover.
- ② Insert a 9V battery with the correct polarity.
- ③ Replace the battery cover.



Battery Notes

- Do not burn or bury batteries. Do not puncture or crush. Do not disassemble.
- Use only fresh batteries of the required size and recommended type.
- Do not use batteries of different types, capacities, or chemistry.
- Remove the battery if you do not plan to use the product for an extended time.

What's Included

Speaker User's Guide

Specifications

Power 9V battery / 9VDC adapter
 Power output 200 mW
 Frequency 100–10 kHz
 Impedance 5 kOhms
 Sensitivity 1 mV
 Dimensions (L×W×H) .. 2.75×1.42×3.54in
 (70×36×90mm)
 Weight..... 4 oz (1.8kg)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.



Protect the environment. Go to E-CyclingCentral.com to find a recycle location near you.
www.RadioShack.com

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after

the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK** MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser. Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD. EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at: **RadioShack** Customer Relations
 300 RadioShack Circle, Fort Worth, TX 76102 04/08