


A LOOK AT THE FRONT PANEL

A quick glance at this section should help you understand each key's function.

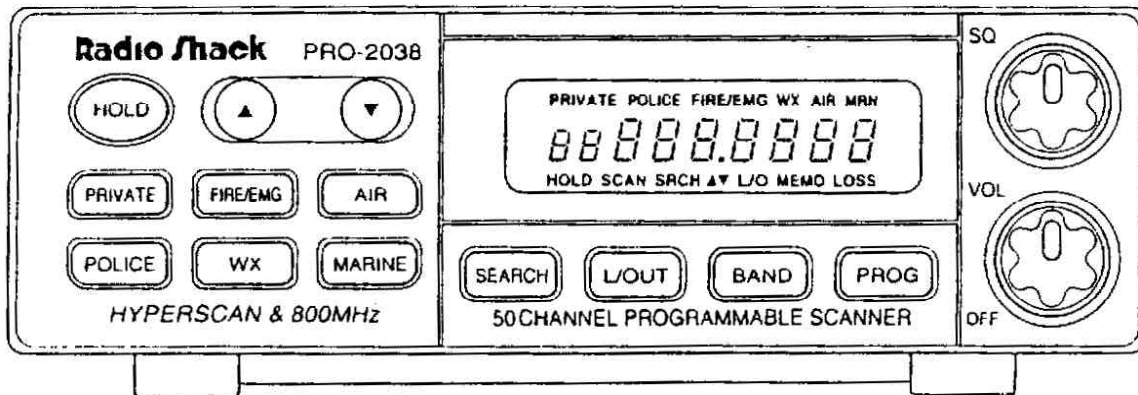

HOLD — stops scanning or searching.

PRIVATE — scans the frequencies you stored in the PRIVATE scan bank's channels.

POLICE — scans the pre-set frequencies and channels in the POLICE service scan bank.

▲ and ▼ — moves up or down through frequencies and channels or changes the search direction.

FIRE/EMG — scans the pre-set frequencies and channels in the FIRE/EMG service scan bank.

WX — scans the pre-set frequencies in the WX service scan bank.

AIR — scans the pre-set frequencies in the AIR service scan bank.

MARINE — scans the pre-set frequencies in the MARINE service scan bank.

SEARCH — searches for active frequencies within a selected range, starting from the lowest frequency.

L/OUT — locks out selected frequencies or channels.

BAND — selects any of the 12 frequency bands to search.

PROG — programs frequencies into channels.

SQ — adjusts the scanner's squelch.

OFF/VOL — turns the scanner on or off and adjusts the volume.