 


USE AND CARE GUIDE

POWER SAVING STRIP TIMER

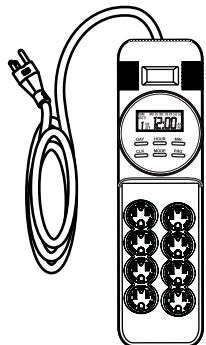

Questions, problems, missing parts? Before returning to the store,
call Defiant Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday
1-866-308-3976
HomeDepot.com

THANK YOU

We appreciate the trust and confidence you have placed in Defiant through the purchase of this power saving strip timer. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Defiant!

Safety Information

FCC NOTE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This Class B digital apparatus complies with Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

**WARNING: RISK OF ELECTRIC SHOCK:**

- ☐ Plug directly into an electrical outlet
- ☐ Do not use in wet locations
- ☐ Use indoors only
- ☐ Unplug timer before cleaning
- ☐ Keep children away
- ☐ Do not use with aquariums

**WARNING: RISK OF ELECTRIC FIRE:**

 
- ☐ Do not use to control appliances that contain heating elements such as cooking appliances, heaters, and irons
- ☐ Do not exceed electrical ratings
- ☐ Do not use with extension cords

WARNING: This timer can turn ON unexpectedly without any user action. To reduce the risk of personal harm or damage to the unit, unplug the device that is plugged into the receptacle(s) controlled by the timer before servicing.



RATINGS
120 V
15 A
1800 W
14/3 AWG SJT Vinyl Power Cord, 3 Ft. Cord Length

Product Description

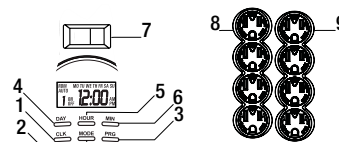

- CLK (clock) button:** Hold and press HOUR, MIN, or DAY buttons to set time of day. Press once during programming to return to the current time of day display.
- MODE button:** Press to scroll between timing modes. Hold and press PRG to clear programmed settings.
- PRG (program) button:** Press to enter programming mode, and to scroll between programs.
- DAY button:** While holding the CLK button, press to set day of the week. While in programming mode, press to scroll through options for days of the week.
- HOUR button:** While holding the CLK button, press to set hour (time). While in programming mode, press to set hour for ON/ OFF times.
- MIN (minute) button:** While holding the CLK button, press to set minute (time). While in programming mode, press to set minute for ON/ OFF times.


- Power switch:** Turns the timer strip ON/ OFF.
- Timed outlets:** Outlets controlled by the timing programs.
- Switched outlets:** Outlets not controlled by the timing programs (always ON when the power switch is flipped to the ON position).

Operating Instructions

1 Setting up the timer for the first time

Remove the protective plastic from the screens. To actuate the battery (one LR44 battery is provided with the timer), pull the tab sticking out of the batter door. You may need to open the battery door to remove the tab. All of the readouts on the display will show for three seconds, and then the display will read as shown.


- ☐ Hold the CLK button (1) down to set the time of day.
- ☐ Press the DAY (4), HOUR (5), and MIN (6) buttons to set the current day of the week, hour, and minutes, respectively.

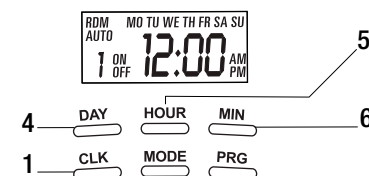

Operating Instructions (Continued)

2 Programming ON/ OFF Times

- ☐ Press the PRG button (3) once to begin programming. The display will show 1 ON --- and all days of the week if it has not been set. The display will show 1 ON and the previous setting if it has already been set.
- ☐ Press the DAY button (4) to select the days of the week the timer will operate:
 - ☐ All days of the week (MO TU WE TH FR SA SU)
 - ☐ Any single day of the week (MO TU WE TH FR SA SU)
 - ☐ Weekdays only (MO TU WE TH FR)
 - ☐ Weekends only (SA SU)
- ☐ Press the HOUR (5) and MIN (6) buttons to select the time of day the timer will activate.
- ☐ Press the PRG button (3) once more. The display will show 1 OFF --- and all days of the week if it has not been set. The display will show 1 OFF and the previous setting if it has already been set.
- ☐ Repeat the previous steps to program the times for the timer to turn OFF for program 1.
- ☐ Press the PRG button (3) again to move to Program 2. Repeat the previous steps to program the ON/ OFF times for Programs 2-6, if needed.
- ☐ Once programming is complete, press the CLK button (1) to return to the current time display.

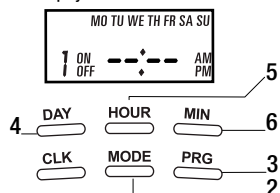



3 Using the timer

- ☐ Press the MODE button (2) until the AUTO indicator is displayed. The timer will operate automatically as programmed.
- ☐ Press the MODE button (2) until the RDM (random) indicator is displayed, and the timer will operate randomly as programmed.




NOTE: Random is a feature that will randomize your current settings either + or - 30 minutes, giving your home a lived in appearance to deter intruders.

  - ☐ Plug the timer into an outlet, and plug the devices to be controlled by the timer into the timed outlets (8).
- ☐ Flip the power switch (7) to the ON position, and ensure the devices are powered on.

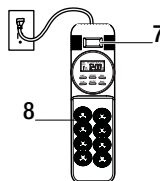

4 Using the manual override

- ☐ Press the MODE button (2) until the ON indicator is displayed. The timed outlets of the timer will turn ON and remain so until the mode is changed.
- ☐ Press the MODE button (2) until the OFF indicator is displayed. The timed outlets of the timer will turn OFF and remain so until the mode is changed.

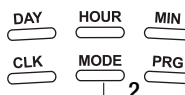

DEFIANT®

Questions, problems, missing parts? Before returning to the store,
call Defiant Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-866-308-3976

HOMEDEPOT.COM



NOTE: Press the PRG button (3) repeatedly to check the ON and OFF times for each program. While holding the MODE button (2), press the PRG button (3) to clear the setting.