Maintenance Manual

LPE-200 SCAN And SYSTEM PORTABLE RADIOS 900 MHz



MANUAL REVISION HISTORY

REVISION	DATE	REASON FOR CHANGE
R1A	DEC 1996	Original issue

NOTICE!

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

NOTICE!

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

NOTICE!

The software contained in this device is copyrighted by Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© December 1996, Ericsson Inc.

_____TABLE OF CONTENTS ______

SPECIFICATIONS	4
GENER AL	4 1
RECEIVE	4
TRANSMIT	5
	5
MECHANICAI	0
OPTIONS AND ACCESSORIES	/
	/ Q
CONTROL S	0 8
KEVPAD SCAN/SVSTEM FUNCTIONS	0
	10
CIRCUIT ANAL ISIS	10
DECEIVED	10
NEUEIVER	.10
NA FIOIL EILU Dy Daak End	.10
KX DACK EIIU	.11
TKAN5MITTER	.13
Transmit Frequency Generation	.13
1 X/Converter/Modulator (N150)	.13
SAW Transmit Band Pass Filter 1	.14
MMIC Buffer Amplifier	.14
SAW Transmit Band Pass Filter 2	.14
Power Amplifier (N101).	.14
Directional Coupler (W100)	.14
Power Sensor Circuit (N102-A)	.14
Power Control Buffer (N102-B)	.15
Transmit Low-Pass Filter/Antenna Switch	.15
Transmit Modulation	.15
SYNTHESIZER	.15
Dual Synthesizers (N203)	.15
Bilateral Switch (N201)	.15
Main Voltage Controlled Oscillator (U200)	.15
Main Synthesizer (N203)	.16
Auxiliary Synthesizer (N203)	.16
Reference Oscillator (U201)	.16
DC POWER DISTRIBUTION	.16
Synthesizer Regulator (N290)	.16
Receiver Regulator (N490)	.16
Transmit Regulator (N190)	.16
Tx Switch (V192)	.17
B+ Switch (V191)	.17
Analog Regulator (N900)	.17
+5V-D Switching Regulator (N902)	.17
LCD NEGATIVE BIAS GENERATOR	.18
SERVICE	.18
EQUIPMENT REQUIRED	.18
PROGRAMMING	.18
Personality Programming	.18
Flash Programming	. 19
Programming Mode	. 19

BASIC TROUBLESHOOTING	19
ERROR CODES INTRODUCTION	22
ERROR CODE OVERVIEW	22
Error Code Format	22
Fatal Errors	
Non-Fatal Errors	23
Special Error Codes	23
ERROR CODES - SPECIFIC	23
Hardware Fatal System Errors	23
Operational Software Fatal System Errors	
Operational Software Non-Fatal System Errors	25
Radio Programming Errors	26
DISASSEMBLY PROCEDURE	
PA Module Replacement	
Filters Z400 And Z401 Replacement	
REASSEMBLY	

SPECIFICATIONS*

GENERAL

FCC Identification Number DOC Certification Number	AXATR-357-A2
Input Voltage	7.5 Vdc (nominal)
Frequency Range: Transmit * Receive	896 - 901 MHz 935 - 940 MHz 935 - 940 MHz
Frequency Stability	±1.5 PPM
Dimensions (Typical)H x W x D: Less knobs and antenna with High Capacity Battery with Extra High Capacity Battery	144 mm x 67 mm x 43 mm 157 mm x 67 mm x 43 mm
Weight: with High Capacity Battery with Extra High Capacity Battery	20.8 oz. (589 g) 22.0 oz. (624g)
Operable Temperature Range	-30°C to +60°C (-22°F to +140°F)

SPECIFICATIONS* (Con't)

RECEIVE

Channel Spacing	12.5 kHz
Sensitivity (12 dB SINAD)	-118dBm
Selectivity:	-63 dB
Intermodulation	-67 dB
Frequency Separation	Full Bandwidth
Audio Output	500 mW @ 3% Maximum Distortion

TRANSMIT

RF Power Output	0.5 - 3 Watts (Normal Trunked)
Spurious and Harmonics	-55 dBc
Modulation/Deviation	±2.5 kHz
Frequency Separation	Full Bandwidth
FM Hum & Noise (Companion Receiver)	-35 dB
Audio Distortion	Less than 3% @ 1000 Hz, 3 kHz deviation
Frequency Stability (-30°C to +60°C: + 25 Ref)	±1.5 PPM
Audio Frequency Response	EIA

^{*}These specifications are intended primarily for the use of the service technician. See the appropriate Specification Sheet for the complete specifications.

DESCRIPTION

The Ericsson Inc. LPE-200 Portable Radios are rugged, high-quality, high-performance FM two-way communications unit. It is available in either *Scan* or *System* versions. These are Ericsson's smallest and most sophisticated high-specification portable radios, designed to meet worldwide requirements. They utilize custom designed integrated circuits to set new standards for size and weight for a high power, high specification two way radio. These radios are synthesized and can be programmed to operate on both **EDACS**[•] trunked or conventional communications systems. Features include:

• Compact Size

Designed small and light with rounded edges to fit comfortably in your hand, while providing specifications and performance superior to larger, heavier radios.

• Light Weight, Rugged Constructions

Features a molded case made of a polycarbonate blend surrounding a metal casting. This construction provides a lightweight yet durable housing designed to withstand years of rugged use.

• High System/Group Capacity

Both the Scan and the System versions can manage up to 800 different EDACS system/group combinations with up to 200 conventional channels. EDACS systems/groups can be configured in many different ways to meet specific user needs.

• Dual Mode Capability

Conventional operation by simply selecting a preprogrammed conventional system.

Transmit Indicator

A red LED indicator on the top of the radio indicates when the radio is transmitting.

• Display

System and group information, status icons and menu operation is supported by the 3-line, 12-character, alphanumeric back lit Liquid Crystal Display (LCD).

• Top-Mounted Rotary Knobs

The rugged rotary knobs are designed for ease of operation by allowing tactile access to groups, systems, conventional channels, as well as volume and power control. Knobs are designed with metal protective sleeves which help prevent bent and broken knobs due to impact.

• Keypad

The back lit keypad allows the user to access the many radio functions. The 6-button SCAN provides easy access to preprogrammed telephone and individual radio ID's, while the 15-button System keypad expands this capability, allowing direct entry of these numbers. The LPE-200 radios have a keypad with translucent keys. A detailed description of the keypads and their additional function is found in the **OPERATION** section.

• Emergency ID And Alarm

The user can alert the dispatcher to an emergency by pressing a recessed red button located on the top of the radio which sends user ID and an emergency signal.

• Universal Device Connector (UDC)

The UDC provides the PC programmer and optional accessories access to the radio for ease and versatility of radio functionality.

• Variable Power Control PC Programmable from 0.5 to 3 watts

• Weatherproof

Radios operate reliably under adverse conditions. These portable radios meet military standards MIL-810C, D and E specifications for temperature and pressure extremes, solar radiation, driven rain, humidity, salt fog, blowing dust, shock and vibration.

• Vibration

Meets EIA, U.S. Forest Service and MIL-810 environmental and vibration-stability requirements.

• Personality Programming

Can easily be hooked up to a personal computer in the field, to allow system and radio parameters to be flexibly programmed as requirements change, without changing parts or opening the radio case.

MECHANICAL

The radios are packaged in a polycarbonate blend exterior housing. A six-cell back mounted nickel cadmium battery pack provides a nominal 7.5 volts. Two different nickel cadmium battery packs offering high and extended capacities are available for use with the portable radios.

The top of the radio has a Volume, Channel/ Area/System select knob, Emergency/Home button, TX LED and a screw-on antenna mount connector. Located on the front is a 3-line 12 character per line dot matrix LCD with backlighting. A chip-on-glass filtered super twisted nematic LCD with a transflective rear film is used. A 36 mm speaker and electret microphone are located above the LCD. Below the speaker is either a 6-button keypad for *Scan* operation or a 15-button keypad for *System* operation. A push-to-talk bar is located on the left side along with a Clear/Monitor button and option button. On the opposite side a UDC connector is located for plug-in accessories and PC programming.

One printed wire board assembly contains the transmitter/receiver, audio and logic circuitry. A separate printed wire board assembly (daughter board) contains the DSP Module. The radio board assembly is cradled in a zinc die casting which is used as a PA heat sink and for housing rigidity. A sheet metal shield completes the RF shielding.

The keypad and LCD assembly are separate from the main board and interconnect by a flex-circuit. This flex-circuit also interconnects the speaker, microphone and UDC assemblies. Top controls mount to another flex-circuit board that plugs into the main radio board assembly.

Radio circuitry is centered mainly on one radio board. This board is mounted in a metal housing with a metal shield covering the top of the board. This enclosure is penetrated only by a flex cable which ties the front, user interface part of the radio to the board and a 3-pin battery connector. Surface mount components populate both top and bottom of the radio board allowing a combination of both RF and digital circuits. Only a few leaded parts are used where no surface mount components are available.

OPTIONS AND ACCESSORIES

PART NUMBER	DESCRIPTION
	Batteries
BKB 191 203	High Capacity NICAD Battery
BKB 191 202	Extra High Capacity NICAD Battery
BKB 191 203/A2	High Capacity NICAD Battery (FM Intrinsically Safe)
BKB 191 202/A2	Extra High Capacity NICAD Battery (FM Intrinsically Safe)
	Chargers
BML 161 51/505	120 Volt, Rapid (Ericsson label)
BML 161 51/506	120 Volt, Rapid (GE label)
BML 161 51/507	230 Volt, Rapid (Ericsson label)
BML 161 51/513	120 Volt, Multi Rapid (Ericsson label)
BML 161 51/514	120 Volt, Multi Rapid (GE label)
BML 161 51/515	230 Volt, Multi Rapid (Ericsson label)
	Antenna
KRE 101 1223/02	900 MHz Whip Antenna
C	arrying Accessories
KRY101 1605/01	Leather Case With Belt Loop
KRY101 1605/A2	Leather Case W/Swivel And Belt Loop
KRY 101 1609/A1	Belt Loop With Swivel
KRY 101 1232/2	Plastic Belt Clip
KRY 101 1607/1	Leather Shoulder Strap
Audio Accessories	
KRY 101 1617/1	Speaker Microphone (GE label)
KRY 101 1617/3	Speaker Microphone (Ericsson label)
KRY 101 1617/A2	Speaker Mic., With Antenna (GE label)
KRY 101 1617/A4	Speaker Mic., With Antenna (Ericsson label)
RLD 541 07/11	Earpiece Kit, Speaker Microphone

OPERATION

The LPE-200 series of portable radios is designed for EDACS and conventional mode operation. When the unit is used in a trunked EDACS, the digital control channel is automatically monitored. When the user initiates a call, the unit sends a digital request through a control channel to the site controller. The site controller then assigns the calling radio and all members of the talk group to an available working channel. All operations in EDACS configurations are supported from a single-site system to wide-area trunking networks.

For more detailed operating instructions refer to Operator's Manual **AE/LZT 123 1868**.

CONTROLS

The radio features two rotary control knobs and an emergency button mounted on the top of the radio, with side-mounted push-to-talk, monitor/clear and option buttons. The front-mounted keypad has 6 buttons on the *Scan* and 15 buttons on the *System (refer to Figure 1)*.

• Power/Volume Knob

This knob controls power to the radio (On/Off) and adjusts the Volume level of the speaker.

Control Knob

A 16-position rotary switch can select systems, groups or conventional channels. The knob is fitted with a variable hardware stop for radio customization.

• Emergency Button

A recessed red button on the top of the radio initiates an emergency alert to the dispatcher and talk group members.

• PTT Button

The weather-sealed Push-To-Talk (PTT) button must be pressed before voice transmission begins. Pressing the PTT button transmits the unit ID. In trunked mode, the ID is transmitted upon depression of the PTT button.

• Clear/Monitor Button

In the trunked mode, the weather-sealed Clear/Monitor button is used:

- 1) to exit the current operation, removing all displays associated with it and return the radio to the selected talk group.
- 2) to hang-up individual and telephone interconnect calls.

In the conventional mode, the Clear/Monitor button functions are:

- 1) to unsquelch the receiver to allow channel monitoring prior to transmission.
- 2) to remove Channel Guard Decoding from a channel.

• Option Button

The weather-sealed option button activates one of a number of programmable software options selected during PC programming. Programmable options include high/low power setting, keypad lock, LCD contrast, LCD and keypad back lighting.



Figure 1 - Controls (Top, Back and Left Panel Views)

KEYPAD SCAN/SYSTEM FUNCTIONS

Г





Figure 3 - System Keypad

Key	Function
▲ ▼	Primary Function: Allows user to select either system, groups, or channels, depending on personality programming. The buttons act as STEP UP or STEP DOWN . Pressing one of these buttons displays the next or previous stored system, group or channel. <u>Secondary Function</u> : Changes the selection for an item within a list.
Μ	Primary Function:Accesses the pre-storedmenu.The menu can include high/low powersetting, keypad lock, LCD contrast, LCD andkeypad back lighting.Secondary Function:Activates a selecteditem within a list.After a menu list isaccessed, scroll through the list using the \bigtriangleup keys and then activate specificitems with the M key.This is similar to an"Enter" key.

Key	Function
A/D (Scan only)	Adds/Deletes selected groups or channels from the <i>Scan</i> list of the currently selected system.
SCN (Scan only)	Turns the Scan operation On and Off.
OPT (Scan only)	Activates one of a number of programmable software options, selected during the PC programming. Programmable options include high/low transmitter power and talk- around.
(System only)	Used to select a specific system. If the rotary knob is used to select the system and more than 16 systems are programmed in the radio, the (1878) key is used to select additional banks (groupings) of systems.
1-9, *, 0, # (System only)	These keys are used to place telephone interconnect and individual (unit-to-unit) calls. The keys operate like a normal telephone keypad.
(System only)	Used to select a specific group.
(System only)	Used to turn the SCAN operation on and off.
(System only)	Used to place telephone interconnect calls.
(System only)	Used to initiate individual calls.
(System only)	Adds groups or channels from the Scan list of the currently selected system.
(System only)	Deletes selected groups or channels from Scan list of the currently selected system.

CIRCUIT ANALYSIS

The portable radio is unique in the generation of the transmit carrier. The transmit section has an offset frequency loop operating at 115.2 MHz. This means the synthesizer is operating at a frequency that is not harmonically related to the output frequency.

The radio contains five custom integrated circuits as follows:

- **DEBBIE** (D601) Has three major functions: digitizing, voice CODEC and digital to analog conversions.
- **HILLARY** (D701) Contains the microprocessor, phase digitizer, frequency discriminator and sigma/delta modulator to provide digital modulation.
- **JACQUI** (N150) Generates the transmit carrier frequency from the main VCO frequency. Generates the transmit offset oscillator frequency and provides modulation through the I/Q inputs.
- **CHERYL** (N203) The main and auxiliary frequency synthesizers for the main VCO and the 2nd Local Oscillator (LO).
- **DIANE** (N551) Contains the 2nd mixer and the LO for the 2nd mixer. Contains a limiter circuit which provides a balanced output to HILLARY. Provides the receiver 2nd IF and the **Receiver Signal Strength** Indicator (**RSSI**) signal.

The Schematic Diagram for this unit consist of 16 sheets. Component coordinates are provided so the technician can locate different points with ease. For example: A point may be labeled **7-B16**. This means that this point connects to a point shown on sheet 7 with coordinates **B** (read up) and **16** (read right). Borders with vertical and horizontal coordinates are provided to facilitate this capability.

SOFTWARE

Software in the microprocessor handles basic radio controls, interfaces and system protocols. The HILLARY chip and DSP handles all modulation, demodulation and speech processing functions.

Microprocessor software consists of:

• **RAM Bootloader Software** - downloaded by the PC programmer into the radio and executed. This software communicates with the PC using a full network protocol (x3.28). Serial data is transferred through the radio UART for *FLASH* application loading, DSP code

storage and personality storage. This software supports read/write of EEPROM data such as Tracking Data and Feature Encryption. Data compression is used to reduce *FLASH* application loading time.

• *FLASH* Application Software - the main radio controller software. It is divided into the platform and application modules. The platform software provides the hardware level interface, operating system, run-time libraries and software standby (*sleep*) operation. The application software provides all of the user interface trunked signaling, conventional signaling, diagnostics, debugging capability, UDC device support and personality interface.

DSP software includes:

- FM Audio Processing Transmit
- FM Audio Processing Receive
- Transmit Waveform Generation
- Transmit Waveform Combinations
- Demodulation/Decoding
- Demodulation/Decoding Combinations

RECEIVER

RX Front End

The 935-940 MHz RF receive frequency is passed from the antenna through a low pass filter/antenna switch to the input of fixed ceramic band pass filter Z400 (Pin 1). The band pass center frequency is 938 MHz and the gain through the filter is typically -1.5 dB. The output of Z400 (Pin 2) is coupled through capacitor C400 and impedance matching inductor L400 to the base of RF amplifier transistor V400.

RF Amplifier (V400)

RF amplifier transistor V400 provides typically +16 dB of gain to the RF signal. The gain of this stage is controlled by feedback voltage from **IF AMP 1** transistor V500 which sets the bias of V400. The emitter voltage of V500 is connected to the collector of V400 through resistors R504 and R401, and filter capacitors C506 and C507. This voltage can be metered at TP400. The bias to the base of V400 is set by resistor R400. RF coil L401 tunes the amplifier load. The output of V400 is coupled through fixed ceramic band pass filter Z401 (Pin 1). The band pass center frequency is 938 MHz and the gain through the filter is typically -1.5 dB. The output of Z401 (Pin 2) is connected to the input of mixer circuit Z402 (Pin 5).

Local Oscillator Buffer (V450)

The injection frequency (1011.2-1016.2 MHz) from the synthesizer circuit is applied to the base of Local Oscillator (LO) NPN buffer transistor V450 through capacitor C450 and inductor L450. This signal at the input of V450 is 0 dBM and is amplified to +4 dBm. This signal can be metered at TP450. The output of V450 is connected to the input of mixer Z402 (Pin 1).

Mixer (Z402)

The LO frequency and the RF signal are mixed to provide an Intermediate Frequency of 76.2 MHz (example: 1011.2 MHz - 935.851 MHz = 76.2 MHz). This signal on the output of Z450 (Pin 4) is applied to the base of **IF AMP 1** NPN transistor V500 through filter capacitor C505, inductor L500 and coupling capacitor C504.

IF Amp 1 (V500)

IF AMP 1 amplifies the 76.2 IF signal +15 dB. The collector voltage for V500 is from the emitter of **LO BUFFER** amplifier V450 and can be metered at TP500 (3.8 *V*). The emitter voltage of V500 is used as feed back to control the gain of RF amplifier V400. The output from the collector of V500 is connected through coupling capacitor C502 to the input of band pass Filter Z500 (Pin 4).

IF Filter (Z500)

IF band pass Filter Z500 is a 4-pole crystal filter. The gain of Z500 is -3 dB and the center frequency is 76.2 MHz. The output of Z500 (Pin 6) is coupled to the emitter circuit of **IF AMP 2** through a limiting zener diode circuit consisting of zener diodes V502-1 and V502-2 and coupling capacitor C508.

IF Amp 2 (V501)

The typical emitter voltage of V501 is 0.8 V. The typical base voltage is 1.6V and the typical collector voltage is 3.1 V. These voltage levels produce the proper bias for an input impedance of 250 ohms. This in turn loads the Z500 crystal filter properly. The 76.2 MHz IF output on the collector of V501 connects to the input of a 450 kHz IF chip (N551) located in the rear section of the LPE-200.

Rx Back End

IF Chip (N551)

The IF input (76.2 MHz) to IF Chip N551 is connected through coupling capacitor C550 and inductor L550 to N551 Pin 1, (**RF**+). Internal to N551 (**DIANE**), this input signal is amplified and applied to an input of a second mixer circuit. A second LO synthesizer injection frequency of 76.2 MHz is internally applied to another input of the mixer circuit. This results in a second IF of 450 kHz (76.65 MHz -76.2 MHz = 450 kHz) on the output of the mixer (N551, Pin 20, Mixer Out). This signal is then routed through a 450 kHz ceramic filter to set the channel bandwidth to 12.5 kHz. The output of the filter is routed to N551, Pin 18, IF In1. This input (-3 dB) to N551 is amplified and sent two places. The output (N551, Pin 16, **IF** Out 1) signal goes through capacitor C553 to the input of 450 kHz Ceramic Filter Z550, Pin 2. The output of Z550 on Pin 1 is connected through capacitor C552 to N551, Pin 14, This input to N551 is further amplified and IF In2. balanced outputs, RxIF and RxIF_B, are sent to HILLARY (D701). These two lines, one positive and the other negative, are used to cancel out any noise that might get on the line. These balance outputs are typically +3 dBm and can be metered at test points TP551 and TP552.

The Receiver Signal Strength Indicator (**RSSI**) circuitry internally monitors the RF signal strength. The RF level is represented by a DC voltage level proportional to signal strength. Feedback resistors R554 and R561 set the gain of the RSSI output on Pin 7. This signal becomes the **FAST RSSI** signal going to DEBBIE (D601). Feedback resistor R554 connects from the RSSI output on Pin 7 to Pin 8, RSSI Feedback. The RSSI signal can be metered at test point TP550.

2nd Local Oscillator

A 2nd LO circuit internal to N551 generates the 76.65 MHz injection frequency for the mixer circuit. The tank circuit for this oscillator consists of capacitors C556 through C560, variable capacitor V550 and inductor L551. This tank circuit connects to N551, Pin 3 (OSC Emitter) and Pin 4 (OSC Base). A LO_VCTRL control voltage is applied through resistor R555 to V550 to adjust the capacity of the circuit and maintain the integrity of the injection frequency. The LO VCTRL control voltage is a DC level generated in CHERYL and filtered by resistors R225 and R226 and capacitors C217, C218 and C219. This voltage (nominally 2.6 volts) comes from auxiliary synthesizer N204 and goes to the oscillator tank circuit. A +12 dB signal is then returned to a prescaler circuit in the synthesizer. The synthesizer provides a signal to the loop filter which outputs the control voltage.

Digital I/O Lines

The balanced **RxIF** and **RxIF_B** (**B** implies "**Barred**" indicating that the condition is true when the line is low) lines connect through resistor and capacitor RF decoupling circuits to HILLARY D701. **RxIF** connects through resistors R715 and R714 and capacitor C707 to D701, Pin 8. **RxIF_B** connects through resistors R717 and R718 and capacitor C709 to D701, Pin 7. Both of these lines connect to a Phase Digitizer internal to D701.

Phase Digitizer (D701)

The phase digitizer demodulates the 450 kHz IF to recover the digitized receive audio. The output of the phase demodulator is connected to Rx DSP Interface (Refer to Schematic Diagram, Sheet 13). The Rx DSP Interface output of D701 connects to the DSP module through D701, Pin 69 (RXSIF_DSPDATA), Pin 73 (RXSIF_DSPCLK) and Pin 74 (RXIF_DSPSYNC). DSP interface lines connect to DSP TDR (TDM DATA RX), DSP TCKDR (TDM CLOCK RX) and DSP TRSR (TDM FRAME SYNC TX) respectively. These lines can be metered on the DSP module at test points TP8 (data), TP15 (clock) and TP14 (sync), respectively.

DSP Module

The Digital Signal Processing (DSP) Module does all the Channel Guard filtering, provides squelch, audio mute, 1.5, 3, and 4.5 dB of volume attenuation and changes the digitized audio into an analog signal. The output of the DSP module is on X21-17 (PCM_DSEAR). This output can be metered at test point TP3 on the DSP module.

Host Interface

The **PCM_DSPEAR** line connects to D701, Pin 64 and goes to the **PCM/DSP HOST INTERFACE**. The audio output of D701 is on Pin 40 (**PCM_CDCEAR**) and connects to D601, Pin 34 (DPCI).

DEBBIE (D601)

This signal (**PCM_CDCEAR**) is then put through a decoder, low pass filter, volume control circuit and an amplifier. The low pass filter, filters out an 8 kHz sample rate. The volume control provides 24 dB in 6 dB steps. The output of D601 is on Pin 22 (**RXAUDIO**). The signal can be metered at test point TP601. At maximum volume there should be 350 mVolts RMS ($1.0V_{P-P}$) with a 1 kHz tone and 3 kHz deviation.

Operational Amplifier (N300)

This signal (**RXAUD1**) connects through capacitor C611 and resistor R625 to operational amplifier N300, Pin 6 (**-B**). Feedback for the amplifier is through resistor R627. The gain of this amplifier is changed by the **RX_VOL_ATTN** line (D701, Pin 116) to provide a total of 48 dB of volume control attenuation. This is accomplished by the **RX_VOL_ATTN** line going high, causing transistor V604-1 to conduct and connecting 10k ohms resistor R626 across 68k ohms resistor R627 to reduce the gain of N300B. The output of this amplifier is on Pin 7 (**RXAUD2**).

Audio Power Amplifier (N600)

This signal is attenuated through resistor R629 then coupled through coupling capacitor C613 to audio power amplifier N600A, Pin 7 (+IN). This signal is also connected through resistor R628 and coupling capacitor C612 to the Universal Device Connector (UDC AUDIO OUT). The audio input to N600A can be metered at test point TP602 and at maximum volume should be 250 mV_{P-P}. The input will be 21 mV RMS (60 mV_{p-p}) to produce 500 mWatts output into 16 ohms. Power amplifiers N600A and N600B provide differential outputs on Pin 1 (+OUT) which is AUDIO_PA_HI and Pin 3 (+OUT) which is SPK_LO. The bridged output of these two lines provides 2.83 V RMS for 500 mWatts output into 16 ohms. The SPK LO line connects through the flex circuit to the low side of the speaker. The AUDIO_PA_HI connects through resistor R641 to the other side of the speaker (SPKR_HI). Resistor R641 is used to attenuate the speaker audio during duplex operation. Normally MOSFET V602 is turned on, bypassing R641 to get the full volume to the speaker. V602 is controlled by a binary output line from HILLARY labelled DUPLEX_SPKR_ATTEN. When this line is at 0 volts, transistor V603 is off and the collector is high which turns on both V602 MOSFETs, by-passing R641. SPKR_HI then connects through the flex circuit to the high side of the speaker. Two series MOSFETS are used to prevent forward biasing the characteristic diodes across the MOSFETS with audio when the MOSFETS are OFF.

TRANSMITTER

Transmit Frequency Generation

The main VCO, in the synthesizer circuit, is programmed to generate the 1st **LO** receive injection frequency (1011.2 to 1016.2 MHz). This carrier frequency is mixed with a transmit offset frequency of 115.2 MHz to generate the carrier and two side band frequencies. The carrier and upper side band are suppressed and only the lower side band is transmitted. For example: the carrier frequency of 1015.2 MHz minus the offset frequency of 115.2 MHz is equal to the transmitted lower side band frequency of 900 MHz.

TX/Converter/Modulator (N150)

Transmit Offset

The **LPE-200** transmit offset frequency is 115.2 Mhz. This frequency is generated by a seven-times-multiplier circuit off the reference oscillator. The output of this VCO is applied to a **P**hase-Lock-Loop (**PLL**) where it is divided by 7 (115.2 \div 6 = 19.2 MHz) and compared to a reference frequency of 19.2 MHz. The 19.2 MHz reference frequency is generated by oscillator module U201 in the synthesizer circuit. A DC phase lock voltage, which is the difference of the two input frequencies, on N150, Pin 9 (**PHSOUT**) is applied to a loop filter. This loop filter consists of capacitors C151, C152 and C155 and resistors R153 and R154. The DC voltage can be metered at test point TP150 and should be 1-4 volts while transmitting and 0 volts while receiving. The output of the filter connects to the tank circuit through resistors R155 and R160. The tank circuit for the VCO and consists of capacitors, C160, C161, and two variable capacitors in V180 and inductor L154. The loop filter and the tank circuit are tuned to 6x19.2 MHz or 115.2 MHz. The tank circuit connects across N150, Pins 6 (TANK_1) and 7 (TANK_2). The DC voltage applied to the loop filter changes the capacitance of the variable capacitors within V180 of the tank circuit to maintain the VCO output of 115.2 MHz.

When the transmitter is keyed, transistor V152 conducts to increase the bandwidth for PLL acquisition.

Single Side Band Mixer

The main VCO frequency is amplified then passed through a 90-degrees phase shifting network to the SSB mixer. The 115.2 MHz offset frequency is also amplified and passed through a 90-degree phasing network to the SSB mixer. These two signals are summed together to produce the carrier frequency, an upper side band and a lower side band. The carrier and upper side band are suppressed by 40 dB. The lower side band passes at full amplitude. There are two outputs of the lower side band from the SSB, each 90degrees out of phase. Each signal is connected to another mixer circuit where it is summed with the transmit modulation from HILLARY. Resistor R159 sets the gain for phase detection.

Low Pass Filters

There are two modulating inputs from HILLARY, one is the **I** input (**MODI** and **MODI_B**) and one is the **Q** input



(MODQ and MODQ_B). The I input passes through a low pass filter consisting of capacitors C191, C192 and C193, resistor R166 and inductors L156 and L157. The output of this filter connects to N150, Pins 43 (I) and 42 (I_bar). The Q input passes through a low pass filter consisting of capacitors C194, C195 and C196, resistor R167 and inductor L158 and L159. The output of this low pass filter connects to N150, Pins 41 (Q) and 40 (Q_bar). The I and Q inputs are summed with the lower side band then the outputs of these mixer circuits are summed to produce the lower side band with transmit modulation. This signal is amplified and connected through N150, Pin 34 (DUAL TX) to the input of a transmit band pass filter.

SAW Transmit Band Pass Filter 1

The **TX_RF** signal (0 dBm) connects through coupling capacitor C125 to the input of a TX Band Pass Filter. Filtering of the **TX_RF** line is provided by capacitor C126. The lower sideband output of the band pass filter (-8 dB) connects through coupling capacitors C121 and C139 to the base of buffer amplifier transistor V104. Filtering is provided by capacitor C120.

MMIC Buffer Amplifier

When transmitting, the collector voltage for transistor V104 is provided through PIN diode V101 and is controlled by DPTT. The RF output from the collector (+3 *dBM*) connects through coupling capacitor C116 and resistor R105 to power amplifier N101, Pin 1 (Pin/Vc).

SAW Transmit Band Pass Filter 2

The output of the MMIC Buffer amplifier is fed to the input of the second SAW BPF. This filter provides further attenuation for Tx spurions. The output of this filter is fed to the RF amplifier

Power Amplifier (N101)

Power amplifier N101 is a three stage Class C operated RF power amplifier module designed to operate over the frequency range of 896-940 MHz (*see Figure 5*).



Figure 5 - Power Amplifier

Directional Coupler (W100)

The RF output connected to W100, Pin 4 (PORT 2) connects directly through W100 to Pin 1 (PORT 1) where it is output to the antenna circuit. The connection between Pin 9 (PORT 3) and Pin 6 (PORT 4) is part of the sensing circuit (*See Figure 4*).



Figure 6 - Directional Coupler

Power Sensor Circuit (N102-A)

The power sensor circuit consist of part of W100, comparator amplifier N102-A and associated circuitry in A regulated 5.5 volts (VTX) from transmit between. regulator N190 is applied to N102-A, Pin 8, (V+). This voltage forward biases Schottky diodes V103-1 and V103-2. When forward biased diode V103-1 has 0.3 volts on the anode, a reference voltage of 0.15 volts is on N102-A, Pin 3 (+IN). Forward biasing V103-2 causes a current to flow through directional coupler W100 (PORT 3 and PORT 4). This circuit provides temperature compensation for power detection. A voltage directly proportional to the RF power output is applied to N102-A, Pin 2 (-IN). This is due to the rectification of the coupled RF energy into V103-2. A negative DC voltage is developed at the anode of V103-2 proportional to the coupled RF power. This negative DC voltage results in a positive DC voltage at the output of N102-A. This output is the TX PWR SENSE line and can be metered at test point TP102. At 3 watts output this voltage is typically between 2.8 Vdc and 3.2 Vdc. This line connects to DEBBIE, Pin 52 (D601) through decoupling circuit resistors R602 and R603 and capacitor C601. DEBBIE converts this DC level to a digital word which is fed to the microprocessor in HILLARY. This word is compared to the value in Tracking Data which represents 3 watts of output power. A word is then generated and fed back to DEBBIE. DEBBIE generates а TX_POWER_CONTROL DC signal on Pin 62 (DAC01). This signal connects through a decoupling circuit consisting of resistors R614 and R615 and capacitor C605 to a voltage divider consisting of resistors R116 and R117. The output of the divider circuit connects to power control buffer amplifier N102-B, Pin 5 (+IN). The output of N102-B drives Pin 1 of the power amplifier.

Power Control Buffer (N102-B)

A regulated 5.5 Vdc is applied to power control buffer N102-B, Pin 8 (V+). The buffer circuit is a shaping circuit which provides a control voltage on Pin 7 (+OUT). This voltage after passing through resistor R120 is typically 2.5 Vdc to 3.0 Vdc at 3 watt output and can be metered at test point TP103. This control voltage connects through filter capacitor C138, RF choke L113 and resistor R105 to power amplifier N101, Pin 1 (Pin/Vc). This voltages regulates the power output of N101. The output of the PA is increased or decreased by the DC level applied to N102, Pin 1. The feedback loop is stable when the output power level produces a detected level equal to the level prestored as a tracking value equal to 3 watts.

Transmit Low-Pass Filter/Antenna Switch

When the transmit circuit is keyed (Push-To-Talk switch pressed), **SW_B**+ (7.0 Vdc) is applied through RF choke L105 to PIN diode V100. With 7.0 volt applied, V100 and PIN diode V101 are forward biased. The RF signal is then allowed to pass through the low-pass filter to the antenna. The 6.2 volts on the cathode of V100 connects through inductor L103 to the anode of PIN diode V101. Capacitor C108, L103 and C109 make a parallel resonant circuit which prevents RF from flowing into the RX port. The voltage on the cathode of V101 (*5.3 Vdc*) connects through inductor L104, capacitor C112, resistor R100, capacitor C113 and inductor L107 to the input of the MMIC buffer amplifier (See **MMIC Buffer Amplifier**).

Transmit Modulation

The microphone input is through capacitor C300 and resistor R301 to operational amplifier N300, Pin 2 (-A) (Refer to Schematic Diagram sheet 10). The output of N300 is on Pin 1 (Out A). This output is connected to DEBBIE D601, Pin 19 (AUX). This audio signal is amplified, limited, passed through a low pass filter and an encoder circuit where the analog signal is digitized. The digitized output of the encoder connects through D601, Pin 35 (DPCO) to HILLARY D701, Pin 41 (PCM CDCMIC) where it is connected to a PCM interface. The output of the interface connects through D701, Pin 68 to the DSP module through X11-18 (See Schematic Diagram, Sheet 13). The actual connection to the DSP board is at X21-18 (PMC_DSPMIC). The transmit digitized audio can be metered at test point TP6 on the DSP board. This signal is then connected to D1, Pin 63 (DR). The audio is filtered and connected through D1, Pin 133 (TDX) to X21-13 (TXSIF_DSPDATA). This signal can be metered at test point TP4. This connection then connects through X11-13 to HILLARY D701, Pin 77 where it goes through a TX DSP INTERFACE. The output of the interface applies the digitized audio to the input of a sigma/delta modulator or DAC. In the sigma/delta modulator a sample of the audio is taken at a 19.2 MHz rate. This generates a pulse that the width varies with the audio. The outputs of the DAC are through D701, Pin 15 (MODI), Pin 14 (MODI B), Pin 16 (MODQ) and Pin 17 (MODQ_B). The pulse rate of each of these outputs is 9.6 MHz or one-half of the 19.2 MHz clock rate. These outputs are connected through low pass filters to the inputs of JACQUI N150 where modulation takes place. The output of the low pass filters is a true analog signal consisting of complex wave forms and a pulse of 800 mV Peak-Peak.

SYNTHESIZER

Dual Synthesizers (N203)

There are two synthesizers in the synthesizer circuit. One is the main synthesizer which generates the 1st LO frequency (1011.2 to 1016.2 MHz). The other synthesizer circuit is the auxiliary synthesizer which generates the 2nd LO frequency (76.65 MHz). These synthesizer circuits are programmed by **STROBE 1**, **CLOCK** and **DATA**. These programming inputs also go to JACQUI. The only difference is that JACQUI uses **STROBE 2**. This is so that when strobed, the programming information gets written to the proper device. The main synthesizer can be programmed in 12.5 kHz steps. These inputs can be metered at TP205 (**CLOCK**), TP206 (**DATA**) and TP207 (**STROBE 1**).

Bilateral Switch (N201)

Bilateral Switch N201 selects the loop filter required for programming the main VCO in 12.5 kHz steps. A +5 Volt signal (**LOOP_SEL**) from HILLARY connects to N201, Pin 5 (**2_C** _{Control}) causing N201 to switch in the required resistor-capacitor combinations. The selected loop connects to the VCO at U200, Pin 2 (**Vcont**).

Main Voltage Controlled Oscillator (U200)

A signal from HILLARY (VCO_BAND_1) turns transistor V201 on or off to select the band over which the VCO will operate. The collector output of V201 connects to U200, Pin 10 (SW). The output of U200 on Pin 8 (Output) connects through buffer transistor V200 to the RX_ LO through coupling capacitor C208. The TX_LO is taken from the voltage divider consisting of resistors R203 and R205. The feedback for the synthesizer circuit is taken from

the voltage divider consisting of resistors R202 and R204 and can be metered at test point TP202. The level of this signal is typically 25 mV RMS. This feedback signal connects through coupling capacitor C207 to N203, Pin 5 (**INM1**). The voltage level at this point is typically 4.5 V.

Main Synthesizer (N203)

In synthesizer N203 the feedback signal from the VCO is input to a prescaler where it is divided down to produce a 19.2 MHz signal. This signal is compared with the 19.2 MHz reference frequency generated by reference oscillator U201. When these two signals are equal, a lock voltage is connected through N203, Pin 13 (**PHI**) or Pin 14 (**PHP**) to the selected loop filter, locking the circuit to the output frequency.

Auxiliary Synthesizer (N203)

The VCO oscillates at the 2nd LO frequency of 75.75 Mhz. A 100 mV_{RMS} signal is fed back to N203, Pin 10(**INA**). This signal is divided down to 12.5 kHz and phase compared to a 12.5 kHz reference signal which is derived from the 19.2 Mhz reference oscillator. An error voltage is generated by any phase error between the two signals. This error voltage is processed by the loop filter (R225, R226, C217, C218 and C219) and sent to the voltage controlled oscillator (VCO). This voltage can be metered at test point TP209 and is typically 2.5 ± 1.0 volts.

Reference Oscillator (U201)

Reference Oscillator U201 provides a reference frequency of 19.2 MHz at 1.5 PPM for the Phase-Lock-Loop circuit in the JACQUI module (the main synthesizer for the receiver 1st LO, HILLARY and DEBBIE). The output level of this module is +16 dBM and can be metered at test point TP204. The output of U201, Pin 3 (Output) connects through a band-pass filter consisting of capacitor C235, inductor L202 and capacitor C236. This output then connects to the JACQUI circuit through the REF OSC line and to Frequency Synthesizer N203, Pin 8 (INR) through coupling capacitor C223. The voltage level on Pin 8 is typically 330 mV. A buffered output from JACQUI on Pin 19, drives the clock input of HILLARY and DEBBIE. An Automatic Frequency Control (AFC) line from DEBBIE (DAC03) provides a control voltage ranging typically from 0.5 volts to 4.5 volts to maintain oscillator integrity. This DC level adjusts the reference oscillator frequency and is set by tracking data. Filtering of this line is provided by capacitors C222 and C234. Supply voltage for U201 is supplied by synthesizer regulator N290 through the VSYN line. This voltage connects through resistor R218 to U201, Pin 4 (Vcc) and is filtered by capacitors C220 and C221.

DC POWER DISTRIBUTION

Battery voltage (7.2 Volts) connects to battery connector X101, the positive terminal (BATT +) Pin 1 and the negative terminal (BATT -) Pin 3. Fuse F190 and diode V190 provide short circuit and reverse polarity protection. If the battery terminals were connected incorrectly (positive to negative and negative to positive), V190 would conduct and fuse F190 would blow.

Synthesizer Regulator (N290)

Battery voltage connects through a decoupling circuit consisting of inductor L290 and capacitor C290 to voltage regulator N290, Pin 6 (Vin). A PWR ENABLE_B line, originating from Power Switch V905, connects to N290, Pin 1 (Cntrl). When the Cntrl input is low, N290 is enabled and a regulated 5.5 Volts is on N290, Pin 4 (Vout). Filtering for this line is provided by capacitor C291. This voltage can be metered at test point TP290 and becomes the VSYN line going to the synthesizer circuit.

Receiver Regulator (N490)

Battery voltage connects through a decoupling circuit consisting of inductor L490 and capacitor C490 to receiver voltage regulator N490, Pin 6 (Vin). A **RX_ON** signal, generated by D701, connects through enabling switch transistor V490 to N490, Pin 1 (Cntrl). Resistor R290 connected to the base of transistor V490 is the pull-up resistor for **RX_ON**. Regulator N490 is normally enabled. When **RX_ON** goes high, V490 conducts and N490 is enabled. The control voltage can be metered at test point TP490. With N490 enabled a regulated 5.5 Volts is on N490, Pin 4 (Vout). This voltage can be metered at TP491. Capacitor C491 provides line filtering. This voltage becomes the **VREC** line going to the receive circuit to enable the LO buffer, IF Amp 1, IF Amp 2 and IF chip.

Transmit Regulator (N190)

Battery voltage connects through a decoupling circuit consisting of inductor L190 and capacitor C198 to transmit voltage regulator N190, Pin 6 (Vin). The **PWR_ENABLE_B** line connects to Pin 1 (**Cntrl**) to enable the regulator. When the Cntrl is low, the regulator is enabled. When enabled, a regulated 5.5 Volts is on Pin 4 (Vout). This voltage can be monitored at test point TP190. Filtering for this Voltage Transmit (VTX) line is provided by capacitor C199. The VTX line connects to power control circuit N102-A, power control buffer N102-B, transistor switch V153 and TX/Converter/Modulation circuit N150 (JACQUI).

Tx Switch (V192)

The Tx Switch consists of transistor V192. Transistor V192 is normally off (receive). When the Delayed Push-To-Talk (DPTT) line goes high (transmitter keyed), transistor V192 conducts and the base of B+ Switch PNP transistor V191 goes low.

B+ Switch (V191)

B+ Switch transistor V191 supplies 7.0 volts to the directional coupler in the antenna circuit. When the base of this PNP transistor goes low, 7.0 volts is on the collector and can be metered at test point TP191. This voltage goes to directional coupler W100, Pin 1 (PORT 1). The B+ Switch circuit and the TX Switch circuit are tagged **BUFFER** on the Block Diagram (Sheet 1 of the Schematic Diagram).

Analog Regulator (N900)

Battery voltage connects directly to analog regulator N900, Pin 8 (Input). Capacitor C900 provides filtering at this point. To enable N900, Pin 3 (EN) must be grounded. This is accomplished by grounding one end of resistor R912 when the power switch is turned on. The voltage divider relationship between pull-up resistor R909 and resistor R910 is enough to produce a ground which will enable N900. This signal is typically < 0.6 Volts when the radio is on and > 2.0 volts when the radio is off and can be metered at test point TP904. The ground at R912 can be metered at test point TP907 and is 0 Vdc when the power switch is on and 7.5 Vdc when the power switch is off. When enabled, the output on N900, Pin 1 is a regulated +5 Volts. This voltage can be metered at test point TP901. Filtering is provided by capacitor C901. The output of N900 becomes the +5V_A line. The +5V A connects to the base of transistor V905, causing V905 to conduct. Transistor V905 conducting causes the collector (PWR ENABLE B) to go low and enable the RF regulators. The +5V_A also goes to the emitter of PNP transistor V906. This caused V906 to conduct placing an active high on the Shut Down (SHDN) input of +5V_D switching regulator N902. The +5V_A also goes to the TX/RX audio circuits in DEBBIE (D601).

+5V-D Switching Regulator (N902)

B+ is connected to N902, Pins 1, 15 and 16 (U+). When an active high is on N902, Pin 2 (SHDN), N902 turns on and produces $+5V_D$ on the output to power all digital circuits.

Processor Reset

 $+5V_D$ is connected through resistor R901 to open collector output N900, Pin 5 (**ERROR**). Timing is provided by pull-up resistor R901 and capacitor C905. The ERROR voltage can be metered at test point TP903. This voltage is normally + 5 Volts or 0 Vdc on reset. This voltage also connects back to N902, Pin 7 (SS) Soft-Start. When capacitor C905 charges up, the output of buffer gate D900 goes high. This high on D701, Pin 1 (**RESPOW_B**) starts the processor.

Power Switch Turned Off

Due to software programming, when the power switch is switched off, the power to all circuits may not be immediately turned off. For example, the processor may need to transmit log off messages before that happens. When the radio is turned on and the processor is started, a PWR LATCH signal (2.6 Volts) is applied to the base of transistor V903 turning it on. The collector of V903 goes low and the enable line to N900 is latched in a low state, holding N900 on. N900 can be held on indefinitely if programmed to do so. A PWR SW SENSE line monitors the condition of the power switch so the processor knows when to start the power down program. When the power switch is on, diode V904, Pin 3 is low. The +5V_A through resistor R911 forward biases V904 and holds the PWR_SW_SENSE line low. When the power switch is turned off, the diode is no longer forward biased. Pull-up resistor R911 now pulls the PWR SW SENSE line high to indicate to the processor that the power switch has been turned off.

Low Battery Power Down

The battery voltage is monitored with A/D input to ATTIE. To protect the battery against deep discharge conditions a **LOW_BATT_PWR_OFF** line is provided to shut the radio down until a fresh battery is attached. When the battery voltage falls below 5.6 Volts, diode V900 is forward biased conducting through V902. When the **LOW_BATT_PWR_OFF** line is switched high, V901 and V902 latch on forcing enable pin N900-3 high, which results in shutting the radio off.

LCD NEGATIVE BIAS GENERATOR

A 96 kHz, 5V p-p square wave from HILLARY D701-57 is rectified and inverted to a negative supply voltage by C922, V909 and C923. This negative voltage is controlled to the LCD by V910 to vary the display contrast. Thermistor R604 is monitored via the A/D input to DEBBIE. As the temperature varies, the bias is varied using 4 binary output lines from HILLARY:

- LCD_BIAS 0
- LCD_BIAS 1
- LCD_BIAS 2
- LCD_BIAS 3

SERVICE

Due to the state of the art manufacturing processes and the complexity of the circuits designed into the radio, field test and repair to the hardware is very limited. It is not practical to service the main circuit board in this radio to component level. Technicians servicing this radio should be concerned with isolating the problem to hardware or software. Software errors or problems are usually corrected by reloading the personality, flash, etc.

-NOTE -

It is recommended that all hardware repairs to the main circuit board be done at Ericsson Inc. in Lynchburg, VA.

On occasion it may become necessary to perform certain hardware repairs in the field. Therefore, Service Parts will provide replacement parts for the following hardware items:

- Flex Assembly
- Keypad

Fuse

- Loudspeaker
- Vol/Grp Switch ModuleRx RF Filter (Z400)
- Battery ConnectorPA Module
- Rx RF Filter (Z401)
- DSP Module
- Main PCB Assembly

- Keeping in mind the service philosophy for this product, it is not the intent of this service section to provide detailed instructions for testing and troubleshooting the portable radio. This section will provide the following:
- Programming instructions (Personality, Flash and Equipment Setup)
- Basic Troubleshooting (determine if problem is hardware or software)
- Error Codes
- Dissassembly

EQUIPMENT REQUIRED

Equipment Description	Part Number
 ProGrammer[™] Programming Software 	AE/LZY 213 7641
 Programming Interface Module With Power Supply (19B800850P2) 	TQ-3370 (19D438367G2)
3. Programming Cable	TQ-3368 (19B801971P3)
4. RS-232 Cable	19B235027P1
5. Test Box	TQ-0609A
6. Test Cable	19B801971P6
7. Radio Test Set	customer supplied
 IBM PC/XT/AT/286/386/486 or any true compatible with MS- DOS version 3.3 or later. 	customer supplied

PROGRAMMING

Personality Programming

The ProGrammer PC Programmer (AE/LZY 213 7641) Version **1** or later is used to edit, read or write the personality to the radio. A *personality* is simply a computer file generated (created) by the user of the program. The computer file (or personality) is downloaded into the radio and contains data that will direct certain operating characteristics of the radio unit.

The PC Programming software communicates with the radio through the TQ-3370 programming box (item 2 in the equipment list). Figure 7 provides a diagram of the Equipment Setup required to PC Program the radio.

The CONV-1 PC Programmer (TQ-3367) Version **12** or later is used to program conventional only radios.

Flash Programming

The "FLASH" software is the current version of the LPE-200 radio operating software. When changes and enhancements are made to the operating code, the new operating code can be "FLASHED" to the radio, upgrading the operating code without any hardware changes to the radio. Flash software is simply a computer file which is read from a disk and downloaded to the radio using the PC Programmer. The Equipment Setup shown in Figure 7 is same as for Personality Programming.

Programming Mode

The PC Programmer cannot communicate with the radio unless the radio is in the Programming Mode. To place the radio in Programming Mode:

- 1. Initially the radio should be OFF.
- 2. Press and hold the **PTT**, **Monitor** and **Clear** buttons.
- 3. Power the radio ON. Release the buttons.

4. All pixels on the display should be lit until communication with the PC begins.

BASIC TROUBLESHOOTING

The objective of this section is to guide in quickly isolating a problem to either hardware or software. Software errors and problems can usually be corrected in the field. Hardware failures are difficult to isolate and sometimes very tedious to repair without specialized tools. *As stated previously, hardware repair to this radio is very limited at best and <u>not recommended</u>. Service Parts has set up a Repair and Return policy. Service Parts has also made provisions for Circuit Board and Module replacement as required.*

This section includes a General Troubleshooting Table and Test Point Diagram for checking Nominal Transmit/Receive Levels (not recommended). Start by following Table 1 - General Troubleshooting and then use the remaining reference material as needed.



Figure 7 - Programming And Test Equipment Setup

Symptom	Possible Cause/Action Required
Completely Inoperative (no display or audio on power up)	 Power Supply Problem? 1. Check battery voltage with a voltmeter. 2. Charge battery or replace battery. 3. Check to be sure battery contacts are not broke or bent. 4. Clean battery contacts. 5. Check Fuse (F190).
At power -up an error message is displayed.	 See the Error Message Tables in the following pages for type of error and for a probable solution. Always attempt to reprogram the personality and flash using the EDACS-3 PC Programmer.
Receiver inoperative or weak.	 Channel Guard or Type 99 Enabled? Defective antenna/ or antenna switch assembly - replace antenna/ or antenna switch assembly. Main Board failure? Return to Lynchburg Depot for repair (recommended) or Troubleshoot Main Board using the test point diagrams in Figure 8. Replace or repair board as required.
Transmitter inoperative or low power	 Programmed Incorrectly - check personality. Weak battery - check voltage Defective antenna/ or antenna switch assembly - replace antenna/ or antenna switch assembly. PA Module failure - replace PA Module. Main Board failure? Return to Lynchburg Depot for repair (recommended) <i>or</i> Troubleshoot Main Board using the test point diagrams in Figure 8. Replace or repair board as required.
Transmitter and Receiver Inoperative on some channels	 Programmed Incorrectly - check personality. Main Board failure? Return to Lynchburg Depot for repair (recommended) or Troubleshoot Main Board using the test point diagrams in Figure 8. Replace or repair board as required.



Figure 8 - Transmit Path - Test Points and Levels

ERROR CODES INTRODUCTION

This section lists all the radio errors and warnings. The radio displays errors and warnings to the user to indicate problems that have occurred. Radio errors can occur at any time from power up to power down. Each error code in the list includes an explanation of what went wrong and what action to take to correct the problem.

Error codes are divided into three categories:

- Fatal operational error codes. These errors will cause the radio to reset.
- Non-fatal operational error codes. These errors will not cause the radio to reset.
- Radio programming error codes. These errors are displayed on the radio or the programming PC display during radio programming.

ERROR CODE OVERVIEW

Error Code Format

The errors are displayed on the radio display as follows:

```
message
ERR=xxxx
```

Where: xxxx is the error code and message is one of the messages listed below.

Fatal Errors

Fatal errors will cause the radio to display the error message and error code and then reset to its starting operation. The reset condition will remain until the fatal error is corrected.

Fatal Errors		
Error message	Description	
HARDWARE	BIOS errors.	
SOFTWARE	General software failure.	
FREQDATA	Frequency data error.	
PERSDATA	Personality errors.	
NETWORK	Network errors.	

An example of a personality error is shown below:



Non-Fatal Errors

Non-Fatal Errors				
Error message	Description			
UNKNOWN	Undocumented error.			
FEAT ERR	Feature encryption error.			
DSP ERR	DSP error.			
NO KBANK	Attempt to keyload w/o bank storage.			
NO PVT	Attempt to keyload w/o private DSP file loaded.			

Non-fatal errors are displayed for a short period (about two seconds) then normal radio operation will resume.

Special Error Codes

When the synthesizer becomes unlocked on any frequency (RX or TX), the radio will display a message and sound an alert tone. The message will be displayed for approximately 2 seconds and the alert tone will continuously beep on and off. During this time, the radio is trying to reload the synthesizer to get a lock condition. If the lock condition is achieved, the unlock indications will cease. If the lock condition can not be achieved, the user will not be able to RX or TX on that frequency. The message displayed on the radio is shown below:



ERROR CODES - SPECIFIC

Hardware Fatal System Errors

Hardware fatal errors will automatically reset the radio. When the radio reset does not correct the problem, the radio must be serviced.

Error Name	Message	Code	Description
FATAL_SYS_TRAP	HARDWARE	0	Fatal system error trap number.
FATAL_NMI_ERROR	HARDWARE	1	NMI occurred outside of sleep.
FATAL_RAM_ERROR	HARDWARE	2	8k RAM test error.
FATAL_FLSH_CHKSUM	HARDWARE	4	Flash checksum test error.
FATAL_TG_LOAD	HARDWARE	10	TG driver failed initialization.
FATAL_DSP_LOAD	HARDWARE	11	DSP driver failed initialization.
FATAL_ABBIE_LOAD	HARDWARE	12	ABBIE driver failed initialization.
FATAL_EE_LOAD	HARDWARE	13	EEPROM driver failed initialization.
FATAL_INTOUT_LOAD	HARDWARE	15	Standard input/output driver failed initialization.
FATAL_INTIN_LOAD	HARDWARE	16	Standard input driver failed initialization.
FATAL_RADIO_LOAD	HARDWARE	17	RADIO driver failed initialization.
FATAL_MODEM_LOAD	HARDWARE	18	MODEM driver failed initialization.
FATAL_EXTIO_LOAD	HARDWARE	19	External I/O driver failed initialization.
FATAL_SCI_LOAD	HARDWARE	20	Serial communication interface driver failed
			initialization.
FATAL_I2C_NOSI	HARDWARE	22	I2C failed to return SI status.

FATAL_LCD_NOACK	HARDWARE	40	LCD did not ack message.
FATAL_LCD_HARD_FAIL	HARDWARE	41	LCD hardware is invalid.
FATAL_SCI_NOHEAP	HARDWARE	50	Serial communication interface out of heap (RAM
			memory) space.
FATAL_DSP_NOACK	HARDWARE	60	DSP did not ack message.
FATAL_DSP_FIFOOVR	HARDWARE	61	DSP RX FIFO overflow.
FATAL_DSP_BADMSG	HARDWARE	62	Unknown message received from DSP.
FATAL_DSP_WRONGRESP	HARDWARE	63	Unexpected response received from DSP.
FATAL_DSP_TWOACKS	HARDWARE	64	Back-to-back ACKS received from DSP.
FATAL_DSP_NORESOURCE	HARDWARE	65	DSP queue is full.
FATAL_BL_NOHEAP	HARDWARE	91	Software memory error - Boot loader.
FATAL_BL_SCI_ATTACH	HARDWARE	92	Boot loader could not attach to SCI.
FATAL_RXSIF	HARDWARE	98	Phase samples are not changing.

Operational Software Fatal System Errors

Software fatal errors will automatically reset the radio. When the radio reset does not correct the problem, the radio must be serviced. Some of the errors listed below contain additional information to help resolve the problem.

Error Name	Message	Code	Description
RADC_PITD_ERROR	TRACKING	200	Personality tracking data error. Reprogram the
			tracking data.
RADC_PIHW_ERROR	PERSDATA	201	Personality hardware data error. Reprogram
			the personality.
RADC_FREQ_ERROR	FREQDATA	202	Personality frequency data error. Reprogram
			the personality.
RADC_PITD_MALLOC_ERROR	SOFTWARE	203	Personality tracking data malloc error.
	<u> </u>		Reprogram the tracking data.
RADC_PITD_CKSUM_ERROR	SOFTWARE	204	Personality tracking data checksum error.
	<u> </u>		Reprogram the tracking data.
DACS_MODEM_FATAL_ERROR	SOFTWARE	301	Unable to correctly configure the modem for
			EDACS operation. Reprogram the
	<u> </u>		personality.
DACS_RADC_FAILURE	SOFTWARE	302	Power cycle the radio.
DACS_TU_PUT_CISYSMSG_ERROR	SOFTWARE	303	CI message buffer is not enabled.
CONV_RADC_ERROR	SOFTWARE	400	Error calling RADC function. Power cycle the
	<u> </u>		radio.
CONV_PUT_UIMSG_ERROR	SOFTWARE	402	UI message buffer not enabled. Power cycle
	<u> </u>	<u> </u>	the radio.
CONV_MODEM_RXOVR	SOFTWARE	403	Conventional DIGV modem overflow.
CONV_MODEM_RXAVR	SOFTWARE	404	Conventional DIGV modem underflow.
CONV_MODEM_FATAL_ERROR	SOFTWARE	405	Unable to correctly configure the modem for
	<u> </u>		conventional DIGV operation
CONV_PERS_ERROR	PERSDATA	407	Conventional personality error.
PI_NOPERS_ERROR	PERSDATA	500	Personality data is not present. Program the
			personality.
PI_CRC_ERROR	PERSDATA	501	Flash personality CRC did not match
			EEPROM. Reprogram the personality.
PI_DESC_CRC_ERROR	PERSDATA	502	Crucial personality data has incorrect CRC.
			Reprogram the personality.

PI_MALLOC_ERROR	SOFTWARE	503	Could not allocate memory to store crucial
UI FATAL DEVICE ERROR	PERSDATA	600	Input/output device error.
UL FATAL SWTO MALLOC ERROR	SOFTWARE	601	Software memory error.
UL FATAL SWTO MAX ERROR	SOFTWARE	602	Software error, power cycle the radio.
UI FATAL WINDOW MAX ERROR	SOFTWARE	603	Too many open windows.
UI FATAL WINDOW MALLOC ERROR	SOFTWARE	604	Software memory error.
UI FATAL MESSAGE INVPARM	SOFTWARE	605	Invalid parameter to ui put message().
			Software error, report how error was
			encountered.
UI_FATAL_RI_MSGBUF_FULL	SOFTWARE	606	UI Task message buffer full error. Software
			error, report how error was encountered.
UI_FATAL_RISYS_MSGBUF_FULL	SOFTWARE	607	Radio Interface System (EDACS/CONV) task
			message buffer full.
UI_FATAL_CI_MSGBUF_FULL	SOFTWARE	608	CI Task message buffer full.
UI_FATAL_DEVICE_NOTSUPPORTED	PERSDATA	609	I/O device type (from personality) not
			supported.
UI_FATAL_AUXIO_MALLOC_ERROR	SOFTWARE	610	Software memory error.
UI_FATAL_NET_DEVICE_ERROR	PERSDATA	611	Network I/O device error.
UI_FATAL_NO_TONE_DATA	PERSDATA	613	No tone data is available in personality.
UI_FATAL_UIIO_MSGBUF_FULL	SOFTWARE	614	UI I/O BBOS message buffer full.
UI_FATAL_PROMOTE_MALLOC_ERROR	SOFTWARE	615	No memory available.
UI_FATAL_REMAP_MALLOC_ERROR	SOFTWARE	616	No memory available.
TU_FATAL_RXBUF_MALLOC_ERROR	SOFTWARE	701	No memory available.
TU_FATAL_TXBUF_MALLOC_ERROR	SOFTWARE	702	No memory available.
TU_FATAL_PUT_UIMSG_ERROR	SOFTWARE	703	BB message to UI task failed.
TU_FATAL_PUT_RISYSMSG_ERROR	SOFTWARE	704	BB message to RISYS task failed.
TU_FATAL_FASTPUT_TXMSG_ERROR	SOFTWARE	705	BIOS call for Voter Monitor failed.
AEGIS_RXBUF_MALLOC_ERROR	SOFTWARE	802	No memory available.
AEGIS_KEYLOAD_MALLOC_ERROR	SOFTWARE	803	No Keyloader table memory available.
AEGIS_KEYLOAD_ERROR	SOFTWARE	804	General keyload error has occurred.
AEGIS_DATAMEM_MALLOC_ERROR	SOFWARE	805	No memory is allocated for data.
AEGIS_KEYLOAD_NOTABLE	SOFTWARE	806	No key table was found in EEPROM.
AEGIS_KEYLOAD_BAD_TABLESIZE	SOFTWARE	807	Key table found in EEPROM is wrong size.
AEGIS_KEYLOAD_CORRUPT_TABLE	SOFTWARE	808	Key table has been corrupted in EEPROM.

Operational Software Non-Fatal System Errors

Software non-fatal errors will be displayed for a short duration and then the radio will try to resume normal operation. If the error persist, the radio will continue to display the appropriate message everytime the error ocurrs. Some of the errors listed below contain additional information to help solve the problem.

Error Name	Message	Code	Description
PIFEAT_SNR_ERROR	FEAT ERR	550	Feature encryption - Cannot read radio ROM serial
			number.
PIFEAT_READ_ERROR	FEAT ERR	551	Personality feature encryption read failure or data not
			available.
PIFEAT_CRC_ERROR	FEAT ERR	552	decryption failure. Personality feature encryption CRC
			failure.
RI_DSPDOWN_NOATTEMPT	DSP ERR	850	DSP not found.
RI_DSPDOWN_NOTFOUND	DSP ERR	851	DSP file not found.
RI_DSPDOWN_CRCFAIL	DSP ERR	852	DSP file is corrupted.
RI_DSPDOWN_ENCERR	DSP ERR	853	Radio feature encryption does not match DSP file.
RI_DSPDOWN_PMFAIL	DSP ERR	854	DSP file is corrupted or hardware failure. Reprogram
			radio or power cycle the radio.
RI_DSPDOWN_DMFAIL	DSP ERR	855	DSP file is corrupted or hardware failure. Reprogram
			radio or power cycle the radio.
RI_DSPDOWN_BIOSERR	DSP ERR	856	Hardware failure.
AEGIS_KEYLOAD_NOBANKS	NO KBANK	860	Attempt to keyload radio w/o bank storage.
AEGIS_PVT_NONE	NO PVT	870	Attempt to keyload radio w/o private DSP file.

Radio Programming Errors

Programming errors are divided into three categories.

Protocol Errors Produced By The Low Level Communication Routines

Message	Code	Description
Successful	0	Command was performed successfully.
Protocol- Canceled by receiver	5	x328 protocol received a cancel, The radio detected a cancel command.
Protocol- Canceled by sender	6	x328 protocol transmitted cancel. The radio is canceling the read command.
Protocol- Terminate transmission	7	x328 protocol received an end of transmission.
Protocol- Transmit error	8	x328 protocol could not transmit. Reliable communication can not be established. It could be radio or PC hardware problems (programming cable, interface box or radio hardware).
Protocol- Protocol initialization error	9	x328 protocol not initialized or failed to initialize.

Radio Errors That Are Returned From The Bootloader Software

Message	Code	Description
Radio- Programmed successfully	10	Radio responded with a success. Radio acknowledged successful
		programming.
Radio- Comport configuration failed	11	Radio could not configure its comport (hardware failure).
Radio- Flash erase failed	12	Radio failed to erase the flash memory. The radio flash memory
		part is unusable or it can not detect the 12 volts power, Check the
		programming box and cables.
Radio- Flash write failed	13	Radio failed in writing to the flash memory. Retry the programming
		process (hardware failure).
Radio- Flash code CRC did not match	14	Flash code not programmed correctly, CRC did not match, the
		operating software will not execute. Re-program the radio.

Radio- Canceled by receiver	15	The radio operating software received a cancel command.
Radio- Canceled by sender	16	
Radio- End of transmission received	17	The radio software received or sent an end of transmission.
Radio- Transmit error	18	Radio could not transmit the required data. Check all hardware
		connections and try programming again.
Radio- Invalid command	19	Radio did not understand the received command.
Radio- No application code	20	No application code is loaded, radio can not accept personality commands. Reprogram the operating software (flash code) and reprogram personality.
Radio- Application code error	21	The radio application code failed to perform the command.
Radio- EEPROM programming error	22	Could not program the radio EEPROM part.
Radio- Baud rate has changed	23	The radio acknowledged a successful baud communication baud rate change.

PC Errors Produced By The PC Programming Software

Message	Code	Description
PC- Cannot allocate memory	50	The PC programming software could not allocate adequate
		memory space to perform the function.
PC- Cannot open data file	51	The specified file (code or personality) could not be opened
		(file does not exist or has access protection).
PC- Cannot read data file	52	The specified file (code or personality) could not be read.
PC- Cannot write to file	53	The specified file (code or personality) could not be written.
PC- File not found	54	The specified file (code or personality) is not found in the
		current directory.
PC- File is larger than radio memory	55	The radio flash part size is unknown or the operating
		software file size is larger than the radio's flash memory size.
PC- Incorrect Tracking data RF band split	57	Incorrect tracking data RF band split.
PC- Incorrect Tracking data version	58	Incorrect tracking data version.
PC- Tracking data check sum error	59	Tracking data check sum error.
PC- Time-out, radio not responding	60	Radio not connected or not turned on or the selected PC
		comport number is invalid.
PC- Comport configuration error	61	Comport configuration error, can not set comport.
PC- Abort, message canceled	62	Aborted by operator, message canceled.
PC-Requested personality data does not exist.	63	The personality table does not exist (tracking or encryption
		table).

DISASSEMBLY PROCEDURE

To disassemble the LPE-200 radio:

Figure 9

1. Remove the battery pack by pushing the battery release button and sliding the battery pack straight back until it stops, then lift the battery pack out. When replacing the battery pack align the ribs on the sides of the battery pack with the slots in the sides of the radio. Push down and slide the battery pack into place.



If the radio is equipped with a belt clip it may be necessary to lift up on the clip when replacing battery pack



Figure 9 - Removing the Battery Pack

- 2. Remove the control knobs and stop washer.
- 3. Using a T7x50 TORX[®] driver, remove the screws at (A).
- 4. Insert a small flat head screwdriver between the plastic front cover and the metal frame at location (**B**). Gently pry each side of the plastic front cover out while prying the metal frame up to release the plastic snaps securing the metal frame to the front cover.



Figure 10 - Removing Front Cover

Figure 11

5. Once the plastic snaps have been released, separate the metal frame from the front cover. First lift up on the bottom of the metal frame and then slide and lift the metal frame down and away from the front cover.



Figure 11 - Metal Frame Separated From The Front Cover

Figure 12

- 6. Carefully unplug the flex circuit at the bottom of the radio (**C**).
- 7. Remove gasket. **Note:** when replacing the gasket watch for bulging sections.
- Using a flat head screw driver, remove the PA nuts at (D)
- 9. Pry clips loose from both sides of the metal frame at (E).



Figure 12 - Remove Flex Circuit, PA Nuts And Side Clips

Figure 10

Figure 13

 Using a flat blade screwdriver, push on the battery contacts. Be careful not to damage the gasket. Applying pressure on the battery contacts will slowly separate the main circuit board and shield from the metal frame.



Figure 13 - Push Battery Contacts

Figure 14

11. Carefully unplug the small flex at the top of the radio (\mathbf{F}) .

- NOTE —

This connector is **<u>not</u>** keyed. When replacing be careful



Figure 14 - Board/Shield Separated From Metal Frame

Figure 15

12. Remove the board from the shield by prying up on a corner and working around the board to release the snaps.



Figure 15 - Separating Board From Shield

Figure 16

13. To remove the switch assembly use a small flat blade screw driver and pry up on the bottom latch.



Figure 16 - Removing the Switch Assembly (Pry up on bottom latch)

Figure 17

14. Pry up on the hook to release from the latch and push down on the switches to remove the assembly from the housing.



Figure 17 - Removing Switch Assembly (Pry up on the latch)

Figure 18

- 15. To remove the Antenna Switch Assembly the switch assembly must be removed first.
- 16. Unscrew the RF nut. Remove the switch being careful not to lose the washer.



Figure 18 - Removing the Antenna Switch

PA Module Replacement

Remove the PA Module by unsoldering the five (5) leads attached to the Main Board (see the Outline Diagram). Solder new module in same location.

Filters Z400 And Z401 Replacement

Filter Z400 has four (4) leads that go all the way through the board and are soldered on the reverse side of the board. Unsolder the four leads to remove Z400.

Filter Z401 also has four leads. But Z401 is surface mounted on the same side of the board. Unsolder the leads to remove Z401.

REASSEMBLY

Reassemble the radio by reversing the instructions (steps 1-16) provided in the **Dissassembly Section**.



	300 WI 12				
SYMBOL	PART NUMBER	DESCRIPTION			
1	SXK 107 3807/2	Front Assembly (LPE-200 Scan)			
1	SXK 107 3808/2	Front Assembly (LPE-200 System)			
2	SXK 107 3815	Rear Assembly (896 - 940 MHz TX)			
		MARRIAGE HARDWARE KIT			
3	SXA 120 4145	Main Gasket			
4	SBA 124 025/0080	Screw (2)			
6	SXA 120 4118	Washer Stop. Knob			
7	SXA 120 4117	Channel Knob			
8	SXA 120 4116	Volume Knob			
21	SVA 230 01/08	Nameplate LPE-200 Ericsson			
21	SVA 230 01/09	Nameplate LPE-200 GE			

LPE-200 Radio 900 MHz

* COMPONENTS ADDED, DELETED, OR CHANGED BY PRODUCTION CHANGES.

Radio, 900 MHz

(151 88-KRD 103 103/A1 Uen, Rev. A)

ASSEMBLY DIAGRAM AND PARTS LIST



Front Assembly (Scan) SXK 107 3807*

PART NUMBER	DESCRIPTION
SXA 120 4112/02	Keypad Scan (LPE-200)
SXA 120 4122	Keypad Retainer
ROA 117 2216**	Flex Assembly/Printed Bd
SXA 120 4119	Speaker Gasket
RLE 906 18/2	Loudspeaker
SXA 120 4121	PTT Actuator
SXA 120 4120	Side Control Bezel
SXA 120 4136	Side Control Keypad
SXA 120 4128	Gasket: UDC PWB
SXA 120 4129	Gasket: PTT
SVF 930 1252	UDC Label
SXA 120 4157	Mike Pad
SXA 120 4217	Speaker Insulator

ASSEMBLY DIAGRAM AND PARTS LIST



AE/LZB 119 1902 R1A

Front Assembly (System) SXK 107 3808*

OL	PART NUMBER	DESCRIPTION
	SXA 120 4115/02	Keypad System (LPE-200)
	SXA 120 4122	Keypad Retainer
	ROA 117 2216**	Flex Assembly/Printed Bd
	SXA 120 4119	Speaker Gasket
	RLE 906 18/2	Loudspeaker
	SXA 120 4121	PTT Actuator
	SXA 120 4120	Side Control Bezel
	SXA 120 4136	Side Control Keypad
	SXA 120 4128	Gasket: UDC PWB
	SXA 120 4129	Gasket: PTT
	SVF 930 1252	UDC Label
	SXA 120 4157	Mike Pad
	SXA 120 4217	Speaker Insulator

* Item 13 is required and must be ordered separately. ** Item 14 is required and must be ordered separately. *** COMPONENTS ADDED, DELETED, OR CHANGED BY PRODUCTION CHANGES.

ALL BENDS TO BE I mm INNER DIAMETER MINIMUM (NO CREASE BENDS), 180° UNLESS OTHERWISE NOTED. PTT AND UDC BOARDS ARE NOT SHOWN FOR CLARITY.

A

Front Assembly SYSTEM

(151 88-SXK 107 3808 Uen, Rev. E)



Radio Rear Assembly (151 88-SXK 107 3815, Rev.)

Rear Assembly SXK 107 3815

PART NUMBER	DESCRIPTION
SXK 107 3816	Rear Housing Casting
SXA 120 4110	Rear Cosmetic Cover
RNT 403 351/01	Antenna Switch Assembly
RNT 403 351/901	Gasket
RNT 403 351/900	Nut
SXA 120 4133	Switch Retainer
ROA 117 2220	Switch Module Assembly
SXA 120 4134	Switch Gasket Assembly
ROA 117 2212	DSP Module
ROA 117 2297	Main Board Asm (900 - 824 MHz)
SXK 107 3818	RF/ Logic Shield
SXA 120 4137	RF Gasket
SXA 120 4155	PA Nuts
SXA 120 4171	Anti-shock Pad
SXA 120 4316	Spacer

* COMPONENTS ADDED, DELETED, OR CHANGED BY PRODUCTION CHANGES.



- \bigtriangleup place item xidi onto item (and solder in place such that no gap exists between mating surfaces.
- A PLACE ITEM 2401 ONTO ITEM 1 AND SOLDER IN PLACE SUCH THAT NO GAP EXISTS BETWEEN NATING SURFACES.
- $\textcircled{\sc such that no gap exists between matting surfaces.}$
- A PEEL AND PLACE PAD TO COMPONENT IN ORIENTATION SHOWN.



900 MHz Main Board Assembly ROA 117 2297

SYMBOL	PART NUMBER	DESCRIPTION						
2	SXA 120 4167	Ground Pad						
V101	RYT 901 6118/2	PA Module						
J201	RTL 204 614/03	Reference Oscillator						
(101	RPT 403 303/01	Battery Connector						
400	RTN 202 728/03	Filter						
2401	RTN 202 728/02	Filter						

* COMPONENTS ADDED, DELETED, OR CHANGED BY PRODUCTION CHANGES.

900 MHz Main Circuit Board Assembly

(151 88-ROA 117 2297, Rev.)

OUTLINE DIAGRAM

FRONT SIDE



900 MHz Circuit Board

(1078-ROA 117 2297 Uen, Sheet 1, Rev. B)

OUTLINE DIAGRAM

BACK SIDE



AE/LZB 119 1902 R1A

900 MHz Circuit Board

(1078-ROA 117 2297 Uen, Sheet 2, Rev. B)

















SCHEMATIC DIAGRAM



(1911-ROA 117 2297, Sheet 9, Rev. B)







SCHEMATIC DIAGRAM









(1911-ROA 117 2297, Sheet 15, Rev. B)



2B 119 1902 R1A	SCHEMATIC DIAGRAM
	5 6 7 8 9 10 11 12 13
	THE NETLIST CONDUCTIVITY FOR DG01 IS CREATED BY THIS SHEET
-	DAR9 DAR9 DAR1 CON3 5 CON3
	SC_DATA_F 6 SCDI HICIN 16 HICD1 SC_SABCLK 7 SCCLK HICD1 16 HICD1 SC_STRB 8 SCSTRO HICD2 22 RXAUD1 RES_A_B 10 RESET HICD2 22 RXAUD1 HIC_TEST 19 AUX11 BEARP 26 PCM_CDCSYNC 30 PCHSYN 35 PCM_CDCHTC
	PCM_COCCLK 31 DPCC DPCD 33 DPCD PCM_COCEAR 34 DPCC DOCLK 49 RXSIF_CLK ABBIE_CLK_F 38 MCLK 500 41 RXSIF_DATA RXSIF_CONV 39 MCLK 55 DEC2 DEC1 29 DEC1 (63 68 DAC63
	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$
	23 NC 21 AGND 32 NC AVSS 23 AGND 48 NC 12 AGND
	<u>61_{NC} (j 59</u>
-	
	5 6 7 8 9 10 11 12 13

1711-KOA 117 2277, 51



		SCHEMATIC DIAGRAM																					
4	1	1	2		3		4		5	6		7	1	8	9		10		11		12		13
A										THE	NETLIST CO	NDUCTIVITY FOR	D701 IS (701	REATED BY	THIS SHEET								
A 										RESPON_B VCO_BAND. HCLK_F	_SEL_1_F	1 RESPOW_B 	ISIC Ilery HDATA HDATA_ BINIO_P	_IN 144 _IN 143 0U1 142 T19 44	HDATA. HDATA_(BINIO_PT	_IN							
В										RXIF_F RXIF_F	1	TG_SYNC 5 BINIO_PT7 6 AVDDI 7 IFIN_B 8 IFIN	UDATA UDATA_ AV GENIO_ GENIO_	_IN 140 OUI 139 SSI 138 PT6 137 PT1 130	TX_DATA_IN RX_DATA_ G	_F _OUT_F ND 							
_										BINIO_PT SC_DATA SC_CLK_ GND	8 F 	J RX_ON_B 10 BINIO_PT8 11 SC_DO 12 SC_SYNCLK 13 VSSO	UPREA KPC BINIO_P VI UPAD	D_6 135 OL6 135 T15 134 DD0 132 DR6 131	UPADO	20 COL0_F 0_PT15 Vdd R0 N1							
_										HODI_F HODI_F HODQ_F HODQ_B Vdd	F	15 16 17 18 19 19 10 10 10 10 10 10 10 10 10 10	UPAD UPADO UPAD BINIO_P V:	DR1 131 R12 129 DR2 129 T12 128 T12 127 SSI 126	UP UPADD AUDIO_P G	ADOR12 R2 A_UNHUTE ND							
D										SND TX_ENAE SC_SYN1 GND	BLE_F	20 21 21 21 21 21 22 22 22 23 24 24 24 25 25 25 25 25 25 25 25 25 25	V UPAD UPAD UPAD UPAD	DDI 125 DR3 124 DR9 123 DR9 122 DR9 122 DR9 121	UPADD UPADD UPADD UPADD UPADD UPADD	R3 R8 R9 R1							
 E										KPROW3_F TX_ON_E UNLOCK_B KPROW2_F KPROW4_F	9_F _F	Z5 TEST300H_B 26 TX_ON_B 27 BINIO_PT4 28 KPROW2 29 VRDOW4	UPAD UPWRIT BINIO_P UPDA UPAD	DRS 129 E_B 119 T13 118 TA7 117 DRG 116	UPN TX_BUS1 UPDAT UPADD RX_VOL_A	RITE_B /_LED_F A7 R6 ITTN							
_										GND +5V_D KPROW1_F KPROW0_F KPCOL3.	F	30 31 UPHD0 32 KPROW1 33 KPROW0 34 KPROW0 34	UPAD UPAD UPADO BINIO_ UPADO	115 DR7 114 SS0 113 R10 112 PT9 111 P19 111	UPADD G UPADDR MUTE_O UPADDR	187 190 119 115 116							
F										LCD_BIJ KPCOL2, PCM_CDC SC_SYNG	158 _F 	35 BINIO_PT5 36 KPC0L4 37 KPC0L2 38 PCM_CDCCLK 39 SC SYN2I F	UPADO UPDA UPDA UPDA UPADO BINIO	R11 109 TA3 109 TAG 107 R15 106 PT1 106	UPADD UPDAT UPDAT UP PTT_8	R11 A3 A6 ADDR15 LF							
G										PCH_CDC PCH_CDC GND PCH_CDC KPCOL1_	XEAR XMIC SYNC F	40 PCH_CDCEAR 41 PCM_CDCHIC 42 VSS0 43 PCH_CDCSYNC 44 KPCOL1	UPADO UPDA V BINIO_ UPADO	R14 104 TA4 103 SSO 102 PT0 101 R13 101	UP UPDAT G 	ADDR14 A4 HD L_F ADDR13							
_										BINID_P EMULHOOE Vdd SC_SABO	16 B K	T5 CON3 46 BINIO_PT6 47 PERIPH_B 48 VDD0 49 SC_ACLK	UPDA UPEEC D. UPADD UPDA	TA5 99 S_B 98 AR1 97 R19 96 TA6 95	UPADDA UPADDA UPDAT	DAR1 19 A8							
н										DARG EMER_UDC SC_STRE Vdd	_B_F }	50 51 52 53 54 VDDI	UPDA UPDA UPAD UPADD V	TA2 94 TA1 93 CS6 92 R18 91 SS0 99	UPDAT UPDAT UPAT UPAT UPAT	A2 TA1 DCS0_B ADDR18 ND							
I										DUPLEX. DSPCLK2 UDC_TX_B RES_RXC	SPKR_ATTEN 2 2 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	56 DSPC_TXDATA 57 DSPCLK2 58 DSPC_RXDATA 59 RES_RXDSP_B	VI UPADD 2 UPRAMC 3	36 R17 89 SCL 87 S_B 86 SDA 95	UPR	ADDR17 SCL_F AMCS_B SDA_F F_CONV							
_										GND IF_NARI LCD_BIA PCM_DSF	ROW_F S1 PEAR	61 62 63 64 64 65 64 65 65 65 65 65 65 65 65 65 65	RXSIF_C UPI 1 UPWAI RXSIF_ RXSIF_D	ONV 83 PHI 83 T_B 82 CLK 81 ATA 90	RXSIF_C RXSIF_DA	UPPHI WAIT_B LK							
J										LCD_BIA DSPC_RX +5V_+3V PCM_DSF RXSIF_DS	ISZ (SYNC PMIC PDATA	65 66 67 68 69 70 70 70 70 70 70 70 70 70 70 70 70 70	TXSIF_DSPS TXSIF_DSP VSSO TXSIF_DSPC TA DSPC	YN0 -79 CLK 78 -3V 77 ATA 76 LK1 75	TXSIF_USPSY	DSPCLK ND SPDATA SPCLK1							
ĸ										USP_INTB DSPC_TX PCM_DSF	SYNC PCLK	78 71 72 PCM_DSPC_K	RES_TXDS RXSIF_DSPS RXSIF_DSP	P_B 75 74 YNC 73 CLK	RXSIF_DS RXSIF_DS RXSIF_U	PKST_B SPSYNC DSPCLK							
													-1		1								
I	1	I	2	I	3	I	4	I	5	1 6	I	7	I	8	1 9	I	10	I	11	I	12	1	13



Ericsson Inc. Private Radio Systems Mountain View Road Lynchburg, Virginia 24502 1-800-592-7711 (Outside USA, 804-592-7711)

AE/LZB 119 1902 R1A Printed in U.S.A.