



DESCRIPTION AND MAINTENANCE OF MASTR CUSTOM MVP 30—50 MHz RECEIVER (WITH NOISE BLANKER)

TABLE OF CONTENTS

DESCRIPTION	Page 1
MAINTENANCE	Page 1
Disassembly	Page 1
Alignment Procedure	Page 3
Test Procedure	Page 4
Noise Blanker Troubleshooting	Page 5
Receiver Troubleshooting	Page 6

DESCRIPTION

MASTR Custom MVP, 30 to 50 Megahertz receivers are single conversion, superheterodyne FM receivers designed for one-through-four frequency operation. The solid state receiver utilizes integrated circuits (IC's), monolithic crystal filters and discrete components with each of the crystal filters located between gain stages to provide 95 dB selectivity and maximum protection from de-sensitization and intermodulation.

The receiver consists of the following modules:

RF Assembly

Mixer/IF/Noise Blanker (MIF/NB)

Oscillator/Multiplier (Osc/Mult)

Audio and Squelch circuits (part of System-Audio-Squelch (SAS) board)

IF Detector (IF Det)

Audio, supply voltages and control functions are connected to the system board through P903 on the IF Det board, and through W401 to the Osc/Mult board. The regulated +10 Volts is used for all receiver stages except the audio PA stage which operates from the A+ system supply.

Centralized metering jack J601 on the IF Det board is provided for use with GE Test Set 4EX3A11 or Test Kit 4EX8K12. The test set meters the oscillator, multiplier, FM Detector 10 Volt regulator and IF amplifier stages. Speaker high and low may be metered at J1-3 (Hi) and J1-4 (Low).

A block diagram of the complete receiver is shown in Figure 1.

Refer to the appropriate Maintenance Manual for complete details on each receiver module as listed in the Table of Contents.

MAINTENANCE

DISASSEMBLY

To gain access to the receiver for servicing, remove the wing nut at the rear of the radio and pull the radio out of the case assembly.

To remove the RF Assembly and MIF/NB board:

1. Carefully disconnect the two leads connected to loop clips J623 and J624 on the IF Det board.
2. Unplug receiver input cable P301.
3. Remove the two countersunk flat head screws on each side of the system frame assembly and lift out RF Assembly and MIF/NB board.

To remove the Osc-Mult board:

1. Remove the crystal module.
2. Remove the two screws securing the board.
3. Carefully unplug the Osc-Mult board from the adapter board (on the receiver front end).

To remove the IF Det board:

1. Carefully disconnect the two leads connected to loop clips J623 and J624 on the IF Det board.
2. Disconnect the two plugs (P602 and J903) from the IF Det board.
3. Remove the five screws securing the board and lift the board out.

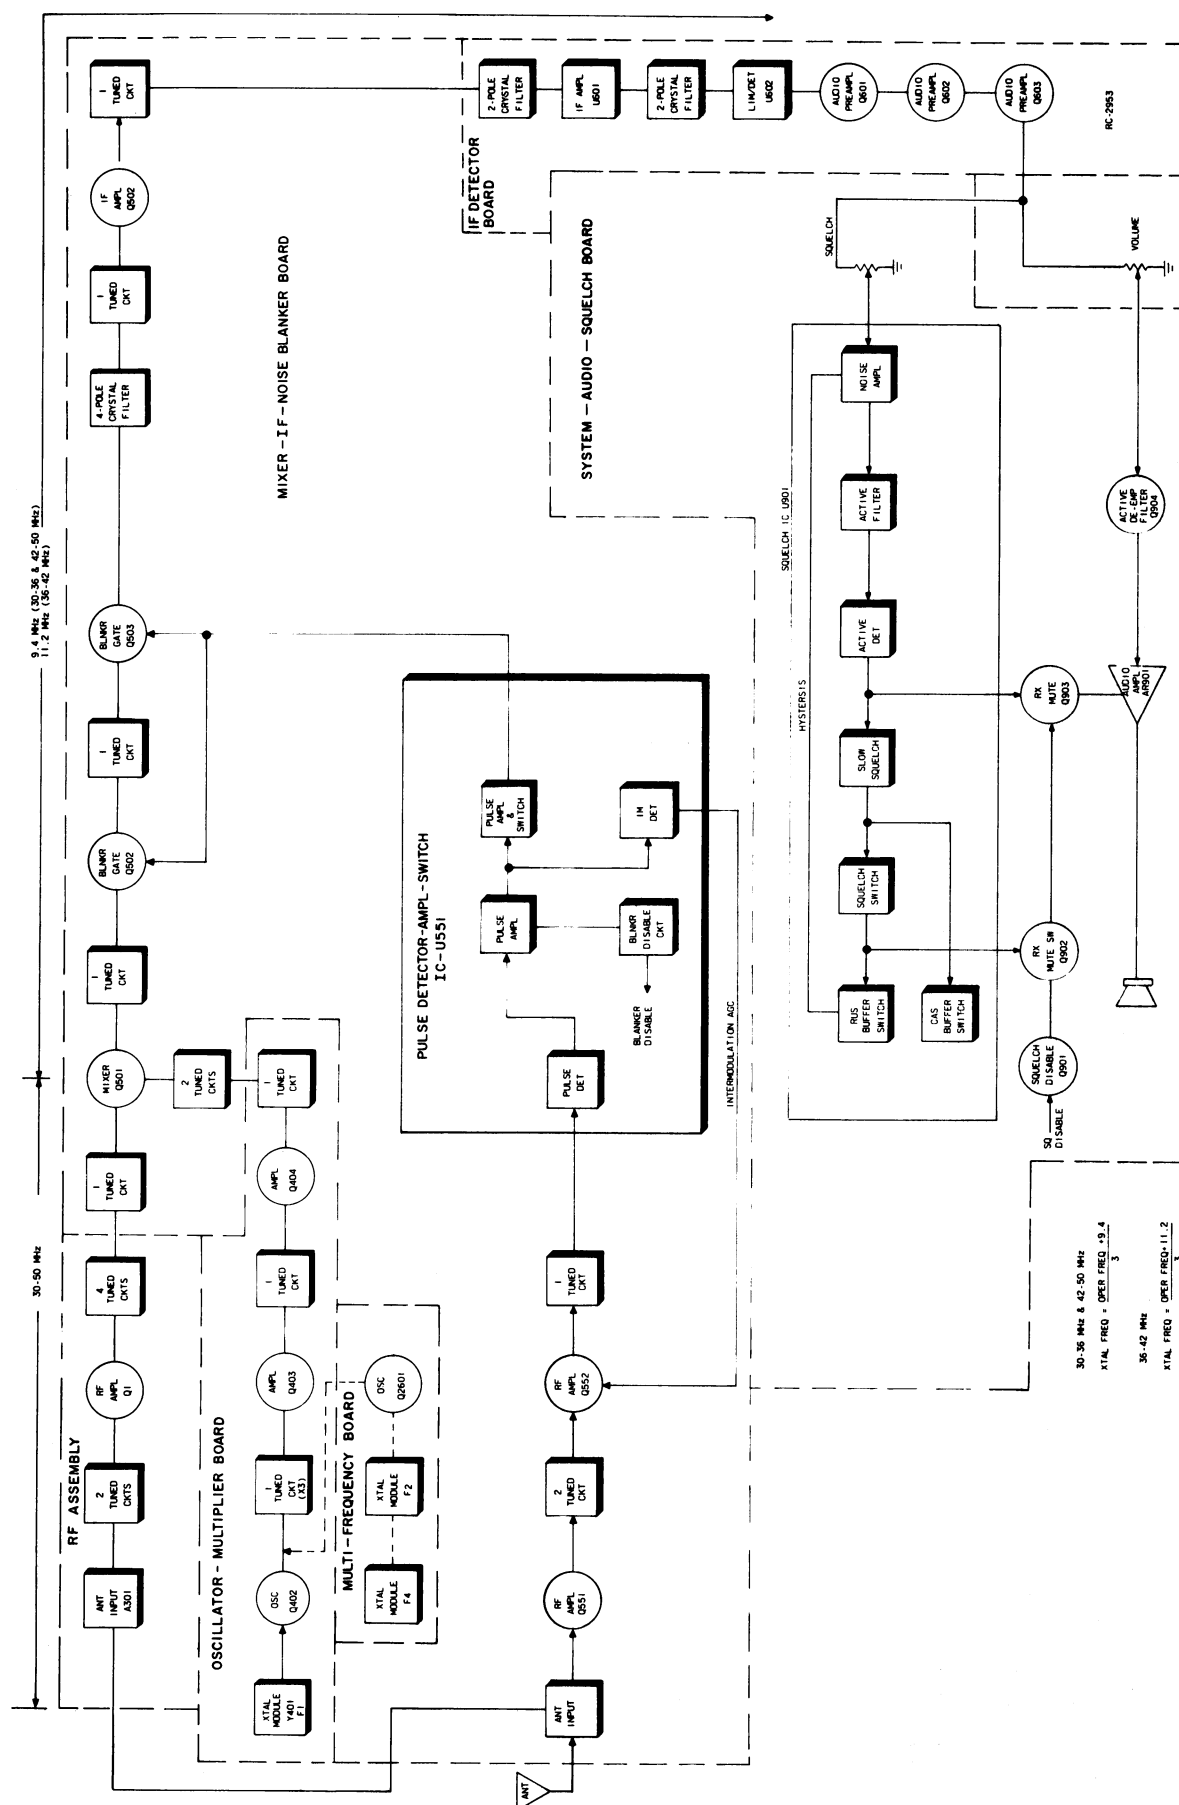


Figure 1 - Receiver Block Diagram

FRONT END ALIGNMENT

EQUIPMENT REQUIRED

- GE Test Set Models 4EX3A11, 4EX8K12, or 20,000 ohms-per-Volt multimeter with a 1-Volt and 3-Volt scale.
- A 30-50 MHz signal source. Connect a one-inch piece of insulated wire no larger than .065-inch diameter to generator output probe.

PRELIMINARY CHECKS AND ADJUSTMENTS

- Connect black plug from Test Set to Receiver Centralized Metering Jack J601. Set range selector switch to the TEST 3 position (or 3-Volt position on 4EX8K12).
- For multi-frequency receivers with a frequency spacing up to 0.060 MHz for frequency range of 30-36 MHz, 0.080 MHz for frequency range of 36-42 MHz or 0.180 MHz for frequency range of 42-50 MHz, align the receiver on the Channel nearest center frequency.
For multi-frequency receivers with a frequency spacing exceeding the above but no greater than 0.120 MHz for frequency range of 30-36 MHz, .160 MHz for frequency range of 36-42 MHz, or .360 MHz for frequency range of 42-50 MHz, align the receiver using a center frequency tune-up crystal module. These limits can be extended to .340 MHz, .400 MHz and .640 MHz respectively, with 3 dB degradation in standard receiver specifications.
- With Test Set in Position G, check for regulated +10 Volts. If using multimeter, measure between J601-6 (+) and J601-9 (-).
- If using multimeter, connect the negative lead to J601-9 (A-).
- Disable Channel Guard.

ALIGNMENT PROCEDURE

METERING POSITION		TUNING CONTROL	METER READING	PROCEDURE
STEP	GE Test Set			
Multimeter ~ at J601-9				
OSCILLATOR/MULTIPLIER				
1.	C (MULT-1)	Pin 3	L404, L502, L503, C406	See Procedure Set the range selector switch to the Test 3 position on the 3-Volt scale. Adjust the slugs in L404, L502 and L503 to top of coil. Adjust C406 for maximum meter reading
2.	D (MULT-2)	Pin 4	C411, C406, L404, L502, and L503	See Procedure Adjust C406 and C411 for maximum meter reading. Carefully tune L404 and then C411 for a dip in meter reading. Then adjust L502 for maximum meter reading and L503 for a dip in meter reading. Do NOT readjust L404, L502 and L503.
RF AMP & SELECTIVITY				
3.	B (IF AMP)	Pin 1	L4	Apply an on-frequency signal adjacent to L3 keeping the signal below saturation and tune L4 for maximum meter reading.
4.	B (IF AMP)	Pin 1	L4, L3	Maximum Apply an on-frequency signal adjacent to L2 keeping the signal below saturation. Then tune L4 and L3 for maximum meter reading.
5.	B (IF AMP)	Pin 1	L1, L2, L3, L4, C301 C302 and C502	Maximum Apply an on-frequency signal to the antenna jack, keeping the signal below saturation. Then tune L1, L2, L3, L4, C301, C302 and C502 for maximum meter reading.
6.	B (IF AMP)	Pin 1	C502, L4, L3, L2, L1, C301 and C302	See Procedure Apply an on-frequency signal as in Step 5 and slightly tune C502, L4, L3, L2, L1, C301 and C302 for best quieting sensitivity.

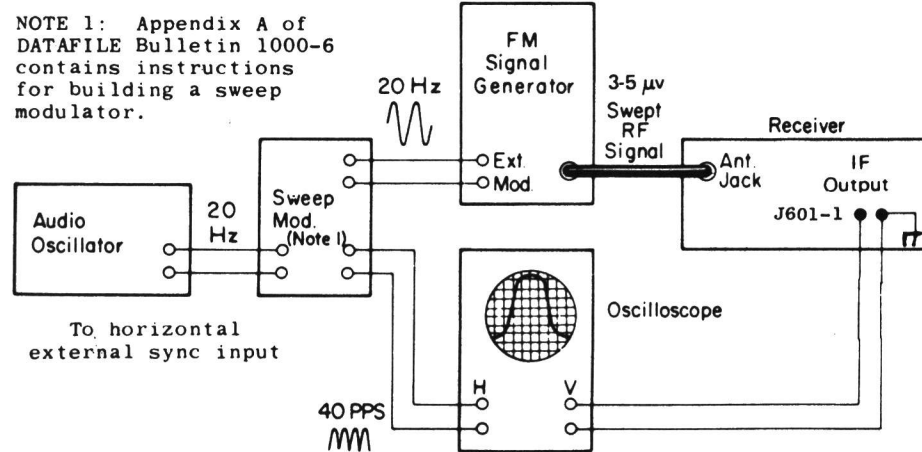


Figure 2 - Test Setup for 20-Hz Double-Trace Sweep Alignment

OSCILLATOR FREQUENCY ADJUSTMENT

First, check the frequency to determine if any adjustment is required. (Refer to frequency offset chart, Figure 3). The frequency measurement requires equipment with an absolute accuracy that is 5 to 10 times better than the tolerance to be maintained. When adjusting the frequency, the entire radio should be as near as possible to an ambient temperature of 60°C (86°F).

The frequency of the crystal module should only be reset when the measured frequency error exceeds the following limits:

- +0.6 PPM when the ambient temperature of the radio is 30°C (86°F).
- +5 PPM at any other temperature within the range of -30°C to +75°C (-22°F to +167°F).

If frequency adjustment is required, refer to one of the procedures below (depending on equipment available) for proper adjustment.

A. DIRECT MEASUREMENT IN THE INJECTION CHAIN

- WITH A FREQUENCY COUNTER, "Count" the frequency at the junction of C411 and L402 on the Oscillator-Multiplier board. The frequency measured at this point is 3 times the crystal frequency.
- WITH A COMMUNICATION MONITOR (for example: Cushman Model CE-3), "Monitor" frequency at the junction of C411 and L402 on the Oscillator-Multiplier board. The frequency monitored at this point is 3 times the crystal frequency. NOTE: This frequency will not always fall within an available measuring range of all monitors at all receiver operating frequencies.

B. STANDARD "ON FREQUENCY" SIGNAL AT THE RECEIVER INPUT (Generated from a COMMUNICATION MONITOR, for example: Cushman Model CE-3).

- WITH A FREQUENCY COUNTER, "Count" the developed IF frequency at the tap of Z602-R2 on the IF-DET board. The deviation from the nominal IF frequency (11.2 MHz) in Hz is compared to the receiver operating frequency (also in Hz) to calculate the frequency error.
- WITH AN 11.2 MHz IF FREQUENCY STANDARD (for example: General Electric Model 4EX9A10). Loosely couple the IF frequency standard to the IF signal path to create a heterodyne with the developed IF frequency. The resultant "beat frequency" can be monitored by any of the following methods:

NOTE

To set crystal frequency using "beat frequency" method, the temperature should be at 30°C (86°F). If the temperature is not 30°C, then offset the "ON FREQUENCY" signal (at the receiver input), as a function of actual temperature, by the frequency FREQ. FACTOR shown in Figure 3.

- Audible "beat frequency" from the receiver speaker (this requires careful frequency adjustment of the frequency standard).
- Observe "beat frequency" at J601-1 with an oscilloscope.
- With GE TEST SET (Meter Position B) connected to J601 on the IF-DET Board, visually observe the "beat frequency" indicated by motor movement.

The frequency of the "beat" is the frequency error related to the IF frequency. This deviation, in Hz, is compared to the receiver operating frequency, also in Hz, to calculate the frequency error.

NOTE

The FM Detector output (meter position A of the test set) has a DC voltage of .35 to .50 Volts at the assigned frequency and is used for routine test and measurement only. The resolution of this reading (approximately .025 V per kHz as read on a GE Test Set in meter position A, or 0.1 V per kHz as measured with a VTVM at J601-2 on the IF-DET board) is inadequate for oscillator frequency setting.

If the radio is at an ambient temperature of 30°C (86°F) set the oscillator for the correct mixer frequency (crystal FREQ. X 3).

If the radio is not at an ambient temperature of 30°C setting errors can be minimized as follows:

A. To hold setting error to ±0.6 PPM (which is considered reasonable for 5 PPM oscillators):

- Maintain the radio at 30°C (±5°C, -10°C) and set the oscillator to required mixer injection frequency, or
- Maintain the radio at 30°C (±5°C, -10°C) and offset the oscillator, as a function of actual temperature, by the frequency error shown in Figure 3.

For example: Assume the ambient temperature of the radio is 20°C (68°F). At that temperature, the curve shows a correction factor of 66 Hz for a frequency range of 36-42 MHz.

Adjust the oscillator for a corrected mixer injection frequency 66 Hz higher. If a negative correction factor is obtained (at temperatures above 30°C, set the oscillator for the indicated frequency lower than the calculated mixer injection frequency.)

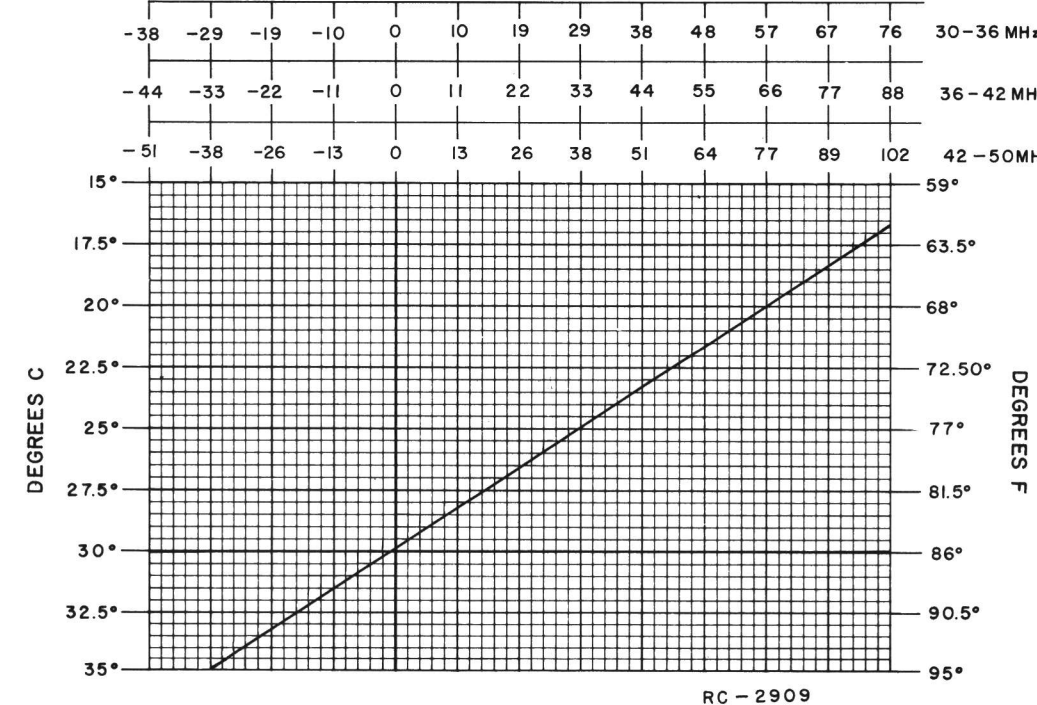


Figure 3 - Frequency Characteristics Vs. Temperature

COMPLETE RECEIVER ALIGNMENT

EQUIPMENT REQUIRED

- GE Test Set Models 4EX3A11, 4EX8K12 (or 20,000 ohms-per-Volt multimeter with a 1-Volt and 3-Volt scale).
- A 9.4 MHz signal source for 30-36 and 42-50 MHz receivers, or 11.2 MHz signal source for 36-42 MHz receiver (GE Test Set Model 4EX9A10). Also a 30-50 MHz signal source (measurements 803) with a one-inch piece of insulated wire no larger than .065 inch diameter connected to generator probe.
- VTVM
- Distortion Analyzer

PRELIMINARY CHECKS AND ADJUSTMENTS

- Connect the black plug from the Test Set to receiver metering jack J601. Set the meter sensitivity switch to the Test 1 (or 1-Volt position on the 4EX8K12).
- For multi-frequency receivers with a frequency spacing up to 0.060 MHz for frequency range of 30-36 MHz, 0.080 MHz for frequency range of 36-42 MHz or 0.180 MHz for frequency range of 42-50 MHz, align the receiver on the channel nearest center frequency.

For multi-frequency receivers with a frequency spacing exceeding the above but no greater than 0.120 MHz for frequency range of 30-36 MHz, .160 MHz for frequency range of 36-42 MHz, or .360 MHz for frequency range of 42-50 MHz, align the receiver using a center frequency tune-up crystal module. These limits can be extended to .340 MHz, .400 MHz and .640 MHz respectively, with 3 dB degradation in standard receiver specifications.

- With the Test Set in Position G, check for regulated +10 Volts. With multimeter, measure from J601-6 (+) to J601-9 (-).
- If using multimeter, connect the negative lead to J601-9 (A-).

ALIGNMENT PROCEDURE

METERING POSITION			TUNING CONTROL	METER READING	PROCEDURE
STEP	GE Test Set	Multimeter (-) at J601-9			
FM DETECTOR					
1.	A (FM DET)	Pin 2	L603	0.38 Volt	With no signal applied, adjust L603 for a meter reading of approximately 0.38 Volt.
2.	C (MULT-1)	Pin 3	L404, L502, L503, C406	See Procedure	Set the range selector switch to the Test 3 position on the 3-Volt scale. Adjust the slugs in L404, L502 and L503 to top of coil. Adjust C406 for maximum meter reading.
3.	D (MULT-2)	Pin 4	C411, C406, L404, L502, and L503	See Procedure	Adjust C406 and C411 for maximum meter reading. Carefully tune L404 and then C411 for a dip in meter reading. Then adjust L502 for maximum meter reading and L503 for a dip in meter reading. Do NOT readjust L404, L502 and L503.
RF AMP & SELECTIVITY					
4.	B (IF AMP)	Pin 1	L4		Apply an on-frequency signal in the hole adjacent to L4. Set the range selector switch to the Test 1 position or the 1 Volt scale and tune L4 for maximum meter reading.
5.	B (IF AMP)	Pin 1	L4, L3	Maximum	Apply an on-frequency signal adjacent to L2 keeping the signal below saturation. Then tune L4 and L3 for maximum meter reading.
6.	B (IF AMP)	Pin 1	L1, L2, L3, L4, C301, C302 and C502	Maximum	Apply an on-frequency signal to the antenna jack A301-J1, keeping the signal below saturation. Then tune L1, L2, L3, L4, C301, C302 and C502 for maximum meter reading.
7.	B (IF AMP)	Pin 1	C502, L4, L3, L2, L1, C301 and C302	See Procedure	Apply an on-frequency signal as in Step 6 and slightly tune C502, L4, L3, L2, L1, C301 and C302 for best quieting sensitivity or SINAD.
8.	A (FM DET)	Pin 2	L603, R608	1 Volt RMS	Remove the Test set metering plug from J601. Apply a 1000 microvolt signal with 1 kHz modulation and 3.0 kHz deviation to the antenna jack. Tune L603 for maximum voltage at 1 kHz and adjust R608 for 1 Volt RMS measured with a VTVM at P903-1 (VOL/SQ HI) and P903-6 (A-).

MIXER & IF

The mixer and IF circuits have been aligned at the factory and will normally require no further adjustment. If adjustment is necessary, use the procedure outlined in STEPS 9 and 10.

NOTE

Refer to DATAFILE BULLETIN 1000-6 (IF Alignment of Two-Way Radio FM Receivers) for helpful suggestions on how to determine when IF Alignment is required.

- Align L504, L506, L520, L521 and C521.
Connect scope, signal generator, and probe as shown in Figure 2. Set signal generator level for 3 to 5 μV and modulate with 10 kHz at 20 Hz. With probe between P904-4 (or J601-1) and A-, tune L504, L506, L520, L521, and C521 for double trace as shown in scope pattern.

METERING POSITION			TUNING CONTROL	METER READING	PROCEDURE								
STEP	GE Test Set	Multimeter (-) at J601-9											
10.		L521	Minimum	Apply a 1000 microvolt signal with 1 kHz modulation and 3.0 kHz deviation to the antenna jack. Connect a distortion analyzer to P904-11 VOL/SQ HI and monitor the distortion of the 1 kHz audio. Tune L521 for minimum distortion.									
11.			See Procedure	Check to see that modulation acceptance bandwidth is greater than +6.5 kHz.									
NOISE BLANKER													
12.	F (BLANKER)	J601-pin 7	L554, L553, L552 & L551	Maximum	<p>Set generator output to maximum. Connect generator to Receive antenna jack J551 and adjust generator frequency in accordance with the following table:</p> <table><tr><td>Receiver Operating Frequency:</td><td>Align Noise Blanker to:</td></tr><tr><td>30-36 MHz</td><td>40 MHz</td></tr><tr><td>36-42 MHz</td><td>33 MHz</td></tr><tr><td>42-50 MHz</td><td>38 MHz</td></tr></table> <p>Tune L554, L552 and L551 in the order given, reducing the generator output as necessary to keep the noise blanker metering point out of saturation.</p> <div><p>NOTE</p><p>In some instances the noise blanker circuit may be tuned to a specific frequency in order to minimize interference. The noise blanker must never be tuned closer than 2 MHz to the operating frequency of the receiver.</p></div>	Receiver Operating Frequency:	Align Noise Blanker to:	30-36 MHz	40 MHz	36-42 MHz	33 MHz	42-50 MHz	38 MHz
Receiver Operating Frequency:	Align Noise Blanker to:												
30-36 MHz	40 MHz												
36-42 MHz	33 MHz												
42-50 MHz	38 MHz												
13.	F	J601-Pin 7	Greater than 0.1 VDC	Apply a 1000-microvolt signal on blanker frequency to antenna jack J551. The meter reading should be greater than 0.1 VDC.									
SQUELCH ADJUST													
14.		R901		Set SQUELCH ADJUST control R901 to open with a 6 dB SINAD signal (approximately 30° counter-clockwise of critical squelch position).									

ALIGNMENT PROCEDURE

30—50 MHz
MASTR CUSTOM MVP RECEIVER
WITH NOISE BLANKER

TEST PROCEDURES

These Test Procedures are designed to help you to service a receiver that is operating---but not properly. The problems encountered could be low power, poor sensitivity, distortion, limiter not operating properly, and low gain. By following the sequence of test steps starting with Step 1, the defect can be quickly localized. Once


TEST EQUIPMENT REQUIRED

- Distortion Analyzer similar to: Heath IM-12
- Signal Generator similar to: Measurements 803
- 6-dB attenuation pad, and 3.2-ohm, 5-Watt resistor

the defective stage is pin-pointed, refer to the "Service Check" listed to correct the problem. Additional corrective measures are included in the Troubleshooting Procedure. Before starting with the Receiver Test Procedures, be sure the receiver is tuned and aligned to the proper operating frequency.

PRELIMINARY ADJUSTMENTS

1. Connect the test equipment as shown for all steps of the receiver Test Procedure.
2. Turn the SQUELCH control fully clockwise for all steps of the Test Procedure.
3. Turn on all of the equipment and let it warm up for 20 minutes.

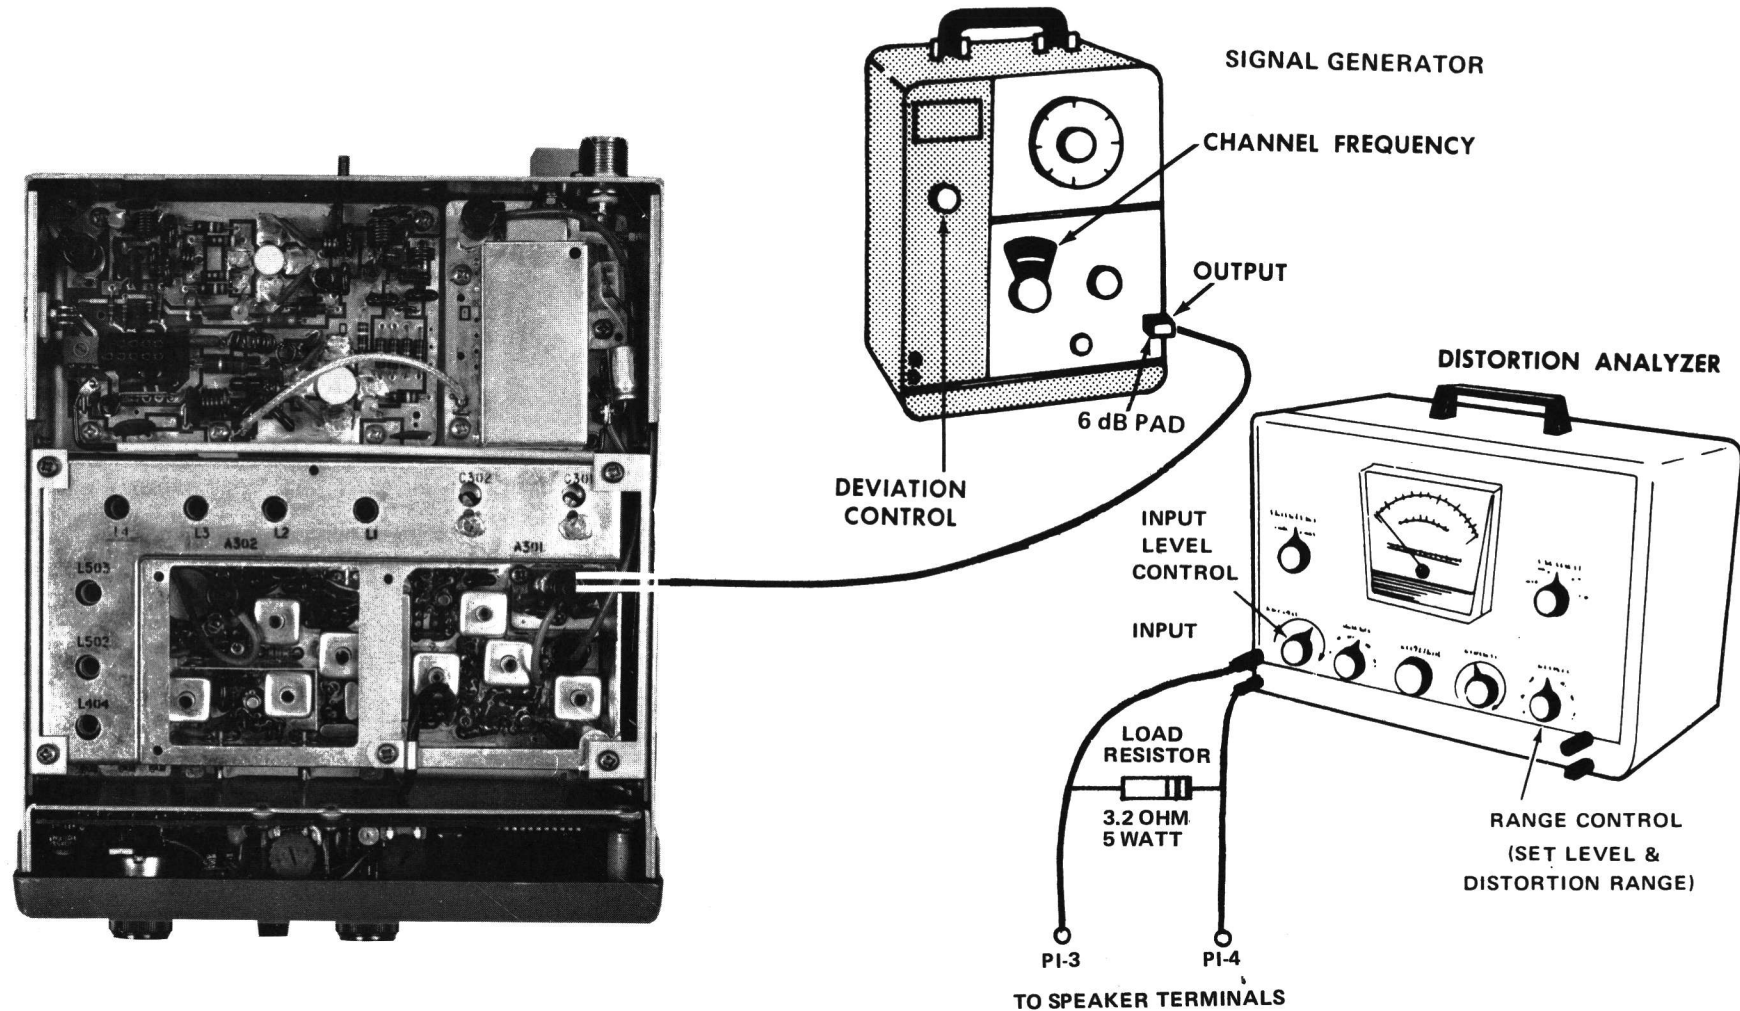

STEP 1
AUDIO POWER OUTPUT
AND DISTORTION

TEST PROCEDURE

Measure Audio Power Output as follows:

- A. Apply a 1,000-microvolt, on-frequency test signal modulated by 1,000 hertz with ± 3.0 kHz deviation to antenna jack J551.

- B. With 5-Watt Speaker:

Disconnect speaker and connect a 3.2-ohm, 5-Watt load resistor from P1-3 (speaker HI) to P1-4 (A-).

Connect the Distortion Analyzer input across the resistor as shown.

OR

With Handset:

Lift the handset off of the hookswitch. Connect the Distortion Analyzer input from P1-3 to P1-4.

- C. Adjust the VOLUME control for 3-Watt output using the Distortion Analyzer as a VTVM (3.1 Vrms).
- D. Make distortion measurements according to manufacturer's instructions. Reading should be less than 5%. If the receiver sensitivity is to be measured, leave all controls and equipment as they are.

SERVICE CHECK

If the distortion is more than 5%, or maximum audio output is less than 3.0 Watts, make the following checks.

- E. Battery and regulator voltage---low voltage will cause distortion. (Refer to Receiver Schematic Diagram for voltage.
- F. Audio Gain (Refer to Receiver Troubleshooting Procedure).
- G. FM Detector Adjustment (Refer to Receiver Alignment on reverse side of page).

STEP 2
USABLE SENSITIVITY
(12-dB SINAD)

If STEP 1 checks out properly, measure the receiver sensitivity as follows:

- A. Apply a 1000-microvolt, on-frequency signal modulated by 1000 Hz with 3.0-kHz deviation to Antenna Jack J551.

- B. Place the RANGE switch on the Distortion Analyzer in the 200 to 2000-Hz distortion range position (1000-Hz filter in the circuit). Tune the filter for minimum reading or null on the lowest possible scale (100%, 30%, etc.)

- C. Place the RANGE switch to the SET LEVEL position (filter out of the circuit) and adjust the input LEVEL control for a +2 dB reading on a mid range (30%).

- D. While reducing the signal generator output, switch the RANGE control from SET LEVEL to the distortion range until a 12-dB difference (+2 dB to -10 dB) is obtained between the SET LEVEL and distortion range positions (filter out and filter in).

- E. The 12-dB difference (Signal plus Noise and Distortion to noise plus distortion ratio) is the "usable" sensitivity level. The sensitivity should be less than rated 12 dB SINAD specifications with an audio output of at least 1.5 Watts (2.2 Vrms across the 3.2 ohm receiver load using the Distortion Analyzer as a VTVM).

- F. Leave all controls as they are and all equipment connected if the Modulation Acceptance Bandwidth test is to be performed.

SERVICE CHECK

If the sensitivity level is more than rated 12 dB SINAD, check the alignment of the RF stages as directed in the Alignment Procedure, and make the gain measurements as shown on the Troubleshooting Procedure.

STEP 3
MODULATION ACCEPTANCE
BANDWIDTH (IF BANDWIDTH)

If STEPS 1 and 2 check out properly, measure the bandwidth as follows:

- A. Set the Signal Generator output for twice the microvolt reading obtained in the 12-dB SINAD measurement.
- B. Reduce audio output to 0.3 Watt (0.98 Vrms across the 3.2 ohm receiver load).
- C. Set the RANGE control on the Distortion Analyzer in the SET LEVEL position (1000-Hz filter out of the circuit), and adjust the input LEVEL control for a +2 dB reading on the 30% range.
- D. While increasing the deviation of the Signal Generator, switch the RANGE control from SET LEVEL to distortion range until a 12-dB difference is obtained between the SET LEVEL and distortion range readings (from +2 dB to -10 dB).
- E. The deviation control reading for the 12-dB difference is the Modulation Acceptance Bandwidth of the receiver. It should be more than ± 6.5 kHz.

SERVICE CHECK

If the Modulation Acceptance Bandwidth test does not indicate the proper width, make gain measurements as shown on the Receiver Troubleshooting Procedure.

TROUBLESHOOTING PROCEDURE

STEP 1—PERFORMANCE CHECK

Before starting the Noise Blanker troubleshooting procedure, make sure the receiver is operating properly. Align the Noise Blanker circuits as described for the ALIGNMENT PROCEDURE. Perform the following checks:

Equipment Required:

- 1. RF Signal Generator coupled through a 6 dB pad.
- 2. Pulse Generator with repetition rate and level controls (Similar to General Electric Model 4EX4A10).
- 3. T-Connector.
- 4. AC VTVM or Distortion Analyzer.
- 5. Oscilloscope.

Procedure:

Noise Blanker Threshold Sensitivity

- 1. Connect Pulse Generator and RF Signal Generator to receiver antenna jack (J551) through a T-Connector, and connect AC VTVM to receive audio output (Speaker LO, P904-18, Speaker P904-19) as shown in Figure 1.
- 2. Apply an unmodulated RF signal and check the 20 dB quieting sensitivity of the receiver. (Measure with Model 4EX4A10 Pulse Generator connected but turned OFF). Then adjust the RF level for an additional 10 dB on the signal generator.
- 3. Set the pulse generator (Model 4EX4A10) for 10 KHz continuous pulses. Slowly increase the pulse output level, degrading the receiver quieting level as measured on the AC VTVM. Prior to the sudden drop in quieting, the degradation should not exceed 20 dB quieting. The noise blanking pulse may be observed where indicated on the Troubleshooting block diagram.

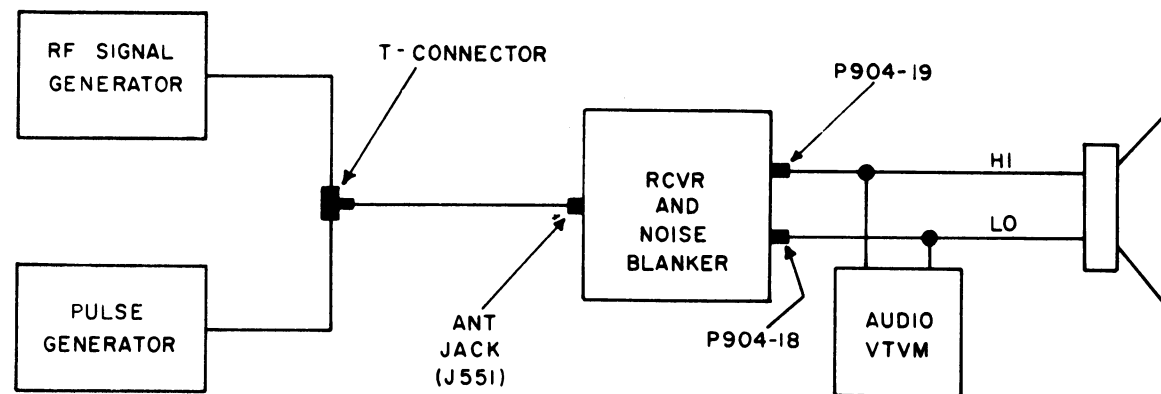


Figure 1 - Equipment Connection Diagram

IF Attenuation

- 1. Disable the noise blanker by connecting J604 on IFAS module or pin 5 of P904 to A-. (Use noise blanker disable switch on Control Unit if present).
- 2. Measure the 20 dB quieting sensitivity as in Step 2 of Threshold sensitivity measurement.
- 3. Adjust the RF output of the signal generator for 40 dB greater RF level than that established for 20 dB quieting sensitivity.
- 4. Adjust the pulse generator (Model 4EX4A10) for a repetition rate up to 30 KHz. Adjust the pulse level until the receiver is degraded to 20 dB quieting.
- 5. Remove the noise blanker disabling jumper from J604 (or if noise blanker disable switch is provided, place to operate position), and then adjust the signal generator RF level for 20 dB quieting. The receiver sensitivity should restore to within 5 dB of 20 dB quieting level obtained in Step 2.

STEP 2—QUICK CHECKS

Equipment Required:

- 1. RF Voltmeter (similar to Boonton Model 91-CA or Millivac type MV-18C).
- 2. RF Signal Generator.
- 3. AC VTVM or Distortion Analyzer.

SYMPTOMS	PROCEDURE
NO Blanking	Check voltage ratios (STEP 3)
Partial or no Blanking	a. Check IF attenuation of Noise Blanker Gates as follows: Connect signal generator to antenna jack (J551). Adjust the signal generator for on frequency signal and output level for 20 dB quieting sensitivity (Level A). Connect +10 VDC directly to the gates of Q502 and Q503. Increase the RF output level to achieve 20 dB quieting (Level B). The difference between "Level A" and "Level B" must be 60 dB or greater.
Intermodulation Interference (AGC action)	b. Check gain of Noise blanker RF circuit (IM/AGC ACTION) as follows: Connect signal generator to antenna Jack (J551). Adjust the frequency of the signal generator to the noise blanker channel frequency and adjust the RF level for 1 Millivolt (see Alignment Procedure, Step 15 for frequencies). Measure RF signal level at pin 6 of U551. This level should be 56 millivolts or greater. Apply +10 VDC through a 270 ohm resistor to the source pin of Q552 (or pin 13 of U551). (This applies approximately +3 VDC bias to Q552, simulating intermodulation AGC voltage). The RF voltage measured at pin 6 of U551 should be approximately 1.8 millivolts (Corresponds to approx. 30 dB decrease of gain in RF amplifier Q552).

STEP 3—VOLTAGE RATIO READINGS

Equipment Required:


- 1. RF Voltmeter (Similar to Boonton Model 91-CA or Millivac Type MV-18C).
- 2. Signal generator.

Procedure:

- 1. Connect signal generator to Antenna Jack (J551). Adjust the frequency of the signal generator to the channel frequency of the noise blanker (see Alignment procedure, Step 15). Adjust the RF level for 1 Millivolt output.
- 2. Apply probe of RF Voltmeter to Antenna Jack (J551). Peak resonant circuit L551 (Bottom Slug of T551) and take voltage reading (E1).
- 3. Move probe to input of IC-V551 (pin 6). Repeat first resonant circuit L551 (Bottom Slug of T551). Then peak resonant circuit L554 and take reading (E2).
- 4. Convert reading by means of the following formula:

$$\text{Voltage Ratio} = \frac{E2}{E1}$$

- 5. Check results with the typical voltage ratio shown on diagram.

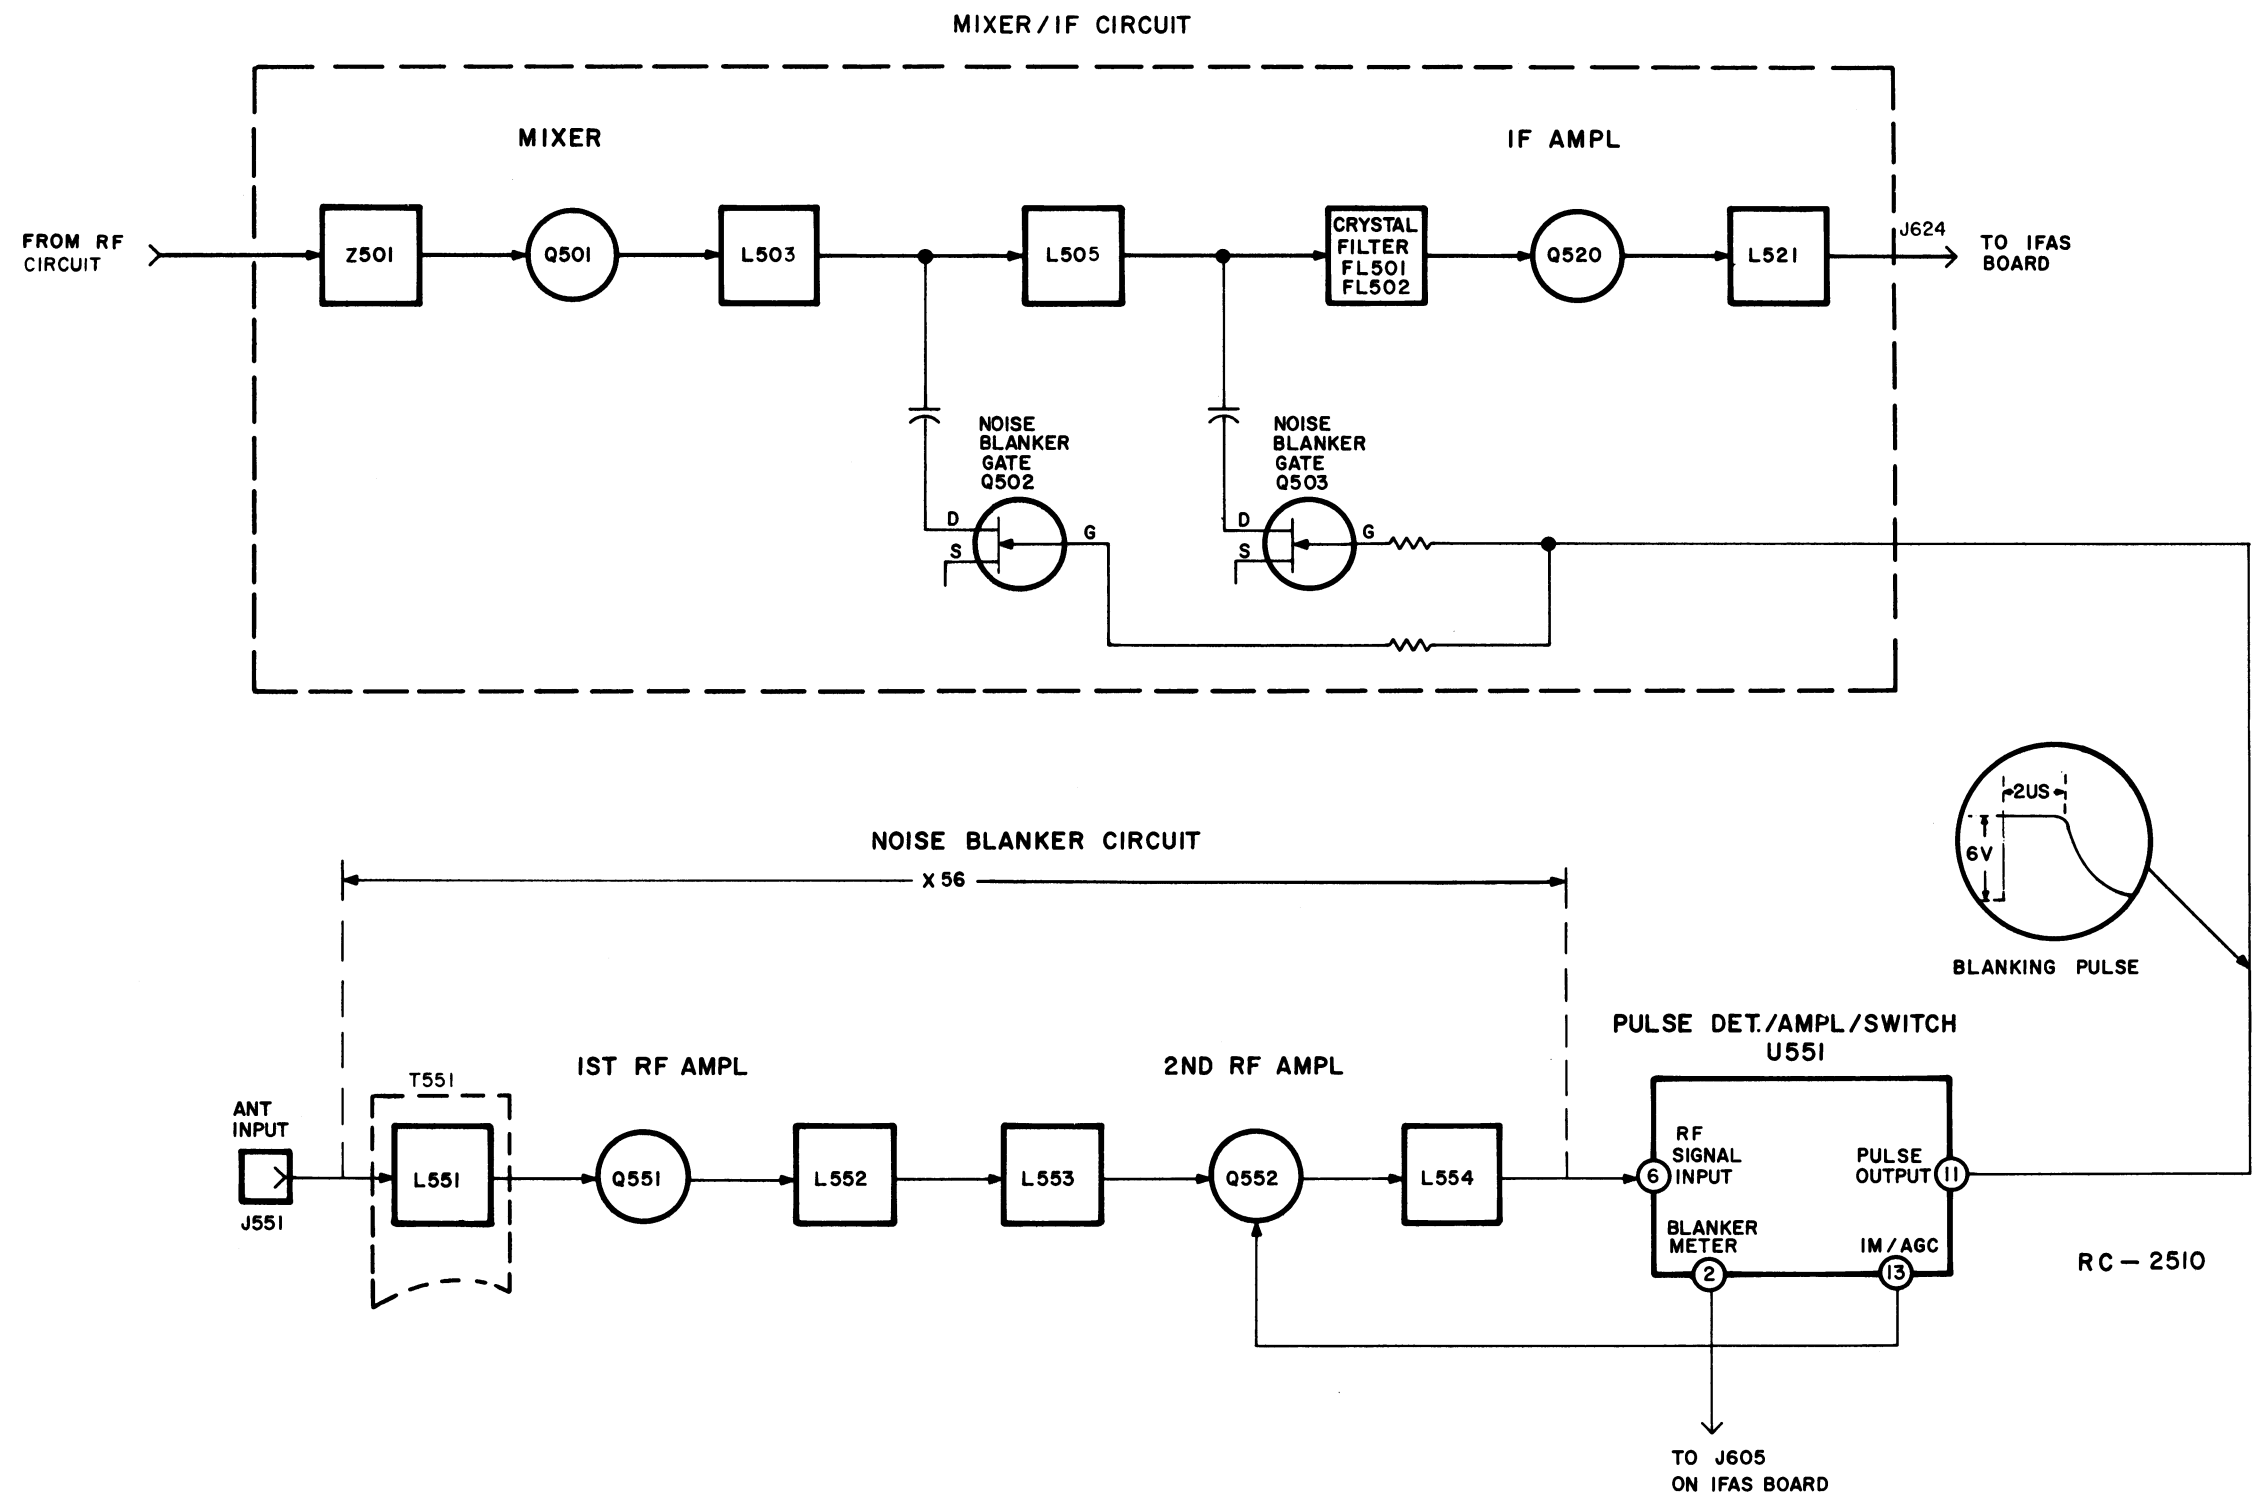

TROUBLESHOOTING PROCEDURE

30—50 MHz MASTR CUSTOM MVP RECEIVER
NOISE BLANKER CIRCUIT

STEP 1 - QUICK CHECKS

TEST SET CHECKS

These checks are typical voltage readings measured with GE Test Set Model 4EX3A11 or Test Kit Model 4EX8K12 in the position shown below:


Metering Position	Reading With No Signal In	Reading With 1 Microvolt Unmodulated	Test Position
A (FM DET)	0.35-0.50 VDC		Test 1 (or 1-Volt)
B (IF AMP)		0.2 VDC	Test 1 (or 1-Volt)
C (MULT-1)	1.5 VDC		Test 3 (or 3-Volt)
D (MULT-2)	0.4 VDC		Test 1 (or 1-Volt)
G (Reg. +10 Volts at J601)	+10 VDC		

SYMPTOM CHECKS

SYMPTOM	PROCEDURE
NO SUPPLY VOLTAGE	<ul style="list-style-type: none"> Check power connections, continuity of supply leads, and fuse. If fuse is blown, check receiver for short circuits.
NO REGULATED 10-VOLTS	<ul style="list-style-type: none"> Check the 12-Volt supply. Then check 10-Volt regulator circuit. (See Troubleshooting Procedure for 10-Volt Regulator).
LOW 1ST LIM READING	<ul style="list-style-type: none"> Check supply voltages and then check oscillator readings at J601 as shown in STEP 2. Make SIMPLIFIED VTM GAIN CHECKS from Mixer through 1st Limiter stages as shown in STEP 2.
LOW OSCILLATOR/MULTIPLIER READINGS	<ul style="list-style-type: none"> Check alignment of Oscillator/Multiplier. (Refer to Front End Alignment Procedure). Check voltage readings of Oscillator/Multiplier (Q402, Q403, Q404).
LOW RECEIVER SENSITIVITY	<ul style="list-style-type: none"> Check Front End Alignment. (Refer to Receiver Alignment Procedure). Check antenna connections, cable and antenna relay. Check oscillator injection voltage. Check voltage readings of Mixer and IF Amp. Make SIMPLIFIED GAIN CHECKS (STEP 2).
IMPROPER SQUELCH OPERATION	<ul style="list-style-type: none"> Check voltages on Schematic Diagram. Make gain and waveform checks with noise. Make gain and waveform checks with 6 kHz signal. Check discrete components in the squelch circuit.
LOW OR DISTORTED AUDIO	<ul style="list-style-type: none"> Check voltages on Schematic Diagram. Make gain and waveform checks. Check receiver and alignment and FM DET output. Check Q601, Q602, Q603 and other discrete components. Check AR901 on SAS board.

STEP 4-VOLTAGE RATIO READINGS

- EQUIPMENT REQUIRED
- RF VOLT-METER (SIMILAR TO BOONTON MODEL 91-CA OR MILLIVAC TYPE MV-18C).
 - SIGNAL ON RECEIVER FREQUENCY (BELOW SATURATION). USE 1000 HERTZ SIGNAL WITH 30 KHZ DEVIATION.
- PROCEDURE:
- APPLY PROBE TO INPUT OF STAGE (FOR EXAMPLE, SOURCE OF RF AMP) PEAK RESONANT CIRCUIT OF STAGE BEING MEASURED AND TAKE VOLTAGE READING (E₁).
 - MOVE PROBE TO INPUT OF FOLLOWING STAGE (MIXER). REPEAT FIRST RESONANT CIRCUIT THEN PEAK CIRCUIT BEING MEASURED AND TAKE READING (E₂).
 - CONVERT READINGS BY MEANS OF THE FOLLOWING FORMULA:
VOLTAGE RATIO: $\frac{E_2}{E_1}$
 - CHECK RESULTS WITH TYPICAL VOLTAGE RATIOS SHOWN ON DIAGRAM.

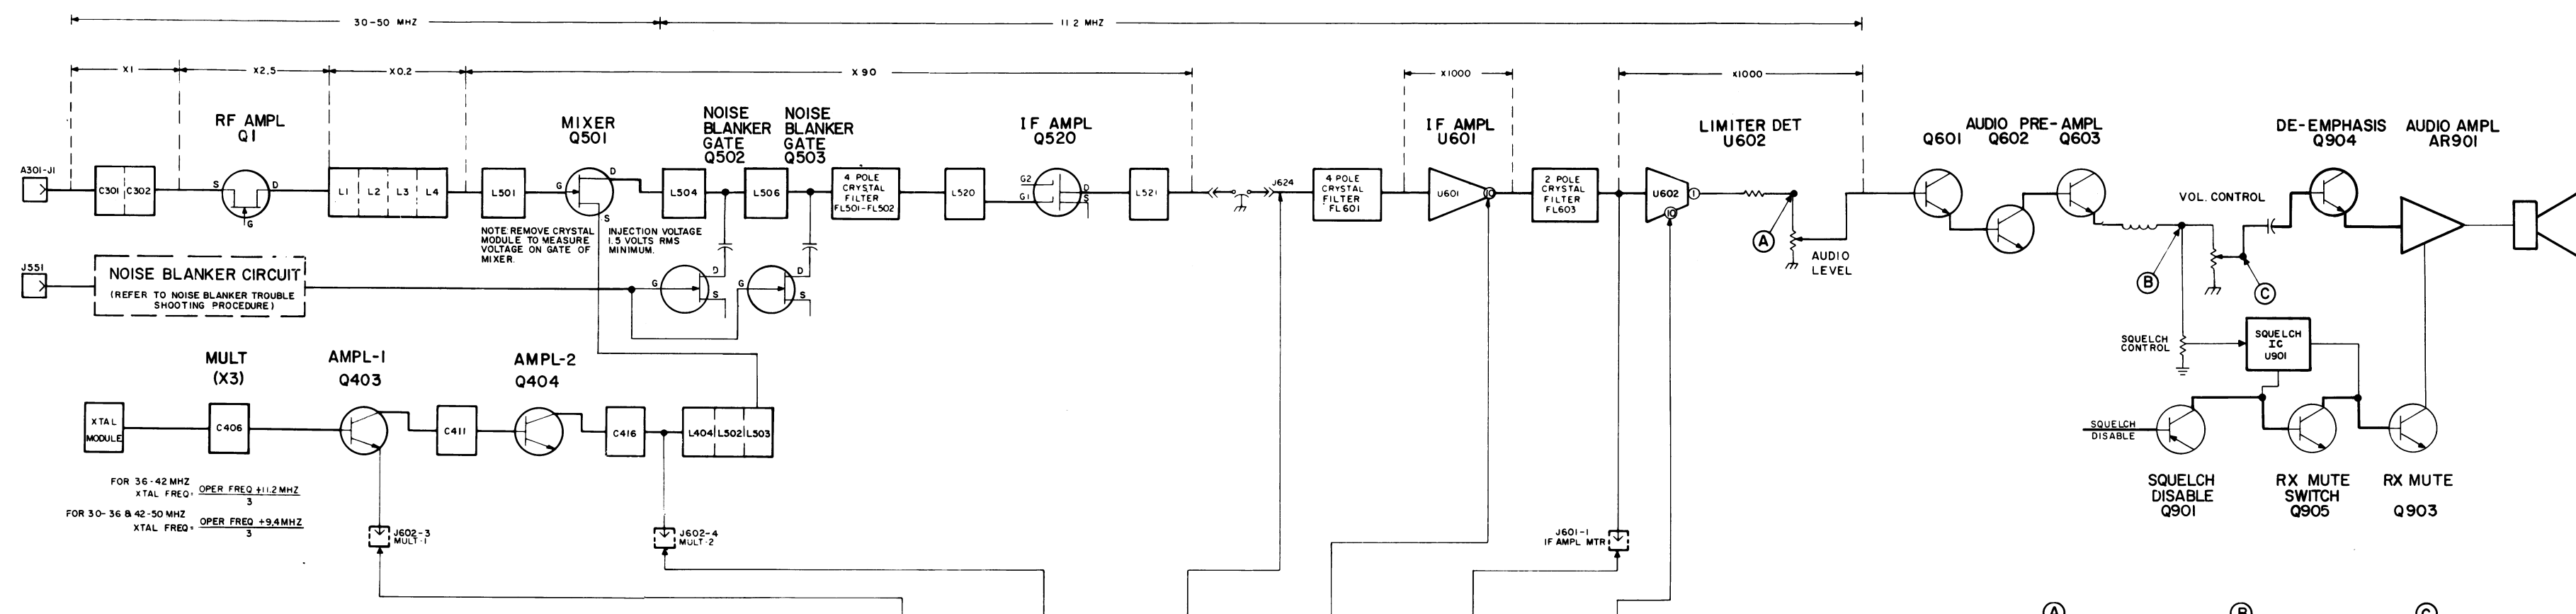


STEP 2-SIMPLIFIED GAIN CHECKS

- EQUIPMENT REQUIRED
- VTVM - AC & DC
 - SIGNAL GENERATOR (MEASUREMENTS 803 OR EQUIVALENT).
 - RF VOLT-METER
- PRELIMINARY STEPS
- SET VOLUME CONTROL FOR 3.1 VOLTS ACROSS 32-Ω OHM LOAD. IF THIS CANNOT BE OBTAINED, SET TO APPROX. 70% OF MAX. ROTATION.
 - SET SQUELCH CONTROL FULLY COUNTERCLOCKWISE
 - RECEIVER SHOULD BE PROPERLY ALIGNED
 - CONNECT METER BETWEEN A- AND POINTS INDICATED BY ARROW.


SET SIGNAL GENERATOR TO CORRECT RF FREQUENCY AND APPLY TO A301-J1						
PROCEDURE						
READING	VTVM READING SHOULD BE APPROX 1.7 VDC	VTVM READING SHOULD BE APPROX 0.9 VDC	RF VOLT-METER READING SHOULD BE APPROX 200 MILLIVOLTS	GENERATOR OUTPUT SHOULD BE APPROX 40 MICROVOLTS (10 MICROVOLTS WITH PREAMP)	VTVM READING SHOULD BE APPROX 0.54 VDC	RF VOLT-METER READING SHOULD BE APPROX 0.6 V RMS

- AUDIO WAVEFORMS
STANDARD SIGNAL
- 1 MV OF RF
 - 1 KHZ MOD
 - 3 KHZ DEV
 - VOLUME CONT SET FOR RATE! OUTPUT (4 VRMS)

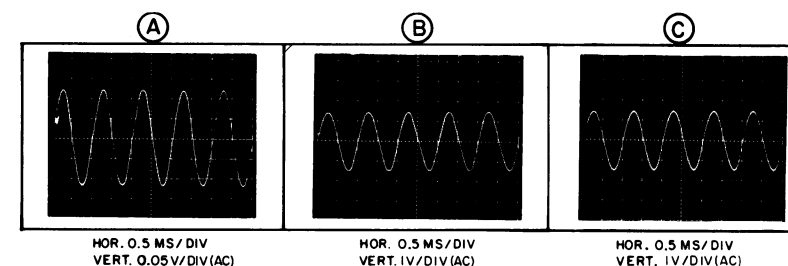


STEP 3-AUDIO & SQUELCH WAVEFORMS

- EQUIPMENT REQUIRED:
- OSCILLOSCOPE CONNECTED BETWEEN A- AND POINTS INDICATED BY ARROW.
 - SIGNAL GENERATOR MEASUREMENTS 8803 OR EQUIVALENT.
 - 6 KHZ GENERATOR

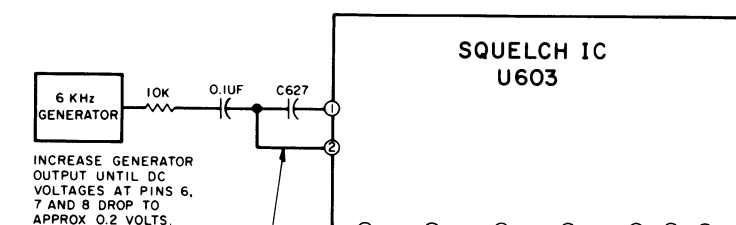


SQUELCH CIRCUIT CHECKS WITH 6 KHZ SIGNAL:

- PRELIMINARY STEPS
- QUIET RECEIVER WITH A 1000 MICROVOLT, UNMODULATED SIGNAL.
 - SET SQUELCH CONTROL TO APPROX MID-RANGE.
 - APPLY 6 KHZ SIGNAL TO PIN 1 AS SHOWN, AND CHECK WAVEFORMS (A) THRU (D).

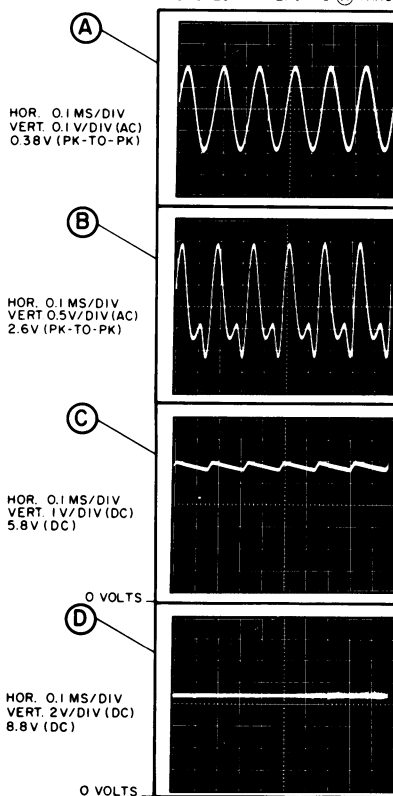

SQUELCH CIRCUIT CHECK WITH NOISE:

- PRELIMINARY STEPS
- NO INPUT SIGNAL APPLIED.
 - SET SQUELCH CONTROL FOR CRITICAL SQUELCH.
 - CHECK WAVEFORMS (A) THRU (D).

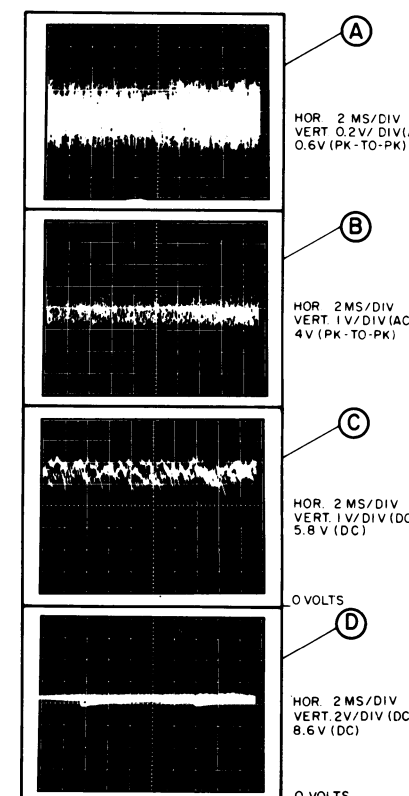

TROUBLESHOOTING PROCEDURE

30—50 MHZ MASTR CUSTOM MVP RECEIVER
WITH NOISE BLANKER