

MASTR CUSTOM ME

MAINTENANCE MANUAL

AC POWER SUPPLY (OPTIONS 1901-1904)



SPECIFICATIONS *

OUTPUT VOLTAGE

Standby Receive Transmit

INPUT VOLTAGE

Option 1901 Option 1902

DIMENSIONS (HXWXD)

WEIGHT

16.4 VDC @ 0.5 Ampere 16.0 VDC @ 1.0 Ampere 13.3 VDC @ 6.0 Ampere

121 VAC, 60 Hertz only 100-247 VAC, 50 or 60

3.5"X8.4"X10.6"

13 lbs.

*These specifications are intended primarily for the use of the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

TABLE OF CONTENTS

SPECIFICATIONS	Cover
DESCRIPTION	1
CIRCUIT ANALYSIS	1
TROUBLESHOOTING PROCEDURE	1
OUTLINE DIAGRAM	2
SCHEMATIC DIAGRAM (Includes Parts List and Production Changes)	3-4

WARNING -

No one should be permitted to handle any portion of the equipment that is supplied with high voltage; or to connect any external apparatus to the units while the units are supplied with power. KEEP AWAY FROM LIVE CIRCUITS!

DESCRIPTION

The AC Power Supply option is required when the Custom MVP radio is used as a base station. The supply is housed similar to the radio with a front cap attached to a mounting frame. The mounting frame slides into a box-type cover. Four screws at the rear of the unit hold the frame to the cover.

A speaker grille is molded into the front cap of the supply. A speaker and a green POWER ON Light Emitting Diode (LED) indicator are provided with the unit. The radio may be stacked on top of the supply or the two units may be located side-by-side. A 15-inch 6-conductor cable connects between the supply and the radio.

Options 1901 and 1903 provide a 19D423793G1 Power Supply for use with 121 VAC, 66 Hertz only. Option 1901 is a factory option which deletes the standard radio power cable, mounting bracket and speaker, replacing these items with the AC supply. Option 1903 provides the supply for field applications.

Options 1902 and 1904 provide a 19D423793G2 supply. This supply contains a multitap transformer which allows strapping for 100, 110, 123.5, 200, 220 or 247 VAC at either 50 or 60 Hertz. Option 1902 deletes the standard radio power cable, mounting bracket and speaker, replacing these items with the AC supply. Option 1904 provides the 19D423793G2 supply for field applications.

An ON-OFF power switch and an AC line fuse are located on the rear of the power supply. Normally the switch is left in the ON position and the power to the radio is controlled by the power ON-OFF switch on the radio front panel.

CIRCUIT ANALYSIS


When the ON-OFF switch S801 (on the rear of the power supply), is in the ON position, 121 VAC is connected to the primary of T801 (Power Supply 19D423793G1) or T802 (Power Supply 19D423793G2). The secondary of the transformer applies the stepped-down voltage to the bridge rectifier (CR1-CR4) located on the component board A801. Some filtering of the rectified voltage is provided by L801 and C801.


The rectifier output is applied to the collectors of Q2 (on the component board A801) and Q801. In the transmit mode, Q2 and Q801 operate as a filter for the voltage applied to the transmitter PA. In this condition, the pass transistor Q801 is switched on to saturation. If line transients occur which may damage the transmitter transistors, Q801 will react to limit the transients to a safe level.


In the receive mode, the circuit acts as a limiter for the receiver supply voltage. If the output of Q801 starts to rise, Zener diode VR1 (in the base of Q3) breaks down and Q3 starts conducting. This causes Q801 and Q2 to conduct less, limiting the voltage to the receiver.

TROUBLESHOOTING PROCEDURE


SYMPTOM	PROCEDURE
No output voltage or low voltage at P801-1 and P801-2	Check the following: 1. AC input voltage at S801. 2. Open F801. 3. Open T801 (T802), S801, CR1-CR4 or L801. 4. Open Q801 or Q2. If open, check for shorts between the transistor bases and A-, and for shorts between the emitters and A- before replacing. 5. Shorted VR1, Q3. 6. Shorts between positive voltage points
Voltage at P801-1 and P801-2 is too high (over 17 Volts with 0.5 Ampere load.	and A Check the following: 1. Open VR1, Q3 2. Shorted Q2 3. Open CR5

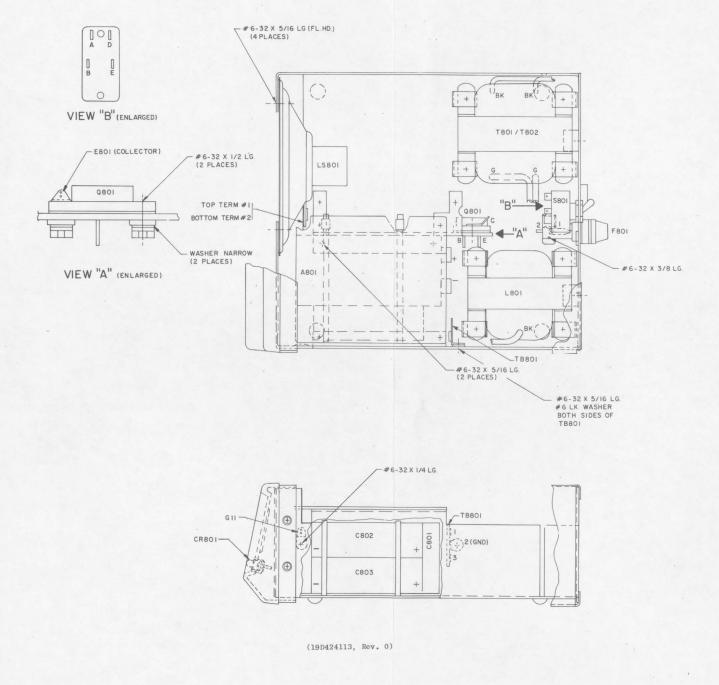

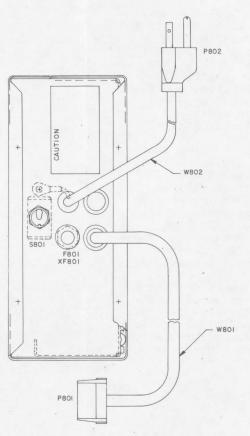

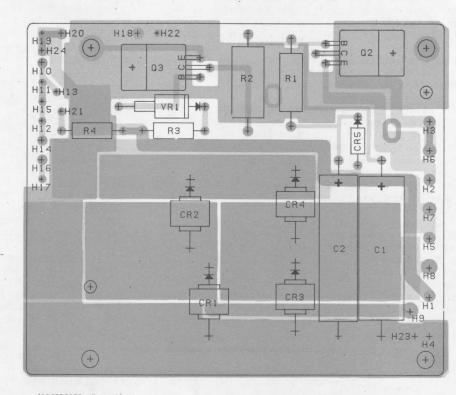

 (19C327059, Rev. 0) (19B227257, Sh. 2, Rev. 0) (19B227257, Sh. 3, Rev. 0)




OUTLINE DIAGRAM

AC POWER SUPPLY

2

Issue 1

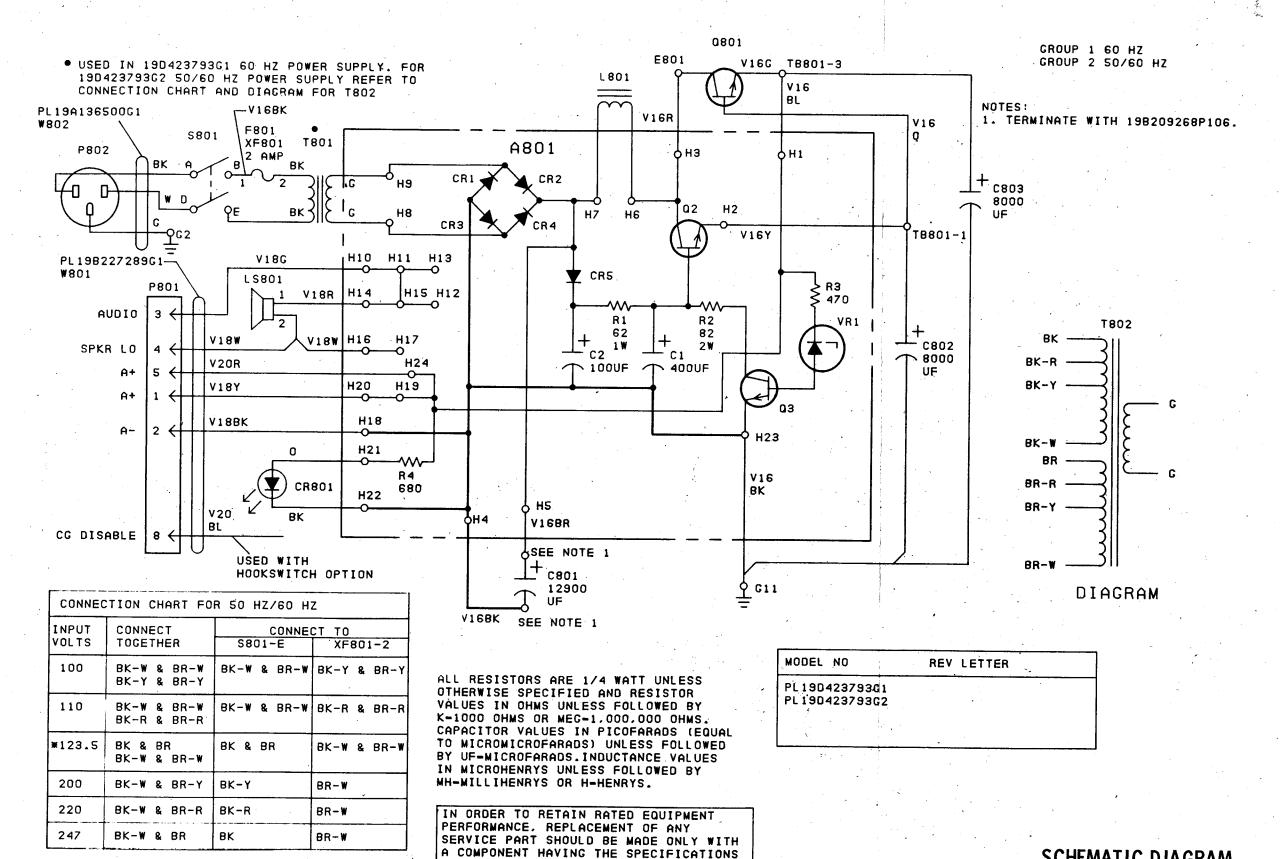

(19C327013, Rev. 2)

SHOWN ON THE PARTS LIST FOR THAT PART.

* CONNECTED AT FACTORY FOR 123.5 VAC INPUT.

INDIVIDUALLY SLEEVE ALL UNUSED WIRES.

SCHEMATIC DIAGRAM

AC POWER SUPPLY

PARTS LIST

LBI-30171

MASTR CUSTOM MVP AC POWER SUPPLY 19D423793G1 60 Hz 19D423793G2 50 Hz

SYMBOL	GE PART NO.	DESCRIPTION
A801	·	POWER SUPPLY BOARD 19C321990G1
C1	19A115680P24	Electrolytic: 400 µf +150% -10%, 18 VDCW; sim to Mallory Type TTX.
C2	19A115680P5	Electrolytic: 100 µf +150% -10%, 25 VDCW; sim to Mallory Type TTX.
		DIODES AND RECTIFIERS
CR1 thru CR4	19A116783P1	Silicon,
CR5	4037822P1	Silicon.
	:	TRANSISTORS
Q2 and Q3	19A116118P1	Silicon, NPN.
	İ	
R1	3R78P620J	Composition: 62 ohms ±5%, 1 w.
R2	3R79P82OJ	Composition: 82 ohms ±5%, 2 w.
R3	3R77P471E	Composition: 470 ohms ±10%, 1/2 w.
R4 .	3R77P681K .	Composition: 680 ohms ±10%, 1/2 w.
VR1	19A115528P6	VOLTAGE REGULATORS
ARI	19811352870	Silicon, Zener.
C801	5496520P21	Electrolytic: 12,900 μf +100% -10%, 40 VDCW; sim to GE Type 43F.
C802 and C803	5493132P17	Electrolytic: 8000 μf +150%, -10%, 20 VDCW.
	,	DIODES AND RECTIFIERS
CR801	198219800G5	Diode, red light emitting.
		TERMINALS
E801	4036994P1	Terminal, solder: sim to Zierick Mfg Corp 505.
F801	1R16P5	Quick blowing, cartridge: 2 amp 250 v; sim to Littelfuse 312002 or Bussmann AGC -2.
L801	19A134314P2	Reactor: 4.5 mh min, 0.1 ohm DC res max.
LS801	19C307094Pl	Permanent magnet: 3.2 ohms ±10% voice coil imp, 3 x 5 inch speaker; sim to Caktron S7473.
	,	PLUGS
P801		(Part of W801).
P802		(Part of W802).
Q801	19A116753P1	Silicon, NPN; sim to Type 2N5302.
¥		,
		<i>'</i>
	1,	

SYMBOL	GE PART NO.	DESCRIPTION
	· ·	SWITCHES
S801	5491899P2	Toggle: DPST, 6 amps at 125 VAC/VDC; sim to Cutler-Hammer 8370K8.
T801	19A134324P1	Power, step-down:
		Pri: 121 VDC, 60 Hz, Sec: 14.5 ±0.5 VDC at 6.3 amps, 60 Hz,
		Refer to schmatic for primary connections.
T802	19A134324P2	Power, step-down: Pri: 100/110/123.5/200/220/247 VDC, 50/60 Hz
		Sec: 14.5 ±0.5 VDC at 6.3 amps, 60 Hz,
		Refer to schmatic for primary connections.
		TERMINAL BOARDS
TB801	7775500P7	Phen: 2 insulated and 1 ground terminal.
W801		CABLE ASSEMBLY 19B227289G1
P801		Connector. Includes:
	19A115884P11	Shell.
	19A115884P4	Contact, electrical: sim to AMP 60510-1. (Quantity 6).
	,	i i
W802	19A136500G1	Power: 3 conductor, approx 8 feet long; sim to to Belden 17238.
		SOCKETS
XF801	19B209005P1	Fuseholder: 15 amps at 250 v; sim to Littelfuse 342012.
		MISCELLANEOUS
	19D423788P2	Front cap.
,	19B209209P304	Tap screw, Phillips Pozidriv®: No. 6-32 x 1/4.
		(Secures front cap to chassis).
•	19B201074P304	Tap screw, Phillips POZIDRIV®: No. 6-32 x 5/16. (Secures covers to housing).
	4036994Pl	Terminal, solderless: sim to Zierick Mfg Corp 50
		(Located at Gl1).
	4035267P2	Button plug. (Located on base of power supply).
	19A115185P9	Retainer strap: sim to Dennison FT-7, (Secures wires behind A801).
	19A116677P2	Bushing. (Used with CR801).
	4029851P18	Clip loop, (Located at XF801).
:	7160861P34	Nut, sheet spring: sim to Tinnerman C7159-8Z-24.
	1100001104	(Used with L801, T801, T802).
	N193P1408C6	Tap screw: No. 8-18 x 1/2. (Secures L801, T801, T802).
	4029974P1	Insulator, plate. (Used with Q801).
	19A121882P1	Washer, shield. (Used with Q801).
	7115195P1	Hex nut: 15/32-32. (Used with \$801).
	7115130P11	Lockwasher: No. 15/32; sim to Shakeproof 1222-1.
		(Used with S801).
	19A116768P8	Bushing, strain relief. (Used with W802).
	NP280158A	Nameplate, aluminum foil. (60 Hz GE identification).
	NP280158B	Nameplate, aluminum foil. (50 Hz GE identifica-
	NP280161	tion). Nameplate. (Caution).
	NP280156	Nameplate, etched aluminum. (GE monogram).
	1	J ·
	•	
		}
		·
	Ī	[·