

# MAINTENANCE MANUAL

## S-500 SERIES CONTROL UNIT

Single Frequency w/o Options 19D423590G11

Single Frequency with Options 19D423590G12

1-8 Frequency with Options 19D423590G13

1-16 Frequency with Options 19D423590G14



### SPECIFICATIONS \*

#### CONTROLS

OFF-VOLUME  
SQUELCH OR SQUELCH Monitor  
CHANNEL Selector (19D423590G13-14)  
MODE SELECTOR  
Option Switches

#### INDICATORS

Red Transmit Light  
Green Call Light (Optional)  
Yellow Channel Busy Light (Optional)  
Channel Indicator (19D423590G13-14)  
Red Mode Light (Optional)

\*These specifications are intended primarily for the use of the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

## TABLE OF CONTENTS

SPECIFICATIONS .....	Cover
COMBINATION NOMENCLATURE .....	iii
DESCRIPTION .....	1
CIRCUIT ANALYSIS .....	1
Channel Selector .....	1
Mode A/B Selector .....	1
OPTIONS .....	2
Channel Busy .....	2
Squelch .....	2
Internal/External Speaker .....	2
Public Address .....	3
Type 99 Tone Decoders .....	3
Type 90 Tone Encoder and Decoders .....	3
Dual Control .....	3
Universal Tone Jack .....	4
Extender Board .....	4
MAINTENANCE .....	4
Disassembly .....	4
Re-Installation .....	4
OUTLINE DIAGRAMS .....	7-8
SCHEMATIC DIAGRAMS (With Parts Lists) .....	9-10
MECHANICAL BREAKDOWN .....	10
OPTION APPLICATION .....	11-13
POWER/CONTROL CABLES .....	14-18

## ILLUSTRATIONS

Figure 1 - Control Unit Layout .....	2
Figure 2 - Using Extraction Tool .....	5
Figure 3 - 12-Volt, Negative Ground Connections .....	5
Figure 4 - 12-Volt, Positive Ground Connections .....	6

## WARNING

Although the highest DC voltage in the Control Unit is supplied by the vehicle battery, high currents may be drawn under short circuit conditions. These currents can possibly heat objects such as tools, rings, watchbands, etc., enough to cause burns. Be careful when working near energized circuits!

 
High-level RF energy in the Transmitter Power Amplifier assembly can cause RF burns upon contact. Keep away from these circuits when the transmitter is energized!

**COMBINATION NOMENCLATURE**

DIGITS 1 & 2	DIGIT 3	DIGIT 4	DIGIT 5	DIGIT 6
Product Code	Frequency Capacity	Mode Selection	Control Unit Application	Configuration
<b>S5</b>	<b>A</b> 1-Frequency	<b>O</b> Standard (None)	<b>B</b> Delta-S	<b>O</b> STANDARD
	<b>K</b> 1-8 Frequencies	<b>1</b> Mode A/B		
	<b>T</b> 1-16 Frequencies			

**STRUCTURED OPTIONS**

DIGIT B	DIGIT C	DIGIT E	DIGIT H	DIGIT L	DIGIT M	DIGIT P	DIGIT R	DIGIT S	DIGIT T
Universal Tone Cable	Option	Carrier Activity Light	Hangup/ Hookswitch	External Relay	Microphone	Squeich	Accessories	Speaker	Ignition Cable
<b>O</b> None	<b>O</b> None	<b>O</b> None	<b>O</b> Hangup Brkt.	<b>O</b> None	<b>O</b> Standard	<b>O</b> Fixed (Standard)	<b>O</b> Standard	<b>O</b> Delta Standard	<b>O</b> W/O Ign Standby
<b>A</b> Univ. Dec. or Enc. Conn.	<b>A</b> Type 90 Encoder	<b>A</b> Carrier Activity Light	<b>1</b> Hookswitch	<b>A</b> External Relay	<b>1</b> Mastr II	<b>V</b> Variable	<b>1</b> 3 Mtr. Cable Short Ground	<b>1</b> 3 x 5 Window	<b>1</b> With Ign Standby
<b>C</b> Univ. Enc./ Dec. Cable	<b>B</b> Type 90 Decoder		<b>2</b> Hndst. Hldr.		<b>2</b> Mastr II Noise Canc.		<b>2</b> 9 Mtr. Cable Short Ground	<b>4</b> Delta 3 x 5	
	<b>C</b> Type 90 Enc./Dec.		<b>3</b> Hndst. Hksw.		<b>3</b> Handset		<b>3</b> 6 Mtr. Cable Long Ground	<b>5</b> Ext. Spkr. 8 Ohm	
	<b>E</b> Type 99 Dec. (Ind.)				<b>4</b> None		<b>N</b> No Accessories	<b>6</b> No Speaker	
	<b>M</b> Int./Ext. Spkr. Sw.						<b>C</b> No Cables		
	<b>N</b> Type 99 Dec. (Group)								
	<b>P</b> Type 90 Enc. (Burst)								
	<b>R</b> Dual Cont. Sw.								
	<b>T</b> GE-STAR Encoder								
	<b>U</b> Public Address								



## DESCRIPTION

S-500 Series Control Units are attractively styled, highly functional units that are enclosed in a two-piece molded Lexan® plastic housing for durability and ease of disassembly. The Control Units are mounted to the vehicle with a Safety Release mounting bracket assembly for passenger safety.

The Control Unit uses a printed wiring board to provide a minimum of wiring. The only internal wires used are on the indicator lights and jumpers for various options.

Cable plugs are secured to the back of the Control Unit by plastic locking clips. The plugs are equipped with indexing tabs to assure connection to the correct jack. The cable is equipped with a strain relief hook that attaches to a steel plate on the bottom rear of the Control Unit.

The microphone plug is secured to a jack on the bottom of the unit by means of a captive locking screw.

All indicator lights are light-emitting diodes (LEDs) for reliability, long life, and low power consumption.

### NOTE

Delta-S radios must be equipped with Option 'CN', interface board when used with the S-500 Control Unit.

## CIRCUIT ANALYSIS

The Control Units are equipped with an OFF-VOLUME control, SQUELCH control and a CHANNEL selector switch in multiple frequency control units.

When the OFF-VOLUME switch (S709) is in the OFF position, power is removed from the radio except for the transmitter PA, which is connected to the vehicle battery at all times. Turning the switch on applies power to the radio, provides power for the push-to-talk (PTT) circuit and lights the seven-segment Channel Indicator display.

Releasing the PTT switch turns off the transmitter and transmit indicator, de-energizes the antenna switch and unmutes the receiver.

CR701 and CR708 are protective diodes. CR701 will cause the fuse in the yellow lead to blow if the polarity is reversed. CR708 inhibits the PTT circuit if the polarity is reversed.

## CHANNEL SELECTOR SWITCH (S711/S712)

The channel selector switch is an 8-position (S711) or a 16-position (S712) rotary switch with binary output to control channel selection.

The channel selector switch selects the desired channel for transmitting and receiving. One section of the switch connects A- per binary code output to FB1, 2, 3, 4 or 5 in Mode B and thence to the Microcomputer and EEPROM in the radio. The EEPROM and Microcomputer select the channel frequencies according to the binary code (See BCD output in Table 1).

A second section of the rotary switch controls the seven-segment display element(s).

Table 1

POS	BCD OUTPUT				7 SEGMENT OUTPUT
	8'S	4'S	2'S	1'S	
F1	0	0	0	1	1
F2	0	0	1	0	2
F3	0	0	1	1	3
F4	0	1	0	0	4
F5	0	1	0	1	5
F6	0	1	1	0	6
F7	0	1	1	1	7
F8	1	0	0	0	8
F9	1	0	0	1	9
F10	1	0	1	0	10
F11	1	0	1	1	11
F12	1	1	0	0	12
F13	1	1	0	1	13
F14	1	1	1	0	14
F15	1	1	1	1	15
F16	0	0	0	0	16

1 = X  
0 = BLANK

X = COMMON CONNECTED (CLOSED)

BLANK = OPEN TO COMMON

## MODE A/B SELECT SWITCH (S705)

The Mode A/B Select Switch allows the S-500 Control Unit to expand from 8

or 16-frequency control to 16 or 32-frequency control. The rocker switch S705 is pushed either to A or B as marked on front panel nameplate. In the A position the Channel Select Switch will select up to 8 or 16 channels as programmed in the radio (A) EEPROM. In the B position a red LED is illuminated on the lower left side of the front panel. The Channel Select Switch will select a second set of up to 8 or 16 channels as programmed in the radio second (B) EEPROM. In the B Mode, A- (low) is applied through frequency bit 5 (FB5) output to port 26 of Microcomputer U705 in the Delta-S radio.

## NOTE

To utilize the A/B Mode, there must be two EEPROMS in the associated DELTA-S radio. The Mode A channels are controlled by EEPROM 1 and the Mode B channels are controlled by EEPROM 2.

## OPTIONS

S-500 control units may be equipped with different options. All controls and indicator lights (LEDs) are shown in Figure 1.

## CHANNEL BUSY INDICATOR

When no signal is applied to the radio receiver, the Carrier Activity Sensor (CAS) voltage from the receiver squelch IC is near A-. This forward

biases diode CR702 in the control unit, keeping Q701 turned off. When a signal is applied to the receiver (with or without audio), the CAS voltage rises to approximately 10 Volts. This reverse biases CR702, allowing Q701 to conduct, turning on Channel Busy Indicator CR706. The indicator will remain on as long as a signal is applied to the receiver, or until the transmitter is keyed.

## SQUELCH

Squelch control may be used fixed (standard) or variable. The fixed squelch threshold is set in the radio (see radio Maintenance Manual). Jumper N between H97 and H98 in the Control Unit must be present and switch S710 must be closed (CCW).

Variable squelch threshold is set and controlled in the Control Unit. Jumper P between H95 and H96 is present and jumper N is deleted. Also see jumper configuration in the radio Maintenance Manual. Rotating variable resistor R710 clockwise opens switch S710 and adjusts squelch threshold level. Set R710 fully clockwise and adjust noise level with VOLUME control R709. Turn SQUELCH control R710 CCW until receiver is muted.

## INTERNAL/EXTERNAL SPEAKER

For radios equipped with the Internal/External Speaker option, the Control Unit will be equipped with optional SPEAKER switch (marked INT-EXT), an Option indicator light and an Internal/External Speaker component

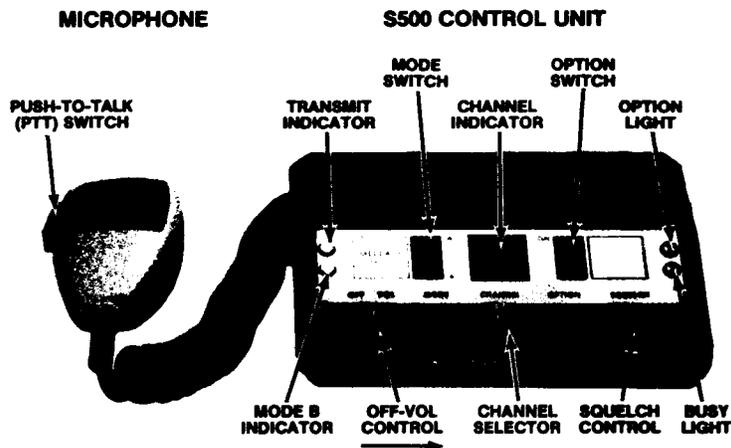


Figure 1 - Control Unit Layout

board. The radio also has an external speaker mounted outside the vehicle passenger compartment (on the roof, under the hood, etc.).

With the switch in the INT (Internal) position, all messages received will be heard on the speaker mounted in the vehicle.

Placing the switch in the EXT (External) position turns on the option light, and applies all received messages to both the external and internal speaker. This allows the received messages to be heard while the operator is inside or outside of the vehicle.

For complete details, refer to the Maintenance Manual for the Internal/External Speaker option.

#### PUBLIC ADDRESS

With the Public Address option, the Control Unit will be equipped with an optional PA-ON switch, an Option indicator light, and a Public Address component board. The vehicle will also have an additional speaker mounted outside the passenger compartment.

With the PA switch in the "OFF" position, the operator can send and receive messages as he normally does. Placing the PA switch in the ON position lights the Option light, disables the transmitter, and switches the receiver audio output to the external speaker.

Pressing the PTT switch on the microphone switches the microphone output through the receiver audio amplifier circuit so that the amplified message is heard on the external speaker only. No messages can be transmitted in this mode of operation, and all incoming messages will be heard on the external speaker.

For complete details, refer to the Maintenance Manual for the Public Address option.

#### TYPE 99 TONE DECODERS

Type 99 Tone equipment eliminates reception of unwanted calls through the use of a Sequential Tone Decoder. The equipment provides individual or group call capability using either two or four Versatone networks. (Versatone networks determine the tone frequencies that the unit responds to.

Decoder operation is controlled by the Monitor/Reset switch and/or Hookswitch. When the microphone or handset is removed from the hookswitch, the

decoder is de-activated and the receiver reverts to noise squelch operation. Replacing the microphone or handset automatically resets the receiver to respond to only those calls properly tone coded. A Decoder Call Indicator will light each time a properly coded call is received.

An optional external alarm relay is controlled by the rocker Option-ON switch. When a properly tone coded call is received and the Option switch is in the ON position, the relay will operate an external horn or light.

For complete details, refer to the Maintenance Manual for the Type 99 Tone Decoder option.

#### TYPE 90 TONE ENCODER AND DECODERS

Type 90 Tone equipment provides tone coded message transmission to eliminate reception of unwanted calls. All Type 90 Tone Encoders and Decoders operate on a single tone selectable from ten standard frequencies between 1000 and 3000 Hz.

A single tone burst automatically precedes the first transmission in the standard unit. The tone burst is initiated by removing the microphone or handset from the hookswitch and keying the PTT. The Pushbutton Tone-On switch allows the tone to be sent manually if desired.

Decoder operation is controlled by the Monitor/Reset switch and/or Hookswitch. When the microphone or handset is removed, the receiver reverts to noise squelch operation. Replacing the microphone or handset, automatically resets the unit to the decode function. A Decoded Call Indicator will light each time a properly tone coded call is received.

An optional External Alarm Relay is controlled by the rocker Option-ON switch. When a properly tone coded call is received and the Option-ON switch is in the ON position, the Relay will operate an external horn or light.

For complete details, refer to the Maintenance Manual for the Type 90 Tone Encoder/Decoder option.

#### DUAL CONTROL

The Dual Control equipment allows the radio to be operated by either of two remotely located control units. Control is transferred between control units by depressing the Control switch on the control unit where control is desired.

When the Control switch is ON, the Control Light indicates the unit with control. Control remains with this unit until the Dual Control switch on the second control unit is operated.

For complete details, refer to the Maintenance Manual for the Dual Control option.

#### UNIVERSAL TONE JACK

The Universal Tone Jack (J750) mounts on the back of the Control Unit (see Outline Diagram). The nine pin jack provides interface connections between the Control Unit and external tone equipment.

#### EXTENDER BOARD

Troubleshooting the component board options in the control unit is facilitated by using Extender Board 19C320588G1 (Option TS01). The Extender Board provides feed through for all connections between the control unit printed wire board and the option component board.

#### 12-VOLT IGNITION SWITCH CONNECTIONS

In 12-Volt vehicle systems, the Control Unit may be connected for two different modes of operation, depending on the way the ignition switch cables are connected in the vehicle system. The black cable provides the system ground connection. The yellow fused lead provides the receiver hot connections and the transmitter Push-To-Talk hot connection. The two types of operation are:

1. Ignition Switch Control - For ignition switch control, the yellow fused lead connects to the ACCESSORY or ON terminal of the ignition switch. The transmitter and receiver will operate only when the ignition switch is in the ACCESSORY or ON position. Turning the ignition switch OFF removes all power to the Control Unit.

2. Ignition Switch Bypass - For ignition switch bypass, the yellow fused lead connects to the "hot" side of the ignition switch or the vehicle fuse block assembly. Both the transmitter and receiver operate independently of the ignition switch and are turned on and off only by the OFF-VOLUME switch on the Control Unit.

#### MAINTENANCE

##### DISASSEMBLY

To gain access to the inside of the Control Unit, remove the two screws on the bottom of the front edge of the unit and lift off the top cover.

To remove the printed wiring board from the Control Unit housing:

1. Remove five screws holding the board and mounting bracket.
2. If Mode A/B or option switches are present, remove one screw in each from housing. (Leave switches fastened to mounting bracket).
3. Remove LED indicators by lifting off mounting clips.
4. Using control knobs, lift upward at the front and the remove the board.

##### RE-INSTALLATION

12-Volt Systems. Delta-S mobile combinations can operate in +12-Volt systems. If the radio is moved to a different vehicle, always check the battery polarity and voltage of the new system before using the radio.

If the radio is moved to a vehicle with different battery polarity, it will be necessary to change the ignition switch leads to the vehicle system plug. Use the extraction tool as shown in Figure 2, and change the leads as shown in Figures 3 or 4 as required.

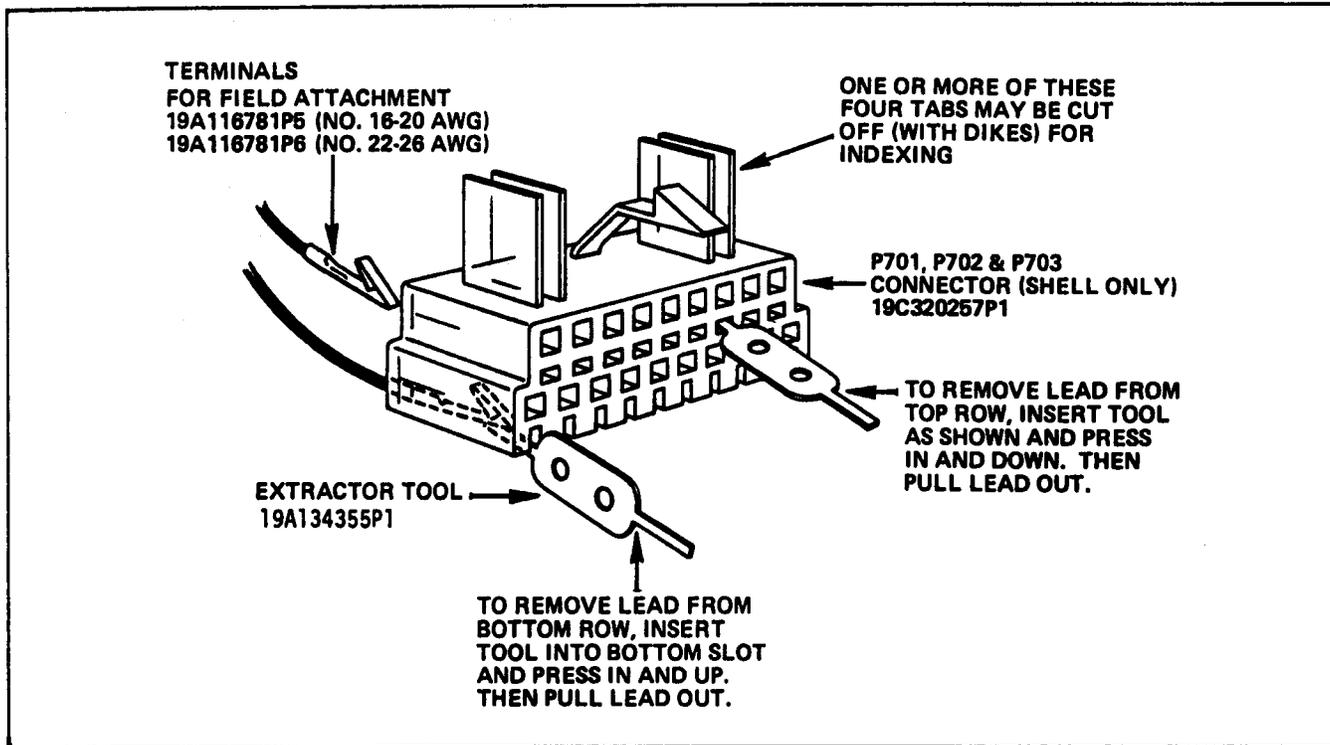


Figure 2 - Using Extraction Tool

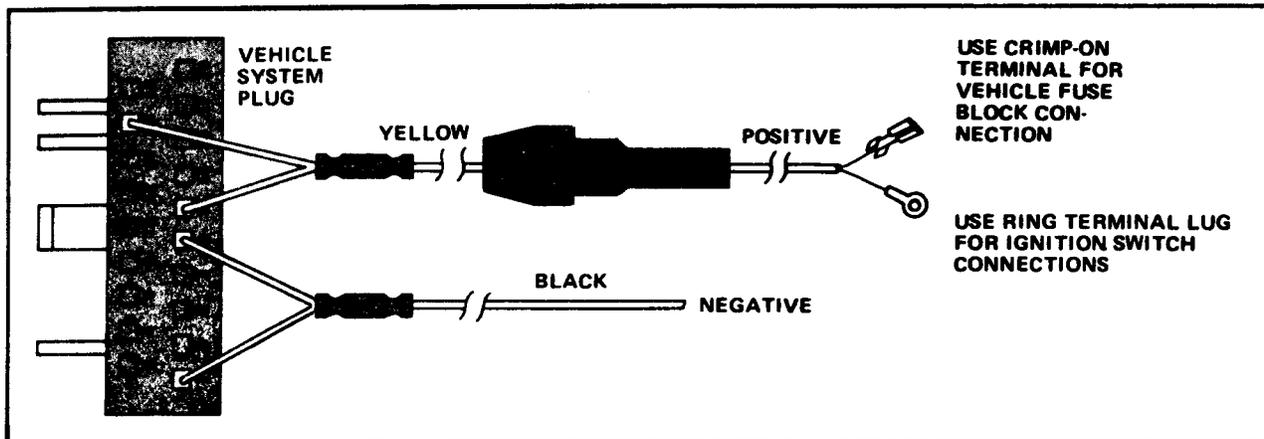


Figure 3 - 12-Volt, Negative Ground Connections


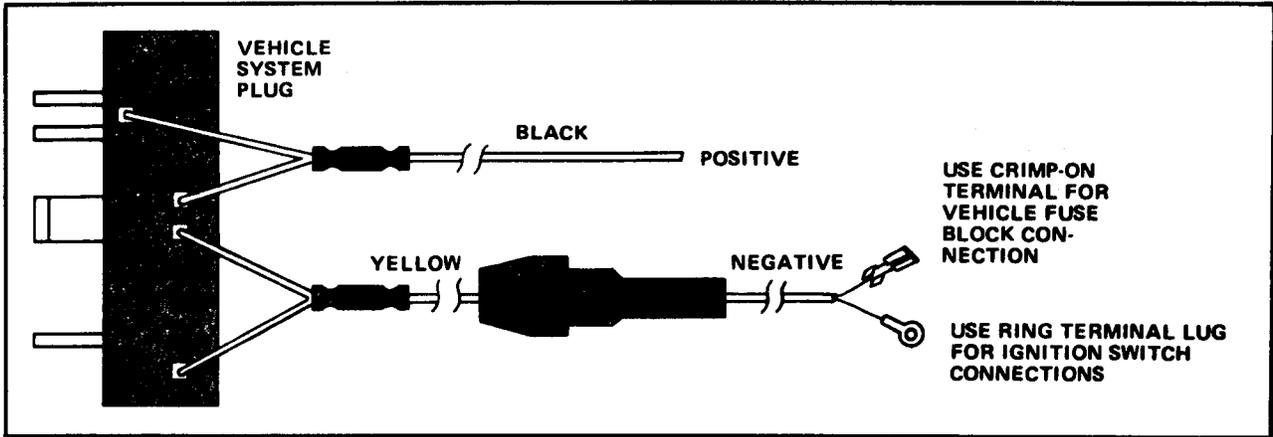


Figure 4 - 12-Volt, Positive Ground Connections




FROM	TO	REMARKS
CR710	H06	BL
CR710	H07	BK

LEAD IDENTIFICATION FOR Q701

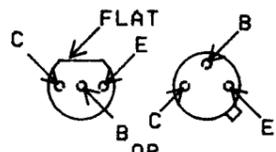

IN-LINE TRIANGULAR  
TOP VIEW

 

 
NOTE: LEAD ARRANGEMENT, AND NOT CASE SHAPE, IS DETERMINING FACTOR FOR LEAD IDENTIFICATION.

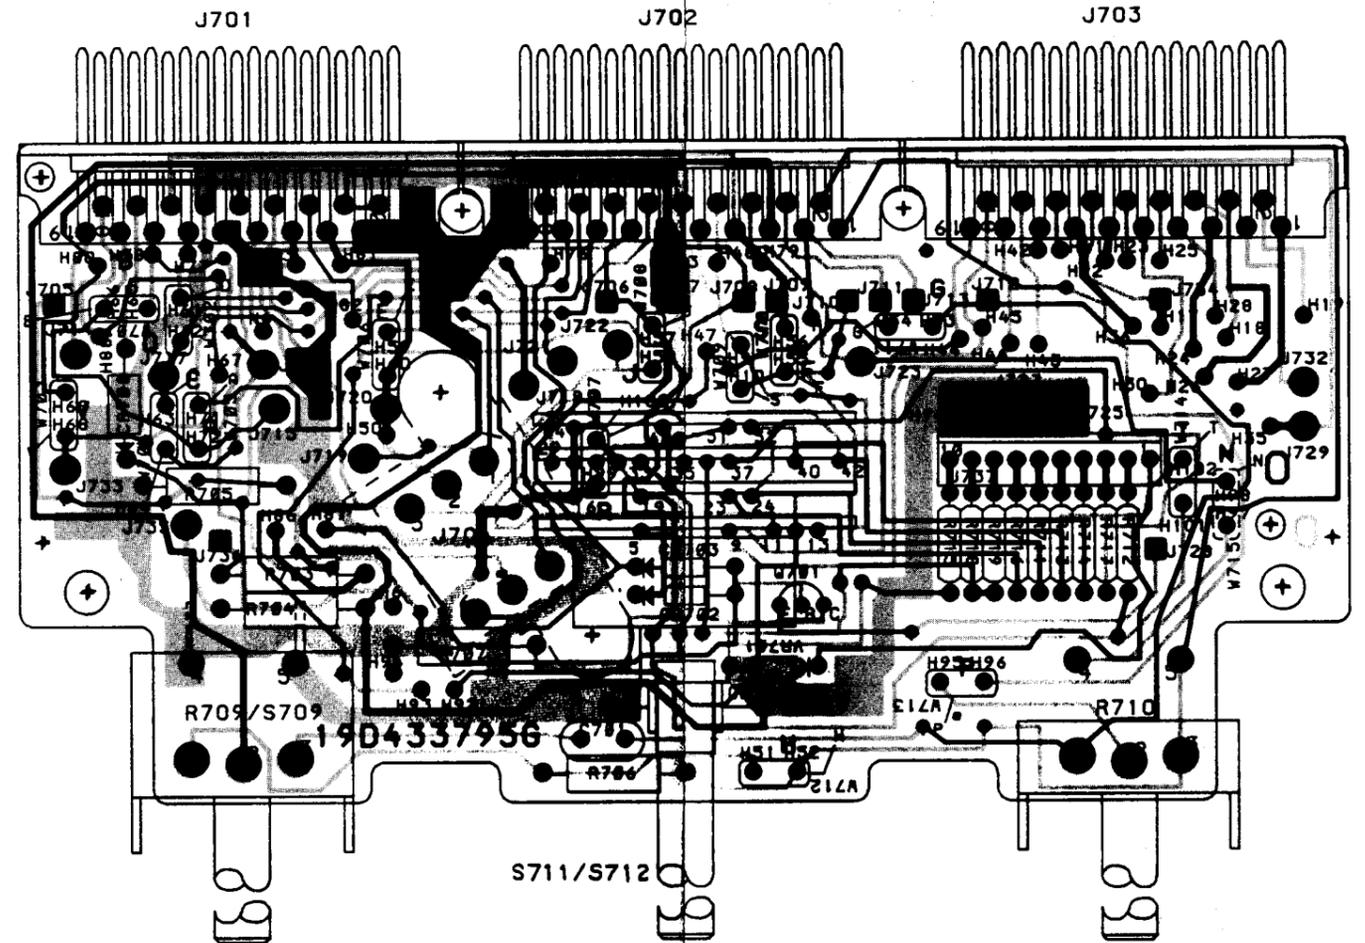

(19D437159, Rev. 2)  
(19A144746, Sh. 1, Rev. 0)  
(19A144746, Sh. 2, Rev. 0)

OUTLINE DIAGRAM

 CONTROL BOARD  
19D433795

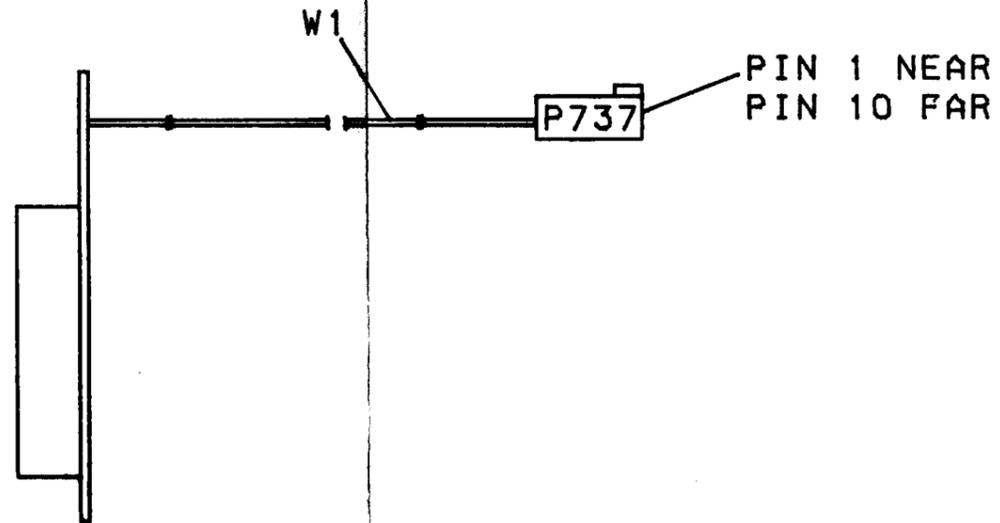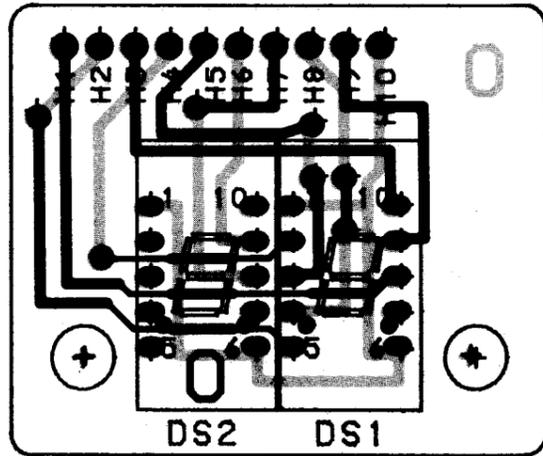


(19C336043, Rev. 2)  
 (19A144650, Sh. 1, Rev. 0)  
 (19A144650, Sh. 2, Rev. 0)

WIRE CHART		
FROM	TO	WIRE
H1	P737-5	SF24-W
H2	P737-4	SF24-O
H3	P737-6	SF24-BR
H4	P737-7	SF24-BL
H5	P737-3	SF24-G
H6	P737-9	SF24-R
H7	P737-8	SF24-Y
H8	P737-10	SF24-V
H9	P737-2	SF24-W-V
H10	P737-1	SF24-BK

OUTLINE DIAGRAM

DISPLAY BOARD  
 19C336042

TRANSMIT INDICATOR CHANNEL BUSY INDICATOR (OPTIONAL)

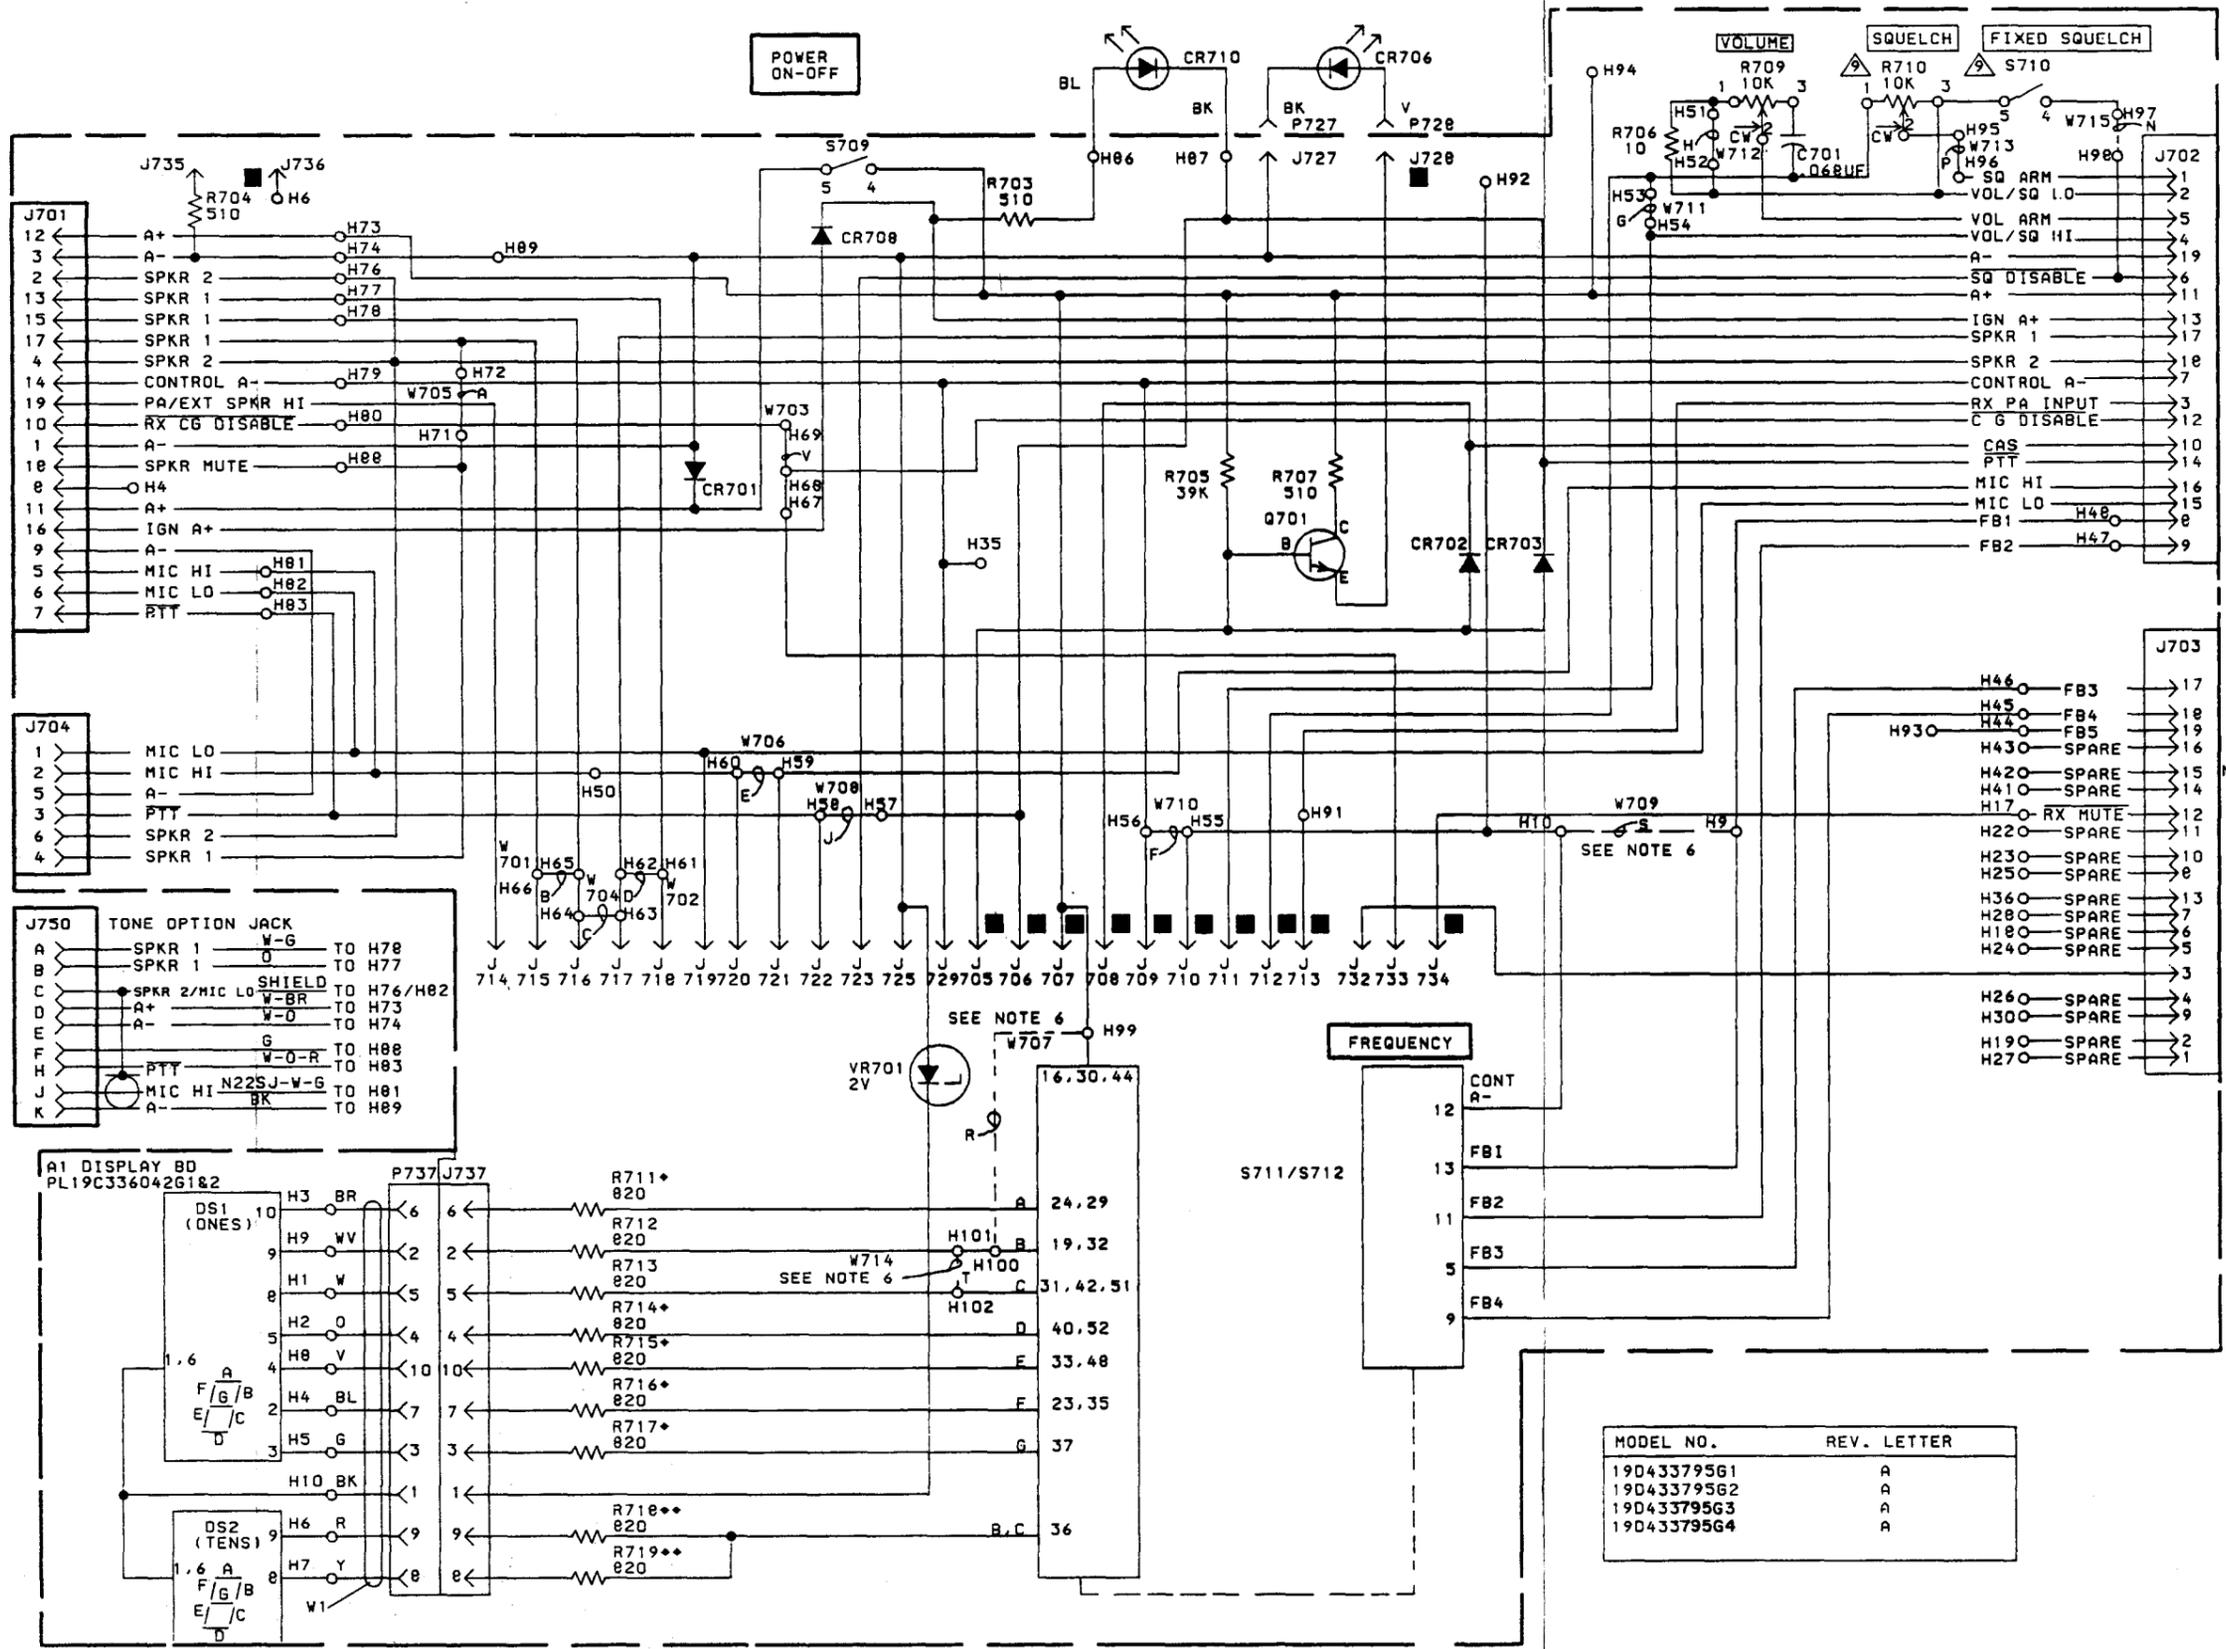

S711/712 TRUTH TABLE

POS	FB4	FB3	FB2	FB1	7 SEGMENT READOUT
1				X	1
2				X	2
3			X	X	3
4		X			4
5		X	X	X	5
6		X	X		6
7		X	X	X	7
8	X				8
9	X			X	9
10	X		X		10
11	X		X	X	11
12	X	X			12
13	X	X		X	13
14	X	X	X		14
15	X	X	X	X	15
16					16

X - CONNECTION TO P12 (CONTROL A-)  
BLANK - OPEN CIRCUIT

- NOTES:
- LETTER CODES ARE JUMPERS ON PWB TO BE REMOVED WHEN SPECIFIED ON OPTIONS.
  - INDICATES SQUARE POSTS.
  - ALL UNMARKED WIRES ARE SF-24.
  - \* THESE PARTS PRESENT G3 & 4.
  - \*\* THESE PARTS PRESENT G4 ONLY.
  - JUMPERS R, S, T PRESENT G1, 2, SINGLE FREQ. ONLY.
  - JUMPER N PRESENT FOR FIXED SQUELCH JUMPER P PRESENT FOR VARIABLE SQUELCH S712 PRESENT IN G4 ONLY. (16 FREQ) UNIT IS STANDARD WITH VARIABLE SQUELCH. FOR FIXED SQUELCH, REMOVE R710 AND REPLACE WITH R710/S710. 19B800743P4. ALSO SEE NOTE 7.

ALL RESISTORS ARE 1/4 WATT UNLESS OTHERWISE SPECIFIED AND RESISTOR VALUES IN OHMS UNLESS FOLLOWED BY K-1000 OHMS OR MEG-1,000,000 OHMS. CAPACITOR VALUES IN PICO FARADS (EQUAL TO MICROMICROFARADS) UNLESS FOLLOWED BY UF-MICROFARADS. INDUCTANCE VALUES IN MICROHENRYS UNLESS FOLLOWED BY MH-MILLIHENRYS OR H-HENRYS.

MODEL NO.	REV. LETTER
19D433795G1	A
19D433795G2	A
19D433795G3	A
19D433795G4	A

**SCHEMATIC DIAGRAM**


CONTROL UNIT  
19D432590G11-14

**PARTS LIST**

S-500 SERIES CONTROL UNIT  
 19D423590G11 1 FREQ NO OPTION  
 19D423590G12 1 FREQ OPTION  
 19D423590G13 1-8 FREQ OPTION  
 19D423590G14 1-16 FREQ OPTION  
 AND  
 ASSOCIATED ASSEMBLIES

SYMBOL	GE PART NO.	DESCRIPTION
		COMPONENT BOARD 19D433795G1 1 FREQ NO OPTION 19D433795G2 1 FREQ OPTION 19D433795G3 1-8 FREQ OPTION 19D433795G4 1-16 FREQ OPTION
		----- CAPACITORS ----- C701 T644ACP368K Polyester: 0.068 uF ±10%, 50 VDCW.
		----- DIODES AND RECTIFIERS ----- CR701 19A116783P1 Rectifier, silicon: 100 VDC blocking, 6 amp; sim to MR751. CR702 and CR703 19A115250P1 Silicon, fast recovery, 225 mA, 50 PIV. CR708 T324ADP1041 Rectifier, silicon; general purpose. CR710 19B219800G3 Diode, red light emitting.
		----- JACKS AND RECEPTACLES ----- J701 thru J703 19C320257P2 Pin wafer assembly: 19 contacts. J704 19B219627G1 Connector: 6 contacts. J705 thru J713 19A701785P1 Contact, electrical; sim to Molex 08-50-0404. J714 thru J723 4033513P4 Contact, electrical: sim to Bead Chain L93-3. J725 4033513P4 Contact, electrical: sim to Bead Chain L93-3. J727 4033513P4 Contact, electrical: sim to Bead Chain L93-3. J728 19A701785P1 Contact, electrical; sim to Molex 08-50-0404. J729 4033513P4 Contact, electrical: sim to Bead Chain L93-3. J732 and J733 4033513P4 Contact, electrical: sim to Bead Chain L93-3. J734 19A701785P1 Contact, electrical; sim to Molex 08-50-0404. J735 4033513P4 Contact, electrical: sim to Bead Chain L93-3. J736 19A701785P1 Contact, electrical; sim to Molex 08-50-0404. J737 19A700072P36 Printed wire: 10 contacts; sim to Molex 22-27-2101.
		----- TRANSISTORS ----- Q701 19A700023P1 Silicon, NPN; sim to Type 2N3904.
		----- RESISTORS ----- R703 and R704 3R77P511J Composition: 510 ohms ±5%, 1/2 w. R705 19A700113P101 Composition: 39K ohms ±5%, 1/2 w. R706 19A700113P15 Composition: 10 ohms ±5%, 1/2 w. R707 3R77P511J Composition: 510 ohms ±5%, 1/2 w. R709 19B800745P3 Variable: 20% mod log taper, 10K ohms ±20%, 1/4 w. R710 19B800745P6 Variable: linear taper, 10K ohms ±20%, 1/4 w. R711 thru R719 H212CRP182C Deposited carbon: 820 ohms ±5%, 1/4 w.

SYMBOL	GE PART NO.	DESCRIPTION
		----- SWITCHES ----- S711 19B800907P2 Rotary: 2 sections, 8 positions; sim to Oak 5-17481-764. S712 19B800907P1 Rotary: 4 sections, 16 positions; contacts rated 200 mA @ 7 VDC; sim to Oak 5-25651-748.
		----- VOLTAGE REGULATORS ----- VR701 19A700025P2 Silicon, zener: 400 mW max; sim to BZX55-C2V7.
		DISPLAY BOARD 19C336042G1 1-8 FREQ 19C336042G2 1-16 FREQ
		----- INDICATORS ----- DS1 and DS2 19A702063P2 Display, optoelectronic: sim to Hew. Packard 5082-7740.
		----- CABLES ----- W1 19C336042G3 Cable: Includes: 19A700041P36 connector.
		ASSOCIATED ASSEMBLIES CHANNEL BUSY OPTION 19A129567G6
		----- DIODES ----- CR706 19B219800G19 Diode, optoelectronic: yellow; sim to Hew. Packard 5082-4592. 19A116807P1 Clip, spring tension. (Secures CR706).
		UNIVERSAL TONE JACK OPTION 19A129567G17
		----- PLUGS ----- P750 19B227105G1 Connector, receptacle: 9 contacts; sim to Winchester M9S-LRN. N80P9005C6 Machine screw, phillips head: No. 4-40 x 5/16. 7141225P2 Hex nut: No. 4-40. N404P11C6 Lockwasher, internal: No. 4.
		MODE A-B OPTION 19A129567G30
		----- DIODES ----- CR709 19B219800G2 Diode, light emitting: red.
		----- SWITCHES ----- S705 19B234364G1 Push: DPST, contacts rated 0.5 amp DC or 3 amps at 125 VAC; sim to Switchcraft 11K1088.
		MECHANICAL PARTS (SEE RC4424)
		1 19A116807P1 Clip, spring tension. 2 19A116773P106 Tap screw, POZIDRIV®: 7-19 x 3/8. 3 19B201074P204 Tap screw, phillips POZIDRIV®: No. 4-40 x 1/4. 4 19C320389G5 Housing. 5 19B219825G1 Knob. 6 N117P9004C6 Tap screw, phillips: No. 4-40 x 1/4. 7 19B219578G1 Safety Release Disc. 8 19C320022P1 Retaining bracket. 9 N187P16010C6 Machine screw: No. 10-32 x 5/8. (Quantity 1 - Used with safety release disc and retaining bracket). 10 N130P1612C6 Screw, hexhead, slotted: No. 10-16 x 3/4. (Quantity 3 - Used without safety release disc and retaining bracket). N130P1624C6 Screw, thread forming: No. 10-16 x 1-1/2. (Quantity 3 - Used without safety release disc and retaining bracket for extra thick carpet).

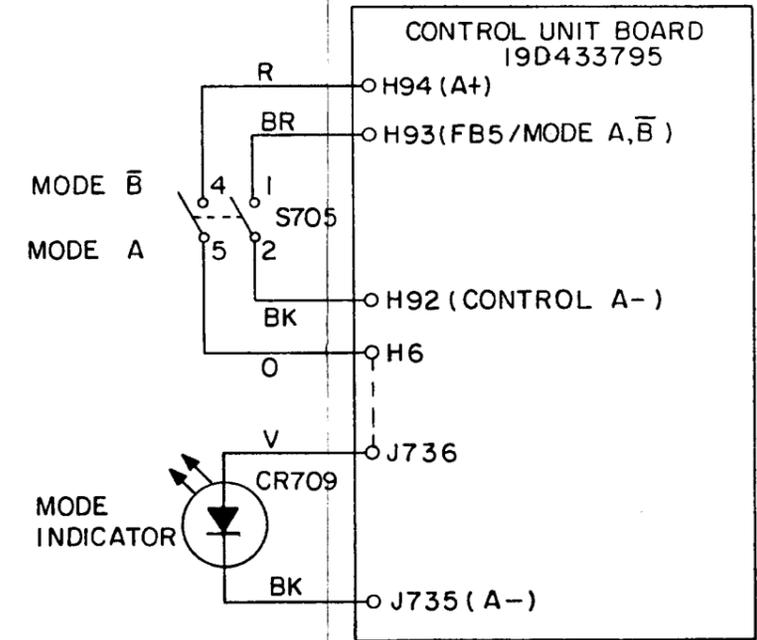

(19B234365, Rev. 1)

**SCHEMATIC DIAGRAM**

MODE A/B SELECT  
 19A129567G30

Issue 1

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

**PARTS LIST**

POWER/CONTROL CABLE  
30 CONDUCTOR  
19D423424G8  
ISSUE 1

**PARTS LIST**

MICROPHONE  
19D900141G8  
ISSUE 1



SYMBOL	GE PART NO.	DESCRIPTION
		----- PLUGS -----
P702		Connector. Includes: 19B226516G1 Shell. 19A116781P5 Contact, electrical: wire range No. 18-24 AWG; sim to Molex 08-50-0106. (Quantity 4). 19A116781P6 Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (Quantity 15).
P703		Connector. Includes: 19B226516G2 Shell. 19A116781P6 Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (Quantity 11).
P901		Connector, special purposes. Includes: 19C307162P1 Shell. 19A701376P1 Contact, electrical rated @ 4 amps; sim to AMP 350657-1. (Quantity 26). 19A701376P2 Contact, electrical rated @ 4 amps; sim to AMP 350656-1. (Quantity 4). 19A701376P3 Contact, electrical rated @ 35 amps; sim to AMP 350655-1. (Quantity 2).
		----- MISCELLANEOUS -----
	7139880P14	Cable: 27 conductor.
	7142878G1	Clip loop. (Strain relief).
	19B209245P103	Spacer.
	19A134241P1	Jackscrew. (Used with P901).
	19C328122P1	Adapter. (Located between P901 and mounting surface).

SYMBOL	GE PART NO.	DESCRIPTION
	19B800741P1	Microphone, transistorized, electret; 5% max distortion at 300-3000 Hz.
	19D416767P1	Connector Cover.
	19D416766P1	Connector Base.
	19A129435P1	Pin. (Quantity 4).
	19B219723G1	Thumb screw: lexan.
	19B219749P1	Flex relief, cable.
	N136AP905Y6	Tap screw: No. 4-24 x 5/16. (Secures cover to base).
	19A701289P1	Retaining ring: 3/16 inches; sim to National Lockwasher WA 510. (Secures thumb screws to cover).
	19A116937P1	Cable clamp: sim to Malco 21018-3.

**PRODUCTION CHANGES**

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter," which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.

REV. A - CONTROL UNIT 19D433795G1-4  
To eliminate fixed squelch option. Changed R710.  
R710 was: 19B800745P4 variable 10K ohms, 20%, 1/4W

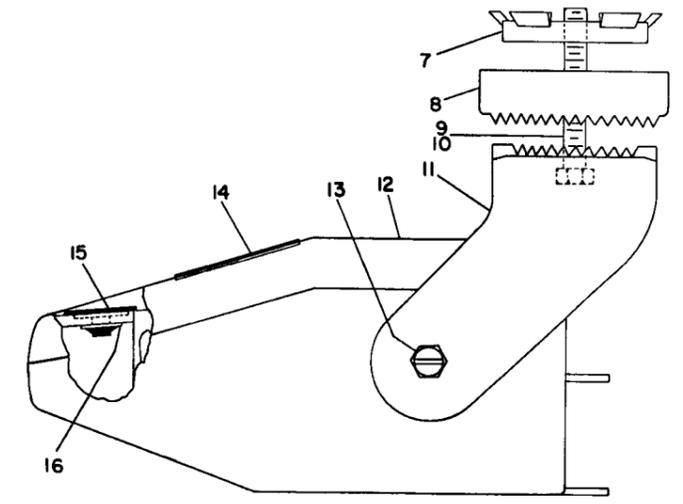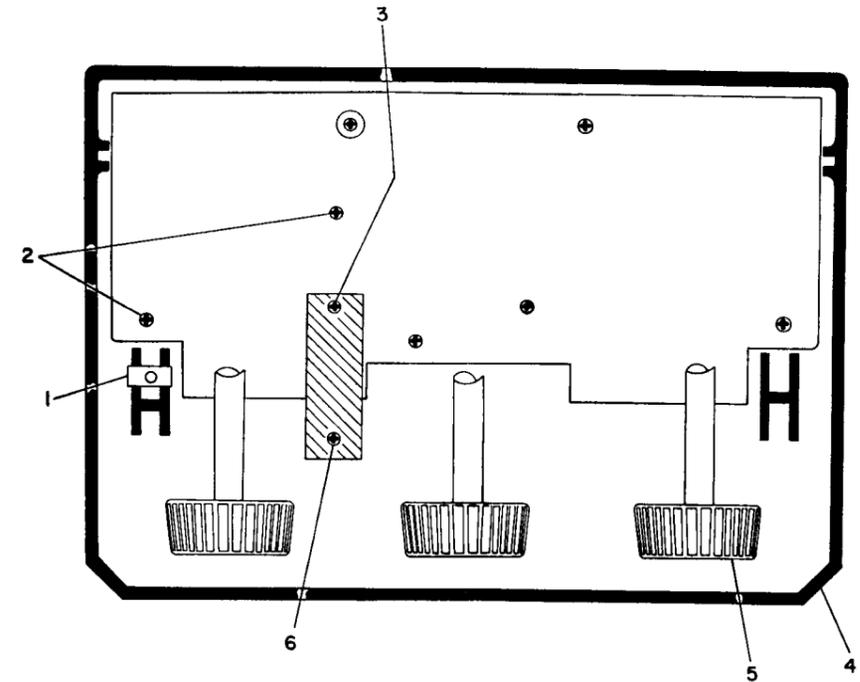

RC-4424

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

SYMBOL	GE PART NO.	DESCRIPTION
	19D416767P1	Connector Cover.
	19D416766P1	Connector Base.
	19A129435P1	Pin. (Quantity 6).
	19B219723G1	Thumb screw: lexan.
	19B219749P1	Flex relief, cable.
	N136AP905Y6	Tap screw: No. 4-24 x 5/16. (Secures cover to base).
	19A701289P1	Retaining ring: 3/16 inches; sim to National Lockwasher WA 510. (Secures thumbscrew to cover)
	19A116937P1	Cable clamp: sim to Malco 21012-3.  MIKE HANGER 7141414G1
	7142159P1	Support.
	7142156P1	Spring.
	7013672P3	Grommet, metallic.
	N193P1408C6	Tap screw, phillips head: No. 8-18 x 1/2.  MIKE HANGER 7141414G2
	4031457P1	Support.
	4031458P1	Spring.
	N193P1408C6	Tap screw, phillips head: No. 8-18 x 1/2.  HANDSET HOLDER 7141414G3
	19A115220P1	Handset holder.
	N130P1210C6	Tap screw, thd forming: No. 6-20 x 5/8.  MICROPHONE HOOKSWITCH 19C320318G3
		----- SWITCHES -----
S1	19B209261P18	Slide: SPST, sim to Switchcraft 46202LH.
S6	19B219779G1	Cable: approx 4 ft. long. Includes: (5) 4036634P1 & (2) 19B209288P2 contacts.
		----- CABLES -----
W1	19A129414G1	2 conductor cable: approx 5 feet long, includes (2) 19A116781P5 contacts.
		----- MISCELLANEOUS -----
	19C320301P1	Box.
	19B219693P2	Spring, hookswitch.
	19B227589P1	Support.  DASH MOUNT SPEAKER 19C850550G1
		----- SPEAKERS -----
LS1	19A702080P3	Permanent magnet: 76 x 1 mm, 8 ohms ±10% imp at 400 Hz, 18 w.
		----- CABLES -----
W1	19A129414G1	2 conductor cable: approx 5 feet long, includes (2) 19A116781P5 contacts.
		----- MISCELLANEOUS -----
	19B800534G1	Housing.
	19C850549P1	Grille.
	19C320016P1	Mounting bracket.
	19A701354P2	Nameplate. (GENERAL ELECTRIC).
	19A701631P516	Machine screw: M5-.8 x 16. (Secures mounting bracket to housing).

SYMBOL	GE PART NO.	DESCRIPTION
	19A700033P10	Lockwasher, external tooth: No. 10. (Secures mounting bracket to housing).
	19A701312P7	Lockwasher: No. 10. (Secures mounting bracket to housing).
	19A116986P112	Screw, thd forming, assembled washer: Phillips POZIDRIV®, HI-LO thread, No. 7-19 x 3/4. (Secures grille to housing).
		WINDOW MOUNT SPEAKER 19C850550G1
		----- SPEAKERS -----
LS1	19A702080P3	Permanent magnet: 76 x 1 mm, 8 ohms ±10% imp at 400 Hz, 18 w.
		----- CABLES -----
W2	19B226189G1	Window mount: approx. 17 inches retracted, 84 inches extended. (Includes 2 19A116781P5 contacts).
		----- MISCELLANEOUS -----
	19B800534G2	Housing.
	19C850549P1	Grille.
	19C320016P1	Mounting bracket.
	19A701354P2	Nameplate. (GENERAL ELECTRIC).
	19A702464P3	Bushing, strain relief: sim to Heyco SR-5P-4. (Used with W2).
	19A701631P516	Machine screw: M5-.8 x 16. (Secures mounting bracket to housing).
	19A700033P10	Lockwasher, external tooth: No. 10. (Secures mounting bracket to housing).
	19A701312P7	Lockwasher: No. 10. (Secures mounting bracket to housing).
	19A116986P112	Screw, thd forming, assembled washer: Phillips POZIDRIV®, HI-LO thread, No. 7-19 x 3/4. (Secures grille to housing).
		HUMP MOUNTING HARDWARE KIT 19A130890G1
	19B227124G1	Mounting bracket. (Mates with floor hump).
	N130P1610C6	Screw, thread forming: No. 10-16 x 5/8. (Secures mounting bracket when extended length is not needed).
	N130P1624C6	Screw, thread forming: No. 10-16 x 1-1/2. (Secures mounting bracket to hump when extended length is needed).
	19B209103P506	Tap screw, hex head: No. 10-32 x 3/8. (Secures 19C321086P2 bracket to hump bracket).
	N403P19C6	Lockwasher: No. 10. (Quantity 8).

PARTS LIST		
SYMBOL	GE PART NO.	DESCRIPTION
		POWER/CONTROL CABLE 19D900447G1-6, G10-15  ISSUE 1
		----- PLUGS -----
P1	19D900037P1	Connector. Includes: Shell.
	19D900015P1	Housing.
	19C850508P1	Cover.
	19C800882P1	Thumbscrew.
	19A701312P6	Flatwasher: 1.7 - 1.85 ID. (Located under thumbscrew).
	19A701488P4	Retaining ring. (Secures thumbscrew to cover).
	19B800513P1	Gasket.
	19A701376P1	Contact, electrical rated @ 4 amps; sim to AMP 350657-1. (Located on pins 1-17, 22-28, 30-35).
	19A701376P2	Contact, electrical rated @ 4 amps; sim to AMP 350656-1. (Located on pins 18-21).
	19A701376P3	Contact, electrical rated @ 35 amps; sim to AMP 350655-1. (Located on pins 37 & 38).
	19A701077P1	Cable clip.
	19A700031P425	Machine screw. (Used with cable clamp).
	19A700034P4	Nut, hex: No. M3 x 0.5MM. (Used with cable clamp - Quantity 2).
	19A700032P5	Lockwasher, internal tooth: No. 3MM. (Used with cable clamp - Quantity 2).
P2	19B226516G1	Shell.
	19A116781P6	Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (Located on pins 1-10, 12-16).
	19A116781P5	Contact, electrical: wire range No. 18-24 AWG; sim to Molex 08-50-0106. (Located on pins 11, 17-19).
		Connector. Includes: Shell.
P3	19B226516G2	Shell.
	19A116781P6	Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (Located on pins 1-8, 12, 13, 15, 17-19).
		----- MISCELLANEOUS -----
	19B800629P1	Solderless terminal. (Used with Short A-).
	19B800629P3	Solderless terminal. (Used with Long A-).

PARTS LIST		
SYMBOL	GE PART NO.	DESCRIPTION
		POWER/CONTROL CABLE 30 CONDUCTOR 19D423424G8  ISSUE 1
		----- PLUGS -----
P702	19B226516G1	Shell.
	19A116781P5	Contact, electrical: wire range No. 18-24 AWG; sim to Molex 08-50-0106. (Quantity 4).
	19A116781P6	Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (Quantity 15).
P703	19B226516G2	Shell.
	19A116781P6	Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (Quantity 11).
P901	19C307162P1	Connector, special purposes. Includes: Shell.
	19A701376P1	Contact, electrical rated @ 4 amps; sim to AMP 350657-1. (Quantity 26).
	19A701376P2	Contact, electrical rated @ 4 amps; sim to AMP 350656-1. (Quantity 4).
	19A701376P3	Contact, electrical rated @ 35 amps; sim to AMP 350655-1. (Quantity 2).
		----- MISCELLANEOUS -----
	7139880P14	Cable: 27 conductor.
	7142878G1	Clip loop. (Strain relief).
	19B209245P103	Spacer.
	19A134241P1	Jackscrew. (Used with P901).
	19C328122P1	Adapter. (Located between P901 and mounting surface).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.


\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGE

SYMBOL	GE PART NO.	DESCRIPTION
11	19D416594P1	Mounting bracket.
12	19C331834G3	Cover.
13	N187P16010C6	Machine screw: No. 10-32 x 5/8.
14	19D437260P1	Nameplate. (CHANNEL-SQUELCH).
	19D437260P2	Nameplate. (MODE-CHANNEL-SQUELCH).
	19D437260P3	Nameplate. (CHANNEL-SPEAKER-SQUELCH).
	19D437260P4	Nameplate. (CHANNEL-PA-SQUELCH).
	19D437260P5	Nameplate. (CHANNEL-CONTROL-SQUELCH).
	19D437260P6	Nameplate. (CHANNEL-OPTION-SQUELCH).
	19D437260P7	Nameplate. (CHANNEL-TONE-SQUELCH).
	19D437260P8	Nameplate. (MODE-CHANNEL-SPEAKER-SQUELCH).
	19D437260P9	Nameplate. (MODE-CHANNEL-PA-SQUELCH).
	19D437260P10	Nameplate. (MODE-CHANNEL-OPTION-SQUELCH).
	19D437260P11	Nameplate. (MODE-CHANNEL-TONE-SQUELCH).
	19D437260P12	Nameplate. (MODE-CHANNEL-CONTROL-SQUELCH).
	19D437260P13	Nameplate. (CHANNEL-SEARCH-SQUELCH).
	19D437260P14	Nameplate. (MODE-CHANNEL-SEARCH-SQUELCH).
	19D437260P15	Nameplate. (CHANNEL-MONITOR-SQUELCH).
	19D437260P16	Nameplate. (MODE-CHANNEL-MONITOR-SQUELCH).
	19D437260P17	Nameplate. (CHANNEL-RESET-SQUELCH).
	19D437260P18	Nameplate. (MODE-CHANNEL-RESET-SQUELCH).
15	19B219626P2	Knob plug.
16	7140578P6	Nut, push on: sim to Tinnerman C318-012-67. (Used with item 23).
		12-VOLT 2-WIRE IGNITION SWITCH CABLE 19B219537G4
		----- PLUGS -----
P701		Connector. Includes: Shell. Y Cable. (BLACK).
	19B226516G3	
	19A129504G1	
		FUSED LEAD ASSEMBLY 19A12948OG3 (Used with 19B219537G4)
	1R16P8	Cartridge, quick blowing: 5 amps at 250 v; sim to Littelfuse 312005 or Bussmann MTH-5.
	19A115776P6	Fuseholder: sim to Bussmann 9835.
	19A115776P5	Knob assembly: sim to Bussmann 9953 1/2.
	19A115776P7	Spring: sim to Bussmann 1A1853.
	19A115776P3	Contact: sim to Littelfuse 904-88. (Located inside fuseholder).
	7491823P7	Solderless terminal: wire size No. 16-14 AWG; sim to AMP 30993.
	7491823P8	Solderless terminal: wire size No. 16-14 AWG; sim to AMP 31256.
	4029484P2	Terminal, quick disconnect: wire size No. 14-18 AWG; sim to AMP 41279 (LP).
	19A116849P1	Insulated splice.
	19A116781P5	Contact, electrical: wire range No. 18-24 AWG; sim to Molex 08-50-0106.
		OPTIONAL 12-VOLT 3-WIRE IGNITION SWITCH CABLE 19B219537G1
		----- PLUGS -----
P701		Connector. Includes: Shell. Y Cable. (BLACK).
	19B226516G3	
	19A129504G1	

SYMBOL	GE PART NO.	DESCRIPTION
		FUSED LEAD ASSEMBLY 19A12948OG1 1 AMP (RED) (Used with 19B219537G1)
	1R16P3	Quick blowing: 1 amp at 250 v; sim to Littelfuse 312001 or Bussmann AGC-1.
	19A115776P6	Fuseholder: sim to Bussmann 9835.
	19A115776P5	Knob assembly; sim to Bussmann 9953 1/2.
	19A115776P7	Spring: sim to Bussmann 1A1853.
	19A115776P3	Contact: sim to Littelfuse 904-88. (Located inside fuseholder).
	7491823P7	Solderless terminal: wire size No. 16-14 AWG; sim to AMP 30993.
	7491823P8	Solderless terminal: wire size No. 16-14 AWG; sim to AMP 31256.
	4029484P2	Terminal, quick disconnect: wire size No. 14-18 AWG; sim to AMP 41279 (LP).
	19A116849P1	Insulated splice.
	19A116781P5	Contact, electrical: wire range No. 18-24 AWG; sim to Molex 08-50-0106.
		FUSED LEAD ASSEMBLY 19A12948OG2 5 AMP (YELLOW) (Used with 19B219537G1)
	1R16P8	Cartridge, quick blowing: 5 amps at 250 v; sim to Littelfuse 312005 or Bussmann MTH-5.
	19A115776P6	Fuseholder: sim to Bussmann 9835.
	19A115776P5	Knob assembly: sim to Bussmann 9953 1/2.
	19A115776P7	Spring: sim to Bussmann 1A1853.
	19A115776P3	Contact: sim to Littelfuse 904-88. (Located inside fuseholder).
	7491823P7	Solderless terminal: wire size No. 16-14 AWG; sim to AMP 30993.
	7491823P8	Solderless terminal: wire size No. 16-14 AWG; sim to AMP 31256.
	4029484P2	Terminal, quick disconnect: wire size No. 14-18 AWG; sim to AMP 41279 (LP).
	19A116849P1	Insulated splice.
	19A116781P5	Contact, electrical: wire range No. 18-24 AWG; sim to Molex 08-50-0106.
		132-512 MHz ANTENNA 19B209568P1
		Whip assembly. 068110-001.
		Whip nut assembly. 068047-001.
		Base nut assembly. 068048-001.
		"O" Ring (LARGE). 007059-122.
		Stud assembly. 068046-001.
		RG58/U Cable, 15 ft. 068115-001.
		12 VOLT FUSE ASSEMBLY 19B216021G4 (Fuses must be ordered separately)
		----- FUSES -----
P2	1R11P6	Quick blowing: 25 amps, 250 v; sim to Bussmann NON25. (Used with low power).
P3	1R11P7	Quick blowing: 30 amps, 250 v; sim to Bussmann NON30. (Used with high power).
P4	1R11P5	Quick blowing: 20 amps, 250 v; sim to Bussmann NON20. (Used with medium power).
		HANDSET 19C320478G6
R1	19A700019P43	Deposited carbon: 3.3K ohms $\pm 5\%$ , 1/4 w.
	19B209468P5	Handset.

SYMBOL	GE PART NO.	DESCRIPTION
	19D416767P1	Connector Cover.
	19D416766P1	Connector Base.
	19A129435P1	Pin. (Quantity 6).
	19B219723G1	Thumb screw: lexan.
	19B219749P1	Flex relief, cable.
	N136AP905Y6	Tap screw: No. 4-24 x 5/16. (Secures cover to base).
	19A701289P1	Retaining ring: 3/16 inches; sim to National Lockwasher WA 510. (Secures thumbscrew to cover)
	19A116937P1	Cable clamp: sim to Malco 21012-3.
		MIKE HANGER 7141414G1
	7142159P1	Support.
	7142156P1	Spring.
	7013672P3	Grommet, metallic.
	N193P1408C6	Tap screw, phillips head: No. 8-18 x 1/2.
		MIKE HANGER 7141414G2
	4031457P1	Support.
	4031458P1	Spring.
	N193P1408C6	Tap screw, phillips head: No. 8-18 x 1/2.
		HANDSET HOLDER 7141414G3
	19A115220P1	Handset holder.
	N130P1210C6	Tap screw, thd forming: No. 6-20 x 5/8.
		MICROPHONE HOOKSWITCH 19C320318G3
		----- SWITCHES -----
S1	19B209261P18	Slide: SPST, sim to Switchcraft 46202LH.
S6	19B219779G1	Cable: approx 4 ft. long. Includes: (5) 4036634P1 & (2) 19B209288P2 contacts.
		----- CABLES -----
W1	19A129414G1	2 conductor cable: approx 5 feet long, includes (2) 19A116781P5 contacts.
		----- MISCELLANEOUS -----
	19C320301P1	Box.
	19B219693P2	Spring, hookswitch.
	19B227589P1	Support.
		DASH MOUNT SPEAKER 19C850550G1
		----- SPEAKERS -----
LS1	19A702080P3	Permanent magnet: 76 x 1 mm, 8 ohms $\pm 10\%$ imp at 400 Hz, 18 w.
		----- CABLES -----
W1	19A129414G1	2 conductor cable: approx 5 feet long, includes (2) 19A116781P5 contacts.
		----- MISCELLANEOUS -----
	19B800534G1	Housing.
	19C850549P1	Grille.
	19C320016P1	Mounting bracket.
	19A701354P2	Nameplate. (GENERAL ELECTRIC).
	19A701631P516	Machine screw: M5-.8 x 16. (Secures mounting bracket to housing).

8 CHAN BUSY LIGHT OPTION PL19A129567G6

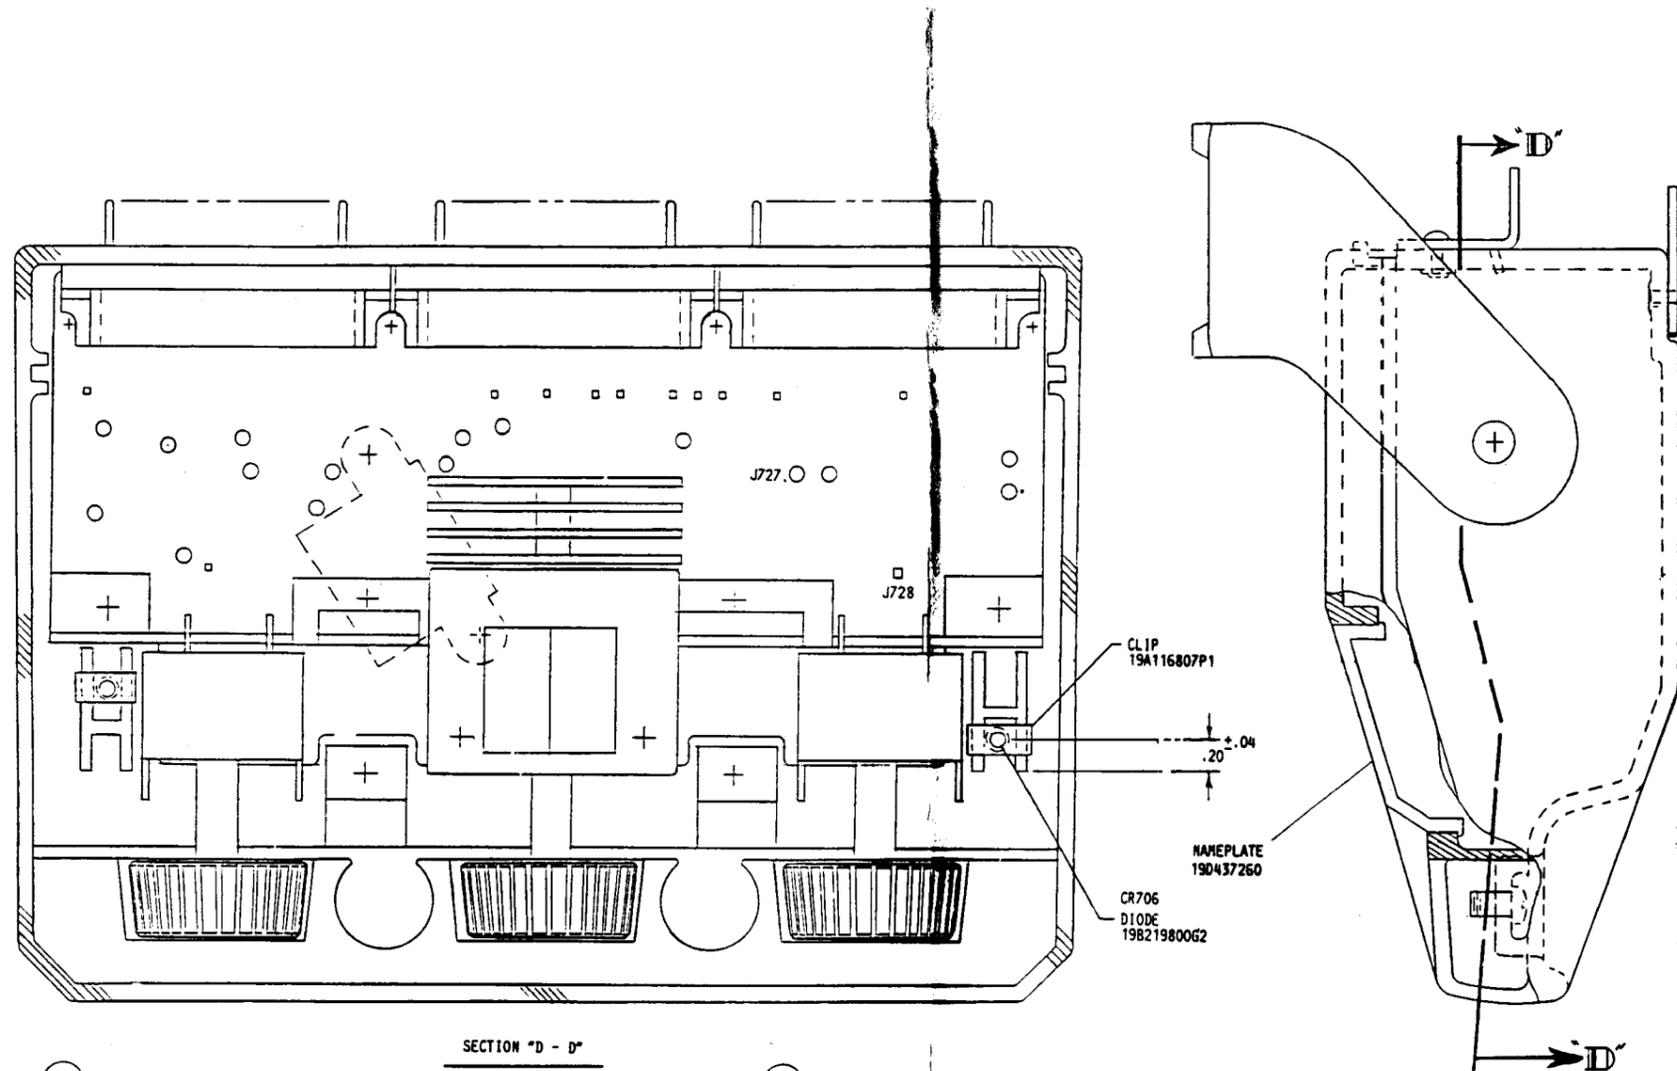


THIS UNIT CONTAINS THE FOLLOWING OPTION KITS:  
 PL19A129567G1 □, G2 □, G3 □, G4 □, G5 □, G6 □, G7 □, G8 □, G9 □, G10 □, G11 □, G12 □, G13 □, G14 □, G15 □, G16 □, G17 □, G18 □, G19 □, G20 □, G21 □, G22 □, G23 □, G24 □, G25 □, G26 □, G27 □, G28 □, G29 □, G30 □, G31 □.  
19A129567 REV. 6

MARK THIS SQUARE AS SHOWN PER 19A115740P1

SECTION "D - D"


9 VARIABLE SQUELCH (CONVERT FROM FIXED SQUELCH)  
 NOTE:

APPLY OUTWARD PULL TO SHAFT OF R710/S710 AND ROTATE IN CLOCKWISE DIRECTION TO OVERRIDE STOP. THIS OVERRIDE CONVERTS FROM FIXED SQUELCH (ON-OFF) TO AN ADJUSTABLE SQUELCH. CUT JUMPER "N" ON PWB BETWEEN H97 AND H98. ADD JUMPER "P" ON PWB BETWEEN H95 AND H96.

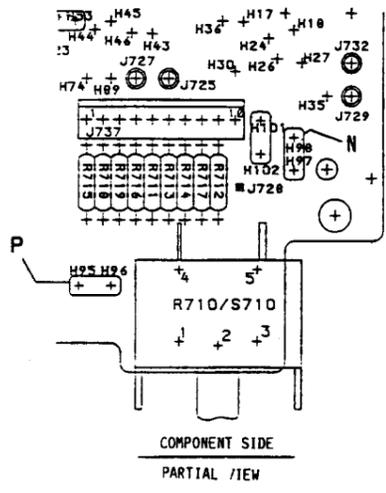

10 FIXED SQUELCH (CONVERT FROM VARIABLE SQUELCH)  
 NOTE:

REMOVE R710 AND REPLACE WITH R710/S710 (19B80074SP4). CUT JUMPER "P" ON PWB BETWEEN H95 AND H96. ADD JUMPER "N" ON PWB BETWEEN H97 AND H98.

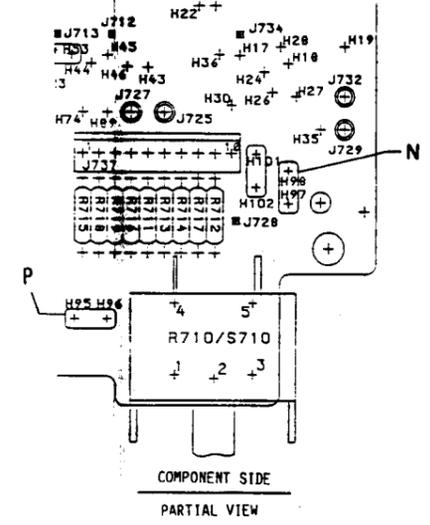

CONNECTION CHART


FROM	TO	WIRE
CR706	J727	SF24-BK
CR706	J728	SF24-V

JUMPER CHART SQUELCH OPTION


JUMPER	FIXED	VARIABLE
P	OUT	IN
N	IN	OUT

(19D437185, Sh. 6, Rev. 2)

OPTION APPLICATION

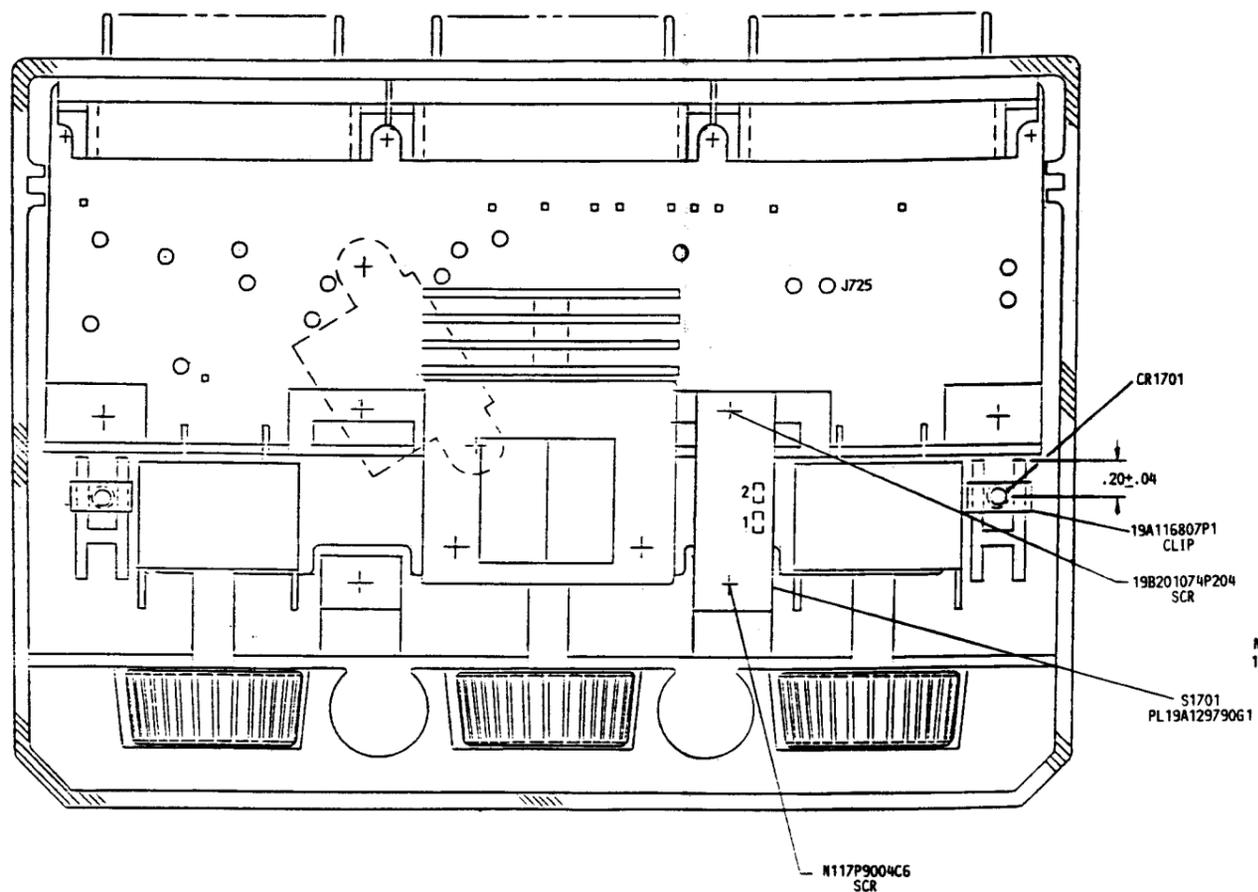


SECTION D - D

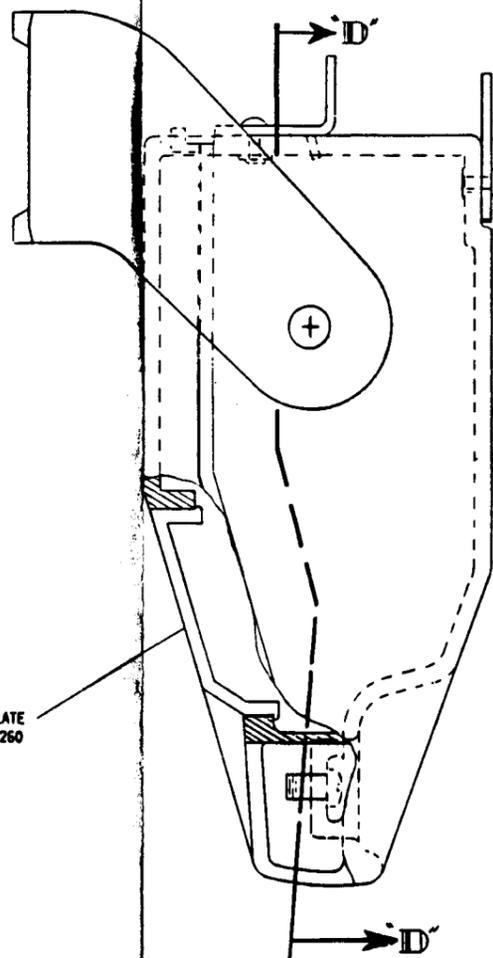

11 DUAL CONTROL PL19A129567G27

THIS UNIT CONTAINS THE FOLLOWING  
OPTION KITS:  
PL19A129567G1□, G2□, G3□, G4□, G5□,  
G6□, G7□, G8□, G9□, G10□, G11□, G12□,  
G13□, G14□, G15□, G16□, G17□, G18□, G19□,  
G20□, G21□, G22□, G23□, G24□, G25□, G26□,  
PL19A129567G27□, G28□, G29□, G30□, G31□.


MARK THIS SQUARE  
AS SHOWN  
PER 19A115740P1

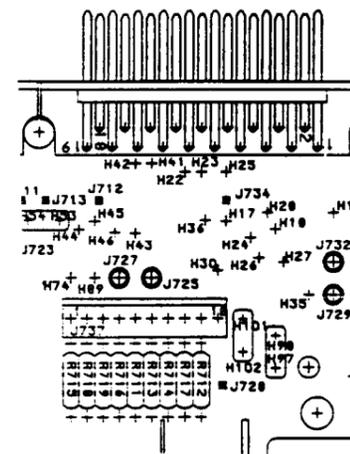


CPNT SIDE  
(PARTIAL VIEW)

CONNECTIONS		
FROM	TO	WIRE
H22	CR1701-2	SF24-R
H23	S1701-2	SF24-W
S1701-1	J725	SF24-BK

(19D437185, Sh. 7, Rev. 0)

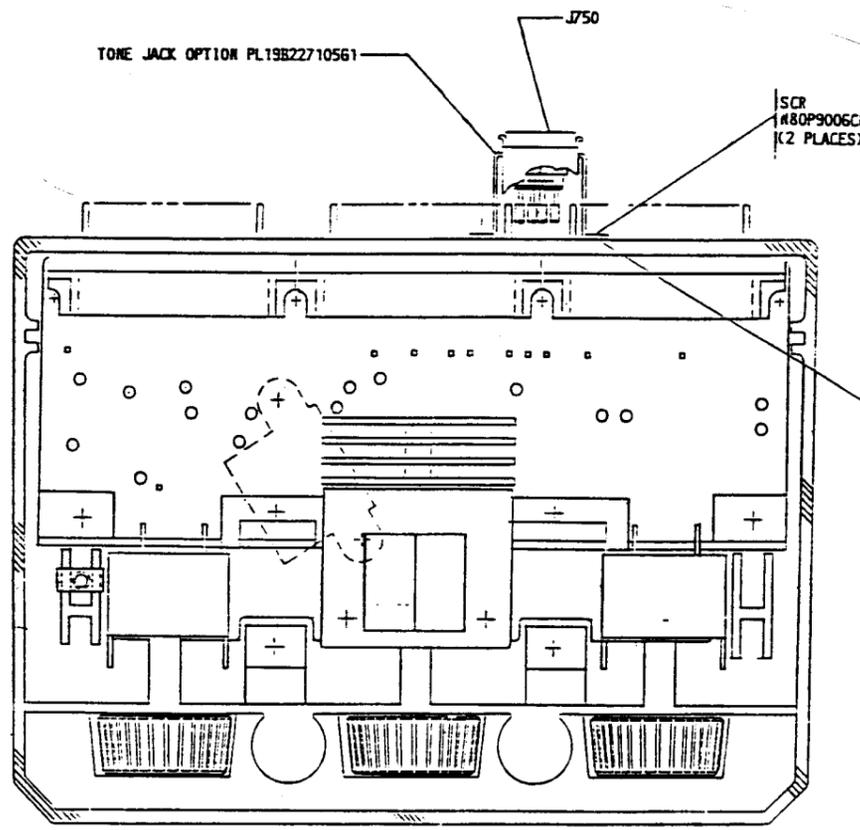


SECTION D-D

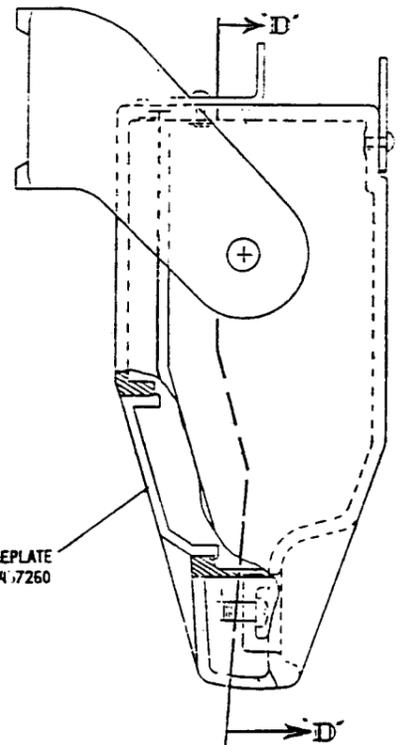

NAMEPLATE  
19D47260

- 16 HANDSET HOOKSWITCH (OPTION H3, H6)  
NOTES:  
1. CUT JUMPER "A" (H71 TO H72) AND "C" (H63 TO H64).
- 27 EXTERNAL DECODER CABLE  
NOTES:  
1. CUT JUMPER "H" (H51 TO H52).

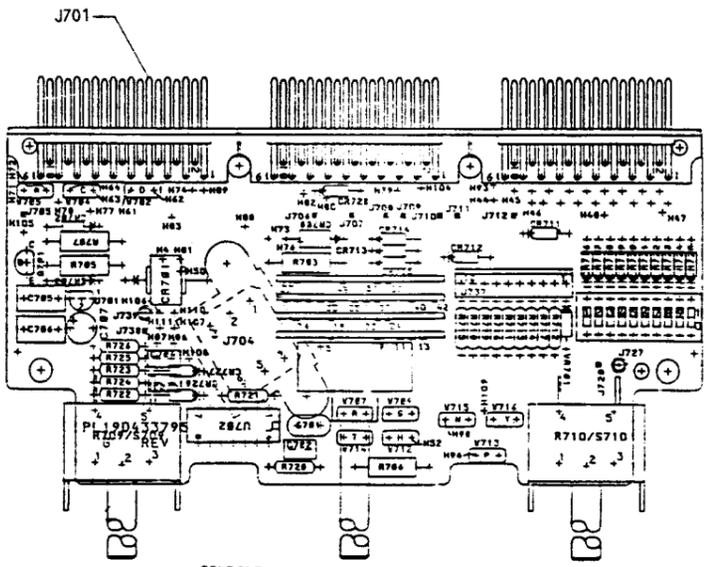

COMPONENT SIDE  
(PARTIAL VIEW)  
(19D4337956-7)

- 17 UNIVERSAL TONE DECODER JACK PL19A129567G17  
NOTES:  
1. CUT JUMPER "H" (H51 TO H52).


UNIVERSAL TONE DECODER JACK				
FROM	WIRE	TO P17 ONLY	TO P17 & P25	TO P17 AND P5,6,7,P12 THRU 15, P18 THRU 23
J750-A	W-G	H78	J701-15	H78
J750-B	Q	H77	J701-13	H77
J750-C	SHIELD	H76	J701-2	H76
J750-D	W-BR	H73	J701-12	H73
J750-E	W-O	H74	H74	J701-1
J750-F	G	H88	J701-18	J701-18
J750-H	W-O-R	H83	J701-7	H83
J750-J	22S-J-G	H81	J701-5	H81
J750-K	BK	H89	H89	J701-1

(19D437185, Sh. 9, Rev. 4)

- 28 UNIVERSAL TONE ENCODER JACK PL19A129567G17  
SAME AS 17 CHART EXCEPT:  
1. CONNECT SHIELD FROM J750-C TO H82 OR J701-6 INSTEAD OF H76 OR J701-2  
2. DO NOT CUT JUMPER "H".



THIS UNIT CONTAINS THE FOLLOWING  
OPTION KITS:  
PL19A129567G1, G2, G3, G4, G5, G6, G7, G8, G9, G10, G11, G12, G13, G14, G15, G16, G17, G18, G19, G20, G21, G22, G23, G24, G25, G26, G27, G28, G29, G30, G31.

MARK APPROPRIATE SQUARE AS SHOWN PER 19A115740P1 WHEN GP. 17 IS USED

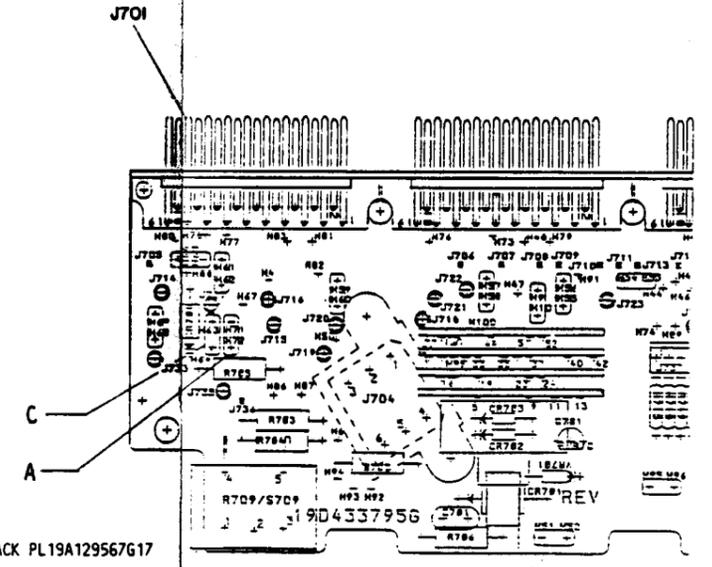

COMPONENT SIDE  
(PARTIAL VIEW)  
(19D4337956-4)

OPTION APPLICATION

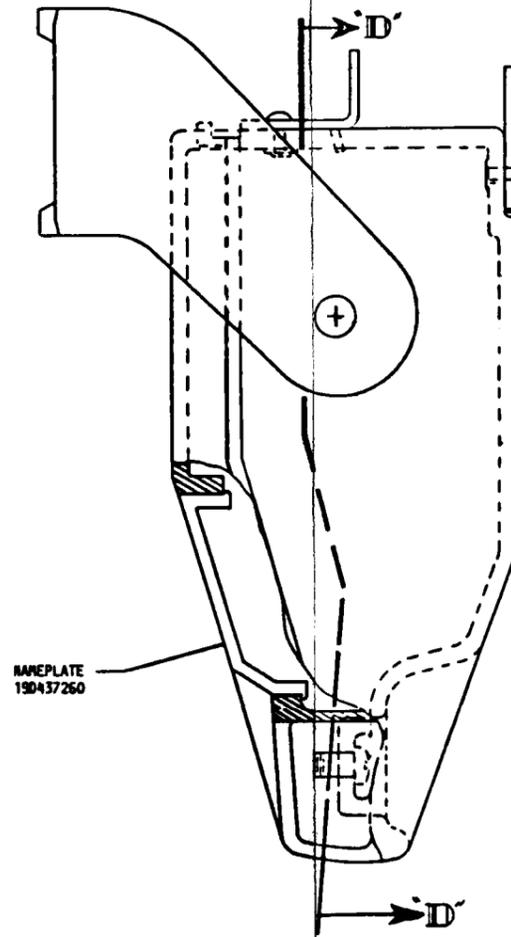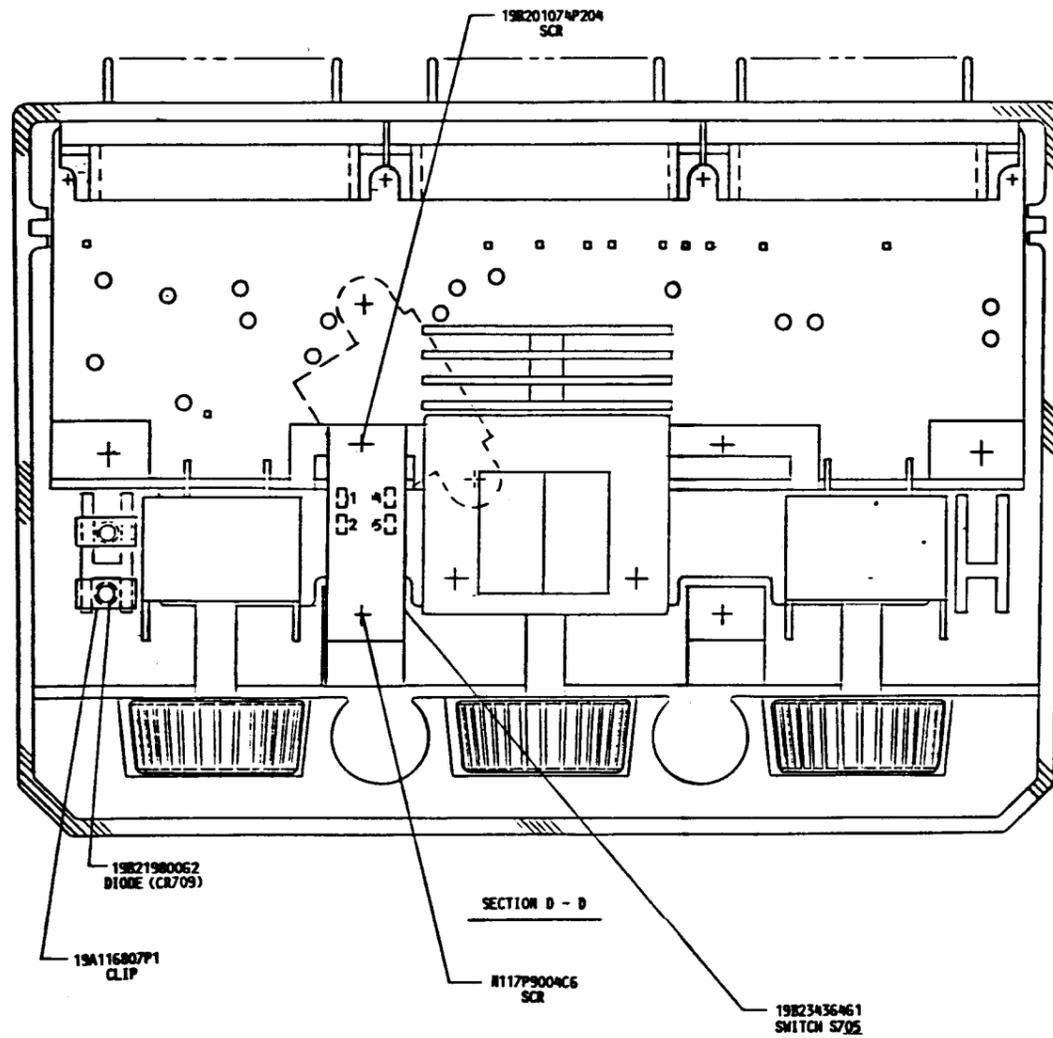


(24)

THESE INSTRUCTIONS COVER THE INSTALLATION OF THE 19A129567630 NODE "A-B" OPTION INTO A S-500 CONTROL UNIT.

CONNECTIONS FOR NODE A/B SWITCH AND INDICATOR		
FROM	TO	WIRE
S705-1	H93	BR
S705-2	H92	BR
S705-4	H94	R
S705-5	H6	O
CR709	J736	V
CR709	J735	BR


NOTES:

1. SOLDER ALL ELECTRICAL CONNECTIONS.

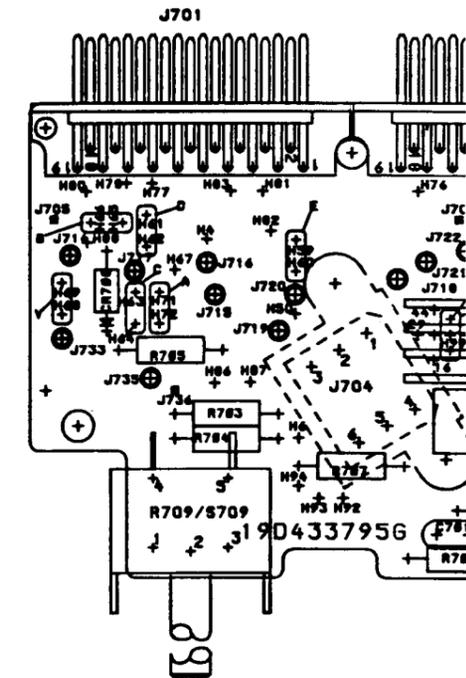

(19D437185, Sh. 11, Rev. 1)


OPTION APPLICATION

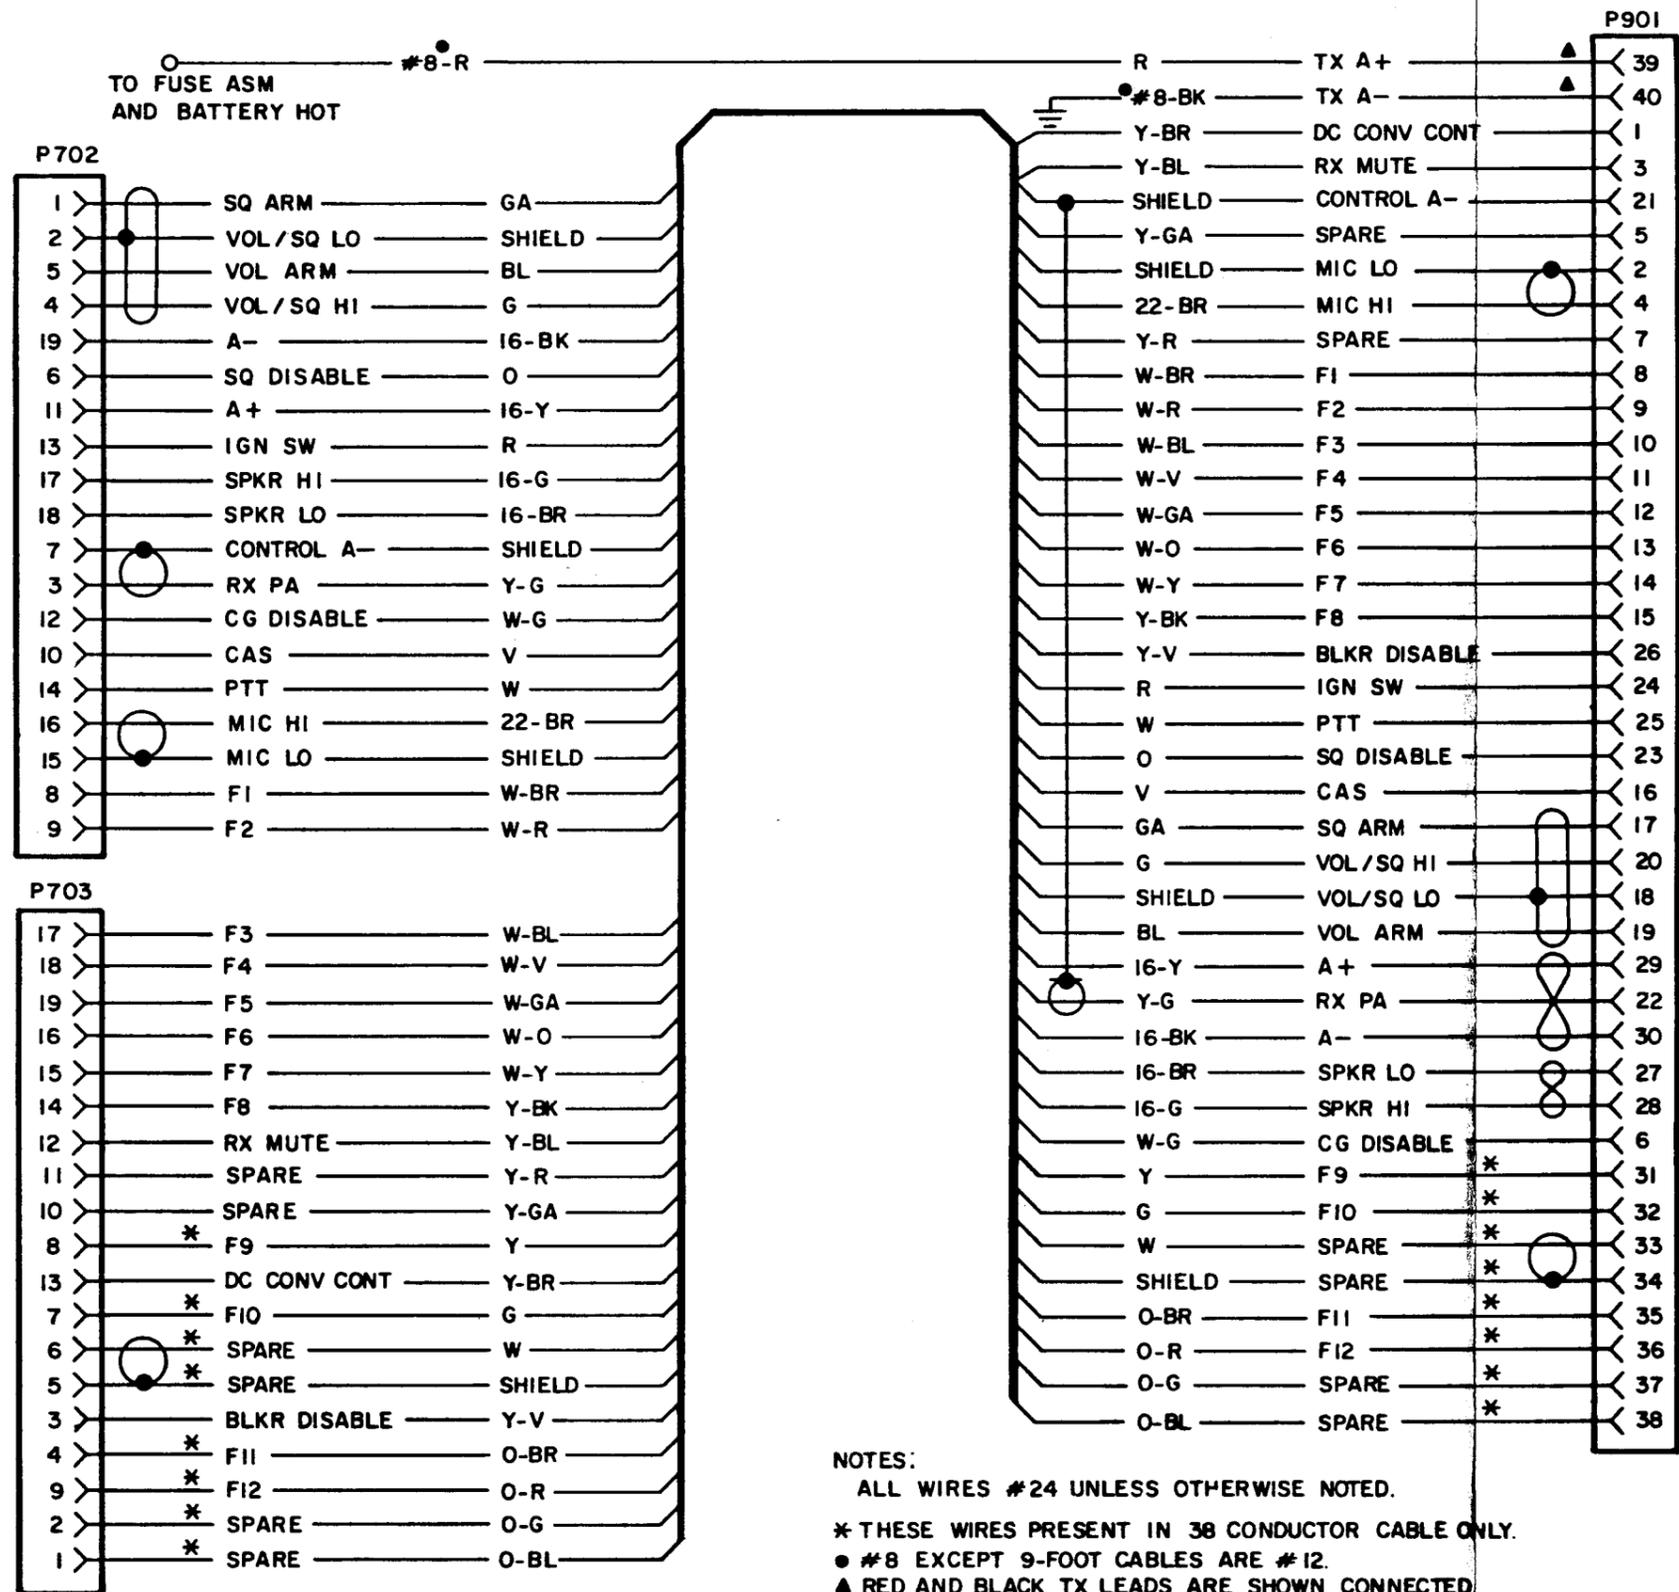

(19C321784, Rev. 2)

WIRING DIAGRAM

POWER/CONTROL CABLE  
19D423424G8

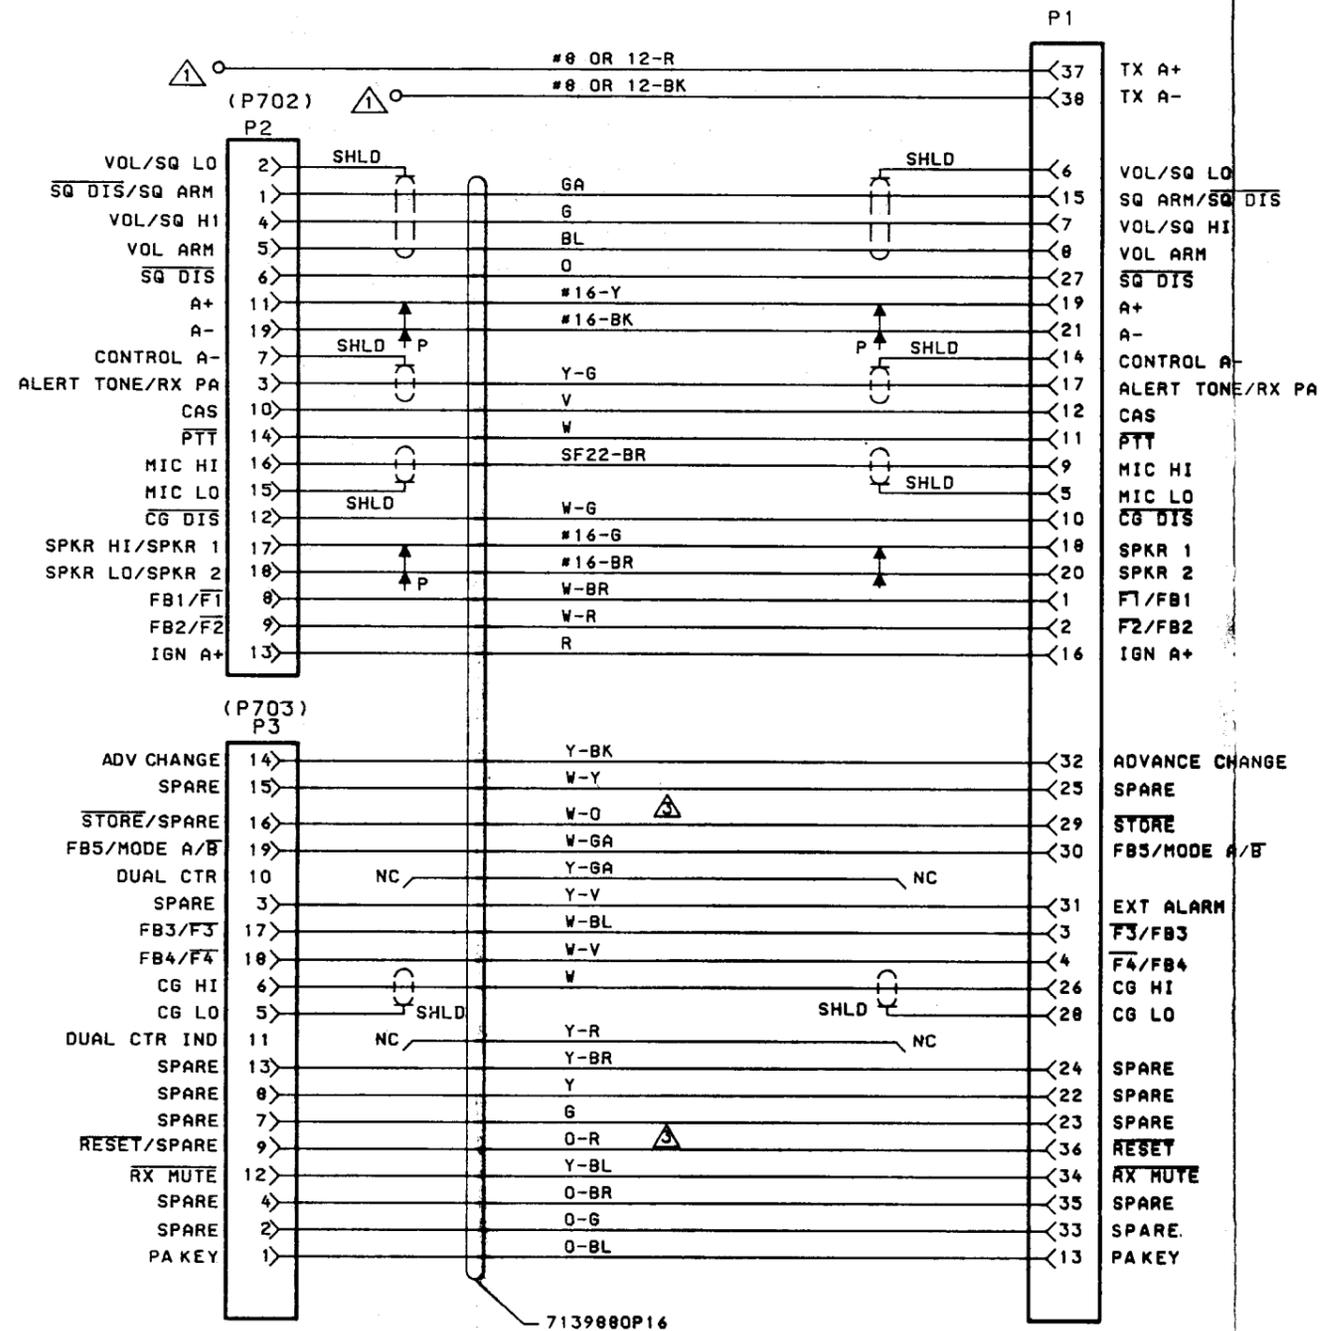


- ⚠ ELECTRICALLY UNCONNECTED UNTIL INSTALLED BUT TERMINATED PER ASM 19D900447.
- 2. ALL WIRES ARE #SF24 AWG UNLESS OTHERWISE SPECIFIED.
- ⚠ FOR GROUPS 1-6, W-O AND O-R WIRES ARE NOT CONNECTED AT EITHER END.

**WIRING DIAGRAM**

POWER/CONTROL CABLE  
19D900447G1-6

(19D433081, Sh. 1, Rev. 7)

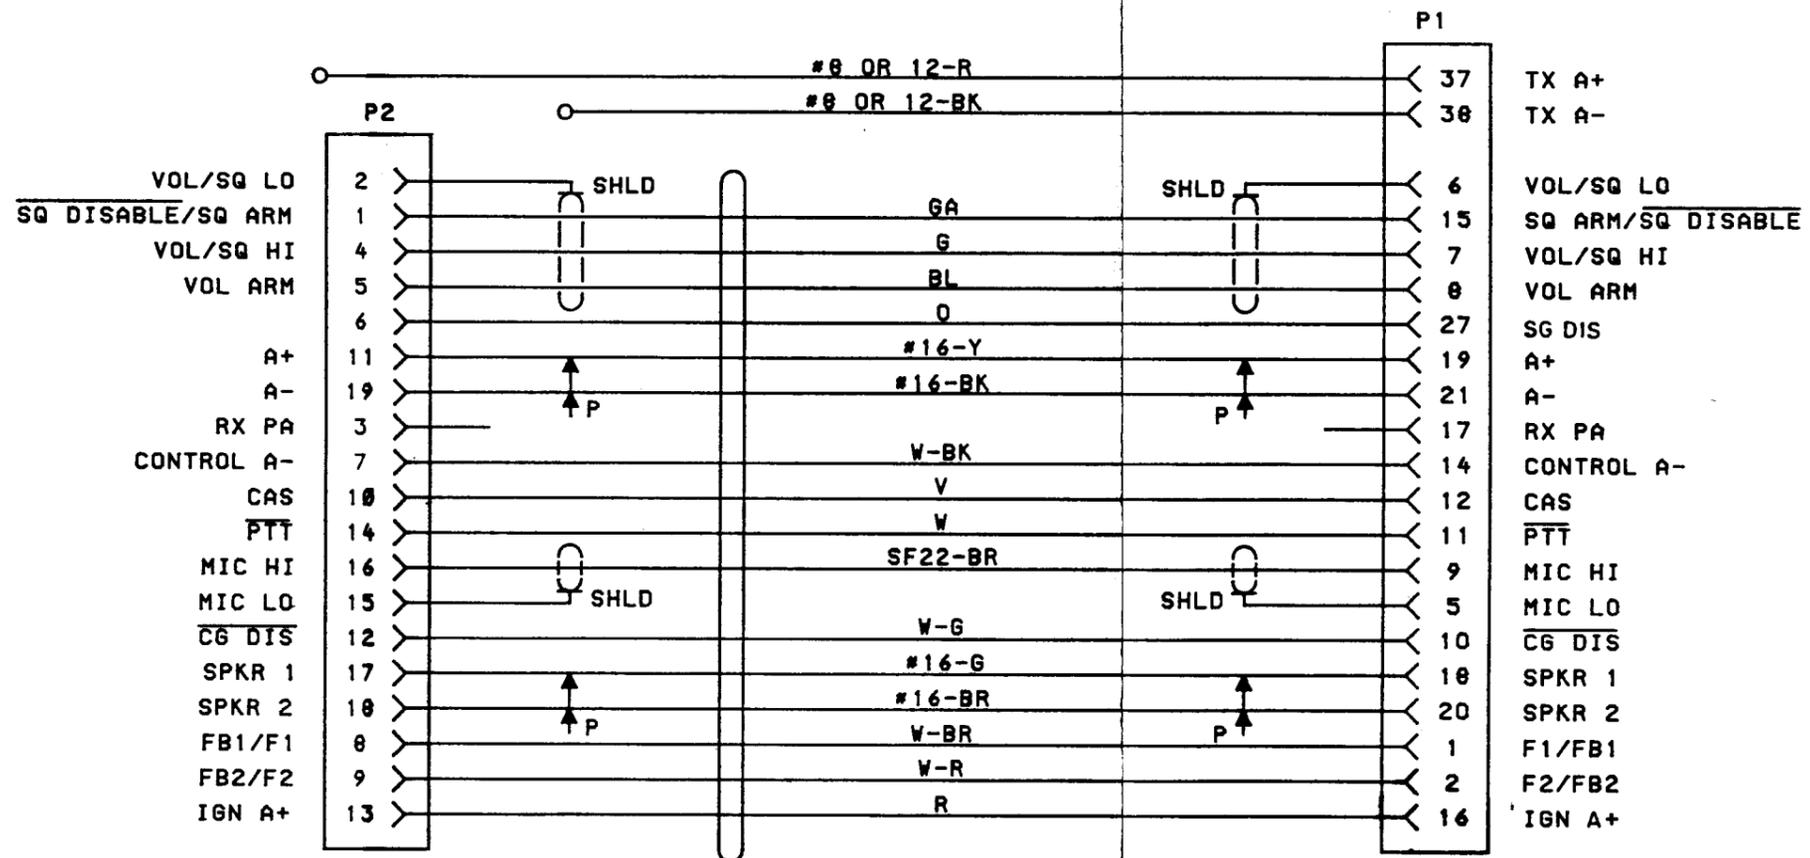


ALL WIRES ARE #SF24 AWG UNLESS OTHERWISE SPECIFIED.

(19C331426, Rev. 3)

### WIRING DIAGRAM

POWER/CONTROL CABLE  
19D900447G10-15

\*\*\*\*\* 17

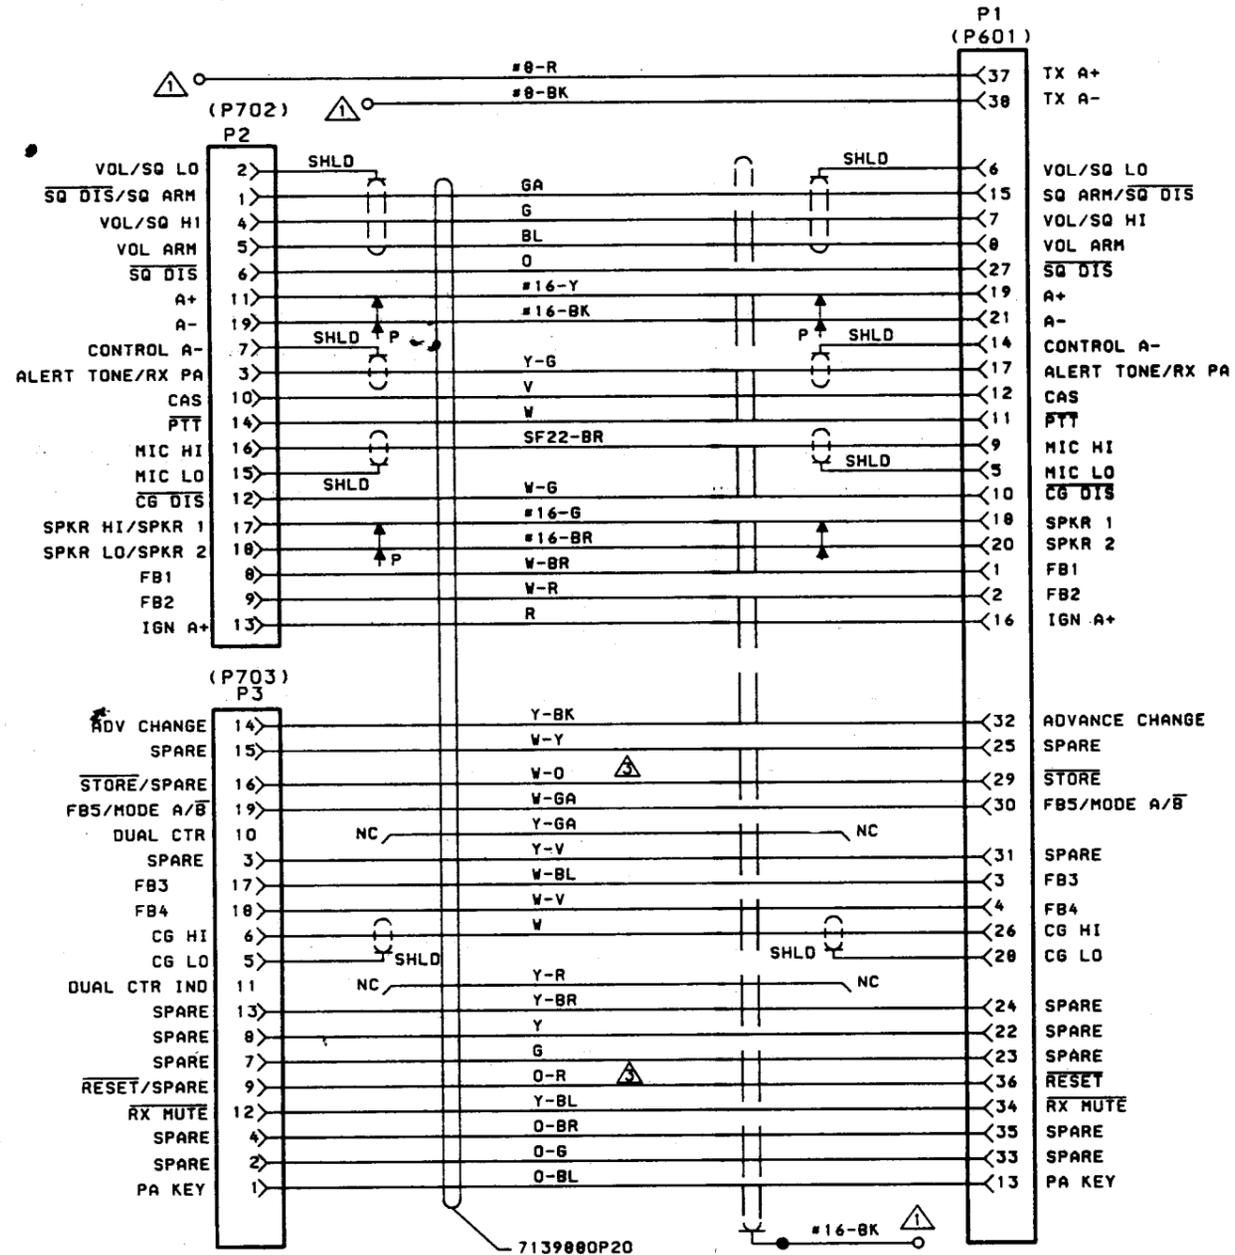

- 1. ELECTRICALLY UNCONNECTED UNTIL INSTALLED BUT TERMINATED PER ASM 19D901739.
- 2. ALL WIRES ARE #SF24 AWG UNLESS OTHERWISE SPECIFIED.
- 3. FOR GROUPS 3, 4 & 6 W-O AND O-R WIRES ARE NOT CONNECTED AT EITHER END.

WIRING DIAGRAM

(19D901742, Sh. 1, Rev. 0)

Power/Control Cable  
19D901739G1, 2, 5

POWER/CONTROL CABLES  
30 CONDUCTOR SHORT GRD.  
19D901739G1 STANDARD  
19D901739G2 30 FT. CABLE  
19D901739G5 10 FT. CABLE

ISSUE 2

SYMBOL	GE PART NO.	DESCRIPTION
----- PLUGS -----		
P1		Connector. Includes: Shell. Housing. Cover. Contact, electrical rated @ 4 amps; sim to AMP 350657-1. (P1 - 1 thru 17, 22 thru 36). Contact, electrical rated @ 35 amps; sim to AMP 350655-1. (P1 - 37, 38). Contact, electrical rated @ 4 amps; sim to AMP 350656-1. (P1 - 18 thru 21). Thumbscrew: thd. size M4 x 0.7. (Secures P1 to radio). Flatwasher: 1.7 - 1.85 ID. (Used with thumbscrew). Retaining ring. (Contains thumbscrew). Gasket. (Used with P1 cable clamp). Cable clamp. Machine screw, No. M3-0.5 x 25. (Secures P1 cable clamp). Nut, hex: No. M3 x 0.5MM. (Secures P1 cable clamp). Lockwasher, internal tooth: No. 3MM. (Secures P1 cable clamp).
P2		Connector. Includes: Shell. Contact, electrical: wire range No. 18-24 AWG; sim to Molex 08-50-0108. (P2 - 11, 17 thru 19). Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (P2 - 1 thru 5, 6 thru 10, 12 thru 16).
P3		Connector. Includes: Shell. Contact, electrical: wire range No. 22-26 AWG; sim to Molex 08-50-0108. (P3 - 1 thru 9, 12 thru 19).
----- MISCELLANEOUS -----		
	19A701460P2	Cable, red; sim to GE S1-57528.
	19A701460P10	Cable, black.
	19B800629P1	Solderless terminal. (Located on black ground wire).
	19B800629P3	Solderless terminal. (Located on red + wire).
	19A701507P606	Screw, thd forming: M3.5-1.27 x 9.60. (Secures J1 cover to housing).
	19A701507P608	Screw, thd. forming: No. 3.5-1.27 x 12.7. (Secures J1 connector to housing).
	19B227456G1	Extraction tool.
GROUND CABLE KIT (5 1/2 TO 33 FT MOD) 19A136690G1		
	19A701460P10	Cable, black. (Approx 33 feet).
	19A701376P3	Contact, electrical rated @ 35 amps; sim to AMP 350655-1.
	19B800629P3	Solderless terminal.
	19A115799P4	Solderless terminal. (Optional terminal for cable).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES