




GE Mobile Communications

PSX-200/PSX-SE SERIES 150-174 MHz, 40 WATT MOBILE COMBINATION

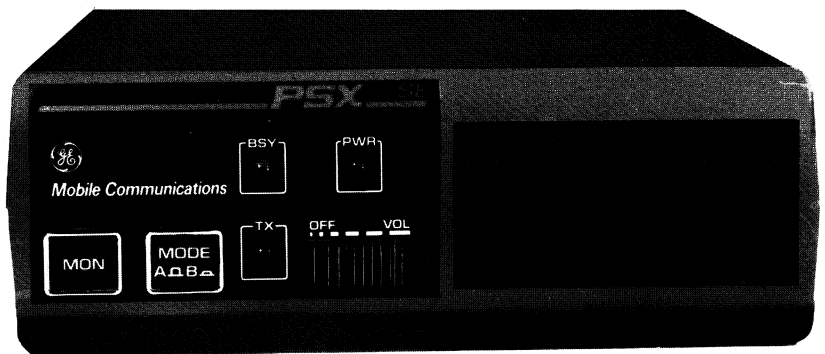

ACN-533

TABLE OF CONTENTS

SERVICE SECTION	LBI-31591
TRANSMITTER/RECEIVER	LBI-31588
SYNTHESIZER/INTERCONNECT	LBI-31584
SYNTHESIZER/INTERCONNECT (After 2/90)	LBI-31733

TABLE OF CONTENTS

SYSTEM SPECIFICATIONS	iii
COMBINATION NOMENCLATURE	iv
DESCRIPTION	1
OPERATION	3
MAINTENANCE	3

CAUTION

Although the highest DC voltage in this mobile equipment is supplied by the vehicle battery, high currents may be drawn under short circuit conditions. These currents can possibly heat metal objects such as tools, rings, watchbands, etc., enough to cause burns. Be careful when working near energized circuits!

High-level RF energy in the transmitter Power Amplifier assembly can cause RF burns upon contact. Keep away from these circuits when the transmitter is energized!

SYSTEM SPECIFICATIONS*

FCC IDENTIFICATION NUMBER	TR-105-C
FREQUENCY RANGE	150-174 MHz
BATTERY DRAIN	
Receiver (with Channel Display)	
Squelched	0.55 milliamperes
Unsquelched	0.95 milliamperes
Transmitter	9.5 Amperes @ 13.6 Volts
Channel Memory (Radio "OFF")	135 milliamperes
FREQUENCY STABILITY	$\pm 0.0005\%$
VOLTAGE	13.8 $\pm 20\%$
TEMPERATURE RANGE	-30°C (-22°F) to +60°C (140°F)
DUTY CYCLE	20% Transmit, 100% Receive
DIMENSIONS, LESS ACCESSORIES (H X W X D)	65 MM X 190 MM X 240 MM (2.55 X 7.5 X 9.4 inches)
WEIGHT, LESS ACCESSORIES	2.07 kg (4.5 pounds)

TRANSMITTER		RECEIVER	
POWER OUTPUT	40 Watts	AUDIO OUTPUT (to 4.0 ohms speaker)	3 Watts (less than 5% distortion)
CONDUCTED SPURIOUS AND HARMONIC EMISSION	-75 dB	SENSITIVITY	12 dB SINAD 20 dB Quieting Method
MODULATION DEVIATION	0 to +5 kHz (+3.75 kHz voice modulation and 0.75 kHz CG modulation)		0.30 uV 0.4 uV
AUDIO SENSITIVITY	50 to 100 Millivolts at J911-4 20 to 50 Millivolts at J911-5	SELECTIVITY	EIA Two-Signal Method
AUDIO FREQUENCY CHARACTERISTICS	Within +1 dB to -3 dB of a 6 dB per octave pre-emphasis from 300 to 3000 Hz per EIA standards. Post limiter filter per FCC and EIA.		-80 dB @ ± 30 kHz
DISTORTION	Less than 2% (1000 Hz) Less than 5% (300 to 3000 Hz)	SPURIOUS REJECTION	-85 dB
DEVIATION SYMMETRY	0.1 kHz	IMAGE REJECTION	-90 dB
RF OUTPUT IMPEDANCE	50 ohms	INTERMODULATION (12 dB SINAD)	-78 dB
FREQUENCY SEPARATION	17 MHz (Lo split) 24 MHz (Hi split)	MODULATION ACCEPTANCE	± 7.0 kHz
CARRIER ATTACK TIME	30 milliseconds	SQUELCH SENSITIVITY	<8 dB SINAD
AUDIO ATTACK TIME	30 milliseconds	FREQUENCY RESPONSE	Within +2 and -8 dB of a standard 6 dB per octave de-emphasis curve from 300 to 3000 Hz (1000 Hz reference)
CHANNEL GUARD TONE DISTORTION	5%	RF INPUT IMPEDANCE	50 ohms
FM NOISE	-55 dB	FREQUENCY SEPARATION	17 MHz (Lo split) 24 MHz (Hi split)
MIC INPUT IMPEDANCE	Low	IMAGE REJECTION	-90 dB
POWER ADJUST RANGE	30 to 40 watts	RECEIVER RECOVERY TIME	100 milliseconds @ 8 dB SINAD
		RECEIVER RESPONSE TIME	($\leq \frac{25000}{\text{CG FREQ}}$) Tone CG
		RECEIVER ATTACK TIME	90 milliseconds @ 8 dB SINAD
		HUM AND NOISE	Squelched Unsquelched
			-80 dB -54 dB
		CG BANDWIDTH	>1%, <2% of marked frequency

* These specifications are typical and intended primarily for use of the serviceman. Refer to the appropriate Specifications Sheet for the complete specifications.

COMBINATION NOMENCLATURE

Digits 1&2	Digit 3	Digit 4	Digit 5	Digit 6	Digits 7&8	Digit 9	Digit 10
Product Code	Transmit Frequency Range	Receive Frequency Range	Channel Spacing	Type	RF Power Output	Freq. Capacity	Oscillator Stability
N5	H 150-174 MHz	H 150-174 MHz	1 30KHz	W Wide Band	40 40-Watts	C 2 Tx 2 Rx	A ±2.5 PPM
						D PSX-SE	B ±5 PPM

STRUCTURED OPTIONS

Digit A	Digit C	Digit D	Digit E	Digit F	Digit H	Digit J	Digit M	Digit N	Digit P	Digit R	Digit S	Digit T
Programmed Frequencies	Option	Channel Guard	Channel Guard Hookswitch	Tweet FREDS (cpu XTAL)	DTMF Encoder	Carrier Control Timer	Microphones (w/ Hanger)	Antenna	Power Source	Accessories	Speakers	Tone Cable
0 Test Program	0 None	0 CG Reject Filter	0 None	0 None (Standard Crystal)	0 None	0 None	0 Phoenix w/ Hanger	0 None	0 12 VDC	0 Accessories	0 Internal As Ordered	0 None
1 Custom Programmed	A T-99 (Dec-2T)	B Tone	1 Hook Switch	1 1st Alternate	1 DTMF Enc.	1 1-Minute	1 MASTR II w/ Hanger	A Antenna HB/UHF Whip	1 120 VAC 60 Hz	N Power Cable & Mounting	1 Delete Mic. Delta Window Mt.	1 Cable Enc. or Dec.
	B T-99 (Dec-4T)			2 2nd Alternate			4 None		2 120 VAC 60 Hz DC Remote		2 Delta Style	2 Tone Cable Enc. / Dec.
	C T-99 (Dec-2T w/ Ext Alarm Sw.)						5 Delta		3 120/140 VAC 50/60 Hz w/DC Remote		5 Weatherproof Horn	
	G Public Address w/ Int Spkr Sw.						6 Delta Style Sta. Mic. w/CG Mon.		4 120/240 VAC 50/60 Hz		A Int/Ext Spkr & Switch	
	H Public Address w/ Int Spkr Sw.						7 MASTR II Mic. w/CG Monitor					

OPTION COMPATIBILITY CHART

DB	CH
X	X
X	X
X	X
X*	

SA

SA - Internal/External Speaker

MC01

MC01 - PHOENIX Microphone

P1-P4, PS01, PS02

P1-P4, PS01, PS02 - Power Supply Options

P, R, S (DIGIT 9)

P, R, S - Dual Priority Scan, No Modes

DB - Channel Guard

CH - Public Address

NOTE - "X" indicates non-compatibility.
All other options are compatible.

* Digital Channel Guard Only

STRUCTURED OPTIONS

Digit A	Digit C	Digit D	Digit E	Digit F	Digit H	Digit J	Digit M	Digit N	Digit P	Digit R	Digit S	Digit T
Programmed Frequencies	Option	Channel Guard	Channel Guard Hookswitch	Tweet FREQS (cpu XTAL)	DTMF Encoder	Carrier Control Timer	Microphones (w/ Hanger)	Antenna	Power Source	Accessories	Speakers	Tone Cable
0 Test Program	0 None	0 CG Reject Filter	0 None	0 None (Standard Crystal)	0 None	0 None	0 Phoenix w/ Hanger	0 None	0 12 VDC	0 Accessories	0 Internal As Ordered	0 None
1 Custom Programmed	A T-99 (Dec-2T)	B Tone	1 Hook Switch	1 1st Alternate	1 DTMF Enc.	1 1-Minute	1 MASTR II w/ Hanger	A Antenna HB/UHF Whip	1 120 VAC 60 Hz	N Power Cable & Mounting	1 Delete Mic. Delta Window Mt.	1 Cable Enc. or Dec.
	B T-99 (Dec-4T)			2 2nd Alternate			4 None		2 120 VAC 60 Hz DC Remote		2 Delta Style	2 Tone Cable Enc./Dec.
	C T-99 (Dec-2T w/ Ext Alarm Sw.)						5 Delta		3 120/140 VAC 50/60 Hz w/DC Remote		5 Weatherproof Horn	
	G Public Address w/ Int Spkr Sw.						6 Delta Style Sta. Mic. w/CG Mon.		4 120/240 VAC 50/60 Hz		A Int/Ext Spkr & Switch	
	H Public Address w/ Int Spkr Sw.						7 MASTR II Mic. w/CG Monitor					

OPTION COMPATIBILITY CHART

	DB	CH
SA	X	X
MC01	X	X
P1-P4, PS01, PS02	X	X
P, R, S (DIGIT 9)	X*	

SA - Internal/External Speaker
MC01 - PHOENIX Microphone
P1-P4, PS01, PS02 - Power Supply Options
P, R, S - Dual Priority Scan, No Modes
DB - Channel Guard
CH - Public Address

NOTE - "X" indicates non-compatibility.
All other options are compatible.
* Digital Channel Guard Only

DESCRIPTION

The General Electric synthesized-wideband PSX-200 Mobile radios are completely solid state utilizing micro-computer technology and integrated circuits (IC's) to provide high quality, high reliability, high performance radios. The 150-174 MHz PSX-200 provides 40 watts RF output power with allowable channel separation of 24 MHz transmit and 24 MHz receive.

The radio contains a transmit/receiver board, synthesizer/interconnect board, and a recessed front panel which houses the internal speaker and identifies the controls and indicators. Its small size makes it ideal for front mounting in conventional vehicles. The standard combinations are equipped with:

- Microcomputer controlled frequency synthesizer
- Channel Guard Tone Reject Filter
- One or two channels
- .0005% Frequency Stability

Software options include:

- Carrier Control Timer
- Tone Channel Guard

The radio consists of an effective heat-dissipating, aluminum die cast "H" frame on which two circuit boards are mounted. The transmitter/receiver board is mounted on the bottom of the "H" frame and includes the exciter, power amplifier, and receiver audio circuitry. The synthesizer/interconnect board which is mounted on the top of the "H" frame, contains all interconnections, micro-computer, frequency synthesizer, transmitter audio processor, microphone pre-amplifier, and Channel Guard circuitry. All external connectors, controls and indicators are mounted directly on the two boards for reliability and ease of disassembly.

The boards plug into each other, eliminating the need for interconnecting wires. The only wires used in the radio are the plug-in leads for the internal speaker. The top and bottom covers enclose the "H" frame and provide optimum protection for the radio. The internal speakers mount inside the front panel.

The front control panel is made of highly durable ABS plastic with rounded corners and recessed controls to meet passenger safety requirements. The panel provides access to four standard operator controls: a mode A/B switch, a momentary MONITOR pushbutton (fixed squelch and Channel Guard monitor), and a rotary, edge-mounted Volume/ON-OFF control. A

red Transmit indicator LED (Light Emitting Diode) and yellow Channel Busy indicator are provided. Power on is indicated by a green LED.

Supply voltage used in the radio is provided by the vehicle battery. The radio is designed for operation only in 12 Volts, negative ground vehicle systems.

The radio is of modular construction. Both major modules and tuning adjustments are easily accessible. Loosening the two screws in the rear of the top cover provides access to the synthesizer/interconnect board. Loosening the two screws in the rear of the bottom cover provides access to the transmitter/receiver board.

A PROM label located on the top cover inside the radio describes the radio's personality. This information provides the service man with a quick reference to the operating characteristics of the radio.

Information identified on the PROM label includes the PROM Kit number, the radio serial number, all transmit and receive channel numbers and frequencies, Channel Guard tones and carrier control timer information for each channel. This information is provided for both operating modes A and B.

If the personality of the radio is changed (EEPROM reprogrammed) all information relating to the radio's new personality should be recorded either on the old label, if space is available, or on a new label. The part number of the PROM label is 19C850828P1 and may be ordered from General Electric Service Parts.

PROGRAMMING

The EEPROM allows the radio to be reprogrammed as needed to adapt to changing system requirements. RF frequencies, Channel Guard tones and the CCT function can be reprogrammed. The EEPROM is reprogrammed through radio functional connectors J910 and J911 using the General Electric Universal Programmer Model No. TQ2310. This programmer allows all information to be loaded simultaneously.

The following conditions must be followed for correct programming:

1. Use only the PHOENIX - no scan program.
2. Only channels 1A (Mode A) and 1B (Mode B) may be programmed. If other channels are programmed, a verify error will occur after WRITING to radio.

3. Digital Channel Guard (PSX-200 only) should not be programmed and will be ignored by the radio if done.

NOTE

When programming RF frequencies in the 150-174 MHz band, remember that all frequencies used must be divisible by either 5 or 6.25.

Programming instructions are provided in the maintenance manual for the programmer.

SYNTHESIZER/INTERCONNECT

The frequency synthesizer consists of a microcomputer, electrically erasable PROM (EEPROM), a frequency synthesizer IC, a common transmit/receive VCO, and associated circuitry. The frequency synthesizer under control of the microcomputer, generates all transmit and receive RF frequencies.

The EEPROM stores binary data for all RF frequencies, Channel Guard tones and the timing function of the carrier control timer (CCT). The microcomputer accesses the EEPROM and provides the correct Walsh bits to the channel guard board to generate the correct Channel Guard tone on a per channel basis.

CHANNEL SELECTION

The MODE A/B switch selects RF channels.

By operating the A/B pushbutton switch the user can select two independent transmit and receive frequencies.

NOTE

The mode A/B switch may be used to provide mobile-to-mobile communications through an intermediate repeater (repeated path) or direct mobile-to-mobile communications. For example: channel 1 (mode A) may be programmed for the repeater frequency (repeated path) while channel 2 (mode B) would be programmed for the mobile receive frequency (direct path). Judicious programming will allow selection of direct or repeated paths on desired channels.

TRANSMITTER

The transmitter consists of a wide band exciter, audio processor power amplifier, and a solid state antenna

switch. The audio processor is located on the synthesizer interconnect board. The RF power output level is set internally to rated output power, typically 40 watts.

Frequency stability for both the transmitter and receiver is maintained by an electronic temperature compensation network.

RECEIVER

The dual conversion receiver consists of a front end section and two mixer/IF sections operating at 45 MHz and 455 kHz. The receiver also contains a squelch and audio section. The squelch circuit is contained within the 2nd converter-FM detector IC. The audio section provides a 3-watt audio output into a 4-ohm load with less than 5% distortion.

CHANNEL GUARD

Channel Guard provides a means of restricting calls to specific radios through the use of a continuous tone coded squelch system (CDCSS). Tone frequencies range from 71.9 Hz to 210.7 Hz. The Channel Guard tone frequencies are software programmable. These frequencies are listed in the Programmers Manual.

AC POWER SUPPLY OPTION

To use the radio as a base station, an optional 121 Volt AC, 60 Hertz power supply is available. An eight foot cable connects the power supply to the radio. The cable length permits the power supply to be located away from the radio. A green Power On LED is located on the front panel of the power supply. In addition, a 120/240 Volt AC, 50/60 Hz supply is also available where its use is dictated. DC remote control may be provided with either supply.

When using the AC power supply, reduce the transmit power so that maximum current drain does not exceed 6 amperes. Adjust the Power Adjust Control accordingly.

MICROPHONE

The standard mobile combinations use an electret microphone. The Phoenix microphone is housed in a sturdy case, and the extendable coiled cord plugs into a jack at the back of the radio. The microphone is secured to the radio by means of a strain relief hook on the microphone cable. A microphone hanger is supplied with the microphone. Option microphones such as the MASTR II and MASTR Delta microphones may be used.

CG HOOKSWITCH OPTION

In Channel Guard applications, a microphone hookswitch may be supplied with the radio. The Channel Guard is disabled when the microphone is removed from the hookswitch.

EXTERNAL SPEAKER (OPTIONAL)

A five-inch speaker, contained in a LEXAN® housing, provides an audio output of 3 watts. The nominal speaker impedance is 3.2 ohms. The speaker leads are connected to pins 3 and 7 of Systems Plug P910. A weatherproof horn type speaker is available also. When the External Speaker is used, refer to the Installation Instructions and Interconnection diagram for jumper modifications in the appropriate maintenance manual.

UNIVERSAL TONE CABLE

A universal tone cable equipped with a 9-pin Winchester connector is required when an external tone encoder or decoder is used. The tone cable interconnects the tone encoder/decoder with the radio. It also may be used with the public address option. Refer to the installation diagrams in the option manual for jumper modifications. A second cable is required when both encode and decode functions are used.

DTMF ENCODER

The DTMF encoder option provides a unique front cap for the radio which houses the DTMF touch tone pad assembly. The external encoder is connected to the radio via a tone cable terminating at HL75-HL79 on the synthesizer/interconnect board. A second cable interconnects the touch pad to the synthesizer/interconnect board. An external speaker is required. Refer to the Installation Diagram for details.

OPERATION

Complete operating instructions for the Two-Way Radio are provided in a separate Operator's Manual. The basic procedures for receiving and transmitting messages follows:

TO RECEIVE A MESSAGE

1. Turn the radio on by turning the ON-OFF VOLUME control to the right.

2. Select desired mode by pressing the MODE A/B switch. Channel sequences are Channels 1 & 2. Mode A (Channel 1) is out. Mode B (Channel 2) is in.
3. Push in the MONITOR button to disable the squelch circuit and Channel Guard decoder. Adjust the volume control for a comfortable listening level and then release the MONITOR button for normal operation.

The radio is now ready to receive messages from other radios in the system.

TO TRANSMIT A MESSAGE

1. Turn the radio on as directed in the "To Receive a Message" section.
2. Select desired channel.
3. Press the PTT switch on the microphone and speak across the face of the microphone in a normal voice level. Release the PTT switch as soon as the message has been given. The red indicator light on the control panel will glow each time the microphone PTT switch is pressed, indicating that the transmitter is on the air. The receiver is muted when the transmitter is keyed.

MAINTENANCE

The use of microcomputer technology allows self diagnostic routines to be incorporated in software. The diagnostic routines are easy to run and provide a quick analysis of microcomputer and frequency synthesizer operation. The routines should always be run first when troubleshooting the radio.

The service section of this manual contains the diagnostic routines and other maintenance information to service the radio. Included are:

- System Interconnections
- Mechanical Layout Diagrams
- Disassembly Procedures
- IC and Chip Component Replacement Procedures
- Self-Diagnostic Routines
- Service Tips
- Transmitter and Receiver Alignment Procedures
- Troubleshooting Information

