
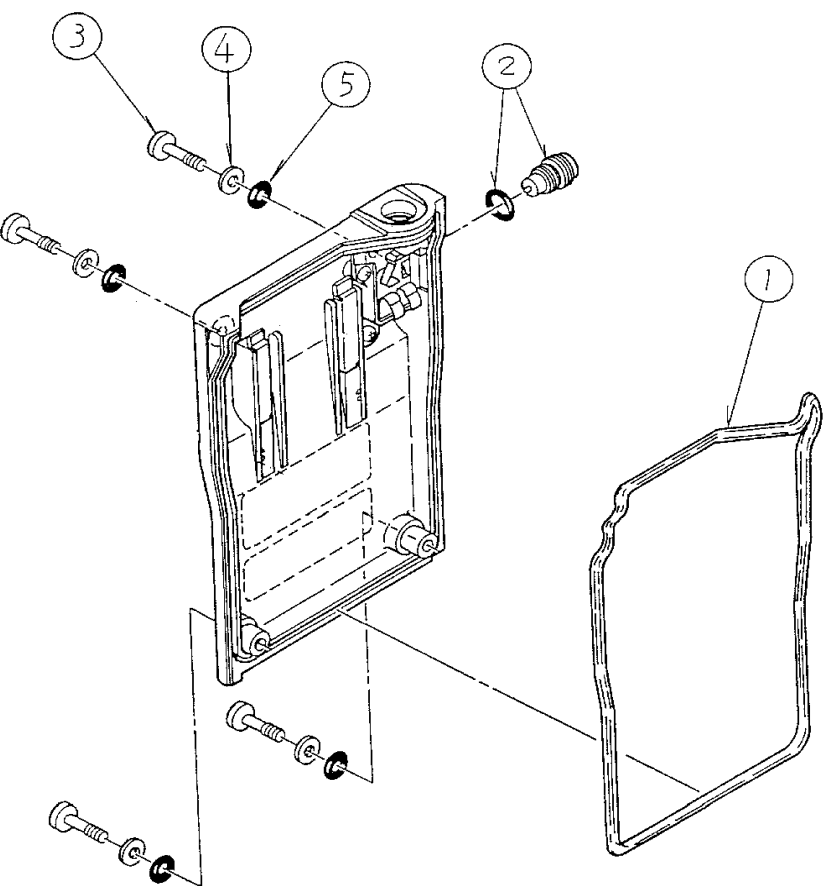


SERVICE ASSEMBLIES
FOR M-RK RADIOS

TABLE OF CONTENTS	
	<u>Page</u>
INTERCONNECTION DIAGRAM	
M-RK I	1
M-RK II	1
ASSEMBLIES	
M-RK I	2
M-RK I Front Assembly	2
M-RK I LED Flex Assembly	3
M-RK I/II Rear Assembly	3
M-RK I/II PA Assembly	4
M-RK II	4
M-RK II Front Assembly	5
M-RK II LCD/KB Flex Assembly	5
M-RK I ETS	6
M-RK II ETS	6
M-RK I ETS/Aegis	7
M-RK II ETS/Aegis	7
M-RK I LED Flex Assembly (ETS/Aegis)	8
M-RK II LED/KB Flex Assembly (ETS/Aegis)	8
M-RK I/II PA Assembly (Aegis)	9
COMPONENT LAYOUT	
Control Board	10
M-RK I LED Flex Assembly (Side A)	12
M-RK I LED Flex Assembly (Side B)	12
MRK II LCD/KB Flex Assembly	13
RADIO BOARD ASSEMBLY	
Radio Board VHF/UHF	14
Radio Board (800/900 MHz)	15
OUTLINE DIAGRAM	
Control Board (Aegis/VG)	11
Radio Board VHF/UHF (ETS)	16
SCHEMATIC DIAGRAM	
M-RK I LED Flex Assembly (Aegis/VG)	17
Control Board	18
Control Board (Aegis/VG)	20
M-RK II LCD/KB Flex Assembly	22
M-RK II LCD/KB Flex Assembly (Aegis/VG)	23
Radio Board (VHF)	24
Radio Board (VHF ETS)	25
Radio Board (UHF)	26
Radio Board (UHF ETS)	27
Radio Board (800 MHz)	28
Radio Board (900 MHz)	29

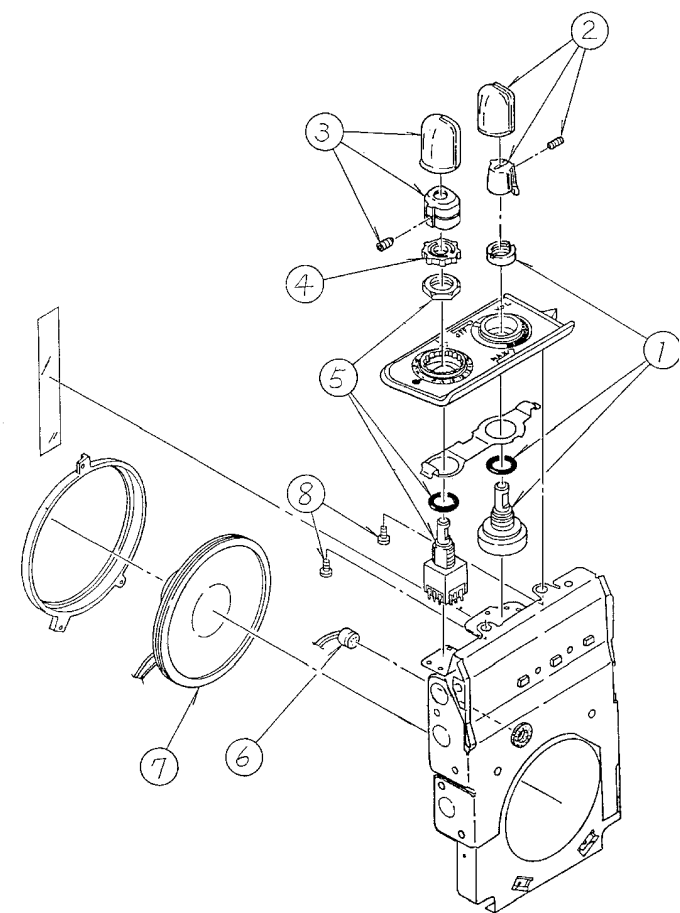

Symbol	Parts Number*	Description
1	2RFA001258	VOL W/NUT/O-RING
2	AS00000297	VOL KNOB W/STOPPER/SCREW
3	AS00000289	CH KNOB W/STOPPER/SCREW
4	3FZA025502	CH SWITCH STOPPER
5	2KHA022166	CH SWITCH W/NUT/O-RING
6	AS00000453	MICROPHONE W/CAPACITOR
7	2S08000192	SPEAKER
8	3NAX003120	PAN HEAD TAPPING SCREW, M2x3.5

*Prefix with "K19/" when ordering replacement parts


344A3937P1 ~ P7, P11 ~ P17, P21 ~ P25, P31 ~ P35, P41 ~ P46, P51 ~ P56		
Symbol	Parts Number*	Description
1	3FED001846	REAR O-RING GASKET
2	AS00000206	UDC RF CONNECTOR W/O-RING
3	3NAX003161	PAN HEAD TORX SCREW, M2.6x10
4	3NDX001631	WASHER
5	3FED001853	O-RING A

M-RK I LED FLEX ASSEMBLY

(A3WL16622, Rev. 3)

M-RK I/II
REAR ASSEMBLY


(A3WL16520, Rev. 3)

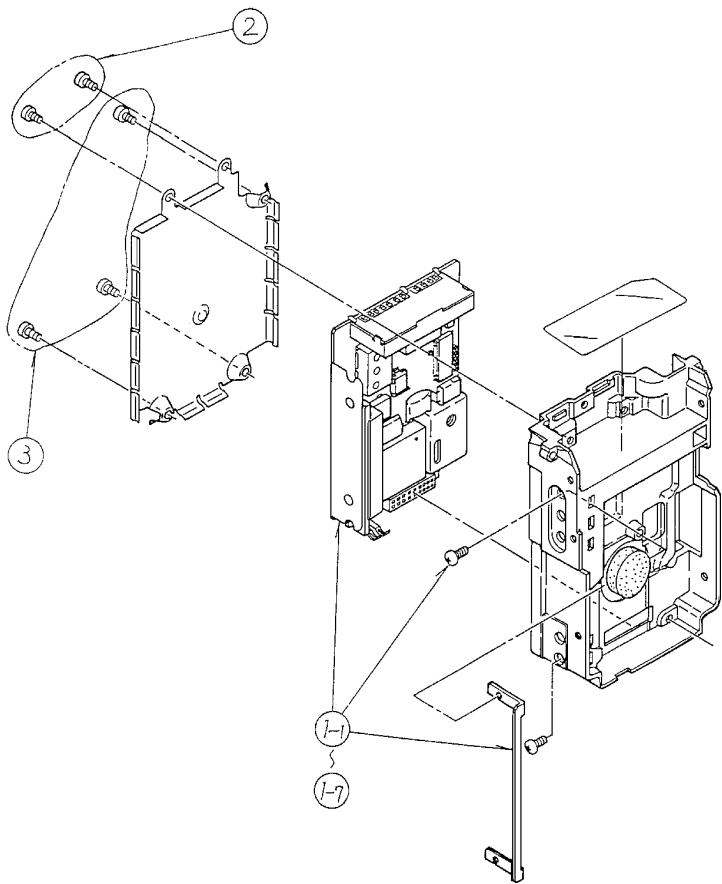

344A3937P1 ~ P7, P11 ~ P17, P21 ~ P25, P31 ~ P35		
Symbol	Parts Number*	Description
1-1	AS00000214	PA MODULE (VL) W/RETAINER/SCREWS
1-2	AS00000222	PA MODULE (VH) W/RETAINER/SCREWS
1-3	AS00000230	PA MODULE (UL) W/RETAINER/SCREWS
1-4	AS00000248	PA MODULE (UM) W/RETAINER/SCREWS
1-5	AS00000255	PA MODULE (UH) W/RETAINER/SCREWS
1-6	AS00000263	PA MODULE (800) W/RETAINER/SCREWS
1-7	AS00000271	PA MODULE (900) W/RETAINER/SCREWS
2	3NAX003088	PAN HEAD SCREW, M2x2
3	3NAX003146	PAN HEAD SCREW W/SW, M2x4

M-RK I/II
PA ASSEMBLY

(A3WL16521, Rev. 3)

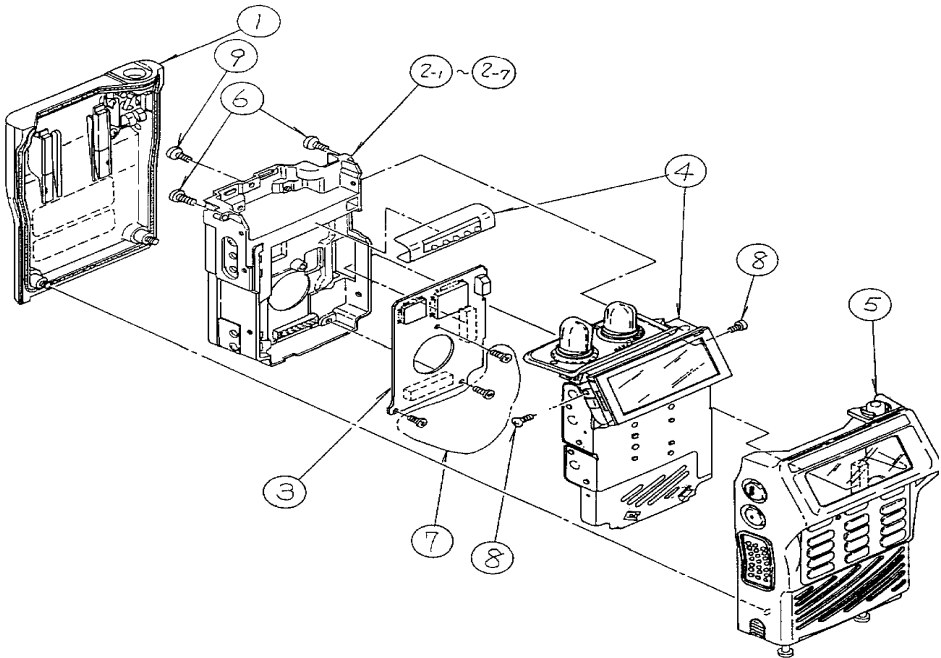


344A3937P11 ~ P17		
Symbol	Parts Number*	Description
1	AS000001154	REAR ASSY
2-1	AS00000115	RADIO BOARD ASSY 136 - 160 MHz
2-2	AS00000123	RADIO BOARD ASSY 150 - 174 MHz
2-3	AS00000131	RADIO BOARD ASSY 403 - 430 MHz
2-4	AS00000149	RADIO BOARD ASSY 440 - 470 MHz
2-5	AS00000156	RADIO BOARD ASSY 470 - 500 MHz
2-6	AS00000164	RADIO BOARD ASSY 806 - 869 MHz
2-7	AS00000172	RADIO BOARD ASSY 896 - 941 MHz
3	AS00000065	CONTROL BOARD ASSY
4	AS00000057	LCD/KB FLEX ASSY (M-RK II)
5	AS00000024	FRONT ASSY (M-RK II)
6	3NAX003096	PAN HEAD SCREW, M2x6
7	3NAX003146	PAN HEAD SCREW W/SW, M2x4
8	3NAX003088	PAN HEAD SCREW, M2x2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2x4, BLK

*Prefix with "K19/" when ordering replacement parts

M-RK II

(A3WL16550, Rev. 3)

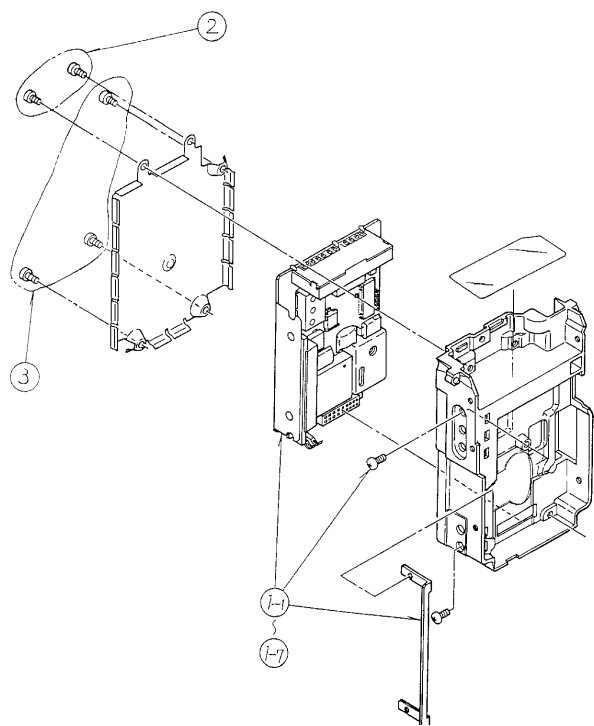

344A3937P41 ~ P46, P51 ~ P56		
Symbol	Parts Number*	Description
1-1	AS00000214	PA MODULE (VL) W/RETAINER/SCREWS
1-2	AS00000222	PA MODULE (VH) W/RETAINER/SCREWS
1-3	AS00000230	PA MODULE (UL) W/RETAINER/SCREWS
1-4	AS00000248	PA MODULE (UM) W/RETAINER/SCREWS
1-5	AS00000255	PA MODULE (UH) W/RETAINER/SCREWS
1-6	AS00000263	PA MODULE (800) W/RETAINER/SCREWS
2	3NAX003088	PAN HEAD SCREW, M2x2
3	3NAX003146	PAN HEAD SCREW W/SW, M2x4

*Prefix with "K19/" when ordering replacement parts

M-RK I/II PA ASSEMBLY (AEGIS)

(A3WL17792, Rev. 0)

