

SERVICE ASSEMBLIES
FOR M-RK RADIOS

TABLE OF CONTENTS	
	<u>Page</u>
INTERCONNECTION DIAGRAM	
M-RK I	2
M-RK II	3
ASSEMBLIES	
M-RK I	4
M-RK I Front Assembly	4
M-RK I LED Flex Assembly	5
M-RK I/II/SCAN Rear Assembly	5
M-RK I/II/SCAN PA Assembly	6
M-RK II	6
M-RK II Front Assembly	7
M-RK II/SCAN LCD/KB Flex Assembly	7
M-RK I ETS	8
M-RK II ETS	8
M-RK I ETS/Aegis	9
M-RK II ETS/Aegis	9
M-RK I LED Flex Assembly (ETS/Aegis)	10
M-RK II/SCAN LED/KB Flex Assembly (ETS/Aegis)	10
M-RK I/II/SCAN PA Assembly (Aegis)	11
M-RK SCAN	11
M-RK SCAN (ETS)	12
M-RK SCAN (ETS/Aegis)	12







Continued



Ericsson Inc.
Private Radio Systems
Mountain View Road
Lynchburg, Virginia 24502
1-800-528-7711 (Outside USA, 804-528-7711)


TABLE OF CONTENTS - Cont.

	<u>Page</u>
COMPONENT LAYOUT	
Control Board	13
M-RK I LED Flex Assembly (Side A)	15
M-RK I LED Flex Assembly (Side B)	15
MRK II/SCAN LCD/KB Flex Assembly	16
RADIO BOARD ASSEMBLY	
Radio Board VHF/UHF	17
Radio Board (800/900 MHz)	18
OUTLINE DIAGRAM	
Control Board (Aegis/VG)	14
Radio Board VHF/UHF (ETS)	19
SCHEMATIC DIAGRAM	
M-RK I LED Flex Assembly (Aegis/VG)	20
Control Board	21
Control Board (Aegis/VG)	23
M-RK II/SCAN LCD/KB Flex Assembly	25
M-RK II/SCAN LCD/KB Flex Assembly (Aegis/VG)	26
Radio Board (VHF)	27
Radio Board (VHF ETS)	28
Radio Board (UHF)	29
Radio Board (UHF ETS)	30
Radio Board (800 MHz)	31
Radio Board (900 MHz)	32
Radio Board (12.5 kHz)	33

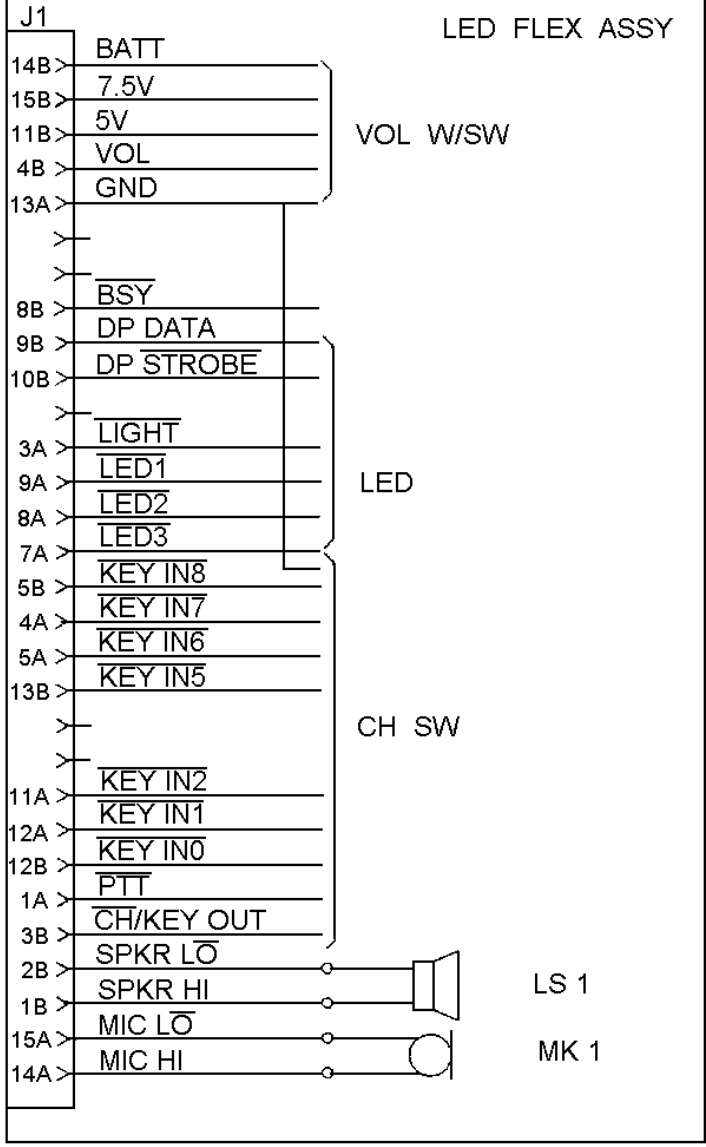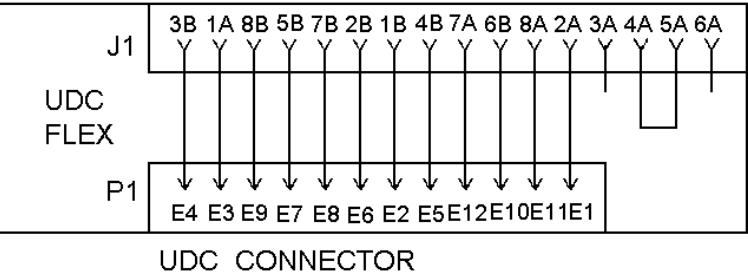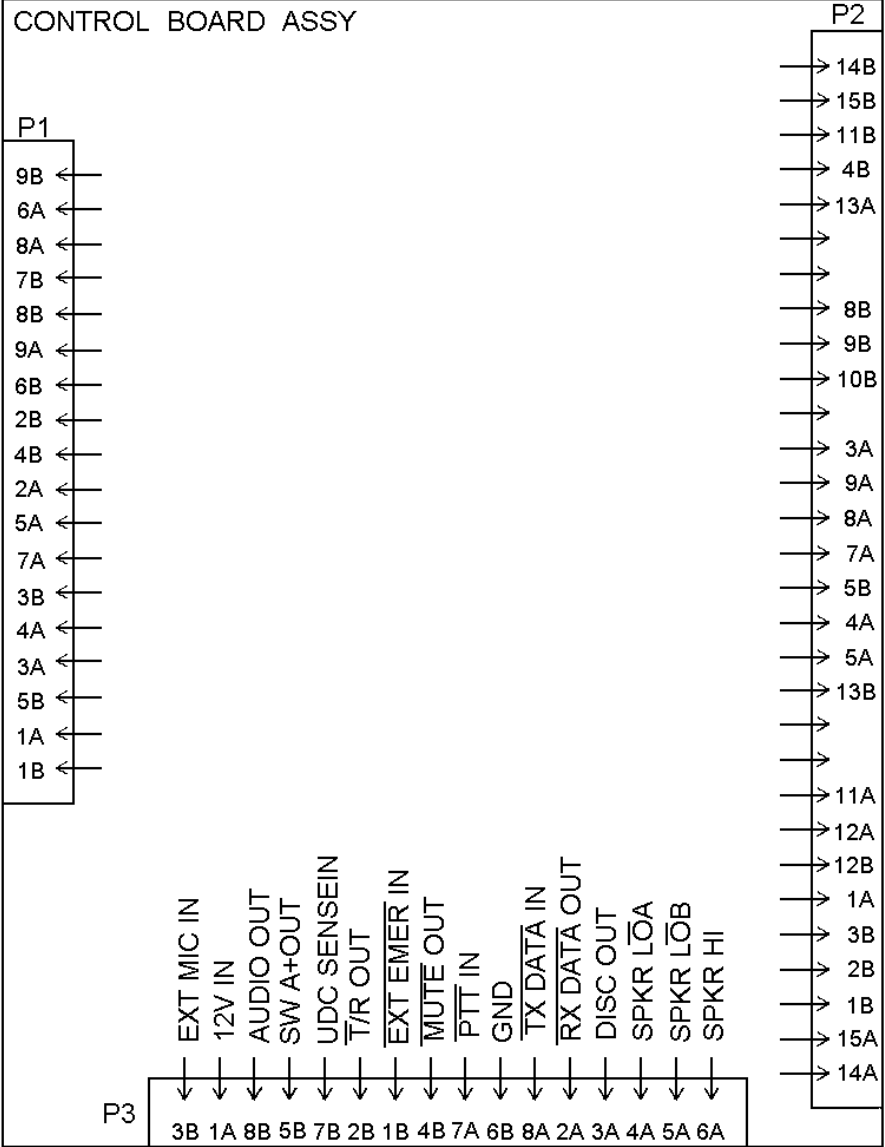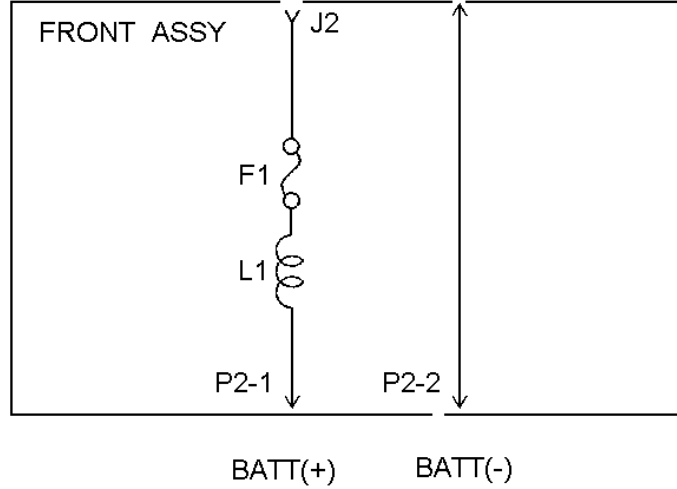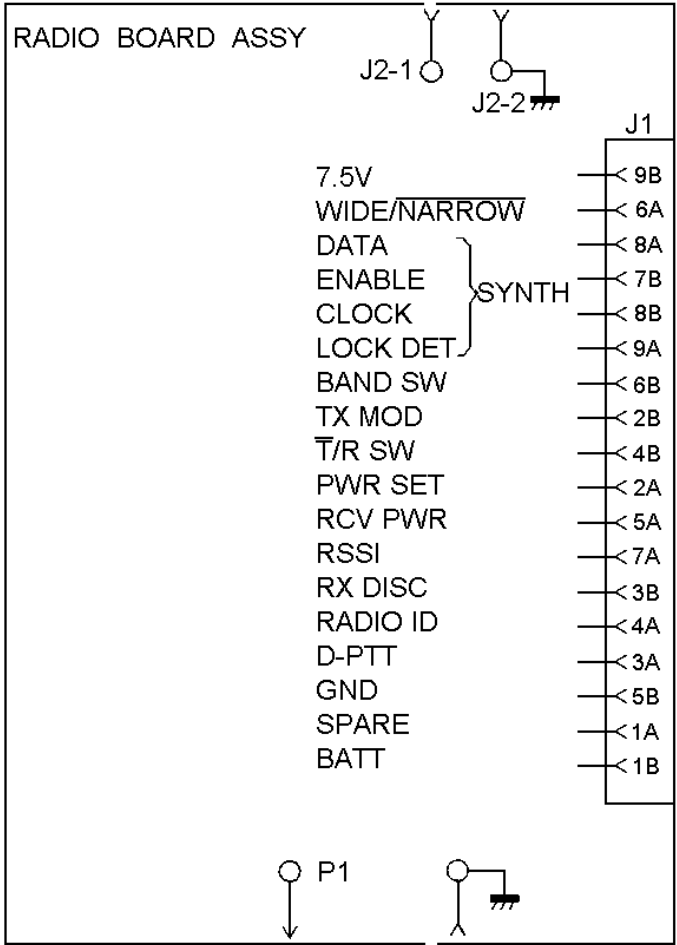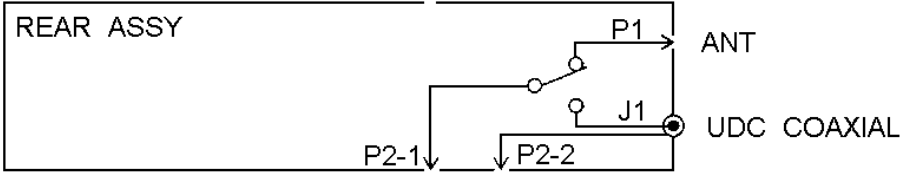



INTERCONNECTION DIAGRAM

LBI-38746

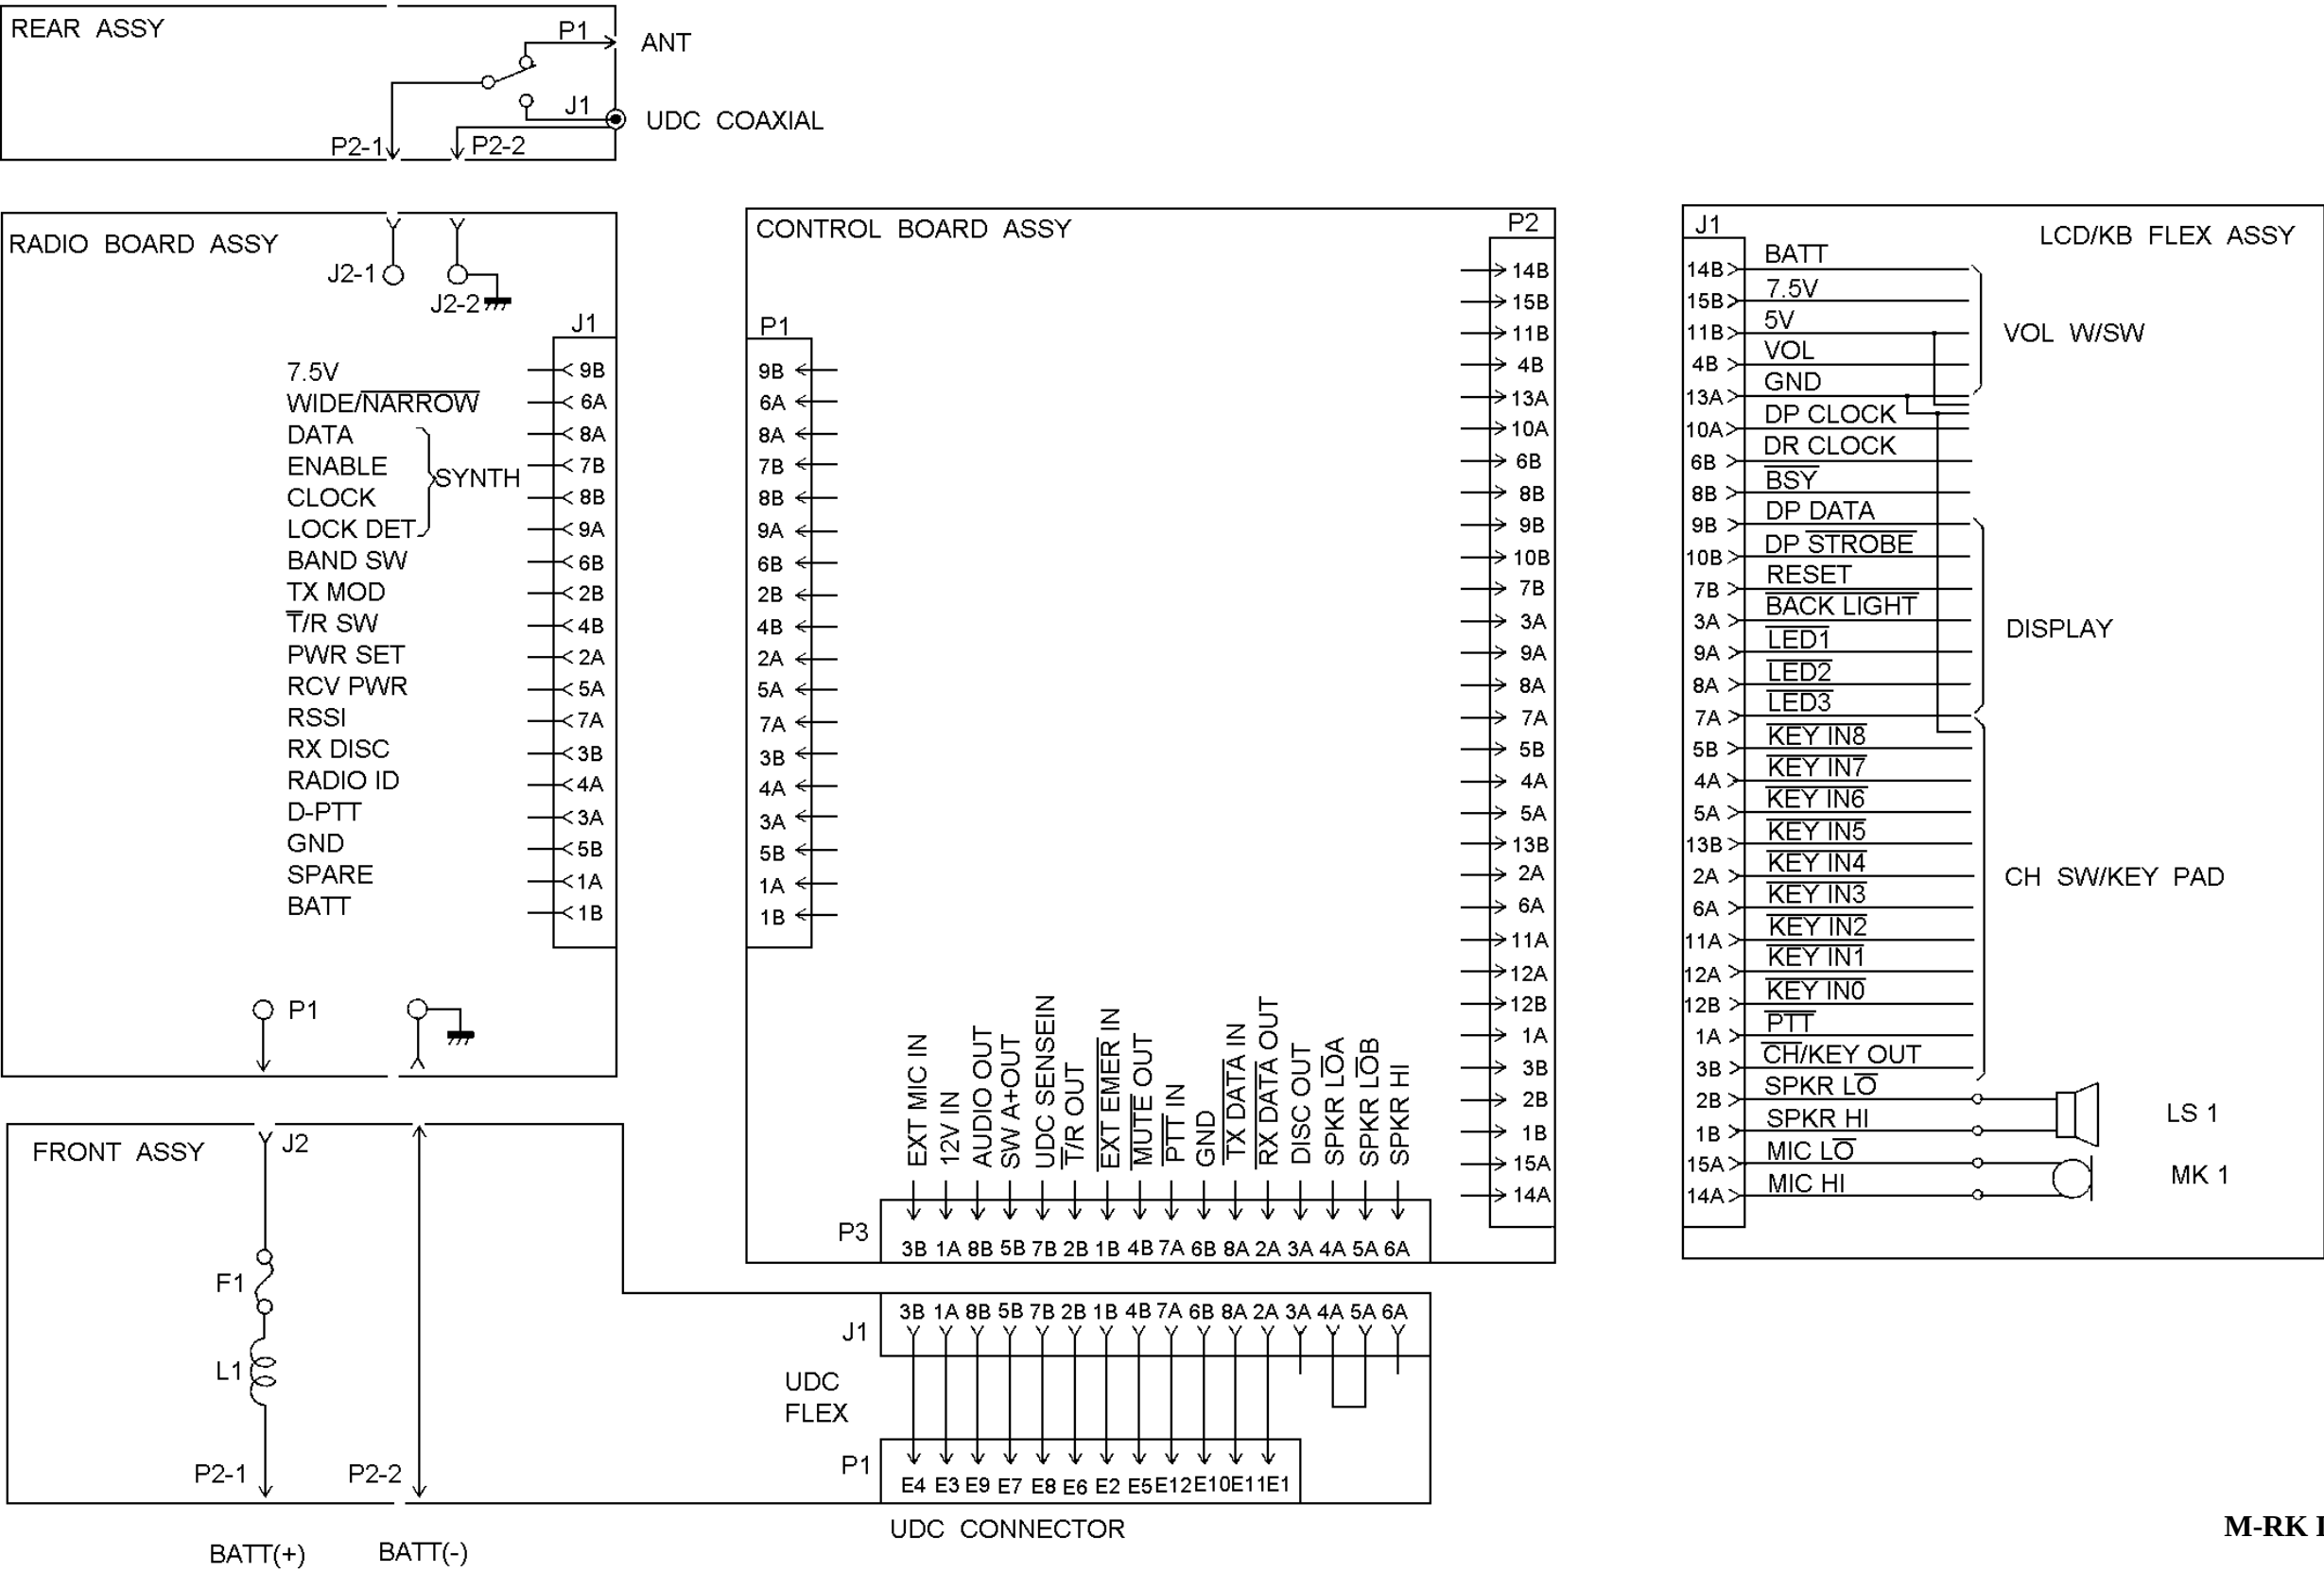

M-RK II

(A3WE05453, Rev. 2)

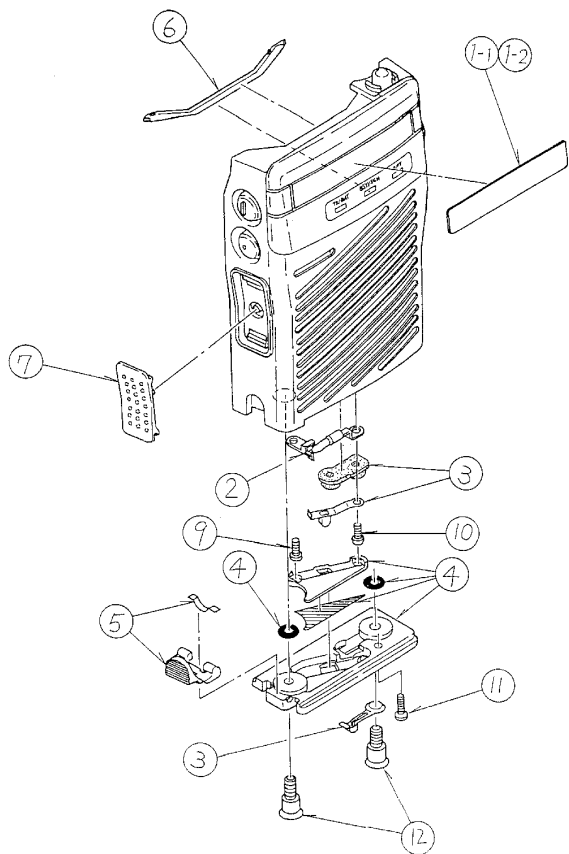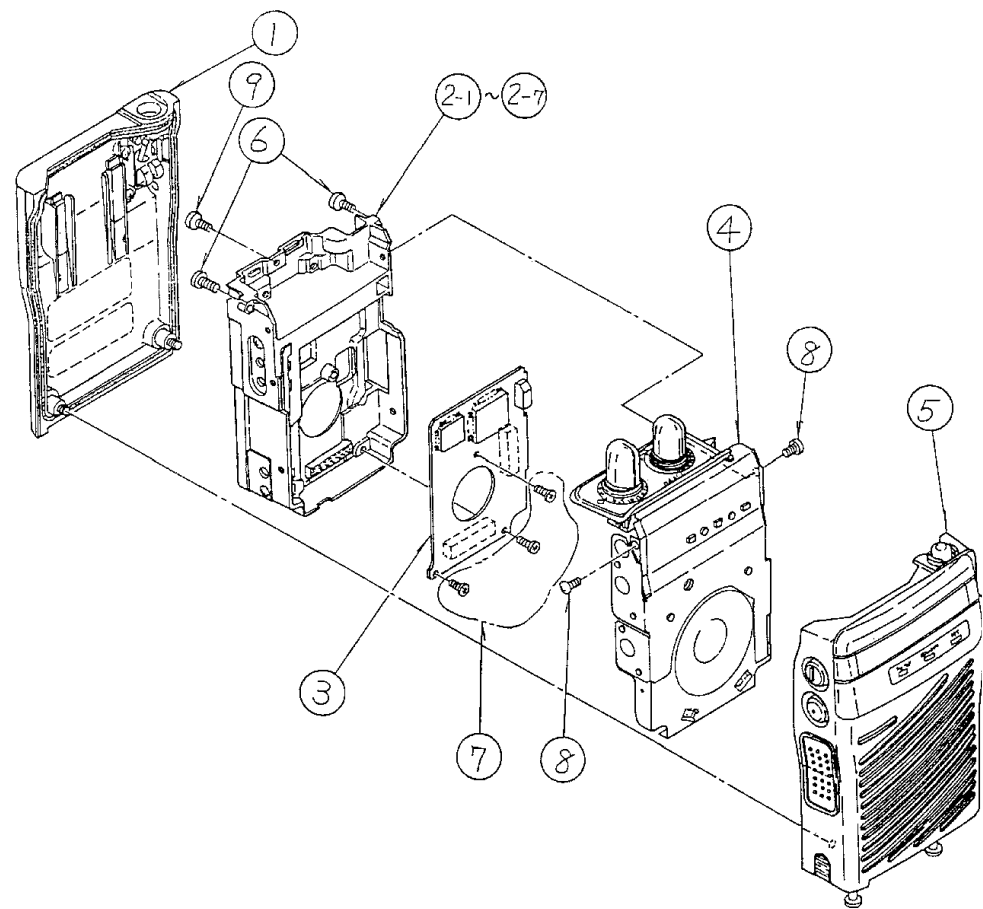

M-RK I

(A3WL16623, Rev. 2)



344A3937P1 ~ P7		
Symbol	Parts Number *	Description
1	AS00000032	REAR ASSY
2-1	AS00000115	RADIO BOARD ASSY 136 - 160 MHz
2-2	AS00000123	RADIO BOARD ASSY 150 - 174 MHz
2-3	AS00000131	RADIO BOARD ASSY 403 - 430 MHz
2-4	AS00000149	RADIO BOARD ASSY 440 - 470 MHz
2-5	AS00000156	RADIO BOARD ASSY 470 - 500 MHz
2-6	AS00000164	RADIO BOARD ASSY 806 - 869 MHz
2-7	AS00000172	RADIO BOARD ASSY 896 - 941 MHz
3	AS00000065	CONTROL BOARD ASSY
4	AS00000040	LED FLEX ASSY (M-RK I)
5	AS00000016	FRONT ASSY (M-RK I)
6	3NAX003096	PAN HEAD SCREW, M2x6
7	3NAX003146	PAN HEAD SCREW W/SW, M2x4
8	3NAX003088	PAN HEAD SCREW, M2x2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2x4, BLK

*Prefix with "K19/" when ordering replacement parts

M-RK I FRONT ASSEMBLY
K19/AS00000016

(A3WL16621, Rev. 3)

344A3937P1 ~ P7, P21 ~ P25, P41 ~ P46		
Symbol	Parts Number *	Description
1-1	3FOB004709	NAMEPLATE LABEL B (M-RK I) (GE)
1-2	3FOB004717	NAMEPLATE LABEL B (M-RK I) (ERICSSON)
2	AS00000446	FUSE W/BEAD, LUG A, LUG B
3	AS00000339	BATTERY CONTACTS W/SUPPORT
4	AS00000321	BATTERY BASEPLATE W/INSULATOR/GASKET/TAPE
5	AS00000305	LATCH W/SPRING
6	3FED001838	FRONT GASKET
7	3FZA024554	PTT LEVER
9	3NAX003088	PAN HEAD SCREW, M2x2
10	3NAX003120	PAN HEAD TAPPING SCREW, M2x3.5
11	3NAX003187	PAN HEAD TORX SCREW, M2x3.5
12	3NAX003179	FLAT HEAD TORX SCREW, M3x12

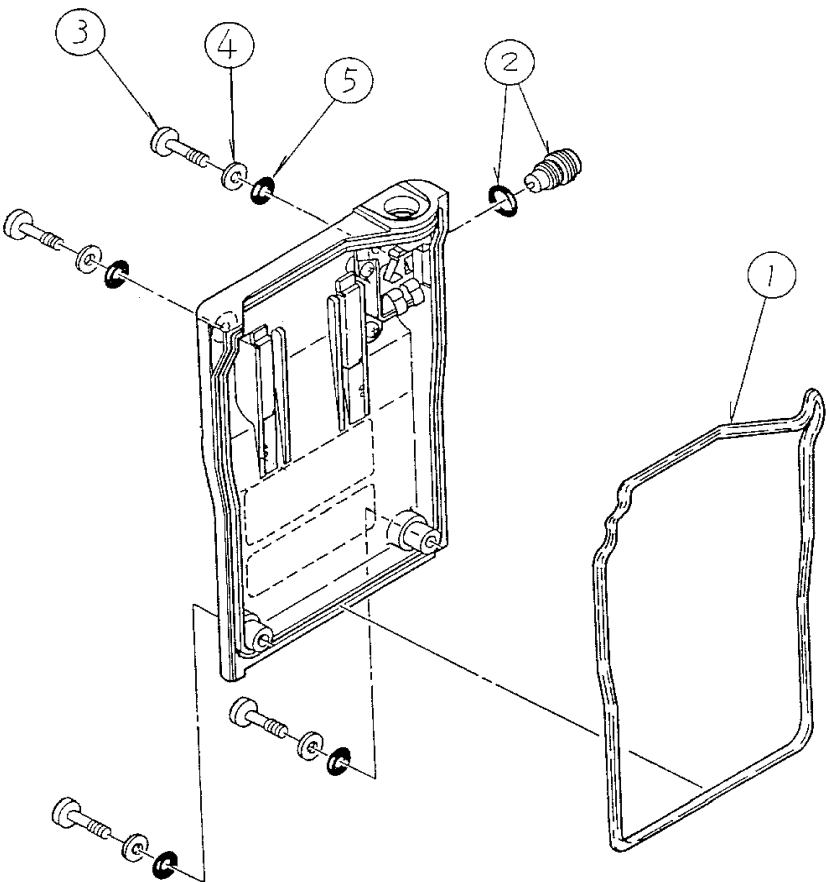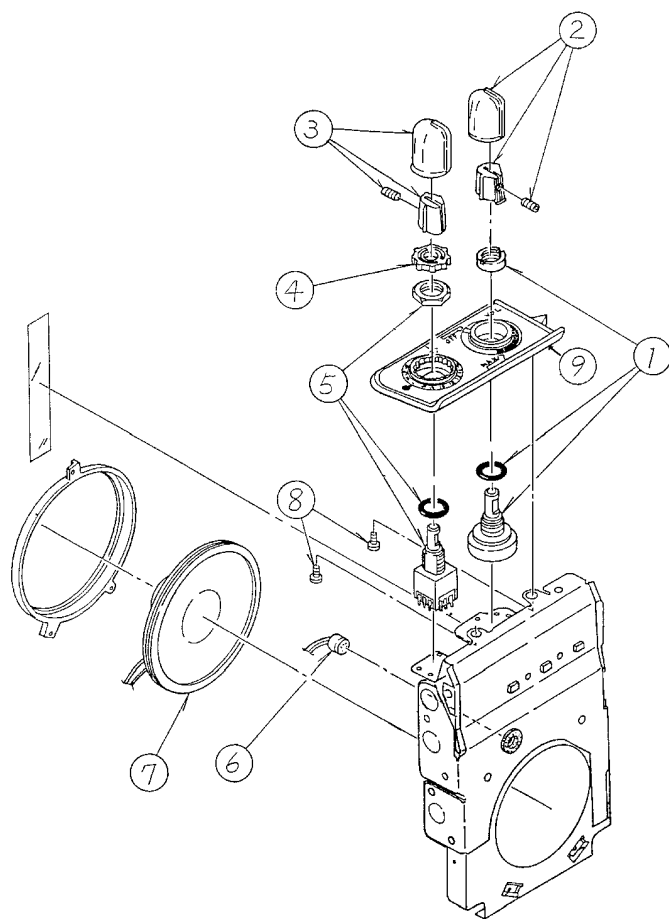

344A3937P11 ~ P17, P31 ~ P35, P61 ~ P67		
Symbol	Parts Number *	Decription
1	2RFA001258	VOL W/NUT/O-RING
2	AS00000297	VOL KNOB W/STOPPER/SCREW
3	AS00000299	CH KNOB W/STOPPER/SCREW
4	3FZA025502	CH SWITCH STOPPER
5-1	2KHA022166	CH SWITCH W/NUT/O-RING (TO ASSY REV. B)
5-2	2KOB036301	CH SWITCH W/NUT/O-RING (FROM ASSY REV. C)
6	AS00000453	MICROPHONE W/CAPACITOR
7	2SOB000192	SPEAKER
8	3NAX003120	PAN HEAD TAPPING SCREW, M2x3.5
9	AS00000370	TOP PANEL W/LABEL

*Prefix with "K19/" when ordering replacement parts


344A3937P1 ~ P7, P11 ~ P17, P21 ~ P25, P31 ~ P35, P41 ~ P46, P51 ~ P56 P61 ~ P67, P71 ~ P76		
Symbol	Parts Number *	Decription
1	3FE0001846	REAR O-RING GASKET
2	AS00000206	UDC RF CONNECTOR W/O-RING
3	3NAX003161	PAN HEAD TORX SCREW, M2.6x10
4	3NDX001631	WASHER
5	3FE001853	O-RING A

M-RK I LED FLEX ASSEMBLY

(A3WL16622, Rev. 5)

M-RK I/II/SCAN
REAR ASSEMBLY


(A3WL16520, Rev. 4)

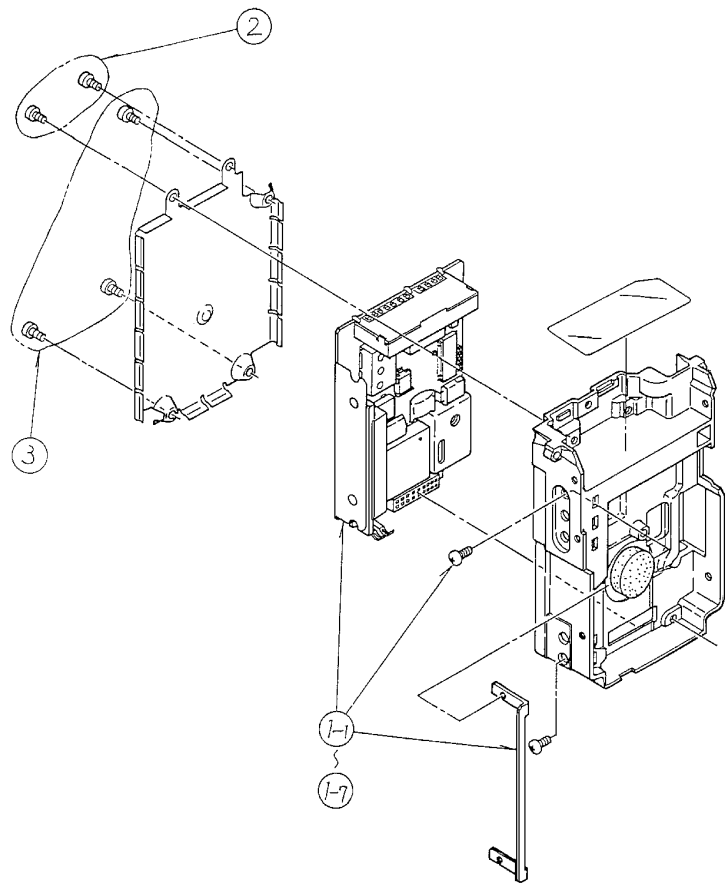

344A3937P1 ~ P7, P11 ~ P17, P21 ~ P25, P31 ~ P35, P61 ~ P67		
Symbol	Parts Number *	Decription
1-1	AS00000214	PA MODULE (VL) W/RETAINER/SCREWS
1-2	AS00000222	PA MODULE (VH) W/RETAINER/SCREWS
1-3	AS00000230	PA MODULE (UL) W/RETAINER/SCREWS
1-4	AS00000248	PA MODULE (UM) W/RETAINER/SCREWS
1-5	AS00000255	PA MODULE (UH) W/RETAINER/SCREWS
1-6	AS00000263	PA MODULE (800) W/RETAINER/SCREWS
1-7	AS00000271	PA MODULE (900) W/RETAINER/SCREWS
2	3NAX003088	PAN HEAD SCREW, M2x2
3	3NAX003146	PAN HEAD SCREW W/SW, M2x4

M-RK I/II/SCAN
PA ASSEMBLY

(A3WL16521, Rev. 4)


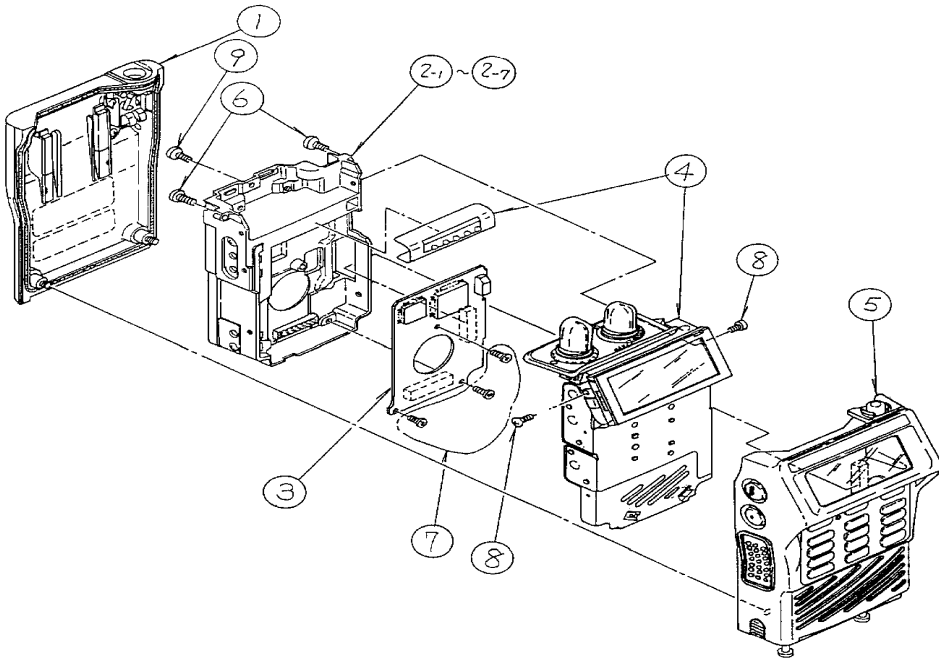


344A3937P11 ~ P17		
Symbol	Parts Number *	Description
1	AS00001154	REAR ASSY
2-1	AS00000115	RADIO BOARD ASSY 136 - 160 MHz
2-2	AS00000123	RADIO BOARD ASSY 150 - 174 MHz
2-3	AS00000131	RADIO BOARD ASSY 403 - 430 MHz
2-4	AS00000149	RADIO BOARD ASSY 440 - 470 MHz
2-5	AS00000156	RADIO BOARD ASSY 470 - 500 MHz
2-6	AS00000164	RADIO BOARD ASSY 806 - 869 MHz
2-7	AS00000172	RADIO BOARD ASSY 896 - 941 MHz
3	AS00000065	CONTROL BOARD ASSY
4	AS00000057	LCD/KB FLEX ASSY (M-RK II/SCAN)
5	AS00000024	FRONT ASSY (M-RK II)
6	3NAX003096	PAN HEAD SCREW, M2x6
7	3NAX003146	PAN HEAD SCREW W/SW, M2x4
8	3NAX003088	PAN HEAD SCREW, M2x2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2x4, BLK

M-RK II

(A3WL16550, Rev. 3)

*Prefix with "K19/" when ordering replacement parts

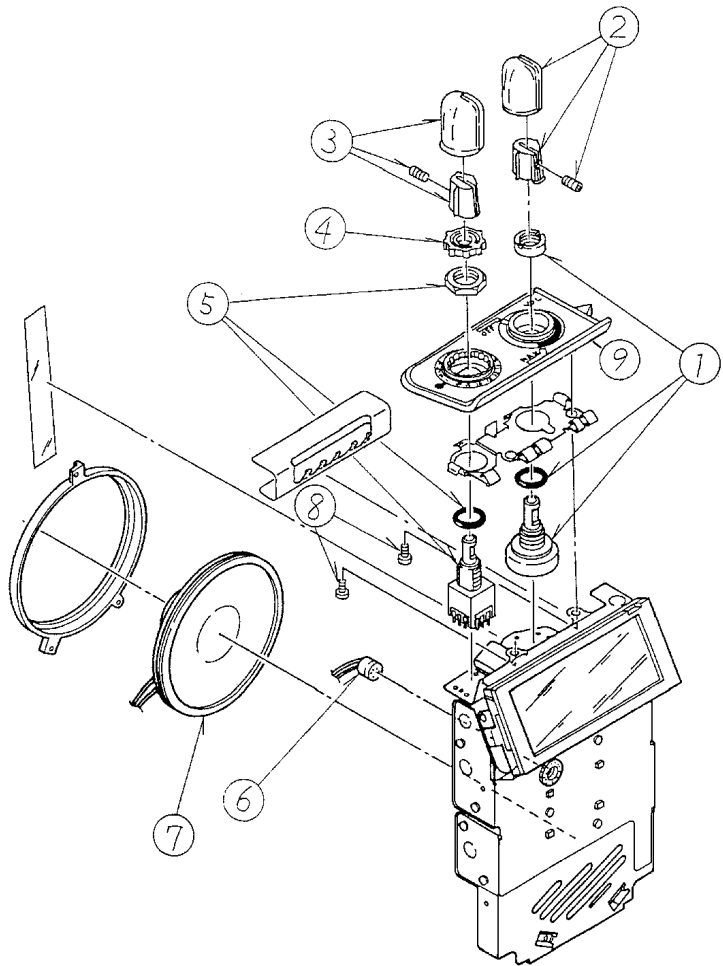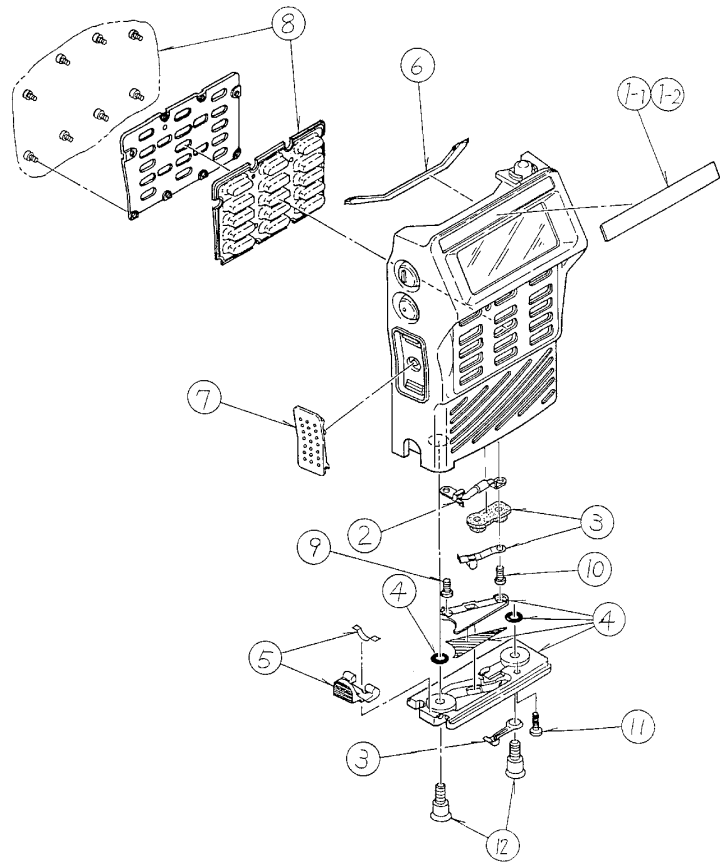

344A3937P11 ~ P17, P31 ~ P35, P51 ~ P56		
Symbol	Parts Number *	Decription
1-1	3FHA030510	NAMEPLATE LABEL A (M-RK II/SCAN) (GE)
1-2	3FHA033563	NAMEPLATE LABEL A (M-RK II/SCAN) (ERICSSON)
2	AS00000446	FUSE W/BEAD, LUG A, LUG B
3	AS00000339	BATTERY CONTACTS W/SUPPORT
4	AS00000321	BATTERY BASEPLATE W/INSULATOR/GASKET/ TAPE
5	AS00000305	LATCH W/SPRING
6	3FED001838	FRONT GASKET
7	3FZA024554	PTT LEVER
8	AS00000313	KEYPAD W/SCREWS
9	3NAX003088	PAN HEAD SCREW, M2x2
10	3NAX003120	PAN HEAD TAPPING SCREW, M2x3.5
11	3NAX003187	PAN HEAD TORX SCREW, M2x3.5
12	3NAX003179	FLAT HEAD TORX SCREW, M3x12

*Prefix with "K19/" when ordering replacement parts


M-RK II FRONT ASSEMBLY
K19/AS00000024

(A3WL16523, Rev. 3)

344A3937P11 ~ P17, P31 ~ P35, P61 ~ P67		
Symbol	Parts Number *	Decription
1	2RFA001258	VOL W/NUT/O-RING
2	AS00000297	VOL KNOB W/STOPPER/SCREW
3	AS00000289	CH KNOB W/STOPPER/SCREW
4	3FZA025502	CH SWITCH STOPPER
5-1	2KHA022166	CH SWITCH W/NUT/O-RING (TO ASSY REV. B)
5-2	2KOB036301	CH SWITCH W/NUT/O-RING (FROM ASSY REV. C)
6	AS00000453	MICROPHONE W/CAPACITOR
7	2SOB000192	SPEAKER
8	3NAX003120	PAN HEAD TAPPING SCREW, M2x3.5
9	AS00000370	TOP PANEL W/LABEL

M-RK II/SCAN
LCD/KB FLEX ASSEMBLY
K19/AS00000057

(A3WL16522, Rev. 6)

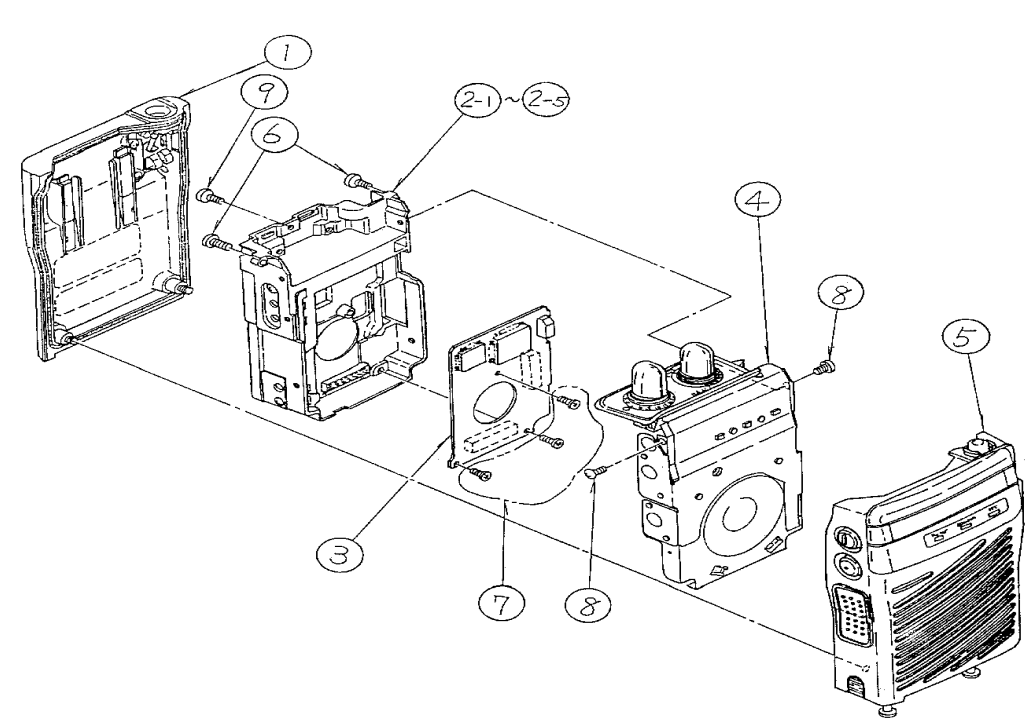


344A3937P21 ~ P25		
Symbol	Parts Number *	Description
1	AS00000032	REAR ASSY
2-1	AS00001014	RADIO BOARD ASSY 136 - 160 MHz
2-2	AS00001022	RADIO BOARD ASSY 150 - 174 MHz
2-3	AS00001030	RADIO BOARD ASSY 403 - 430 MHz
2-4	AS00001048	RADIO BOARD ASSY 440 - 470 MHz
2-5	AS00001055	RADIO BOARD ASSY 470 - 500 MHz
3	AS00000065	CONTROL BOARD ASSY
4	AS00000040	LED FLEX ASSY (M-RK I)
5	AS00000016	FRONT ASSY (M-RK I)
6	3NAX003096	PAN HEAD SCREW, M2x6
7	3NAX003146	PAN HEAD SCREW W/SW, M2x4
8	3NAX003088	PAN HEAD SCREW, M2x2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2x4, BLK

*Prefix with "K19/" when ordering replacement parts

M-RK I ETS


(A3WL17788, Rev. 0)

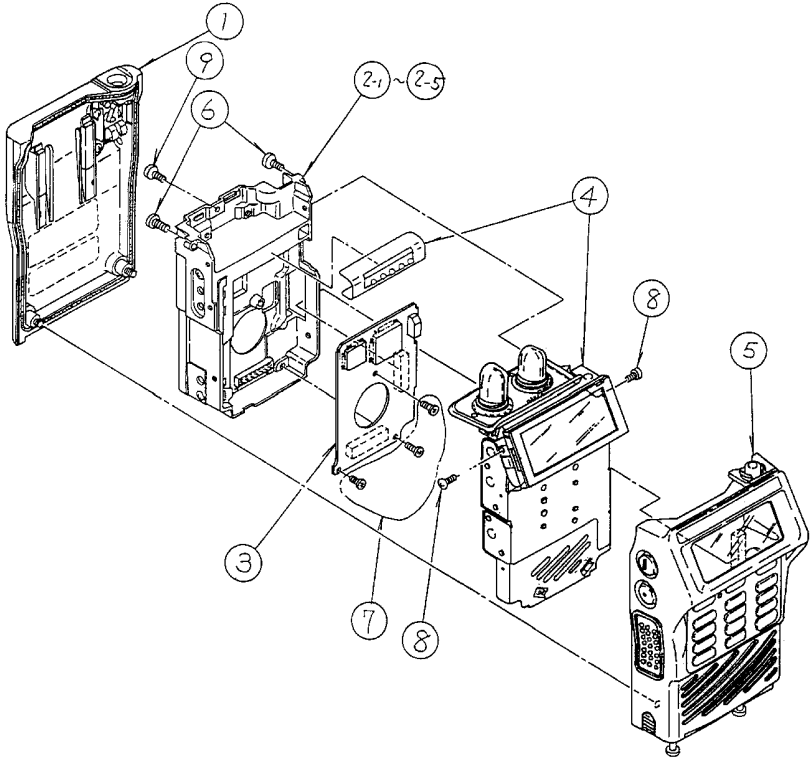

344A3937P31 ~ P35		
Symbol	Parts Number *	Description
1	AS00001154	REAR ASSY
2-1	AS00001014	RADIO BOARD ASSY 136 - 160 MHz
2-2	AS00001022	RADIO BOARD ASSY 150 - 174 MHz
2-3	AS00001030	RADIO BOARD ASSY 403 - 430 MHz
2-4	AS00001048	RADIO BOARD ASSY 440 - 470 MHz
2-5	AS00001055	RADIO BOARD ASSY 470 - 500 MHz
3	AS00000065	CONTROL BOARD ASSY
4	AS00000057	LED FLEX ASSY (M-RK II/SCAN)
5	AS00000024	FRONT ASSY (M-RK II)
6	3NAX003096	PAN HEAD SCREW, M2x6
7	3NAX003146	PAN HEAD SCREW W/SW, M2x4
8	3NAX003088	PAN HEAD SCREW, M2x2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2x4, BLK

M-RK II ETS

(A3WL17789, Rev. 2)

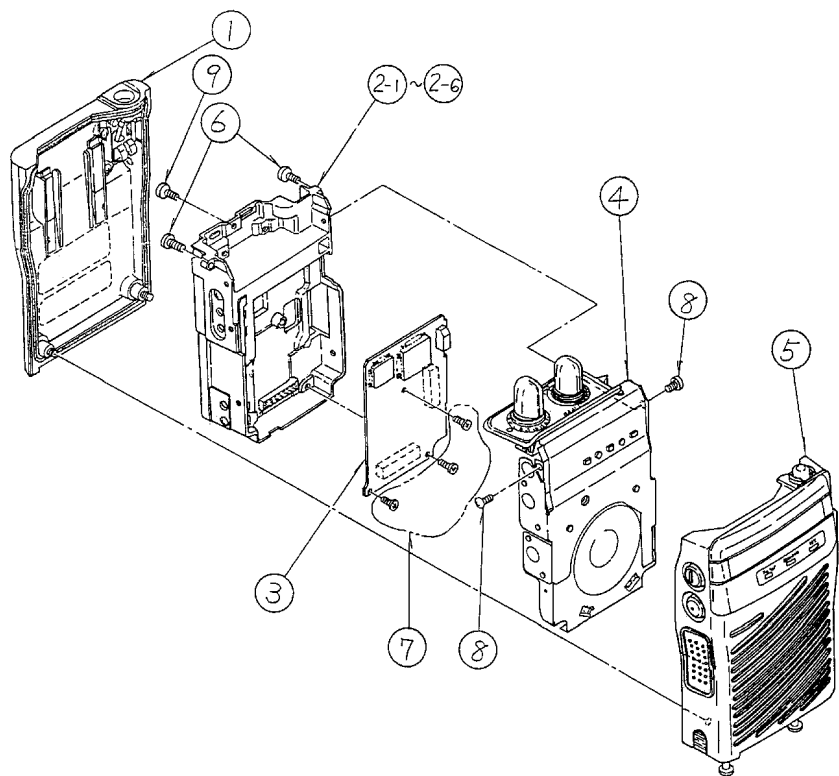


344A3937P41 ~ P46		
Symbol	Parts Number *	Description
1	AS00000032	REAR ASSY
2-1	AS00001063	RADIO BOARD ASSY 136 - 160 MHz
2-2	AS00001071	RADIO BOARD ASSY 150 - 174 MHz
2-3	AS00001089	RADIO BOARD ASSY 403 - 430 MHz
2-4	AS00001097	RADIO BOARD ASSY 440 - 470 MHz
2-5	AS00001105	RADIO BOARD ASSY 470 - 500 MHz
2-6	AS00001113	RADIO BOARD ASSY 806 - 869 MHz
3	AS00001147	CONTROL BOARD ASSY
4	AS00001121	LED FLEX ASSY (M-RK I)
5	AS00000016	FRONT ASSY (M-RK I)
6	3NAX003096	PAN HEAD SCREW, M2x6
7-1	3NAX003146	PAN HEAD SCREW W/SW, M2x4
7-2	3NAA425468	BIND SCREW, M2x5
8	3NAX003088	PAN HEAD SCREW, M2x2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2x4, BLK

*Prefix with "K19/" when ordering replacement parts

M-RK I ETS/AEGIS



(A3WL17790, Rev. 1)

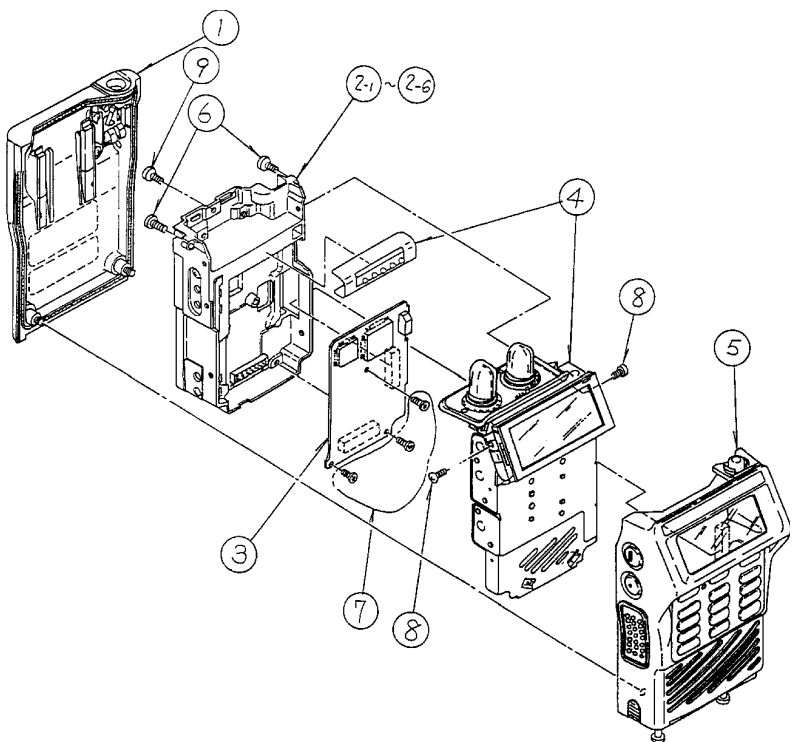

344A3937P51 ~ P56		
Symbol	Parts Number *	Description
1	AS00001154	REAR ASSY
2-1	AS00001063	RADIO BOARD ASSY 136 - 160 MHz
2-2	AS00001071	RADIO BOARD ASSY 150 - 174 MHz
2-3	AS00001089	RADIO BOARD ASSY 403 - 430 MHz
2-4	AS00001097	RADIO BOARD ASSY 440 - 470 MHz
2-5	AS00001105	RADIO BOARD ASSY 470 - 500 MHz
2-6	AS00001113	RADIO BOARD ASSY 806 - 869 MHz
3	AS00001147	CONTROL BOARD ASSY
4	AS00001139	LCD/KB FLEX ASSY (M-RK II/SCAN)
5	AS00000024	FRONT ASSY (M-RK II)
6	3NAX003096	PAN HEAD SCREW, M2x6
7-1	3NAX003146	PAN HEAD SCREW W/SW, M2x4
7-2	3NAA425468	BIND SCREW, M2x5
8	3NAX003088	PAN HEAD SCREW, M2x2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2x4, BLK

M-RK II ETS/AEGIS

(A3WL17791, Rev. 2)

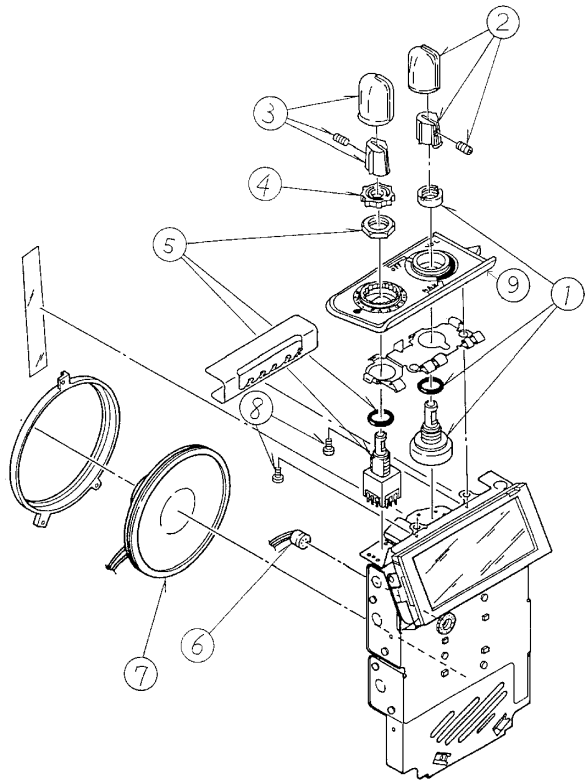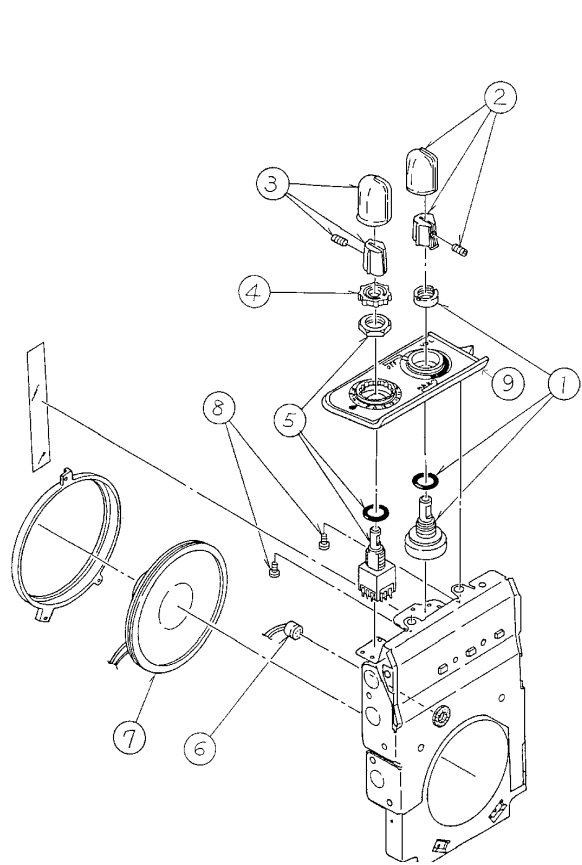

344A3937P11 ~ P17, P31 ~ P35, P61 ~ P67		
Symbol	Parts Number *	Decription
1	2RFA001258	VOL W/NUT/O-RING
2	AS00000297	VOL KNOB W/STOPPER/SCREW
3	AS00000289	CH KNOB W/STOPPER/SCREW
4	3FZA025502	CH SWITCH STOPPER
5-1	2KHA022166	CH SWITCH W/NUT/O-RING (TO ASSY REV. B)
5-2	2KOB036301	CH SWITCH W/NUT/O-RING (FROM ASSY REV. C)
6	AS00000453	MICROPHONE W/CAPACITOR
7	2SOB000192	SPEAKER
8	3NAX003120	PAN HEAD TAPPING SCREW, M2x3.5
9	AS00000370	TOP PANEL W/LABEL

*Prefix with "K19/" when ordering replacement parts


344A3937P11 ~ P17, P31 ~ P35, P61 ~ P67		
Symbol	Parts Number *	Decription
1	2RFA001258	VOL W/NUT/O-RING
2	AS00000297	VOL KNOB W/STOPPER/SCREW
3	AS00000289	CH KNOB W/STOPPER/SCREW
4	3FZA025502	CH SWITCH STOPPER
5-1	2KHA022166	CH SWITCH W/NUT/O-RING (TO ASSY REV. B)
5-2	2KOB036301	CH SWITCH W/NUT/O-RING (FROM ASSY REV. C)
6	AS00000453	MICROPHONE W/CAPACITOR
7	2SOB000192	SPEAKER
8	3NAX003120	PAN HEAD TAPPING SCREW, M2x3.5
9	AS00000370	TOP PANEL W/LABEL

M-RK I LED FLEX ASSEMBLY (ETS/AEGIS)

(A3WL17793, Rev. 2)

M-RK II/SCAN LED/KB FLEX ASSEMBLY (ETS/AEGIS)

(A3WL17794, Rev. 3)

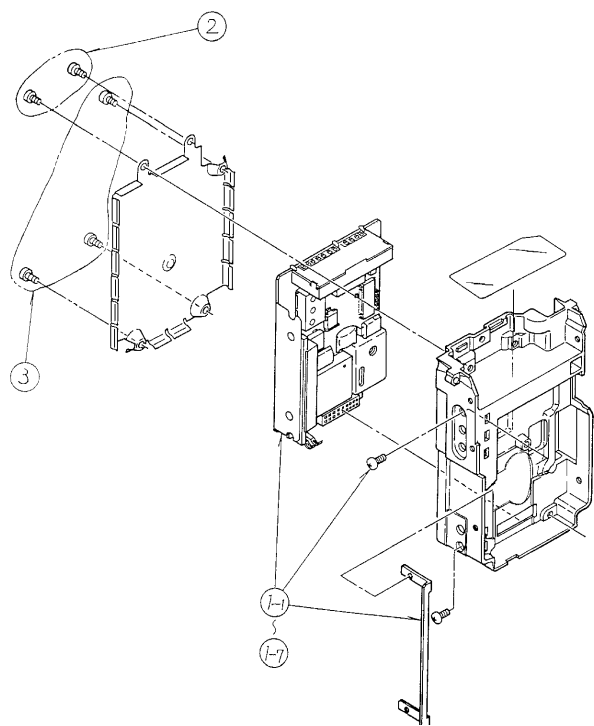


344A3937P41 ~ P46, P51 ~ P56, P71 ~ P76		
Symbol	Parts Number *	Decription
1-1	AS00000214	PA MODULE (VL) W/RETAINER/SCREWS
1-2	AS00000222	PA MODULE (VH) W/RETAINER/SCREWS
1-3	AS00000230	PA MODULE (UL) W/RETAINER/SCREWS
1-4	AS00000248	PA MODULE (UM) W/RETAINER/SCREWS
1-5	AS00000255	PA MODULE (UH) W/RETAINER/SCREWS
1-6	AS00000263	PA MODULE (800) W/RETAINER/SCREWS
2	3NAX003088	PAN HEAD SCREW, M2x2
3	3NAX003146	PAN HEAD SCREW W/SW, M2x4

*Prefix with "K19/" when ordering replacement parts

M-RK I/II/SCAN PA ASSEMBLY (AEGIS)


(A3WL17792, Rev. 1)

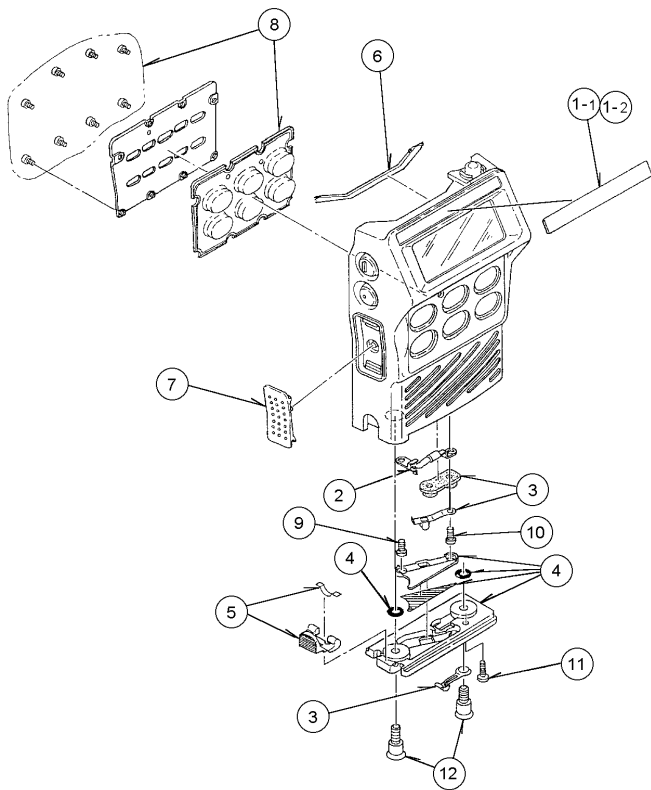

344A3937P61 ~ P67, P71 ~ P76		
Symbol	Parts Number	Description
1 - 1	3FHA030510	NAMEPLATE LABEL A (M - RK II / SCAN) (GE)
1 - 2	3FHA033563	NAMEPLATE LABEL A (M - RK II / SCAN) (ERICSSON)
2	AS00000446	FUSE W / BEAD, LUG A, LUG B
3	AS00000339	BATTERY CONTACTS W / SUPPORT
4	AS00000321	BATTERY BASEPLATE W/INSULATOR/GASKET/TAPE
5	AS00000305	LATCH W / SPRING
6	3FED001838	FRONT GASKET
7	3FZA024554	PTT LEVER
8	AS00000354	KEYPAD W / SCREWS
9	3NAX003088	PAN HEAD SCREW, M2 X 2
10	3NAX003120	PAN HEAD TAPPING SCREW, M2 X 3.5
11	3NAX003187	PAN HEAD TORX SCREW, M2 X 3.5
12	3NAX003179	FLAT HEAD TORX SCREW, M3 X 12

M-RK SCAN

(A3WL18089, Rev. 0)

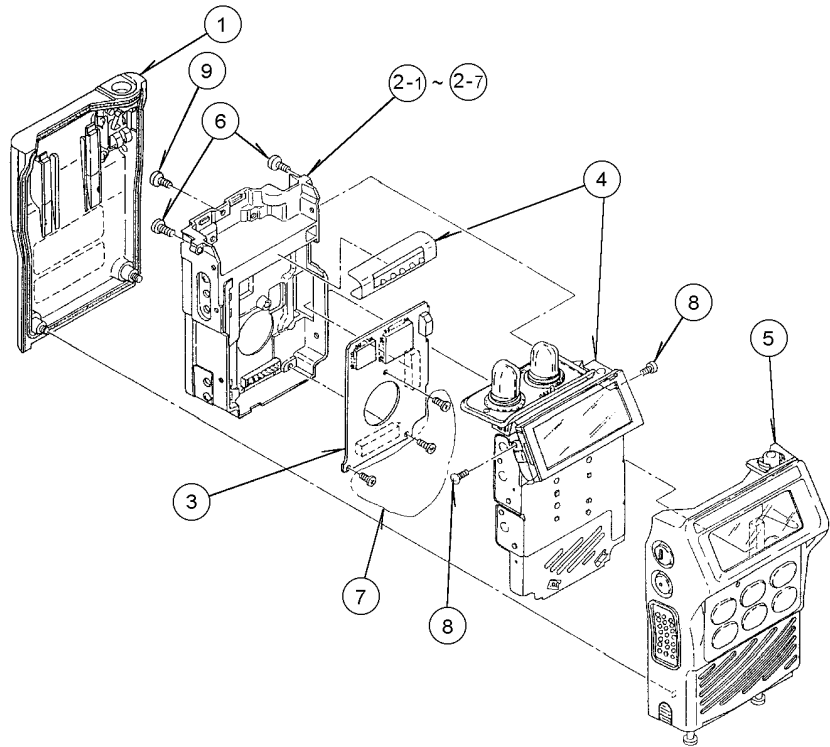


344A3937P61 ~ P67		
Symbol	Parts Number	Description
1	AS00001154	REAR ASSY
2 - 1	AS00001014	RADIO BOARD ASSY 136 - 160 MHz
2 - 2	AS00001022	RADIO BOARD ASSY 150 - 174 MHz
2 - 3	AS00001030	RADIO BOARD ASSY 403 - 430 MHz
2 - 4	AS00001048	RADIO BOARD ASSY 440 - 470 MHz
2 - 5	AS00001055	RADIO BOARD ASSY 470 - 500 MHz
2 - 6	AS00000164	RADIO BOARD ASSY 806 - 869 MHz
2 - 7	AS00000172	RADIO BOARD ASSY 896 - 941 MHz
3	AS00000068	CONTROL BOARD ASSY
4	AS00000057	LCD / KB FLEX ASSY (M - RK II / SCAN)
5	AS00001170	FRONT ASSY (M - RK II / SCAN)
6	3NAX003096	PAN HEAD SCREW, M2 X 6
7	3NAX003146	PAN HEAD SCREW W / SW, M2 X 4
8	3NAX003088	PAN HEAD SCREW, M2 X 2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2 X 4, BLK

M-RK SCAN (ETS)

(A3WL18090, Rev. 0)

*Prefix with "K19/" when ordering replacement parts

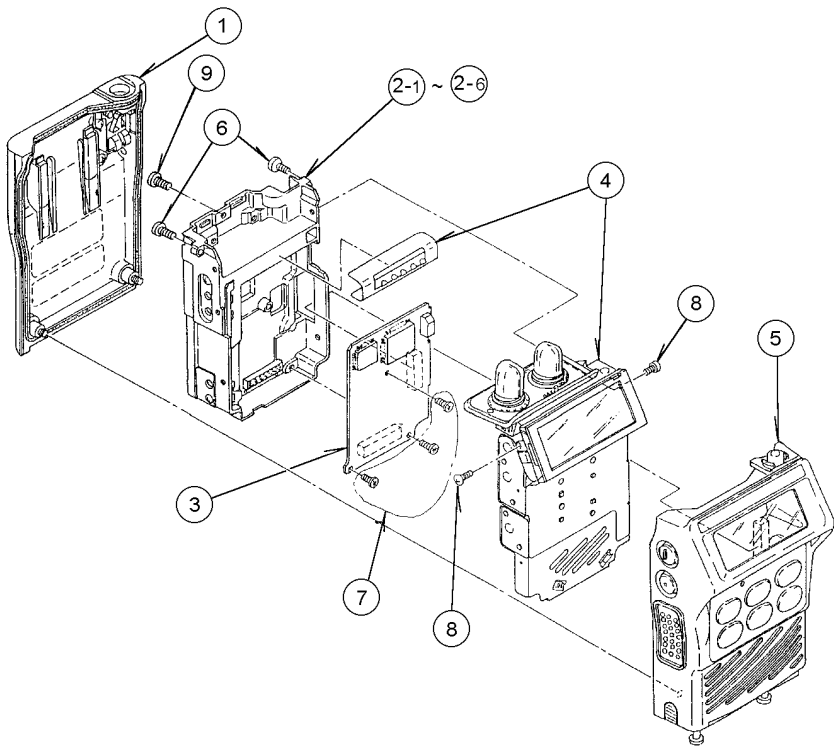

344A3937P71 ~ P76		
Symbol	Parts Number	Description
1	AS00001154	REAR ASSY
2 - 1	AS00001063	RADIO BOARD ASSY 136 - 160 MHz
2 - 2	AS00001071	RADIO BOARD ASSY 150 - 174 MHz
2 - 3	AS00001089	RADIO BOARD ASSY 403 - 430 MHz
2 - 4	AS00001097	RADIO BOARD ASSY 440 - 470 MHz
2 - 5	AS00001105	RADIO BOARD ASSY 470 - 500 MHz
2 - 6	AS00001113	RADIO BOARD ASSY 806 - 869 MHz
3	AS00001147	CONTROL BOARD ASSY
4	AS00001139	LCD / KB FLEX ASSY (M - RK II / SCAN)
5	AS00001170	FRONT ASSY (M - RK II / SCAN)
6	3NAX003096	PAN HEAD SCREW, M2 X 6
7 - 1	3NAX003146	PAN HEAD SCREW W / SW, M2 X 4
7 - 2	3NAA425468	BIND SCREW, M2 X 5
8	3NAX003088	PAN HEAD SCREW, M2 X 2
9	3NAX003138	PAN HEAD TAPPING SCREW, M2 X 4, BLK

M-RK SCAN (ETS/AEGIS)


(A3WL18091, Rev. 0)




(A3WE05329, Sh. 1, Rev. 10)




(A3WE05329, Sh. 3, Rev. 10)

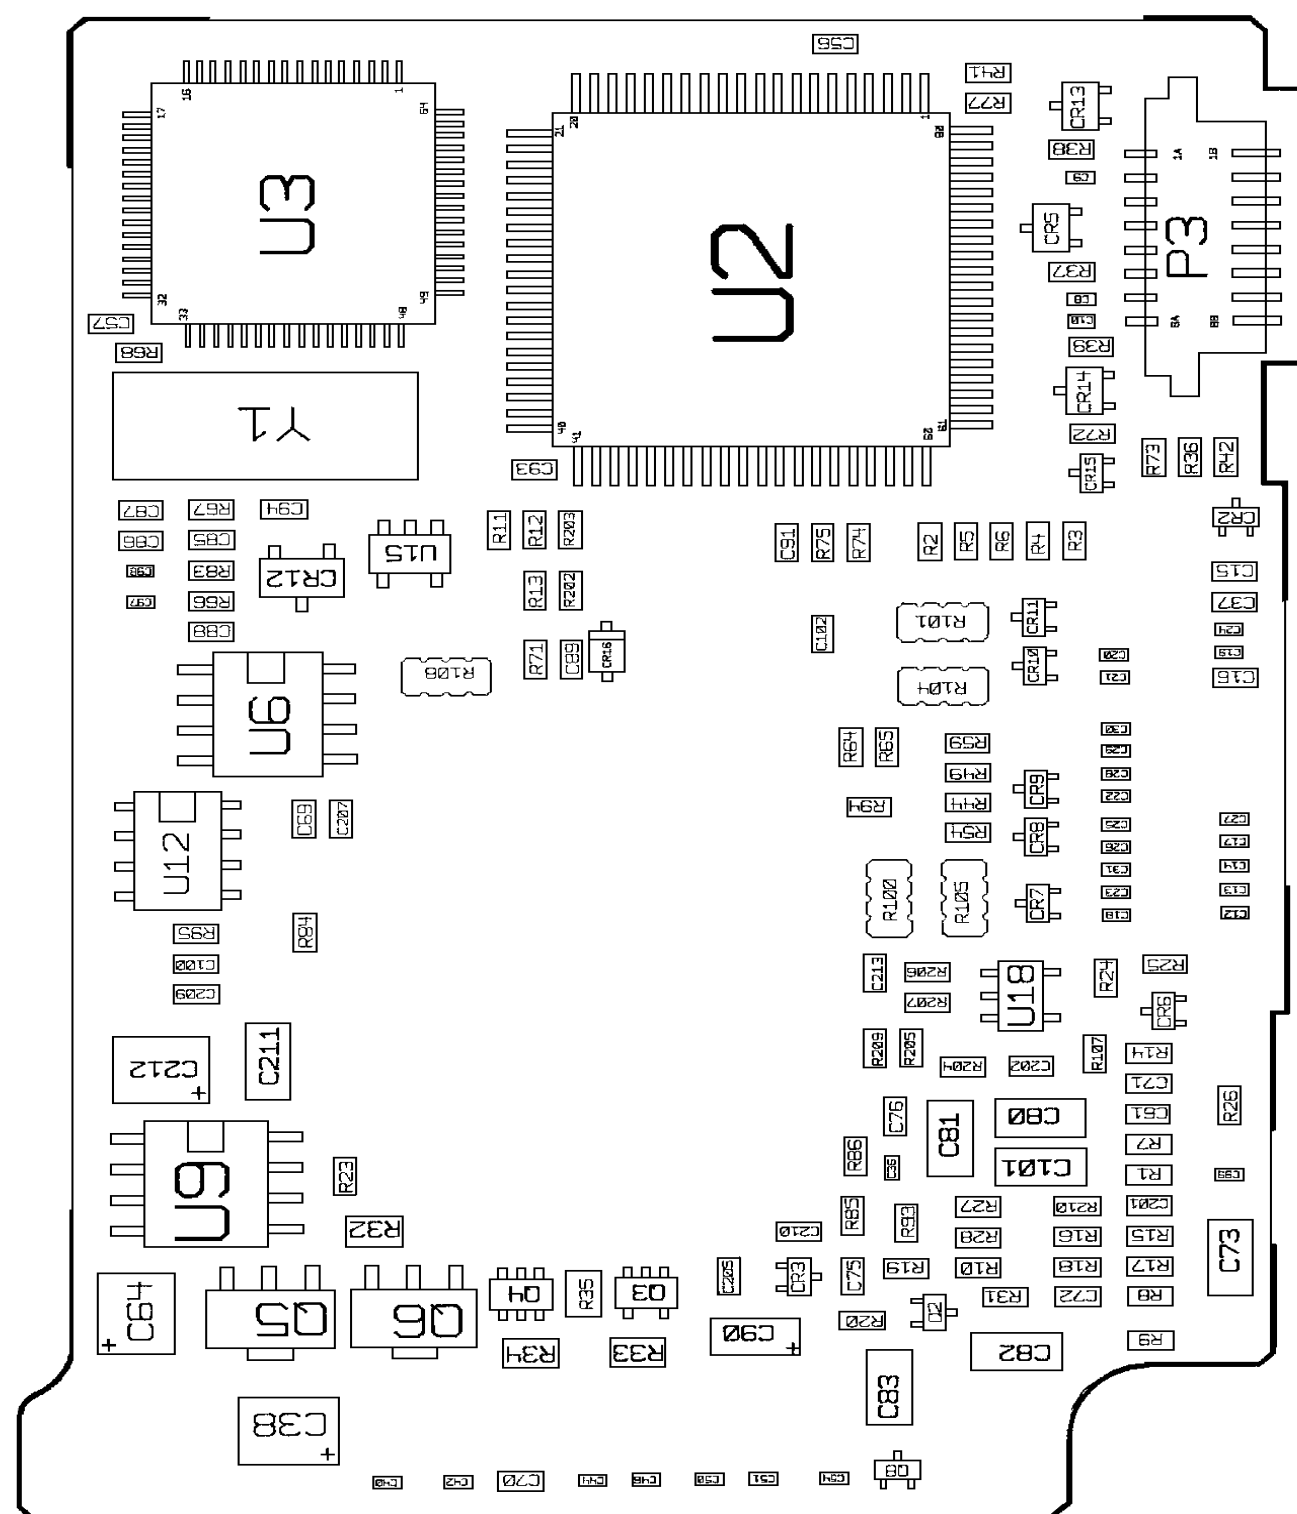


(A3WE06100, Sh. 1, Rev. 5)
(A3WE06100, Sh. 3, Rev. 5)

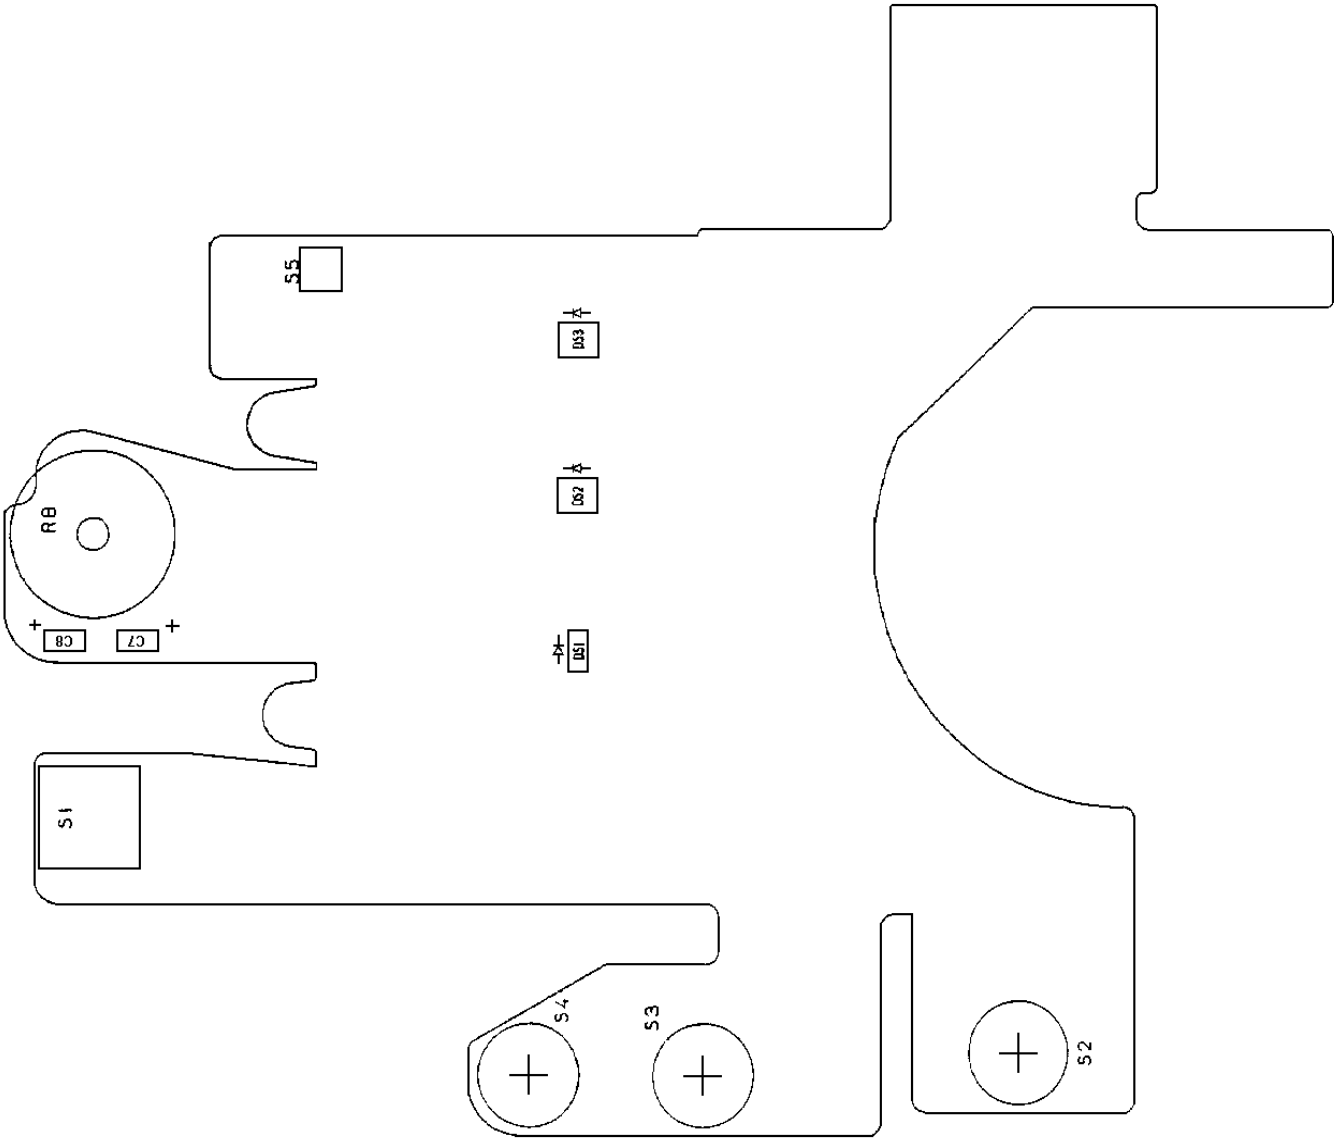

M-RK I LED FLEX ASSEMBLY (SIDE A)
K19/AS00000040
(A2WE05332, Sh. 1, Rev. 4)

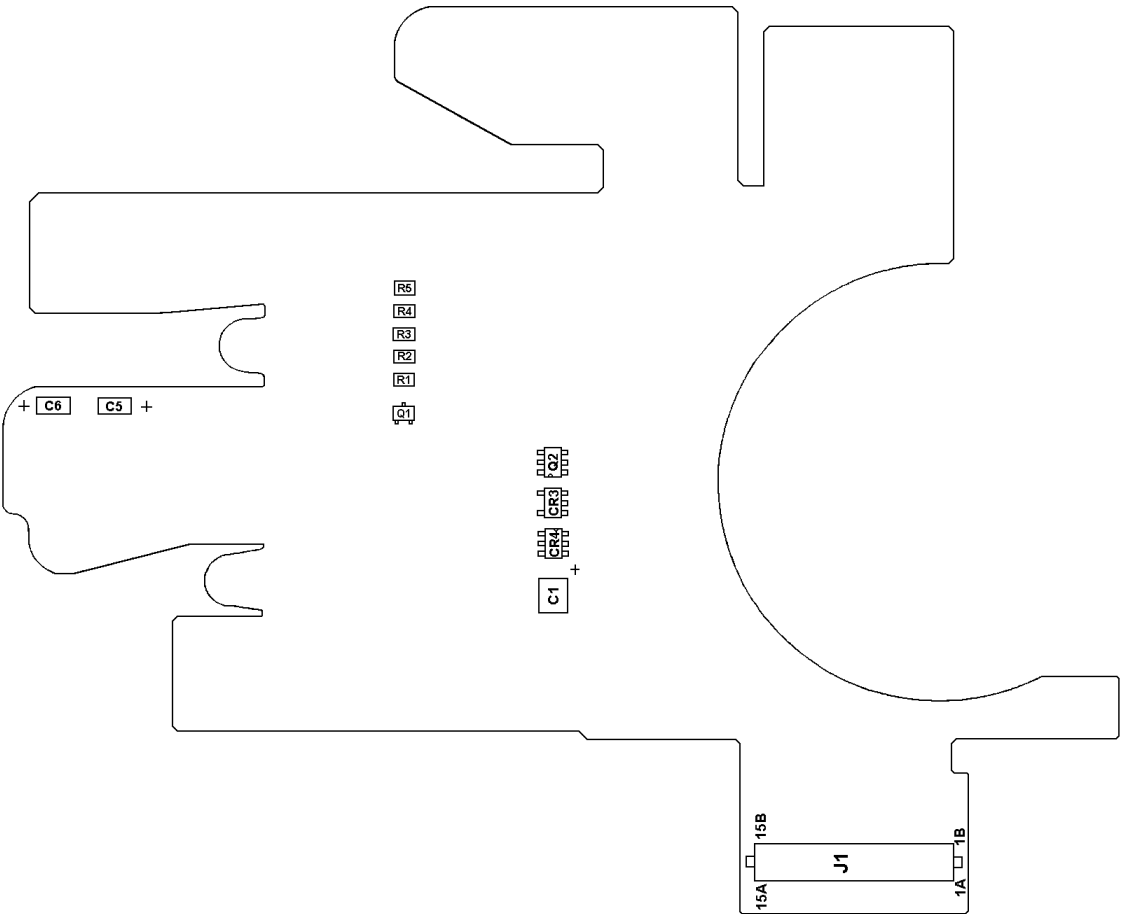

M-RK I LED FLEX ASSEMBLY (SIDE B)
K19/AS00000040
(A2WE05332, Sh. 4, Rev. 4)

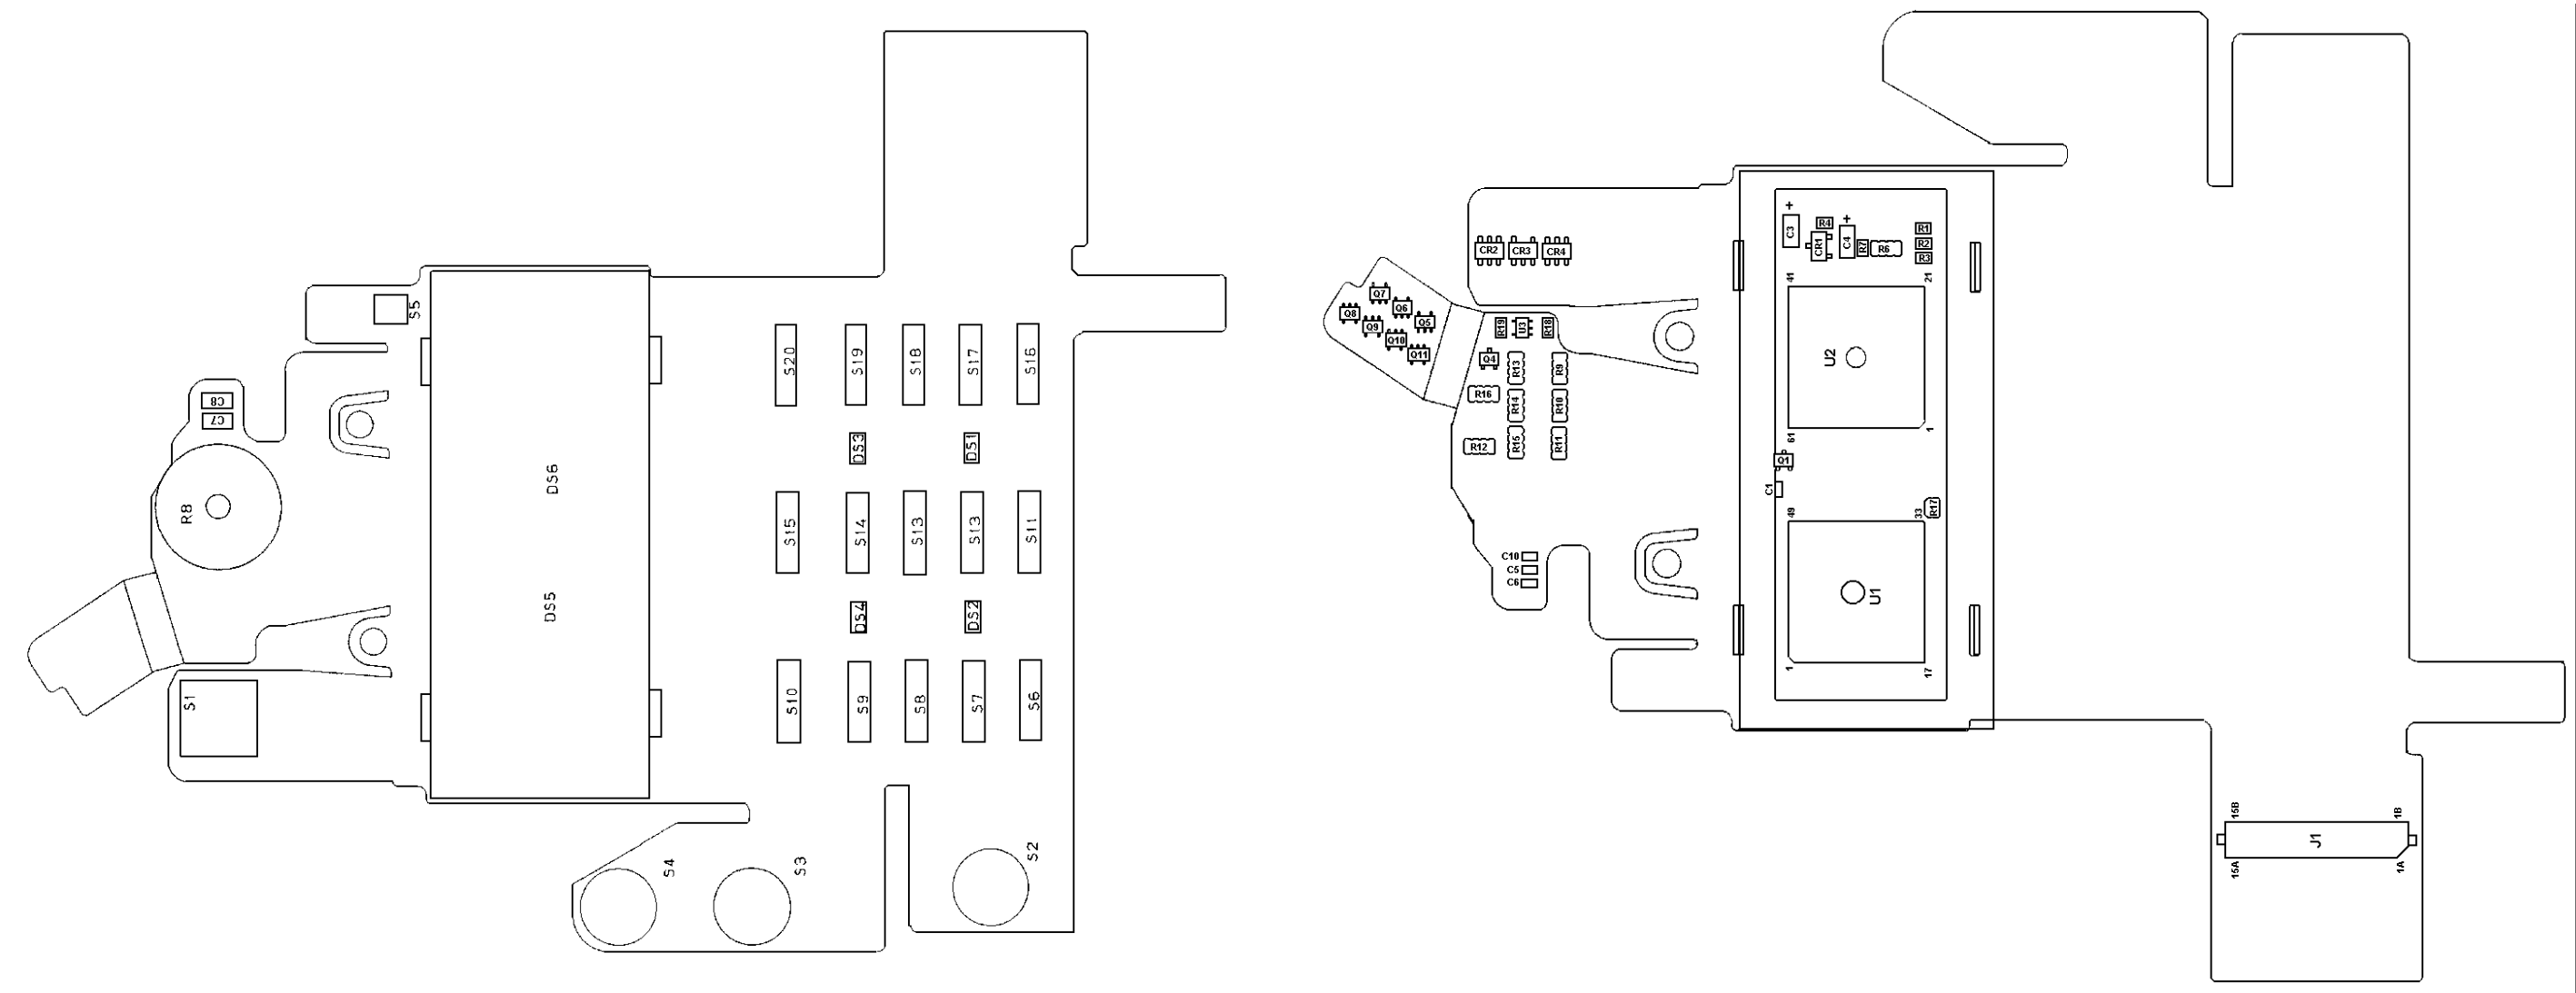


MRK II/SCAN
LCD/KB FLEX ASSEMBLY
K19/AS00000057

(A2WE05333, Sh. 1, Rev. 8)

MRK II/SCAN
LCD/KB FLEX ASSEMBLY
K19/AS00000057


(A2WE05333, Sh. 4, Rev. 8)

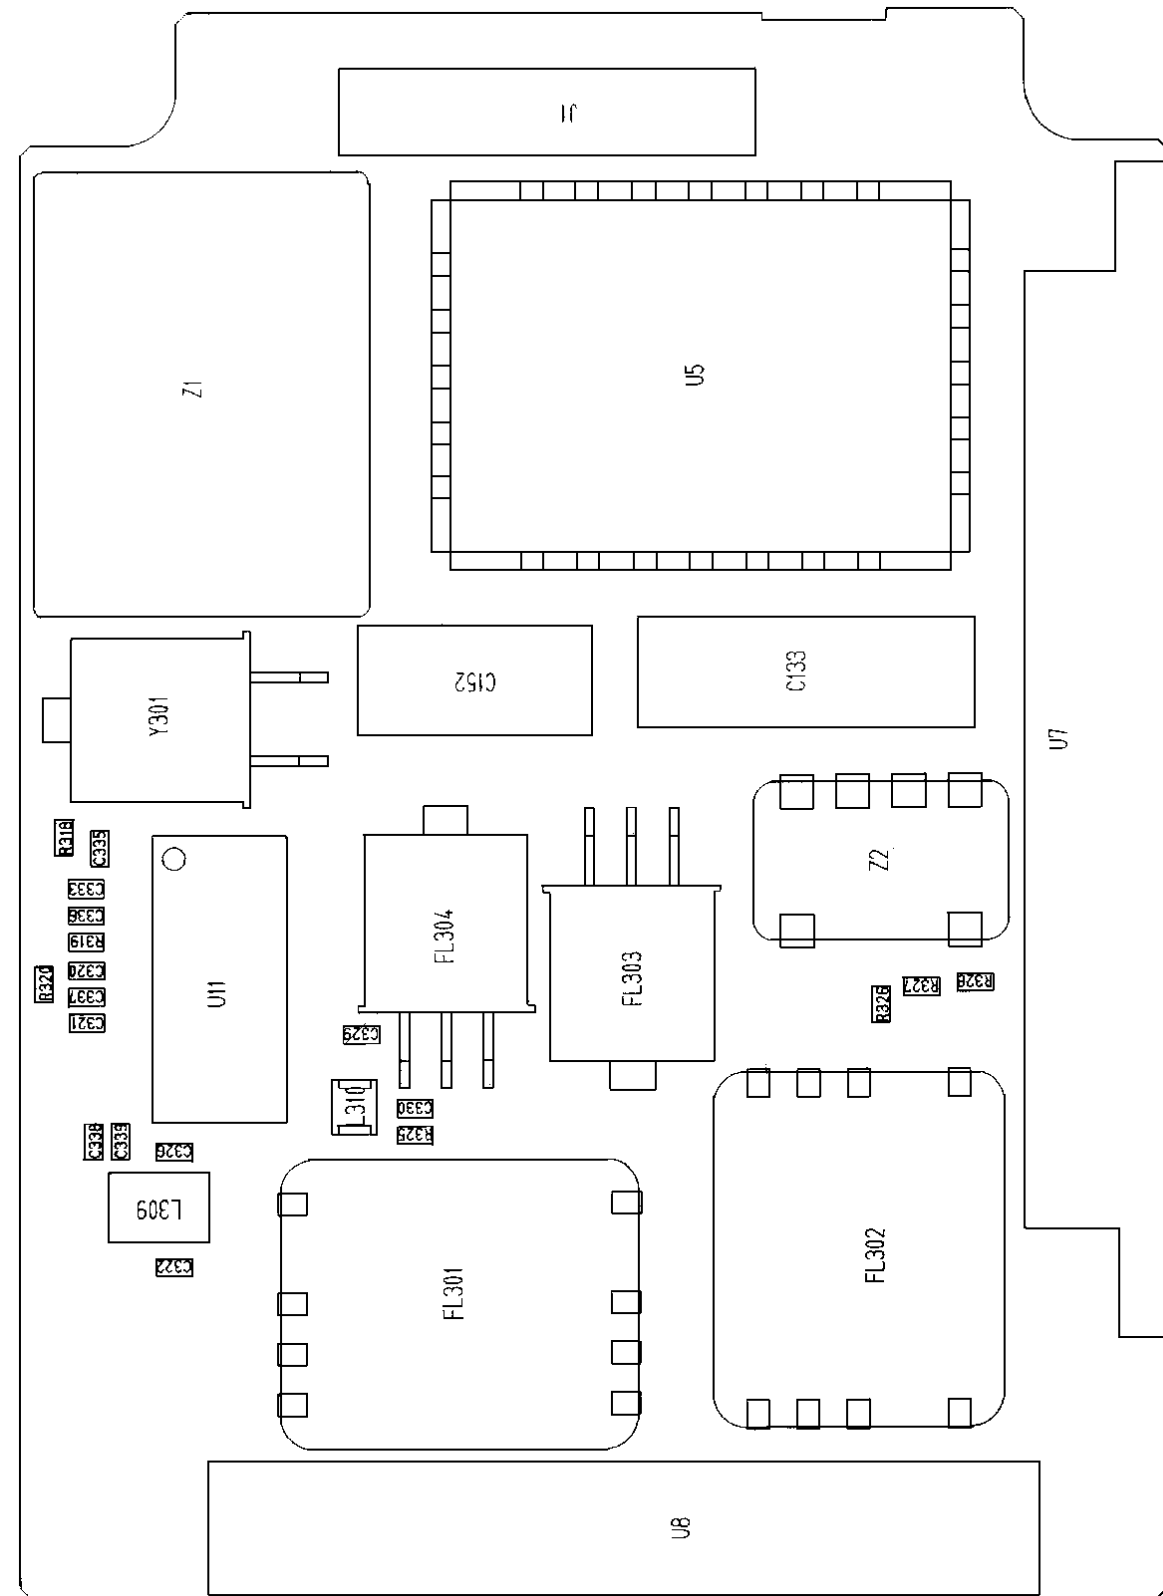

RADIO BOARD

VHF/UHF



(A3WE05419, Sh. 1, Rev. 8)

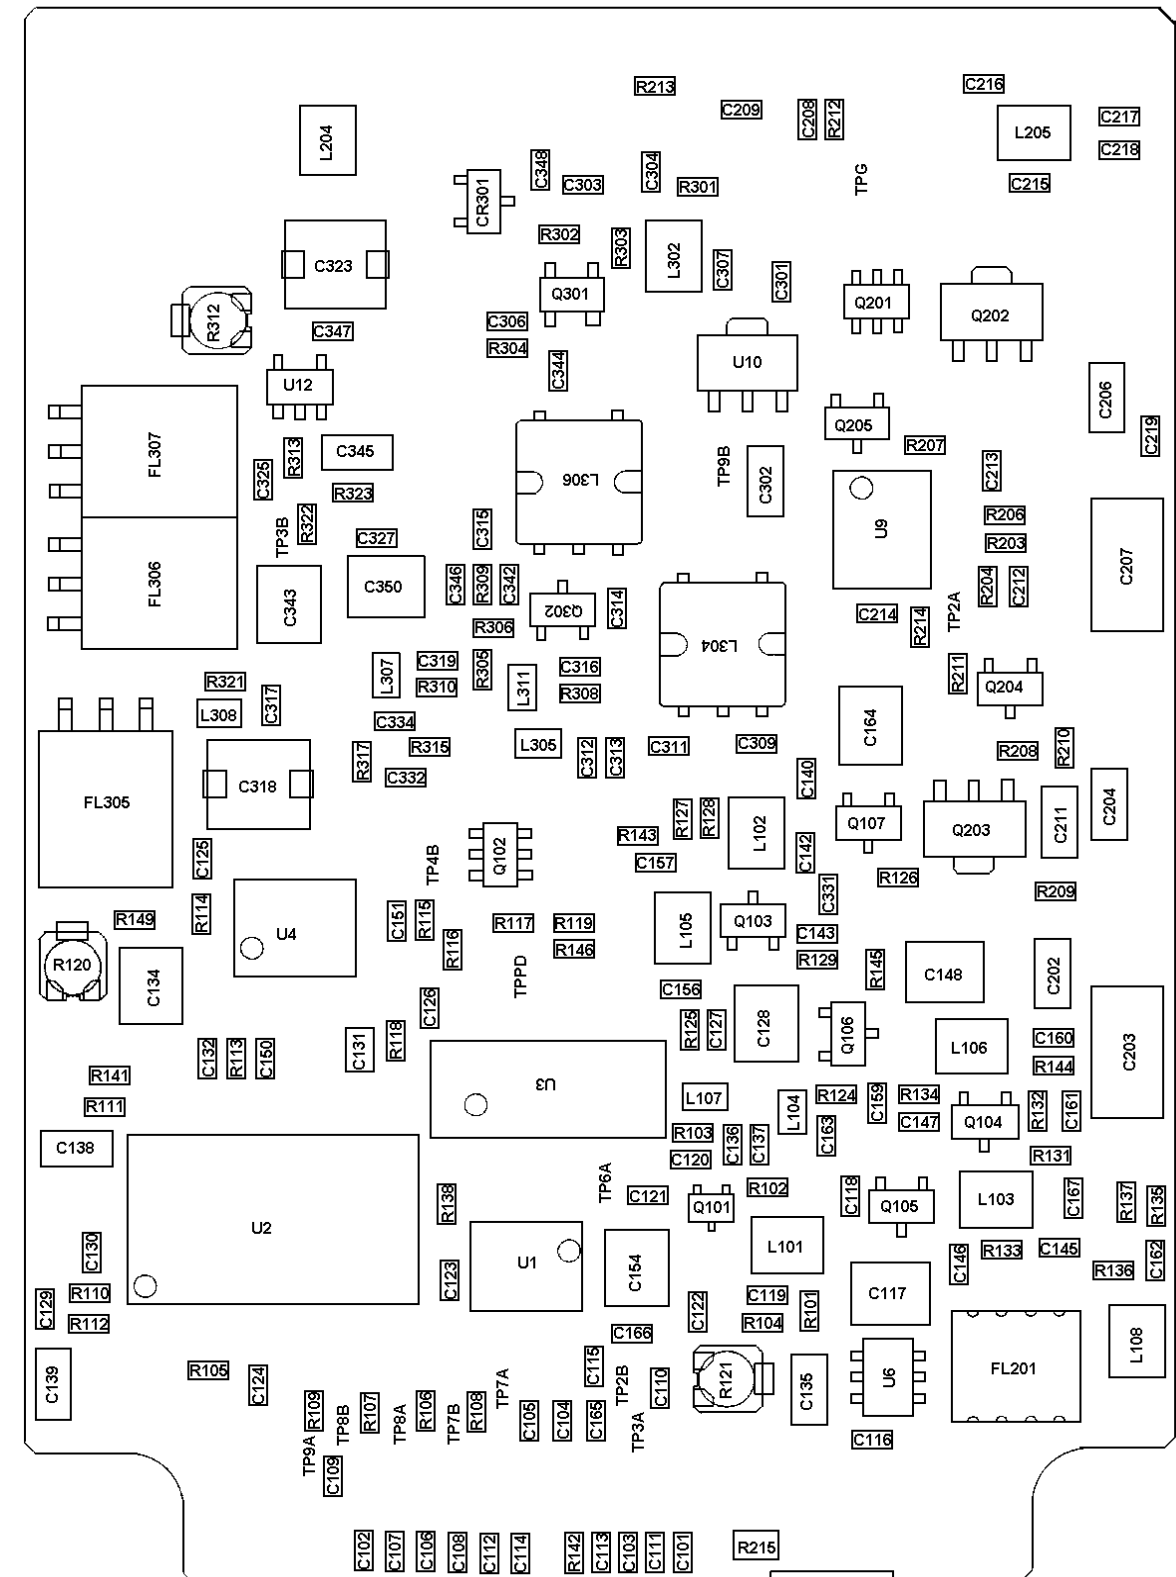


RADIO BOARD


VHF/UHF

  (A3WE05419, Sh. 2, Rev. 8)



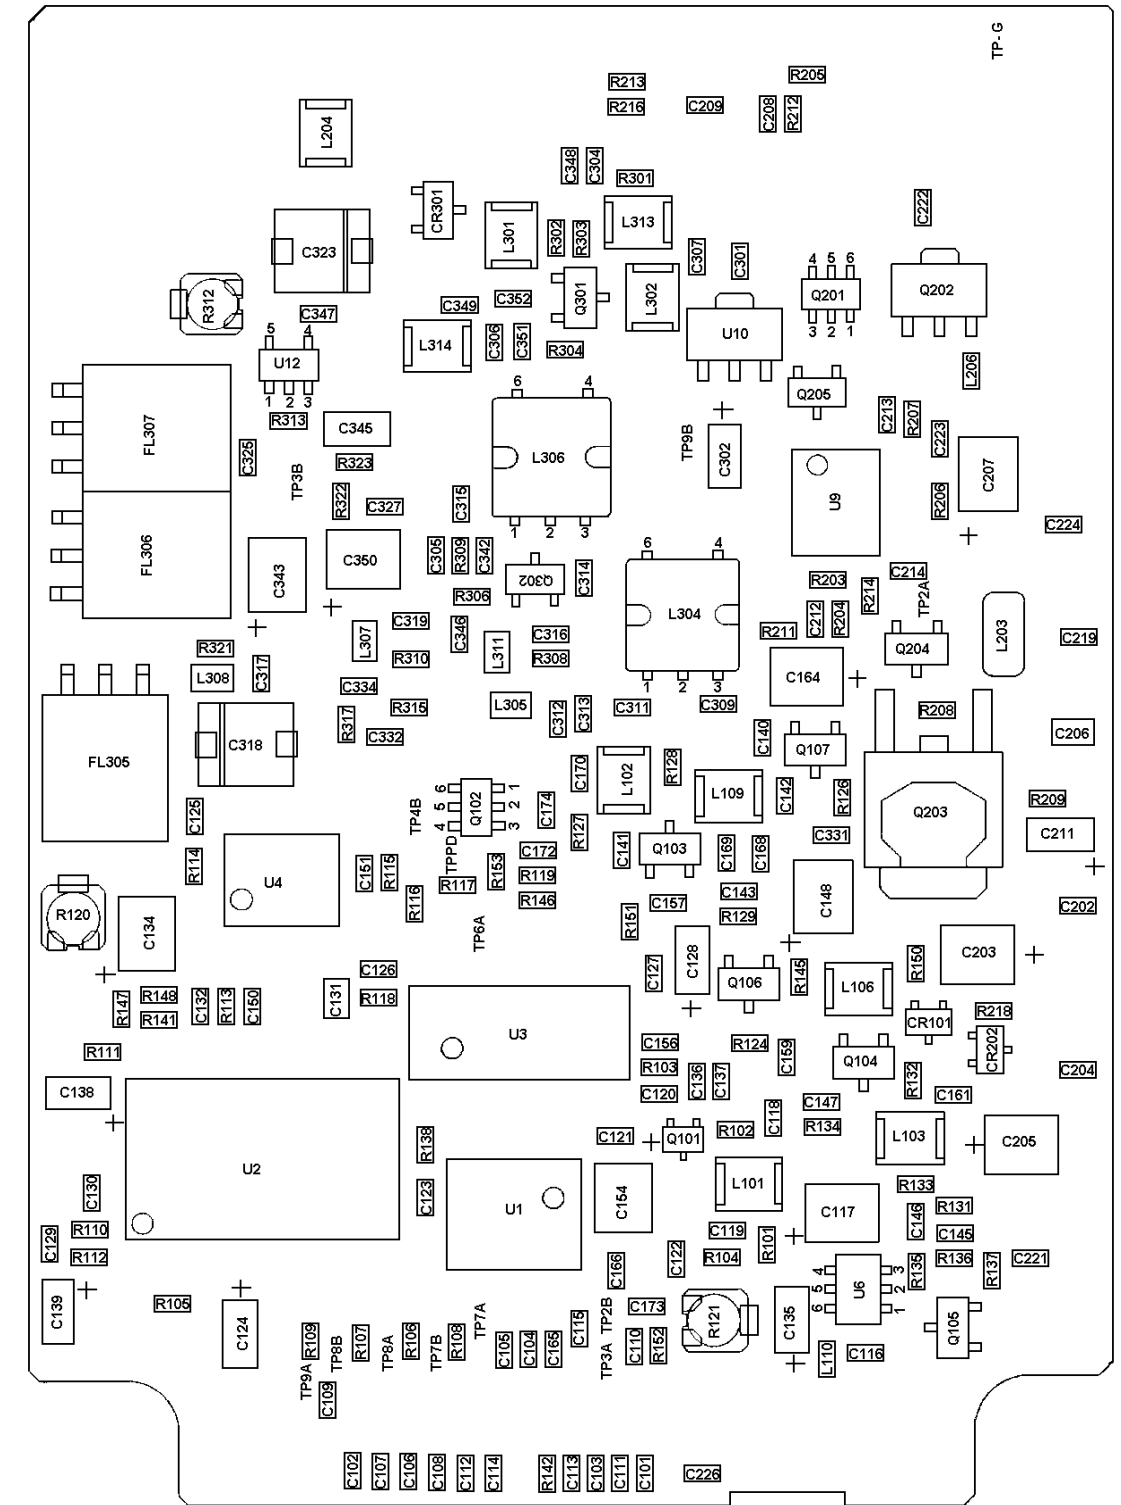


(A3WE06094, Sh. 1, Rev. 4)
(A3WE06094, Sh. 2, Rev. 4)

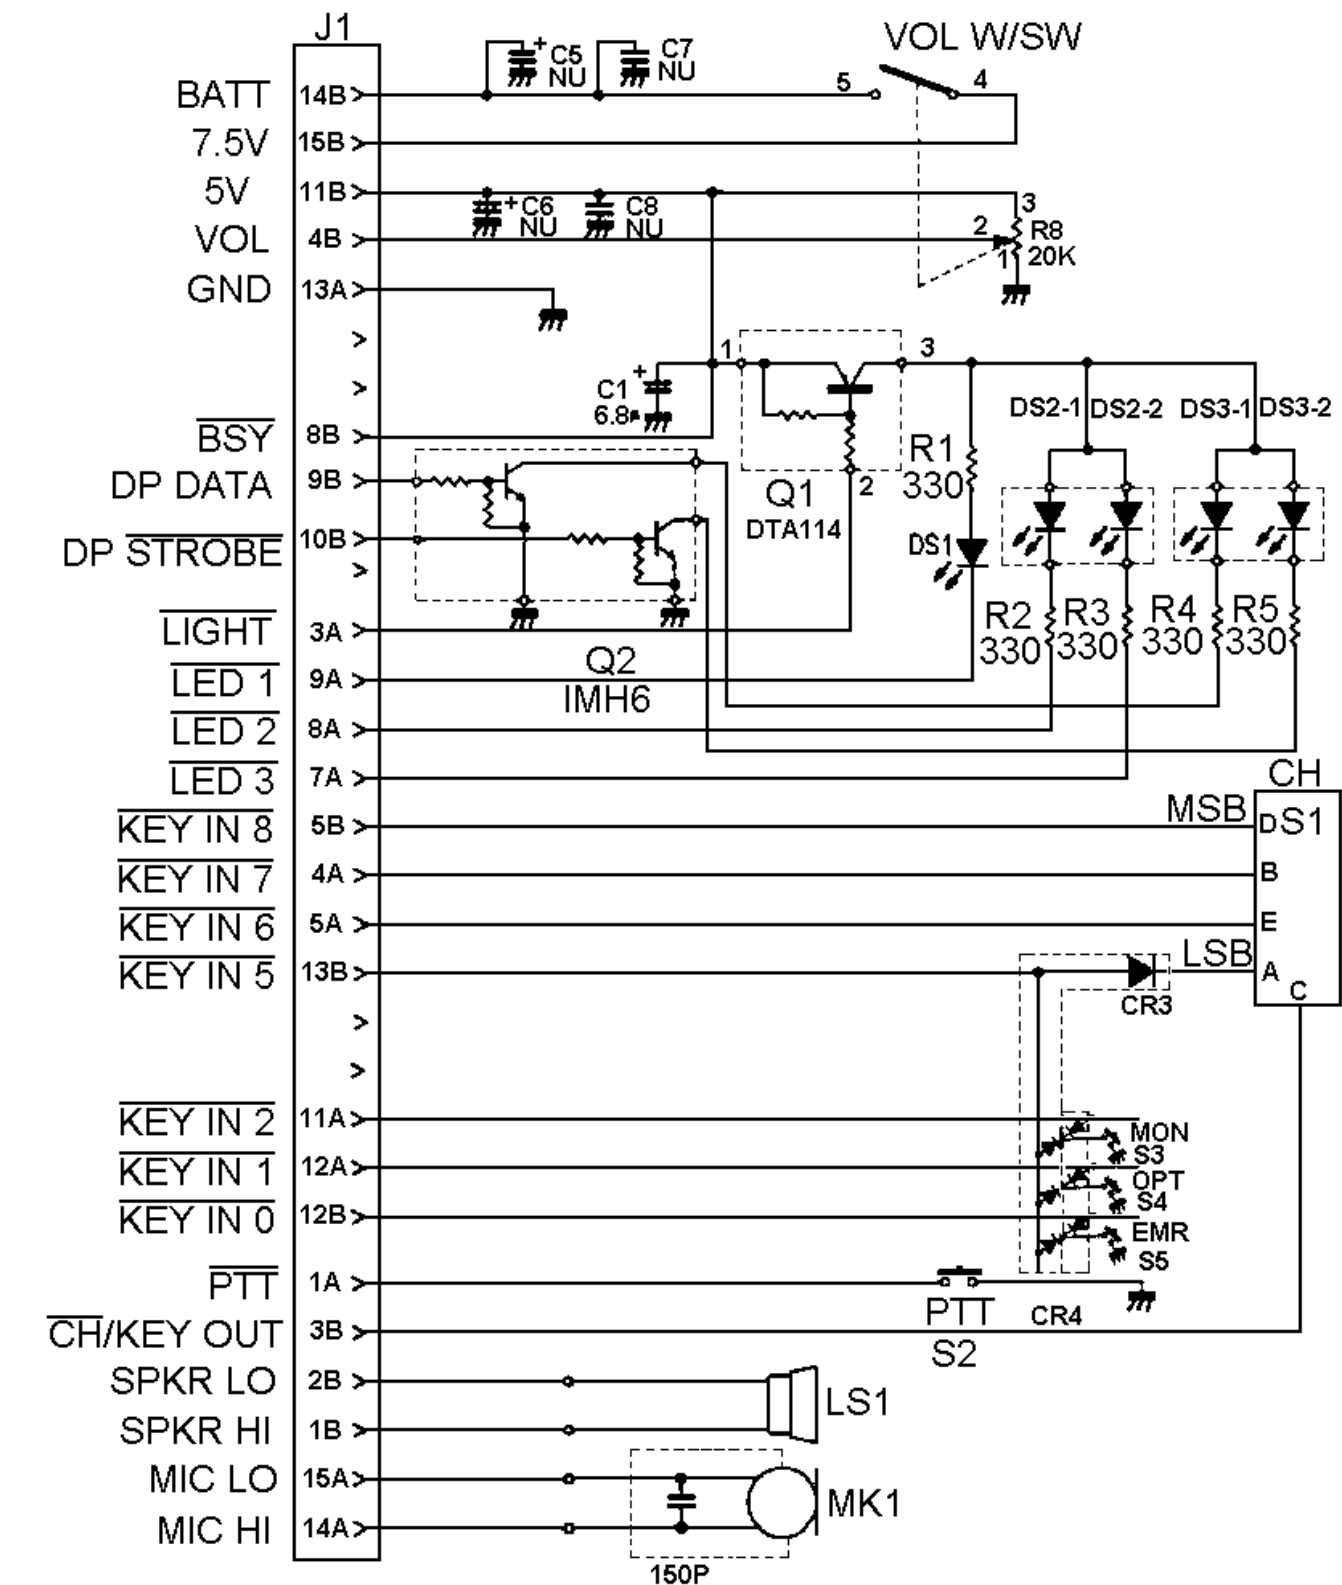


M-RK I LED FLEX ASSEMBLY
(AEGIS/VG)


(A4WE06081, Rev. 1)

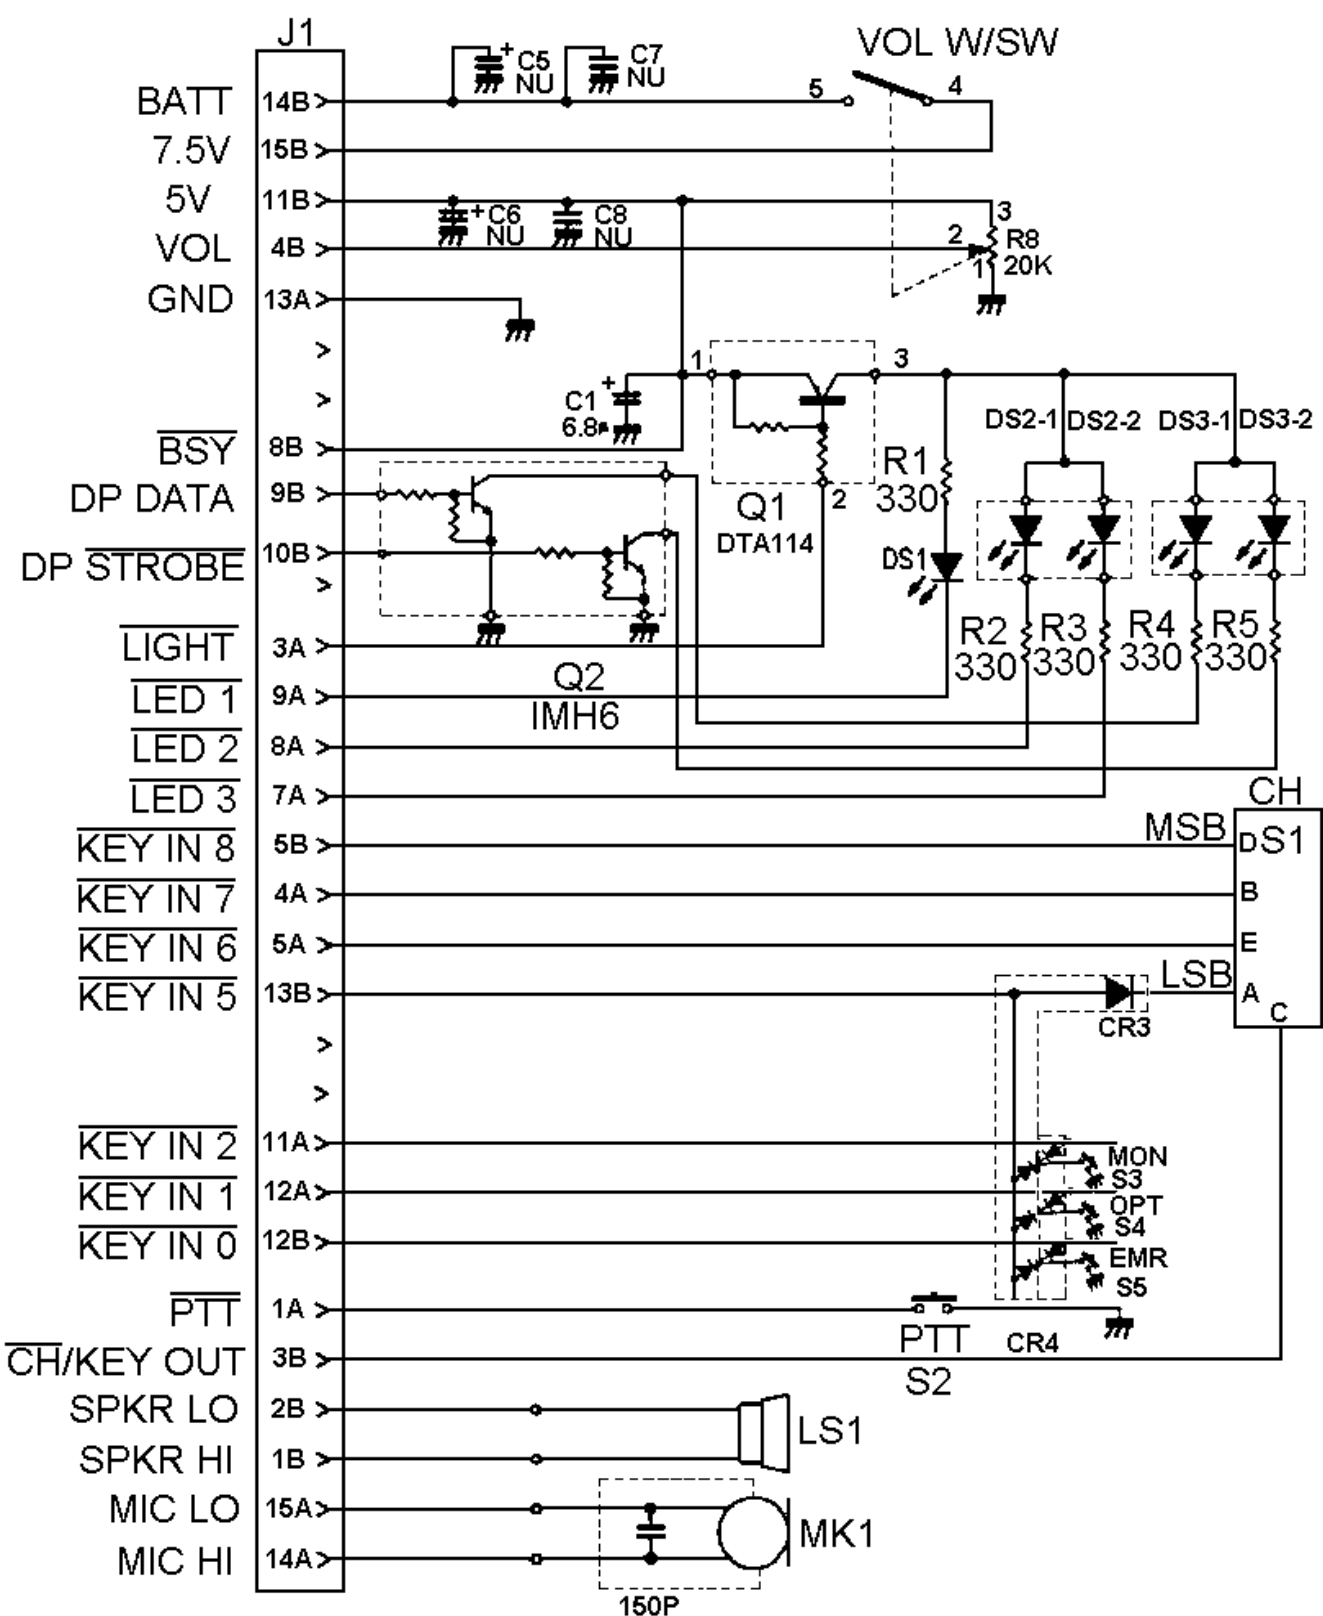

M-RK I LED FLEX ASSEMBLY


(A3WE05285, Rev. 4)

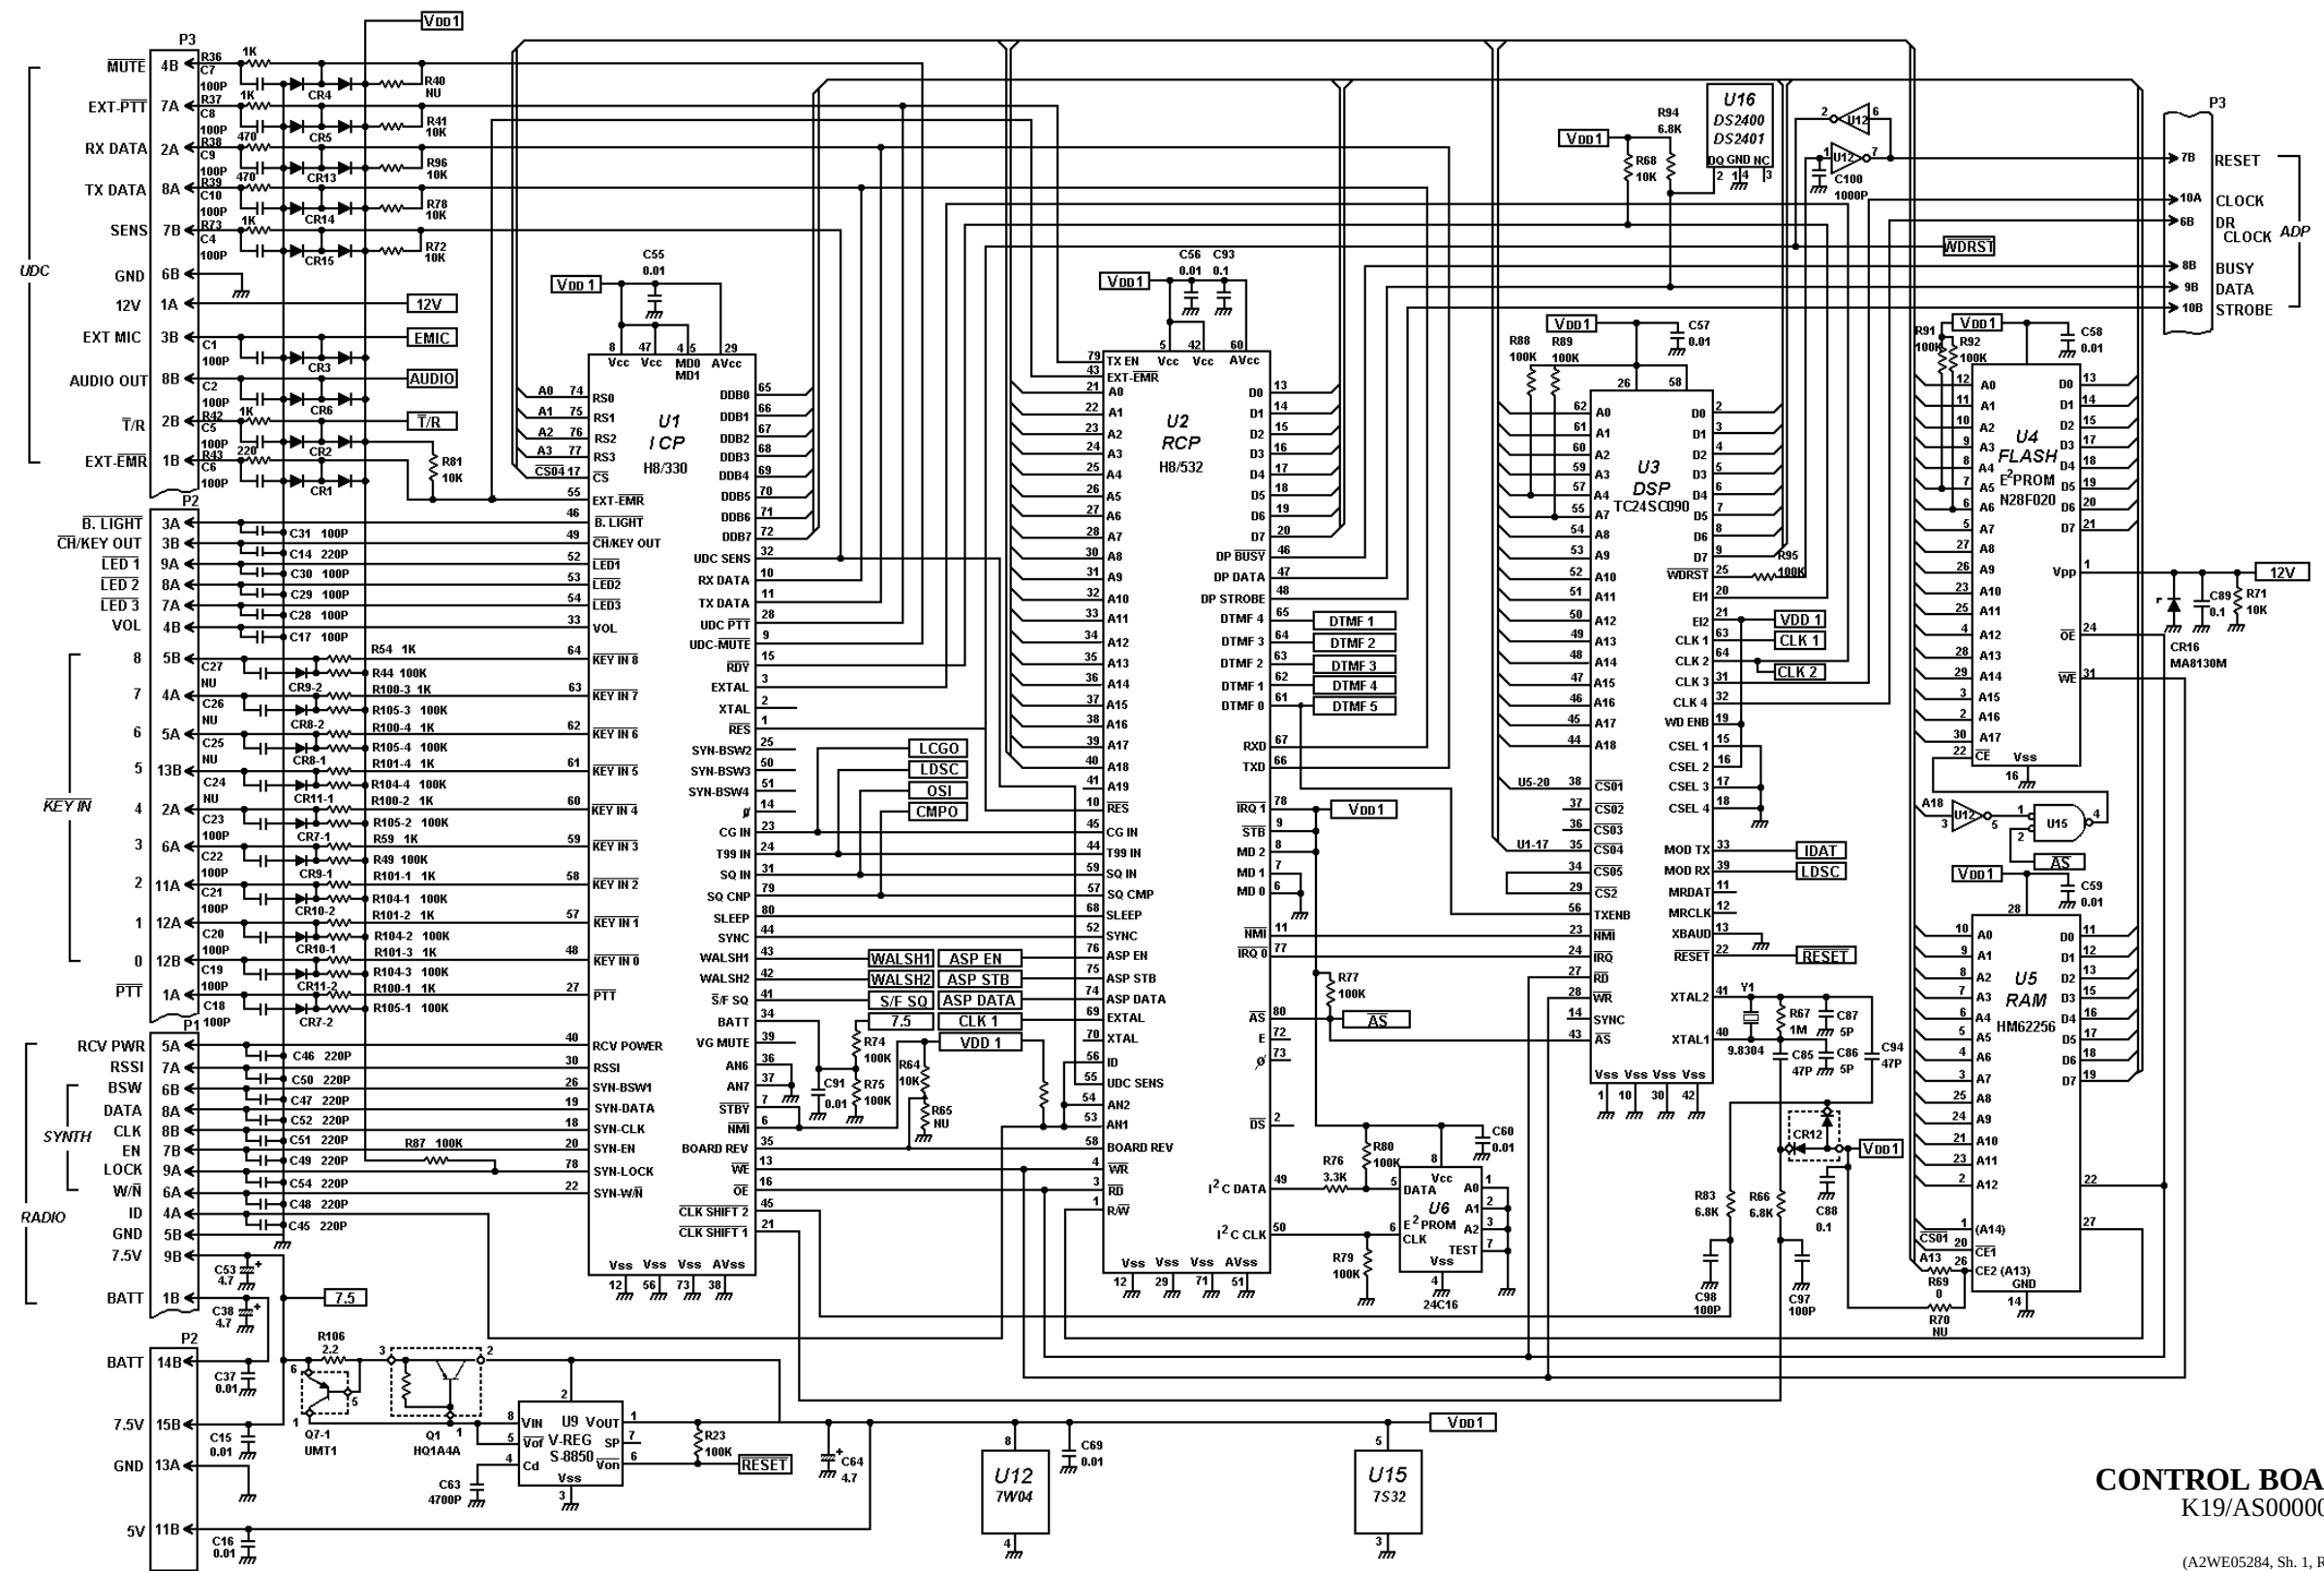


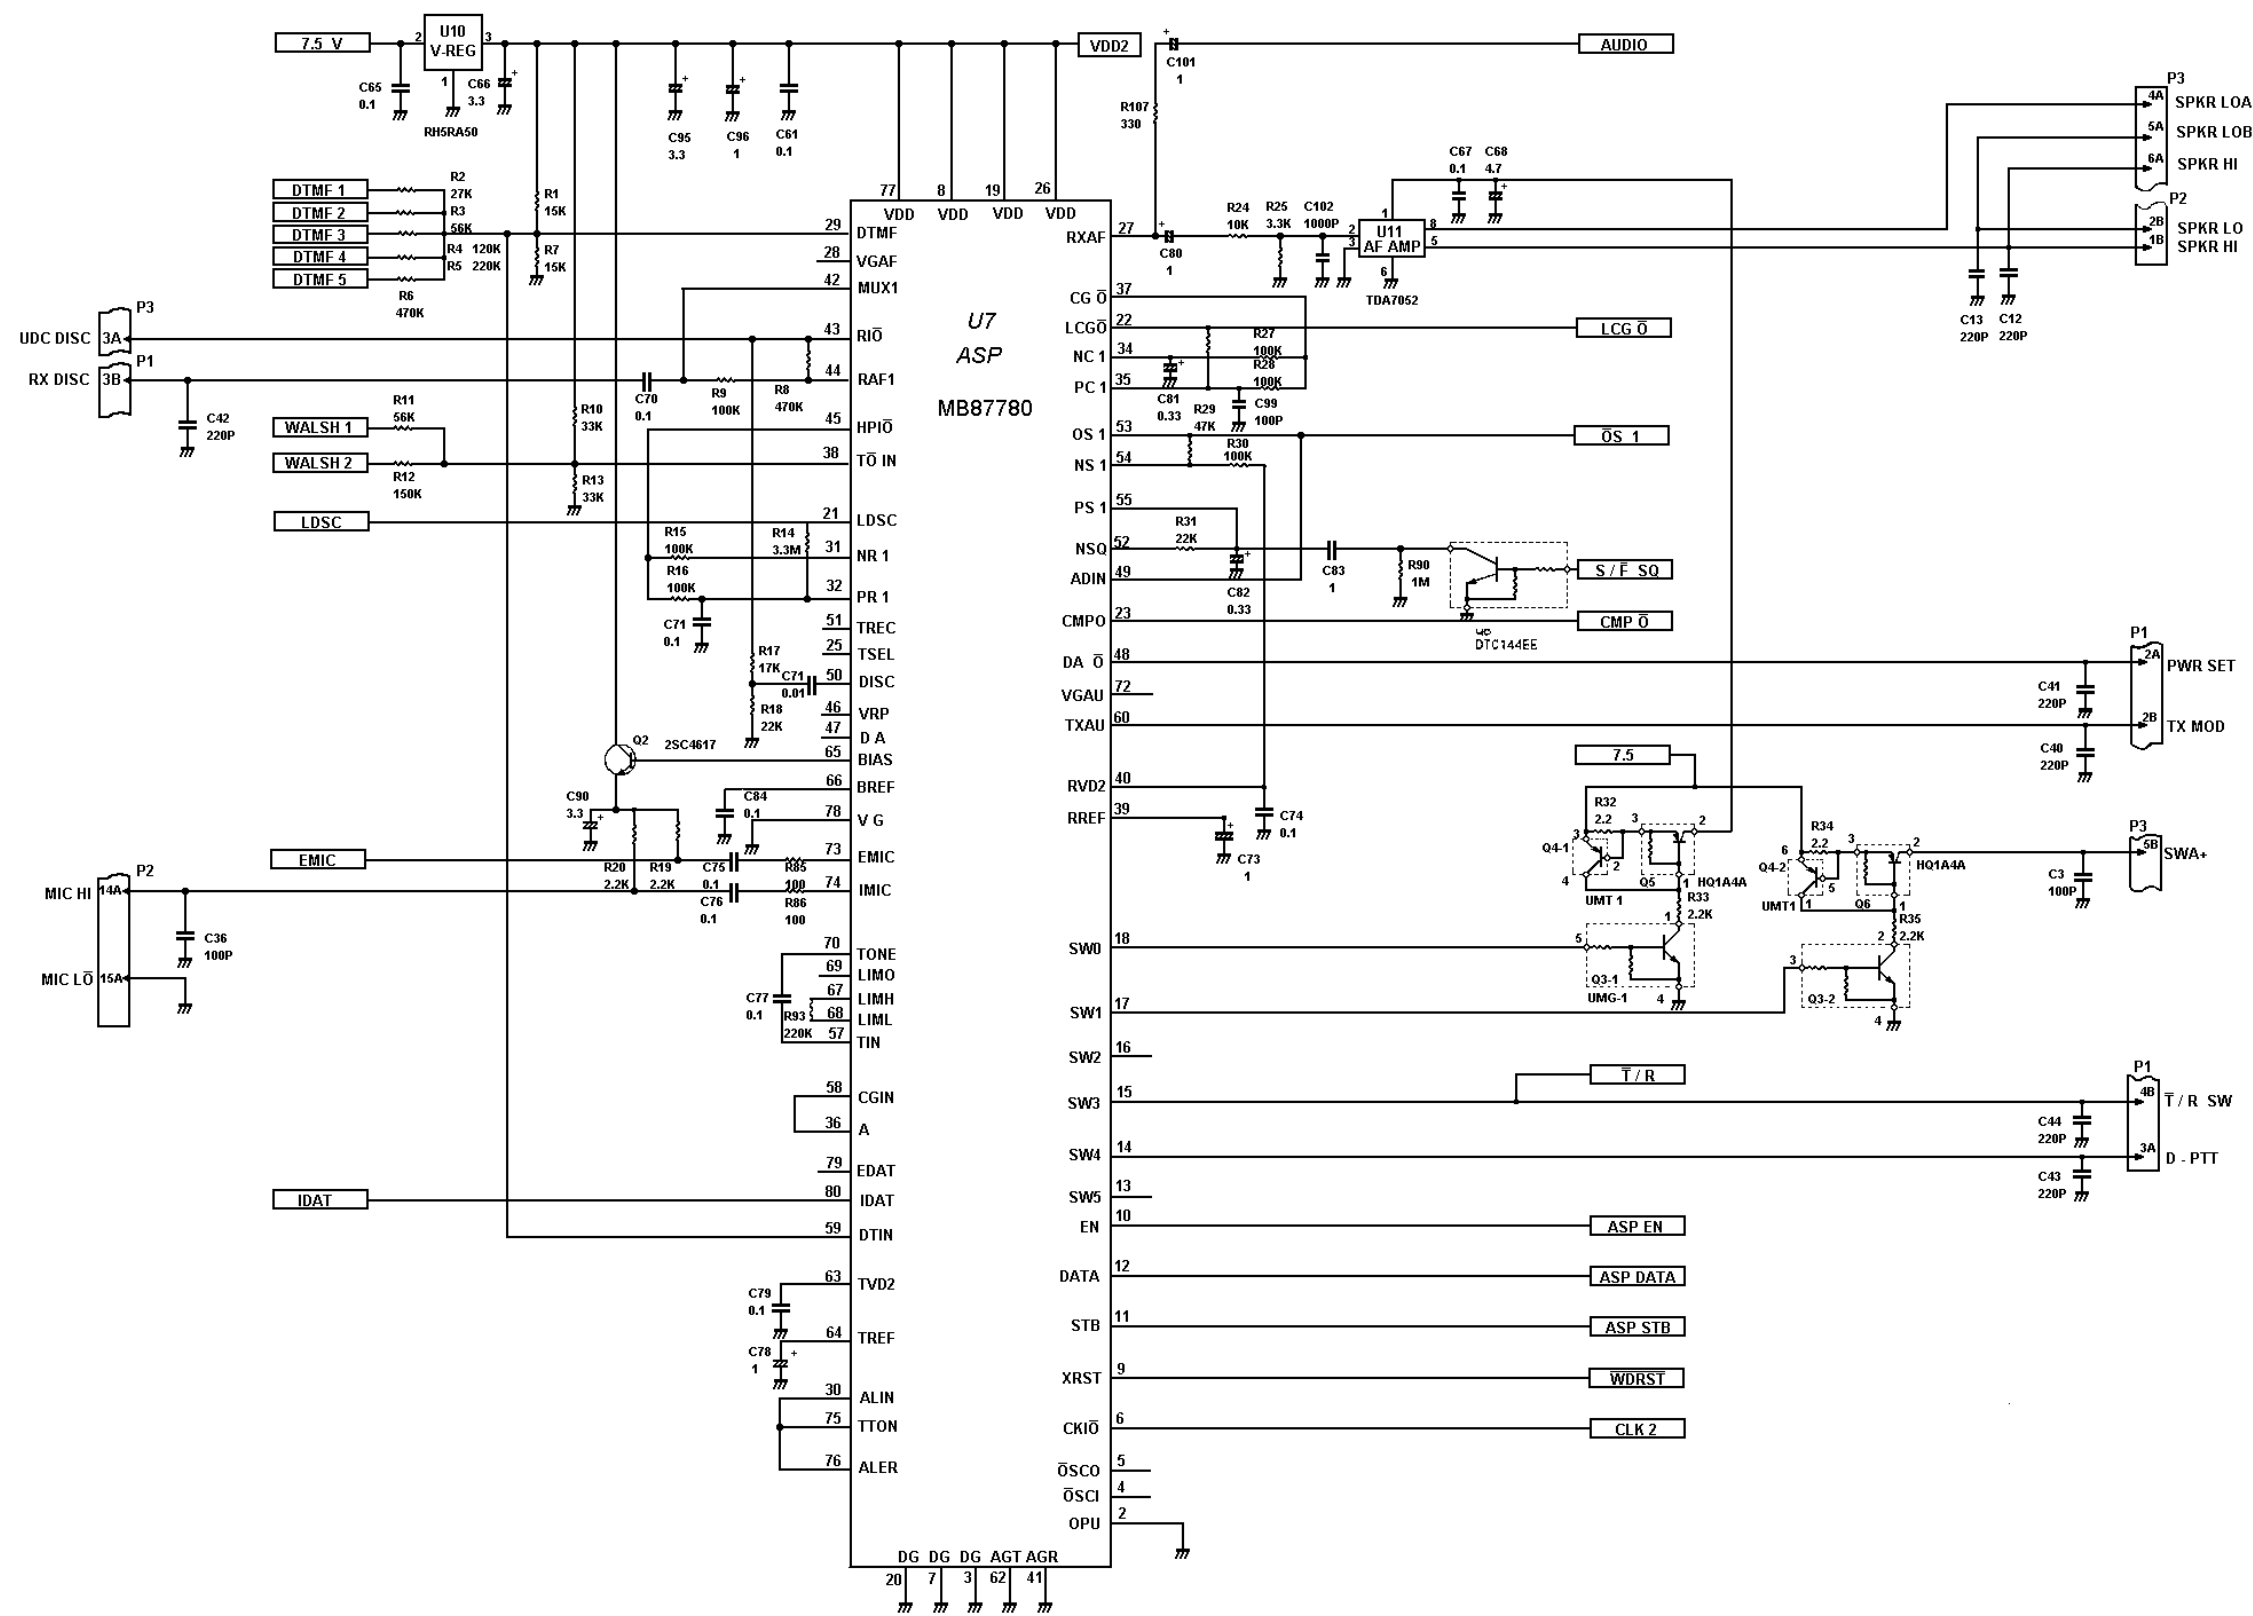

CONTROL BOARD
K19/AS00000065


(A2WE05284, Sh. 2, Rev. 14)

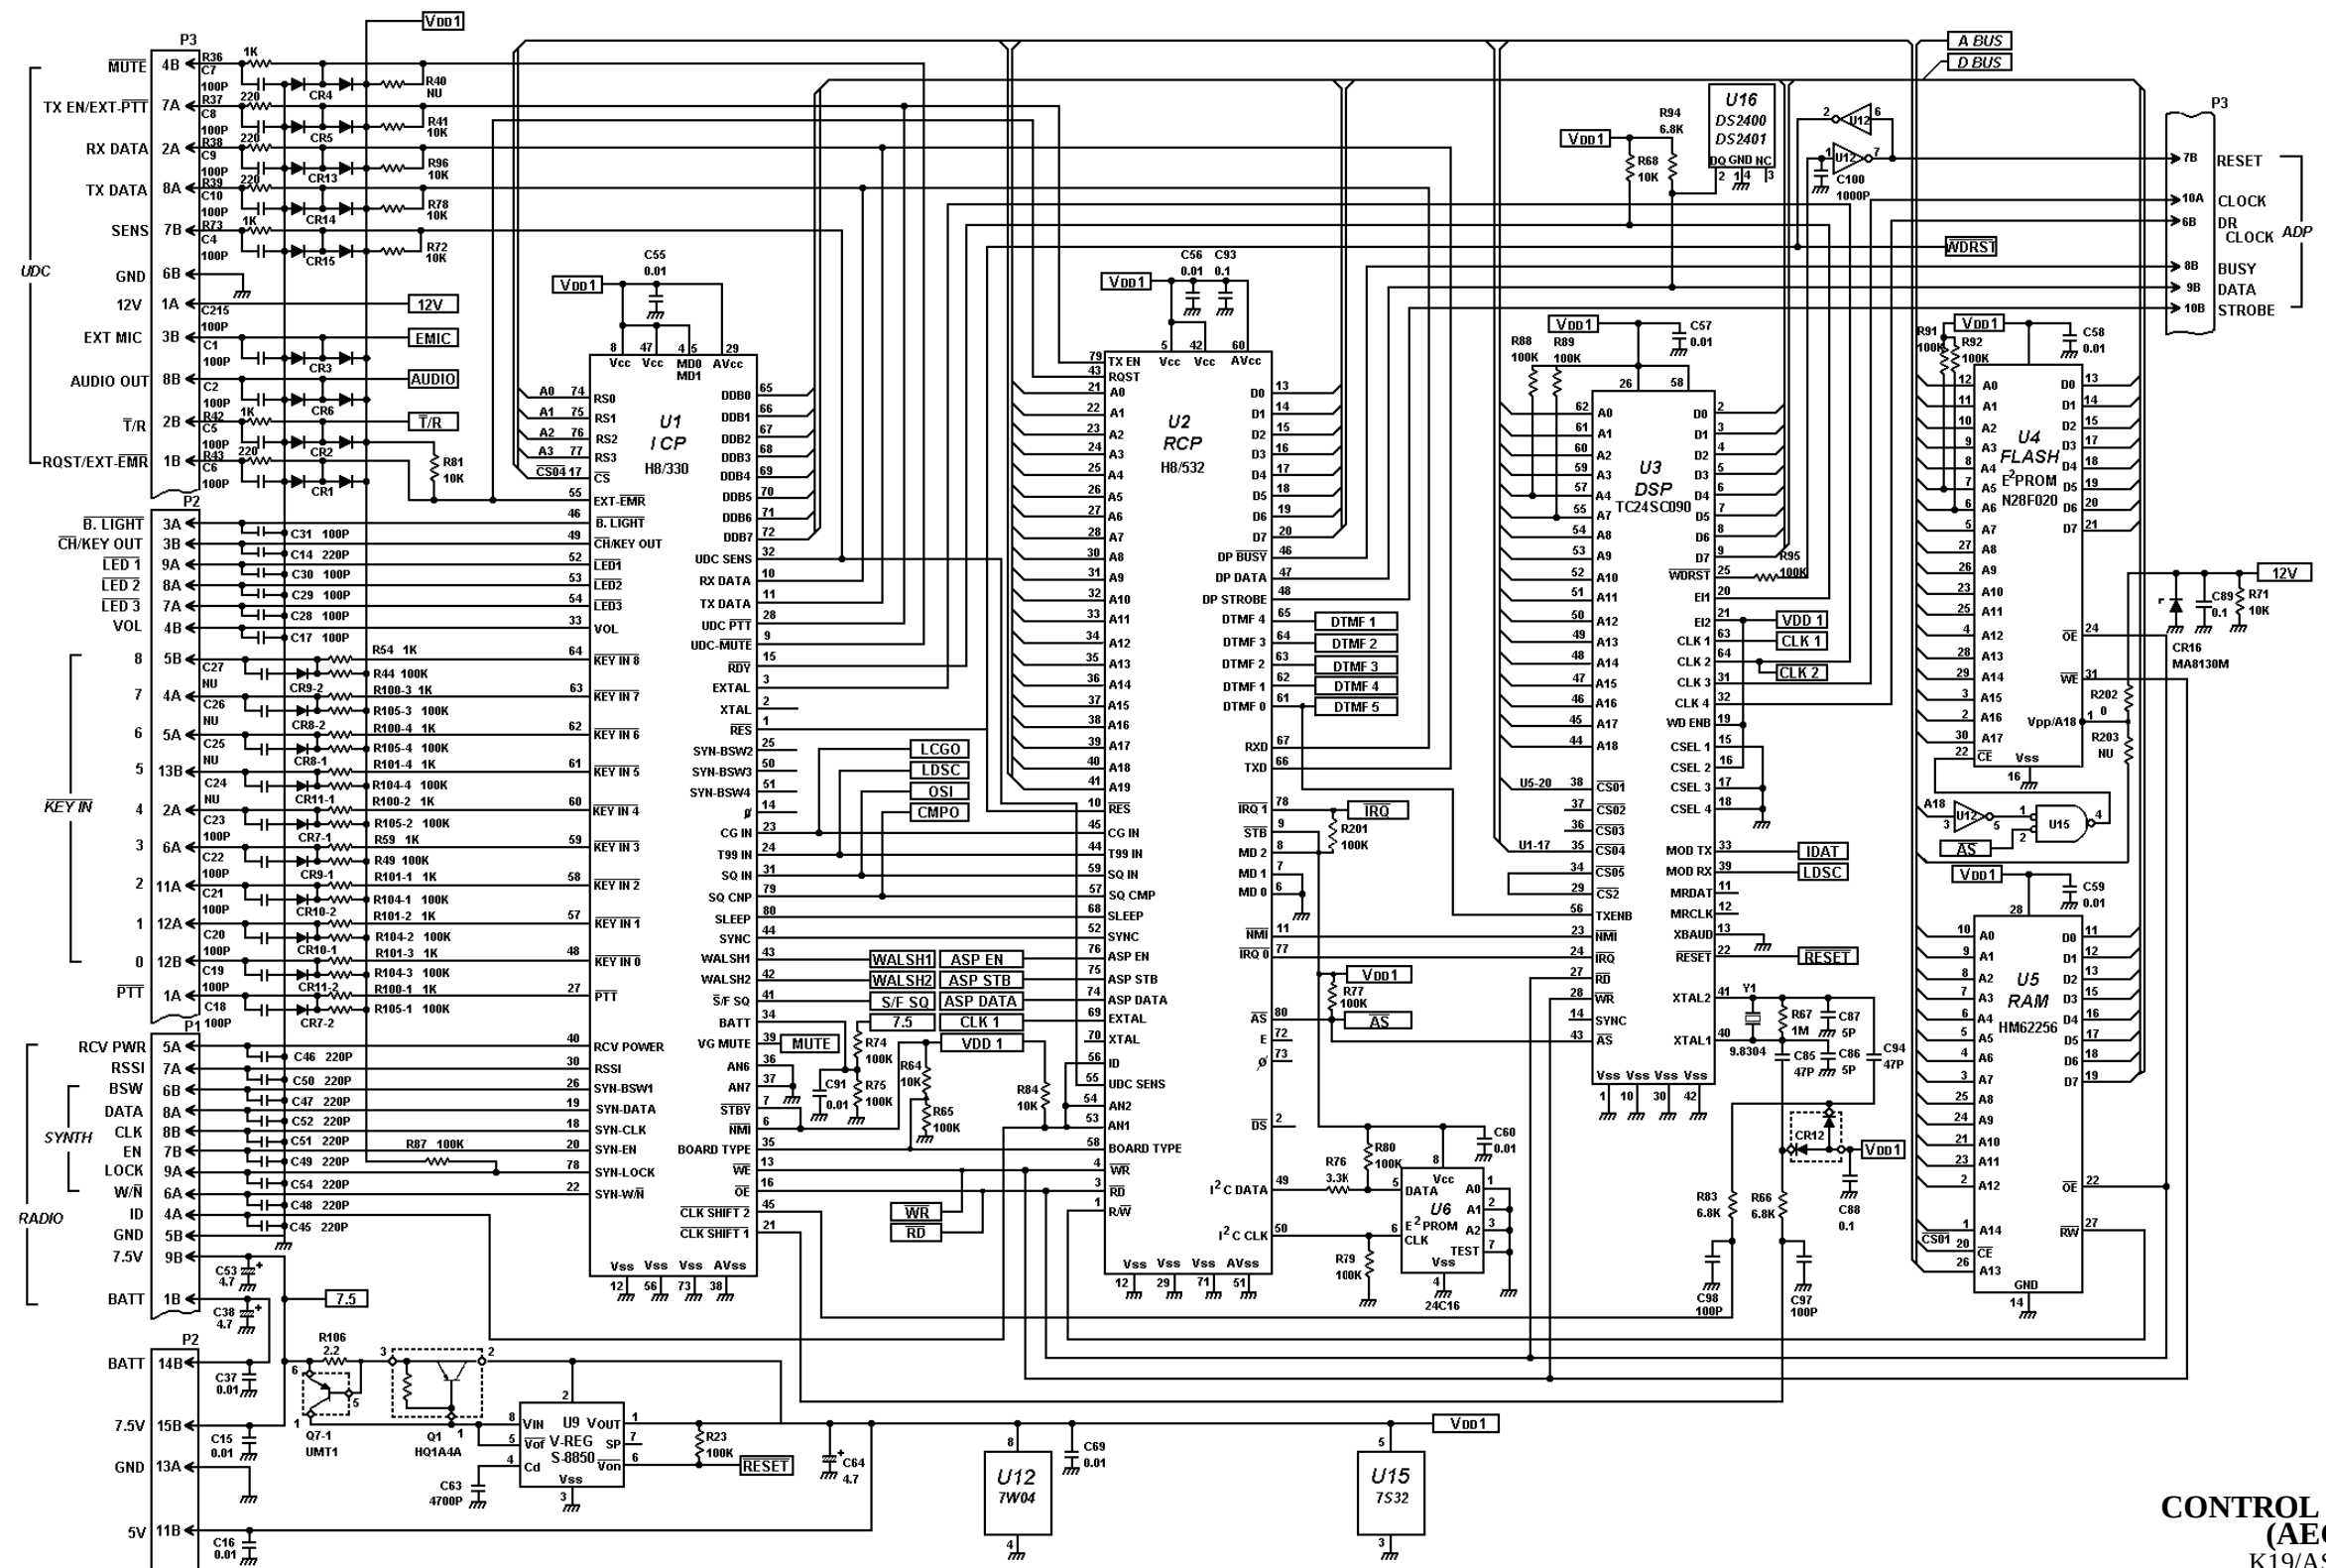

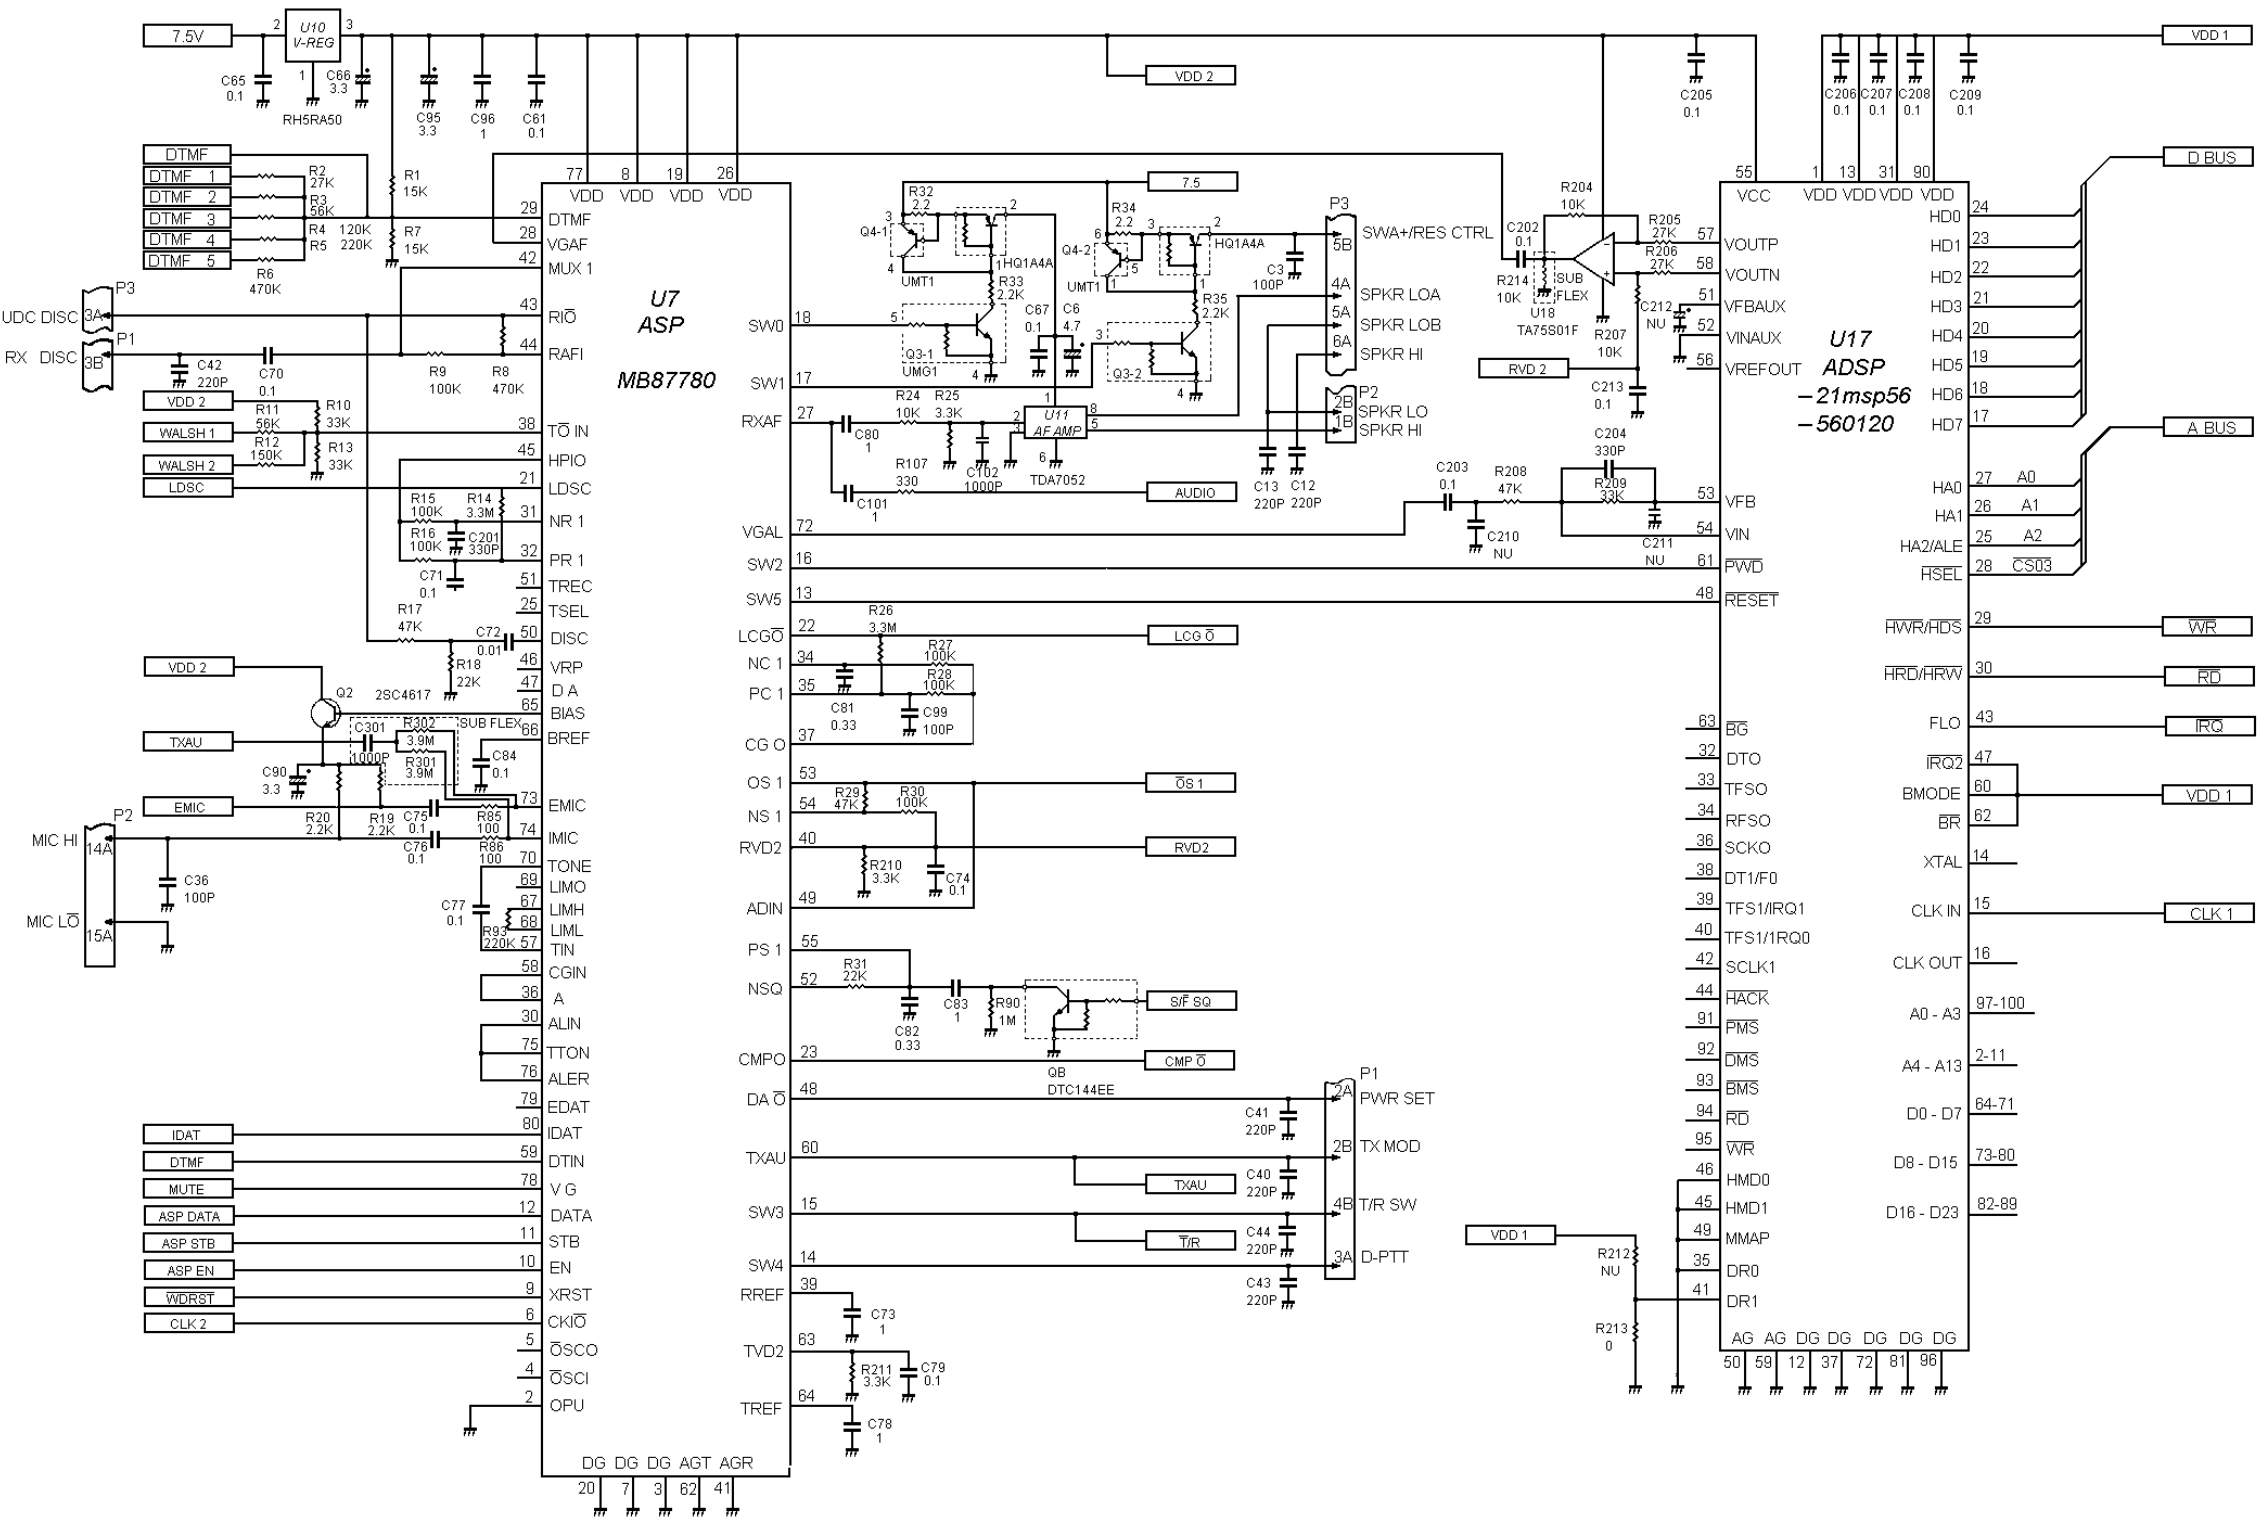


CONTROL BOARD
(AEGIS/VG)
K19/AS00001147

(A2WE06080, Sh. 2, Rev. 5)

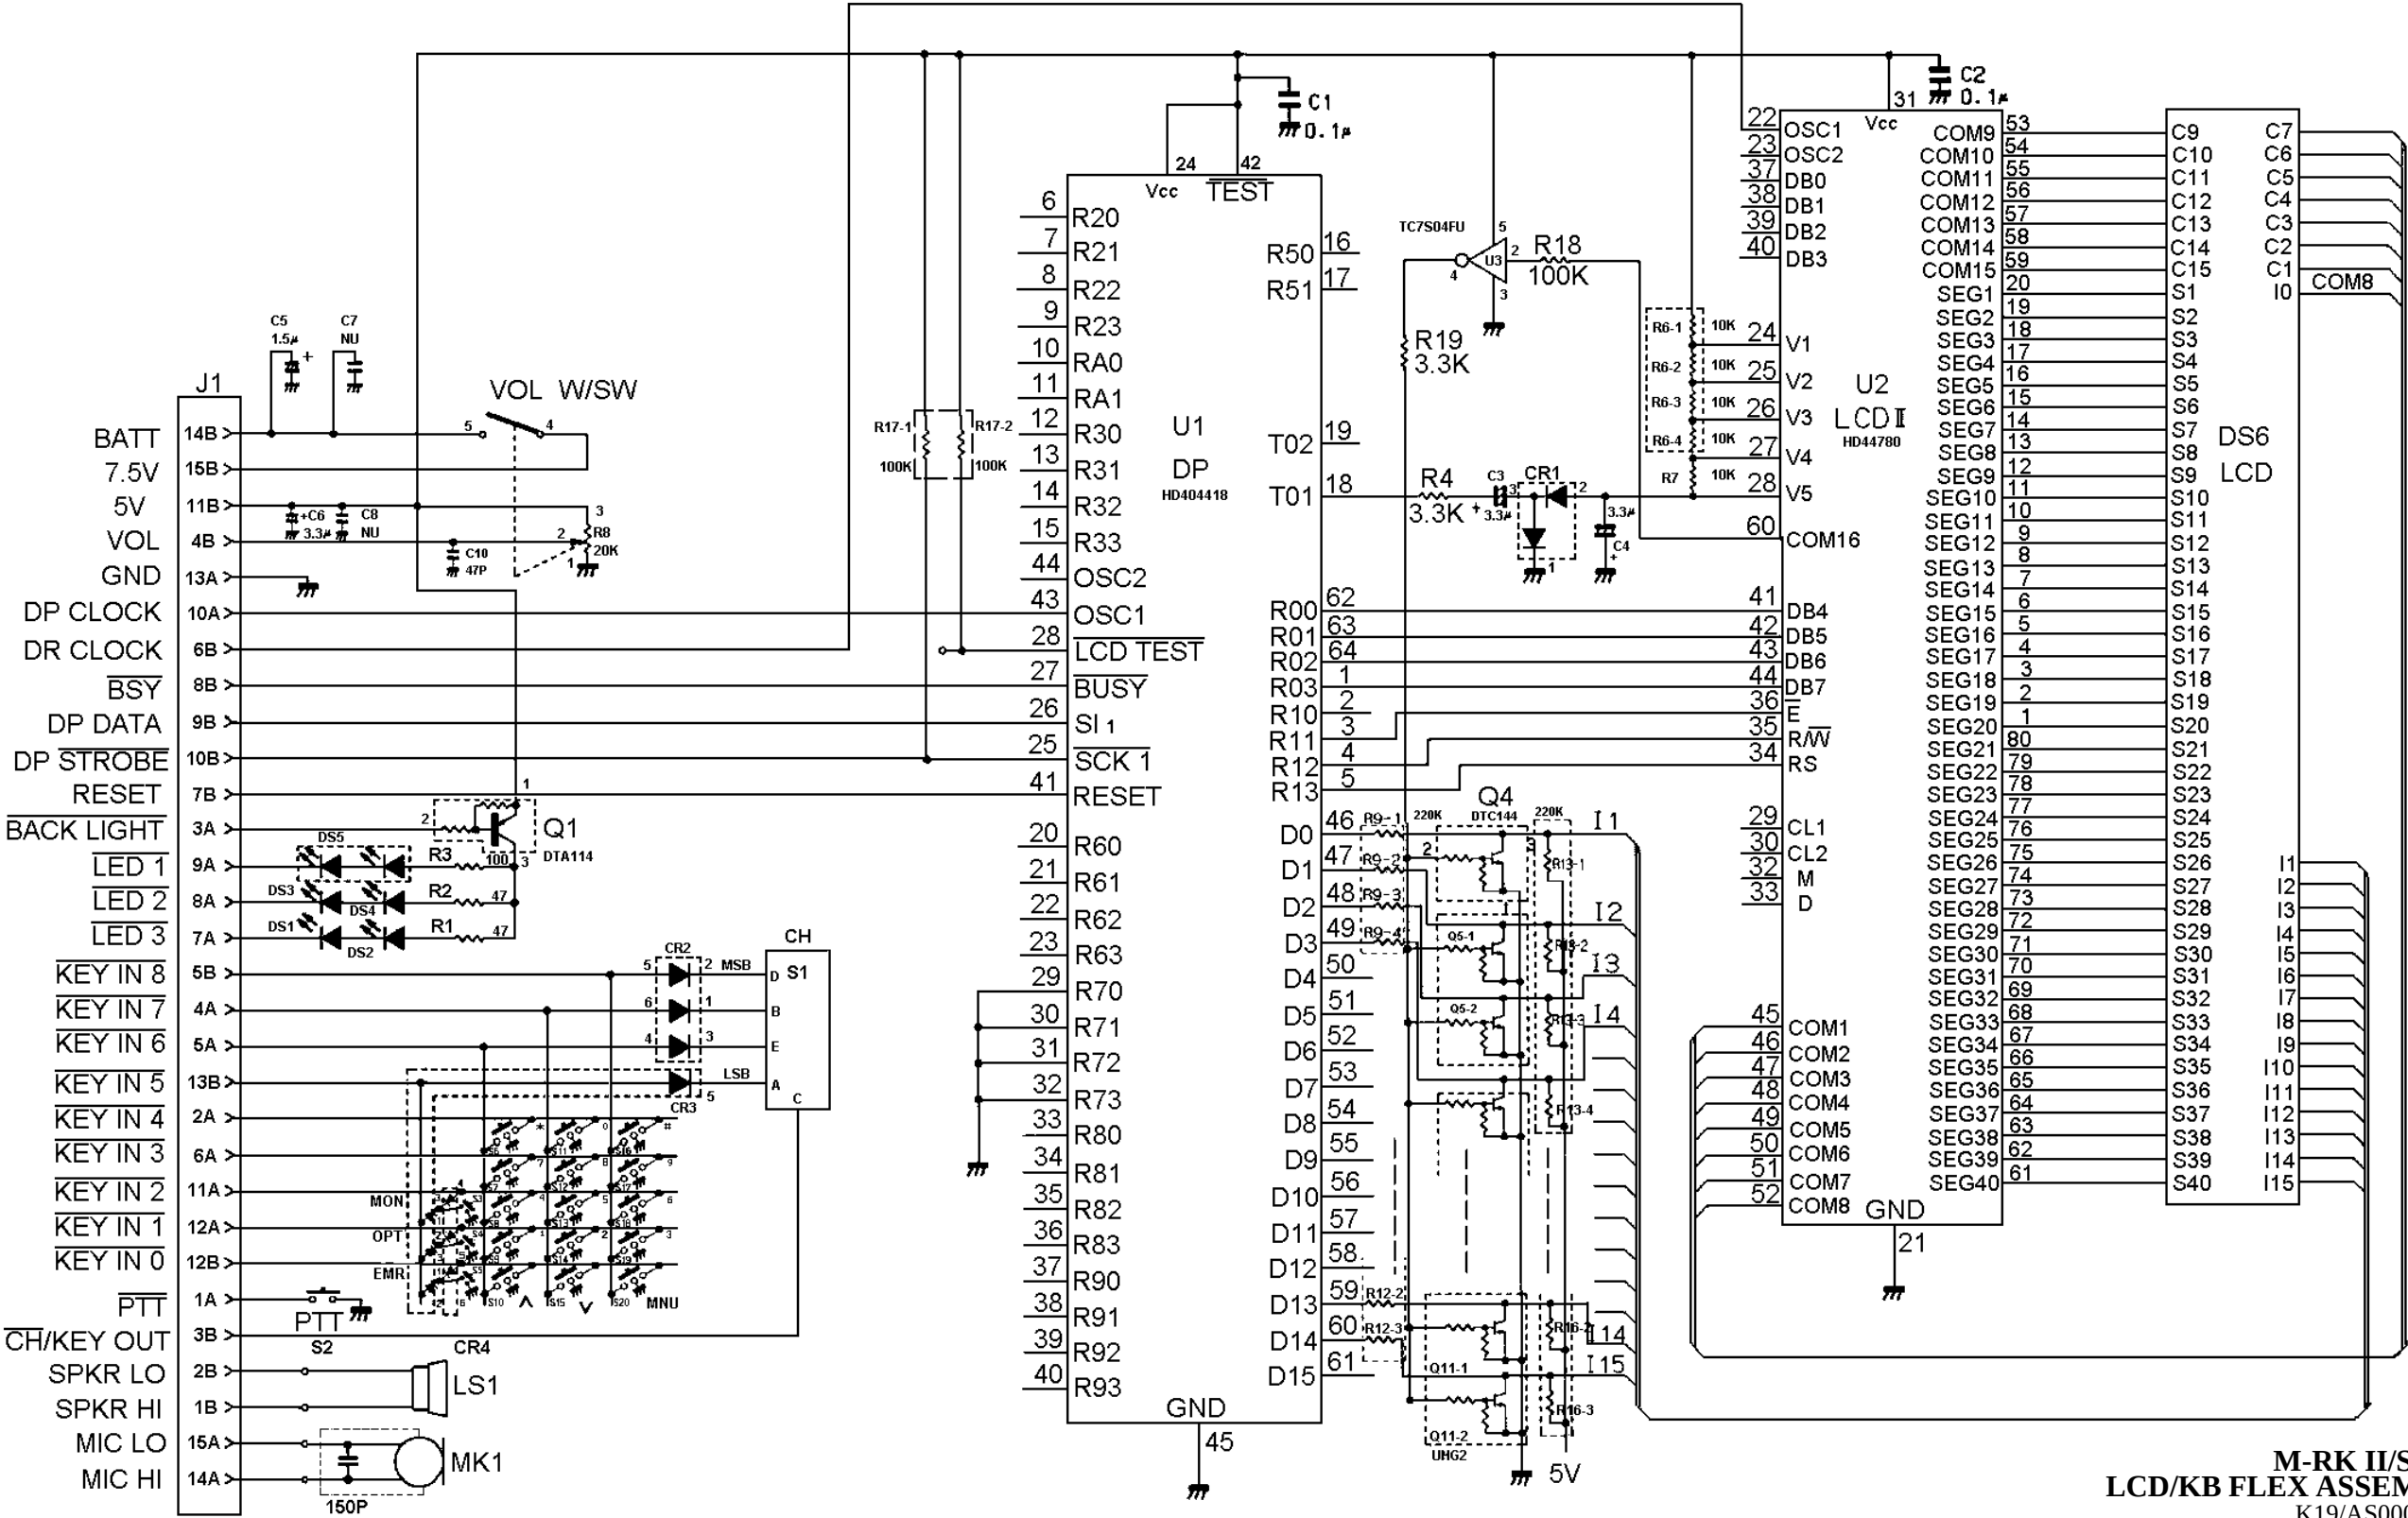


M-RK II/SCAN
LCD/KB FLEX ASSEMBLY
K19/AS00000057

(A3WE05286, Rev. 7)

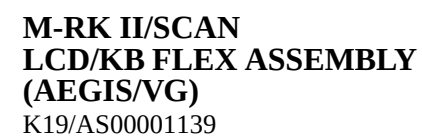

TRANSMITTER SECTION

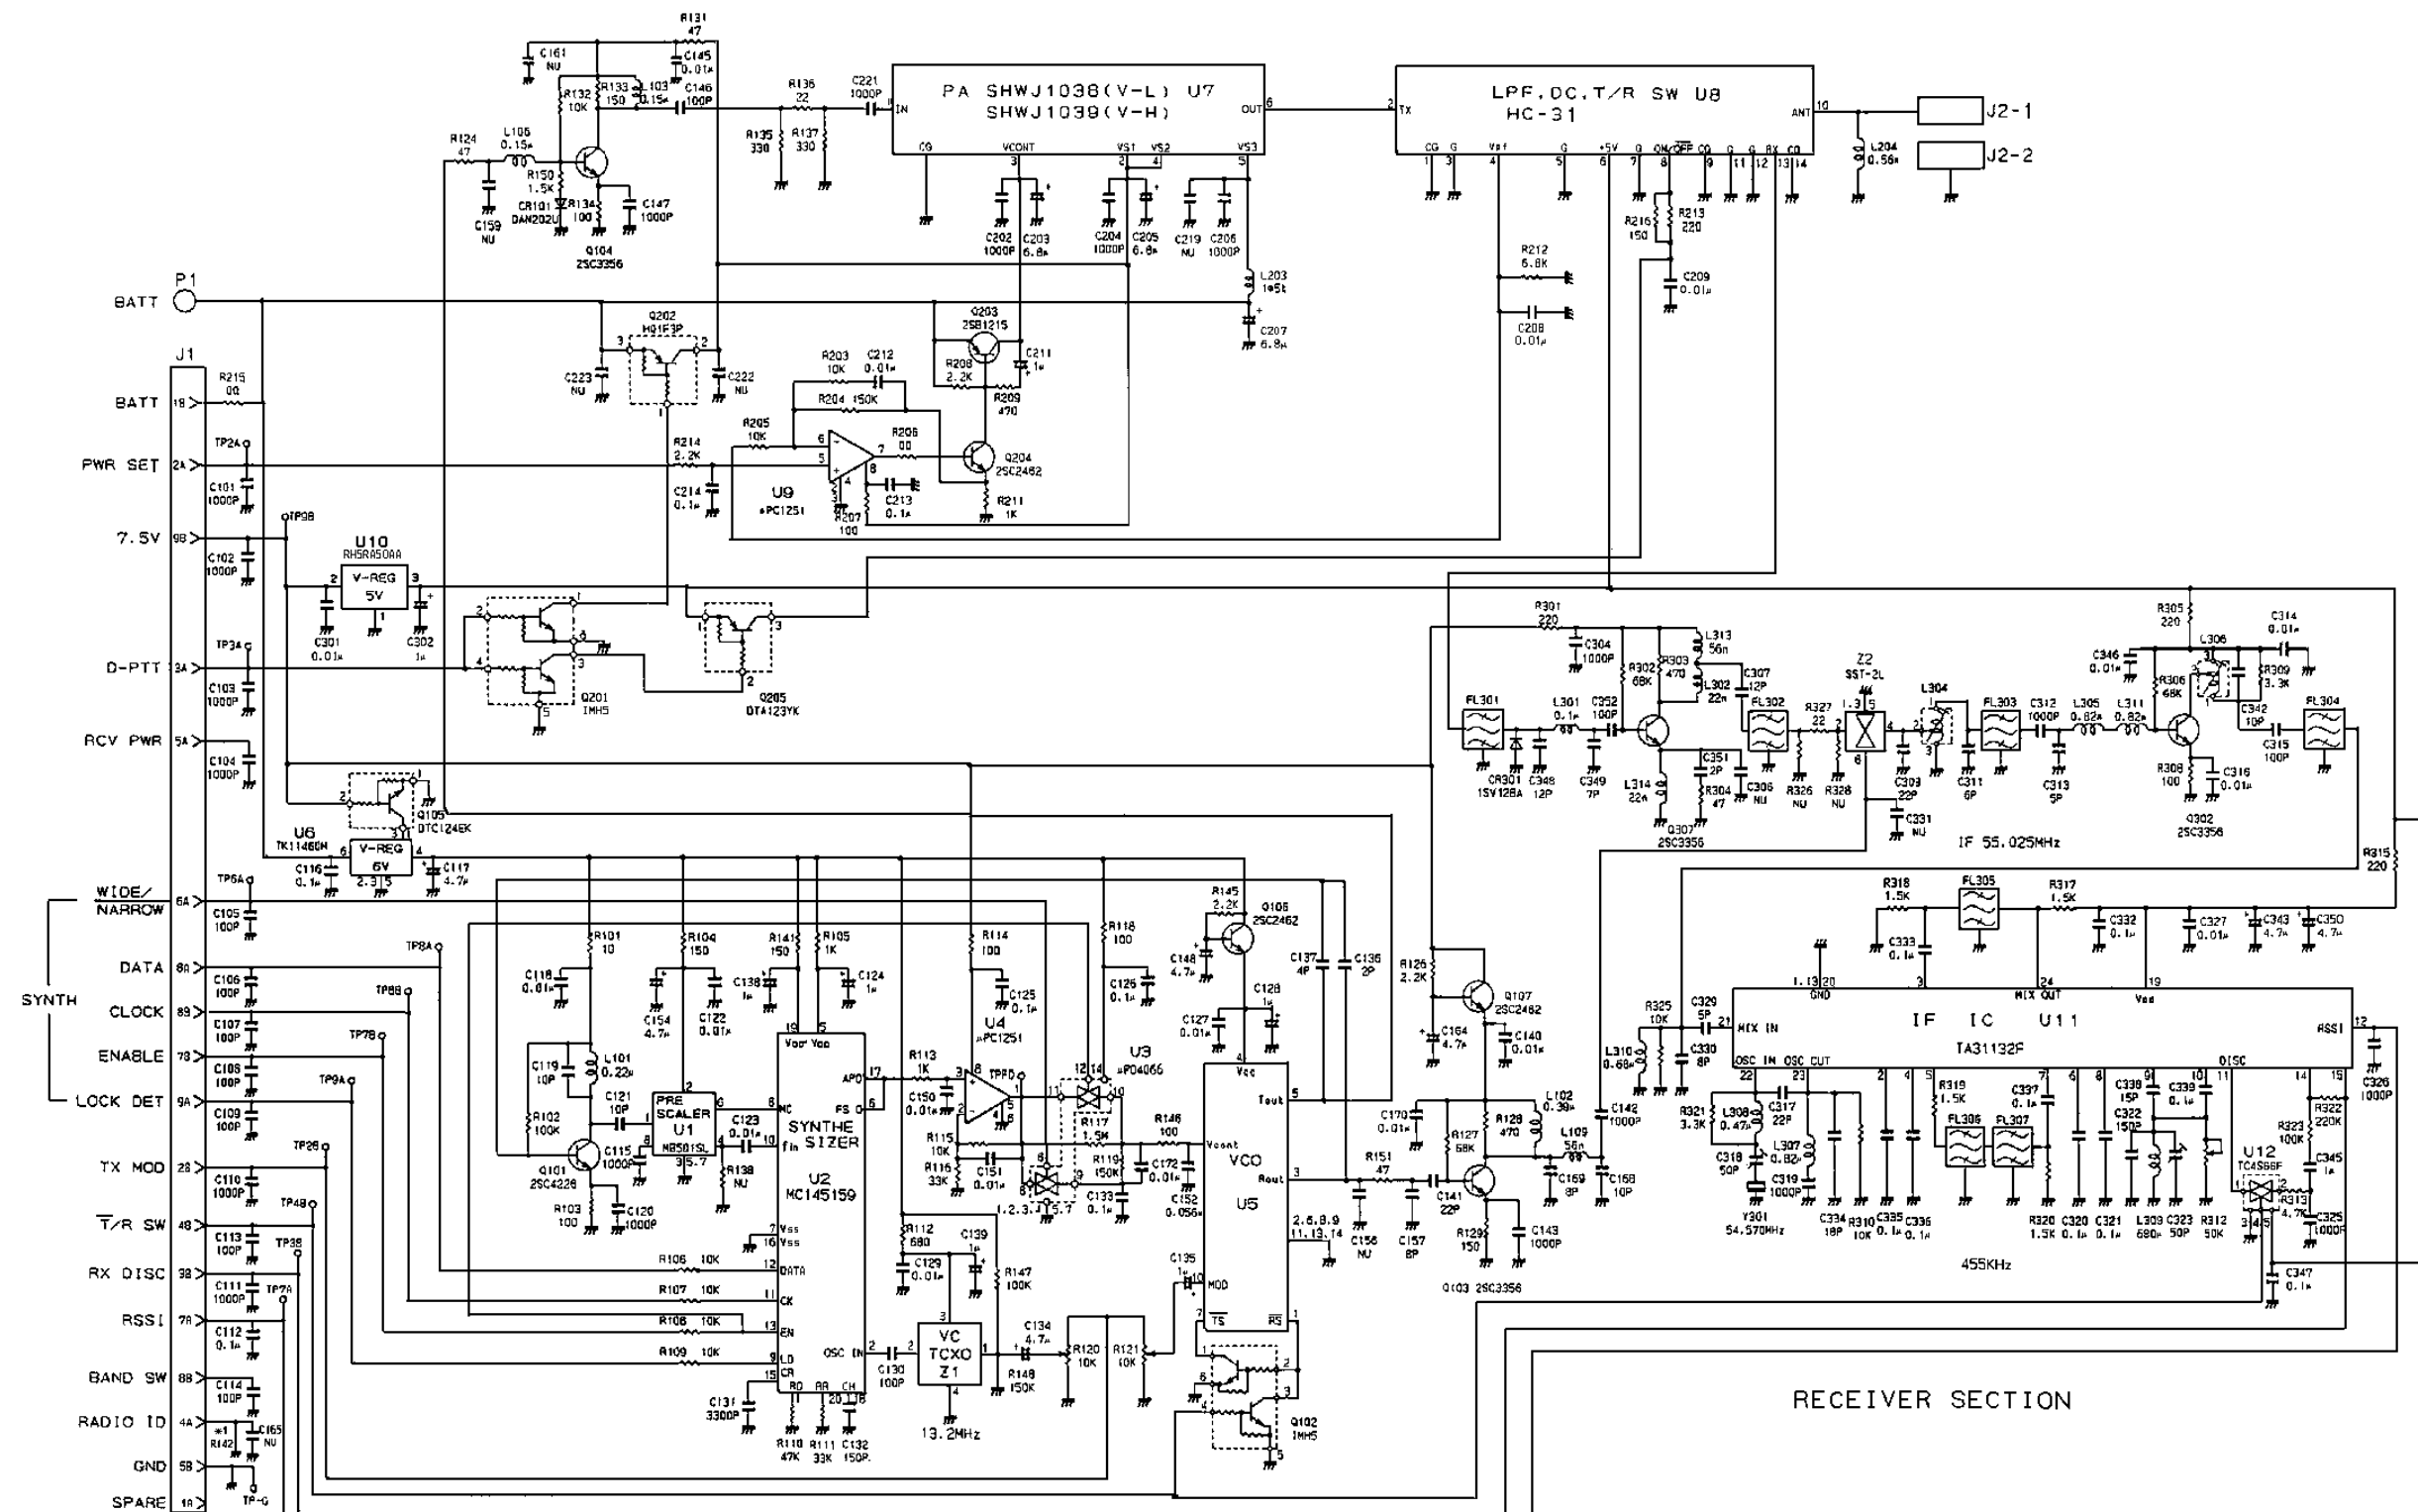


SYNTHESIZER SECTION

RECEIVER SECTION

RADIO BOARD
VHF

(A2WE05280, Rev. 7)

	V-L	V-H
R1	2.2K	4.7K
R142		

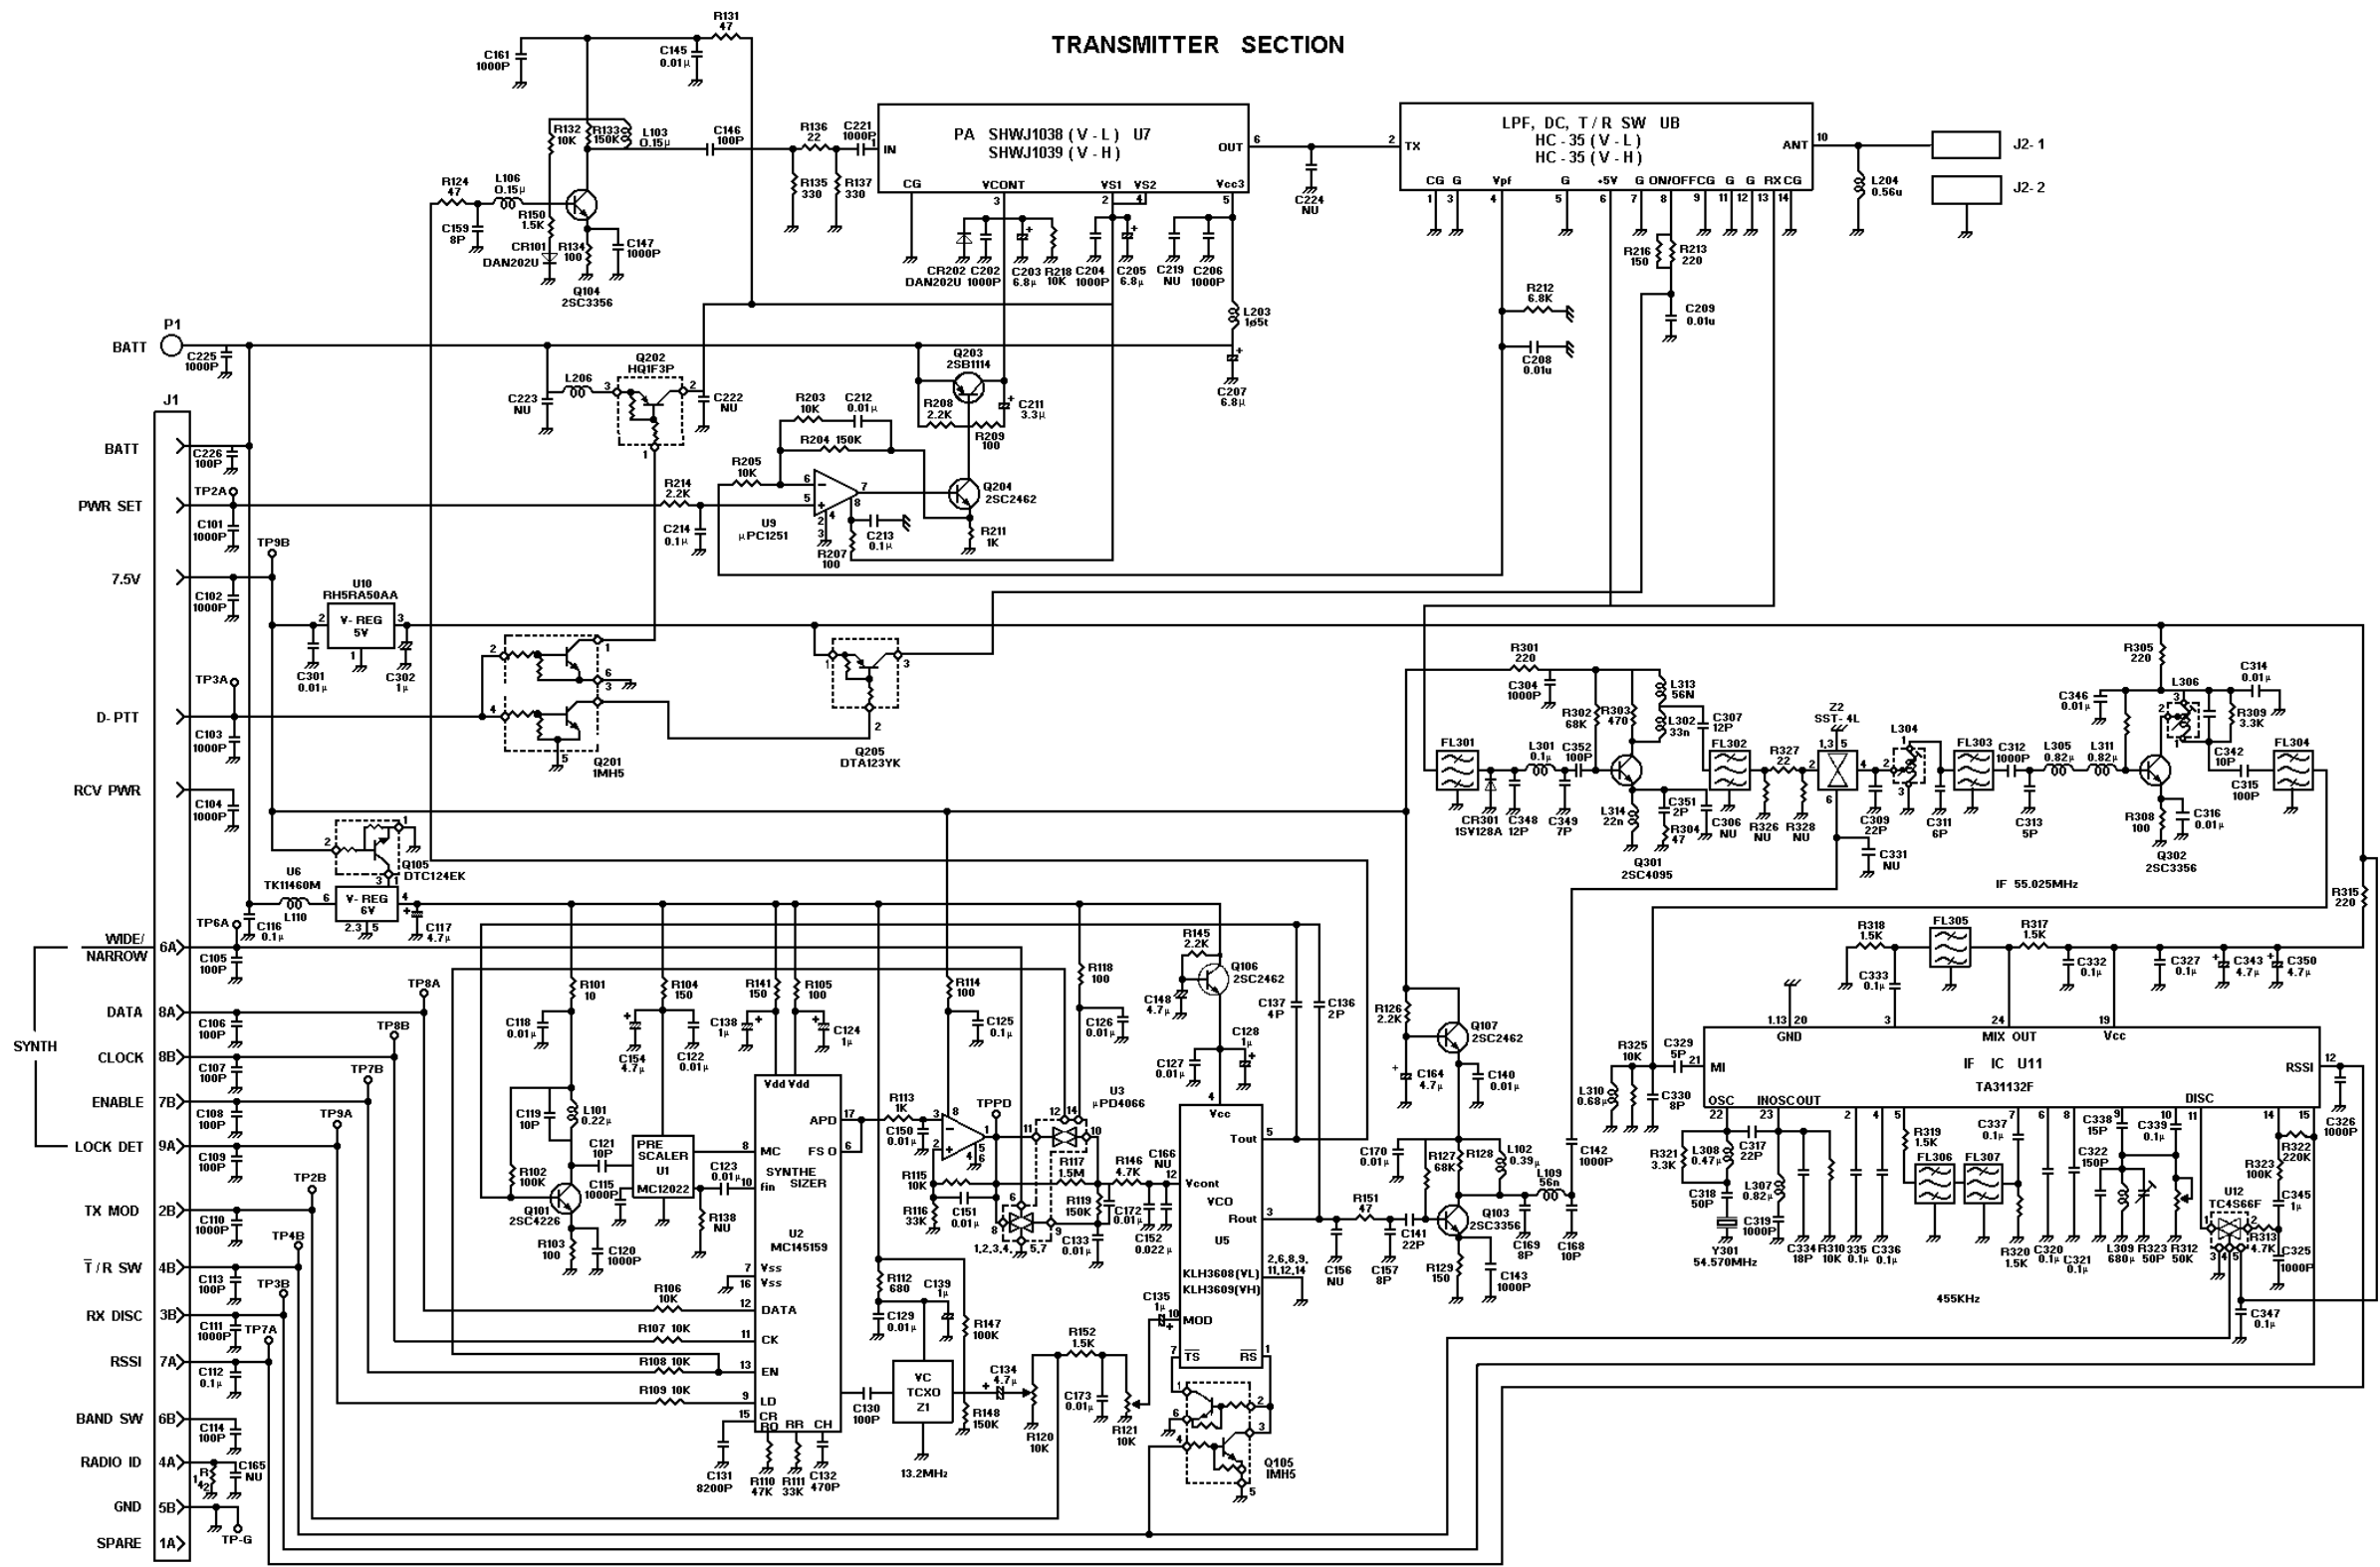


RADIO BOARD (VHF ETS)

	V - L	V - H
#1	R142	2.2K
		4.7K

(A2WE06096, Rev. 4)

TRANSMITTER SECTION

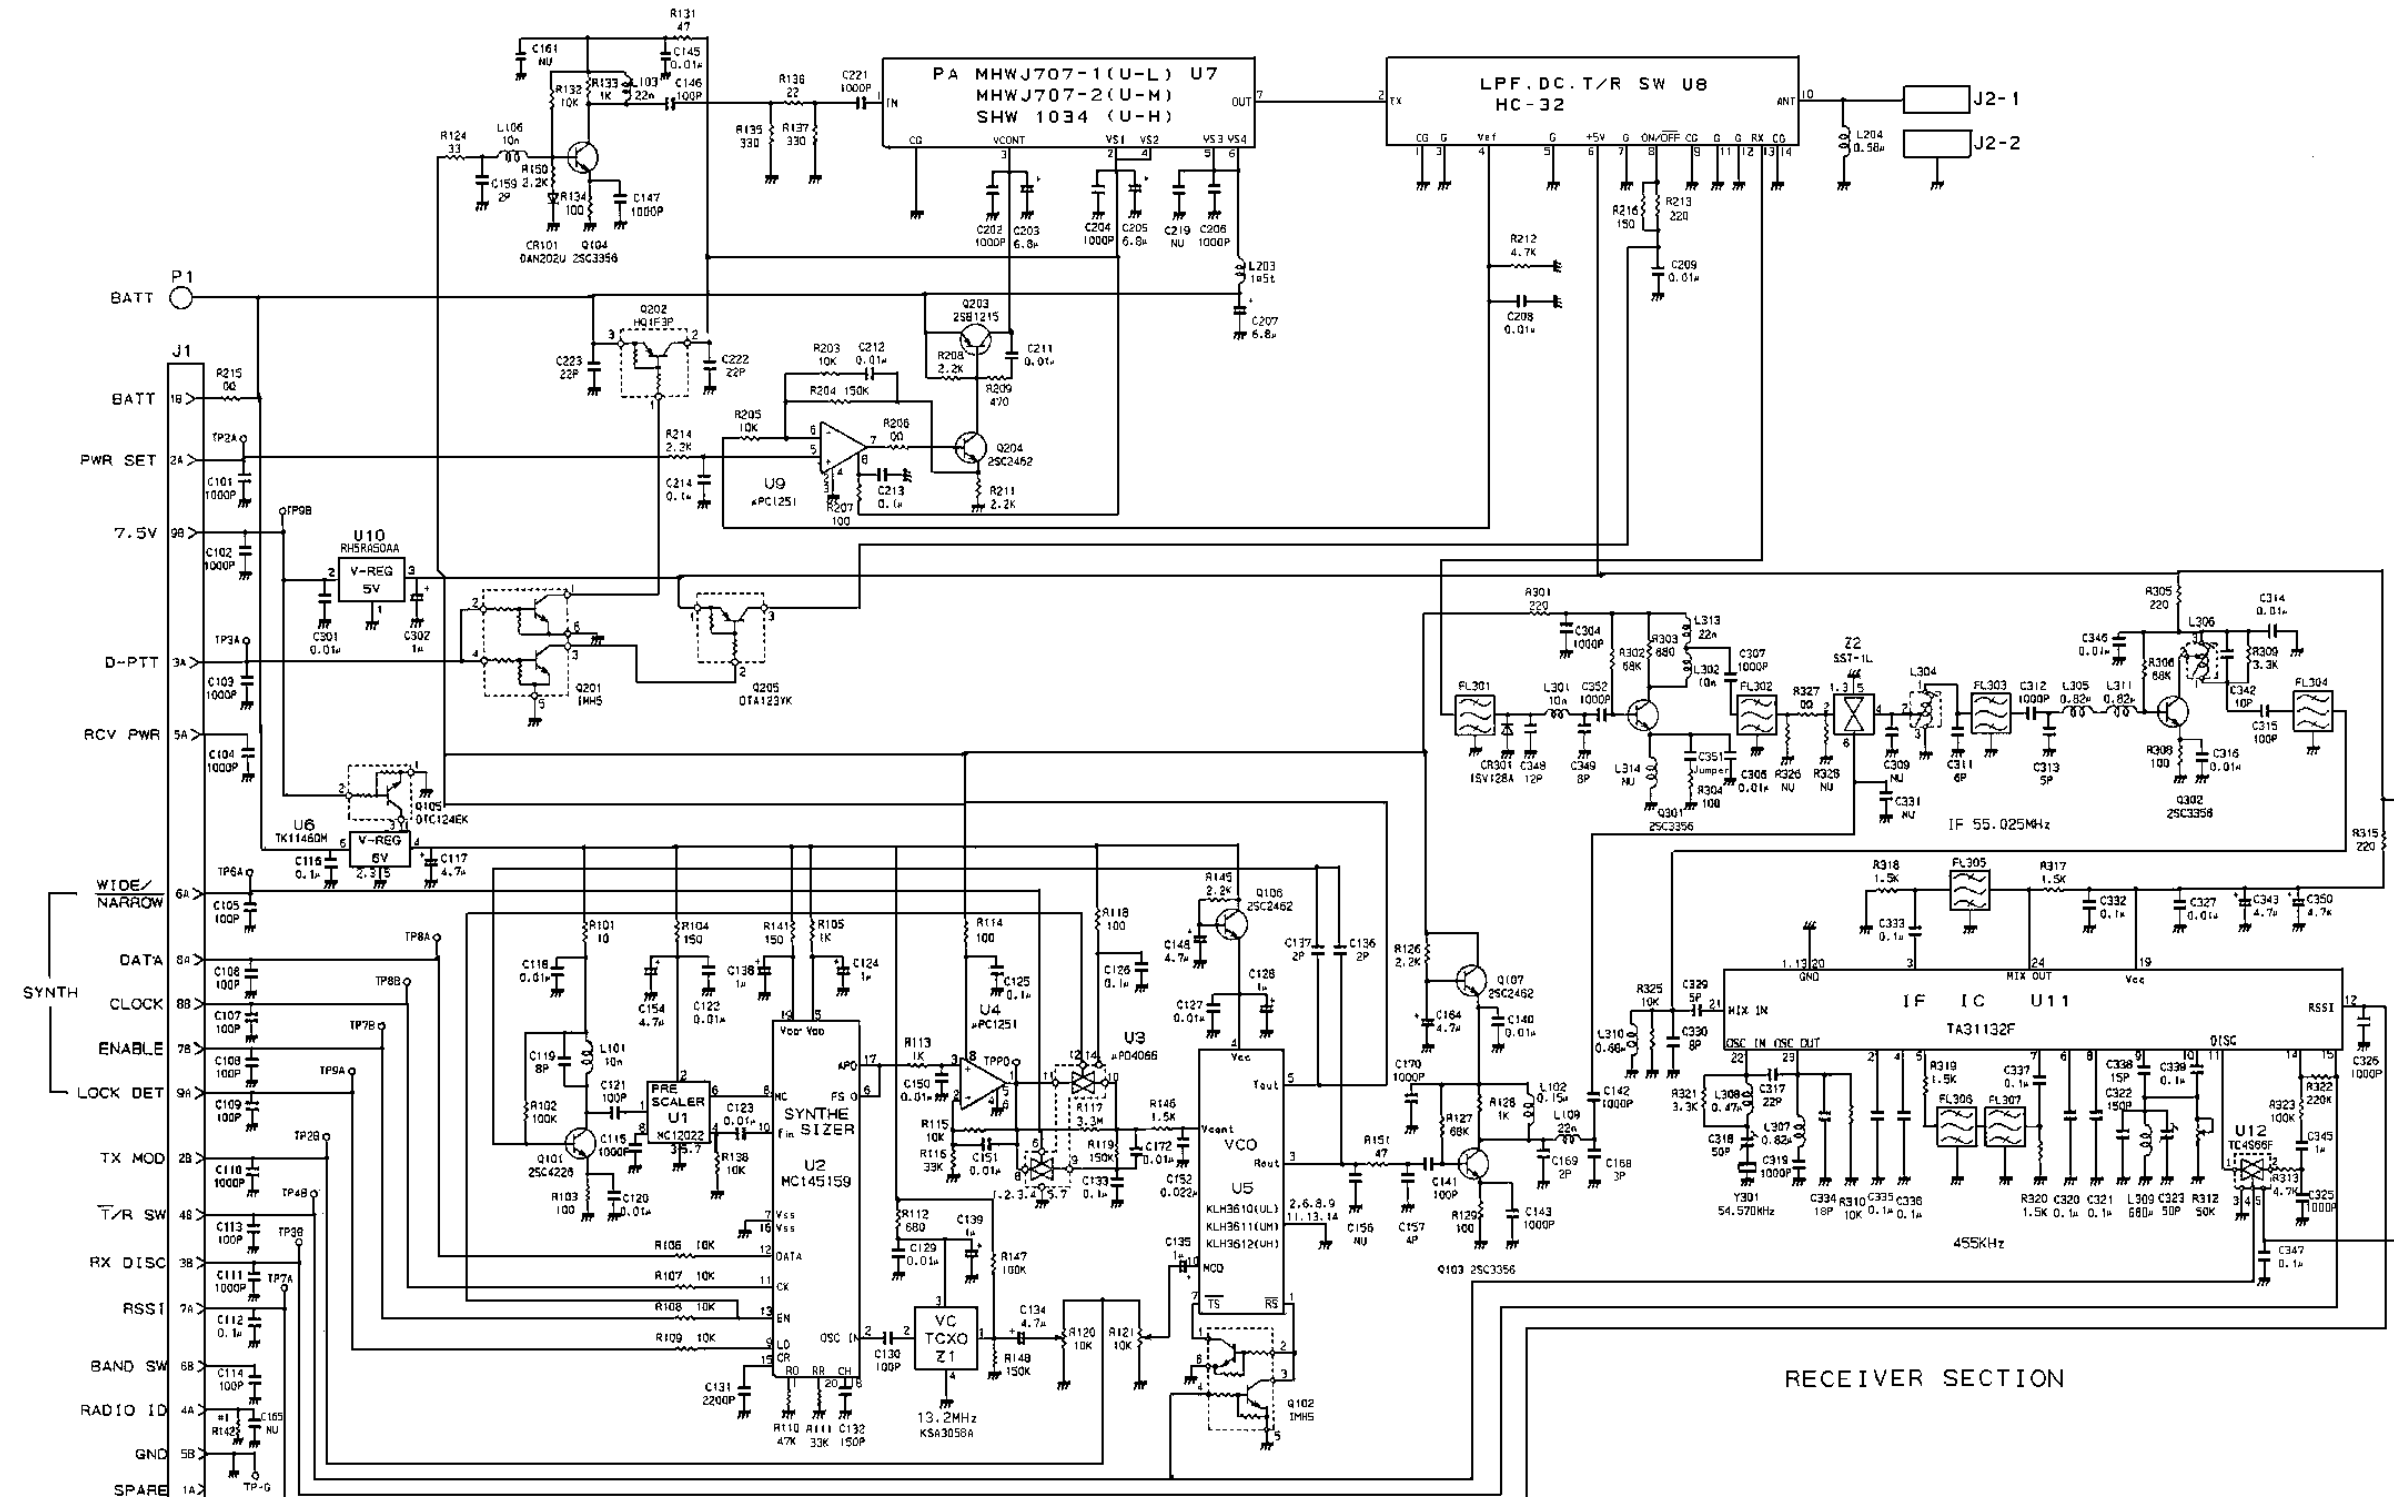

RECEIVER SECTION

SYNTHESIZER SECTION


	U-L	U-M	U-H
R142	22K	47K	68K

RADIO BOARD

UHF

(A2WE05281, Rev. 3)

TRANSMITTER SECTION

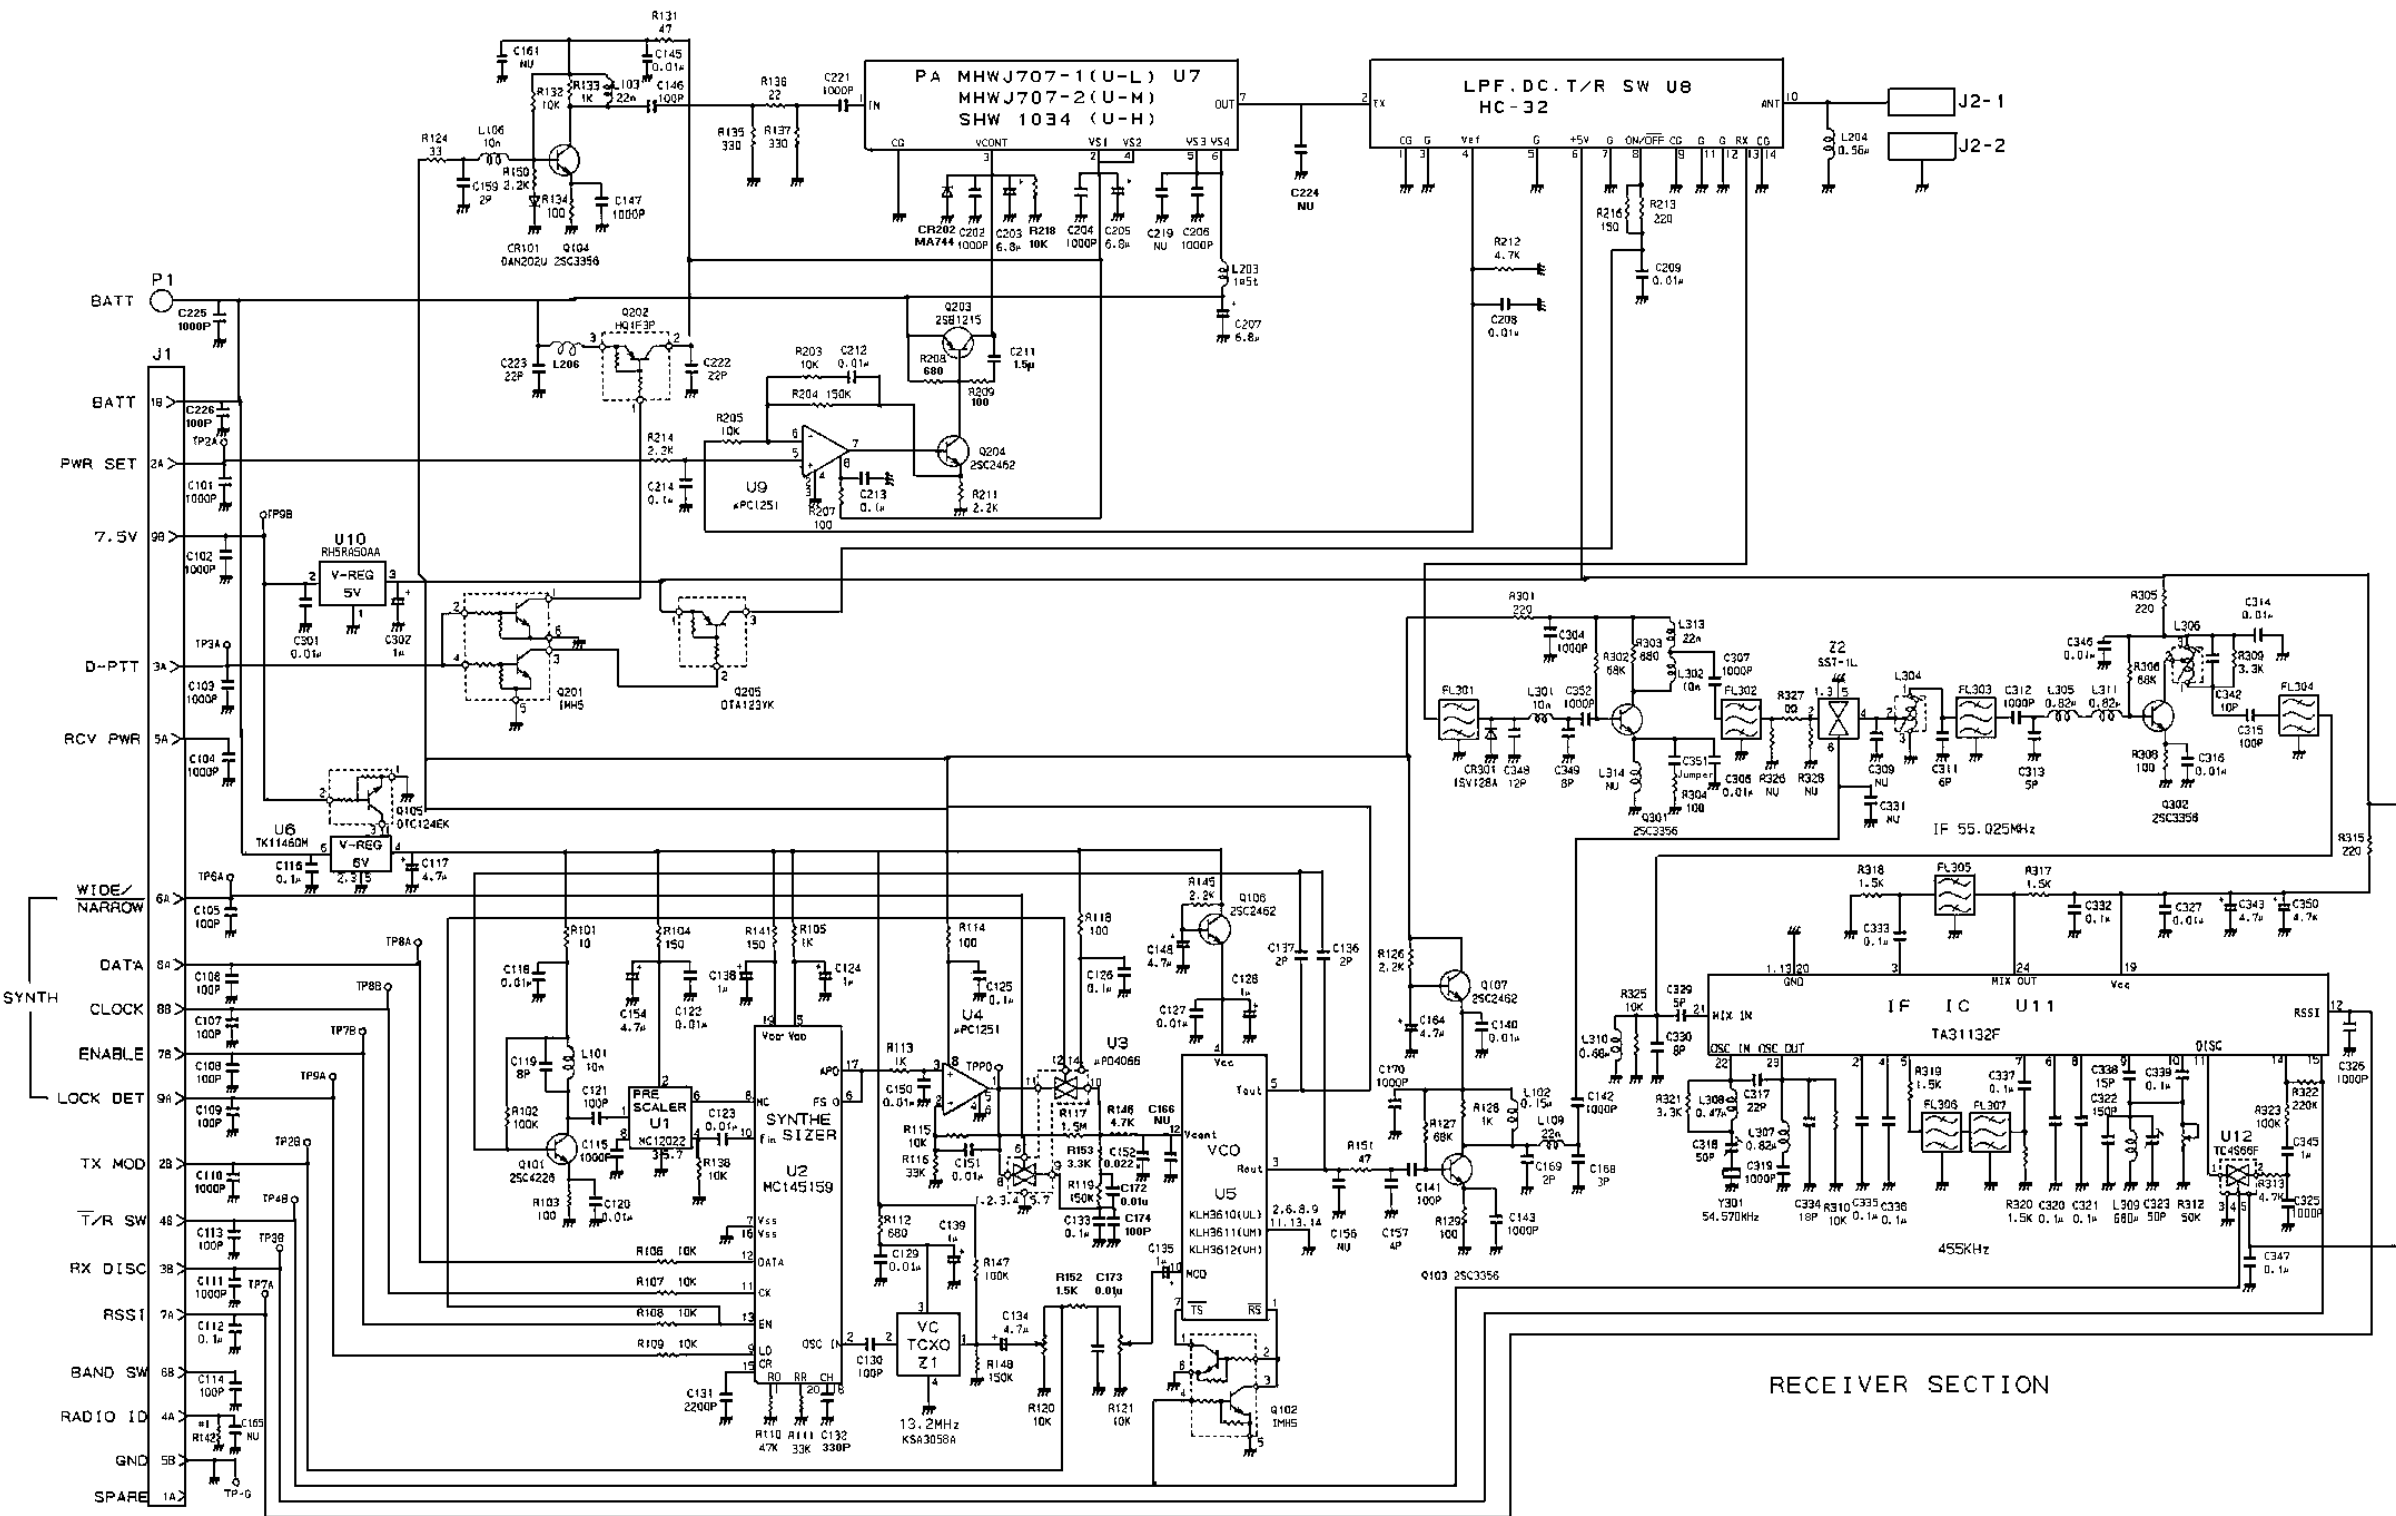



RECEIVER SECTION

SYNTHESIZER SECTION

	U-L	U-M	U-H
R142	22K	47K	68K


RADIO BOARD (UHF ETS)

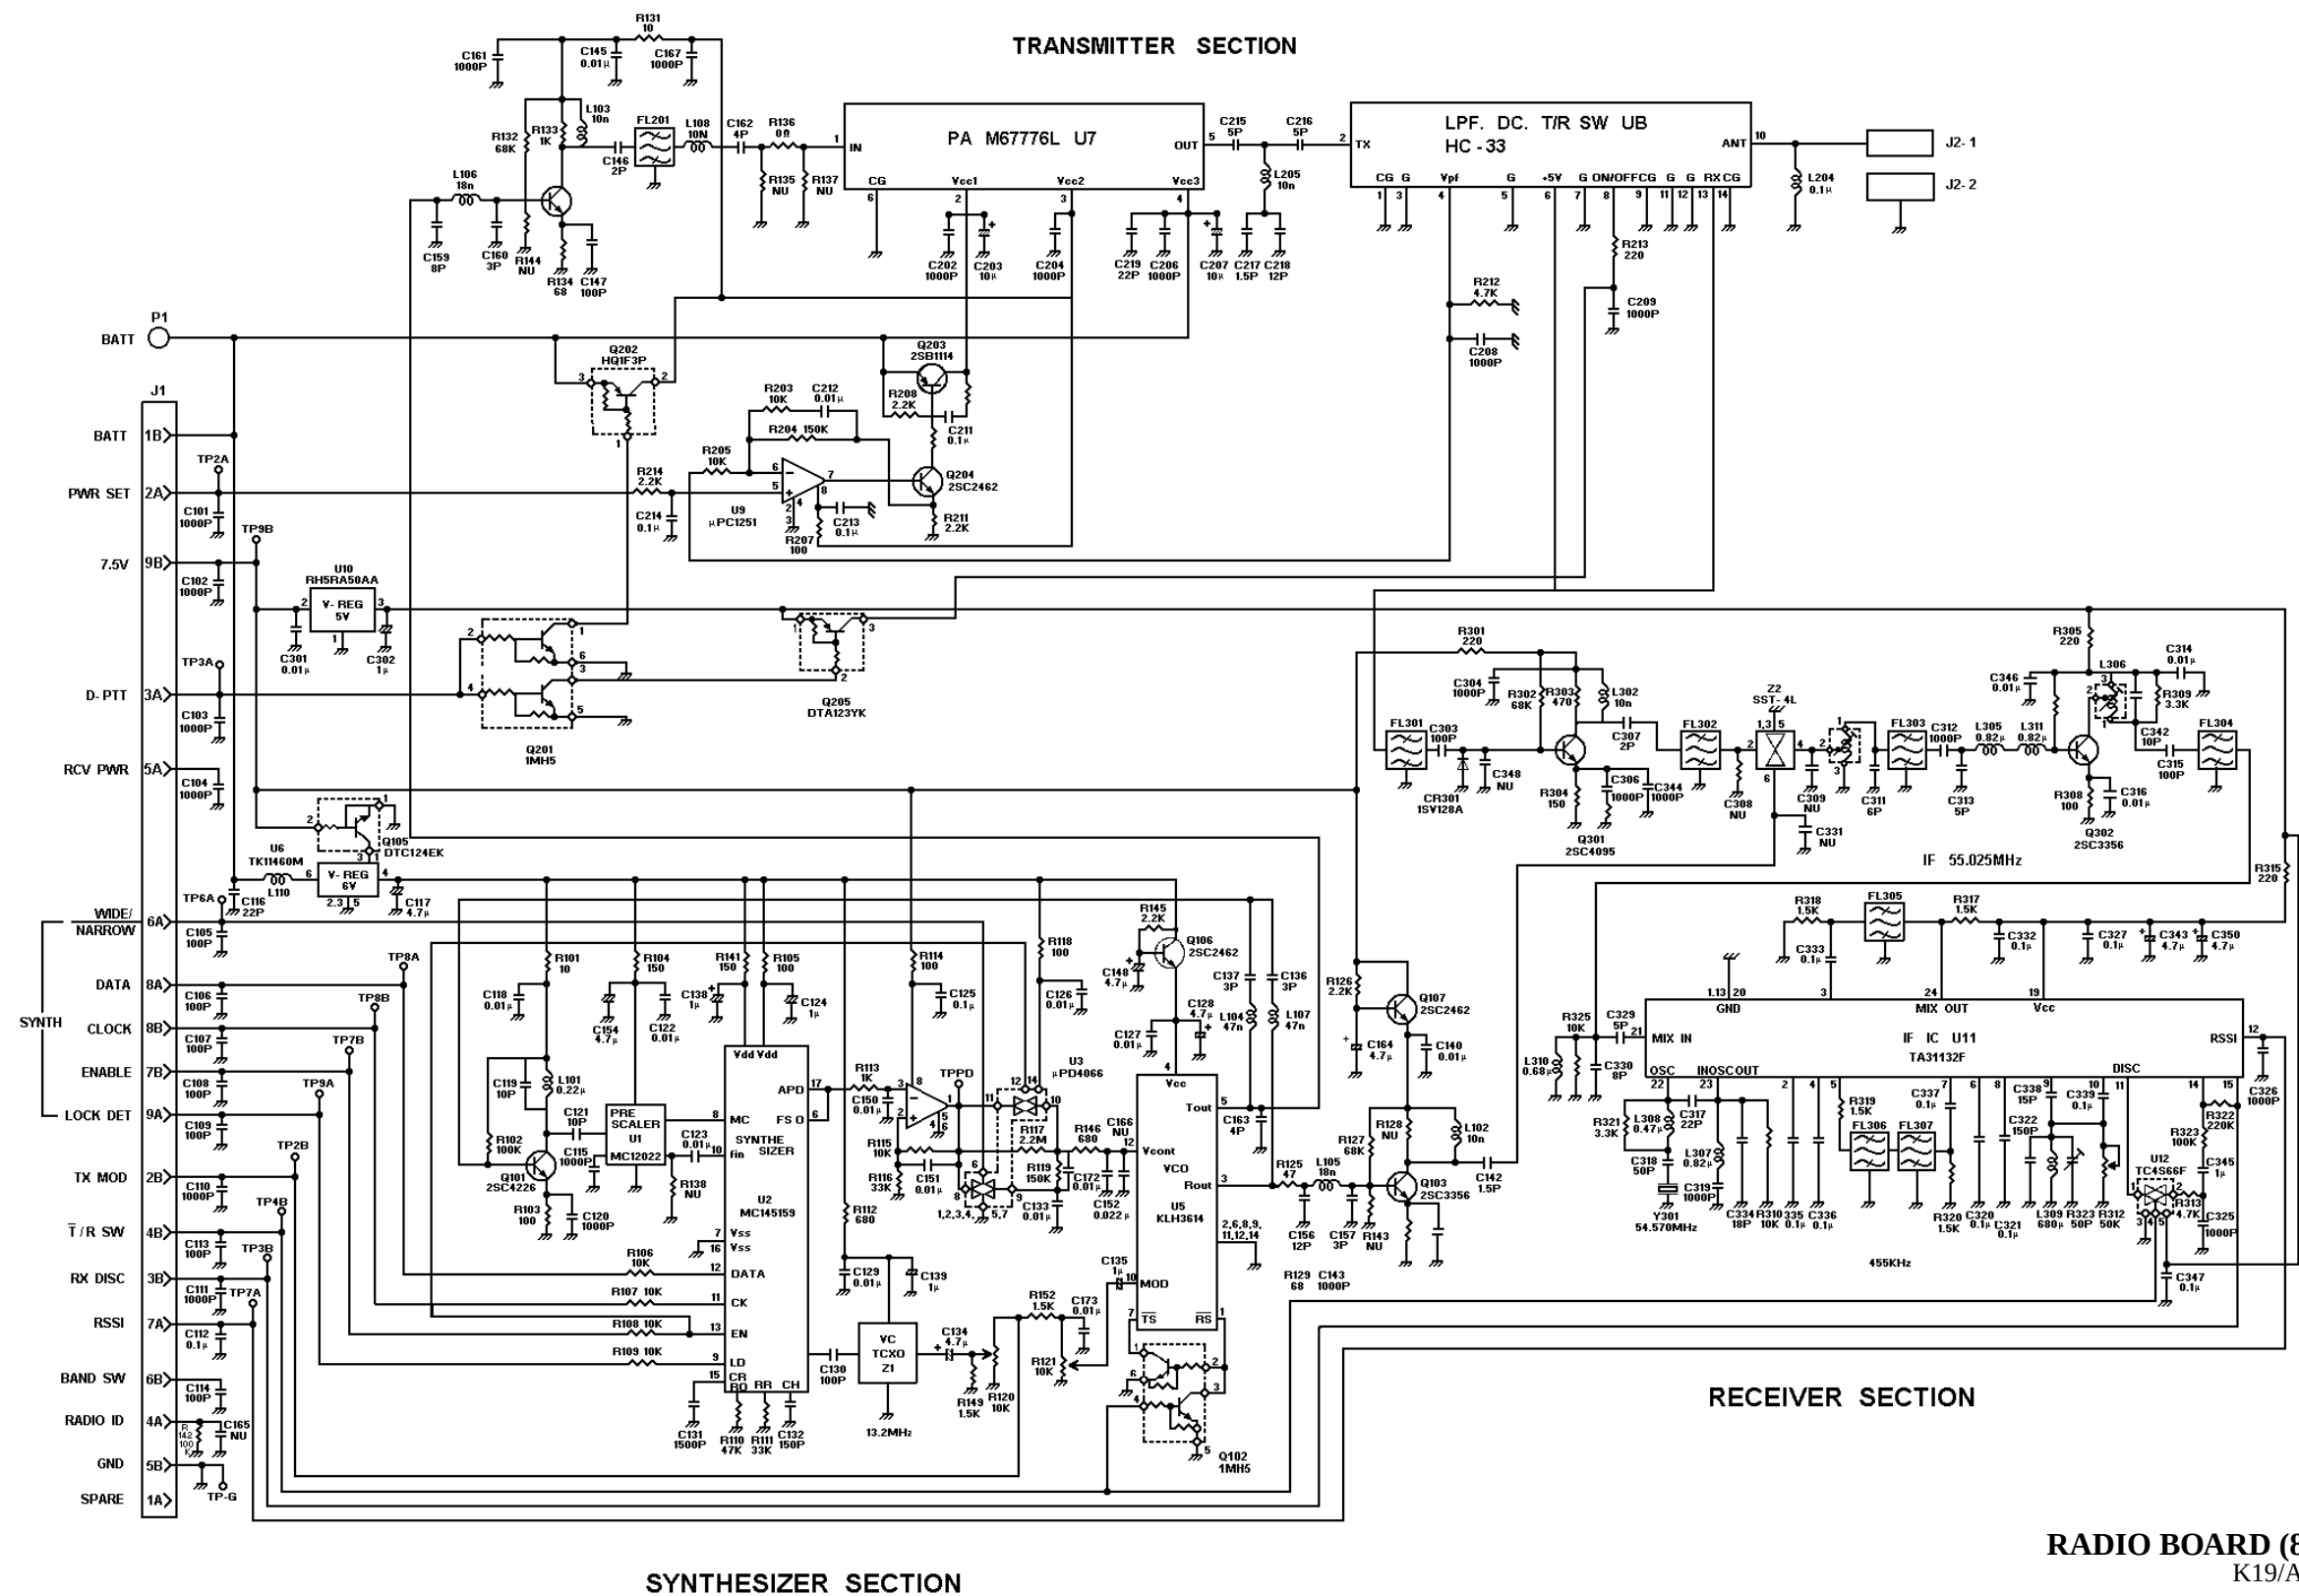

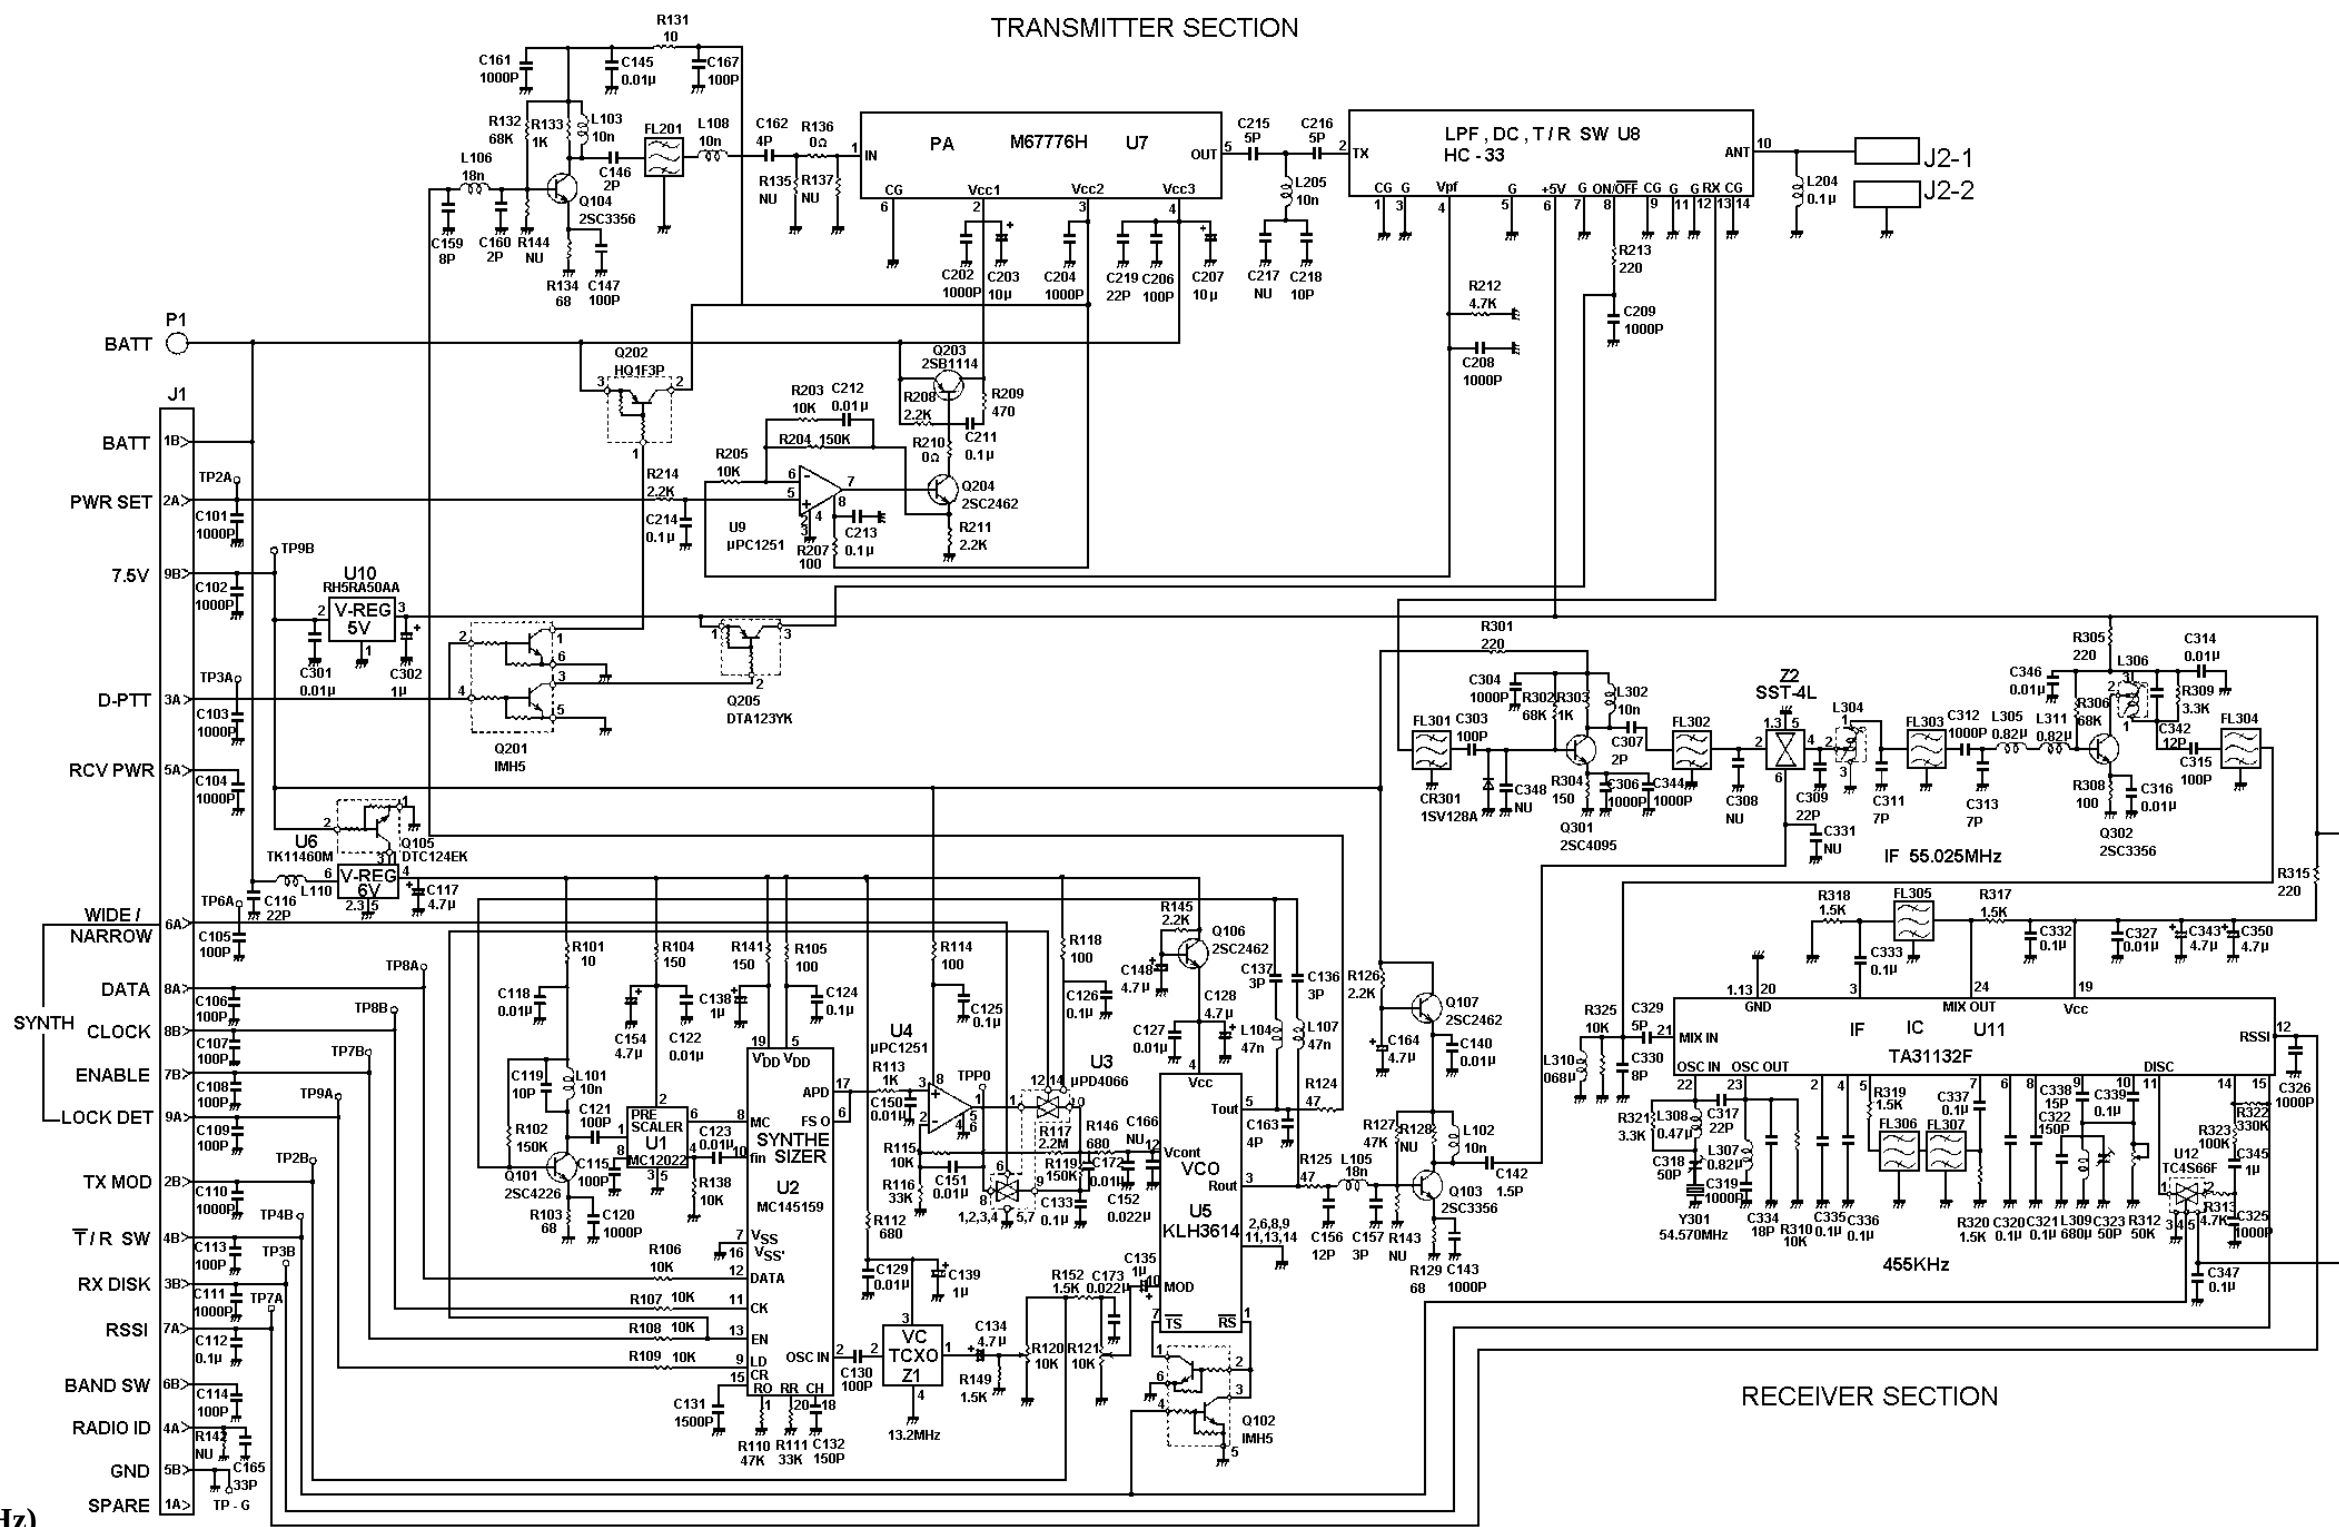

RADIO BOARD (900 MHz)
K19/AS00000172

(A2WE05283, Rev. 6)

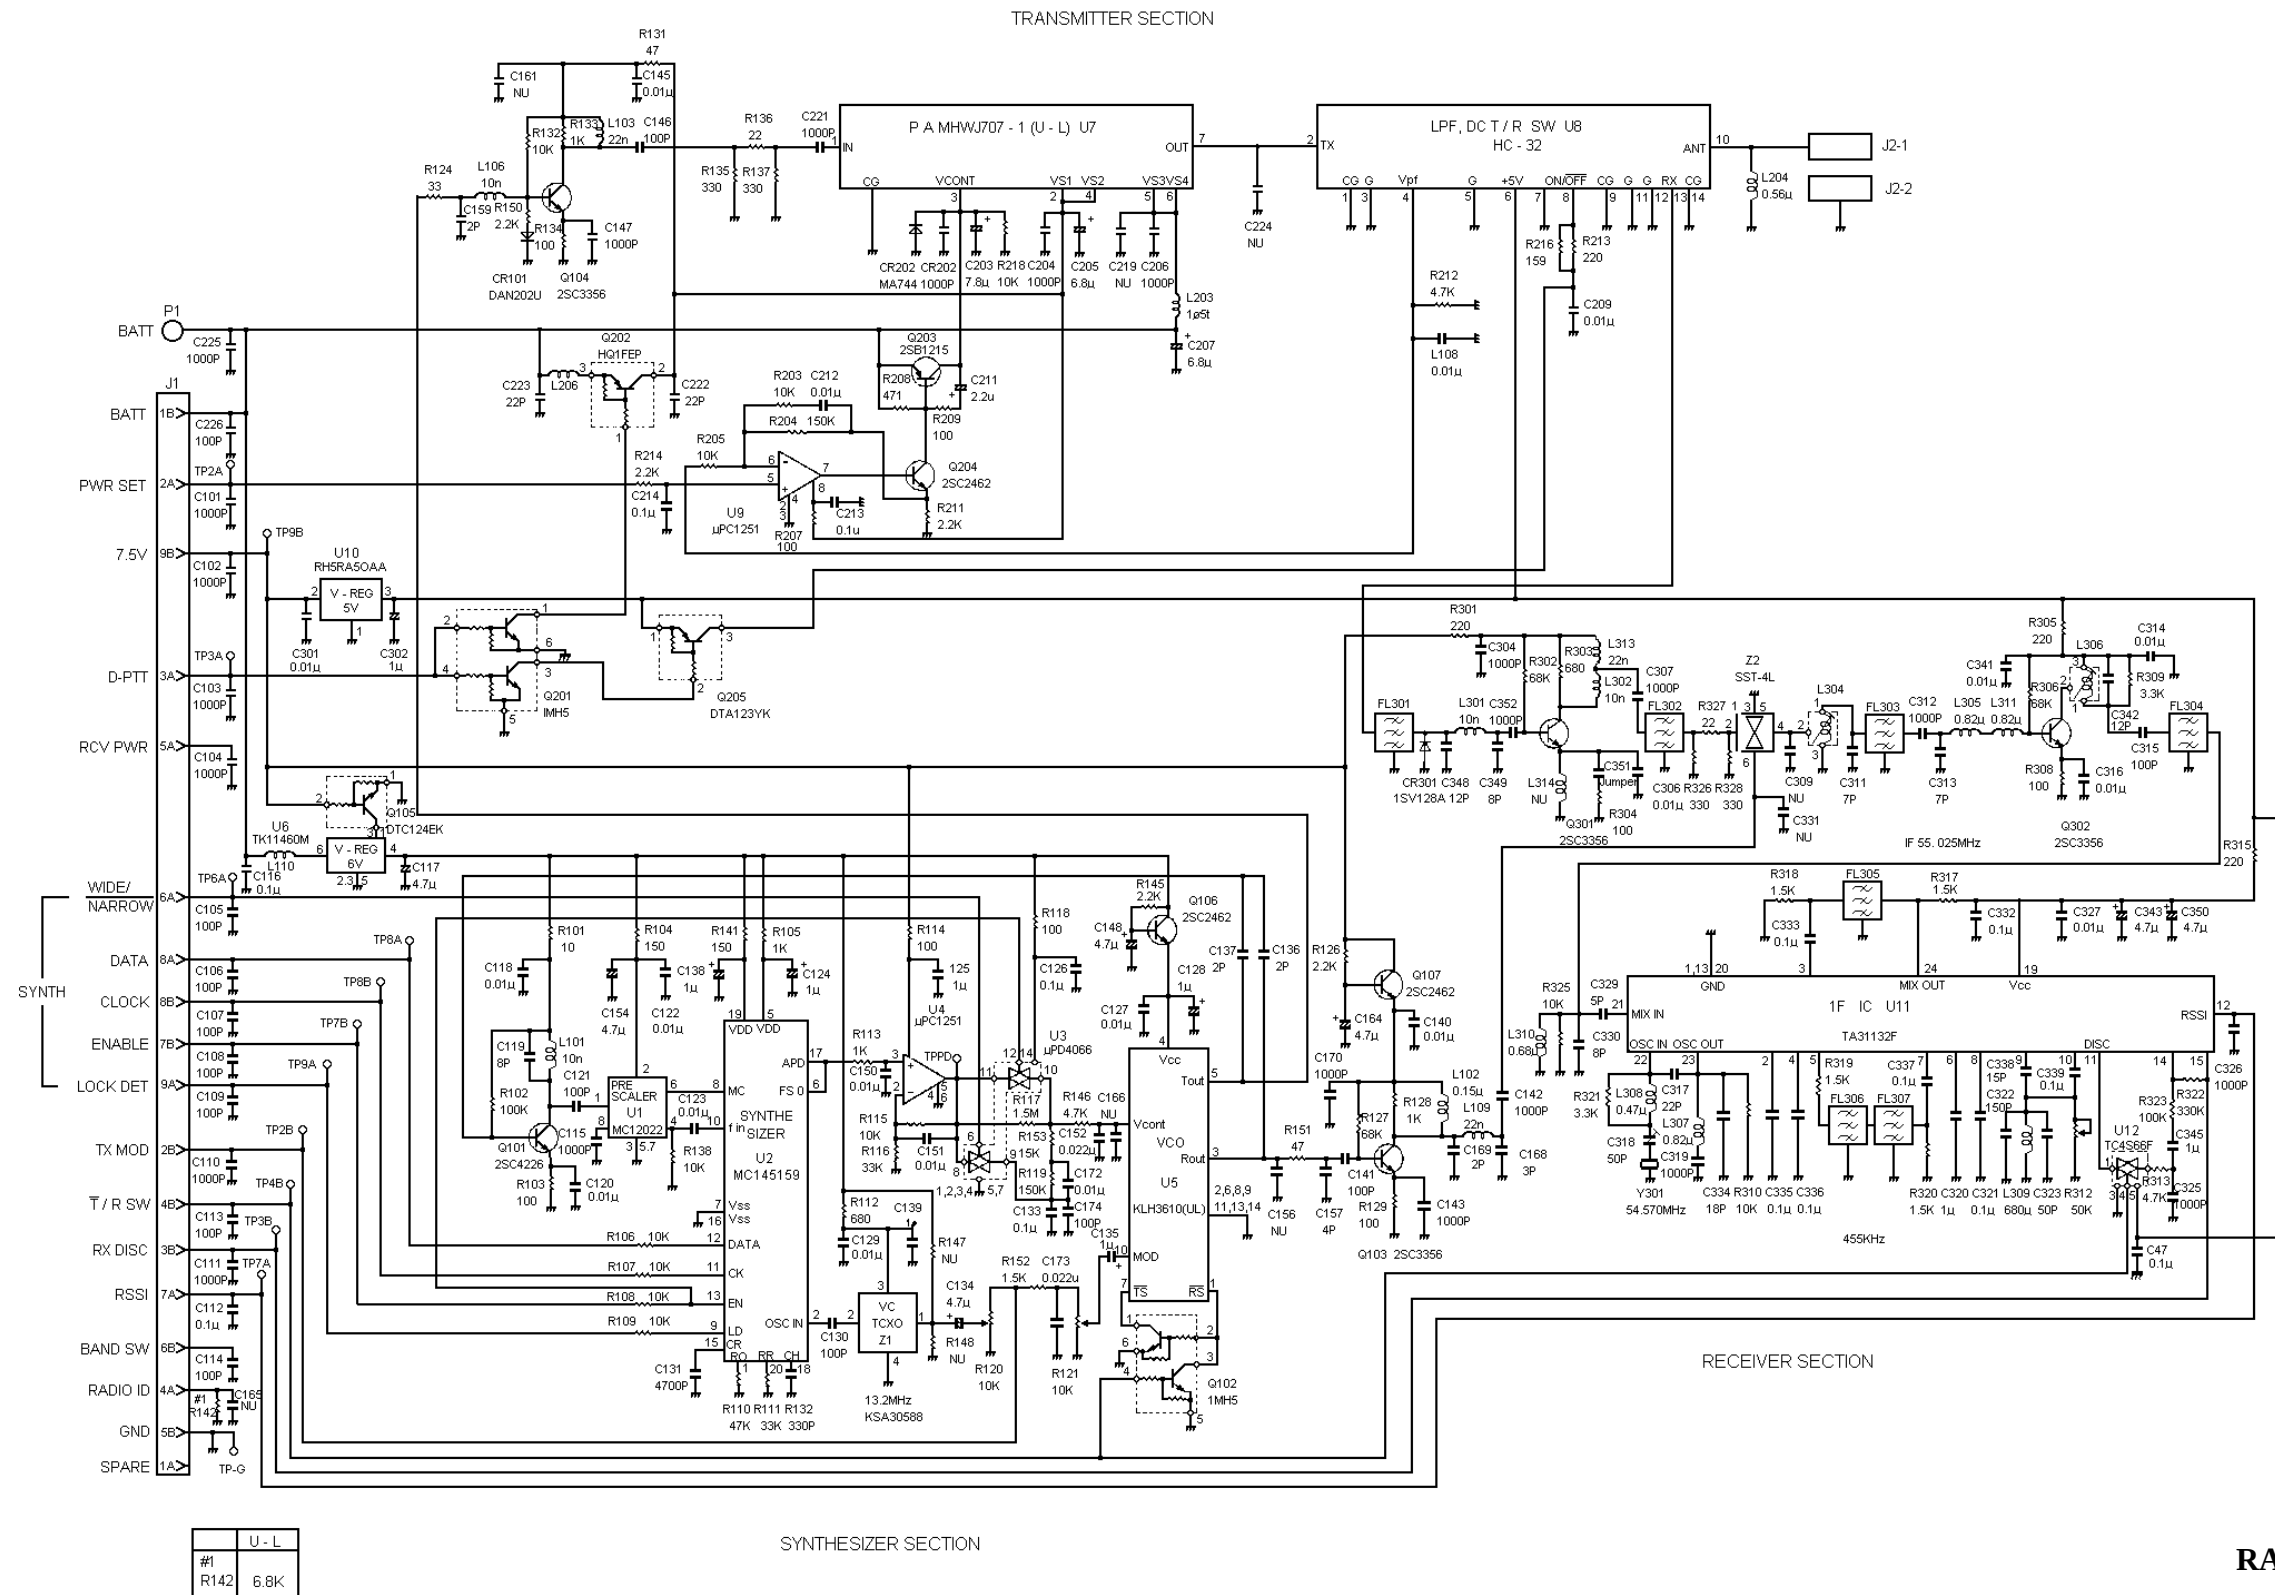

RADIO BOARD (UHF)
12.5 kHz Channel Spacing

(A2WE, Sh. 1, Rev. 0)