

# **Maintenance Manual**

## **Simulcast**

## **Transmit Site**

### **RS-232 Version**

### **Volume 1**

### **Common Equipment**

#### **Table Of Contents**

<b><u>Tab</u></b>	<b><u>Description</u></b>	<b><u>Publication</u></b>
1	Site Grounding.....	LBI-39067
2	Electrostatic Discharge Protection.....	LBI-38737
3	Simulcast System Drawings.....	LBI-39131
4	Simulcast Cable Drawings.....	LBI-38878
5	Transmit Site Cross Connect Panel ...	LBI-38490
6	MUX Cross Connect .....	AE/LZB 119 1654
7	Universal Synchronizer Shelf Assembly .....	LBI-38476
8	Simulcast EDACS® Interface Panel..	LBI-39183
9	Cross Connect Interface Panel.....	LBI-39182
10	Power Supplies .....	LBI-39038
11	Connectorized Jackfields.....	ADCP-80-320
12	WWVB Disciplined Oscillator.....	Model 8165
13	Signal Selector.....	Model 8143

### **NOTE**

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

### **NOTICE!**

The software contained in this device is copyrighted by Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© September 1995, Ericsson Inc.

**Ericsson Inc.**  
Private Radio Systems  
Mountain View Road  
Lynchburg, Virginia 24502  
1-800-528-7711 (Outside USA, 804-528-7711)

Printed in U.S.A.

# **Maintenance Manual**

## **Simulcast**

## **Transmit Site**

### **RS-232 Version**

### **Volume 2**

## **EDACS® MASTR® III STATION**

#### **Table Of Contents**

<b><u>Tab</u></b>	<b><u>Description</u></b>	<b><u>Publication</u></b>
1	MASTR III Station Alignment for Simulcast .....	LBI-39068
2	MASR III Transmitter Combination Manual.....	LBI-38775
3	800 MHz RF Package.....	LBI-39025
4	EDACS Interface Manual.....	LBI-38812
5	Station GETC .....	LBI-38894
6	AC Outlet Strip.....	LBI-4841
7	Fan, 120 VAC.....	LBI-4842
8	Power Supply.....	LBI-38550
9	Power Supply.....	LBI-38670

### **NOTE**

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

### **NOTICE!**

The software contained in this device is copyrighted by Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© September 1995, Ericsson Inc.

**Ericsson Inc.**  
Private Radio Systems  
Mountain View Road  
Lynchburg, Virginia 24502  
1-800-528-7711 (Outside USA, 804-528-7711)

Printed in U.S.A.

# **Maintenance Manual**

## **Simulcast**

## **Transmit Site**

### **RS-232 Version**

### **Volume 3**

## **Alarm System**

#### **Table Of Contents**

<b><u>Tab</u></b>	<b><u>Description</u></b>	<b><u>Publication</u></b>
1	Alarm Shelf 19D902821P1 & P2 .....	LBI-38496
2	Test Unit Alarm Interface and Control Channel Monitor.....	LBI-38498
3	Buffer Board 19C336920G1 EDACS Voter Applications.....	LBI-39025

### **NOTICE!**

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

### **NOTE**

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

### **NOTICE!**

The software contained in this device is copyrighted by Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© September 1995, Ericsson Inc.

**Ericsson Inc.**  
Private Radio Systems  
Mountain View Road  
Lynchburg, Virginia 24502  
1-800-528-7711 (Outside USA, 804-528-7711)

Printed in U.S.A.