

# **Maintenance Manual**

**Transmit Site  
RS-232 Version**

**Volume 3**

**Alarm System**

## **Table of Contents**

<b><u>Tab</u></b>	<b><u>Description</u></b>	<b><u>Publication</u></b>
1	Alarm Shelf 19D902821P1 & P2 . . . . .	LBI-38496
2	Test Unit Alarm Interface and Control Channel Monitor . . . . .	LBI-38498
3	Buffer Board 19C336920G1 EDACS Voter Applications . . . . .	LBI-38236

**NOTICE!**

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

**NOTICE!**

Repairs to this equipment should be made only by an authorized service technician or facility designated by the supplier. Any repairs, alterations or substitution of recommended parts made by the user to this equipment not approved by the manufacturer could void the user's authority to operate the equipment in addition to the manufacturer's warranty.

**NOTICE!**

The software contained in this device is copyrighted by the Ericsson Inc. Unpublished rights are reserved under the copyright laws of the United States.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© May1995, Ericsson Inc.