

Operator's Manual

VEHICLE HANDSFREE KIT
KRY 101 1613

NOTICE!

This manual covers Ericsson and General Electric products manufactured and sold by Ericsson Inc.

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright © September 1995, Ericsson Inc.

TABLE OF CONTENTS

	<u>Page</u>
GENERAL	3
INSERTING AND REMOVING THE RADIO.....	3
OPERATING INSTRUCTIONS	4
CHARGING THE RADIO BATTERY	6

GENERAL

The VEHICLE HANDSFREE KIT allows you to use the DPE-100 radio in your car without taking your hands off the wheel. Your radio operates as usual, except that you use an external microphone, the cradle's built-in loudspeaker, and an optional external antenna. The kit powers the radio and charges a medium, high or extra high capacity battery in the radio.

INSERTING AND REMOVING THE RADIO

Before inserting the radio, check to see if your battery is medium, high or extra high capacity.

 
If the battery is medium, fold out the support before inserting the radio.



MEDIUM



If the battery is high or extra high capacity, fold in the support.



HIGH CAPACITY




EXTRA HIGH CAPACITY



INSERTING THE RADIO

1. Find the small grooves on the sides of the radio at the bottom and align them with the guides in the base of the cradle. Place the radio straight down into the cradle. The antenna should rest over the groove at the top left of the cradle.
2. With the base of the radio in place, gently push the top back into the cradle until you feel it snap in.

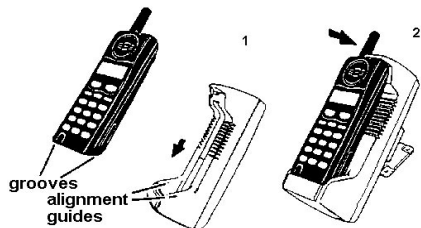

REMOVING THE RADIO

Gently pull out on the top of the radio until you feel it loosen. then remove the radio.



OPERATING INSTRUCTIONS

SERVICE AVAILABLE INDICATOR

Your radio display will indicate when service is available from the service network.

ANSWERING A CALL

Refer to your radio operator's manual to select an answering option. Most radios have at least three options:

- answer with the SEND key
- answer with any key except the E key
- answer automatically after a number of rings.

ADJUSTING SPEAKER VOLUME

When the radio is in the cradle, you can adjust the cradle's built-in speaker volume with the radio's volume keys. The radio stores its earpiece volume and the speaker volume setting independently. It

retains the last settings even after it is turned off.

OPTIONAL ACCESSORIES

Contact your local dealer to obtain accessories that will meet your special needs.

CARE AND MAINTENANCE

- Carefully follow the instructions on inserting and removing the radio from the HANDSFREE Unit.
- Do not attempt to service the HANDSFREE unit or components yourself. Doing so will void the warranty.

- Follow all safety precautions and user guidelines.

CHARGING THE RADIO BATTERY

The VEHICLE HANDSFREE unit also serves as a convenient battery charger. The radio display will indicate charge status. The battery charges at different rates depending on the following uses of the radio:

Phone USE	Charging RATE
in the cradle and turned off	Trickle Charging (maintains battery charge)
in the cradle with a call in progress	Trickle Charging (rapid charging pauses while a call is in progress)

Phone USE

in the cradle and turned on with no call in progress

Charging RATE

Rapid Charging (fully charges a medium in less than an hour and a half. and a high capacity battery in less than three hours)

NOTE: If the radio battery is dead and the radio will not turn on, leave the radio in the cradle for 10 minutes before placing a call.

WARRANTY

A. Ericsson Inc. (hereinafter "Seller") warrants to the original purchaser for use (hereinafter "Buyer") that Equipment manufactured by Seller shall be free from defects in material, workmanship and title, and shall conform to its published specifications. With respect to any Equipment not manufactured by Seller (except for integral parts of Seller's Equipment to which the warranties set forth above shall apply). Seller gives no warranty, and only the warranty, if any, given by the manufacturer shall apply. Batteries are excluded from this warranty but are warranted under a separate Nickel-Cadmium Battery Warranty.

B. Seller's obligations set forth in Paragraph C below shall apply only to failures to meet the above warranties (except as to title) occurring within the following periods of time from date of sale to the Buyer and are conditioned on Buyer's giving written notice to Seller within thirty (30) days of such occurrence:

1. for fuses, incandescent lamps, vacuum tubes and non-rechargeable batteries, operable on arrival only.
2. for parts and accessories (except as noted in B.1) sold by Seller's Service Parts Operation, ninety (90) days.
3. for all other Equipment of Seller's manufacture, one (1) year.

C. If any Equipment fails to meet the foregoing warranties, Seller shall correct the failure at its option (i) by repairing any defective or damaged part or parts thereof, or (ii) by making available at Seller's factory any necessary repaired or replacement parts. Any repaired or replacement part furnished thereunder shall be warranted for the remainder of the warranty period of the Equipment in which it is installed. Where such failure cannot be corrected by Seller's reasonable efforts, the parties will negotiate an equitable adjustment in price. Labor to perform warranty service will be provided at no charge only for the Equipment covered under Paragraph B.3, and only during the first three (3) months following the date of sale to the Buyer. Thereafter, labor will be charged at prevailing rates. To be eligible for no-charge labor, service must be performed by an Authorized Service Center or other Services approved for these purposes either at its place of business during normal business hours, for mobile or personal equipment, or at the Buyer's location, for fixed location equipment. Service on fixed location equipment more than thirty (30) miles from the Service Center or other approved Service's place of business will include a charge for transportation. Equipment located off-shore is not eligible for no-charge labor.

D. Seller's obligations under Paragraph C shall not apply to any Equipment, or part thereof, which (i) has been modified or otherwise altered other than pursuant to Seller's written instructions or written approval or, (ii) is normally consumed in operation or, (iii) has a normal life inherently shorter than the warranty periods specified in Paragraph B, or (iv) is not properly stored, installed, used, maintained or repaired, or, (v) has been subjected to any other kind of misuse or detrimental exposure, or has been involved in an accident.

E. The preceding paragraphs set forth the exclusive remedies for claims (except as to title) based upon defects in or nonconformity of the Equipment, whether the claim is in contract, warranty, tort (including negligence), strict liability or otherwise, and however instituted. Upon the expiration of the warranty period, all such liability shall terminate. The foregoing warranties are exclusive and in lieu of all other warranties, whether oral, written, expressed, implied or statutory. NO IMPLIED OR STATUTORY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES.

This warranty applies only within the United States.
1-800-528-7711 (Outside U.S.A., 804-528-7711)

ECX-362S

Ericsson Inc.

Private Radio Systems

Mountain View Road

Lynchburg, Virginia 24502

1-800-528-7711 (Outside USA, 804-528-7711)

AE/LZT 123 1880 R1A

Printed in U.S.A.