

| System | TX Freq. | RX Freq. | Group | Setting | Notes |
|-----------------------------------------------------------------------------------------------------------------------------------------------|----------|----------|--------------------------------------------------------------------------------------|----------|--------------------------------|
| 1 | 450.000 | 450.100 | Kenwood TK-840 Tuning Mode (Power up radio while holding Group "down" button) | | |
| 2 | 450.500 | 450.600 | | | |
| 3 | 468.500 | 468.600 | | | |
| 4 | 469.000 | 469.100 | | | |
| 5 | 469.500 | 467.500 | | | |
| 6 | 487.400 | 487.500 | | | |
| 7 | 487.900 | 487.875 | | | |
| Alignment Settings Press "AUX" to toggle between alignment settings & sys/grp display. Freq. adjust on bottom of radio beneath shield. | | | 1 | DEV, SQL | TX Audio deviation and Squelch |
| | | | 2 | BAL | Digital deviation balance |
| | | | 3 | FID | Trunked Data deviation level |
| | | | 4 | FQT | PL deviation |
| | | | 5 | ? | ? |
| | | | 6 | ? | ? |
| | | | 7 | FDQT | Digital PL deviation |
| | | | 8 | ? | ? |
| Note: Settings and adjustments may vary depending on the firmware version in the radio. | | | | | |