
MASTR Personal Series PROGRESS LINE

PE MODELS

30 - 50 MHz, RECEIVER MODELS 4ER61B11, 12, 13, 15, 16 & 17

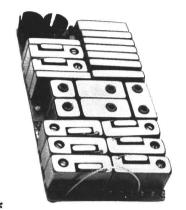

SPECIFICATIONS *

Type Number

Audio Output (EIA)

Channel Spacing

Sensitivity

12 dB SINAD (EIA Method)

20 dB Quieting Method

Selectivity

EIA Two-Signal

20 dB Quieting Method

Spurious Response

Image

Intermodulation (EIA)

Audio Response

Modulation Acceptance

Squelch Sensitivity

Critical Squelch

Maximum Squelch

Maximum Frequency Spread (MHz)

ER-61-B

500 milliwatts at less than 5% distortion

20 kHz

0.25 µV

0.35 µV

-60 dB

-80 dB -70 dB

-80 dB

-70 dB

Within +2 and -10 dB of a standard 6 dB per octave de-emphasis curve from 300 to 3000 Hz (1000 Hz

reference)

±6.5 kHz

0.15 kHz

Greater than 20 dB Quieting

1 dB Degradation Full Performance Frequency in Sensitivity 30-36 MHz 0.36 MHz 0.45 MHz 36-42 MHz 0.43 MHz 0.54 MHz 42-50 MHz 0.51 MHz 0.65 MHz

*These specifications are intended primarily for the use of the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

TABLE OF CONTENTS

SPECIFICATIONS	Cover
DESCRIPTION	1
CIRCUIT ANALYSIS	1
Oscillator Module Compensator Front End Multiplier & Mixer Crystal Filters IF Amplifiers Limiter & Discriminator Audio Amplifier Audio PA Squelch MOBILE DETECTOR APPLICATIONS	1 3 3 3 3 5 5 5 5
MAINTENANCE	
ALIGNMENT PROCEDURE	7
TEST PROCEDURES	8
OUTLINE DIAGRAM	9
SCHEMATIC DIAGRAM	
FRONT END	10
RECEIVER BOARD	11
PARTS LIST & PRODUCTION CHANGES	12
TROUBLESHOOTING PROCEDURE	13
ILLUSTRATIONS	
Figure 1 - Receiver Block Diagram Figure 2 - Typical Oscillator Circuit Figure 3 - Typical Compensator Circuit Figure 4 - Typical IF Amplifier Circuit Figure 5 - Typical Limiter Circuit Figure 6 - Typical Audio Amplifier Circuit Figure 7 - Typical Audio PA Circuit Figure 8 - Typical Squelch Circuit	1 2 2 3 4 4 5

----- WARNING -----

No one should be permitted to handle any portion of the equipment that is supplied with high voltage; or to connect any external apparatus to the units while the units are supplied with power. KEEP AWAY FROM LIVE CIRCUITS.

DESCRIPTION

Receiver Models ER-61-B are single conversion, superheterodyne FM receivers for operation on the 30-50 MHz bands. The complete receiver mounts on a single printed wiring board, and utilizes both discrete components and Integrated Circuit Modules. The application of each model receiver is shown in the following chart:

Model No.	Frequency Range	No. of Freqs.	Tone Option
4ER61B11	30-36 MHz	8	
4ER61B12	36-42 MHz	8	
4ER61B13	42-50 MHz	8	
4ER61B15	30-36 MHz	8	CG
4ER61B16	36-42 MHz	8	CG
4ER61B17	42-50 MHz	8	CG

References to symbol numbers mentioned in the following text are found on the Schematic Diagram, Outline Diagram and Parts List (see Table of Contents). The typical circuit diagrams used in the text are representative of the circuits used on the Integrated Circuit modules. A block diagram of the receiver is shown in Figure 1.

Supply voltage for the receiver includes a continuous regulated 5.4 Volts for the compensator module, a continuous 7.5 Volts for the squelch module, and a switched 7.5 Volts for the remaining receiver stages.

CIRCUIT ANALYSIS

OSCILLATOR MODULE

Oscillator Models 4EG28A17 and 18 (30-50 MHz) consist of a crystal-controlled Colpitts oscillator (see Figure 2). The entire oscillator is contained in a metal can with the receiver operating frequency printed on the top. The crystal frequency ranges from 16.6 MHz to 23.3 MHz. The crystal frequency is multiplied 3 times.

The oscillator frequency is temperature compensated to provide instant frequency compensation, with a frequency stability of $\pm .0002\%$ from 0°C to +55°C and $\pm .0005\%$ from -30°C to +60°C. The temperature compensation network is contained in Compensator Module A313.

In multi-frequency receivers, additional oscillator modules are mounted on the receiver board. The single-frequency supply jumper is removed and the proper frequency is selected by connecting the 5.4 Volts to the selected oscillator module through frequency selector switch Sl on the control unit.

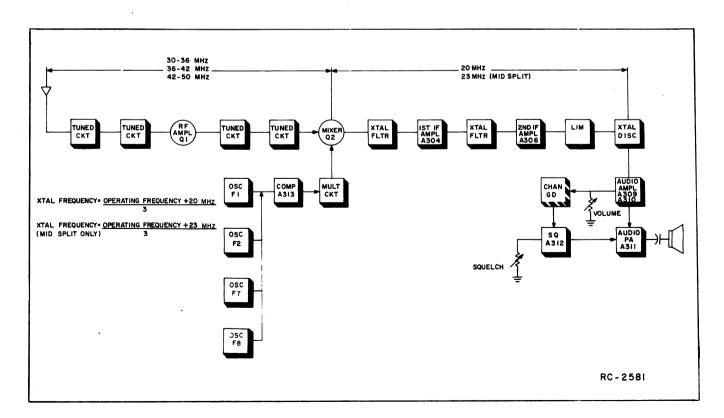


Figure 1 - Receiver Block Diagram

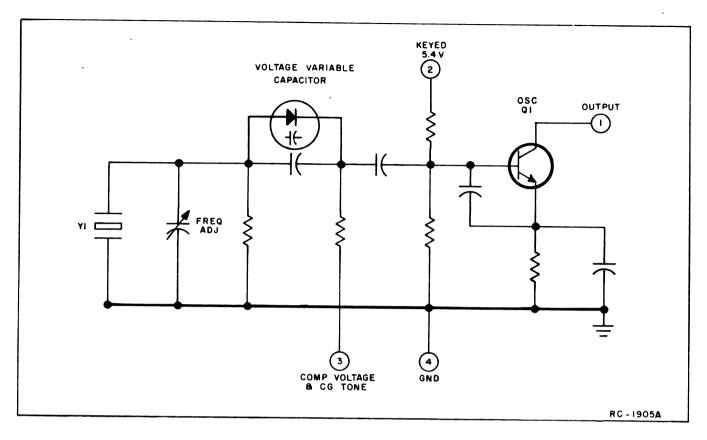


Figure 2 - Typical Oscillator Circuit

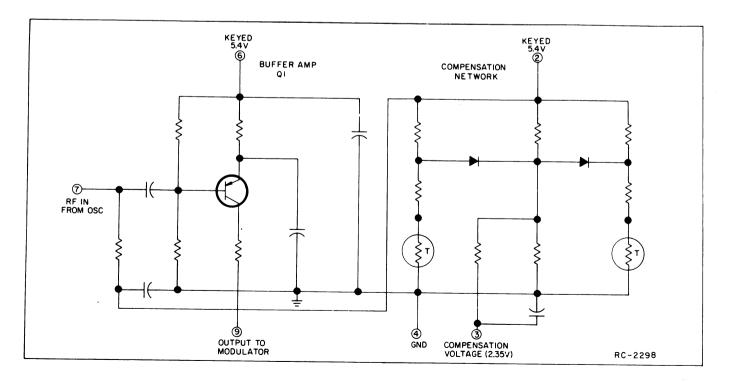


Figure 3 - Typical Compensator Circuit

Complete instructions for multi-frequency modifications are contained in System Board and Case Assembly Maintenance Manual, LBI-4693.

NOTE-

All oscillator modules are individually compensated at the factory and cannot be repaired in the field. Any attempt to remove the oscillator cover will void the warranty.

COMPENSATOR A313

Compensator module A313 contains a buffer-amplifier stage, and the temperature compensation network for the oscillator (see Figure 3).

RF from the oscillator is coupled through a FV blocking capacitor to the base of Ql. The output of Ql connects to multiplier coil Ll on the multiplier assembly.

In the compensation network, the regulated 5.4 Volts at Pin 2 is applied to a thermistor-compensated voltage divider. The output at Pin 3 (2.35 Volts measured with a VTVM) is applied to Pin 3 and to the varactor in the oscillator module. At temperatures below -10°C, the compensated voltage increases to maintain the proper voltage on the oscillator voltage-variable capacitor.

FRONT END

The receiver Front End consists of two slug tuned coils and a Dual-Gate Field Effect transistor (FET) RF amplifier stage.

The RF signal from the antenna is coupled to a tap on L1/L2. RF from L1/L2 is coupled to to L3/L4. A tap on L3/L4 is connected to gate 1 of FET Q1. The output of Q1 is developed across tuned circuit L5/L6 and C13/C14/C15 and coupled through C10/C17/C18 and L7/L8 to gate 1 of Mixer Q2.

MULTIPLIER & MIXER

The output of the Compensator module is applied to a tap on L9/L0 in the multiplier assembly. L9/L0 is tuned to three times the crystal frequency and is in the source circuit of FET Mixer Q2. High side injection is used.

The RF signal from RF amplifier Q1 is applied to gate 1 of Q2 and the high side injection frequency from the multiplier assembly is applied to the source. The resultant 20/23 MHz IF is coupled through the Mixer drain tank circuit L11, C25 and C22 to the input of Crystal Filter A320.

CRYSTAL FILTERS A320 & A321

Filter A320 follows the Multiplier-Mixer stage, and its output is applied to the 1st IF amplifier module, Filter A321 follows the IF Amplifier module. The two Crystal Filters provide the major selectivity for the receiver. A320 and A321 each provide a minimum of 40-45 dB stopband attention.

IF AMPS A304 & A306

An IF Amplifier module follows each of the crystal filters, and contain the resistor-matching networks for the filters. A typical IF amplifier circuit is shown in Figure 4.

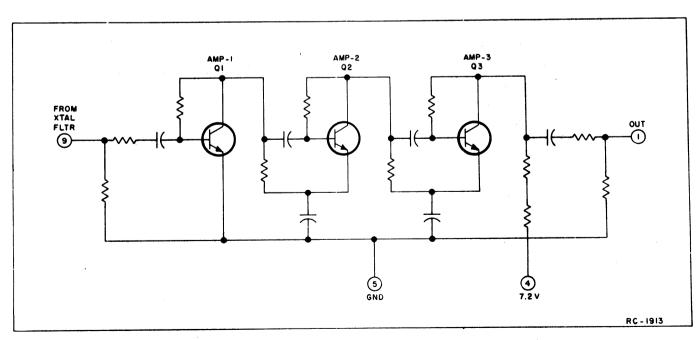


Figure 4 - Typical IF Amplifier Circuit

Each of the IF amplifier modules consists of three RC coupled amplifier stages that are DC series-connected for reduced current drain. The two IF modules provide a total gain of approximately 85 dB.

An abnormally low VTVM reading (or no reading) at Pin 3 may indicate a short or leakage path in the oscillator. This can be checked by unsoldering Pin 3, raising it off of the printed board and taking another reading. If this reading is normal, the problem is in the oscillator module. If the reading remains low (or zero), the problem is in the compensator.

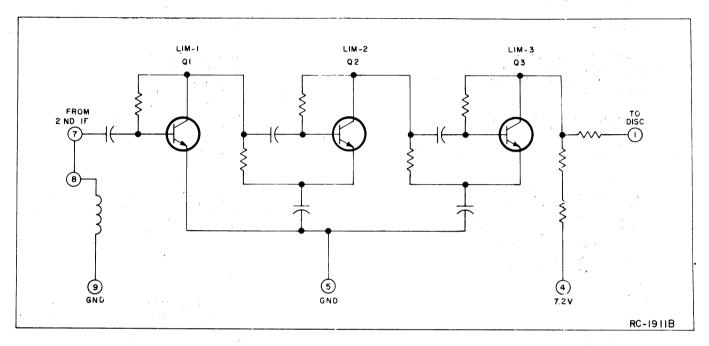


Figure 5 - Typical Limiter Circuit

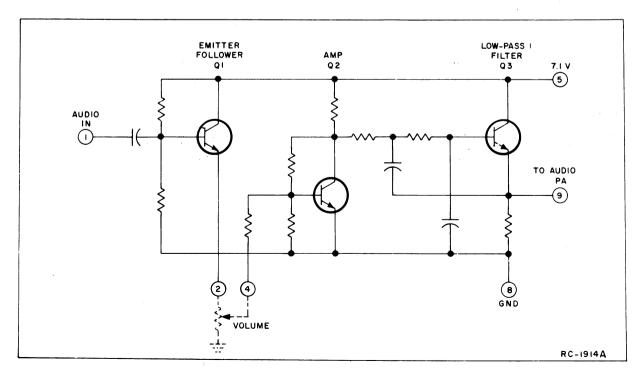


Figure 6 - Typical Audio Amplifier Circuit

LIMITER A327 & DISCRIMINATOR A322

Limiter A327 consists of three RC coupled limiter stages that are a DC series connected for reduced current drain. The Limiter module also provides some gain. The output of the Limiter is applied to the discriminator. A typical Limiter circuit is shown in Figure 5.

The receiver uses a 20/23 MHz, fixed-tuned crystal discriminator (A322) to recover the audio from the IF signal. The Discriminator output is applied to the Audio Amplifier module.

AUDIO AMPLIFIER A309/A310

Audio and noise from the discriminator is applied to Audio Amplifier module A309 (A310 in Channel Guard applications). A typical audio amplifier circuit is shown in Figure 6.

Audio and noise is applied to the base of Q1. This stage operates as an emitter-follower for matching the impedance of the discriminator to the amplifier stage (Q2) and the VOLUME control. The output of Q1 is also applied to the input of the Squelch module.

Following amplifier Q2 is an active low-pass filter (Q3). Audio from the filter is connected from Pin 9 to the Audio PA module. In Audio Amplifier module A323, an active high-pass filter is added in series with the low-pass filter to provide the required Channel Guard tone frequency rolloff.

AUDIO PA A311

When the Receiver is quieted by a signal, audio from the active filter is connected to Pin 1 of Audio PA module A311, and then to the base of amplifier Q1. Q1 feeds the audio signal to the base of Q2, which drives PA transistors Q4 and Q5. A typical audio PA circuit is shown in Figure 7.

PA transistors Q4 and Q5 operate as complementary emitter-followers, providing a 500 milliwatt output into an 8-ohm load. Audio from Pin 9 is coupled through capacitor C302 on the receiver board to the loud-speaker.

SQUELCH A312

Noise from Audio Amplifier A309/A310 operates the squelch circuit. A typical squelch circuit is shown in Figure 8.

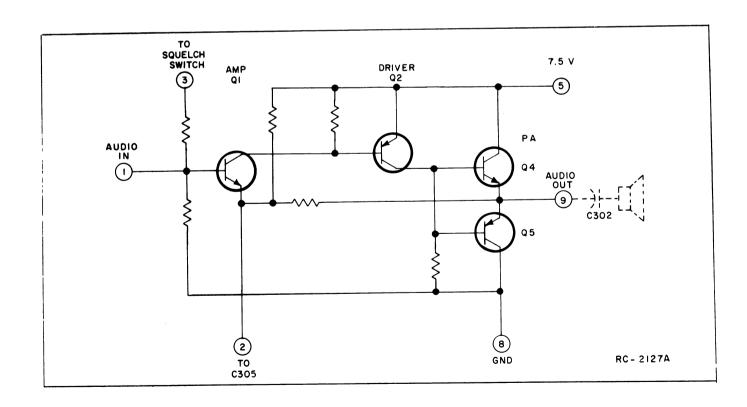


Figure 7 - Typical Audio PA Circuit

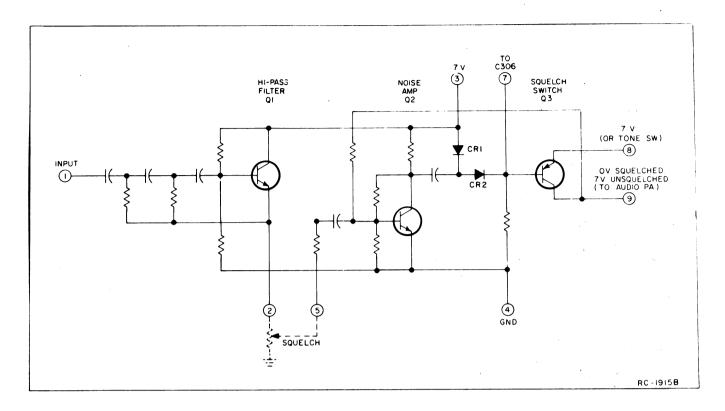


Figure 8 - Typical Squelch Circuit

When no carrier is present in the receiver, the noise output of active high-pass filter Ql is coupled to the base of noise amplifier Q2 through SQUELCH control R708. R708 controls the gain of the noise amplifier.

The output of noise amplifier Q2 is detected by diodes CR1 and CR2, and the resultant positive voltage turns off the PNP squelch switch Q3. In standard radios, the emitter of Q3 is connected to +7 Volts by means of a jumper from H1 to H2. When noise turns off Q3, its collector drops to ground potential. As the collector of Q3 is connected to the base of amplifier Q1 in the Audio PA module, turning off Q3 also turns off Q1, keeping the audio PA turned off.

When the receiver is quieted by a signal, switch Q3 turns on. This applies bias to the base of amplifier Q1 in the Audio PA module, turning the Audio PA circuit on so that sound is heard at the speaker.

In tone decoder applications, the 7-Volt jumper H1 to H2 is removed. The emitter of squelch switch Q3 is connected to 7.5 Volts by a DC switch to the decoder board.

An RF adaptor cable is available for connecting the receiver to a signal generator. Connecting the RF adaptor cable to J702 changes a set of contacts on the antenna and connects the receiver input to J702-1. Connection to chassis ground is made at J702-4.


MOBILE DETECTOR APPLICATIONS


PE receiver types ER61 are used as Mobile Detector boards used in Vehicular Repeater applications. Detector boards 19D417493G4, 5 are similar to PE receiver boards except that PA module A311, C302, C305, C345 and R301 are not used. Also, R306 (3R151P103J) is added.

The Mobile Detector monitors the mobile radio transmit frequencies to determine if a second vehicular repeater is repeating portable-to-base station transmissions. If a portable-to-base transmission is in progress, the mobile detector prevents the Vehicular Repeater from becoming the priority unit.

GENERAL ELECTRIC COMPANY • MOBILE COMMUNICATIONS DIVISION WORLD HEADQUARTERS • LYNCHBURG, VIRGINIA 24502 U.S.A.



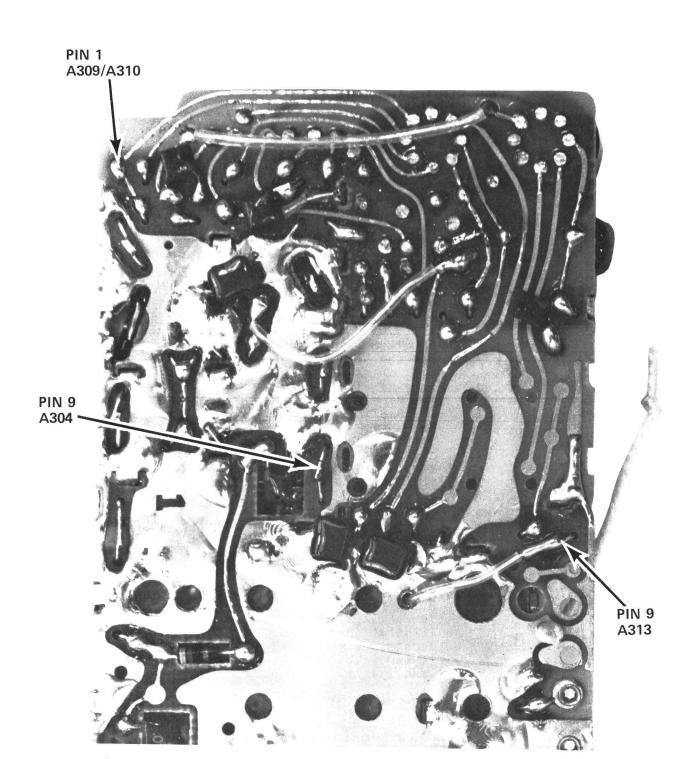

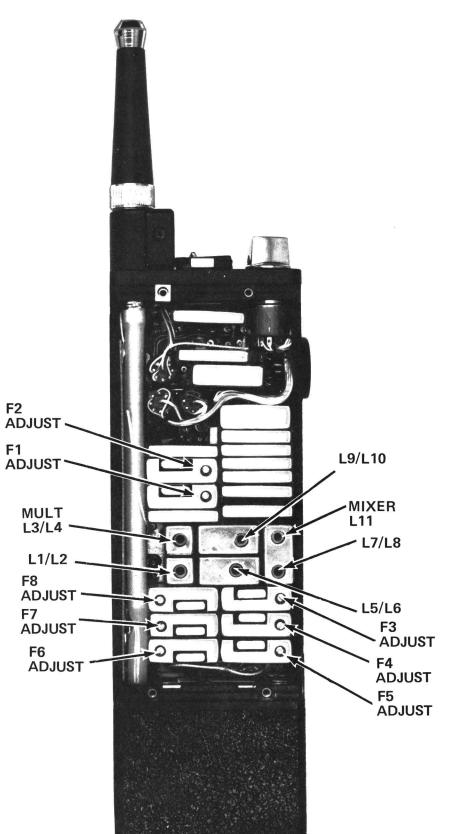

EQUIPMENT REQUIRED

- A 20-MHz signal source (GE IF Generator Model 4EX9A10 or equivalent) and a 30-50 MHz source connected to Antenna Switch J702 by Receiver Test Cable 19C317633G1.
- 2. GE Test Set Model 4EX3All or 4EX8Kll or voltmeter with equivalent sensitivity.
- 3. GE Test Amplifier Model 4EX16AlO and RF probe 19C311370G1, or equivalent RF voltmeter.
- 4. Distortion Analyzer or AC-VTVM.
- 5. Tektronix Oscilloscope Model No. 515A or equivalent.

PRELIMINARY CHECKS AND ADJUSTMENTS

Set the slugs in L1 thru L8 to the bottom of the coil form for frequencies in the high end of the band. Set the slugs near the middle of the coil form for frequencies near the low end of the band. L11 should be set near the middle of the coil in all cases.

ALIGNMENT PROCEDURE

Step No.	Tuning Control	Procedure
1	MULT L9/L10	Connect RF Detector Probe to Pin 9 of A313. Tune L9/L10 for maximum meter reading on voltmeter.
2	Ll thru L8	Apply an on-frequency signal to J702 and adjust L1 thru L8 for best quieting sensitivity.
3	MULT L9/L10	Readjust L9/L10 for best quieting sensitivity. NOTE All circuits will tune with the slug in two positions. The correct position is the one closest to the board.
4	MIXER L11	Modulate the 20 KHz signal generator with the sawtooth output of the oscilloscope. Set the sweep rate for 2 ms/cm. Connect the output of the detector probe to the vertical input of the scope. Set the vertical sensitivity of the scope for highest sensitivity. With the probe connected to Pin 9 of A304, increase the input of the generator until the IF bank pass is displayed on the scope. Tune Lll for maximum Flatness of waveform. See Figure.
		FREQUENCY ADJUSTMENT
5		While applying an on-frequency signal to J702, loosely couple a 20-MHz signal to the Mixer. Adjust the Oscillator trimmer(s) for a zero beat frequency between the two signals. Alternate Method: Apply a strong 20 MHz signal to the Mixer. Measure the output of the Discriminator with a DC-VTVM at Pin 1 of A309/A310. Note the reading. Next, remove the 20-MHz signal and apply a strong on-frequency signal to J702. Then tune the oscillator trimmer(s) for the meter reading obtained at Pin 1 of A309/A310.

ALIGNMENT PROCEDURE

30—50 MHZ RECEIVER MODELS 4ER61B11-13 & 15-17

TEST PROCEDURES

These Test Procedures are designed to help you to service a receiver that is operating --- but not properly. The problems encountered could be low power, poor sensitivity, distortion, and low gain. By following the sequence of test steps starting with Step 1, the defect can be quickly localized.


Once the defective stage is pin-pointed, refer to the "Service Check" listed to correct the problem. Additional corrective measures are included in the Troubleshooting Procedure. Before starting with the Receiver Test Procedures, be sure the receiver is tuned and aligned to the proper operating frequency.

TEST EQUIPMENT REQUIRED

- Distortion Analyzer similar to: Heath IM-12
- Signal Generator similar to:
 Measurements M-800
- 6-dB attenuation pad
- Test Adaptor Model 4EX12A10
- RF Adaptor Cable 19C317633G1

PRELIMINARY ADJUSTMENTS

- 1. Connect the test equipment to the receiver as shown for all steps of the receiver Test Procedure.
- 2. Turn the SQUELCH control fully clockwise for all steps of the Test Procedure.
- 3. Turn on all of the equipment and let it warm up for 20 minutes.

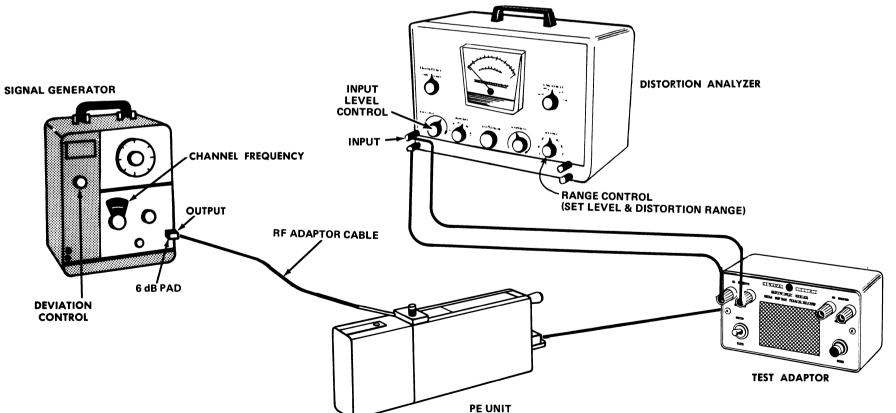

STEP 1

AUDIO POWER OUTPUT AND DISTORTION TEST PROCEDURE

Measure Audio Power output as follows:

- A. Connect a 1,000-microvolt test signal modulated by 1,000 hertz ±3.0 kHz deviation to the Antenna Switch J702.
- B. Set the Volume Control for a 500 milliwatt output (2 volts RMS).
- C. Make distortion measurements according to manufacturer's instructions. Reading should be less than 10% (5% is typical). If the receiver sensitivity is to be measured, leave all controls and equipment as they are.

SERVICE CHECK

If the distortion is more than 5%, or maximum audio output is less than 0.5 watt, make the following checks:

- D. Battery voltage---low voltage will cause distortion. (Refer to Receiver Schematic Diagram for voltages.)
- E. Audio Gain (Refer to Receiver Trouble-shooting Procedure).

STEP 2

USABLE SENSITIVITY (12 dB SINAD) TEST PROCEDURE

If STEP 1 checks out properly, measure the receiver sensitivity as follows:

- A. Apply a 1000-microvolt, on-frequency signal modulated by 1000 Hz with 3.0-kHz deviation to J702.
- B. Place the RANGE switch on the Distortion Analyzer in the 200 to 2000-Hz distortion range position (1000-Hz filter in the circuit). Tune the filter for minimum reading or null on the lowest possible scale (100%, 30%, etc.)
- C. Place the RANGE switch to the SET LEVEL position (filter out of the circuit) and adjust the input LEVEL control for a +2 dB reading on a mid range (30%).
- D. While reducing the signal generator output, switch the RANGE control from SET LEVEL to the distortion range until a 12-dB difference (+2 dB to -10 dB) is obtained between the SET LEVEL and distortion range positions (filter out and filter in).

- E. The 12-dB difference (Signal plus Noise and Distortion to noise plus distortion ratio) is the "usable" sensitivity level. The sensitivity should be less than rated 12 dB SINAD specification with an audio output of at least 250 milliwatts.
- F. Leave all controls as they are and all equipment connected if the Modulation Acceptance Bandwidth test is to be performed.

SERVICE CHECK

If the sensitivity level is more than rated 12 dB SINAD, check the alignment of the RF stages as directed in the Alignment Procedure, and make the gain measurements as shown on the Troubleshooting Procedure.

STEP 3

MODULATION ACCEPTANCE BANDWIDTH (IF BANDWIDTH)

TEST PROCEDURE

If STEPS 1 and 2 check out properly measure the bandwidth as follows:


- A. Set the Signal Generator output for twice the microvolt reading obtained in the 12-dB SINAD measurement.
- B. Set the RANGE control on the Distortion Analyzer in the SET LEVEL position (1000-Hz filter out of the circuit), and adjust the input LEVEL control for a +2 dB reading on the 30% range.
- C. While increasing the deviation of the Signal Generator, switch the RANGE control from SET LEVEL to distortion range until a 12-dB difference is obtained between the SET LEVEL and distortion range readings (from +2 dB to -10 dB).
- D. The deviation control reading for the 12-dB difference is the Modulation Acceptance Bandwidth of the receiver. It should be more than ±7 kHz (but less than ±9 kHz).

SERVICE CHECK


If the Modulation Acceptance Bandwidth test does not indicate the proper width, make gain measurements as shown on the Receiver Troubleshooting Procedure.

	PIN	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8
J30I	5.4V	AUDIO OUT	SWITCHED 7.5V	SQ ARM	VOL ARM	SQ HI	VOL HI	GND
J302		FREQ I	FREQ 2			7.5 V	TONE SWITCH	GND


COMPONENT SIDE

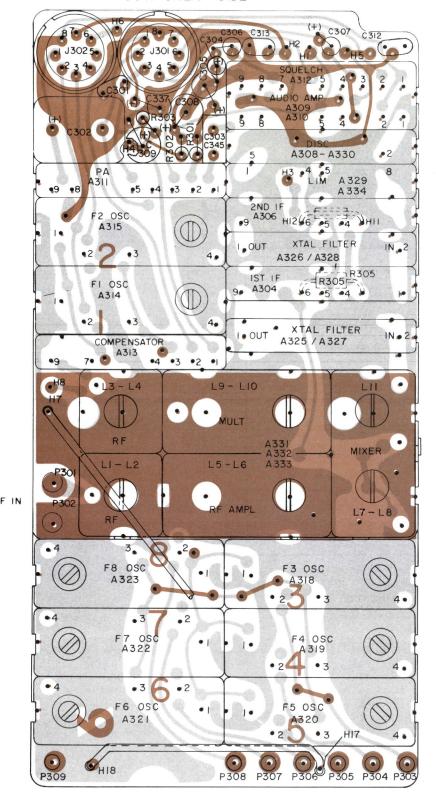

SOLDER SIDE

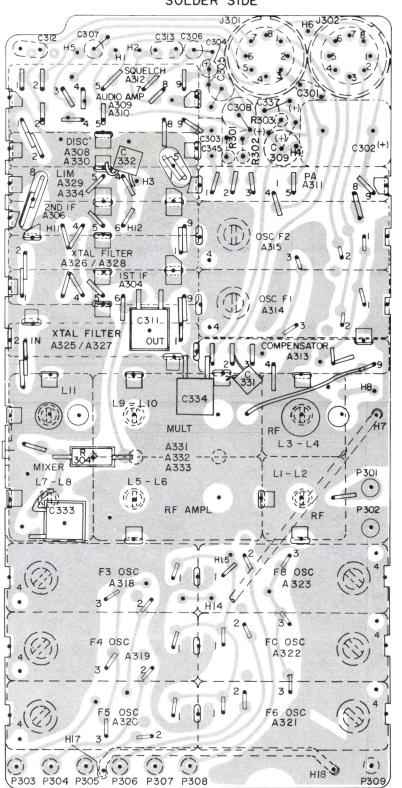

MOBILE DETECTOR APPLICATIONS

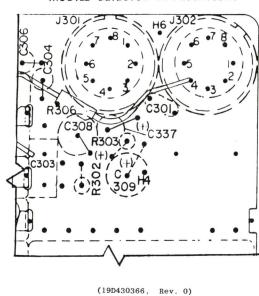


- RUNS ON SOLDER SIDE RUNS ON BOTH SIDES - RUNS ON COMPONENT SIDE

OUTLINE DIAGRAM

30-50 MHz RECEIVER MODELS 4ER61B11-13 & 15-17

(19D416896, Sh. 2, Rev. 7)

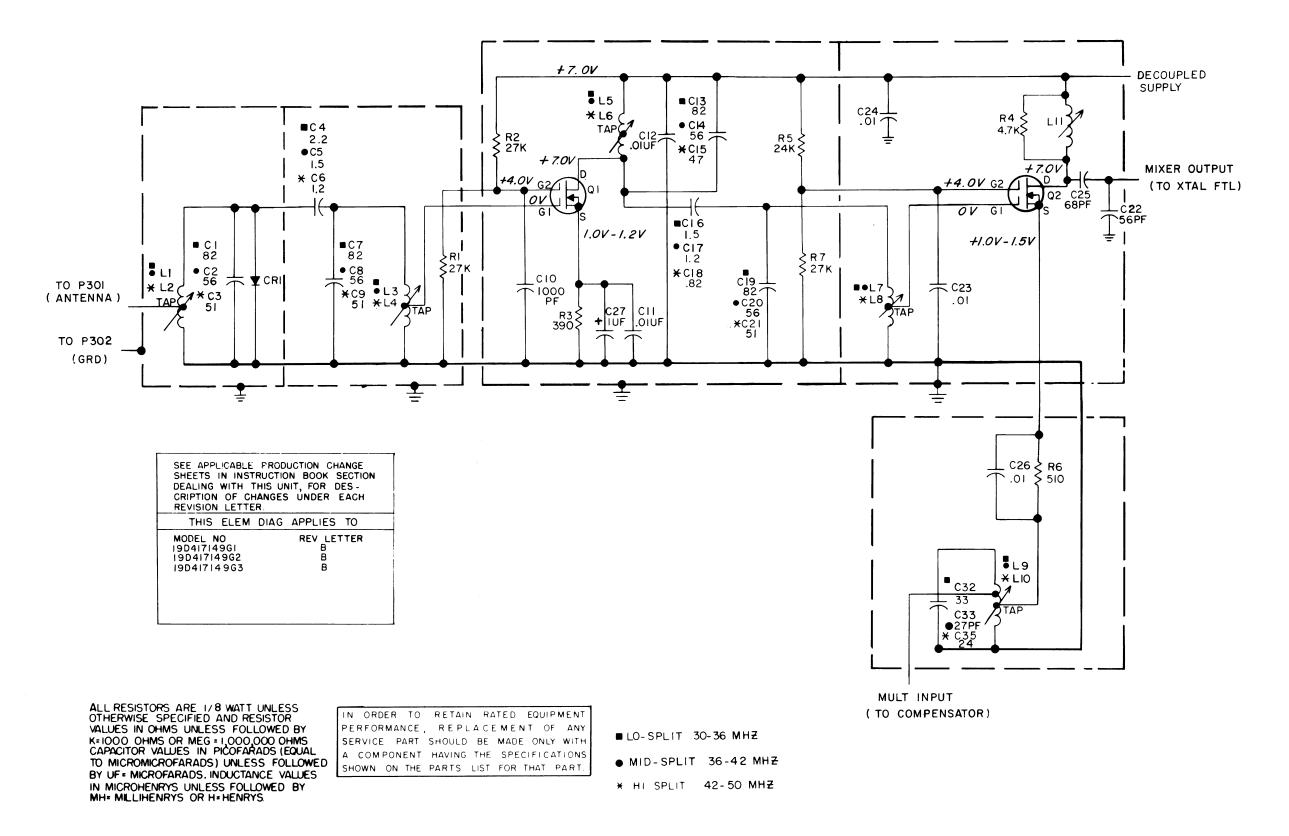


(19C320885, Rev. 3)

SCHEMATIC DIAGRAM

30-50 MHz RECEIVER FRONT END

10 Issue 3

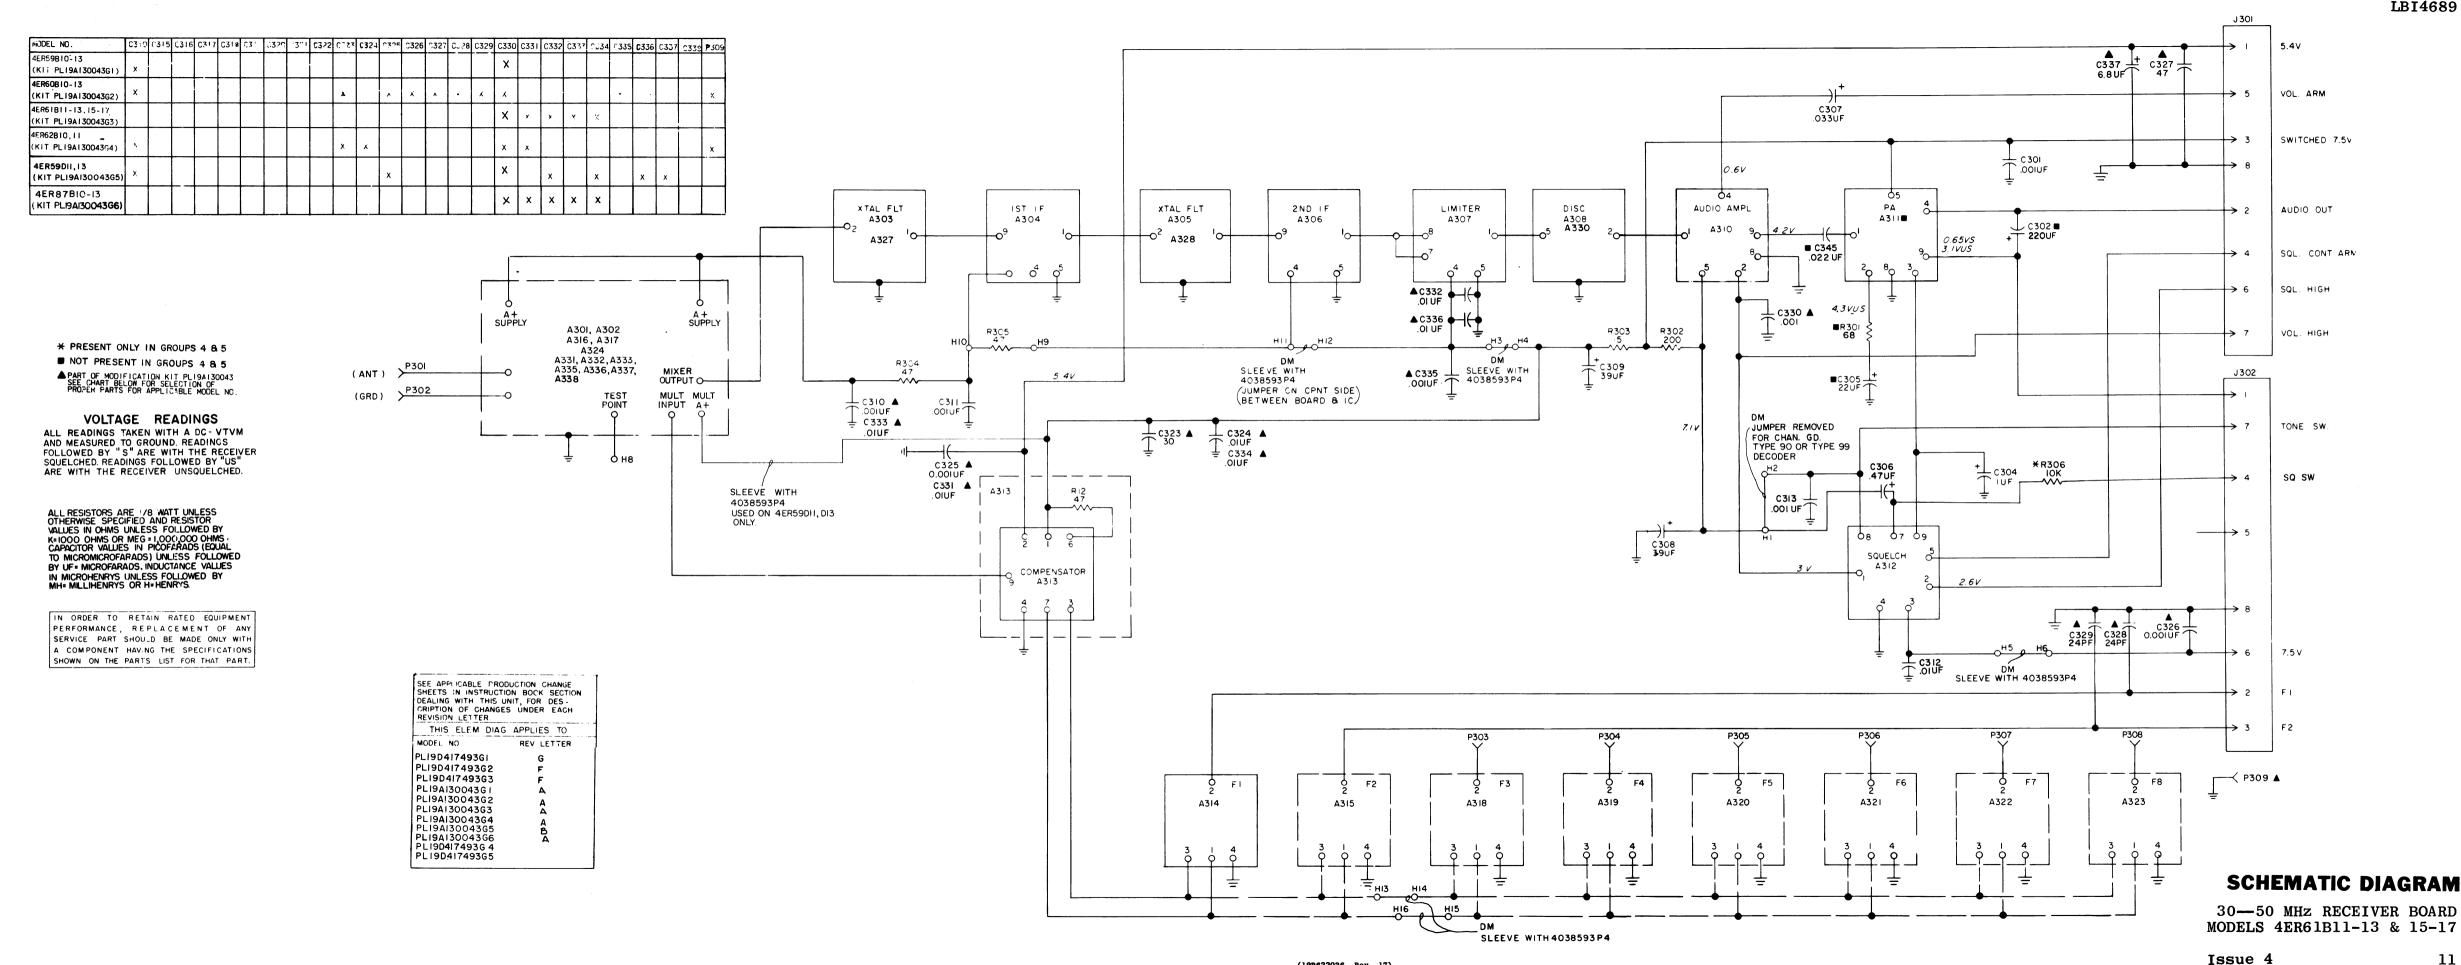

LBI-4689

PARTS LIST

LB14690C 30-50 MHz RECEIVER 4ER61B11 30-36 MHz 4ER61B12 36-42 MHz 4ER61B13 42-50 MHz 4ER61B15 30-36 MHz 4ER61B16 36-42 MHz

		4ER61B17 42-50 MHz CG
SYMBOL	GE PART NO.	DESCRIPTION
A331 thru A333		FRONT END A331 19D417149G1 30-36 MHz A332 19D417149G2 36-42 MHz A333 19D417149G3 42-50 MHz
C1*	19A116114P2062	Ceramic: 82 pf ±5%, 100 VDCW; temp coef -80 PPM.
	10.11.011.470000	In REV A & earlier:
C2*	19A116114P2063 19A116114P2056	Ceramic: 91 pf ±5%, 100 VDCW; temp coef -80 PPM. Ceramic: 56 pf ±5%, 100 VDCW; temp coef -80 PPM.
02.	10011472000	In REV A & earlier:
	19A116114P2059	Ceramic: 68 pf ±5%, 100 VDCW; temp coef -80 PPM.
C3*	19A116114P2054	Ceramic: 51 pf ±5%, 100 VDCW; temp coef -80 PPM.
		In REV A & earlier:
	19A116114P2056	Ceramic: 56 pf $\pm 5\%$, 100 VDCW; temp coef -80 PPM.
C4	5491601P126	Phenolic: 2.2 pf ±5%, 500 VDCW.
C5	5491601P123 5491601P122	Phenolic: 1.5 pf ±5%, 500 VDCW. Phenolic: 1.2 pf ±5%, 500 VDCW.
C6 C7*	19A116114P2062	Phenolic: 1.2 pf ±5%, 500 VDCW. Ceramic: 82 pf ±5%, 100 VDCW; temp coef -80 PPM.
•••	10	In REV A & earlier:
	19A116114P2063	Ceramic: 91 pf ±5%, 100 VDCW; temp coef -80 PPM.
C8*	19A116114P2056	Ceramic: 56 pf ±5%, 100 VDCW; temp coef -80 PPM.
		In REV A & earlier:
	19A116114P2059	Ceramic: 68 pf ±5%, 100 VDCW; temp coef -80 PPM.
C9*	19A116114P2054	Ceramic: 51 pf ±5%, 100 VDCW; temp coef -80 PPM.
		In REV A & earlier:
C10	19A116114P2036 5495323P12	Ceramic: 56 pf ±5%, 100 VDCW; temp coef -80 PPM. Ceramic: .001 µf +100% -20%, 75 VDCW.
C10	19A116192P1	Ceramic: 0.01 µf ±20%, 50 VDCW; sim to Erie
and C12		8121 SPECIAL.
C13*	19A116114P2062	Ceramic: 82 pf ±5%, 100 VDCW; temp coef -80 PPM.
		In REV A & earlier:
	19A116114P2063	Ceramic: 91 pf ±5%, 100 VDCW; temp coef -80 PPM.
C14*	19A116114P2056	Ceramic: 56 pf ±5%, 100 VDCW; temp coef -80 PPM.
	19A116114P2059	In REV A & earlier: Ceramic: 68 pf ±5%, 100 VDCW; temp coef -80 PPM.
C15*	19A116114P2053	Ceramic: 47 pf ±5%, 100 VDCW; temp coef -80 PPM.
		In REV A & earlier:
	19A116114P2056	Ceramic: 56 pf $\pm 5\%$, 100 VDCW; temp coef -80 PPM.
C16	5491601P123	Phenolic: 1.5 pf ±5%, 500 VDCW.
C17	5491601P122	Phenolic: 1.2 pf ±5%, 500 VDCW.
C18	5491601P119	Phenolic: 0.82 pf ±5%, 500 VDCW.
C19*	19A116114P2062	Ceramic: 82 pf ±5%, 100 VDCW; temp coef -80 PPM.
	19A116114P2063	In REV A & earlier: Ceramic: 91 pf ±5%, 100 VDCW; temp coef -80 PPM.
C20*	19A116114P2056	Ceramic: 56 pf ±5%, 100 VDCW; temp coef -80 PPM.
020.		In REV A & earlier:
	19A116114P2059	Ceramic: 68 pf ±5%, 100 VDCW; temp coef -80 PPM.
		1

12 *COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

SYMBOL GE PART NO DESCRIPTION C21* L9A116114P2054 n REV A & earlier: L9A116114P2056 C22 19A116114P2056 A116192P1 C25

ncludes:

Includes:

Tuning slug.

Tuning slug

ncludes:

Tuning slug

Tuning slug

ncludes: Tuning slug.

ncludes:

ncludes:

ncludes:

ncludes:

ncludes:

Tuning slug

uning slug.

uning slug

uning slug.

uning slug.

Earlier than REV A:

9A116192P1

491674P28

9A116114P2047

19A116114P204

9A116114P204

19A115250P1

19C32O379G12

9R209436P1

19C32O379G13

9B209436P1

9C320379G14

9B209436P1

19C32O379G15

9B209436P1

9C320379G5

9B209436P1

19C32O379G6

9C320379G5

B209436P1

19C32O379G6

9B209436P1

9C320379G9

9B209436P1

19C32O379G10

19C320379G11

9A116818P3

R151P273J

3R151P273J

R151P104J

3R151P391J

3R151P472.J

C27

C32

C33*

C35*

CR1

Ceramic: 51 pf ±5%, 100 VDCW; temp coef -80 PPM Ceramic: 56 pf ±5%, 100 VDCW; temp coef -80 PPM Ceramic: 0.01 µf ±20%, 50 VDCW; sim to Erie 9A116114P405 Ceramic: 68 pf $\pm 5\%$, 100 VDCW; temp coef -220 PPM. C26

Ceramic: 0.01 µf ±20%, 50 VDCW; sim to Erie 8121 SPECIAL.

Tantalum: 1.0 \(\mu f \), \(\pm 20\% \), 25 VDCW; sim to Sprague

Ceramic: 33 pf ±5%, 100 VDCW; temp coef -80 PPM. Ceramic: 27 pf ±5%, 100 VDCW; temp coef -80 PPM. Deleted in G3 by REV B.

Ceramic: 24 pf ±5%, 100 VDCW; temp coef -80 PPM.

- - - - - DIODES AND RECTIFIERS - - - - -

----- RESISTORS -----

Channel, field effect; sim to Type 3N187.

omposition: 27K ohms ±5%, 1/8 w.

Composition: 27K ohms ±5%, 1/8 w.

Composition: 100K ohms ±5%, 1/8 w.

Composition: 390 ohms ±5%, 1/8 w.

Composition: 4.7K ohms ±5%, 1/8 w.

Silicon, fast recovery, 225 mA, 50 PIV.

SYMBOL

A303

A308

A311*

A312

A330

C303*

C311

C312*

C313

C345*

3R151P243J Composition: 24K ohms ±5%, 1/8 w 3R151P511J Composition: 510 ohms ±5%, 1/8 w. 3R151P273J RECEIVER BOARD RECEIVER BOARD
19D417493G1 (Low & High Split)
19D417493G3 (Mid Split)
19D417493G4 (Low & High Split-Vehicle Repeater)

Band Pass Filter.

and Pass Filter.

F Amplifier.

F Amplifier.

Discriminator.

imiter.

Audio PA.

quelch.

GE PART NO

19C304824G1

19C311879G3

19C304824G1

19C311879G4

19C311876G4

19C304504G3

19C311878G2

19C311995G4

19C311877G4

19C311877G2

19C311880G4

19C320061G1

19C304824G3

19C304504G6

5495323P12

19A116178P7

19A116089P1

5491674P28

5491674P35

5491674P27

5491674P31

5491674P30

5495323P12

19A116192P1

5495323P12

5495323P12

5495323P12

19All6192P6

DESCRIPTION

Audio Amplifier. Deleted in G3 by REV F.

n G2 of REV E & earlier, G3 of REV D & earlier:

Fantalum: 220 μ f $\pm 20\%$, 6 VDCW; sim to Components CSD5-6-227.

Ceramic: 0.1 μ f $\pm 20\%$, 50 VDCW; sim to Erie 8523-006-X5R-104M. Deleted by REV E in Gl. Deleted

Tantalum: 1.0 μf ±20%, 25 VDCW; sim to Sprague

antalum: 22 µf ±20%, 4 VDCW; sim to Sprague

Tantalum: .47 μf ±20%, 35 VDCW; sim to Sprague

Tantalum: .033 µf ±20%, 35 VDCW; sim to Sprague

Tantalum: 39 µf ±20%, 10 VDCW; sim to Sprague

Ceramic: 0.01 µf ±20%, 50 VDCW; sim to Erie 8121 SPECIAL.

Ceramic: .001 μ f +100% -20%, 75 VDCW. Deleted by REV C in G3.

Ceramic: $0.022~\mu f~\pm 20\%$, 50 VDCW; sim to Erie 3131-M050-W5R-223M. Added by REV G to G1.

eramic: $.001 \mu f + 100\% - 20\%$, 75 VDCW.

Ceramic: .001 µf +100% -20%, 75 VDCW

eramic: .001 μ f +100% -20%, 75 VDCW.

Ceramic: .001 µf +100% -20%, 75 VDCW.

Audio Amplifier, Tone Filter.

scillator Compensator.

Bandpass Filter. (36-42 MHz)

iscriminator, (36-42 MHz).

- - - - - - JACKS AND RECEPTACLES - - - - -J301 and J302 19A116122P1 Terminal, feed-thru: sim to Warren 1-B-2994-4. - - - - - - - - - PLUGS - - - - - - -19A115834P4 Contact, electrical: sim to AMP 2-332070-9. R301* 3R151P680J

4035306P11

5495323P12

19A116192P1

4EG28A17

4EG28A18

GE PART NO.

SYMBOL

R302

- - - - - - - - RESISTORS - - - - - - -Composition: 68 ohms ±5%, 1/8 w. In G3 REV A & B: 3R151P101.j Composition: 100 ohms ±5%, 1/8 w. Earlier than REV A: 3R151P470J

Composition: 47 ohms ±5%, 1/8 w. 3R151P201.

R151P150J Composition: 15 ohms ±5%, 1/8 w. Composition: 47 ohms ±5%, 1/8 w.

3R151P470J 3R151P103J Composition: 10K ohms ±5%, 1/8 w.

----- MISCELLANEOUS -----19B216316P1 Insulator. (Used with J301 & J302).

Washer, fiber. (Used with Q1, Q2 on A331-A333).

DESCRIPTION

ASSOCIATED ASSEMBLIES

RECEIVER KIT 19A130043G3

- - - - - - - - - - CAPACITORS - - - - - - -Ceramic: .001 µf +100% -20%, 75 VDCW. Added by REV A. Ceramic: 0.01 μ f $\pm 20\%$, 50 VDCW; sim to Erie

REV. E - Receiver Board 19D417493G2 REV. D - Receiver Board 19D417493G3

- Receiver Board 19D417493G3 To improve audio quality.

REV. F - Receiver Board 19D417493G3

To eliminate Non-Channel Guard receiver boards.
Deleted callouts of A309 and circle (•)
in front of A310. Deleted callouts of C303
.1 µf and just the (•) for C345.
Deleted NOTES: ■Use for Non-Channel Guard receivers. •Used for Channel Guard


Receiver Front End 19D417149G1,2 & 3 To improve band end tuning.
Changed Cl, C2, C3, C7, C8, C9, C13, C14, C15,
C19 and C20.
Deleted C33 from group 3.
Added C35 to group 3.

REV. D - Receiver Board 19D417493G2 REV. C - Receiver Board 19D417493G3 To improve audio sensitivity and stability. Deleted C314 and changed R301. To improve audio frequency response Deleted C303 and added C345. - - - - - - - - - OSCILLATORS - - - - - - -NOTE: When reordering, give GE Part Number and specify exact frequency needed. Oscillator Module. 30-36 MHz. Fx = Fo + 20Oscillator Module. 42-50 MHz. $Fx = \frac{Fo + 20}{3}$ Oscillator Module. 36-42 MHz. Fx = Fo + 23RF . A - Capacitor Kit 19A130043G3

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter", which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts REV. A - Receiver Front End 19D417149G1, 2 & 3 To increase RF sensitivity. Changed

REV. A - Receiver Board 19D417493G2 & 3 To increase audio sensitivity. Changed R301. REV. B - To improve critical squelch. Changed C312. REV. C - Receiver Board 19D417493G2

To update drawings and make component board compatible with high band FET Front End. Added C336, C337 and C338. Rearranged components Outline Diagrams:

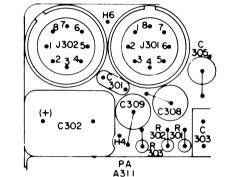

PRODUCTION CHANGES

125 MA 0.5 WATTS OUT

AUDIO PA A3II

SQUELCH A3 12

0.5 MA

QUICK CHECKS

| SYMPTOM | PROCEDURE |
|----------------------------------|--|
| No Audio | 1. Check audio waveform at the top of the Volume Control (see Step 2). |
| | If audio is present, check voltage readings
of Audio and Squelch modules (see Schematic
Diagram). |
| | If audio is not present, check gain and
current readings of Front End and IF
modules (see Steps 1 & 3). |
| Poor Sensitivity | 1. Measure the RF injection voltage for a minimum level of 750 millivolts. If the reading is low, check the output of the Oscillator and Compensator modules with an RF voltmeter. |
| | Measure the gain of the Mixer stage (see
Step 3). If low, measure the gain of the
RF amplifier and IF modules. |
| Improper
Squelch
Operation | 1. Check the noise waveform at the input to
the Squelch module and at Squelch Control
high (see Step 2). |
| | Measure the DC voltages for the Squelch
module (squelched and unsquelched). |

STEP 3-RF GAIN CHECKS -(STEPS Q THRU U)

STEP 3 - RF GAIN CHECKS

EQUIPMENT REQUIRED:

- RF probe and Test Amplifier Model 4EX16AlO connected to GE Test Set Model 4EX3All, or an RF voltmeter.
- A signal generator (M-800 or equivalent) connected to P301 (High) and P302 (Low).

PROCEDURE FOR MIXER & 1ST IF:

- 1. Switch the Test Set to the Test 1 position and the Test Amplifier to the X50 position.
- 2. Connect the RF probe across the input of the stage to be measured as shown on the diagram. Increase the signal generator output to obtain a reference reading on Test Set 4EX3All. Note the Test Set reading and the dB reading on the generator (dB1).
- 3. Connect the RF probe to the output of the stage to be measured as shown on the diagram. Decrease the generator output until the Test Set reference reading in Step 2 is obtained. Note the dB reading on the generator (dB2).
- 4. Subtract the dBl reading from the dB2 reading and check the results with the typical gains shown on the diagram.

PROCEDURE FOR 2ND IF:

- 1. With no signal in, connect the RF probe to the output of the 2nd IF module. Increase the signal generator output until the Test Set reading increases by approximately 0.2 volt. Note Test Set and signal generator reading (dB2).
- Connect the probe to the input of the 2nd IF module. Increase the signal generator until the Test Set reference reading is obtained, and note the dB reading (dBl).
- 3. Now subtract dB2 from dB1 to obtain the gain of the 2nd IF amplifier module.

The Limiter module limits on noise so that the gain of the circuit cannot be measured. The following procedure provides a check to determine if the module is limiting.

- 1. Switch the Test Amplifier to the X1 position and the Test Set to the Test 1 position. Then connect the RF probe to the output of the Limiter module and check for a reading of approximately 0.4
- Increase the signal generator output. There should be no appreciable increase in the limiter output meter reading.

I ST IF XTAL FILTER A318 A304 P302 INJECTION VOLTAGE 7.0V I M A A314/A315 STEP 2 -AUDIO & SQUELCH WAVEFORMS MODULE CURRENT CHECKS 5.4 V 1.5 MA 2.8 MA (STEPS L THRU P) (STEPS A THRU K) STEP 2 - AUDIO & SQUELCH WAVEFORMS STEP 1 - MODULE CURRENT CHECKS These current readings provide a method of checking the operation of each Integrated Circuit module using a milliammeter (Triplett 630 or equivalent). EQUIPMENT REQUIRED: Oscilloscope connected between the points shown and 1. Unsolder the + lead as shown in the Diagram of the module to be checked. • Signal Generator (Measurements M-800 or equivalent). 2. Connect the milliammeter in series with the + lead, and

PRELIMINARY STEPS:

Apply a standard signal to P301. A standard signal is 1000 microvolts on the receiver frequency modulated

by one kHz with 3.0-kHz deviation.

2. Set the Volume control for 0.5-watt output.

check for the indicated current drain and supply voltage. No current drain indicates that the module should be

When checking the current of Audio PA module A311, do not short Pin 4 to ground or to + (Pin 5). To do so will destroy the Audio PA module.

TROUBLESHOOTING PROCEDURE

30-50 MHz RECEIVER MODELS 4ER61B11-13 & 15-17

Issue 4

7 V 0.6-1.0

A309/A310

VOLUME

0.9 V

2 ND IF

42 dB

A306

I.I MA

LIMITER A307

7.3 V

I.I MA

SCOPE SETTINGS
PEAK-TO-PEAK SIGNAL

READINGS

STANDARD SIGNAL

NOISE WAVEFORM

(RC-2150) (19D417930, Rev. 5) (19D416986, Sh. 2, Rev. 7) VOLTAGE TEST POINT