LBI-39009A

Installation Manual

Monogram_{Series} DUAL RATE MULTI-CHARGER (6-UNIT) KIT MHCH3W



TABLE OF CONTENTS

UNPACKING	. 3
ASSEMBLY	. 3

This manual is published by **Ericsson Inc.**, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by **Ericsson Inc.**, at any time and without notice. Such changes will be incorporated into new editions of this manual. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose, without the express written permission of **Ericsson Inc.**

Copyright© October 1993, Ericsson GE Mobile Communications Inc.

UNPACKING

When unpacking, be sure all parts are included. The following material should be part of the kit.

- One (1) Enclosure with retaining cover
- Two (2) Machine screws with washers and nuts: No. 10-16 x 2.5"
- Two (2) Thread forming screws: No. 10-16 x 3/4" or (machine screws)
- One (1) AC Outlet Strip
- Four (4) self-adhesive rubber feet

ASSEMBLY

REQUIRED TOOLS

- Phillips screwdriver
- Pliers or 1/4' nutdriver

ASSEMBLY

- 1. Install the AC Outlet Strip to the bottom of the enclosure using the two machine screws. Insert the machine screws from the bottom of the enclosure through the two holes and through the mounting holes of the AC Outlet Strip. Use a washer and a nut on each screw and tighten securely (see Figure 1, view A).
- 2. Insert one of the Dual Rate Charger Units into the enclosure and insert its AC power cord plug into one of the receptacles of the AC Outlet Strip (see Figure 1, view B).

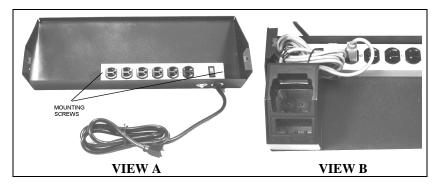


Figure 1 - Assembly of 6-Unit Charger

3. Insert the remaining charger units into the enclosure and insert their respective AC power cord plugs into the receptacles of the AC Outlet Strip (see Figure 2, view A).

NOTE

Perform the following steps (Steps 4 thru 6) to ensure that the charger units function prior to installing the top retaining cover on the enclosure.

- 4. Place the enclosure into position where it will be used and connect the AC power cord plug from the AC Outlet Strip to a 110 VAC power source.
- 5. Press the power switch on the AC Outlet Strip to the ON position.
- 6. Insert a *Monogram Series* MPG 300 radio unit into each of the charger slots and verify that the corresponding indicators light.
- 7. Install the top retaining cover and secure with two screws (see Figure 2, view B). Ensure that no cabling is pinched or damaged when the cover is secured.
- 8. Install the four self-adhesive rubber feet to the bottom of the enclosure.

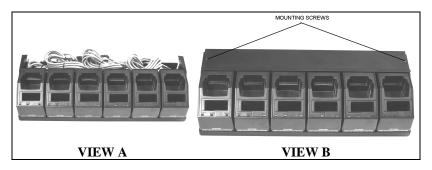


Figure 2 - Assembly Instructions