



LBI30733
(DF8389)

INSTALLATION INSTRUCTIONS

FOR

WINDOW MOUNT SPEAKER KIT 19A130023G4

(OPTION 1706)

Window Mount Speaker Option 1706 permits the operator of a MASTR[®] PROFESSIONAL or MASTR EXECUTIVE to attach the speaker to the dash board or to the window of his vehicle.


The speaker attached to the outside of the window allows the receiver audio to be heard outside of the vehicle.

To install the Window Mount Speaker Option, it is necessary to make a modification to the speaker housing adding a longer speaker cord and installing a window mount clip through the slot in the back of the speaker housing. See Speaker Housing Modification Instructions. Also, a mounting clip bracket must be assembled and fastened to some convenient location on the dash board. See Installation Instructions for the Dash Board Clip Bracket. The speaker can now be attached to the dash board by inserting the speaker clip into the clip bracket or to the window by hooking the speaker clip over the edge of the window.


MOBILE RADIO DEPARTMENT
GENERAL ELECTRIC COMPANY • LYNCHBURG, VIRGINIA 24502

GENERAL  ELECTRIC

PRINTED IN U.S.A.

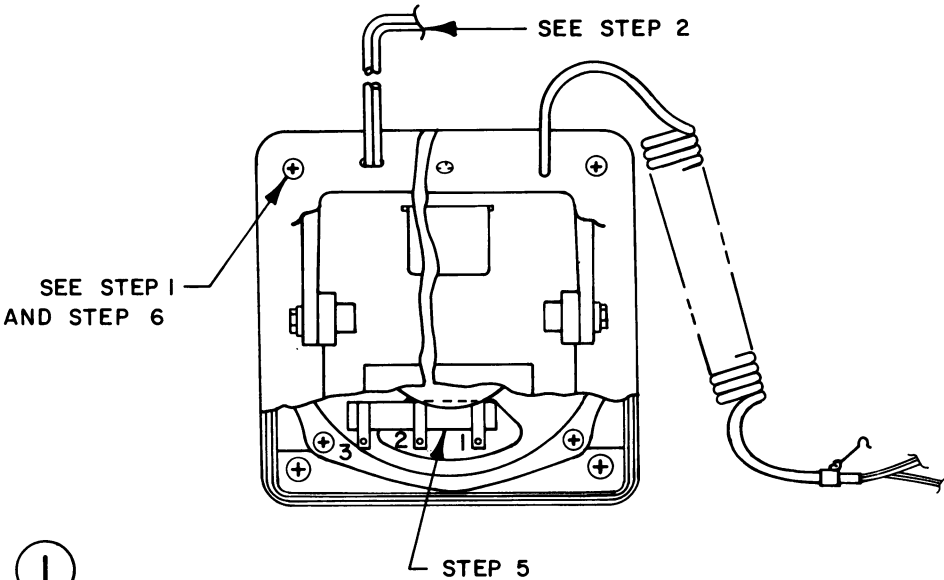

1. REMOVE THE 4 SCREWS HOLDING THE HOUSING BACK.
2. UNSOLDER AND DISCARD THE CORD CONNECTED TO SPEAKER TERMINALS 1 AND 2.
3. MOUNT WINDOW CLIP THRU SLOT IN HOUSING BACK.
4. FEED CABLE THRU HOLE AND SQUEEZE STRAIN CLAMP IN POSITION SHOWN.
5. SOLDER BLACK AND GREEN LEADS TO SPEAKER TERMINAL ONE AND THE RED AND WHITE LEADS TO TERMINAL TWO.
6. ASSEMBLE THE HOUSING WITH THE MOUNTING BRACKET. INSERT ANY UNASSEMBLED ITEMS INTO THE CUSTOMER HARDWARE ENVELOPE. REATTACH THE BAGGED CUSTOMER HARDWARE KIT. ATTACH THE CLIP MOUNTING KIT.

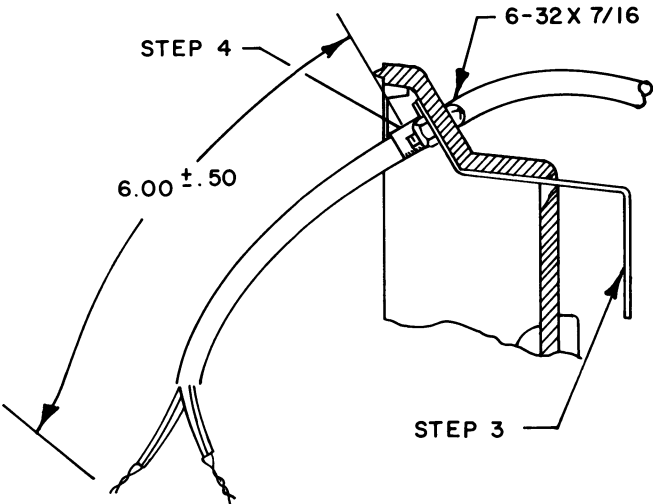



SPEAKER HOUSING MODIFICATION INSTRUCTIONS

(19B226779, Rev. 2)

PARTS LIST

WINDOW MOUNT SPEAKER KIT
19A130023G4

SYMBOL	GE PART NO.	DESCRIPTION
	19B219415P1	Window clip. (Fits through housing back).
	19B226190P1	Backing plate. (Mounts to dash).
	19B226185 P1	Clip bracket. (Located on backing plate).
	7147223P2	Clip loop. (Secures cable to housing and window clip).
	4029846P2	Hex nut, self locking. No. 6-32. (Secures clip loop to window clip and housing).
	N80P13007C6	Machine screw, Phillips head. No. 6-32 x 7/16. (Secures clip loop to window clip and housing).
	N193P1408C6	Tap screw, Phillips head. No. 8-18 x 1/2. (Secures clip bracket and bracket plate).
	19B205412G3	Cable: 4 conductor, No. 23 AWG. 84 inches extended length. sim to Koiled Kords No. 4020N. Includes: 5493018P4 hood, 5493018P2 plug, and 19A134497P1 cable clip.

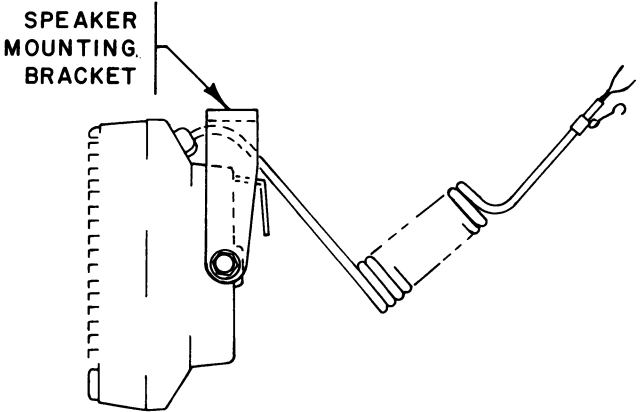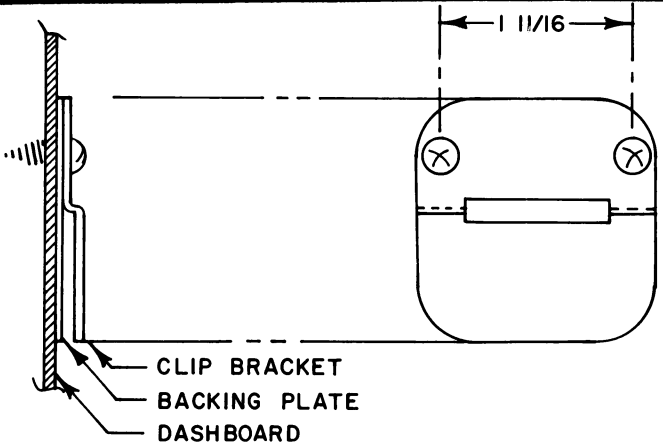

INSTALLATION INSTRUCTIONS
FOR
DASH BOARD CLIP BRACKET

(19B226800, Rev. 1)

1. SEE SKETCH (A) CHOOSE CONVENIENT LOCATION FOR THE SPEAKER ON THE DASH BOARD OR OTHER VERTICAL SURFACE AND SECURE THE CLIP BRACKET AND BACKING PLATE USING THE 2 #8 SHEET METAL SCREWS SUPPLIED AS SHOWN IN (A) USE #31 OR 1/8" DRILL.
2. SEE SKETCH (B) THE SPEAKER MOUNTING BRACKET AND ITS HARDWARE PACKAGE ARE USUALLY REMOVED AND DISCARDED WHEN USING THE DASH CLIP BRACKET SHOWN IN (A).

MASTR PROFESSIONAL

INSERT CABLE PINS IN VEHICLE SYSTEM PLUG P701-2 AND 13. FOR FRONT MOUNT UNITS ASM. SMALL TERMINAL UNDER MOUNTING SCREW (RIGHT SIDE) OF SYSTEM PLUG. INSERT HOOK OF STRAIN RELIEF ON COIL CORD IN TERMINAL HOLE AND SQUEEZE CLOSED. DISCARD LARGE TERMINAL. FOR TRUNK MOUNT UNITS, ASM. LARGE TERMINAL UNDER MOUNTING SCREW OF BRACKET AND CONTROL HEAD (LEFT SIDE). INSERT HOOK OF STRAIN RELIEF ON COIL CORD IN TERMINAL HOLE AND SQUEEZE CLOSED. DISCARD SMALL TERMINAL.

MASTR EXECUTIVE

FOR FRONT OR TRUNK MOUNT UNITS PLUG SPEAKER CONNECTOR INTO ITS MATING 5 PIN SOCKET. HOOK OF STRAIN RELIEF CAN BE INSERTED IN HOLE ON EITHER SIDE OF TRUNK MOUNT CONTROL UNIT.