MAINTENANCE MANUAL GETC INTERFACE MODULE 19D902342G1 & G3

TABLE OF CONTENTS	
	<u>Page</u>
SPECIFICATIONS	1
GENERAL DESCRIPTION	1
CIRCUIT AND FUNCTIONAL DESCRIPTION	1
CONNECTORS AND SYSTEM INTERFACE	1
CONTROL POINT SIGNAL FLOW	1
9.6Reference (J2-49)	1
11.0592 MHz Clock (J1A-8)	1
9.6CLKIN (J1A-17, 9.6CLKOUT (J2-42)	1
9.6DATAIN (J1A-17), 9.6OUT232 (J2-41)	1
150DATAIN (J1A-19), 150OUT232 (J2-36), 15OUTB232 (J2-43)	1
RXD - (J1C-22, RXD232 - (J2-29)	2
PTTOUT (J1C-29), PTTOUT232 (J2-19), PTTOUT + (J2-11), PTTOUT - (J2-12)	2
A/DOUT (J1C-28), A/DOUT232 (J2-23), A/DOUT + (J2-13), A/DOUT - (J2-14)	2
TRANSMIT SITE SIGNAL FLOW	2
PTTIN (J1A-29), PTTINPUT, PTTSEL, PTTIN232 - (J2-17), PTTOUT232 - (J2-19)	2
A/DIN (J1A-28), A/DINPUT, A/DSETL, A/DIN232 - (J2-18), A/DOUT232 - (J2-23)	2
RS-232 Level Clamping Levels (J2-20/22)	2 2
CLOCKTXD - (J1A-22), CLKTXD232 - (J2-31)	$\frac{2}{2}$
$RTS - (J1A-25), RTS232 - (J2-35) \dots RTS - (J1A-25), RTS232 - (J2-25) \dots RTS - (J1A-25), RTS232 - (J2-25) \dots RTS23 - (J2-25) \dots RTS23 - (J2-25) \dots RTS23 - (J2-25) \dots RTS23 - (J2-25) \dots RTS232 - (J2-25) \dots RTS23 - (J2-25) \dots RTS23 - (J2-25) \dots RTS23 - (J2-25) \dots RTS23 - (J2-25) \dots RTS232 - (J2-25) \dots RTS232 - (J2-25) - (J2-25$	$\frac{2}{2}$
CTS - (J1C-25), CTS232 - (J2-27)	$\frac{2}{2}$
BYPASS CONTROL - (J2-9)	$\frac{2}{2}$
POWER DISTRIBUTION AND FILTERING	$\frac{2}{2}$
PHASE LOCKED 11.0592 MHz CLOCK	4
	+ 5
MAINTENANCE	5
Table 1 - P1 Connector (GETC To GETC Interface Module)	5
Table 2 - P2 Connector Definition Table 2 - Divised Charles And Data	6
Table 3 - Digital Clocks And Data Rate	7
Table 4 - Jumper Definition And Configuration	7
TEST AND SERVICE	7
OUTLINE DIAGRAM	8
SCHEMATIC DIAGRAM	9
PARTS LIST	11
PRODUCTION CHANGES	11
OUTLINE DIAGRAM	11
IC DATA	12

Ericsson Inc.

Private Radio Systems Mountain View Road Lynchburg, Virginia 24502 1-800-528-7711 (Outside USA, 804-528-7711)



Printed in U.S.A.

SPECIFICATIONS*

GENERAL

INPUT VOLTAGE	+5 Volts ±5% +12 Volts -12 Volts
CURRENT DRAIN (maximum)	
+5 Volts +12 Volts -12 Volts	150 mA. 80 mA. 20 mA.
TEMPERATURE	-30° to -60° C
DIGITAL DATA/TYPE ANALOG/AUDIO TYPE DIMENSIONS Weight	TTL & RS-232C VOICE GRADE AUDIO CIRCUITS (EQUAL TO 3 4.5" (L) X 4.0 (W) 10 Ounces

* These specifications are primarily for the use of the service technician. Refer to the appropriate Specification Sheet for the complete specifications.

GENERAL DESCRIPTION

The GETC (General Electric Trunking Card) interface module is used in the EDACS Simulcast System to provide signal level conversion, clock synchronization, bypass, and remote control functions for those signals whose source or destination is the GETC. Group 1 is used in MASTR II and IIe applications. Group 3 is used in MASTR III applications.

The GETC interface module is physically mounted in the GETC shelf assembly of the EDACS trunked radio system. The GETC interface module plugs into the GETC logic board at GETC connector J3. (This is the location where the 9600 baud modem option of the GETC shelf assembly normally mounts.)

The GETC Interface module buffers signals between the GETC logic board and the rest of the simulcast modules. The buffered signals include the 9600 Hz data clock (in and out), 9600 baud data (in and out), 150 baud data (in and out), modem handshaking lines, audio/digital path select line (in and out, push-to-talk line (in and out) and the A/D lines (in and out).

The GETC interface module uses the 9600 Hz reference clock generated on the data selector 2 module to phase lock the 11.0592 MHz clock that is used to drive the GETC logic board. This provides the stable and synchronized clock source for the system at the Control Point.

The GETC interface module can switch the tip and ring audio interface at the Transmit Site. An adjustment to match the audio level of the two paths is also provided. The GETC interface module is used in different/compatible modes at the Transmit and Control Point Sites.

3002)

CIRCUIT AND FUNCTIONAL DESCRIPTION

The GETC interface module provides signal, data, and clock level conversion (TTL to RS-232C and RS-232C to TTL), an alternate path for local control, data and clock lines (via the WOBYPASS line), and a GETC clock that is phase locked to the reference clock.

The GETC interface module converts RS-232C level signals from the cross connect panel of the simulcast system to TTL signals for the GETC logic board. It also converts TTL signals from the GETC logic board to RS-232C for the cross connect panel for intersite use.

The GETC interface module generates a synchronized 11.0592 MHz clock from a reference 9600 Hz clock. This is accomplished using a Phase-Locked Loop (PLL) and a voltage controlled oscillator with a divide-by N prescaler.

Three relays are used on the GETC interface module. One relay provides a contact closure based on the GETC PTT output. A second relay provides a contact closure based on the GETC A/D (audio and low speed data/high speed data control line) control line. The third relay switches audio lines TXTIP, TXRING, RXTIP, and RXRING to an alternate source.

Jumpers on the GETC interface module allow it to be configured for various modes of operation. The hardware on the GETC interface module is comprised of the following:

- Two quad four line drivers to buffer signals from the GETC logic board to the cross connect panel
- Two quad four line receivers to buffer signals from the cross connect panel to the GETC logic board
- Two peripheral drivers to buffer signals to the relays and push-to-talk to the GETC logic board
- Two reed relays to provide contact closure on pushto-talk and audio/digital control to the cross connect panel for E/M compatibility
- One four pole relay for an alternate audio line by-• pass path
- One quad two to one mux to select alternate paths • for bypass control
- Two eight bit counters used for the PLL prescaler
- One D type flip flop used for the PLL
- One digital PLL/VCO
- One multivibrator for the 9600 baud tristate control
- One tristate driver

A block diagram of the GETC interface module is shown in Figure 1.

There are three connectors used to connect the GETC interface module to components of the Simulcast System, J1, J2, and J9. J1 provides the interface with the logic board. A description of the various signals, data and clocks used between the two modules is summarized in Table 3. J2 provides the interface with the cross connect panel of the Simulcast System. A description of the various signals, data, and clocks used between the GETC interface module and the cross connect panel is summarized in Table 4. J9 is used to connect a remote set of audio lines, TXTIP, TXRING, RXTIP, AND RXRING to (CBTXTIP, CBTXRING, CBRXTIP AND CBRXRING) through voice bypass relay

The 9.6CLKIN is a 9600 Hz square wave output from the GETC. The clock is derived from the RF modem on the GETC. 9.6CLKIN is converted from TTL to RS-232C and sent to the cross connect panel, as 9.6CLKOUT.

LBI-38486

K1. It also provides the interface for BYPASS control from J2-9 to control relay K1.

A series of 100 ohm and 10 ohm resistors are connected in series with the GETC interface board I/O lines to provide protection against surge currents that may occur.

CONTROL POINT SIGNAL FLOW

9.6Reference (J2-49)

A 9.6REF. clock, generated on digital selector #2 card, is distributed to the GETC interface board through the cross connect panel. This reference clock operates at 9600 Hz and is used by the GETC interface module to generate the 11.0592 MHz clock which is sent to the GETC to provide the clock used to synchronize the simulcast system.

11.0592MHz Clock (J1A-8)

The 11.0592MHz clock is generated on the GETC interface board by a phase locked loop oscillator referenced to the 9.6REF. clock for system stability. The 11.0592 MHz clock is then input to the GETC logic board. The corresponding clock on the GETC logic board is called MCLK.

9.6CLKIN (J1A-17), 9.6CLKOUT (J2-42)

9.6DATAIN (J1A-17), 9.6OUT232 (J2-41)

The 9.6DATAIN is a 9600 bps data stream output from the GETC. This data is derived from the RF modem, U4, on the GETC. 9.6DATAIN is converted from TTL to RS-232C and sent to the cross connect panel as 9.60UT232.

150DATAIN (J1A-19), 150OUT232 (J2-36), 1500UTB232 (J2-43)

The 150DATAIN is a 150 bps data stream output from the GETC. This data is derived from a WALSH BIT generator on the GETC. 150DATAIN is converted from TTL to RS-232C and sent to the cross connect panel as 150DATAOUT232 and to the FSK modem module in the sync unit assembly at the Control Point.

RXD (J1C-22), RXD232 (J2-29)

RXD data is a 9600 bps data stream input to the GETC. This data is derived from the cross connect panel data line, RXD232. RXD232 is converted from RS-232C to TTL and sent to the GETC. RXD232 is generated from the digital voter, sent to the cross connect panel, and subsequently sent to GETC interface module. RXD232 is used only at the Control Point.

PTTOUT (J1C-29), PTTOUT232 (J2-19), **PTTOUT** + (**J2-11**), **PTTOUT** - (**J2-12**)

PTTOUT is derived from the GETC. This signal is output from the GETC. The microcomputer produces the delayed PTT output. PTTOUT is input to a peripheral relay driver which drives relay K2. K2 provides a contact closure and connects PTTOUT + to PTTOUT -. These two signals, PTTOUT + and PTTOUT - are sent to the cross connect panel at the Transmit Site and to the transmit control panel at the Control Point.

PTTOUT is also converted from TTL to RS-232C and sent to the cross connect panel at the Transmit Site as PTTOUT232. PTTOUT232 is looped back to jumper J6 for possible selection in the generation of PTTIN. Currently, PTTOUT232 is not used.

A/DOUT (J1C-28), A/DOUT232 (J2-23), A/DOUT + (J2-13), A/DOUT- (J2-14)

A/DOUT is output from the GETC to produce the modulation path control to select the audio and low speed data or the high speed data path. A/DOUT is converted from TTL to RS-232C and sent to the cross connect panel as A/DOUT232. A/DOUT232 is sent from the cross connect panel to the transmit control panel at the Control Point. It is also looped back to jumper J5 for possible selection in the generation of A/DIN. A/DOUT is also input to a peripheral relay driver which drives relay K3. Relay K3 provides a contact closure and connects A/DOUT + to A/DOUT-. These two signals, A/DOUT + and A/DOUT-, are sent to the cross connect panel. A/DOUT232 is used in applications where RS-232 levels are required and A/DOUT is used where contact closure is desired.

TRANSMIT SITE SIGNAL FLOW

PTTIN (J1A-29), PTTINPUT, PTTSEL, PTTIN232 (J2-17), PTTOUT232 (J2-19)

The signal, PTTIN, is an input to the GETC. This is the return signal corresponding to PTTOUT from the GETC. It

is used to provide the delayed PTT control line to the transmitter of the EDACS station. This signal is derived from one of two sources. One is from the PTTINPUT signal from the cross connect panel. This TTL signal is received from the channel bank at the transmit site. The second, PTTSEL, is the looped back signal and is taken from the input of TTL to RS232 line driver U8A. The source selected is controlled by the state of the BYPASS control line at U4-1.

A/DIN (J1A-28), A/DINPUT, A/DSEL, A/DIN232 (J2-18), A/DOUT232 (J2-23)

The signal, A/DIN, is an input to the GETC at the Transmit Site. This is the return signal corresponding to A/DOUT from the control point GETC. It is used to provide the audio/digital path control line to the station GETC. This signal is derived from one of two sources. One source is the A/DINPUT, and is derived from the cross connect panel which originates from the channel bank at the transmit site. Jumper J12 allows selection of this source as either RS232 or contact closure to ground.

The second source is the TTL signal A/DSEL as the bypass A/D input control line. A/D SEL is originally derived from the GETC audio/digital path control line.

The source selected is controlled by the state of the BY-PASS control line at U4-1. Jumper J13 is used to enable or disable the routing of the A/DIN control line to the GETC.

RS-232 Level Clamping Levels (J2-20/22)

There are two clamping (pull-up or pull-down) voltages which are generated by diodes D2 and D3 and resistors R13 and R14. A pull-up to +12 volts is formed by D2 and R13. this pull-up voltage is sent to the cross connect panel. A pulldown to -12 volts is formed by D3 and R14. This pulldown voltage also is sent to the cross connect panel.

CLOCKTXD (J1A-22), CLKTXD232 (J2-31)

The CLOCKTXD clock is a 9600 Hz square wave output from the GETC. This clock is generated on the GETC phone modem U19 and converted from TTL to RS-232C (CLKTXD232) and sent to the transmit site cross connect panel.

TXD (J1C-24), TXD232 (J2-33)

TXD data is a 9600 bps data stream output from the GETC. This data is derived from the phone modem U19 on the GETC. TXD is converted from TTL to RS-232C (TXD232) and sent to the cross connect panel.

RTS (J1A-25), RTS232 (J2-25)

The request To Send (RTS) signal is a handshake signal derived from an output signal on the GETC. This signal, RTS, is converted from TTL to RS-232C and sent to the transmit cross connect panel as RTS232. RTS232 is also passed by jumper J11 where it can be selected and routed to provide CTS232.

CTS (J1C-25), CTS232 (J2-27)

The signal, Clear To Send (CTS), is a handshake signal input to the GETC. This signal is derived from one of two sources. The first is the line CTS232 from the transmit cross connect panel. The second source is the signal RTS232 which is routed to CTS232 on the module via the jumper J11. Figure 7 shows the RTS/CTS select option. Optionally, CTS can be held on continuously by positioning jumper J11 between pins 1 & 2.

BYPASS CONTROL (J2-9)

The active low bypass control line, BYPASS, is used to reroute certain paths on the GETC interface module. It serves to re-route the 9600 bps data, the 150 bps data, the A/D control line, and the PTT control line, all of which are directed back to the GETC logic board. In addition, it turns off the DATARTN signals for the 9.6 K baud data line. There is also a voice bypass circuit which allows the audio to be interrupted and receive voice (RXTIP and RXRING) to be sent to the transmitter (TXTIP and TXRING) via relay K1. The bypass modes are described under Signal Flow. Figures 2 through 6 show the bypass modes of operation.

POWER DISTRIBUTION AND FILTERING

The dc voltages used by the GETC interface module are received from the GETC logic board. These supplies are +5 Vdc, +12 Vdc, -12 Vdc and GND (0 volts or logic ground). The supplies, +12 Vdc and -12 Vdc are used as pull-up and pull-down clamps for RS232C levels used by circuits of the simulcast system. These supplies also power the TTL to RS-232C level translators on the module. The + 5 Vdc is used to power the circuits on the GETC interface module. There are power bypass capacitors on the GETC interface module to filter any power noise transients or spikes from affecting circuit operation and module performance. These capacitors are 0.1 µF in value and are numbered C11 through C22.

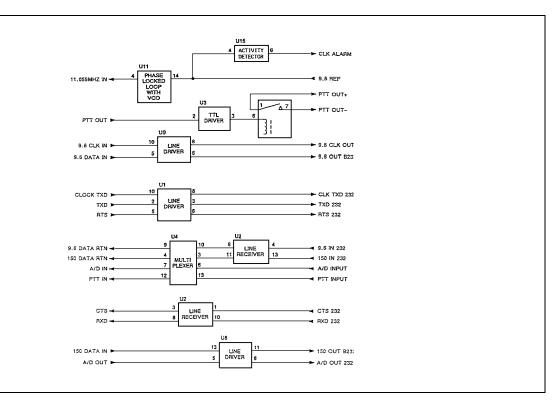
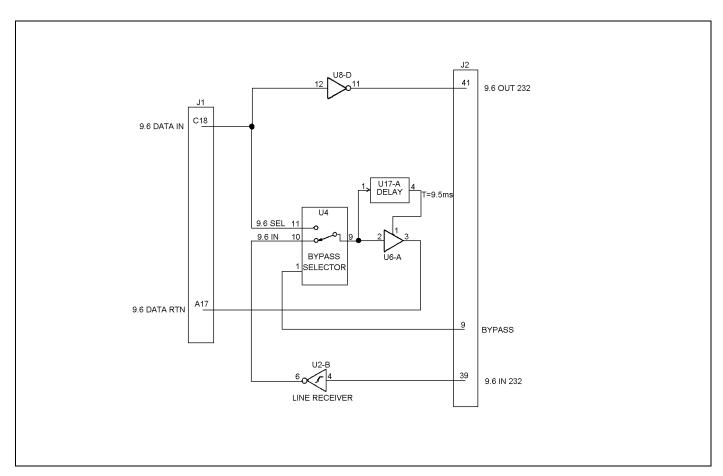


Figure 1 - GETC Interface Module Block Diagram





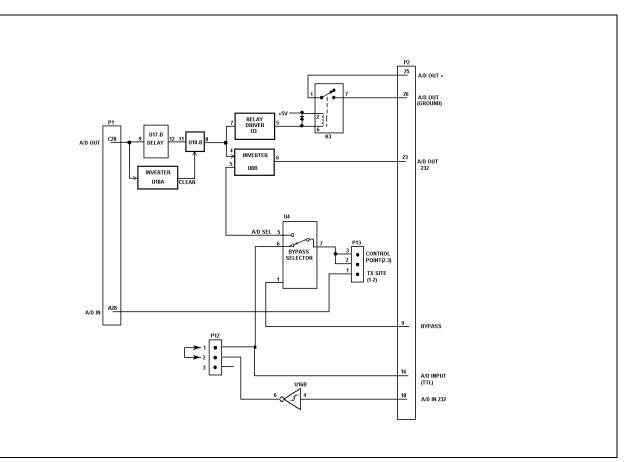
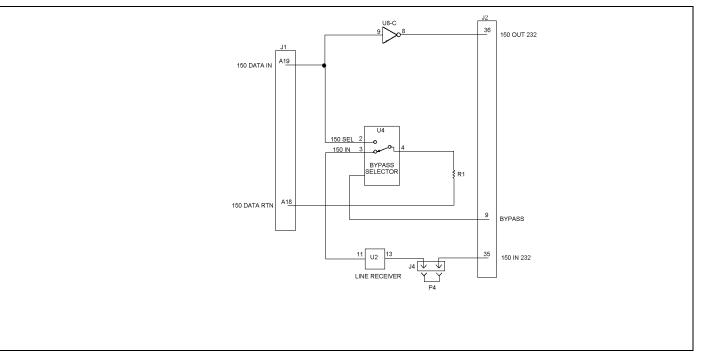


Figure 4 - A/D Input/Output Bypass

Figure 2 - 9.6K Bypass



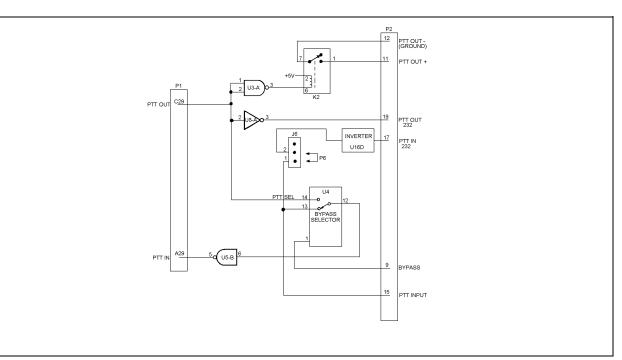


Figure 3 - 150 Data Bypass

Figure 5 - PTT Input/Output Bypass

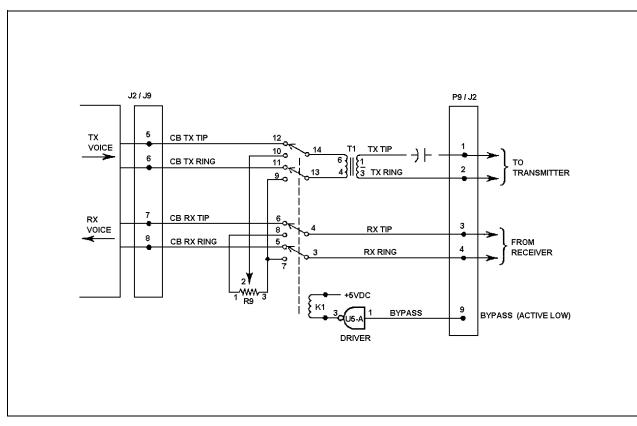


Figure 6 - Voice Bypass

PHASE LOCKED 11.0592 MHZ CLOCK

The GETC interface module generates an 11.0592 MHz clock from a reference 9600 Hz clock. This is accomplished by the digital Phase-Lock-Loop (PLL) and voltage controlled oscillator, U11. A divide by N prescaler consisting of 8bit counters, U12 and U13, along with the synchronizing register, U10, perform the proper divide down of the 11-0592 MHz generated clock to compare against the reference 9600 Hz clock from the channel bank.

The reference clock, 9.6REF, is converted from RS-232C to TTL via the level translator U16. Resistor R5 and capacitor C7 provide filtering and delay of the reference TTL clock for input to the PLL and VCO, U11. The other compare input to the PLL and VCO is the output of synchronizing register, U10.

The PLL and VCO, U11, is a self contained digital phase-lock-loop and voltage controlled oscillator. Resistor R6 and capacitor C8 set up the center running frequency of the voltage controlled oscillator. Resistors R7, R8, R15, R16, R17 and capacitors C9 and C26 comprise the loop filter of the PLL which sets up the capture range (frequency lock range).

The generated 11.0592 MHz clock is input to 8-bit counters, U12 and U13, along with the synchronizing register, U10. The counters are asynchronously reloaded via the active low output of register U10.

In a free running mode of operation (with the inputted 9600 reference clock), components U12, U13, and U10 go through the following count sequence in order to provide the divide by ratio as shown in the following table:

COUNTER U12 (HEX COUNT)	COUNTER U13 (HEX COUNT)	REGISTER U10 (BIT VALUE)			
FA	82	1			
FA	83	1			
FA	FF	1			
FB	00	1			
FB	FF	1			
FC	00	1			
FC	FF	1			
FD	00	1			
FD	FF	1			
FE	00	1			
FE	FF	1			
FF	00	1			
FF(FA)	01 (82)	0			
FA	82	1			
ETC(REPEATS)					

The total number of counts per cycle needed to produce the compare pulse (output of register U10) for input to the PLL is calculated below:

INITIAL FINAL	COUNT COUNT BEFORE REPEAT	- FA82 + FF01
ADD	ONE	+ 1
TOTAL		480

The quantity 480 (HEX) is equal to 1152 (DEC). This value compares with the desired divide by number (where 11.0592 MHz divided by 1152 equals 9600 Hz).

scheme.

Jumper J7 allows the selection of an external or internal source to generate the 11.0592 MHz clock for the GETC or to disable the GETC I/F clock so that the clock on the GETC can be used. Figure 8 shows the 11.0592 MHz clock selection

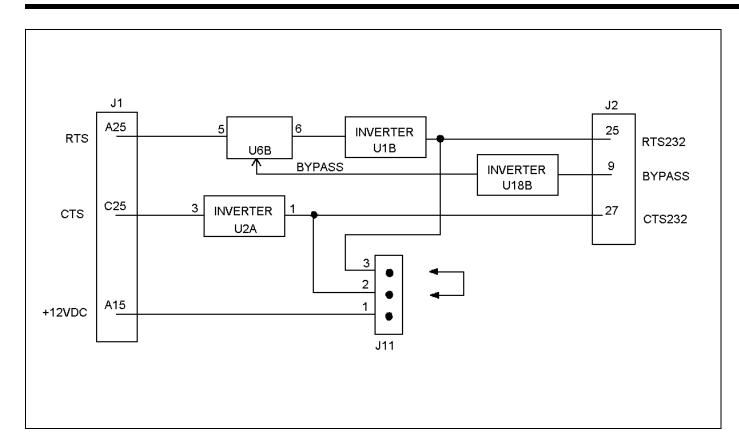


Figure 7 - RTS/CTS Select Option

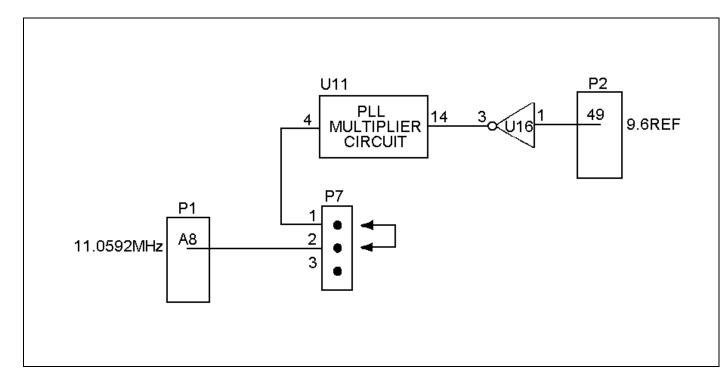


Figure 8 - 11.0592 MHz Clock Selection

MAINTENANCE

CONNECTOR PIN DEFINITIONS

Two connectors, P1 and P2, provide the interface connections for the GETC interface module: P1 interfaces the GETC with the GETC interface module and P2 provides the interface to the simulcast equipment. Tables 1 thru 3 identify

Table 1 - P1 Connector (GETC To GETC Interface Module)

CONNECTOR PIN	SIGNAL NAME	INPUT/ OUTPUT	ANALOG/ DIGITAL	LEVEL DIGITAL DC-VOLT AC-VRMS	CONTROL/ TS-SITE
P1-C3	GND	I/O	D	0 V	C/T
P1-A5	GND	I/O	D	0 V	C/T
P1-A8	11.0592MHZIN	0	D	TTL	C/T
P1-C8	GND	I/O	D	0 V	C/T
P1-A10	GND	I/O	D	0 V	C/T
P1-A12	-12 V	0			C/T
P1-A15	+12 V	0			C/T
P1-C16	9.6CLKIN		D	TTL	C/T
P1-A17	9.6DATARTN	0	D	TRI-STATE	C/T
P1-A18	150DATARTN	0	D	TTL	C/T
P1-C18	9.6DATAIN	Ι	D	TTL	C/T
P1-A19	150DATAIN	Ι	D	TTL	C/T
P1-C19	+5	Ι	D	5 V	C/T
P1-A22	CLKTXD	Ι	D	TTL	C/T
P1-C22	RXD	0	D	TTL	C/T
P1-C24	TXD	Ι	D	TTL	C/T
P1-A25	RTS	Ι	D	TTL	C/T
P1-C25	CTS	0	D	TTL	C/T
P1-A28	A/DIN	0	D	TTL	C/T
P1-C28	A/DOUT	Ι	D	TTL	C/T
P1-A29	PTTIN	0	D	TTL	C/T
P1-C29	PTTOUT	Ι	D	TTL	C/T

LBI-38486

each pin and provide such information as the signal name, whether or not it is an input or output signal, analog or digital, level - TTL, RS232, etc., and where used - Control Point or Transmit Site. Table 4 defines the jumpers used on the GETC. It also identifies the jumper, the shorting plug, the position required for proper operation at the Transmitter Site or the Control Point (they're not always the same) and also the signal present at each jumper location.

			connector Definition		
CONNECTOR PIN	SIGNAL NAME	INPUT/ OUTPUT	ANALOG/ DIGITAL	LEVE DIGITAL DC-VOLT AC-VRMS	CONTROL/ TX SITE
P2-1	TXTIP	0	А	0 dBm	
P2-2	TXRING	OP	Α	0 dBm	
P2-3	RXTIP	Ι	А	-10 dBm	
P2-4	RXRING	Ι	Α	-10 dBm	
P2-5	CBTXTIP	Ι	Α	0 dBm	Т
P2-6	CBTXRING	Ι	Α	0 dBm	Т
P2-7	CBRXTIP	0	Α	-10 dBm	Т
P2-8	CBRXRING	0	Α	-10 dBm	Т
P2-9	BYPASS	Ι	Α	0, FLOAT	C/T
P2-10	GND	I/O	D	0 V	C/T
P2-11	PTTOUT +	0	D	0, FLOAT	С
P2-12	PTTOUT -	0	D	0 V	С
P2-13	A/DOUT +	0	D	0, FLOAT	
P2-14	A/DOUT -	0	D	0 V	
P2-15	PTTINPUT	Ι	D	TTL	Т
P2-16	A/DINPUT	Ι	D	TTL	
P2-17	PTTIN232	Ι	D	RS-232C	
P2-18	A/DIN232	Ι	D	RS-232C	Т
P2-19	PTTOUT232	0		RS-232C	
P2-20	+12 V	0	D	12 V	С
P2-21					
P2-22	-12 V	0	D	-12 V	
P2-23	A/DOUT232	0	D	RS-232C	С
P2-24	GND	I/O	D	0 V	C/T
P2-25	RTS232	0		RS-232C	

Table 2 -	P2 Connector	Definition
-----------	--------------	------------

CONNECTOR SIGNAL NAME INPUT/ ANALOG/ PIN OUTPUT DIGITAL P2-26 GND I/O D P2-27 CTS232 Ι I/O P2-28 GND D P2-29 RXD232 Ι P2-30 GND I/O D P2-31 CLKTX232 0 GND I/O P2-32 D P2-33 TXD232 0 I/O P2-34 GND D P2-35 150IN232 Ι 0 P2-36 1500UT232 P2-37 (Not used) GND I/O P2-38 D 9.6IN232 P2-39 Ι P2-40 GND I/O D P2-41 9.60UT232 0 0 P2-42 9.6CLKOUT P2-43 9.6CLKOUT P2-44 GND I/O D P2-45 (Not used) P2-46 GND I/O D P2-47 (Not used) P2-48 (Not used) P2-49 9.6REF Ι D P2-50 GND I/O D

6

Table 2 - P2 Connector Definition (cont'd)

LEVE DIGITAL DC-VOLT AC-VRMS	CONTROL/ TX SITE
0 V	C/T
RS-232C	
0 V	
RS-232C	С
0 V	C/T
RS-232C	Т
0 V	C/T
RS-232C	Т
0 V	C/T
RS-232C	Т
RS-232C	С
0 V	C/T
RS-232C	Т
0 V	C/T
RS-232C	С
RS-232C	С
RS-232C	С
0 V	C/T
0 V	C/T
RS-232C	C/T
0 V	C/T

CONNECTOR PIN	SIGNAL PIIN	CLOCK AND L		RATE Hz (C) BPS (D)
P1C-16	9.6CLKIN	С	TTL	9600
P1A-17	9.6DATARTN	D	TTL	9600
P1A-18	150DATARTN	D	TTL	150
P1-C18	9.6DATAIN	D	TTL	9600
P1A-19	150DATAIN	D	TTL	150
P1A-22	CLKTXD	С	TTL	9600
P2-29	RXD232	D	RS-232C	9600
P2-31	CLKTXD232	С	RS-232C	9600
P2-33	TXD232	D	RS-232C	9600
P2-35	150IN232	D	RS-232C	150
P2-36	1500UT232	D	RS-232C	150
P2-39	9.6IN232	D	RS-232C	9600
P2-41	9.60UT232	D	RS-232C	9600
P2-42	9.6CLKOUT	D	RS-232C	9600
P2-43	9.6CLKOUT	D	RS-232C	9600
P2-49	9.6REF	С	RS-232C	9600

Table 3 - Digital Clocks And Data Rate

Table 4 - Jumper Definition And Configuration

JUMPER	SHORTING PLUG	POSITION	DESCRIPTION	CONTROL C	/TX SITE T
J3	Р3	1 & 2 2 & 3	GETC 9600 DATA BYPASS REMOTE 9600 DATA BYPASS	1-2	1-2
J4	P4	1 & 2 2 & 3	GETC 150 DATA BYPASS REMOTE 150 DATA BYPASS	1-2	1-2
J5	Р5	1 & 2 2 & 3	A/D CONTROL DIS BYPASS A/D CONTROL EN BYPASS	2-3	2-3
J6	P6	1 & 2 2 & 3	PTT CONTROL DIS BYPASS PTT CONTROL EN BYPASS	2-3	2-3
J7	Р7	1 & 2 2 & 3	EXT REF INT REF	1-2	1-2
J8	Р8	1 & 2 2 & 3	T1 LINE DC COUPLING T1 LINE AC COUPLING	1-2	1-2
J11	P11	1 & 2 2 & 3 OPEN	CTS ENABLED CTS ENABLED VIA RTS EXTERNAL CTS-232	2-3	2-3
J12	P12	1 & 2 2 & 3	A/D TTL CONTROL A/D RS-232C CONTROL	1-2	1-2
J13	P13	1 & 2 2 & 3	A/D EN FOR CONTROL SITE A/D DIS FOR REMOTE SITE	1-2	2-3

The following adjustments/connections are required when installing the GETC interface module in an operational simulcast system:

- A. Install jumpers per system requirements.
- B. Adjust resistor R9 at the transmit site to set deviation (3 kHz) in the voice bypass mode.

TEST AND SERVICE

The following equipment is necessary to test the GETC interface module:

- 1. Tektronix 2430A Digital Storage Scope or equivalent
- 2. HP 8116 Pulse/function Generator or equivalent
- 3. Triplett model 630-PL Type 5 or equivalent
- 4. Test Cables as required

The following steps are necessary to test the GETC interface module as part of the Simulcast System.

- 1. Configure the jumpers on the GETC interface module for the desired modes of operation.
- 2. Install the GETC interface module in the GETC shelf assembly of the Simulcast System.
- 3. Verify that the +5, +12, and -12 Vdc source voltages on the GETC interface module are within the tolerances specified.
- 4. Verify correct operation of the PLL and VCO, if the 9.6 REF channel bank clock is used. Verify the 11.0592 MHz external clock, if used.

- 5. Verify the presence of 9.6CLKIN and 9.6DATAIN from the GETC.
- 6. Verify the presence of 150DATAIN from the GETC.
- 7. Verify the clock, CLOCKTXD, from the GETC.
- 8. If the modem control lines, TXD, CTS, and RTS are used, verify the presence of activity on these lines.
- 9. To check low speed data and high speed data control lines, verify activity on A/DOUT and contact closure to ground on A/DOUT +.
- 10. To check transmit control functions, verify activity on PTTOUT and contact closure to ground on PTTOUT +.
- 11. To check high speed data return from the channel bank, verify the presence of 9600 bps data on 9.6 RTN.
- 12. To check low speed data return from the channel bank, verify the presence of 150 bps data on 150DATARTN.
- 13. To check the A/D control line from the channel bank, verify activity on A/DIN.
- 14 To check PTT control line from the channel bank, verify activity on PTTIN.
- 15. To check voice bypass, verify voice loopback on the T1 lines and away from the channel bank lines.
- 16. To check remote bypass, verify that PTTIN, A/DIN, 150DATARTN, and 9.6DATARTN are generated from one of the loopback (or bypass) modes as configured by the jumpers.

OUTLINE DIAGRAM

 \oplus 35 \oplus ******* 6 O C35 R11 ้นอ U1 U3 (+ CS + 6666 30-C32 R48 855 627 115 litti i R46 6 6 6 6 Ο U17 R48 - R44 -U18 U4 + C24 + **BEV** D2 010 100063450 45 R13 R34 - R56 -232 Rie U6 012 R5 (+ca+) (+c2+) R24 823 R21 R25 - 70 H R19 U13 011 кз - D5 O D1 -RA **6 6** C37 10 F Ť 1 K2 19 + + (+ c2 + मि स J16 (+ R17 et++ teret €<u>C34</u>)1 [<u>+</u> <u>+</u> <u>+</u>] \bigcirc /9\


COMPONENT SIDE

(19D902341, Rev. 6)



GETC INTERFACE MODULE

19D902342, Sh. 1, Rev. 9)

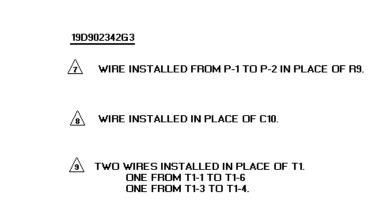


JUMPER DEFINITION AND SETUP

JUMPER DEFINITION AND CONFIGURATION TABLE						
JUMPER	SHORTING PLUG	POSITION	DESCRIPTION	CONTROL/ TRANSMITTER SITE		GP1
				Т	С	
J6	Рб	1 & 2 2 & 3	PTT CONTROL RS-232 PTT CONTROL TTL	2-3	2-3	2-3
J7	P7	1 & 2 2 & 3	EXT REF INT REF	1-2	1-2	1-2
J11	P11	1 & 2 2 & 3	CTS RETURNED EXT. CTS ENABLED VIA RTS	2-3	2-3	2-3
J12	P12	1 & 2 2 & 3	R/D RS-232 CONTROL R/D TTL CONTROL	2-3	2-3	2-3
J13	P13	1 & 2 2 & 3	R/D EN R/D DIS	1-2	2-3	1-2
J14	P14	1 & 2 2 & 3	PASCO/PECO OTHER	2-3	2-3	2-3


NOTE: FOR J14,P14 JUMPER SHOULD BE POSITIONED BETWEEN PIN 1 & 2 IF MODULE IS USED TO REPLACE A 501-63177 MODULE - OTHERWISE JUMPER BETWEEN PINS 2 & 3.

8

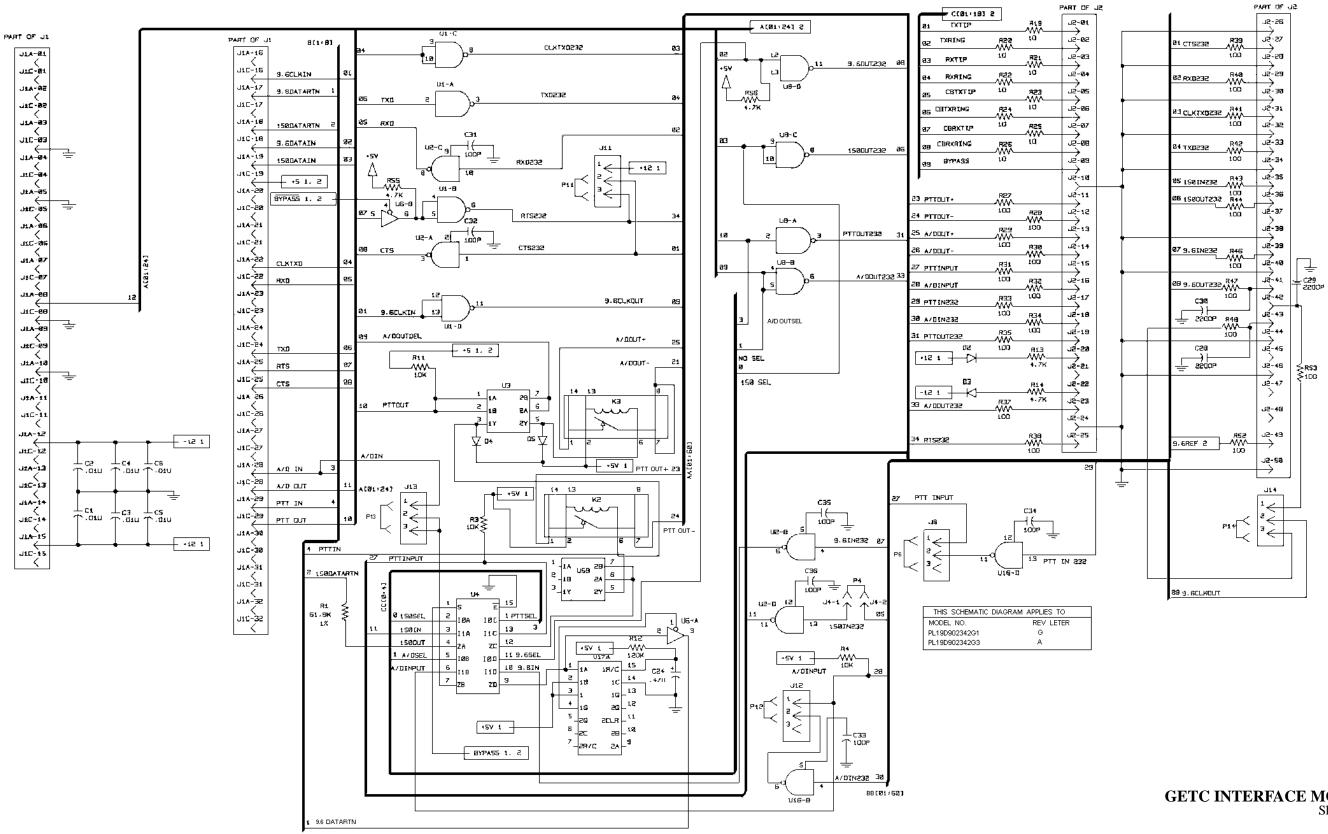

GETC INTERFACE MODULE Sheet 1 of 2

919D902313, Sh. 1, Rev. 8)

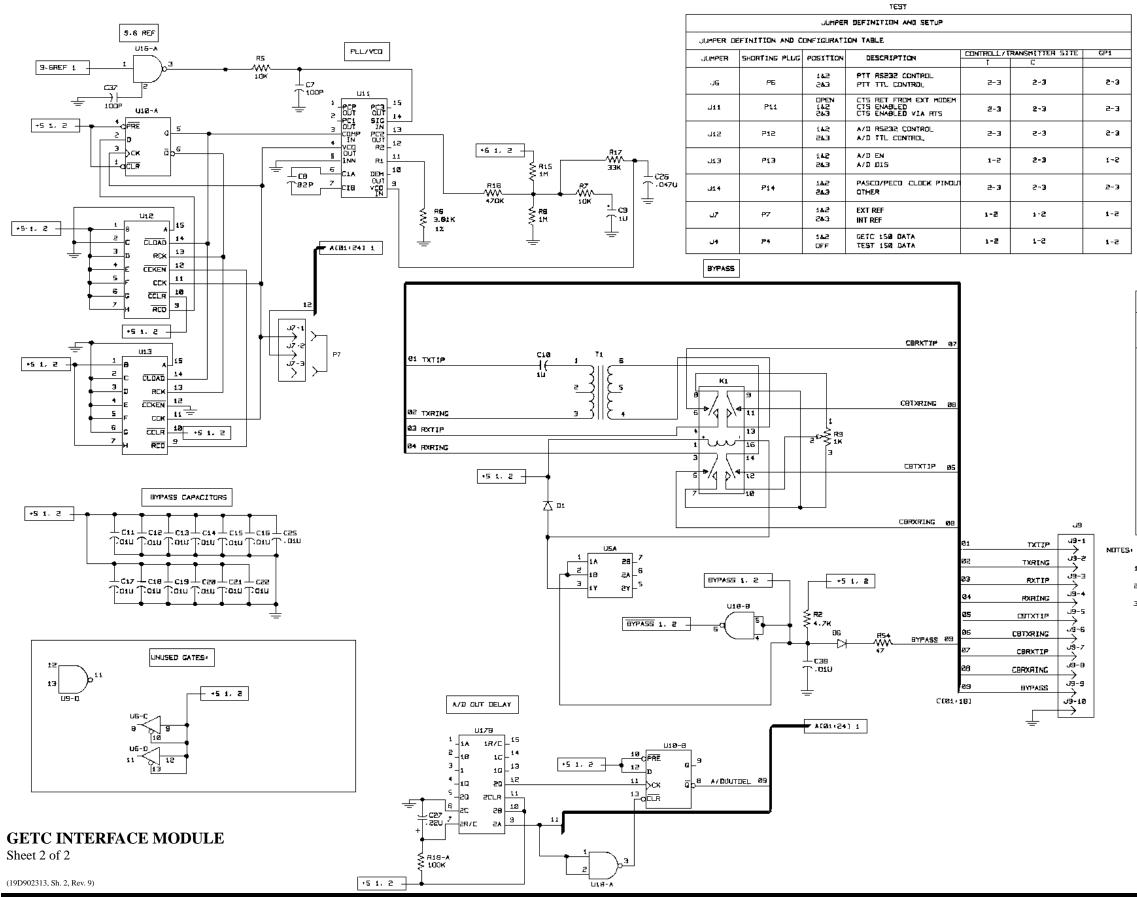

POWER AND GROUND CONNECTIONS					
DEVICE	GND PIN NG.	+5√ 10 אם,	+12V PIN NO.	-12V PIN ND:	
41.68	7		1+	1	
U2	7	14			
ບສຸບຣ	4	8			
LI4	9	±6,			
LI G	7	14			
មេន	7	14			
411	9	16			
012.013	в	16			
015	7	14			
U17	e	16			
L18	7	14			

 TO SELECT 11.0992 HHZ SOURCE, JUMPER P7-1 TO P7-2.
 CONNECTOR P9 IS USED FOR BYPASS OPERATION.

3. CLEAR-TO-SEND (CTS) IS SELECTED BY JUMPERS ON P11. FOR A CONSTANT CTS HI. JUMPER P11-1 TO P11-2. FOR A CTS HI WHEN ATS IS HI. JUMPER P11-2 TO P11-3. OMIT P11 TO CTS RETURN FROM MODEM.

GETC Interface Module 19D902342G1 & G3

SYMBOL PART NUMBER

19A701250P377

H212CRP247C

H212CRP310C

19A701250P247

H212CRP310C

H212CRP510C

H212CRP310C

H212CRP412C

H212CRP247C

H212CRP510C

H212CRP447C

H212CRP333C

H212CRP410C

H212CRP010C

H212CRP110C

H212CRP047C

H212CRP247C

H212CRP347C

19A116704P1

19A116704P2

19A700037P365

19A116704P1

19A116704P2

19A700037P354

19A700037P301

19A700037P335

19A700016P1

Digital: Quad 2-input NAND gate; sim to 74LS00.

R1

R2

R3

thru R5

*R6

R7

R8

R9

R11

R12

R13

and R14

R15

R16

R17

R18

R19

thru R35

and R37

thru R44

and R46 thru R48

R52

and R53 R54

R55

R56

T1

U1

U2

U3

U4

U5

U6

U8

U10

U11

U12

and U13

U16

U17

U18

SYMBOL	PART NUMBER	DESCRIPTION
		CAPACITORS
C1 thru C6	T644ACP310K	Capacitor, polyester: .01µF ±10%, 50 VDCW.
C7	19A700235P25	Capacitor, ceramic: 100 pF \pm 5%, 50 VDCW.
°C8	19A116288P11	Capacitor, ceramic: 82 pF ±5%, 50 VDCW.
C9	19A701534P4	Capacitor, tantalum: 1 μ F ±20%, 35 VDCW.
C10	19A700004P8	Capacitor, metalized polyester: 1 $\mu\text{F}\pm10\%$, 63 VDCW. (G only).
C11	T644ACP310K	Capacitor, polyester: .01µF $\pm 10\%,$ 50 VDCW.
C24	19A700004P6	Capacitor, metalized polyester: 0.47 $\mu\text{F}\pm10\%,$ 63 VDCW.
C25	T644ACP310K	Capacitor, polyester: .01 μF ±10%, 50 VDCW.
C26	19A702250P111	Capacitor, polyester: .047 μ F ±10%, 50 VDCW.
C27	19A700004P6	Capacitor, metalized polyester: 0.47 µF±10%, 63 VDCW.
C28	T644ACP222K	Capacitor, polyester: .0022 μ F $\pm 10\%,$ 50 VDCW.
C31	19A700233P1	Capacitor, ceramic: 100 pF ±20%, 50 VDCW.
C38	T644ACP310K	Capacitor, polyester: .01 μF ±10%, 50 VDCW.
		DIODES
D1 thru D3	T324ADP1041	Rectifier, silicon: sim to 1N4004.
D4 and D5	19A700028P1	Rectifier, silicon: 75 mA, 75 PIV; sim to 1N148.
D6	19A700047P3	Rectifier, silicon: , Schottky barrier; sim to 1N6263.
		JACKS
J1		Connector: 64 pin, Panduit 100-964-023.
J2		Connector: Amp 2-103240-5.
J4	19A704852P1	Connector: 2 Pin male header.
J6 and J7	19A704852P2	Connector: 3 Pin male header
J9		103240-5Amp.
J11 thru J14	19A704852P2	
		RELAYS
K1		4PDT: Aromat DS4E-M-DCV.
K1 K2	19B235939P1	Reed.
and K3	19823393921	Reeu.
		PLUGS
P6 and P7 and P11 thru	19A702104P2	Connector: Shorting Jumper, Gold plated. (Housing Color: White).

*COMPONENTS, ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

PARTS LIST

R	DESCRIPTION		PRODUCTION CHANGES
	RESISTORS		in the equipment to improve performance or to simplify circuits are
,	Resistor, metal film, 23.7K ohms \pm 1%. 1/4 w.		by a "Revision Letter" which is stamped after the model number of The revision stamped on the unit includes all previous revisions. Refer
	Resistor, deposited carbon, 4.7K ohms $\pm 5\%$. 1/4 w.	to the Part	rts List for the description of parts affected by these revisions.
	Resistor, deposited carbon, 10K ohms $\pm 5\%$. 1/4 w.	REV. A -	GETC INTERFACE MODULE 19D902342G1 Incorporated into initial shipment.
		REV. B -	Incorporated into initial shipment.
7	Resistor, metal film, 3.01K ohms \pm 1%. 1/4 w.	REV. C -	To improve noise immunity and remove unused jumpers. Added
	Resistor, deposited carbon, 10K ohms ±5%. 1/4 w.	NEV. O	C28-C30, R55, R56, U18. Deleted J3-J5, J8, P3-P5, P8, R36, R49-
	Resistor, deposited carbon, 1 M. ohms $\pm 5\%$ 1/4 w.		R51, U7, and changed K2, K3, R19-R26. Old part numbers were:
	Resistor, variable: 10 - 1K ohms. (G1 only).		J3-J5, J8 - 19A704852P2, Connector: 3-pin male header.
	Resistor, deposited carbon, 10K ohms ±5%. 1/4 w.		K2, K3 - 19B209716P1, Relay reed.
	Resistor, deposited carbon, 0.12 M ohms ±5%. 1/4 w.		P3-P5, P8 - 19A702104P2, Connector: Shorting jumper, gold plated (Housing color: White).
	Resistor, deposited carbon, 4.7K ohms ±5%. 1/4 w.		R19-R26, R36, R49-R51 - H212CRP110C, Deposited carbon:
			100K ohms ±5%, 1/4 w.
	Resistor, deposited carbon, 1 M. ohms ±5% 1/4 w.		U7 - 19D116704P2, Digital: Quad Line driver; sim to 1489.
	Resistor, deposited carbon, 470K ohms ±5%. 1/4 w.		OUTLINE
	Resistor, deposited carbon, 33K ohms ±5%. 1/4 w.		
	Resistor, deposited carbon, 100K ohms ±5%. 1/4 w.		
	Resistor, deposited carbon, 10 ohms $\pm 5\%$. 1/4 w.		
	Resistor, deposited carbon, 10 onins ±376. 174 w.		
			()
	Resistor, deposited carbon, 100 ohms \pm 5%. 1/4 w.		
	Resistor, deposited carbon, 47 ohms ±5%. 1/4 w.		
	Resistor, deposited carbon, 4.7K ohms ±5%. 1/4 w.		
	Resistor, deposited carbon, $47K$ ohms $\pm 5\%$. 1/4 w.		
	Resistor, deposited carbon, $47R$ on $15 \pm 5\%$. $1/4$ w.		
	TRANSFORMERS		
	Microtran: PM34-M. (G1 only).		
	INTEGRATED CIRCUITS		R32
	Digital: Quad Line Driver; sim to 1488.		
	Digital: Quad Line Receiver; sim to 1489.		
	Digital: Dual Peripheral Driver, 75451T1.		
5	Digital Quad 2-line to 1 line Data Selector.		
	Digital: Dual Peripheral Driver, 75451T1.		
	Digital: Quad Tri-state buffer, 74HCT125RCA.		
	Digital: Quad Line Driver; sim to 1488.		
5	Digital: Quad Line Diver, sim to 1460. Digital: Dual Data FF; sim to 74LS74A.		John All
-	Phase Lock Loop: 74HCT4046RCA.		
	Digital: 8-bit binary counter; sim to 74LS592T1.		
	Signal o bit bindry obuntor, oin to FTL000211.		
	Digital: Quad Line Receiver; sim to 1489.		
1	Digital: Quad Line Receiver, sim to 1469. Digital: Dual retriggerable monostable; sim to 74LS123.		
•		REV. F -	To improve noise immunity on bypass line. Changed D6 and R54.

numbers were: D6 - 19A700028P1: 75 mA, 75 PIV; sim to 1N4148.

R54 - H212CRP110C: Resistor, deposited carbon: 100 ohms ±5% 1/4 w.

REV. G - To improve start up stability. C8 was 220 pF (19A700235P29) and R6 was 1.47k ohms (19A701250P217).

REV. A - GETC INTERFACE MODULE 19D902342G3 To improve start up stability. C8 was 220 pF (19A700235P29) and R6 was 1.47k ohms (19A701250P217).


REV. D - To correct documentation. Added C35-C37, J4 and connection between U4-11 and U8-12. Deleted U9 and changed C24. Old part number was:

> C24 - 19A700004P4, Capacitor, metalized polyester: 0.22 µF 10%, 63 VDCW.

U9 - 19A116704P1, Digital: Quad Line Driver; sim to 1488.

- REV. E To correct wiring shown on PWB. To improve operation of bypass function and transient protection. Refer to Outline Diagram below and modify PWB as directed. R45 is deleted.
 - 1. Cut run at junction of R2, D6 (solder side to J2-9).
 - 2. Cut run from J2-9 to feed thru on solder side (was going to U5-
 - 3. Install white wire from J2-9 feedthrough to R54. (J9-9 on solder side).
 - 4. Install white wire from U5-1 feedthrough to junction of R2, D6 on solder side.


OUTLINE DIAGRAM

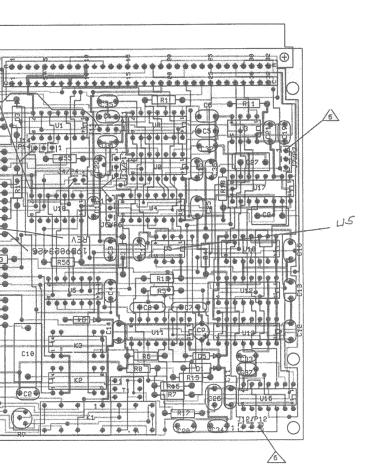

line. Changed D6 and R54. Added C38 on solder side between the anode of D6 and ground (J9-10). Old part

IC DATA

U4 QUAD 2-LINE TO 1-LINE DATA SELECTOR 19A700037P365

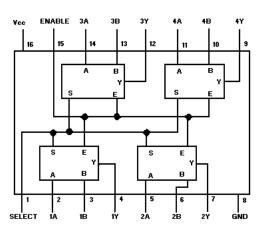


Truth Table				
ENABLE	SELECT	А	в	OUTPUT Y
1	х	Х	Х	0
0	0	0	х	0
0	0	1	Х	1
0	1	Х	0	0
0	1	Х	1	1


FLIP-FLOPS 19A700037P335

INPUTS			OUTF	PUTS	
PR	CLR	CLK	D	Q	Q
L	н	х	х	н	L
н	L	х	х	L	н
L	L	х	х	Н*	Η*
н	н	ŧ	н	н	L
н	н	+ i	L	L	н
н	н	Ĺ	х	Q 0	ଢି୦


Notes: Q0 = the level of Q before the indicated input conditions were established. * This configuration is nonstable; that is, it will not persist when preset and clear inputs return to their inactive (high) level.

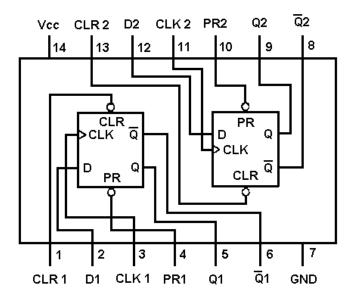

QUAD LINE DRIVER 19A116704P1

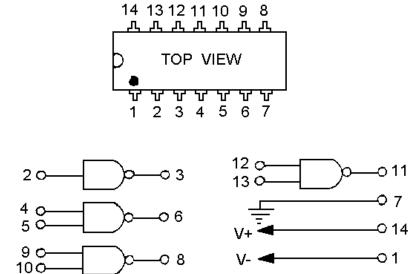


QUAD LINE RECEIVER 19A116704P2

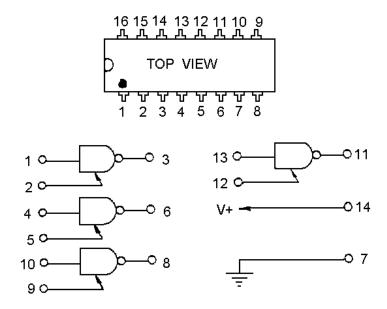

12

IC DATA

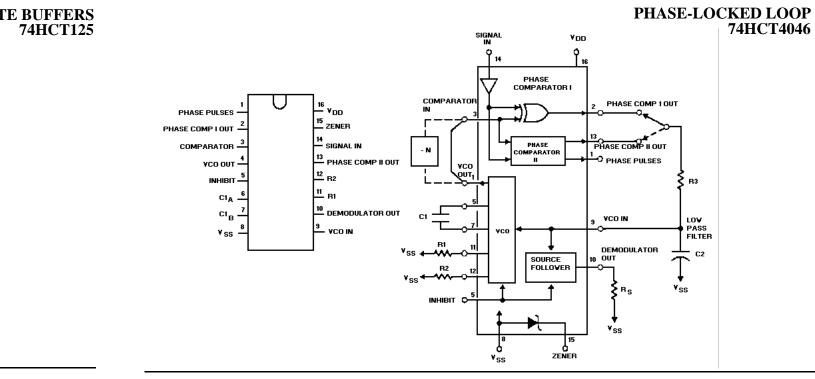

QUAD TRI-STATE BUFFERS

Truth Table

Inputs

Α

L

Н

х

С

L

L

Н


Outputs

Y


L

Н

HI-Z

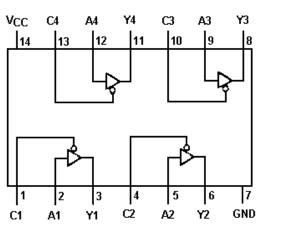


U17 DUAL RETRIGGERABLE MONOSTABLE

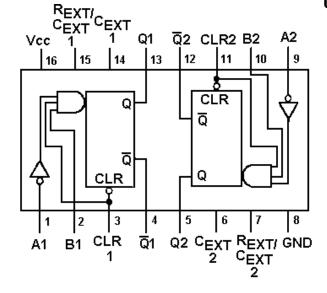

Truth Table

Inputs			Outputs	
CLEAR	A	в	Q	Q
L	x	X X	L	н
X	н	X	L	н
X	X	L	L	н
н	L	1	л	ъ
н	1	н	л	ъ
1	L	н	л	ъ

В 🔲 1		COUNTE	R CLO
C 2 D 3	15 A 14 CLOAD	CCKEN	CCKE
E 🗌 4	13 🗖 <u>RСК</u>	L	L
F 🗌 5		L	Н
G 🗌 6	11 🗋 <u>ССК</u>	н	L
H ∏ 7 GND ∏ 8	10 CCLR 9 RC0	н	Н



2A -

```
LBI-38486
```

8-BIT BINARY COUNTER 74LS592

ITER CLOCK ENABLE CONTROL

CKEN	EFFECT ON CCK
L	ENABLE
Н	DISABLE
L	ENABLE
Н	ENABLE
	•

