

MAINTENANCE MANUAL
SIMULCAST SYSTEM DRAWINGS
CONTROL POINT COMMON EQUIPMENT
4 SITE 10 CHANNEL

TABLE OF CONTENTS	
	<u>Page</u>
DESCRIPTION	1
Equipment Rackup, Front View	1
Equipment Rackup, Rear View	2
Cable Connections, Module Location & Identification	2
Cable Connections, Digital Rack 1	3
Cable Connections, Digital Rack 1	4
Cable Connections, Analog Rack 2	4
Cable Connections, Digital Rack 1, Power Connections	5
Cable Connections, Analog rack 2, Power Connections	5
Signal Cabling, Interrack & External, Field Installation Diagram	6
Signal Cabling, Interrack & External Field Installation Diagram	7
Cable Connections, Interrack & External	8
Digital Cross Connect Wiring Diagram	9
Analog Cross Connect Wiring Diagram/Analog Delay Shelf G3	10
Analog Cross Connect Wiring Diagram/Analog Delay Shelf G6	11
Intrarack DC Power Wiring Diagram, Digital Rack 1	12
Intrarack DC Power Wiring Diagram, Digital Rack 1 (Modems)	13
Intrarack DC Power Wiring Diagram, Analog Rack 2	14

DESCRIPTION

This manual contains the equipment configuration and cable interrack and intrarack interconnection drawings (power and signal) required for installation and maintenance of Simulcast System with up to 4 sites and up to 10 channels. It also contains the cable connection lists that provide the interconnect wiring information for the Site Controller, General Electric Trunking Card (GETC) and Repeater Interface Controller (RIC),. DC Power, etc.

The configuration drawings identify the four racks comprising the simulcast equipment: GETC, two simulcast racks - digital and analog, and the test rack, that make up the 4 site 10 channel system. The equipment configuration of each rack is also shown. The configuration drawings also show a rear view of the rack and identify the interconnecting jacks for each shelf.

Field installation drawings show the signal and dc power interrack cabling. The Control Point digital and analog cross connect wiring diagrams trace the signal paths through the simulcast equipment. The dc power wiring diagrams show the power distribution throughout the individual racks. The cable connection lists identify the rack, system cables, and the associated interconnecting jacks and the functions for which the interconnecting cables are used.

Be aware that the information contained on each of these drawings will make servicing the simulcast system easier. For example, having determined the number of a problem channel refer to the configuration drawings to identify the rack and shelf in which it is located. Rack 2 contains the audio processing shelves for channels 1 thru 10 (two channels per shelf) and identifies which channels are associated with each shelf. It also identifies designator assigned to the shelf; it is useful for signal tracing, i.e. A401. The rear view of these drawings identify the shelves and the jack configuration on each. Then, by referring to the analog cross connect diagram (19C852278) you see that A401 interconnects with the analog cross connect panel B401 and jackfield A600. It also shows that this particular path carries voted voice. The cable connection list identifies the specific cable used and its interconnection points.

Rack 2 also contains the jackfields, analog delay shelf and related dc power supplies to power the rack. Cabling for the analog delay shelf, jackfields and power supplies can be traced in the same manner as described above.

Equipment designators are identified below:

- D100 - Modem

D300 - Digital Delay Shelf

D500 - GETC Interface Module


A700 - Audio Processing Shelf # 2

D900 - Control Panel
- D200 - Analog Delay Shelf

A400 - Audio Processing Shelf # 1


A600 - Jackfield

D800 - Universal Sync Shelf

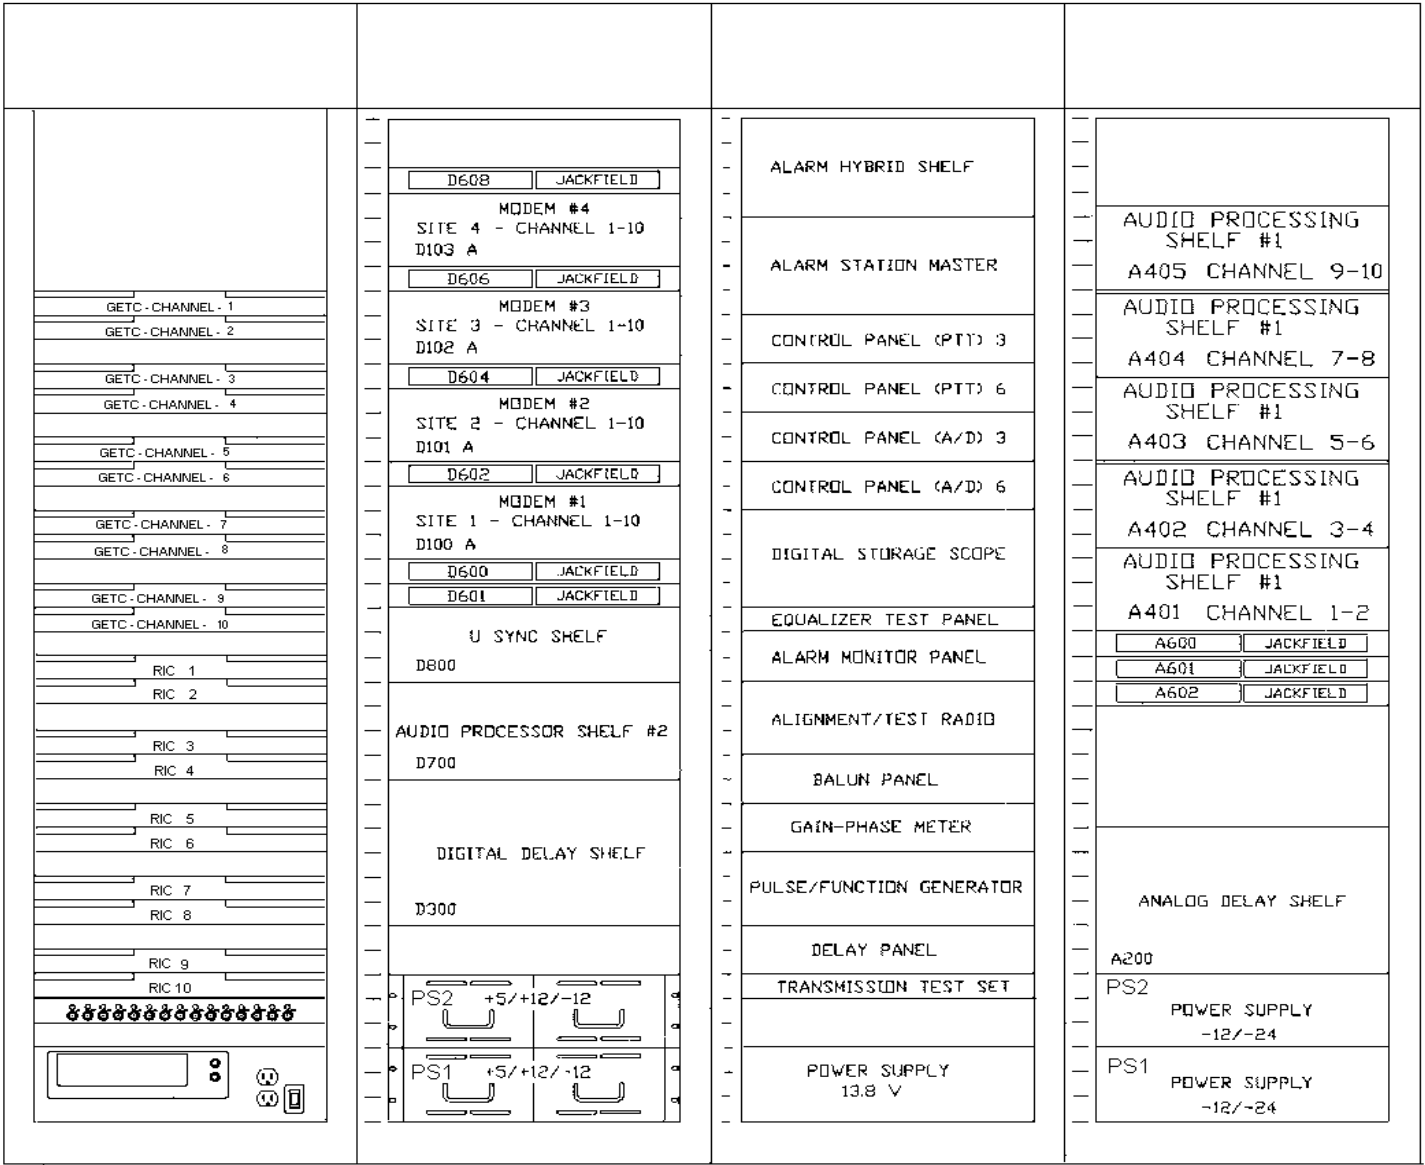


SEE 344A4222 FOR
MODULE IDENTIFICATION
AND CONNECTION LIST

4 SITE 10 CHANNEL
Equipment Rackup, Front View
(19D904160 Sh. 4, Rev. 3)

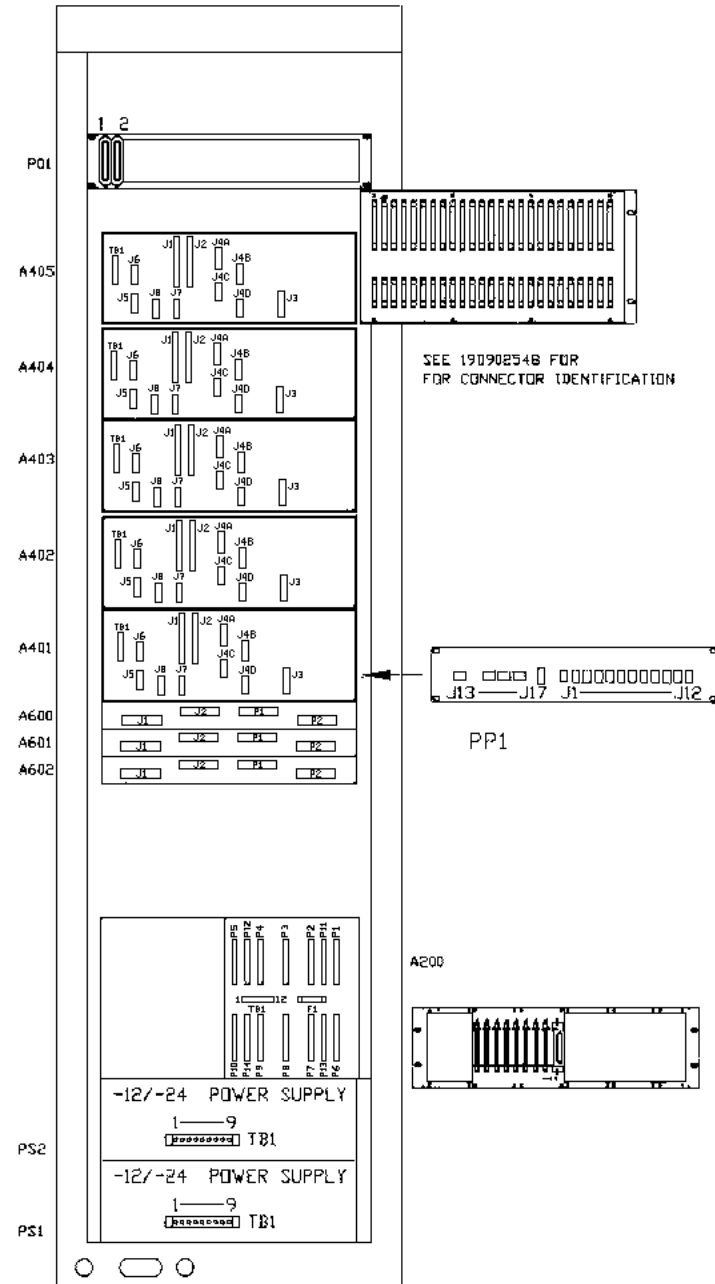

② RACK 2
REAR VIEW

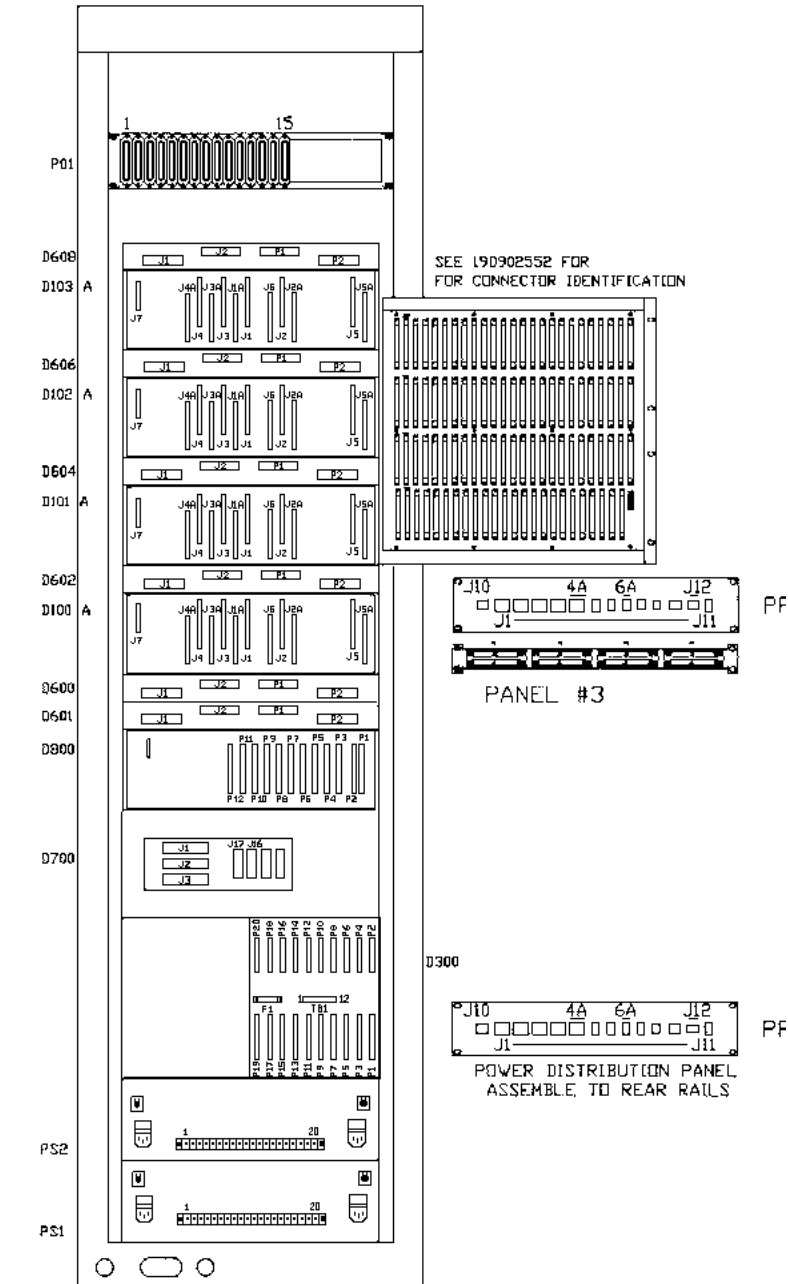

① RACK 1
REAR VIEW

SEE 344A4222 FOR
MODULE IDENTIFICATION
AND CONNECTION LIST

4 SITE 10 CHANNEL Equipment Rackup, Rear View

(19D904160 Sh. 5, Rev. 3)

MODULE LOCATION IN RACKS		SITE 1-4, CHANNELS 1-10
SHELF AND MODULE IDENTIFICATION		
DIGITAL DELAY SHELF		19D902531G21
DIGITAL DELAY MODULE		19D902524P1
ANALOG DELAY SHELF		19D902531G3, G6
ANALOG DELAY MODULE		19D902526P1
ANALOG PROCESSING SHELF #1		19D902543G1
COMPRESSOR MODULE		19A149739P1
AUDIO BRIDGE MODULE		19D902458P1
EQUALIZER MODULE		19A149738P1
UNIVERSAL SYNC SHELF		19D902541G1
ALARM MODULE		19D902334P1
DIGITAL SELECTOR (150 BAUD/CLK)		19D902519P1
2400 BAUD MODEM MODULE		19D902521P1
UNIVERSAL SYNC MODULE		19D902517P1
ANALOG PROCESSING SHELF #2		19D902544G1
AUDIO BRIDGE MODULE		19D902458P1
MULTITONE I/F MODULE		19D902515P1
MODEM SHELF		19D902542G1
MODEM I/F MODULE (9600 BAUD)		19D902442P1
MODEM MODULE (9600 BAUD)		19A705178P1
DIGITAL DELAY SHELF		
SLOT 01	DIGITAL DELAY MODULE	SITE #01, CHANNELS 1-10
		SITE #02, CHANNELS 1-10
SLOT 02	DIGITAL DELAY MODULE	SITE #03, CHANNELS 1-10
		SITE #04, CHANNELS 1-10
UNIVERSAL SYNC SHELF		
SLOT 01	ALARM MODULE	
SLOT 02	150 BAUD DATA SELECTOR MODULE	
SLOT 03	FSK MODEM	

4 SITE 10 CHANNEL

Module Location & Identification

(344A4222 Sh. 1 Rev. 3)

SLOT 05	UNIVERSAL SYNC MODULE	CHANNELS 01-04
SLOT 06	UNIVERSAL SYNC MODULE	CHANNELS 05-08
SLOT 07	UNIVERSAL SYNC MODULE	CHANNELS 09-12
SLOT 12	9.6 CLOCK SELECTOR MODULE	
ANALOG PROCESSING SHELF #2		
SLOT 01	150 BAUD BRIDGE	
SLOT 02	MULTITONE MODULE	SITE 01-04
MODEM SHELF		
SLOT 01	MODEM INTERFACE MODULE	SITE #XX
SLOT 02	MODEM MODULE	CHANNEL 01
SLOT 03	MODEM INTERFACE MODULE	SITE #XX
SLOT 04	MODEM MODULE	CHANNEL 02
SLOT 05	MODEM INTERFACE MODULE	SITE #XX
SLOT 06	MODEM MODULE	CHANNEL 03
SLOT 07	MODEM INTERFACE MODULE	SITE #XX
SLOT 08	MODEM MODULE	CHANNEL 04
SLOT 09	MODEM INTERFACE MODULE	SITE #XX
SLOT 10	MODEM MODULE	CHANNEL 05
SLOT 11	MODEM INTERFACE MODULE	SITE #XX
SLOT 12	MODEM MODULE	CHANNEL 06
SLOT 13	MODEM INTERFACE MODULE	SITE #XX
SLOT 14	MODEM MODULE	CHANNEL 07
SLOT 15	MODEM INTERFACE MODULE	SITE #XX
SLOT 16	MODEM MODULE	CHANNEL 08
SLOT 17	MODEM INTERFACE MODULE	SITE #XX
SLOT 18	MODEM MODULE	CHANNEL 09
SLOT 19	MODEM INTERFACE MODULE	SITE #XX
SLOT 20	MODEM MODULE	CHANNEL 10
ANALOG DELAY SHELF, SITES 1-4 (4 SITES MAX)		
SLOT 01	ANALOG DELAY MODULE	SITE #01 CHANNELS 01-10
SLOT 03	ANALOG DELAY MODULE	SITE #02 CHANNELS 01-10
SLOT 05	ANALOG DELAY MODULE	SITE #03 CHANNELS 01-10
SLOT 07	ANALOG DELAY MODULE	SITE #04 CHANNELS 01-10

AUDIO PROCESSING SHELF #1	
SLOT #1	COMPRESSOR
SLOT #2	AUDIO BRIDGE
SLOT #3	EQUALIZER SITE #1
SLOT #4	EQUALIZER SITE #2
SLOT #5	EQUALIZER SITE #3
SLOT #6	EQUALIZER SITE #4
SLOT #7	COMPRESSOR
SLOT #8	AUDIO BRIDGE
SLOT #9	EQUALIZER SITE #1
SLOT #10	EQUALIZER SITE #2
SLOT #11	EQUALIZER SITE #3
SLOT #12	EQUALIZER SITE #4

FROM			TO		CABLE	
DIGITAL RACK #1						
S1	DIGITAL CROSS CONNECT	J57	MODEM SHELF D100-A		J01	19D903985P14
S1	DIGITAL CROSS CONNECT	J87	MODEM SHELF D100-A		J02	19D903985P16
S2	DIGITAL CROSS CONNECT	J58	MODEM SHELF D101-A		J01	19D903985P14
S2	DIGITAL CROSS CONNECT	J88	MODEM SHELF D101-A		J02	19D903985P14
S3	DIGITAL CROSS CONNECT	J59	MODEM SHELF D102-A		J01	19D903985P14
S3	DIGITAL CROSS CONNECT	J89	MODEM SHELF D102-A		J02	19D903985P14
S4	DIGITAL CROSS CONNECT	J60	MODEM SHELF D103-A		J01	19D903985P14
S4	DIGITAL CROSS CONNECT	J90	MODEM SHELF D103-A		J02	19D903985P14
S1	MODEM SHELF D100-A	J04	JACKFIELD	D602	P01	19D903985P22
S1	MODEM SHELF D100-A	J06	JACKFIELD	D602	P02	19D903985P22
S2	MODEM SHELF D101-A	J04	JACKFIELD	D604	P01	19D903985P22
S2	MODEM SHELF D101-A	J06	JACKFIELD	D604	P02	19D903985P22
S3	MODEM SHELF D102-A	J04	JACKFIELD	D606	P01	19D903985P22
S3	MODEM SHELF D102-A	J06	JACKFIELD	D606	P02	19D903985P22
S4	MODEM SHELF D103-A	J04	JACKFIELD	D608	P01	19D903985P22
S4	MODEM SHELF D103-A	J06	JACKFIELD	D608	P02	19D903985P22
S1	C01-10 DIGITAL CROSS CONNECT	J27	DIGITAL DELAY D300		P01	19D903985P16
S2	C01-10 DIGITAL CROSS CONNECT	J28	DIGITAL DELAY D300		P02	19D903985P16
S3	C01-10 DIGITAL CROSS CONNECT	J29	DIGITAL DELAY D300		P03	19D903985P16
S4	C01-10 DIGITAL CROSS CONNECT	J30	DIGITAL DELAY D300		P04	19D903985P16

C01	DIGITAL CROSS CONNECT	J01	CONNECTOR PANEL #01	P01	19D903985P24	ANALOG RACK 2					
C02	DIGITAL CROSS CONNECT	J02	CONNECTOR PANEL #01	P02	19D903985P24						
C03	DIGITAL CROSS CONNECT	J03	CONNECTOR PANEL #01	P03	19D903985P24	A	JACKFIELD A600	P01	ANALOG PROC SHELF A401	J01	19D903985P22
C04	DIGITAL CROSS CONNECT	J04	CONNECTOR PANEL #01	P04	19D903985P24	C01-02	ANALOG CROSS CONNECT	J01	ANALOG PROC SHELF A401	J03	19D903985P64
C05	DIGITAL CROSS CONNECT	J05	CONNECTOR PANEL #01	P05	19D903985P24	C03-04	ANALOG CROSS CONNECT	J02	ANALOG PROC SHELF A402	J03	19D903985P64
C06	DIGITAL CROSS CONNECT	J06	CONNECTOR PANEL #01	P06	19D903985P24	C05-06	ANALOG CROSS CONNECT	J03	ANALOG PROC SHELF A403	J03	19D903985P62
C07	DIGITAL CROSS CONNECT	J07	CONNECTOR PANEL #01	P07	19D903985P24	C07-08	ANALOG CROSS CONNECT	J04	ANALOG PROC SHELF A404	J03	19D903985P62
C08	DIGITAL CROSS CONNECT	J08	CONNECTOR PANEL #01	P08	19D903985P24	C09-10	ANALOG CROSS CONNECT	J05	ANALOG PROC SHELF A405	J03	19D903985P62
C09	DIGITAL CROSS CONNECT	J09	CONNECTOR PANEL #01	P09	19D903985P24	S1 C1-20	ANALOG CROSS CONNECT	J26	ANALOG DELAY SHELF A200	P01	19D903985P18
C10	DIGITAL CROSS CONNECT	J10	CONNECTOR PANEL #01	P10	19D903985P24	S2 C1-20	ANALOG CROSS CONNECT	J27	ANALOG DELAY SHELF A200	P02	19D903985P18
						S3 C1-20	ANALOG CROSS CONNECT	J28	ANALOG DELAY SHELF A200	P03	19D903985P18
C1-4	DIGITAL CROSS CONNECT	J71	UNIV. SYNC SHELF D800	P05	19D903985P16	S4 C1-20	ANALOG CROSS CONNECT	J29	ANALOG DELAY SHELF A200	P04	19D903985P18
C5-8	DIGITAL CROSS CONNECT	J72	UNIV. SYNC SHELF D800	P06	19D903985P16	S 1-2-3	ANALOG CROSS CONNECT	J31	ANALOG DELAY SHELF A200	P11	19D903985P18
C9-12	DIGITAL CROSS CONNECT	J73	UNIV. SYNC SHELF D800	P07	19D903985P16	S 4	ANALOG CROSS CONNECT	J32	ANALOG DELAY SHELF A200	P12	19D903985P18
A	DIGITAL CROSS CONNECT	J26	JACKFIELD D600	P01	19D903985P24	S1 C1-20	ANALOG DELAY SHELF A200	P06	JACKFIELD A600	P02	19D903985P24
A	ANALOG PROC SHELF D700	J02	JACKFIELD D600	P02	19D903985P52	S2 C1-20	ANALOG DELAY SHELF A200	P07	JACKFIELD A601	P01	19D903985P24
A	DIGITAL CROSS CONNECT	J79	ANALOG PROC SHELF D700	J01	19D903985P36	S3 C1-20	ANALOG DELAY SHELF A200	P08	JACKFIELD A601	P02	19D903985P24
A	DIGITAL CROSS CONNECT	J82	ANALOG PROC SHELF D700	J03	19D903985P36	S4 C1-20	ANALOG DELAY SHELF A200	P09	JACKFIELD A602	P01	19D903985P24
A	DIGITAL CROSS CONNECT	J67	UNIV. SYNC SHELF D800	P01	19D903985P16						
A	DIGITAL CROSS CONNECT	J68	UNIV. SYNC SHELF D800	P02	19D903985P16	C 3-4	ANALOG PROC SHELF A401	J02	ANALOG PROC SHELF A402	J01	19D903985P12
A	DIGITAL CROSS CONNECT	J69	UNIV. SYNC SHELF D800	P03	19D903985P16	C 5-6	ANALOG PROC SHELF A402	J02	ANALOG PROC SHELF A403	J01	19D903985P12
A	DIGITAL CROSS CONNECT	J70	UNIV. SYNC SHELF D800	P04	19D903985P16	C 7-8	ANALOG PROC SHELF A403	J02	ANALOG PROC SHELF A404	J01	19D903985P12
A	DIGITAL CROSS CONNECT	J78	UNIV. SYNC SHELF D800	P12	19D903985P16	C 9-10	ANALOG PROC SHELF A404	J02	ANALOG PROC SHELF A405	J01	19D903985P12
A	DIGITAL CROSS CONNECT	J98	PANEL #3 A1	P01	19D903985P14						
A	PANEL #3 A1	P02	JACKFIELD D601	J01	19D903985P36	ACC	ANALOG CROSS CONNECT	J33	CONNECTOR PANEL #01	P01	19D903985P24
A	DIGITAL CROSS CONNECT	J99	PANEL #3 A2	P01	19D903985P14	ACC	ANALOG CROSS CONNECT	J34	CONNECTOR PANEL #01	P02	19D903985P24
A	PANEL #3 A2	P02	JACKFIELD D601	P01	19D903985P26						
A	DIGITAL CROSS CONNECT	J85	PANEL #3 A3	P01	19D903985P14		ANALOG DELAY SHELF 19D902531G3				
A	PANEL #3 A3	P02	JACKFIELD D601	J02	19D903985P36	150 DATA	ANALOG DELAY SHELF A200	P13	PANEL #3 B1	J01	19D903985P14
A	DIGITAL CROSS CONNECT	J86	PANEL #3 A4	P01	19D903985P14	150 DATA	ANALOG DELAY SHELF A200	P14	PANEL #3 B1	J02	19D903985P14
A	PANEL #3 A4	P02	JACKFIELD D601	P02	19D903985P26	150 DATA	PANEL #3 B1	J05	JACKFIELD A602	P02	19D903985P52
DCC	DIGITAL CROSS CONNECT	J80	CONNECTOR PANEL #01	P11	19D903985P24		ANALOG DELAY SHELF 19D902531G6				
DCC	DIGITAL CROSS CONNECT	J81	CONNECTOR PANEL #01	P12	19D903985P24	150 DATA	ANALOG DELAY SHELF A200	P13	JACKFIELD A602	P02	19D903985P24
DCC	DIGITAL CROSS CONNECT	J83	CONNECTOR PANEL #01	P13	19D903985P24						
DCC	DIGITAL CROSS CONNECT	J84	CONNECTOR PANEL #01	P14	19D903985P24						

RACK #1 - POWER CONNECTIONS

PP1	POWER PANEL #01	P05	DIGITAL DELAY SHELF TB1	19D903880P721
PP1	POWER PANEL #01	P07	UNIVERSAL SYNC SHELF TB1	19D903880P784
PP1	POWER PANEL #01	P08	ANALOG PROC SHELF #2 P16/P17	19D903880P733
PS1	TB1-01	YELLOW	+5	BUS+5
PS1	TB1-02	YELLOW	+5	
PS1	TB1-03	YELLOW	+5	
PS1	TB1-04	YELLOW	+5	BUS+5
PS1	TB1-05	YELLOW	+5	
PS1	TB1-06	YELLOW	+5	
PS1	TB1-07	BLACK	GND	BUSGD
PS1	TB1-08	BLACK	GND	
PS1	TB1-09	BLACK	GND	
PS1	TB1-10	BLACK	GND	BUSGD
PS1	TB1-11	BLACK	GND	
PS1	TB1-12	BLACK	GND	
PS1	TB1-13	ORANGE	+12	BUS+12
PS1	TB1-14	BLUE	-12	BUS-12
PS1	TB1-14	BLUE	-12	BUS-12
PS1	TB1-15	BLACK	GND	BUSGD
PS1	TB1-16	BROWN	+5 SENS	BUS+5
PS1	TB1-17	WHITE	RTN SENS	BUSGD
PP2	POWER PANEL #02	P01	MODEM SHELF D100A	TB1 19D903880P714
PP2	POWER PANEL #02	P02	MODEM SHELF D101A	TB1 19D903880P714
PP2	POWER PANEL #02	P03	MODEM SHELF D102A	TB1 19D903880P714
PP2	POWER PANEL #02	P04	MODEM SHELF D103A	TB1 19D903880P714
PS2	TB1-01	YELLOW	+5	BUS+5
PS2	TB1-02	YELLOW	+5	
OS2	TB1-03	YELLOW	+5	
PS2	TB1-04	YELLOW	+5	BUS+5
PS2	TB1-05	YELLOW	+5	
PS2	TB1-06	YELLOW	+5	
PS2	TB1-07	BLACK	GND	BUSGD
PS2	TB1-08	BLACK	GND	
PS2	TB1-09	BLACK	GND	


4 SITE 10 CHANNEL
Digital Rack 1, Power Connections
(344A4222 Sh. 5 Rev. 3)

PS2	TB1-10	BLACK	GND	BUSGD
PS2	TB1-11	BLACK	GND	
PS2	TB1-12	BLACK	GND	
PS2	TB1-13	ORANGE	+12	BUS+12
PS2	TB1-14	BLUE	-12	BUS-12
PS2	TB1-14	BLUE	-12	BUS-12
PS2	TB1-15	BLACK	GND	BUSGD
PS2	TB1-16	BROWN	+5 SENS	BUS+5
PS2	TB1-17	WHITE	RTN SENS	BUSGD

ANALOG RACK #2

PS1	POWER SUPPLY PS1	TB1-1/6	POWER SUPPLY PS2	TB1-1/6	19D903880P810
PS2	POWER PANEL #01	P13			19D903880P804
	P13-01	BLUE	-12	POWER SUPPLY PS2	TB1- #1
	P13-02	BLUE	-12	POWER SUPPLY PS2	TB1- #2
	P13-03	BLACK	GND	POWER SUPPLY PS2	TB1- #3
	P13-04	BLACK	GND	POWER SUPPLY PS2	TB1- #4
	P13-05	GREEN	-24	POWER SUPPLY PS2	TB1- #5
	P13-06	GREEN	-24	POWER SUPPLY PS2	TB1- #6
PP1	POWER PANEL #01	P01	ANALOG PROC SHELF A401	TB1	19D903880P774
PP1	POWER PANEL #01	P02	ANALOG PROC SHELF A402	TB1	19D903880P774
PP1	POWER PANEL #01	P03	ANALOG PROC SHELF A403	TB1	19D903880P774
PP1	POWER PANEL #01	P04	ANALOG PROC SHELF A404	TB1	19D903880P774
PP1	POWER PANEL #01	P05	ANALOG PROC SHELF A405	TB1	19D903880P774


4 SITE 10 CHANNEL
Analog Rack 2, Power Connections
(344A4222 Sh. 6 Rev. 3)

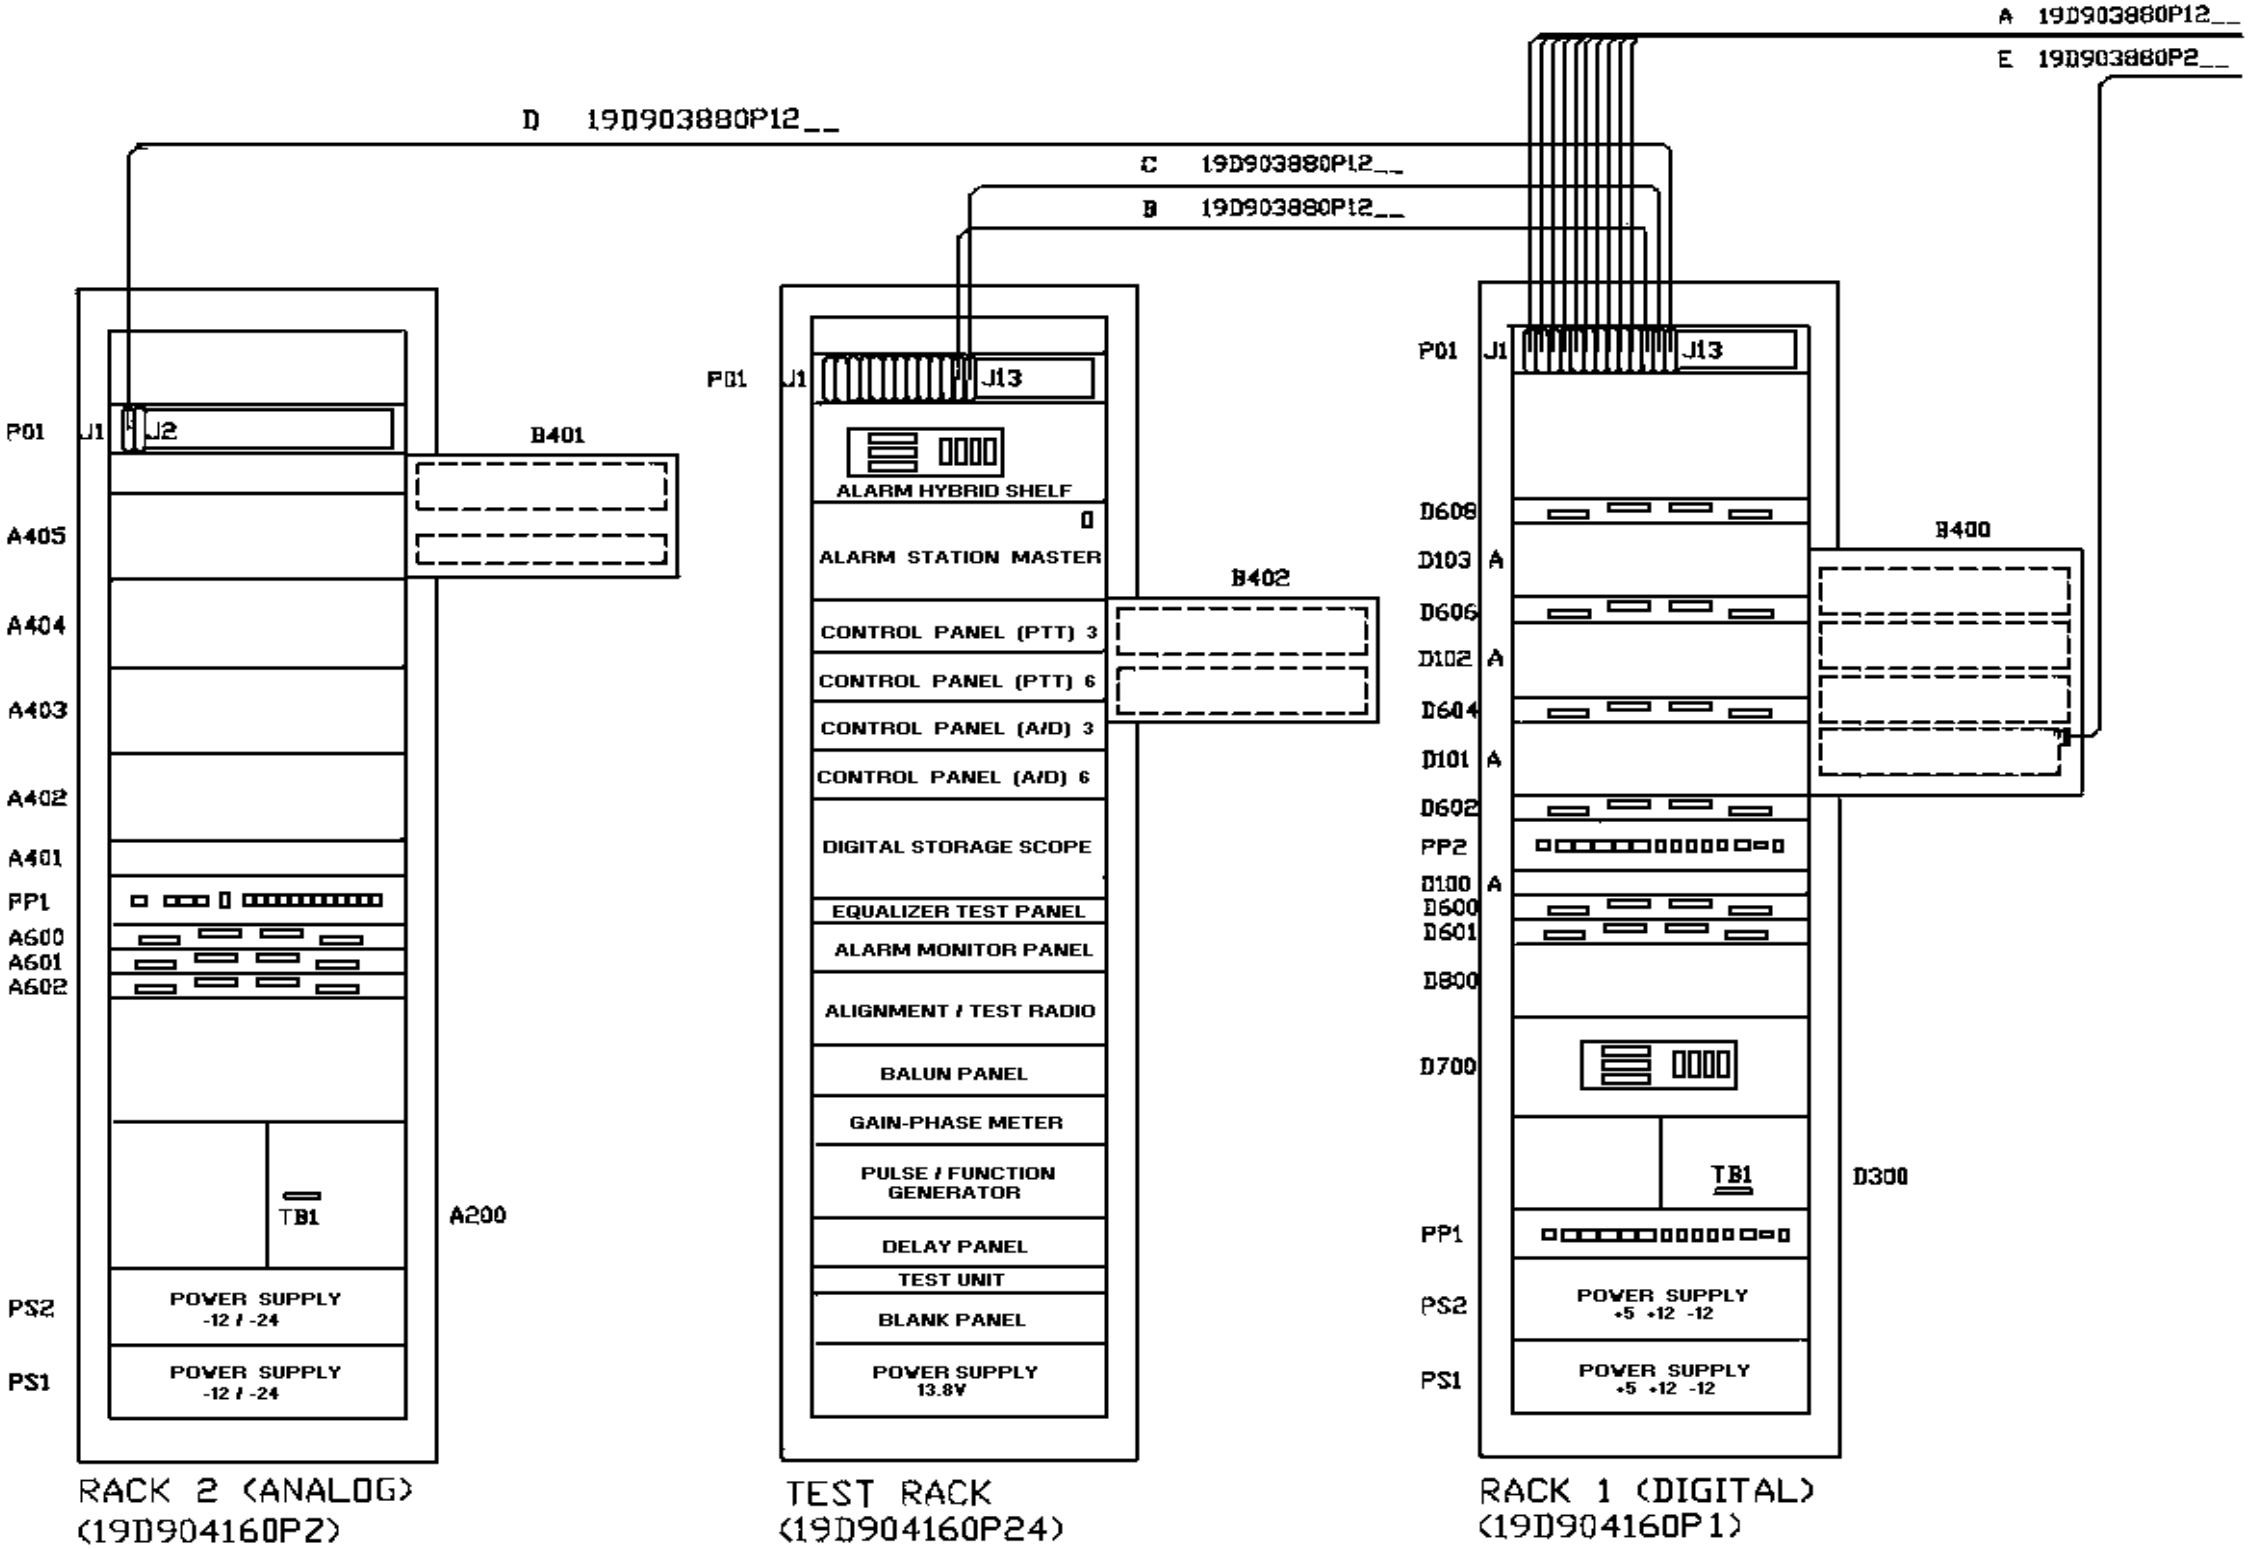

BACK VIEW OF RACKS -- WIRING IS DETAILED IN CONNECTION LIST 344A4883

4 SITE 10 CHANNEL CONFIGURATION
Signal Cabling, Interrack & External

(19C852391 Sh. 1 Rev. 0)

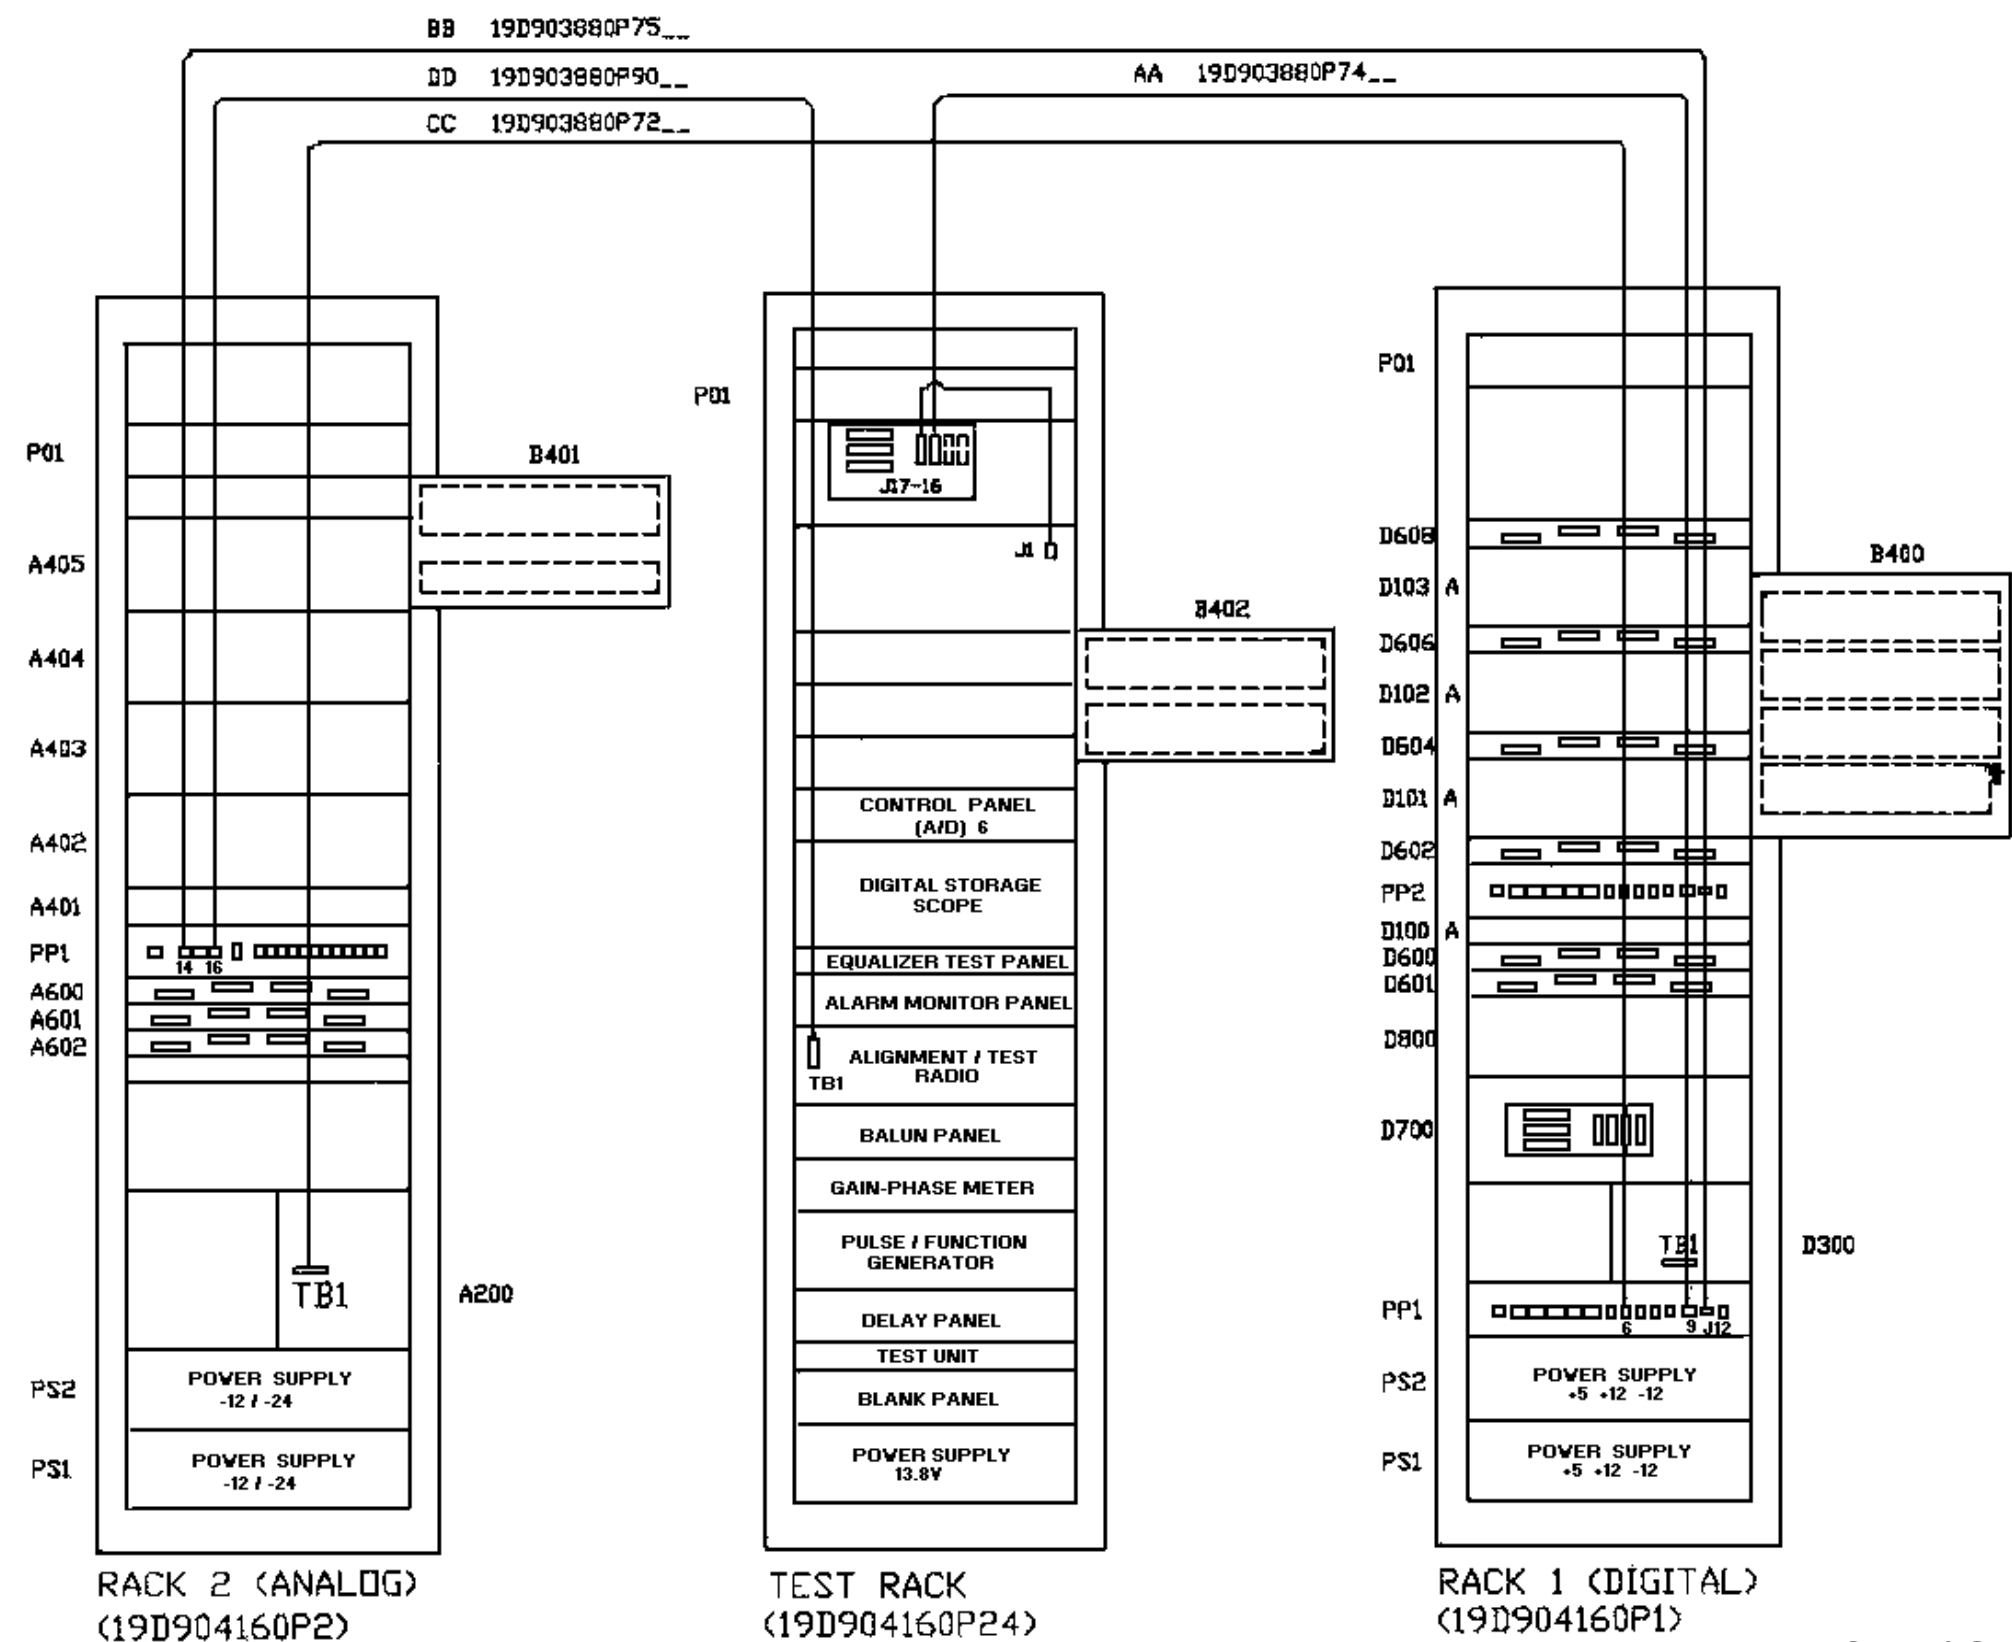

BACK VIEW OF RACKS -- WIRING IS DETAILED IN CONNECTION LIST 344A4883


4 SITE 10 CHANNEL CONFIGURATION
Signal Cabling, Interrack & External
(19C852391 Sh. 2 Rev. 0)


		CABLE		
RACK #1 CONNECTOR PANEL 01	P01	GETC RACK # GETC CH 01	19D903880P122	A
RACK #1 CONNECTOR PANEL 01	P02	GETC RACK # GETC CH 02	19D903880P122	A
RACK #1 CONNECTOR PANEL 01	P03	GETC RACK # GETC CH 03	19D903880P122	A
RACK #1 CONNECTOR PANEL 01	P04	GETC RACK # GETC CH 04	19D903880P122	A
RACK #1 CONNECTOR PANEL 01	P05	GETC RACK # GETC CH 05	19D903880P122	A
RACK #1 CONNECTOR PANEL 01	P06	GETC RACK # GETC CH 06	19D903880P123	A
RACK #1 CONNECTOR PANEL 01	P07	GETC RACK # GETC CH 07	19D903880P123	A
RACK #1 CONNECTOR PANEL 01	P08	GETC RACK # GETC CH 08	19D903880P123	A
RACK #1 CONNECTOR PANEL 01	P09	GETC RACK # GETC CH 09	19D903880P123	A
RACK #1 CONNECTOR PANEL 01	P10	GETC RACK # GETC CH 10	19D903880P123	A
RACK #1 CONNECTOR PANEL 01	P11	RACK TEST CONNECTOR PANEL 01 P12	19D903880P120	B
RACK #1 CONNECTOR PANEL 01	P12	RACK TEST CONNECTOR PANEL 01 P13	19D903880P120	C
RACK #1 CONNECTOR PANEL 01	P13	RACK #2 CONNECTOR PANEL 01 P01	19D903880P123	D
DIGITAL CROSS CONNECT	P97	GETC CAB. SYNC CTRL (SERIAL DATA J24)	19D903880P25	E
PP1 RACK #1 POWER PANEL #01	J09	TEST RACK ALARM SHELF J01	19D903880P740	AA
		HYBRID SHIELD J16		
		HYBRID SHIELD J17		
PP1 RACK #1 POWER PANEL #01	J12	RACK #2 POWER PANEL #01(-24) J14	19D903880P750	BB
PP1 RACK #1 POWER PANEL #01	J06	RACK #2 ANALOG DELAY SHELF TB1	19D903880P729	CC
PP1 RACK #2 POWER PANEL #01	J16	TEST PACK ALIGNMENT REC TB1	19D903880P900	DD

SITE CONTROLLER TO GETC/RIC RACK


RACK RIC/GETC GETC DATA 1-12	J14	SITE CNTRL GETC DATA 1-12 J14	19D903880P123	F
RACK GETC/RIC GETC SERIAL	J21	SITE CNTRL SERIAL MODULE J14	19D903880P162	G
RACK GETC/RIC RIC AUDIO 1-12	J14	SITE CNTRL RIC AUDIO 1-12 J14	19D903880P122	R
RACK GETC/RIC RIC SERIAL	J21	SITE CNTRL SERIAL MODULE J4	19D903880P162	S

4 SITE 10 CHANNEL
Analog Cross Connect/Analog Delay Shelf G3
(19C852278 Sh. 1 Rev. 3)

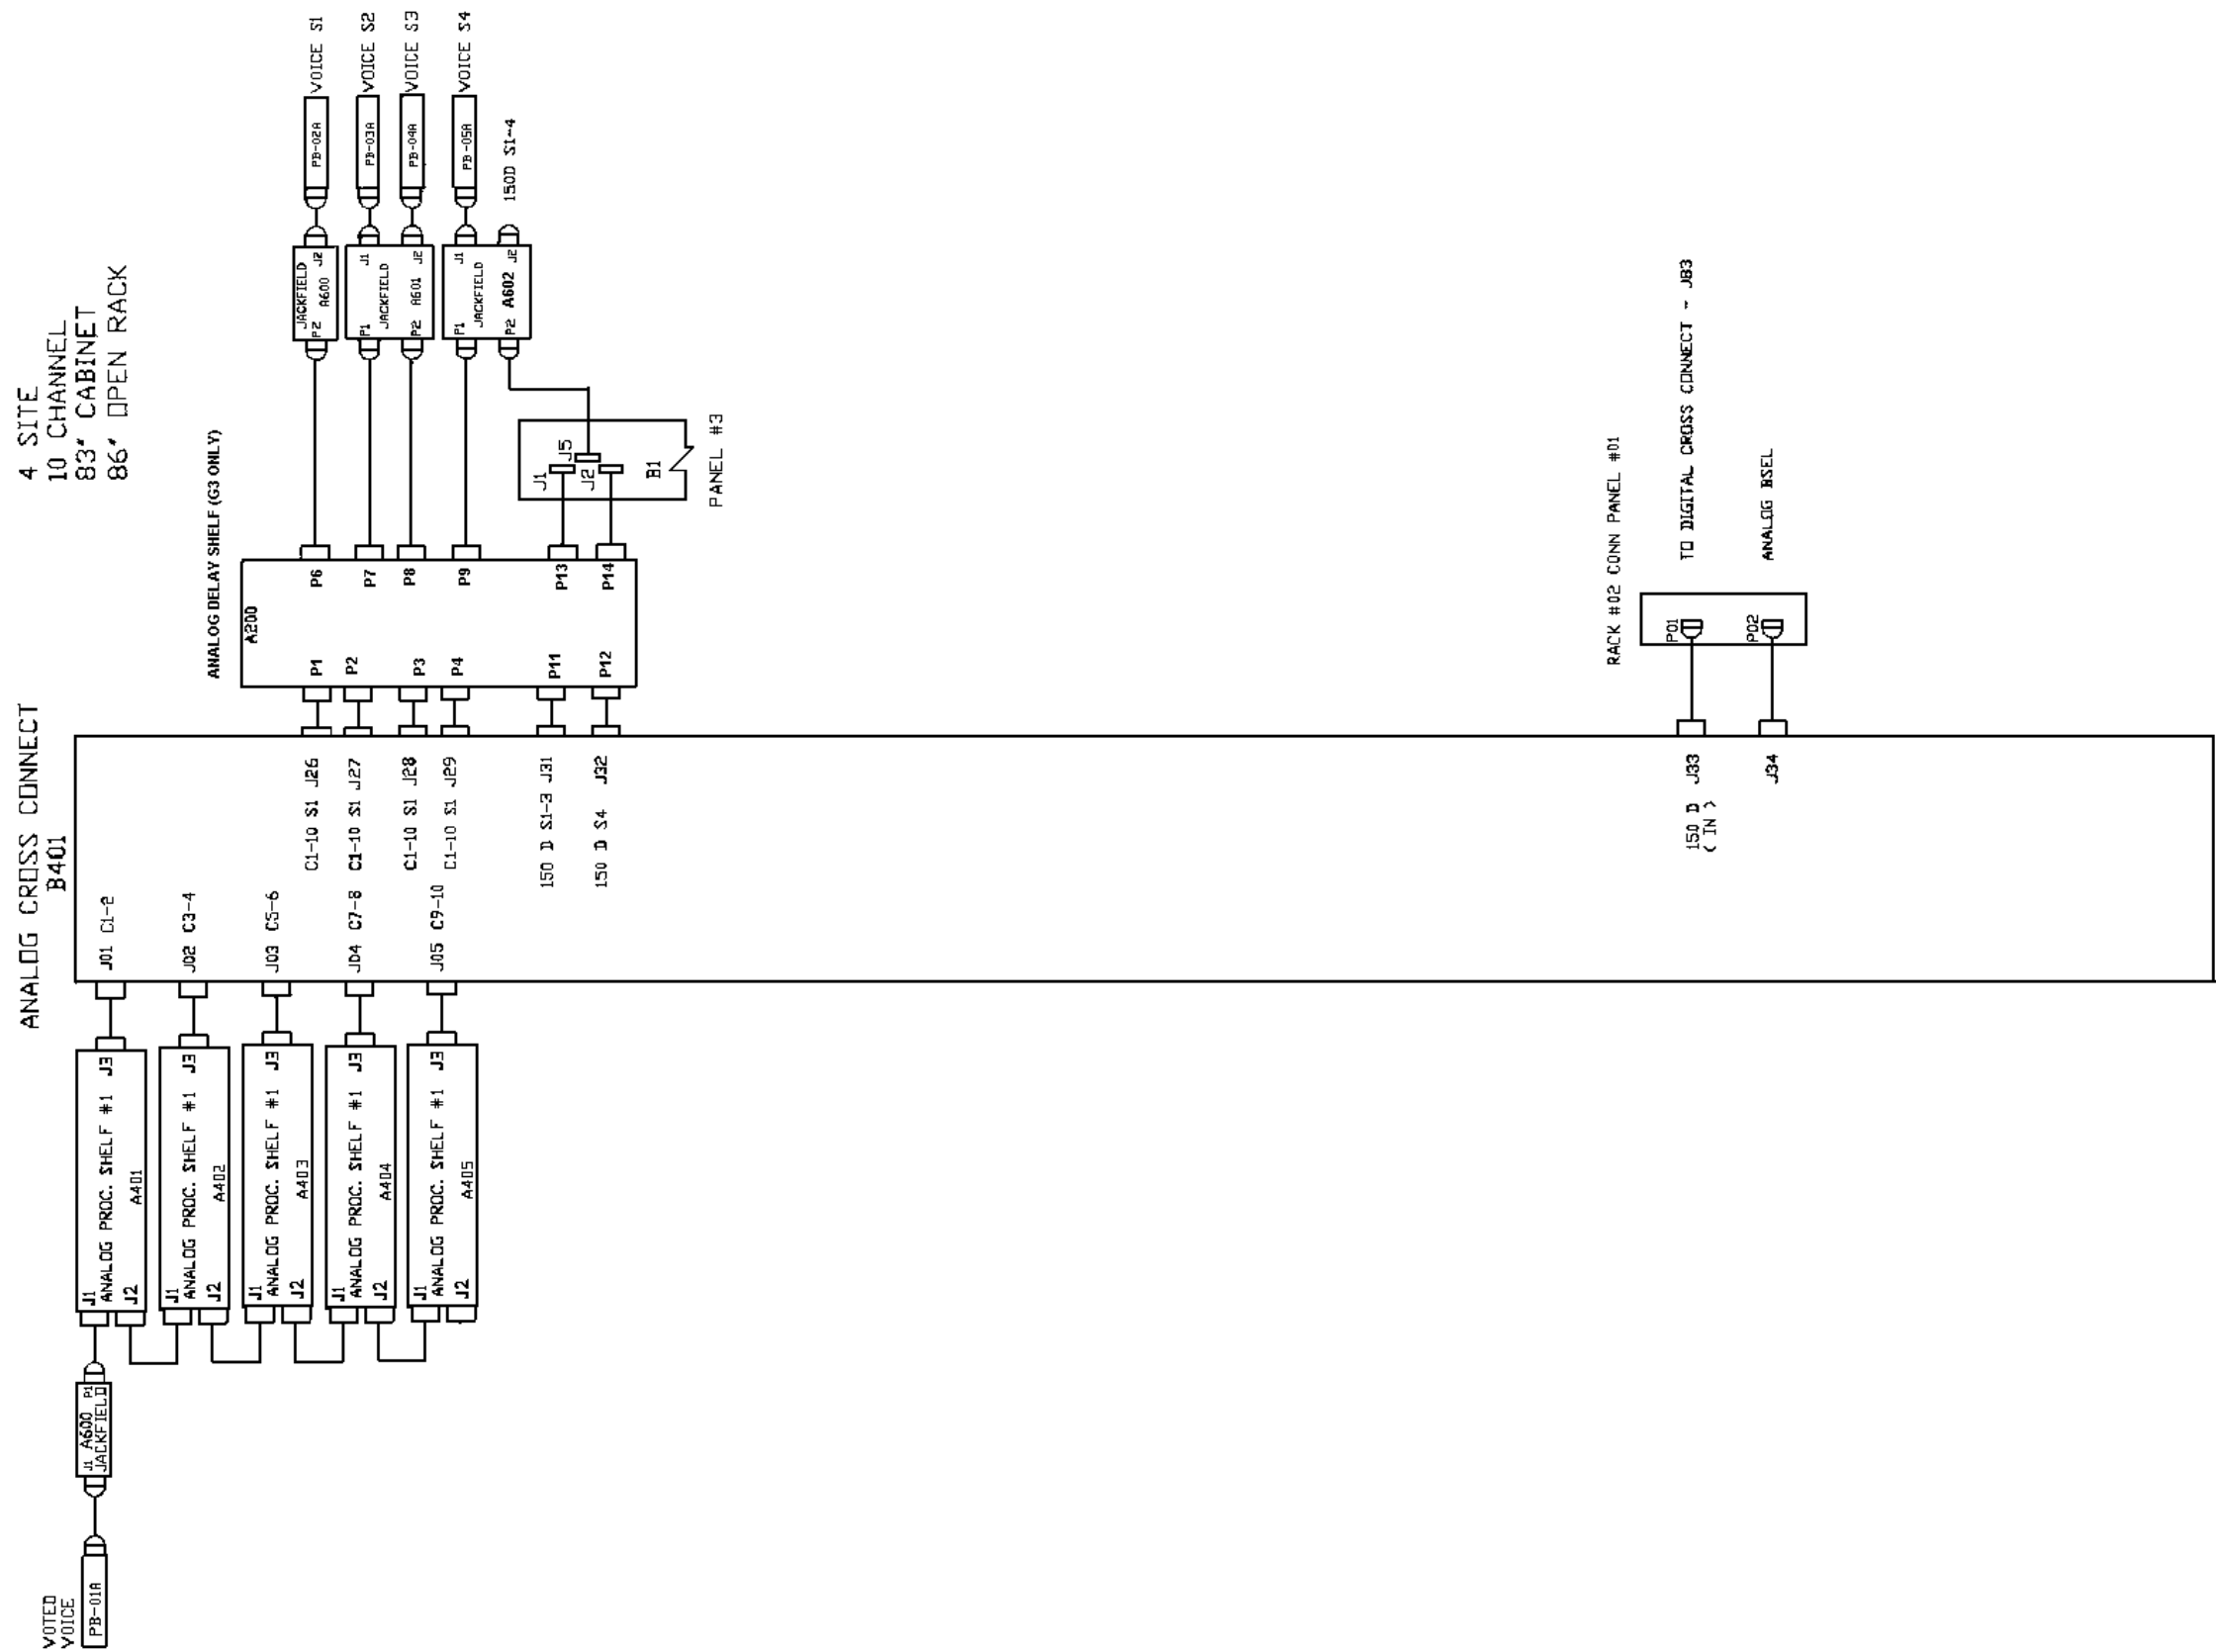

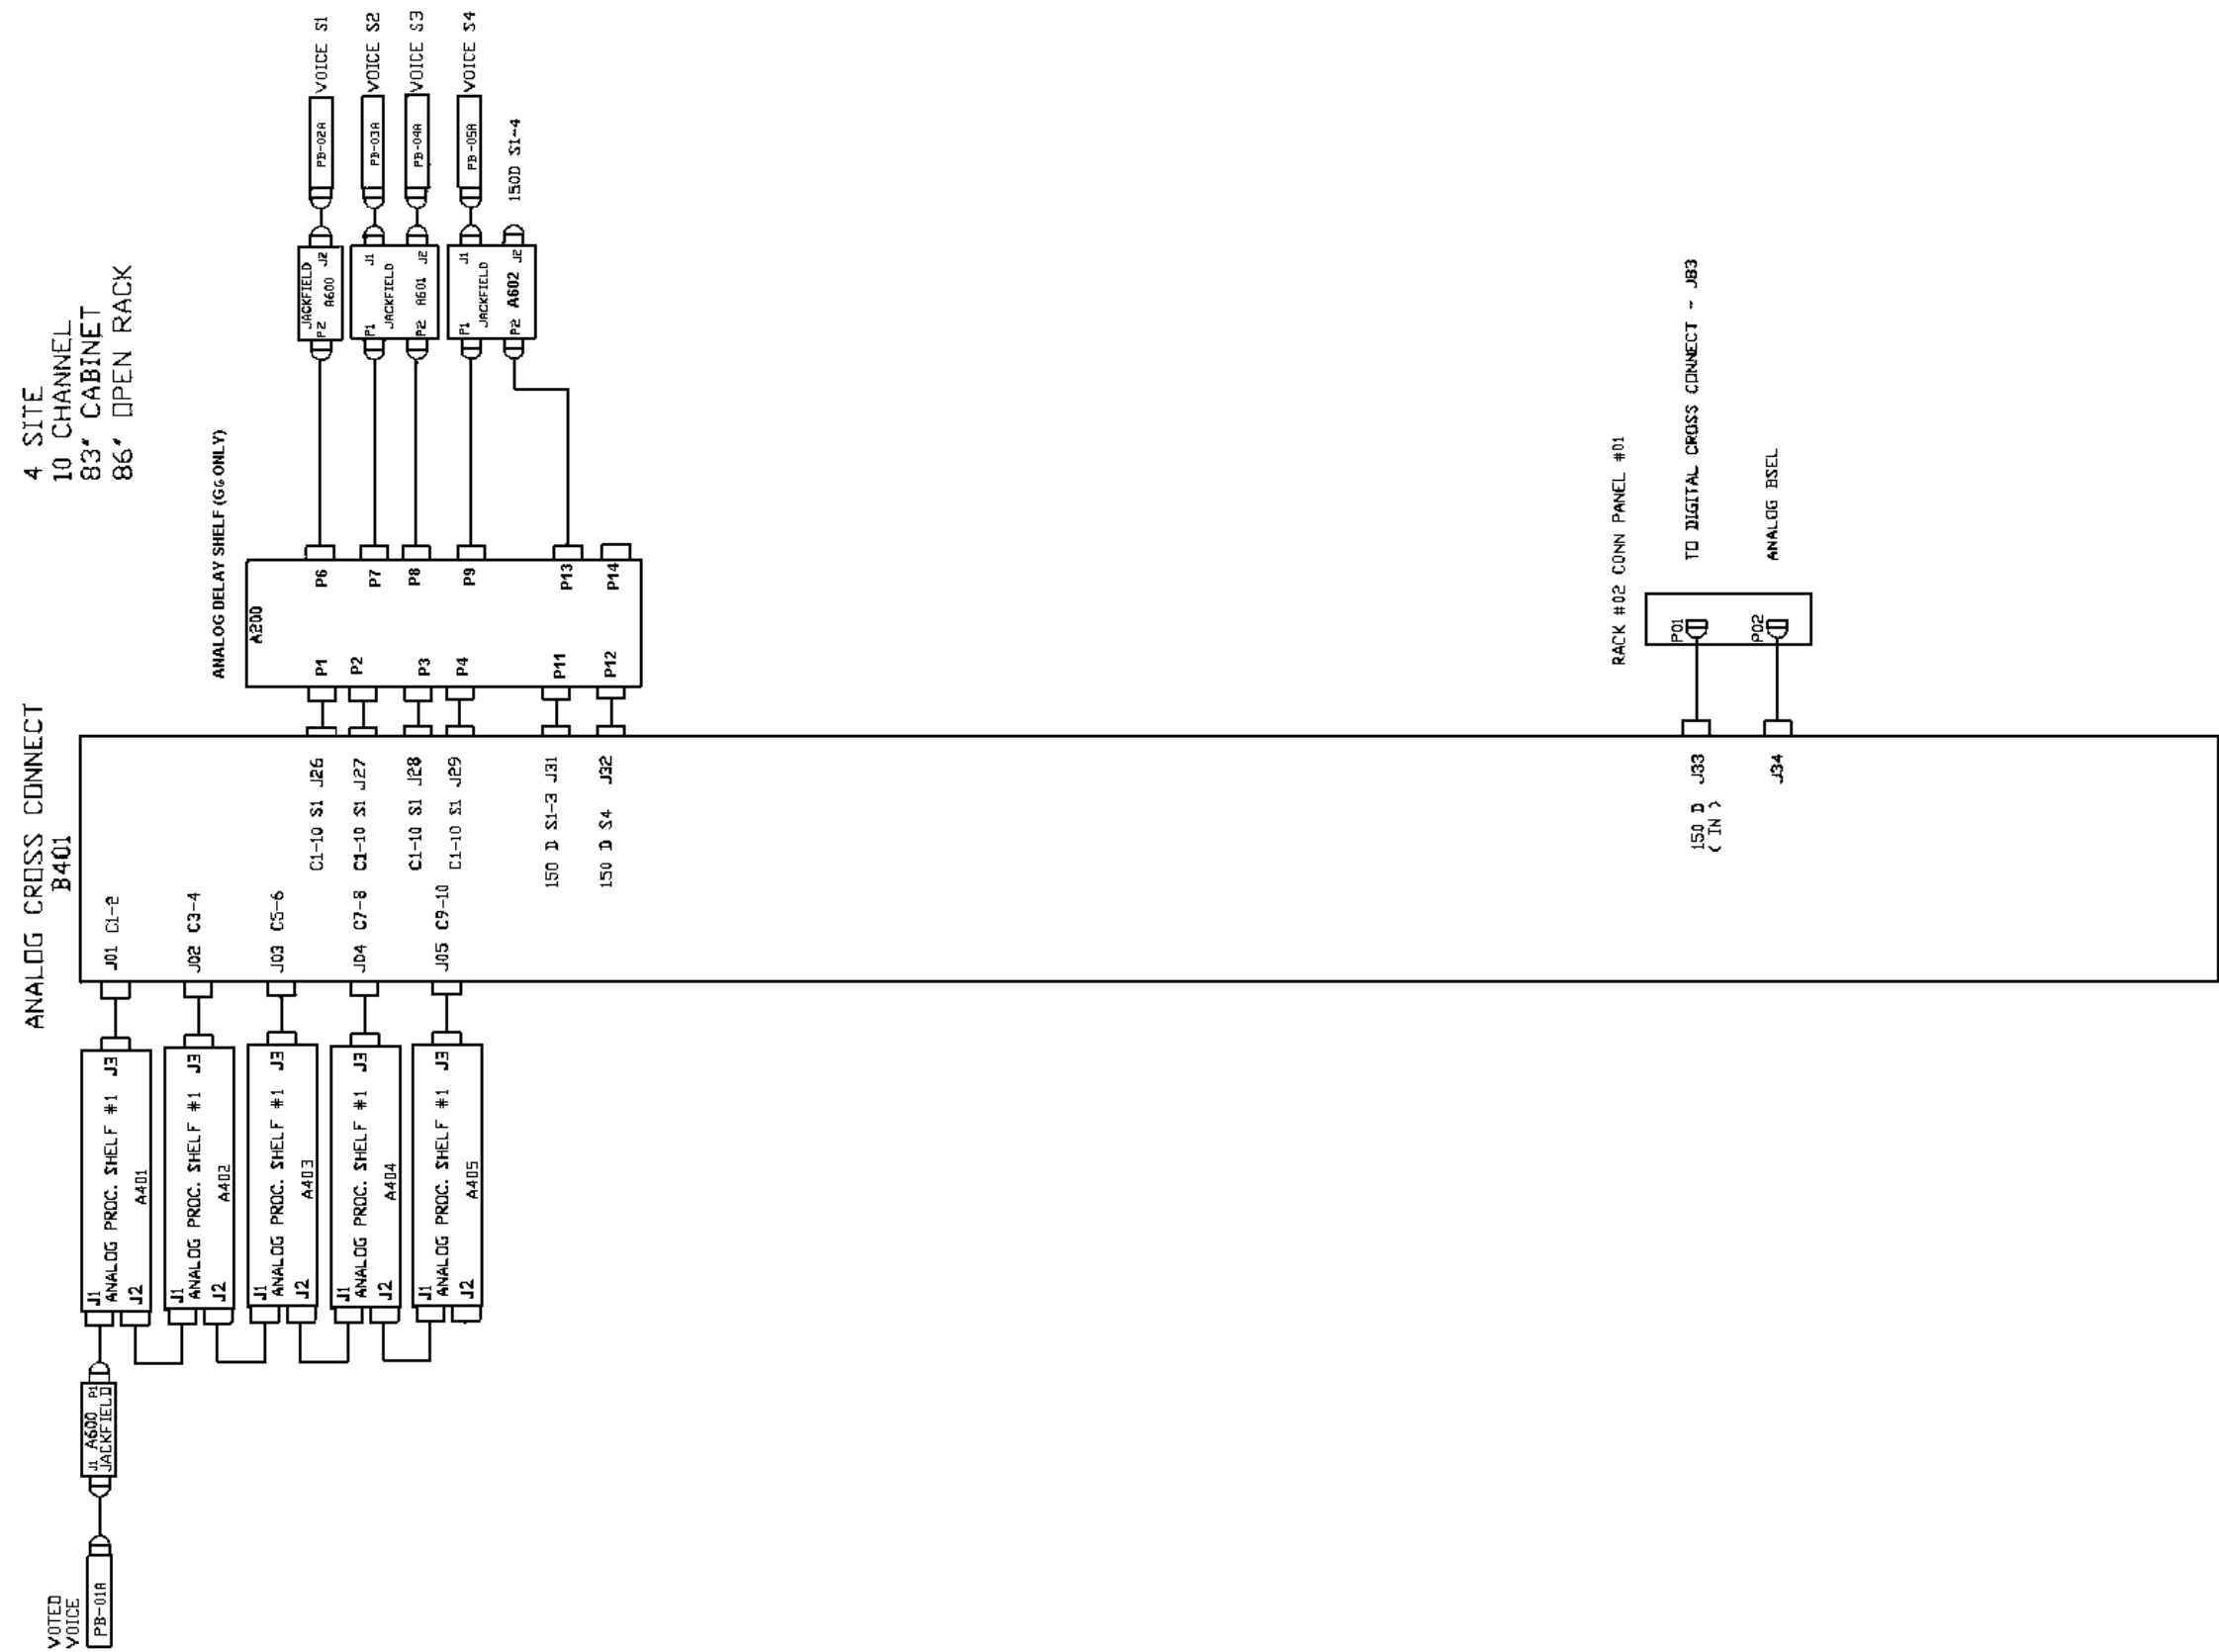


4 SITE 10 CHANNEL
Analog Cross Connect Wiring Diagram/Analog Delay Shelf G6
(19C852278 Sh. 2 Rev. 0)

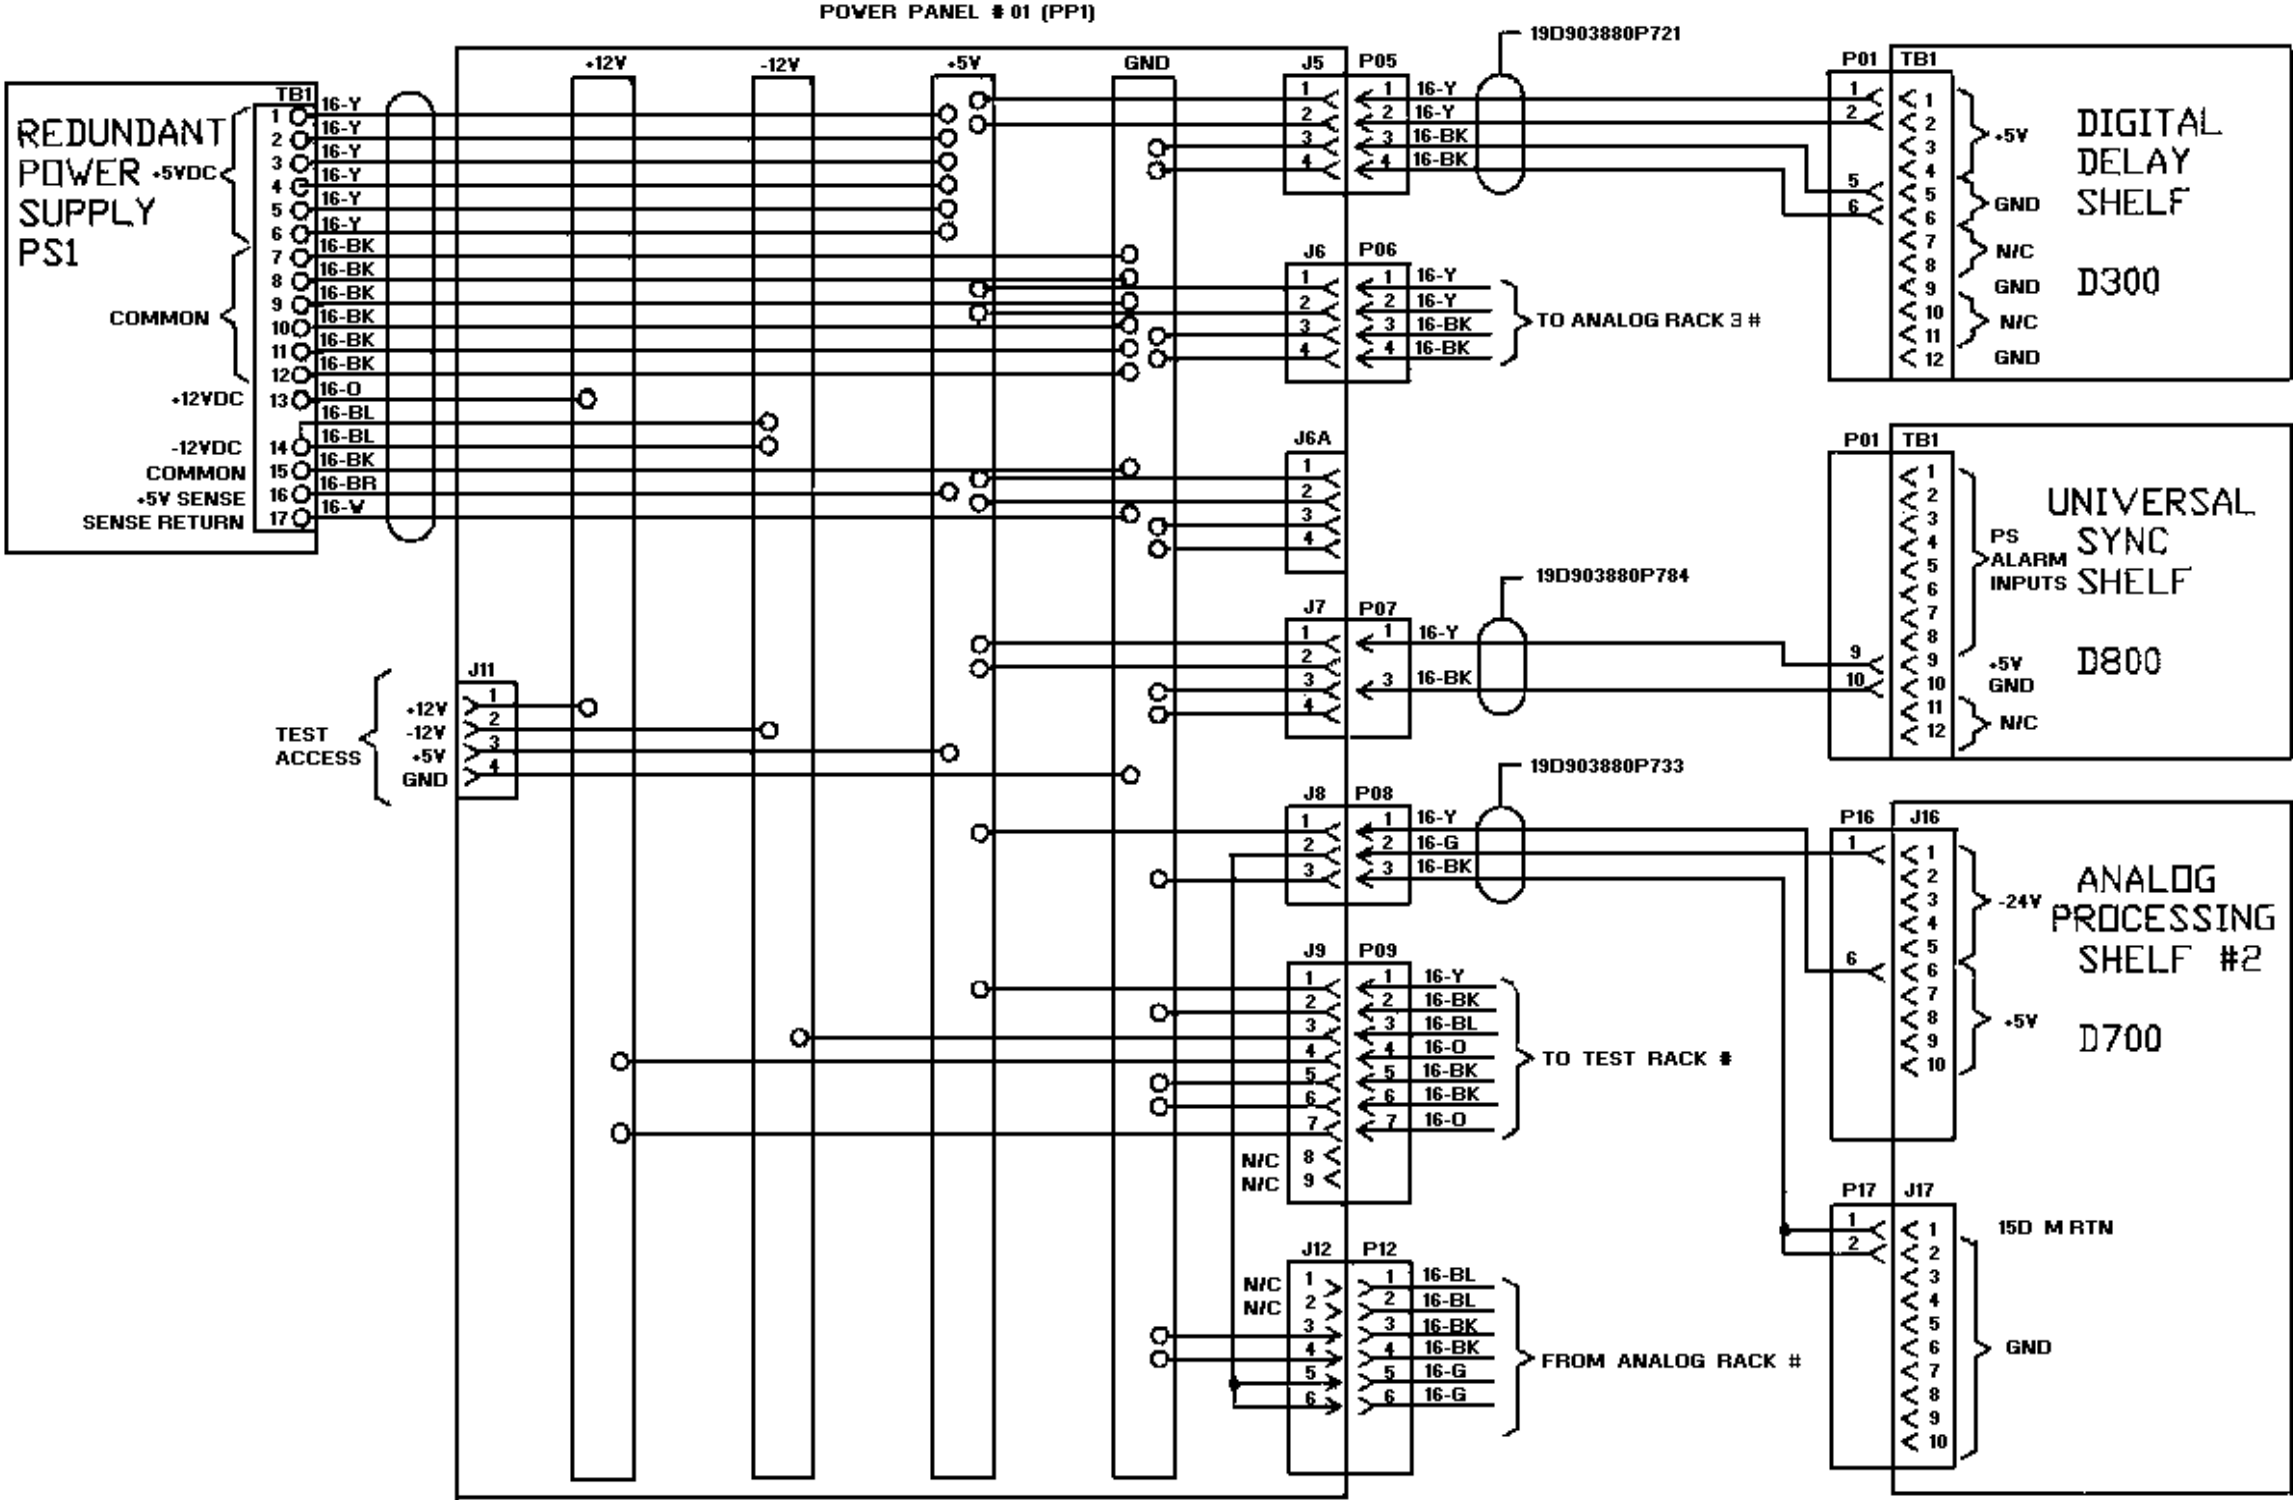

4 SITE 10 CHANNEL
Intrrack DC Power, Digital Rack 1
(19C852411 Sh. 1 Rev. 0)

DIGITAL RACK 1


WIRING IS DETAILED IN CONNECTION LIST 344A4222
* SEE 19C852391 SH 2 FOR INTERRACK POWER WIRING DIAGRAM

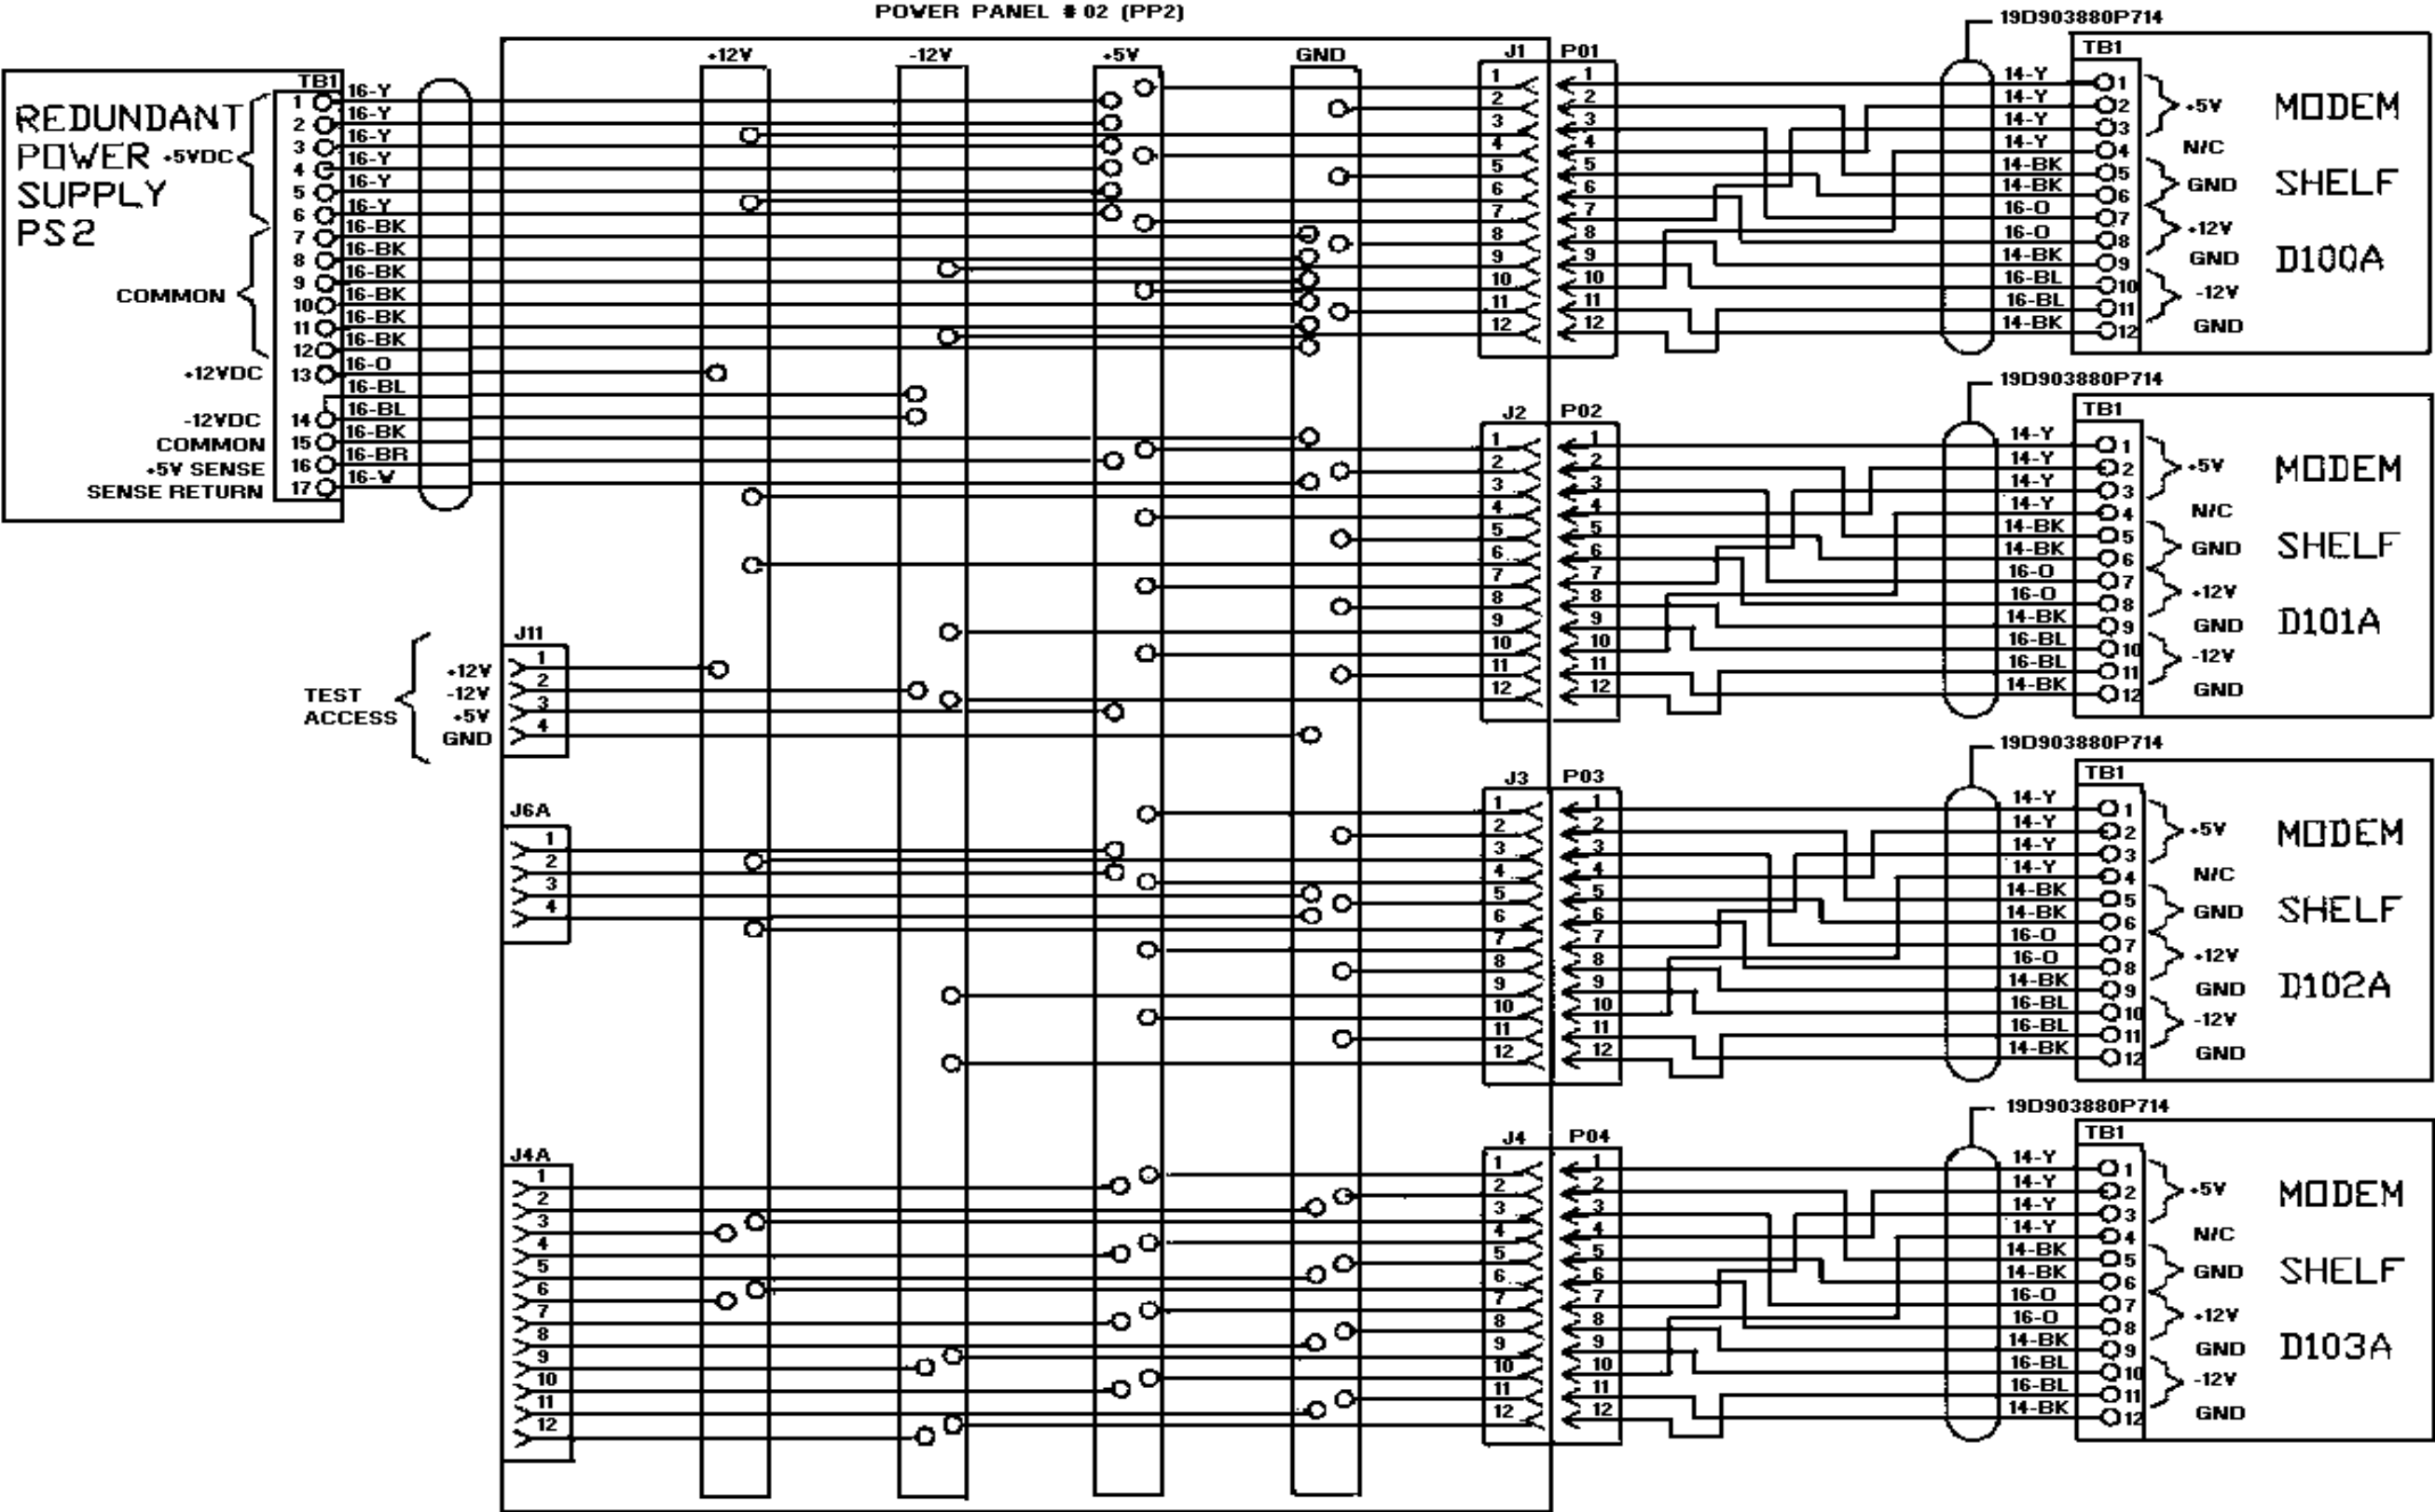

4 SITE 10 CHANNEL
Intrrack DC Power , Digital Rack 1 (Modems)
(19C852411 Sh. 2 Rev. 0)

DIGITAL RACK 1

WIRING IS DETAILED IN CONNECTION LIST 344A4222



WIRING IS DETAILED IN CONNECTION LIST 344A4222
* SEE 19C852391 SH 2 FOR INTERRACK POWER WIRING DIAGRAM

This page intentionally left blank