

MAINTENANCE MANUAL
SIMULCAST SYSTEM DRAWINGS
CONTROL POINT GETC/RIC EQUIPMENT
10/20/24 CHANNEL SYSTEM CONFIGURATIONS

TABLE OF CONTENTS


	<u>Page</u>
Description	1
GETC/RIC Cabinet Equipment Rackup, 10 Channels	1
Cable Connections, GETC/RIC Cabinet, 1-10 Channels	2
Cable Connections, GETCTo Voter Selector & DC Power Connections, 1-10 Channels	2
Cable Connections, RIC Audio/DC Power/Telephone Line, 1-10 Channels	3
Cable Connections, Line Transformer/RIC Audio, 10 Channels	3
DC Power Connections, 1-10 Channels	4
GETC/RIC Intra Cabinet Station Wiring Diagram, 1-10 Channels	5
GETC Application Assembly	6
Interrack Cabling, GETC/RIC/Site Controller, 1-10 Channels	7
DC Power Wiring Diagram, GETC/RIC Cabinet, 5 Channels	7
DC Power Wiring Diagram, GETC/RIC Cabinet, 1-10 Channels	8
DC Power Wiring Diagram, GETC Cabinet, 1-10 Channels	8
GETC Equipment Rackup, 20 Channels	9
Cable Connections, Control Point To GETC Cabinet, 20 Channels	10
DC Power Connections to GETCs, 20 Channels & Fuse Panel 1, 20 Channels	11
DC Power Connections Fuse Panel 2, 20 Channels	12
GETC Intra Cabinet Station Wiring Diagram, 20 Channels	13
GETC Interconnection & Block Diagram	14
RIC Interconnection & Block Diagram	14
Interrack Cabling, GETC/RIC/Site Controller, 20 Channels	15
DC Power Wiring Diagram, GETC Cabinet, 20 Channels	15,16
GETC Cable Connections, 24 Channels	16
GETC Cable Connections, GETCTo Voter Selector, 24 Channels	17
Cable Connections, DC Power To GETC & Fuse Panel, 24 Channels	18
GETC DC Power Connections, Fuse Panel 2, 24 Channels	18
System Interrack Cabling, 24 Channels	19
Intrarack Wiring, Station GETC, 24 Channels	20
DC Power Wiring Diagram, GETC Rack, 24 Channels	21
RIC Cabinet Equipment Rackup	22
RIC Cable Connections, Telephone Lines & DC Power	23
Cable Connections, Phone Line Transformer/RIC Audio/DC Power	23,24
Cable Connections, RIC Cabinet DC Power, Fuse Panel 2	24
RIC Interrack Cable Connections & Intra Cabinet Wiring, 20/24 Channels	25
RIC Application Assembly & DC Power Wiring Diagram, RIC Cabinet, 20/24 Channels	26,27

DESCRIPTION

This manual contains the equipment configuration drawings, cable interrack and intrarack interconnection drawings, and dc power wiring diagrams required for installation and maintenance of the GETC/RIC equipment in the Simulcast System. It also contains the cable connection lists that provide interconnect wiring information for the RIC (Radio Interface Control) audio, GETC data, phone interconnect, DC power, etc.. Being aware of the information contained on each of these drawings will make servicing the simulcast system easier.

The configuration drawings identify the hardware located in the equipment racks for all GETC/RIC equipment configurations - 1-10 channel, 20 channel, and 24 channel simulcast communication systems. The GETC/RIC equipment consists of a GETC/RIC cabinet and site controller for a system with less than 10 channels or a separate GETC, RIC and site controller cabinet for systems with more than 10 channels. The configuration drawings also show a rear view of the rack to identify the interconnecting jack configurations for each shelf.

Field installation drawings identify the interrack cabling between the GETC/RIC cabinet and the site controller and between the GETC/ RIC cabinet and the Simulcast System. Wiring details are provided in the cable connections lists. DC power wiring diagrams show the intrarack wiring details for the GETC/RIC equipment. The cable connection lists identify the rack, system cables, and the associated interconnecting jacks and the functions for which the interconnecting cables are used.

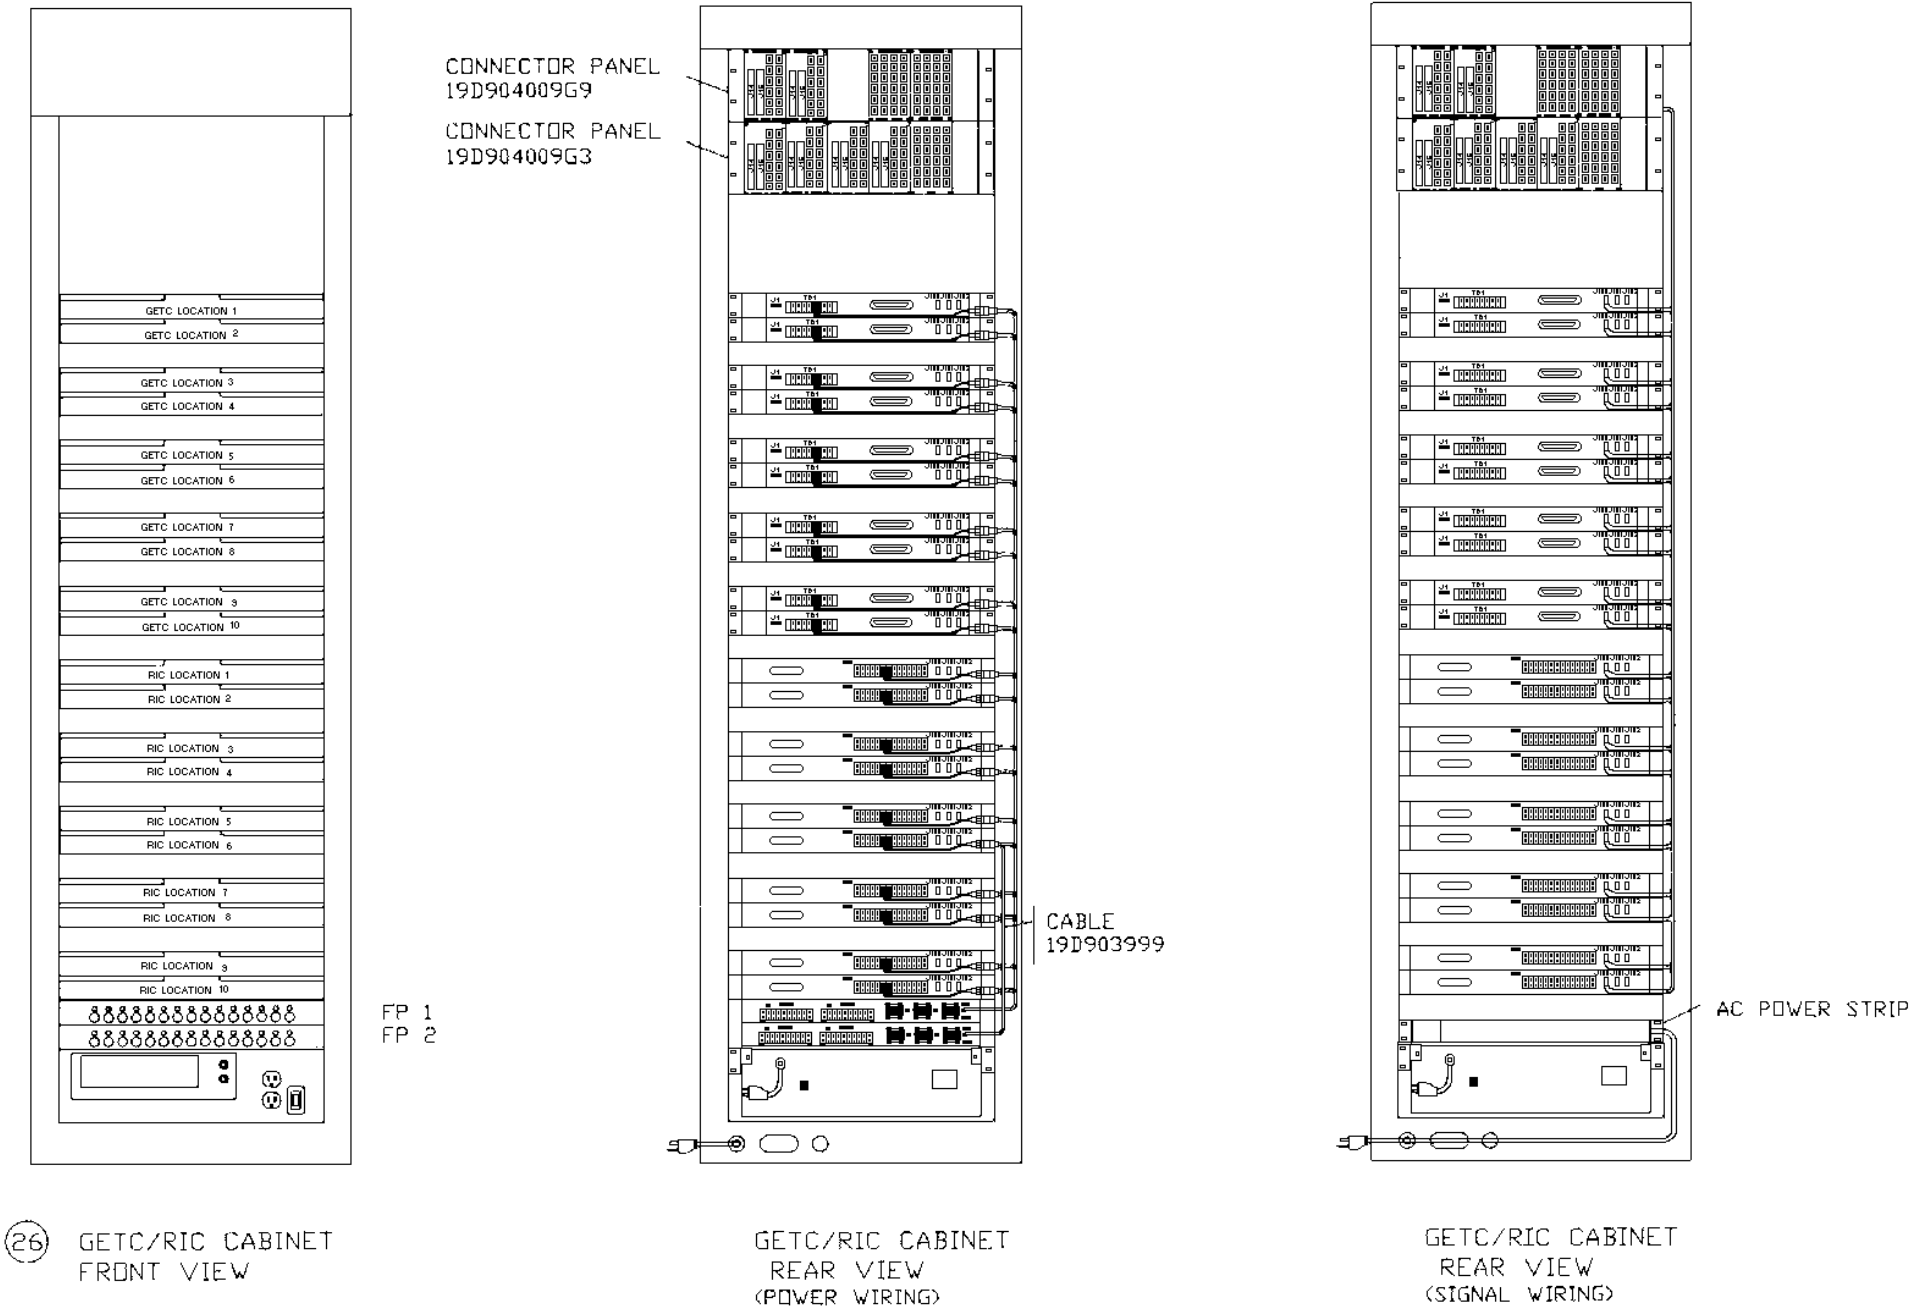

SEE 344A4265 FOR
MODULE IDENTIFICATION
AND CONNECTION LIST

GETC/RIC Cabinet Equipment Rackup, 10 Channels
19D904160P26

(19D904160 Sh. 14, Rev. 2)

GETC DATA MODULE #1

FROM		TO		CABLE
CHANNEL 01	J01	GETC	J100	19D903880P22
CHANNEL 02	J02	GETC	J100	19D903880P22
CHANNEL 03	J03	GETC	J100	19D903880P22
CHANNEL 04	J04	GETC	J100	19D903880P22
CHANNEL 05	J05	GETC	J100	19D903880P22
CHANNEL 06	J06	GETC	J100	19D903880P22
CHANNEL 07	J07	GETC	J100	19D903880P22
CHANNEL 08	J08	GETC	J100	19D903880P22
CHANNEL 09	J09	GETC	J100	19D903880P22
CHANNEL 10	J10	GETC	J100	19D903880P22
SERIAL MODULE				
CHANNEL 01	J01	GETC	J102	19D903880P22
CHANNEL 02	J02	GETC	J102	19D903880P22
CHANNEL 03	J03	GETC	J102	19D903880P22
CHANNEL 04	J04	GETC	J102	19D903880P22
CHANNEL 05	J05	GETC	J102	19D903880P22
CHANNEL 06	J06	GETC	J102	19D903880P22
CHANNEL 07	J07	GETC	J102	19D903880P22
CHANNEL 08	J08	GETC	J102	19D903880P22
CHANNEL 09	J09	GETC	J102	19D903880P22
CHANNEL 10	J10	GETC	J102	19D903880P22
GETC RESET				
CHANNEL 01	J01	GETC	TB1-1/6 *	19D903880P10
CHANNEL 02	J02	GETC	TB1-1/6 *	19D903880P10
CHANNEL 03	J03	GETC	TB1-1/6 *	19D903880P10
CHANNEL 04	J04	GETC	TB1-1/6 *	19D903880P10
CHANNEL 05	J05	GETC	TB1-1/6 *	19D903880P10
CHANNEL 06	J06	GETC	TB1-1/6 *	19D903880P10
CHANNEL 07	J07	GETC	TB1-1/6 *	19D903880P10
CHANNEL 08	J08	GETC	TB1-1/6 *	19D903880P10
CHANNEL 09	J09	GETC	TB1-1/6 *	19D903880P10
CHANNEL 10	J10	GETC	TB1-1/6 *	19D903880P10

GETC INHIBIT/VOTER TONE DETECT/RS232 TO VOTER SELECTOR-MODULE 1

FROM		TO		CABLE
CHANNEL 01	J01	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 02	J02	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 03	J03	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 04	J04	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 05	J05	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 06	J06	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 07	J07	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 08	J08	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 09	J09	GETC	TB1-2/3/4/5	19D903880P10
CHANNEL 10	J10	GETC	TB1-2/3/4/5	19D903880P10

Wire Connections:

BLUE/WHITE TO TB1-2	ORANGE/WHITE TO TB1-4
WHITE/BLUE TO TB1-3	WHITE/ORANGE TO TB1-5

DC POWER CONNECTION TO GETC

CHANNEL 01	J01	GETC	TB1-6/7*	19B802222P1
CHANNEL 02	J02	GETC	TB1-6/7*	19B802222P1
CHANNEL 03	J03	GETC	TB1-6/7*	19B802222P1
CHANNEL 04	J04	GETC	TB1-6/7*	19B802222P1
CHANNEL 05	J05	GETC	TB1-6/7*	19B802222P1
CHANNEL 06	J06	GETC	TB1-6/7*	19B802222P1
CHANNEL 07	J07	GETC	TB1-6/7*	19B802222P1
CHANNEL 08	J08	GETC	TB1-6/7*	19B802222P1
CHANNEL 09	J09	GETC	TB1-6/7*	19B802222P1
CHANNEL 10	J10	GETC	TB1-6/7*	19B802222P1

*Wire connections: connect 19B802222P1 Red Wire To TB1-7 & Black Wire To TB1-6

GETC CHANNEL 01 J01	19D903998P1
GETC CHANNEL 02 J02	
GETC CHANNEL 03 J03	
GETC CHANNEL 04 J04	
GETC CHANNEL 05 J05	
GETC CHANNEL 06 J06	
GETC CHANNEL 07 J07	
GETC CHANNEL 08 J08	
GETC CHANNEL 09 J09	
GETC CHANNEL 10 J10	

Wire Connections:

*Blue/white connect to TB1-1; White/blue connect to TB1-6

GETC/RIC Cabinet, 1-10 Channels

(344A4265 Sh. 1, Rev. 4)

GETC To Voter Selector & DC Power Connections, 1-10 Channels

(344A4265 Sh. 2, Rev. 4)

RIC AUDIO 1 TO LIX PANEL

FROM		TO	CABLE
CHANNEL 01	J01	RIC 01 J100	19D903880P41
CHANNEL 02	J02	RIC 02 J100	19D903880P41
CHANNEL 03	J03	RIC 03 J100	19D903880P41
CHANNEL 04	J0	RIC 04 J100	19D903880P41
CHANNEL 05	J05	RIC 05 J100	19D903880P41
CHANNEL 06	J06	RIC 06 J100	19D903880P41
CHANNEL 07	J07	RIC 07 J100	19D903880P41
CHANNEL 08	J08	RIC 08 J100	19D903880P41
CHANNEL 09	J09	RIC 09 J100	19D903880P41
CHANNEL 10	J10	RIC 10 J100	19D903880P41

DC POWER CONNECTIONS TO RIC

RIC CHANNEL 01	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 02	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 03	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 04	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 05	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 06	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 07	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 08	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 09	TB10-7 RED	TB10-6 BLACK	19B802222P1
RIC CHANNEL 10	TB10-7 RED	TB10-6 BLACK	19B802222P1

PHONE LINES TRANSFORMER MODULE 1 (PANEL 2--19D904009G)

CHANNEL 01	TRANS MODULE 1	J01	RIC 01 TB10-9/10/11/12*	19D903880P11
CHANNEL 02	TRANS MODULE 1	J02	RIC 02 TB10-9/10/11/12*	19D903880P11
CHANNEL 03	TRANS MODULE 1	J03	RIC 03 TB10-9/10/11/12*	19D903880P11
CHANNEL 04	TRANS MODULE 1	J04	RIC 04 TB10-9/10/11/12*	19D903880P11

PHONE LINES TRANSFORMER MODULE 2 (PANEL 2--19D904009G)

CHANNEL 05	TRANS MODULE 2	J01	RIC 05 TB10-9/10/11/12*	19D903880P11
CHANNEL 06	TRANS MODULE 2	J02	RIC 06 TB10-9/10/11/12*	19D903880P11
CHANNEL 07	TRANS MODULE 2	J03	RIC 07 TB10-9/10/11/12*	19D903880P11
CHANNEL 08	TRANS MODULE 2	J04	RIC 08 TB10-9/10/11/12*	19D903880P11

PHONE LINES TRANSFORMER MODULE 3 (PANEL 2--19D904009G)

CHANNEL 09	TRANS MODULE 3	J01	RIC 09 TB10-9/10/11/12*	19D903880P11
CHANNEL 10	TRANS MODULE 3	J02	RIC 10 TB10-9/10/11/12*	19D903880P11

*Wire Connections: Blue/White - TB10-9 White/Blue - TB10-10 Orange/White - TB10-11White/Orange - TB10-12

AUDIO IN 1

FROM		TO	CABLE
CHANNEL 01	TRANS MODULE 1	J01A	RIC AUDIO MODULE 1 J01 19D90388P160
CHANNEL 02	TRANS MODULE 1	J02A	RIC AUDIO MODULE 1 J02 19D90388P160
CHANNEL 03	TRANS MODULE 1	J03A	RIC AUDIO MODULE 1 J03 19D90388P160
CHANNEL 04	TRANS MODULE 1	J04A	RIC AUDIO MODULE 1 J04 19D90388P160
CHANNEL 05	TRANS MODULE 2	J01A	RIC AUDIO MODULE 1 J05 19D90388P160
CHANNEL 06	TRANS MODULE 2	J02A	RIC AUDIO MODULE 1 J06 19D90388P160
CHANNEL 07	TRANS MODULE 2	03A	RIC AUDIO MODULE 1 J07 19D90388P160
CHANNEL 08	TRANS MODULE 2	J04A	RIC AUDIO MODULE 1 J08 19D90388P160
CHANNEL 09	TRANS MODULE 3	J01A	RIC AUDIO MODULE 1 J09 19D90388P160
CHANNEL 10	TRANS MODULE 3	J02A	RIC AUDIO MODULE 1 J10 19D90388P160

SERIAL MODULE 'B'

CHANNEL 01	J01	RIC 01 J101	19D903880P211
CHANNEL 02	J02	RIC 02 J101	19D903880P211
CHANNEL 03	J03	RIC 03 J101	19D903880P211
CHANNEL 04	J04	RIC 04 J101	19D903880P211
CHANNEL 05	J05	RIC 05 J101	19D903880P211
CHANNEL 06	J06	RIC 06 J101	19D903880P211
CHANNEL 07	J07	RIC 07 J101	19D903880P211
CHANNEL 08	J08	RIC 08 J101	19D903880P211
CHANNEL 09	J09	RIC 09 J101	19D903880P211
CHANNEL 10	J10	RIC 10 J101	19D903880P211


RIC CHANNEL 01	J11	19D903998P1
RIC CHANNEL 02	J12	19D903998P1
RIC CHANNEL 03	J13	19D903998P1
RIC CHANNEL 04	J14	19D903998P1
RIC CHANNEL 05	J15	19D903998P1
RIC CHANNEL 06	J16	19D903999P1
RIC CHANNEL 07	J17	19D903999P1
RIC CHANNEL 08	J18	19D903999P1
RIC CHANNEL 09	J19	19D903999P1
RIC CHANNEL 10	J20	19D903999P1

DC POWER CONNECTION

FROM	TO	
FUSE PANEL 1	POWER SUPPLY	
TB1-1	P01-1	RED 19D903880P300
TB1-3	P01-1	RED
TB1-5	P01-1	RED
TB1-7	P01-1	RED
TB2-1	P01-2	BLACK 19D903880P301
TB2-3	P01-2	BLACK
TB2-5	P01-2	BLACK
TB2-7	P01-2	BLACK
TB1-1	TB1-2	7143961P1
TB1-3	TB1-4	7143961P1
TB1-5	TB1-6	7143961P1
TB1-7	TB1-8	7143961P1
TB2-1	TB2-2	7143961P1
TB2-3	TB2-4	7143961P1
TB2-5	TB2-6	7143961P1
TB2-7	TB2-8	7143961P1
J1	P1	19D903998P1
J2	P2	
J3	P3	
FUSE PANEL 2	POWER SUPPLY	
TB1-1	P01-3	RED 19D903880P300
TB1-3	P01-3	RED
TB1-5	P01-3	RED
TB1-7	P01-3	RED
TB2-1	P01-4	BLACK 19D903880P301
TB2-3	P01-4	BLACK
TB2-5	P01-4	BLACK
TB2-7	P01-4	BLACK
TB1-1	TB1-2	7143961P1
TB1-3	TB1-4	7143961P1
TB1-5	TB1-6	7143961P1
TB1-7	TB1-8	7143961P1
TB2-1	TB2-2	7143961P1
TB2-3	TB2-4	7143961P1
TB2-5	TB2-6	7143961P1
TB2-7	TB2-8	7143961P1
J1	P4	19D903999P1


DC Power Connections, 1-10 Channels

(344A4265 Sh. 5, Rev. 4)

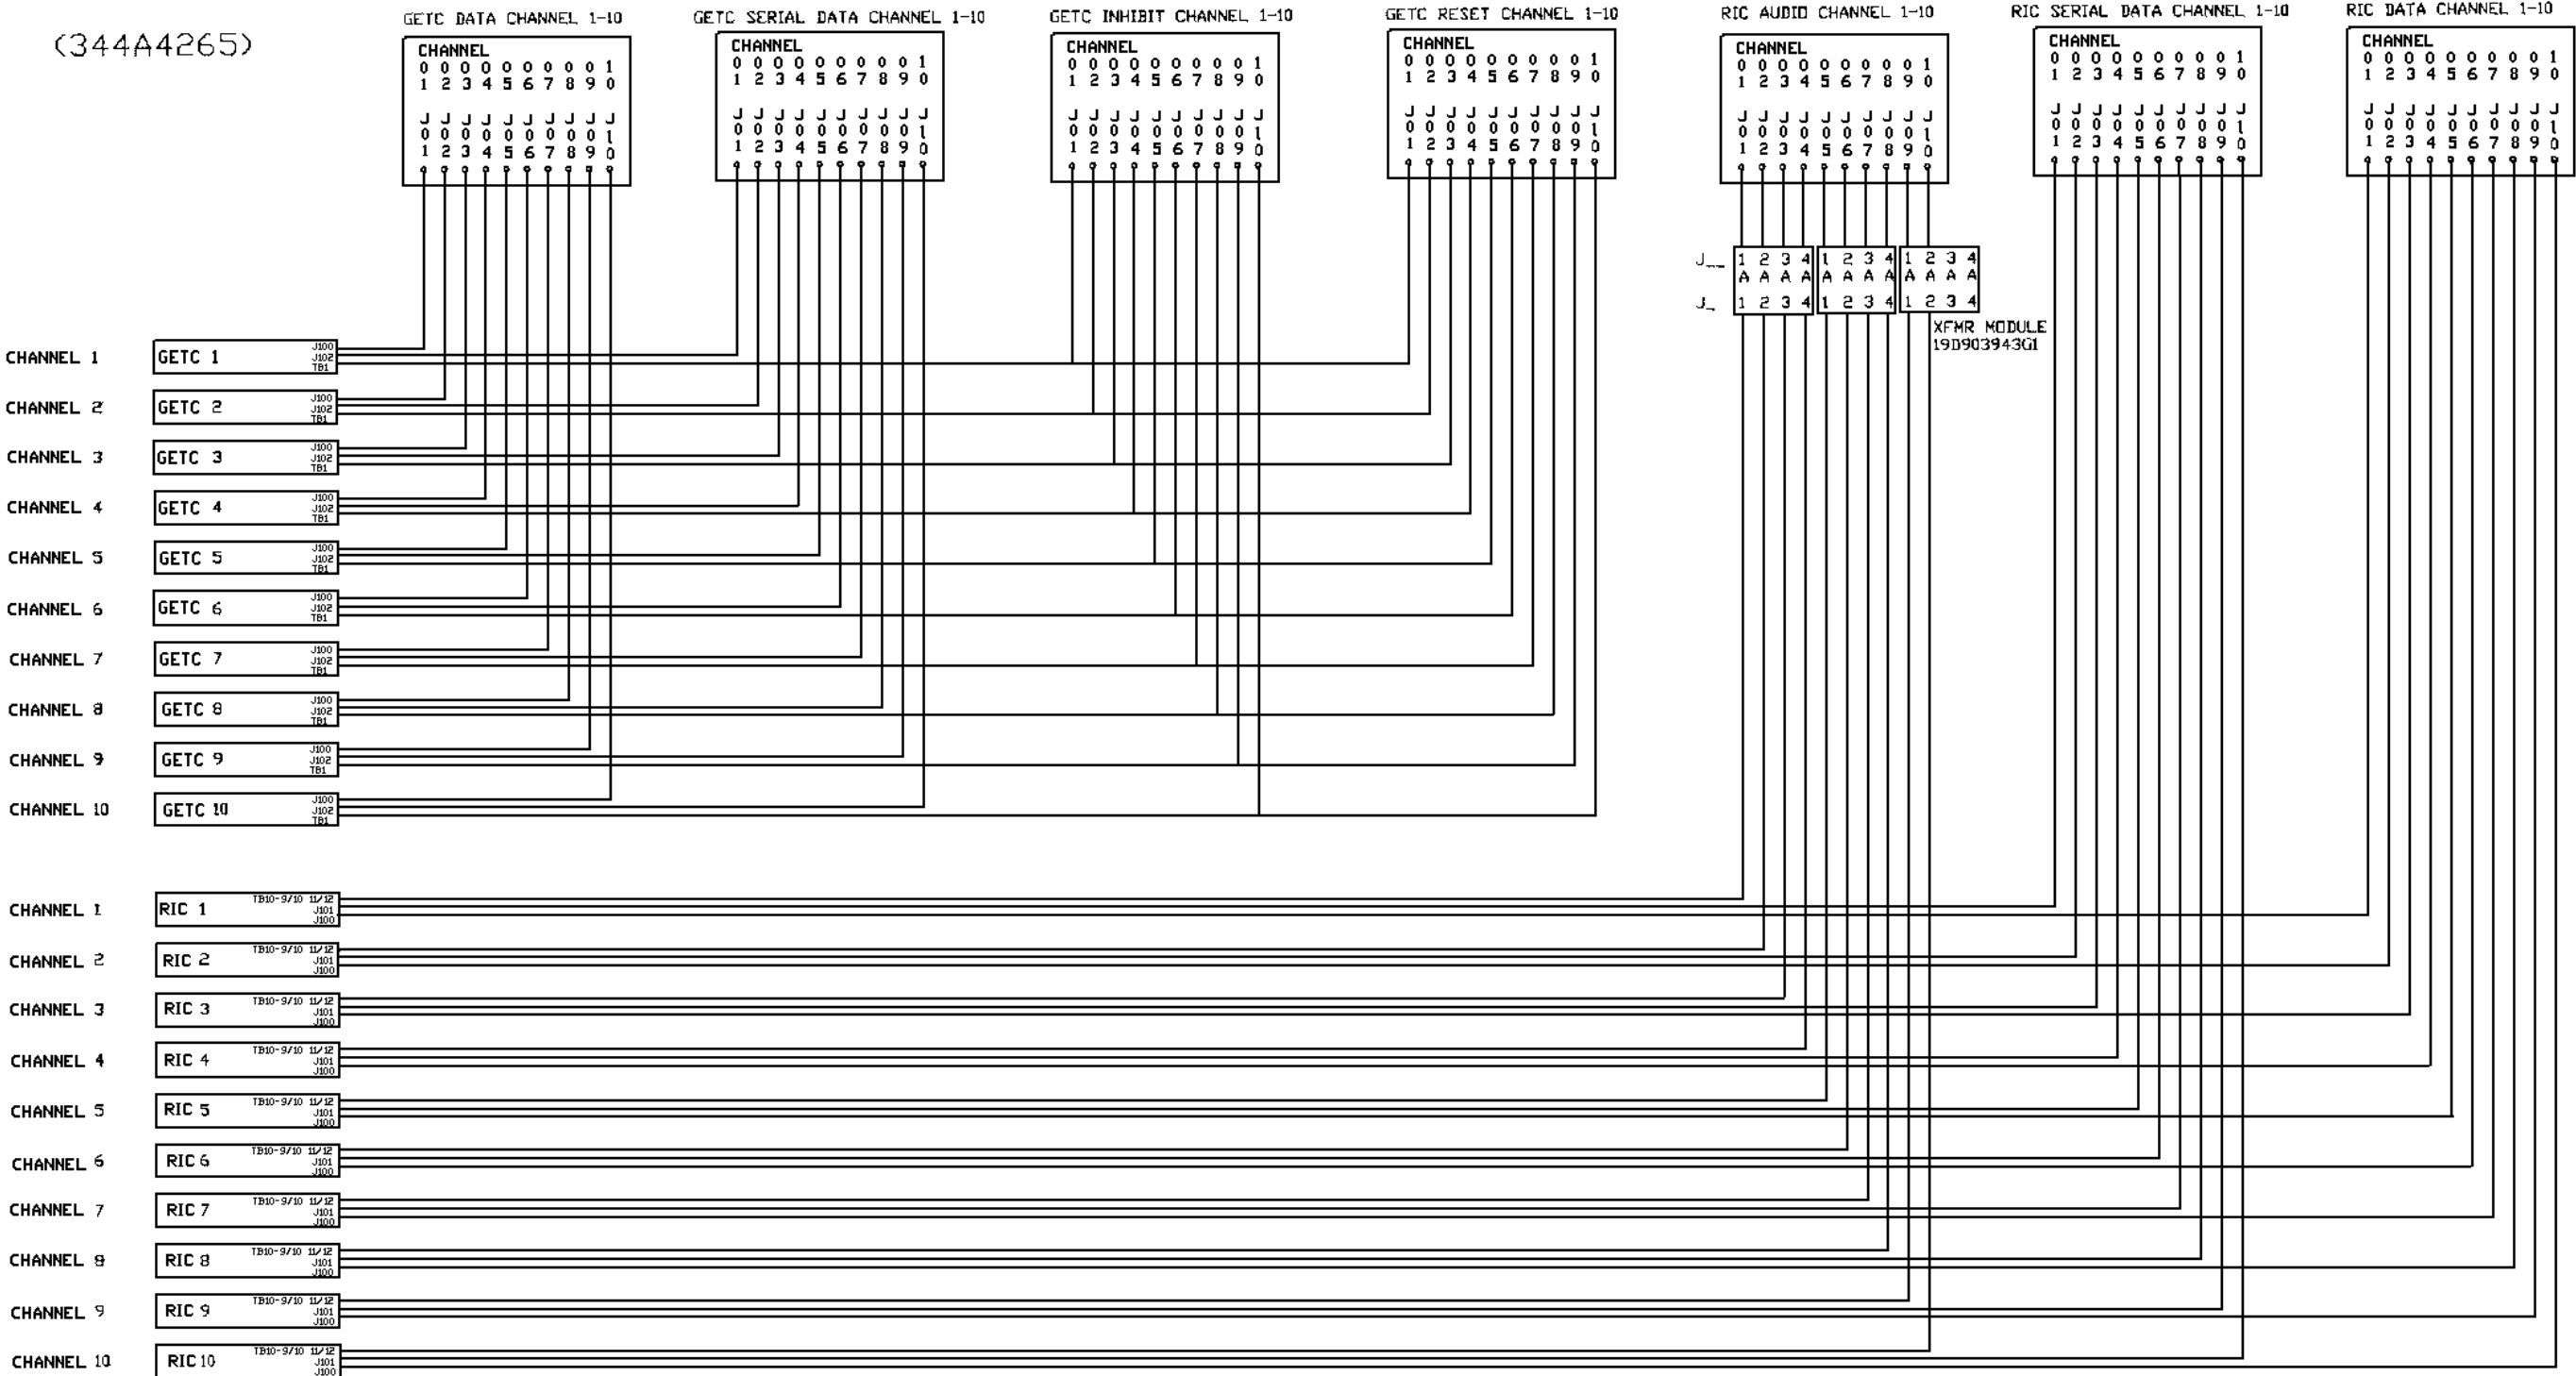

GETC/RIC Intra Cabinet, 1-10 Channels


(19D904230 Sh. 6, Rev. 2)

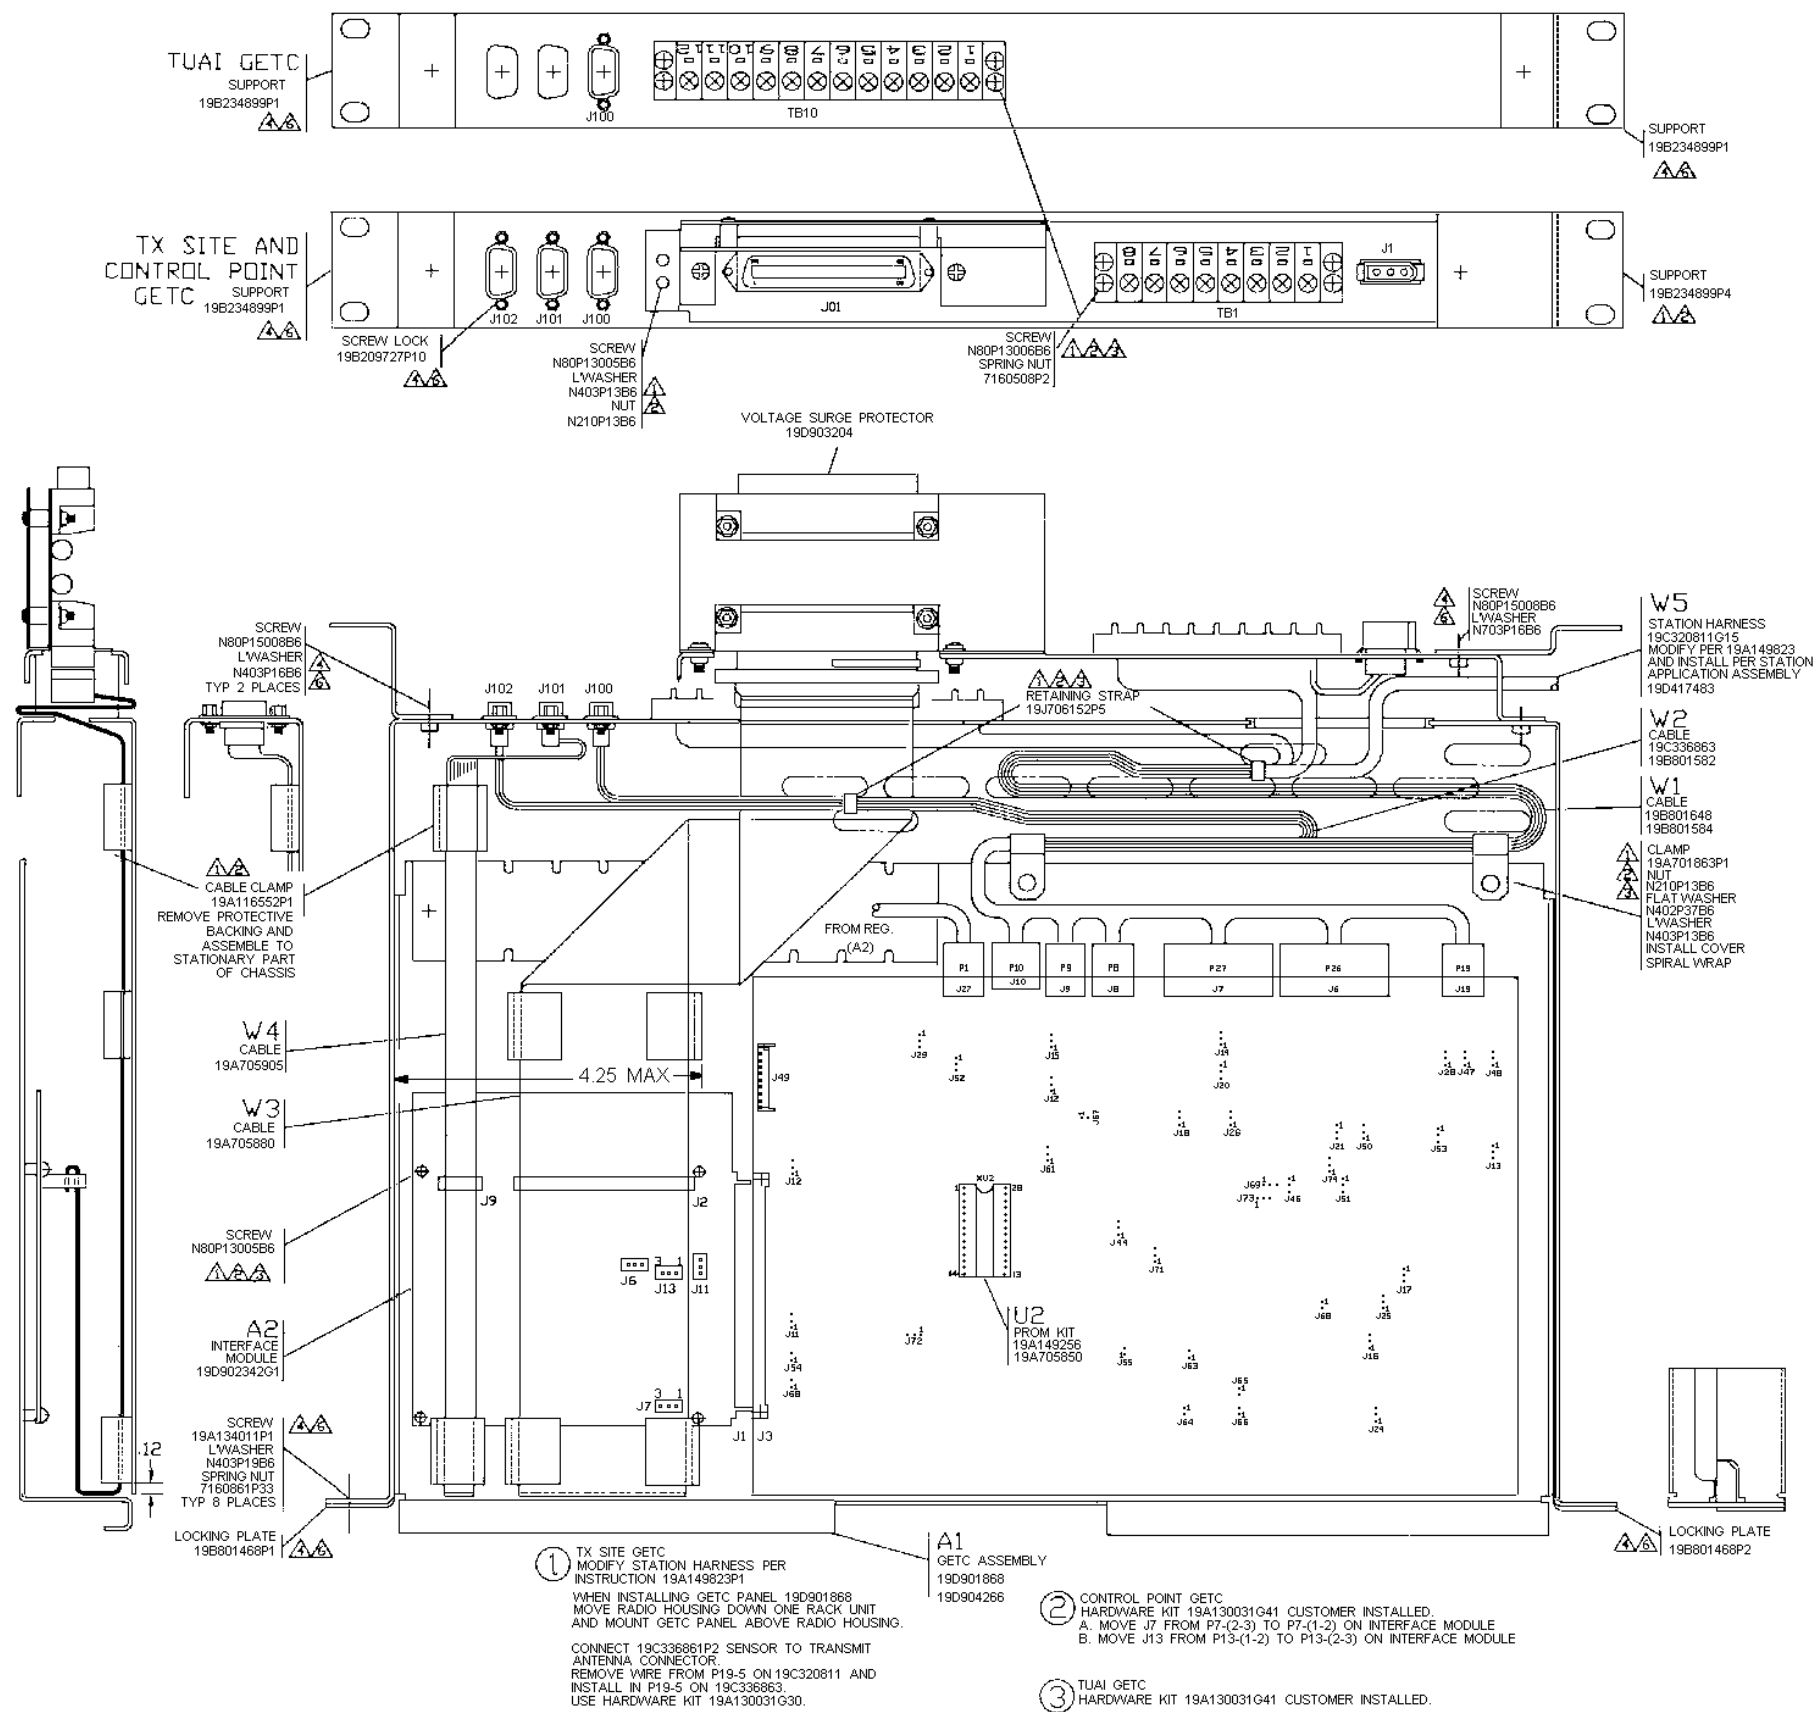

GETC Application Assembly


(19D902587 Rev. 7)

- NOTES:
- 1. PART OF HARDWARE KIT PL19A149821G1
 - 2. PART OF HARDWARE KIT PL19A149821G2
 - 3. PART OF HARDWARE KIT PL19A149821G3
 - 4. PART OF HARDWARE KIT PL19A130031G30
 - 5. PART OF HARDWARE KIT PL19A130031G40
 - 6. PART OF HARDWARE KIT PL19A130031G41
 - 7. FOR PART 1, INSTALL JUMPERS PER 349A9793P2
FOR PART 2, INSTALL JUMPERS PER 349A9793P3
FOR PART 3, INSTALL JUMPERS PER 349A9793P5
 - 8. THESE INSTRUCTIONS SUPERCEDE GETC
ASSEMBLY INSTRUCTIONS SHOWN ON
APPLICATION ASSEMBLY 19D417483
 - 9. IF CABLE 19B801648 IS SUPPLIED WITH A
WIRE AT P27-11, CUT OFF EXPOSED WIRE
BEFORE ATTACHING HARNESS TO TB1.




DC Power, GETC/RIC Cabinet, 1-10 Channels


(19C337781 Sh. 1 Rev. 0)

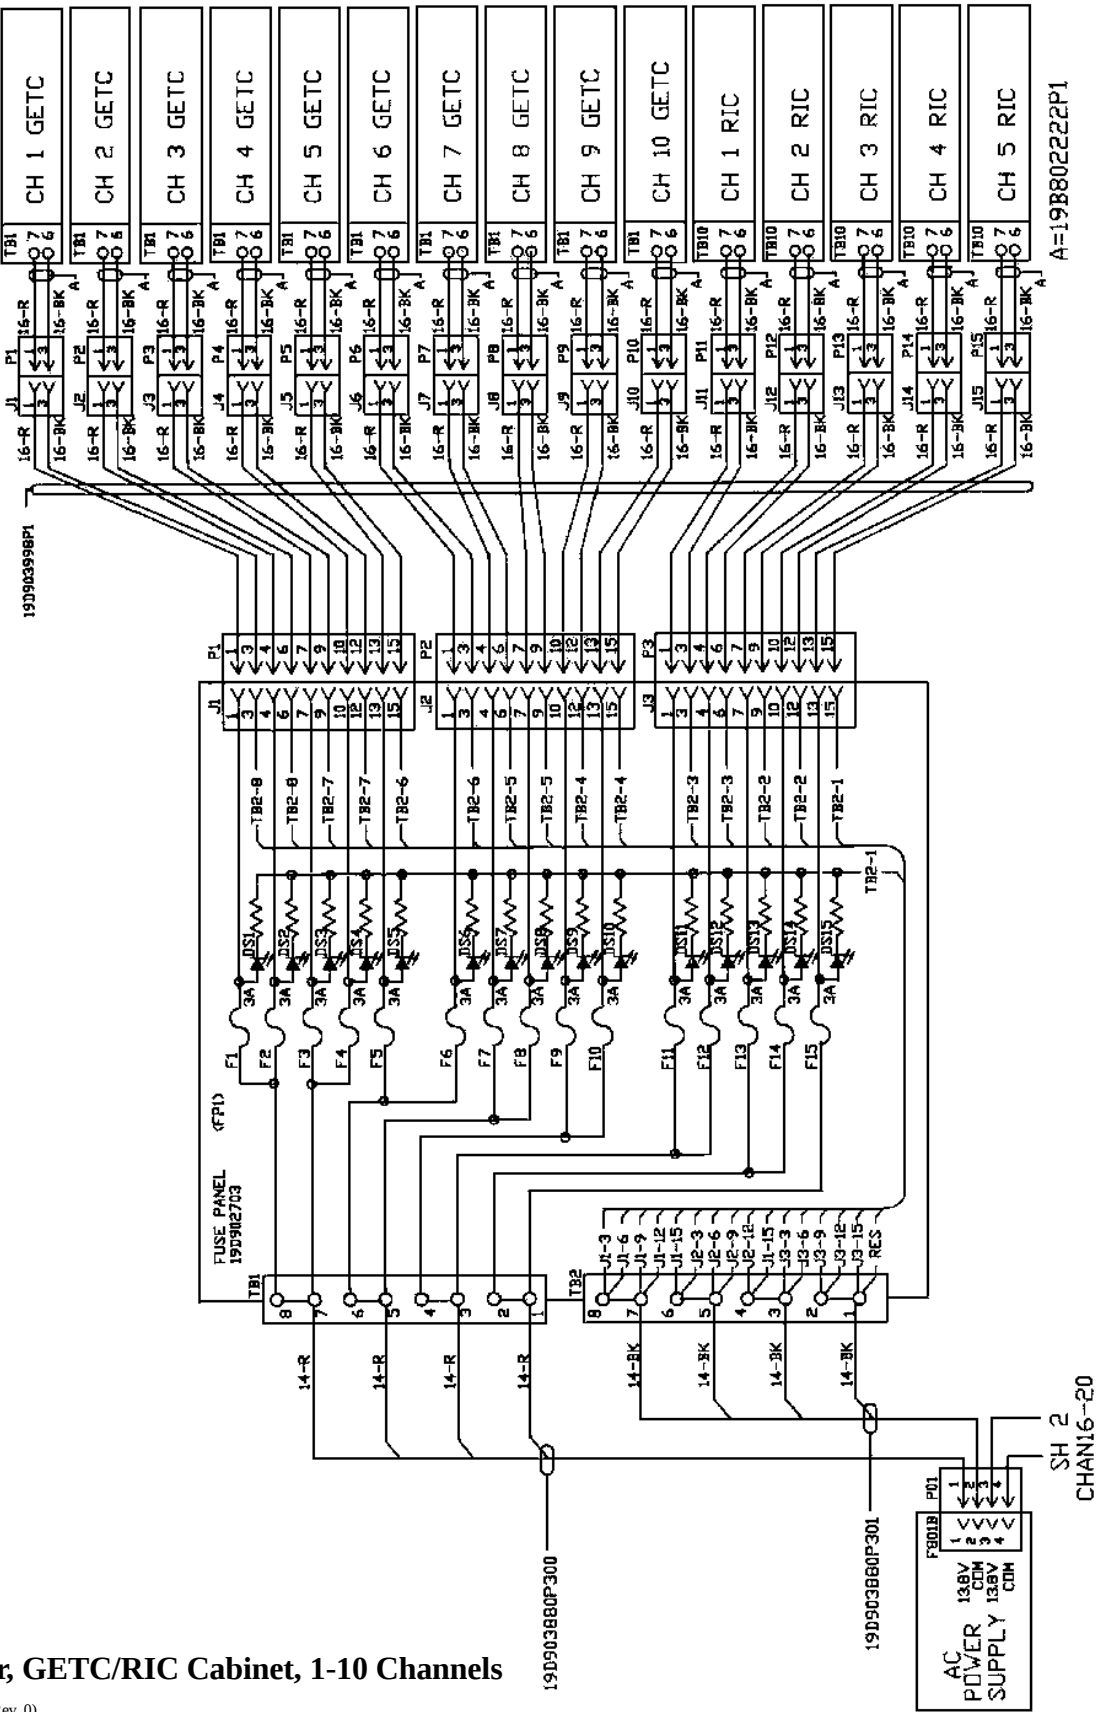

DC Power, GET Cabinet, 1-10 Channels

(19C337781 Sh. 2 Rev. 0)

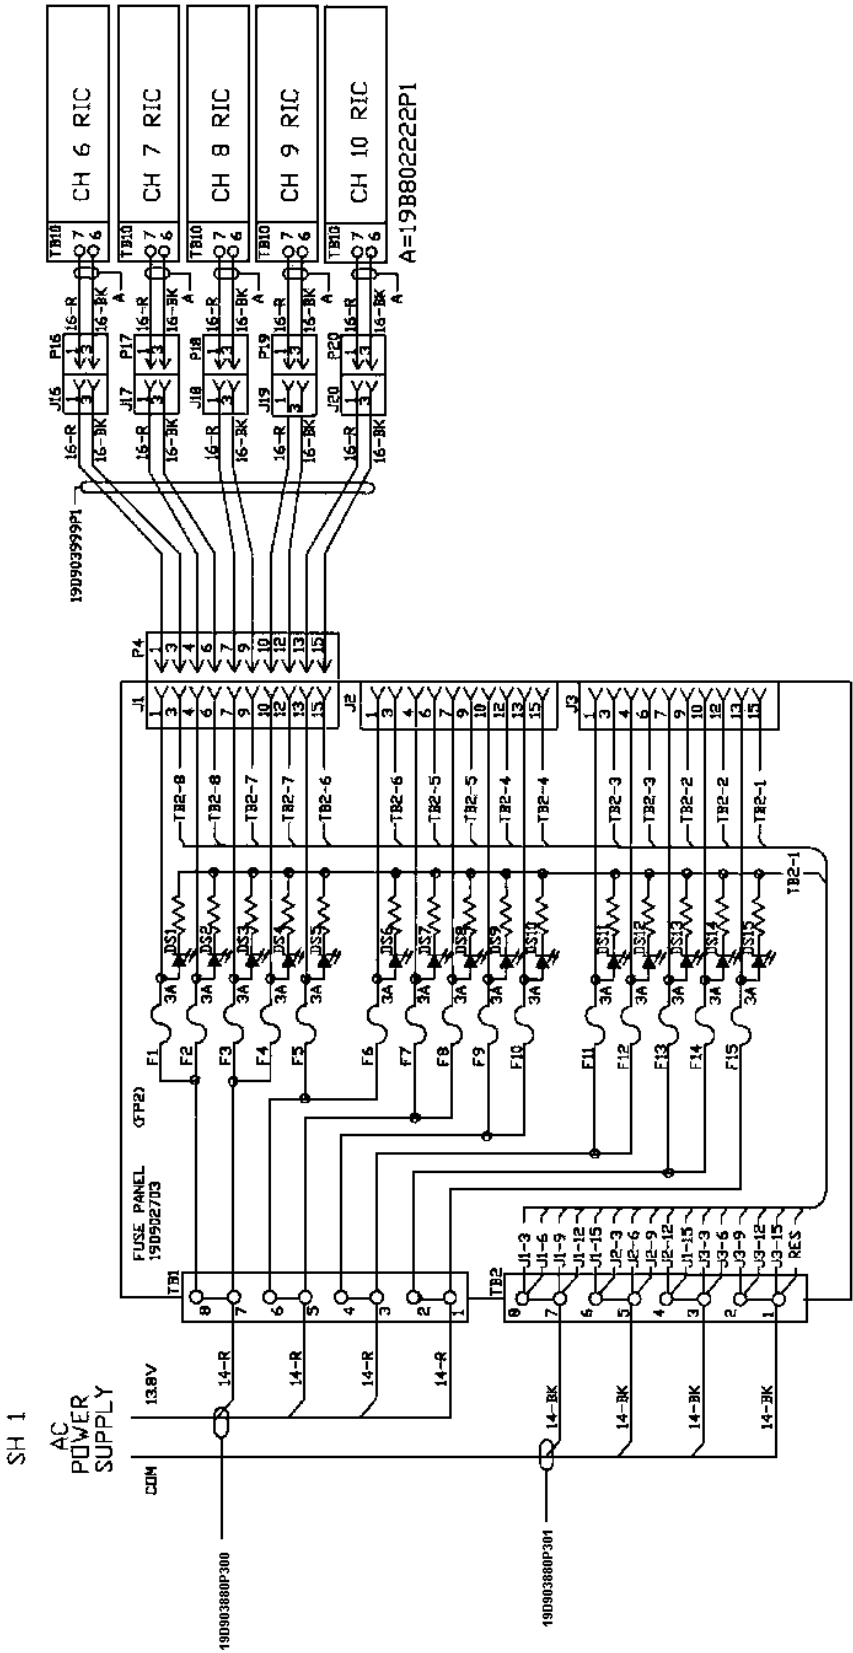

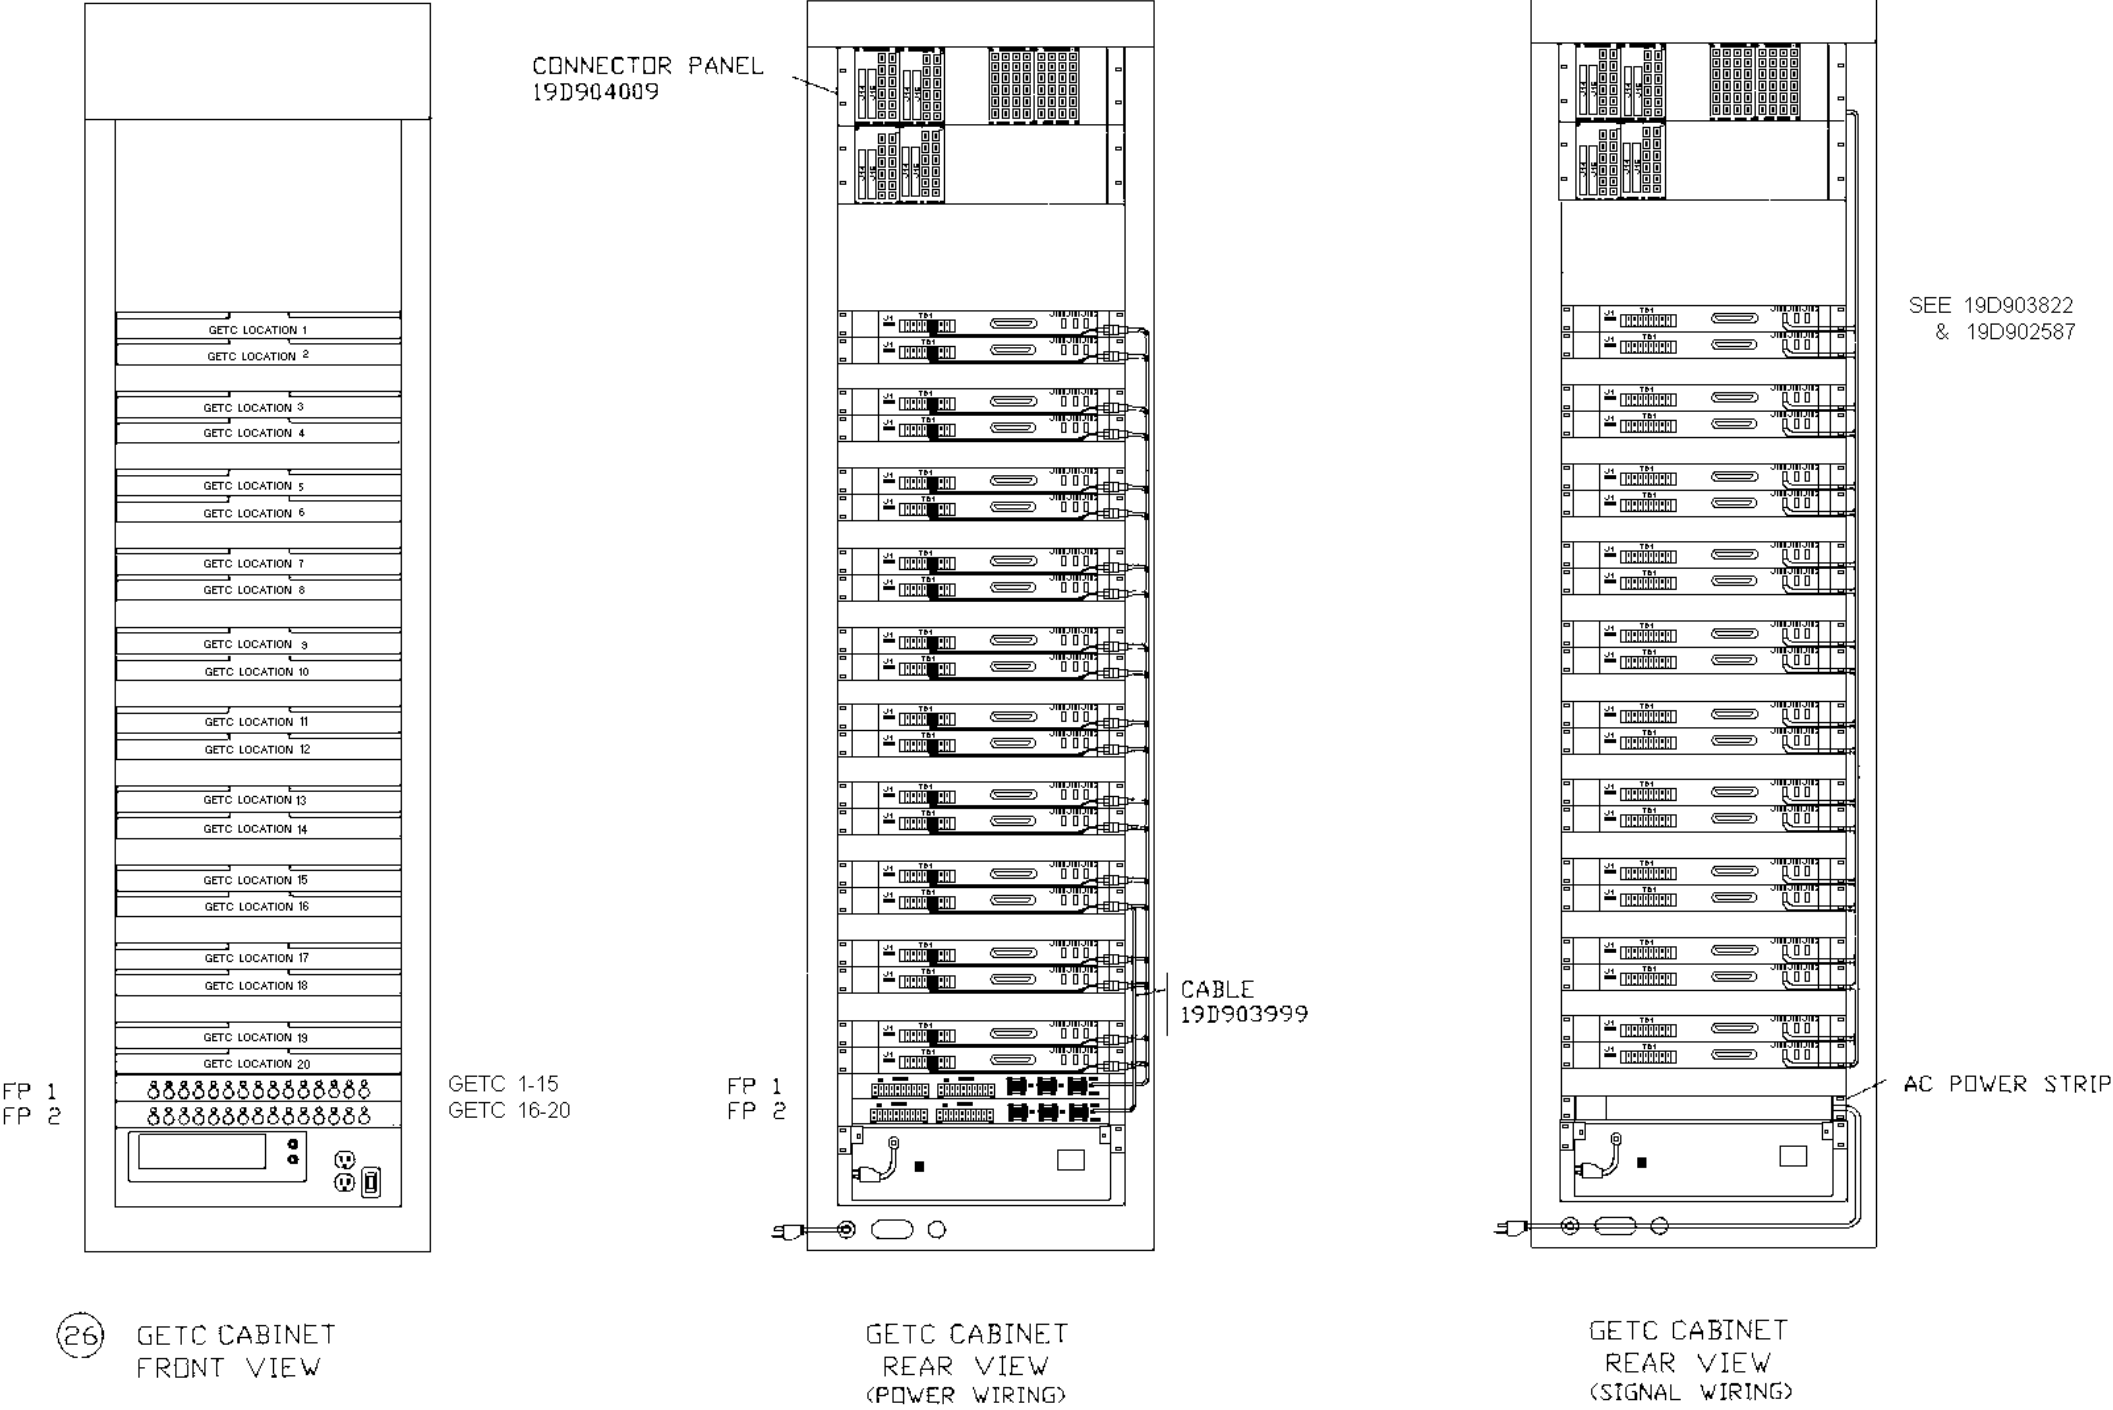

26 GETC CABINET
FRONT VIEW

GETC CABINET
REAR VIEW
(POWER WIRING)

GETC CABINET
REAR VIEW
(SIGNAL WIRING)

SEE 344A4263 FOR
MODULE IDENTIFICATION
AND CONNECTION LIST

**GETC Equipment, 20 Channels
19D904160P22**

(19D904160 Sh. 12, Rev. 1)

GETC DATA MODULE 1

FROM	TO	CABLE		
CHANNEL 01	J01	GETC	J100	19D903880P21
CHANNEL 02	J02	GETC	J100	19D903880P21
CHANNEL 03	J03	GETC	J100	19D903880P21
CHANNEL 04	J04	GETC	J100	19D903880P21
CHANNEL 05	J05	GETC	J100	19D903880P21
CHANNEL 06	J06	GETC	J100	19D903880P21
CHANNEL 07	J07	GETC	J100	19D903880P22
CHANNEL 08	J08	GETC	J100	19D903880P22
CHANNEL 09	J09	GETC	J100	19D903880P22
CHANNEL 10	J10	GETC	J100	19D903880P22
CHANNEL 11	J11	GETC	J100	19D903880P22
CHANNEL 12	J12	GETC	J100	19D903880P22

GETC DATA MODULE 2

CHANNEL 13	J01	GETC	J100	19D903880P23
CHANNEL 14	J02	GETC	J100	19D903880P23
CHANNEL 15	J03	GETC	J100	19D903880P23
CHANNEL 16	J04	GETC	J100	19D903880P23
CHANNEL 17	J05	GETC	J100	19D903880P24
CHANNEL 18	J06	GETC	J100	19D903880P24
CHANNEL 19	J07	GETC	J100	19D903880P24
CHANNEL 20	J08	GETC	J100	19D903880P24

SERIAL MODULE

CHANNEL 01	J01	GETC	J102	19D903880P21
CHANNEL 02	J02	GETC	J102	19D903880P21
CHANNEL 03	J03	GETC	J102	19D903880P21
CHANNEL 04	J04	GETC	J102	19D903880P21
CHANNEL 05	J05	GETC	J102	19D903880P21
CHANNEL 06	J06	GETC	J102	19D903880P21
CHANNEL 07	J07	GETC	J102	19D903880P22
CHANNEL 08	J08	GETC	J102	19D903880P22
CHANNEL 09	J09	GETC	J102	19D903880P22
CHANNEL 10	J10	GETC	J102	19D903880P22
CHANNEL 11	J11	GETC	J102	19D903880P22
CHANNEL 12	J12	GETC	J102	19D903880P22
CHANNEL 13	J13	GETC	J102	19D903880P23
CHANNEL 14	J14	GETC	J102	19D903880P23
CHANNEL 15	J15	GETC	J102	19D903880P23

CHANNEL 16	J16	GETC	J102	19D903880P23
CHANNEL 17	J17	GETC	J102	19D903880P24
CHANNEL 18	J18	GETC	J102	19D903880P24
CHANNEL 19	J19	GETC	J102	19D903880P24
CHANNEL 20	J20	GETC	J102	19D903880P24

GETC RESET

CHANNEL 01	J01	GETC	TB1-1/6 *	19D903880P11
CHANNEL 02	J02	GETC	TB1-1/6 *	19D903880P11
CHANNEL 03	J03	GETC	TB1-1/6 *	19D903880P11
CHANNEL 04	J04	GETC	TB1-1/6 *	19D903880P11
CHANNEL 05	J05	GETC	TB1-1/6 *	19D903880P11
CHANNEL 06	J06	GETC	TB1-1/6 *	19D903880P11
CHANNEL 07	J07	GETC	TB1-1/6 *	19D903880P12
CHANNEL 08	J08	GETC	TB1-1/6 *	19D903880P12
CHANNEL 09	J09	GETC	TB1-1/6 *	19D903880P12
CHANNEL 10	J10	GETC	TB1-1/6 *	19D903880P12
CHANNEL 11	J11	GETC	TB1-1/6 *	19D903880P12
CHANNEL 12	J12	GETC	TB1-1/6 *	19D903880P12
CHANNEL 13	J13	GETC	TB1-1/6 *	19D903880P13
CHANNEL 14	J14	GETC	TB1-1/6 *	19D903880P13
CHANNEL 15	J15	GETC	TB1-1/6 *	19D903880P13
CHANNEL 16	J16	GETC	TB1-1/6 *	19D903880P13
CHANNEL 17	J17	GETC	TB1-1/6 *	19D903880P14
CHANNEL 18	J18	GETC	TB1-1/6 *	19D903880P14
CHANNEL 19	J19	GETC	TB1-1/6 *	19D903880P14
CHANNEL 20	J20	GETC	TB1-1/6 *	19D903880P14

*Wire connections: Connect Blue/White to TB1-1 and White/blue to TB1-6

GETC INHIBIT/VOTER TONE DETECT/RS232 TO VOTER SELECTOR-MODULE 1

CHANNEL 01	J01	GETC	TB1-2/3/4/5*	19D903880P11
CHANNEL 02	J02	GETC	TB1-2/3/4/5*	19D903880P11
CHANNEL 03	J03	GETC	TB1-2/3/4/5*	19D903880P11
CHANNEL 04	J04	GETC	TB1-2/3/4/5*	19D903880P11
CHANNEL 05	J05	GETC	TB1-2/3/4/5*	19D903880P11
CHANNEL 06	J06	GETC	TB1-2/3/4/5*	19D903880P11
CHANNEL 07	J07	GETC	TB1-2/3/4/5*	19D903880P12
CHANNEL 08	J08	GETC	TB1-2/3/4/5*	19D903880P12
CHANNEL 09	J09	GETC	TB1-2/3/4/5*	19D903880P12
CHANNEL 10	J10	GETC	TB1-2/3/4/5*	19D903880P12

					FROM	TO		CABLE
CHANNEL 11	J11	GETC	TB1-2/3/4/5*	19D903880P12	FUSE PANEL 1	POWER SUPPLY		
CHANNEL 12	J12	GETC	TB1-2/3/4/5*	19D903880P12	TB1-1	P01-1	RED	19D903880P300
* Wire connections:	Blue/white	TB1-2	White/blue	TB1-3	TB1-3	P01-1	RED	
	Orange/white	TB1-4	White/orange	TB1-5	TB1-5	P01-1	RED	
					TB1-7	P01-1	RED	
GETC INHIBIT/VOTER TONE DETECT/RS232 TO VOTER SELECTOR--MODULE 2					TB2-1	P01-2	BLACK	19D903880P301
CHANNEL 13	J01	GETC	TB1-2/3/4/5*	19D903880P13	TB2-3	P01-2	BLACK	
CHANNEL 14	J02	GETC	TB1-2/3/4/5*	19D903880P13	TB2-5	P01-2	BLACK	
CHANNEL 15	J03	GETC	TB1-2/3/4/5*	19D903880P13	TB2-7	P01-2	BLACK	
CHANNEL 16	J04	GETC	TB1-2/3/4/5*	19D903880P13	TB1-1	TB1-2		7143961P1
CHANNEL 17	J05	GETC	TB1-2/3/4/5*	19D903880P14	TB1-3	TB1-4		7143961P1
CHANNEL 18	J06	GETC	TB1-2/3/4/5*	19D903880P14	TB1-5	TB1-6		7143961P1
CHANNEL 19	J07	GETC	TB1-2/3/4/5*	19D903880P14	TB1-7	TB1-8		7143961P1
CHANNEL 20	J08	GETC	TB1-2/3/4/5*	19D903880P14	TB2-1	TB2-2		7143961P1
* Wire connections:	Blue/white	TB1-2	White/blue	TB1-3	TB2-3	TB2-4		7143961P1
	Orange/white	TB1-4	White/orange	TB1-5	TB2-5	TB2-6		7143961P1
					TB2-7	TB2-8		7143961P1
					J1	P1		19D903998P1
					J2	P2		
					J3	P3		
DC POWER CONNECTIONS TO GETC's					FUSE PANEL 2	POWER SUPPLY		
CHANNEL 01	J01	GETC	TB1-6/7*	19B802222P1	TB1-1	P01-3	RED	19D903880P300
CHANNEL 02	J02	GETC	TB1-6/7*	19B802222P1	TB1-3	P01-3	RED	
CHANNEL 03	J03	GETC	TB1-6/7*	19B802222P1	TB1-5	P01-3	RED	
CHANNEL 04	J04	GETC	TB1-6/7*	19B802222P1	TB1-7	P01-3	RED	
CHANNEL 05	J05	GETC	TB1-6/7*	19B802222P1	TB2-1	P01-4	BLACK	19D903880P301
CHANNEL 06	J06	GETC	TB1-6/7*	19B802222P1	TB2-3	P01-4	BLACK	
CHANNEL 07	J07	GETC	TB1-6/7*	19B802222P1	TB2-5	P01-4	BLACK	
CHANNEL 08	J08	GETC	TB1-6/7*	19B802222P1	TB2-7	P01-4	BLACK	
CHANNEL 09	J09	GETC	TB1-6/7*	19B802222P1	TB1-1	TB1-2		7143961P1
CHANNEL 10	J10	GETC	TB1-6/7*	19B802222P1	TB1-3	TB1-4		7143961P1
CHANNEL 11	J11	GETC	TB1-6/7*	19B802222P1	TB1-5	TB1-6		7143961P1
CHANNEL 12	J12	GETC	TB1-6/7*	19B802222P1	TB1-7	TB1-8		7143961P1
CHANNEL 13	J13	GETC	TB1-6/7*	19B802222P1	TB2-1	TB2-2		7143961P1
CHANNEL 14	J14	GETC	TB1-6/7*	19B802222P1	TB2-3	TB2-4		7143961P1
CHANNEL 15	J15	GETC	TB1-6/7*	19B802222P1	TB2-5	TB2-6		7143961P1
CHANNEL 16	J16	GETC	TB1-6/7*	19B802222P1	TB2-7	TB2-8		7143961P1
CHANNEL 17	J17	GETC	TB1-6/7*	19B802222P1	J1	P4		19D903999P1
CHANNEL 18	J18	GETC	TB1-6/7*	19B802222P1				
CHANNEL 19	J19	GETC	TB1-6/7*	19B802222P1				
CHANNEL 20	J20	GETC	TB1-6/7*	19B802222P1				

* Wire connections: Connect Red wire of 19B802222P1 to TB1-7 and Black wire to TB1-6

DC Power Connections To GETCs, 20 Channels

(344A4263 Sh. 3 Rev. 4)

DC Power Connections To GETCs & Fuse Panel 1, 20 Channels


(344A4263 Sh. 4, Rev. 4)

FROM	TO	CABLE
GETC CHANNEL P01	J01	19D903998P1
GETC CHANNEL P02	J02	
GETC CHANNEL P03	J03	
GETC CHANNEL P04	J04	
GETC CHANNEL P05	J05	
GETC CHANNEL P06	J06	
GETC CHANNEL P07	J07	
GETC CHANNEL P08	J08	
GETC CHANNEL P09	J09	
GETC CHANNEL P10	J10	
GETC CHANNEL P11	J11	
GETC CHANNEL P12	J12	
GETC CHANNEL P13	J13	
GETC CHANNEL P14	J14	
GETC CHANNEL P15	J15	
GETC CHANNEL P16	J16	19D903999P1
GETC CHANNEL P17	J17	
GETC CHANNEL P18	J18	
GETC CHANNEL P19	J19	
GETC CHANNEL P20	J20	

DC Power Connections Fuse Panel 2, 20 Channels


(344A4263 Sh. 5 Rev. 4)

(344A4263)

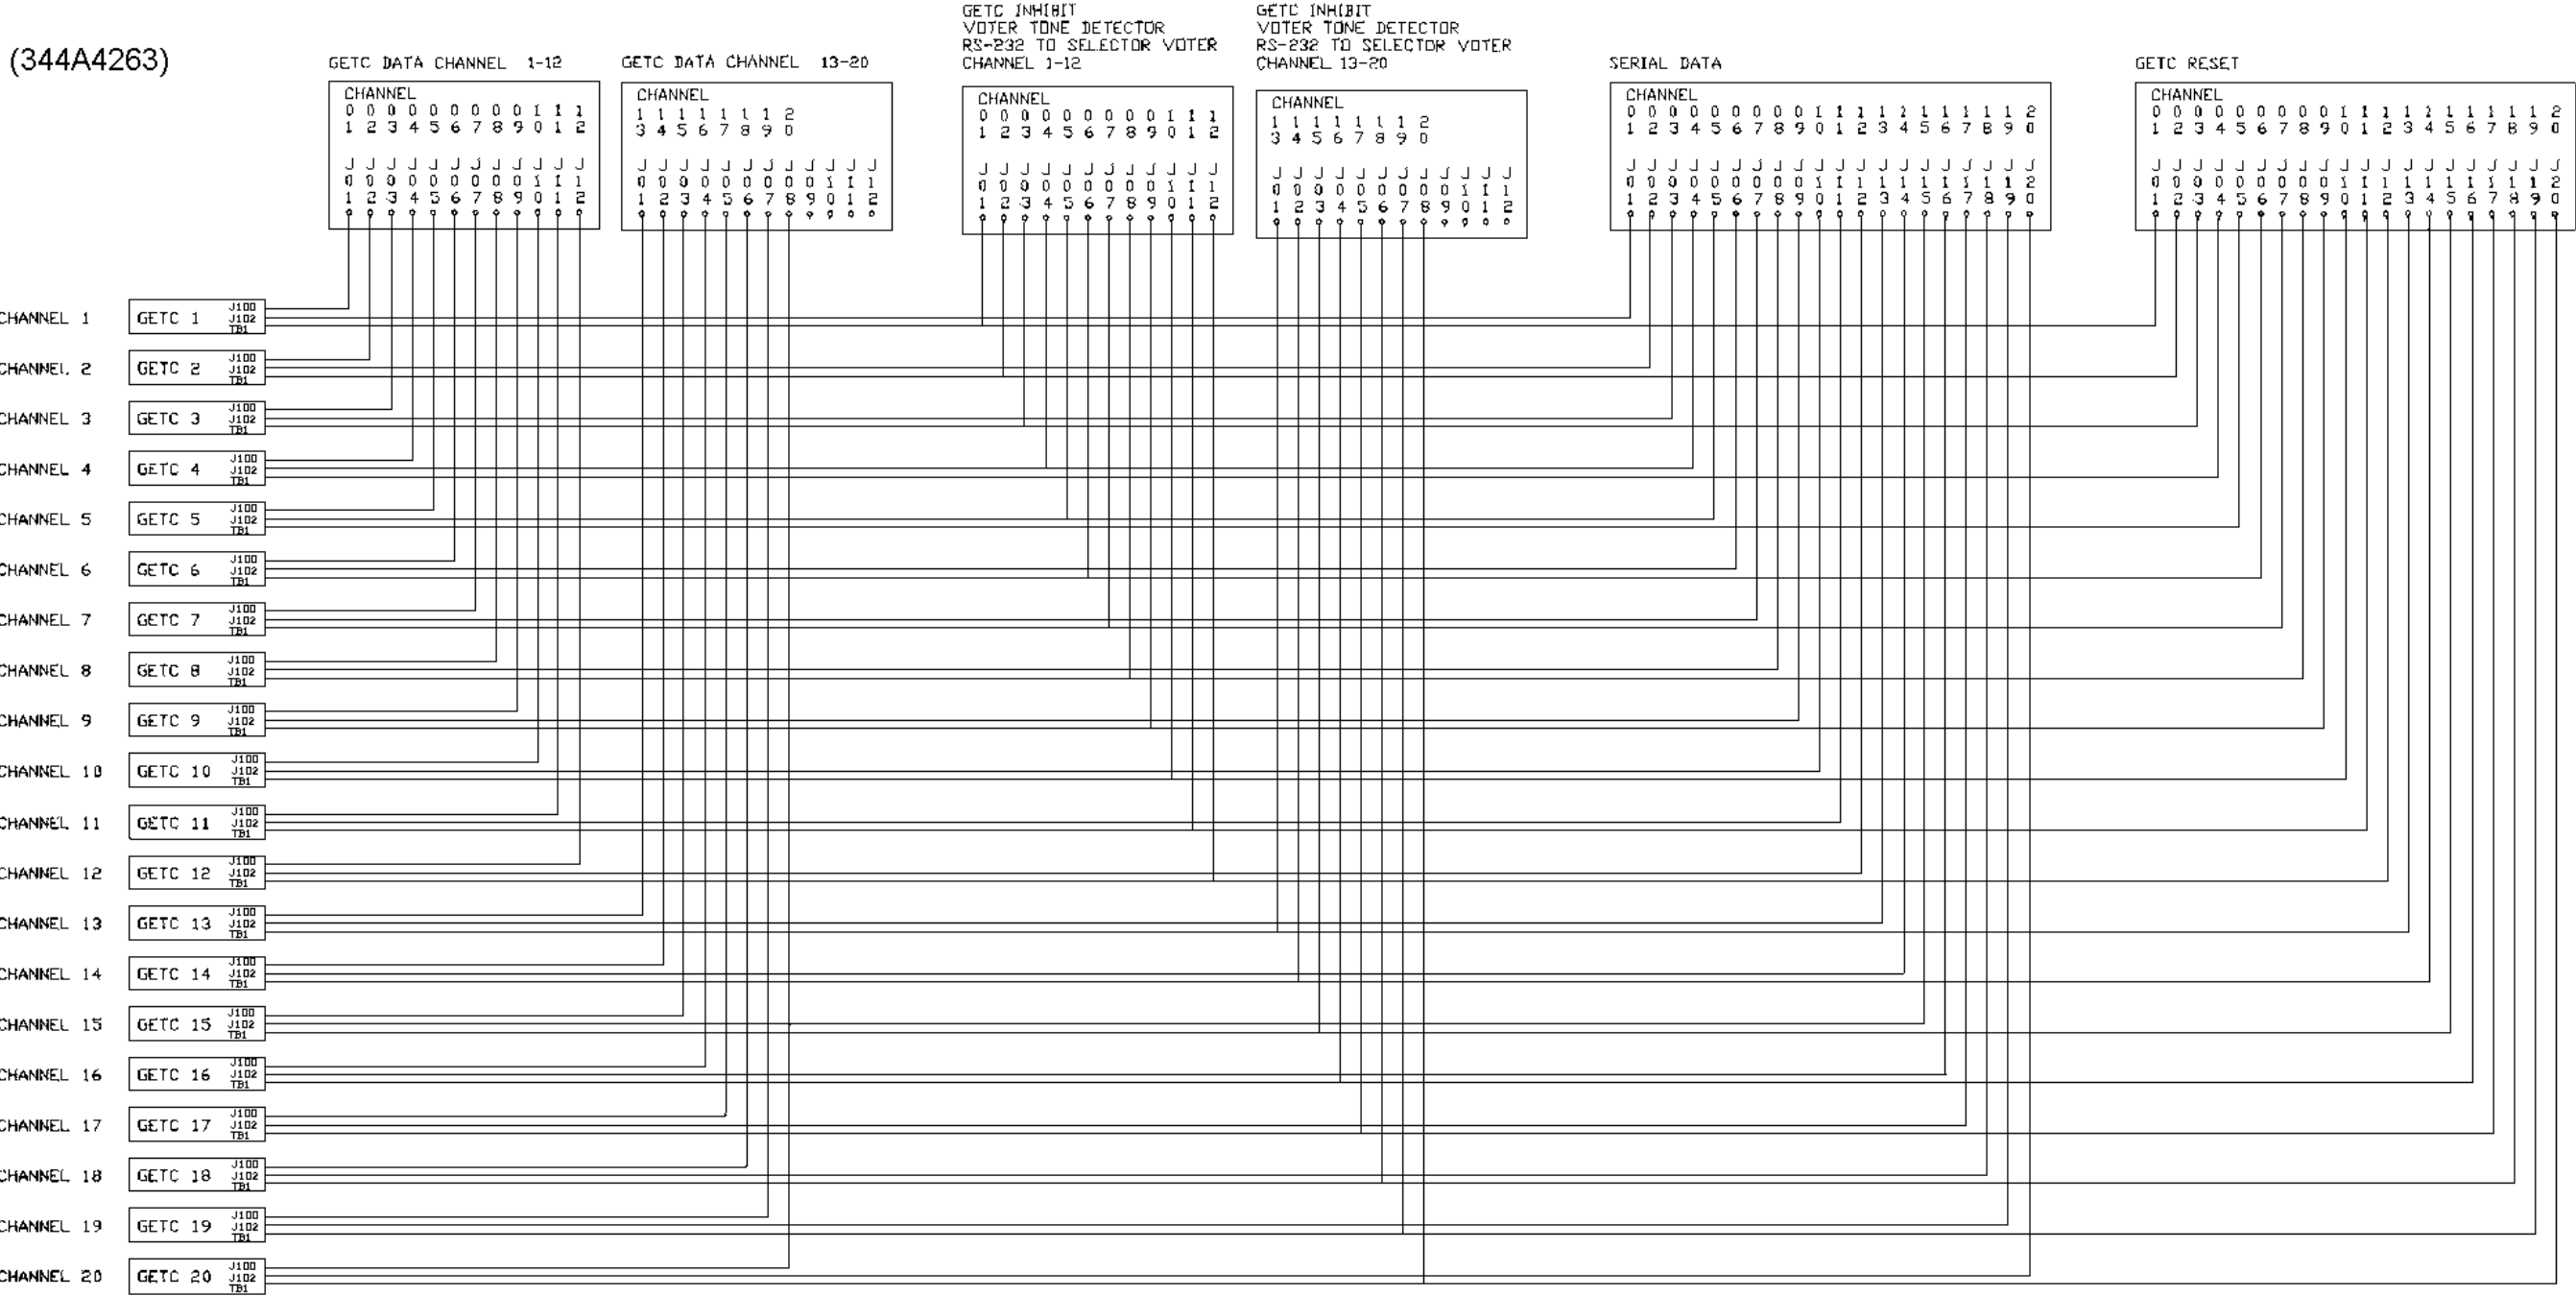

GETC Intra Cabinet, 20 Channels

(19D904230 Sh. 4 Rev. 0)

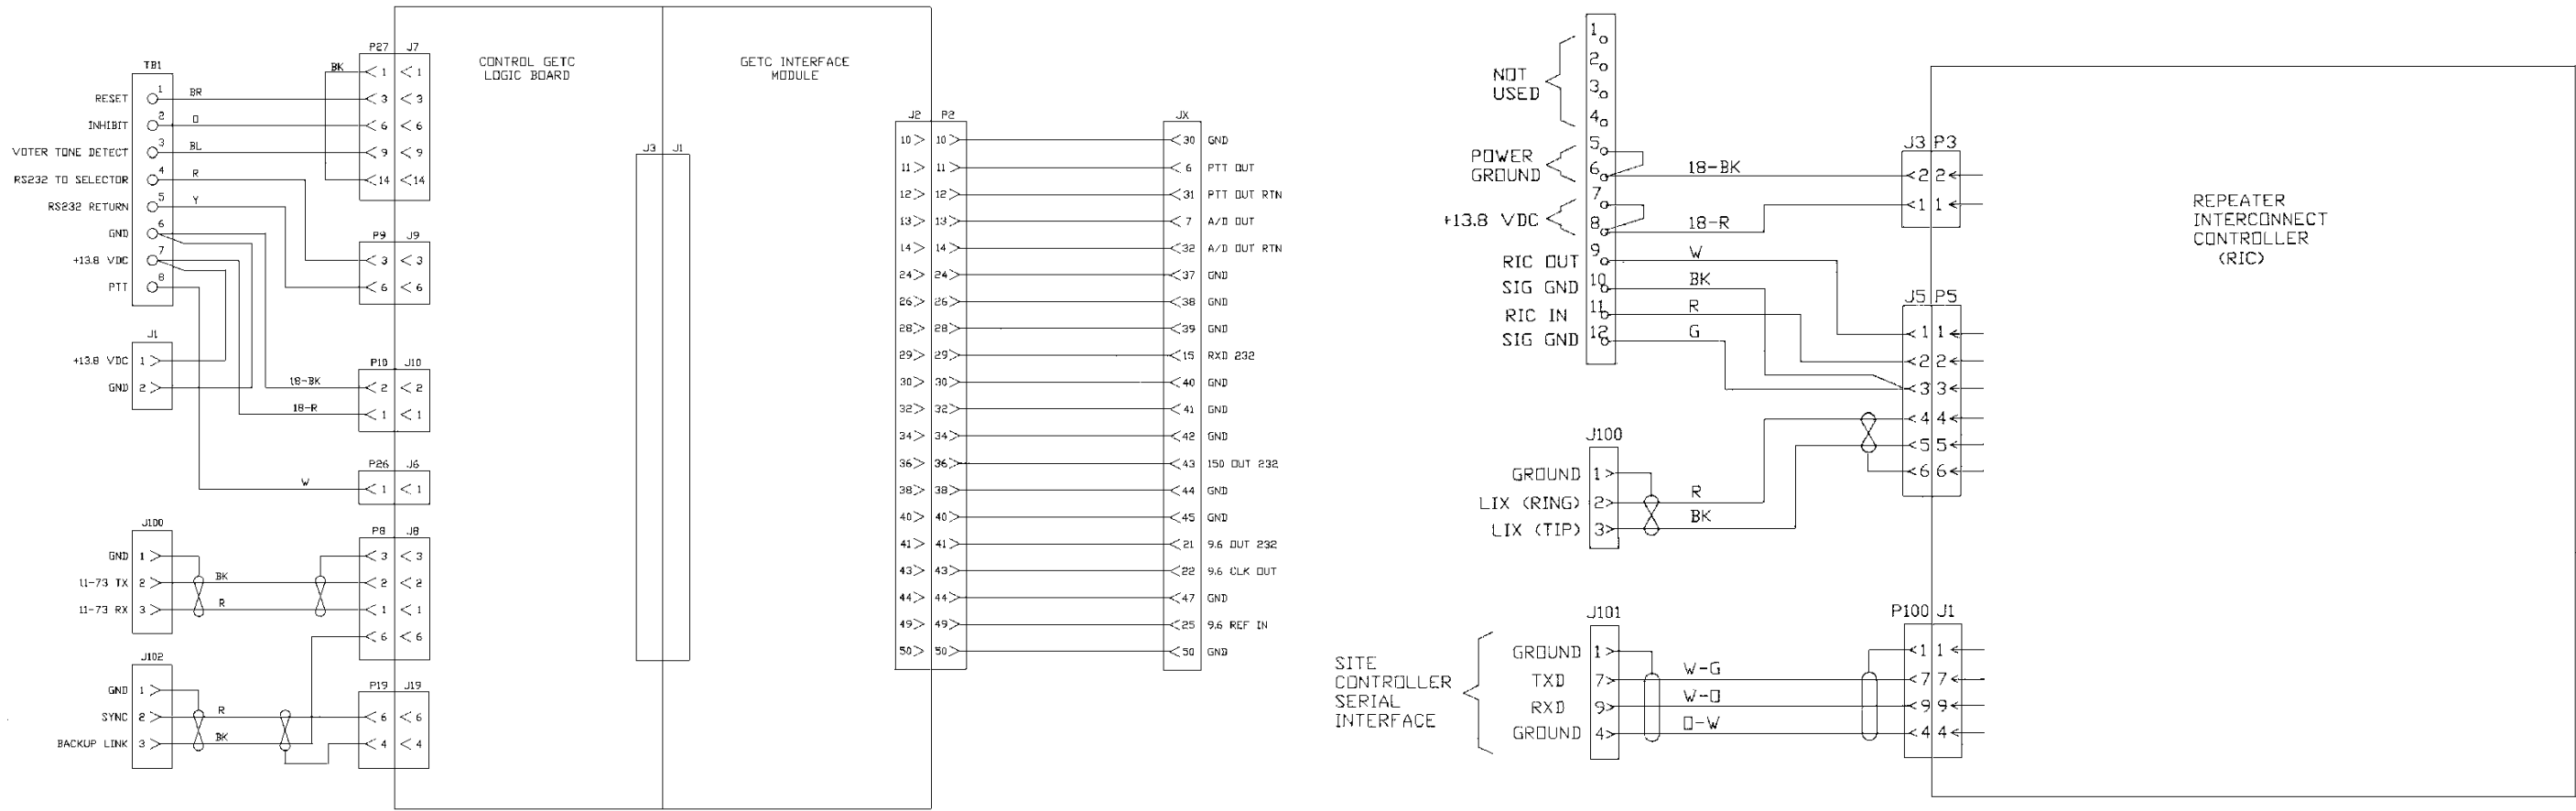


GETC Interconnection & Block Diagram

(19D903822 Sh. 2 Rev. 1)

RIC Interconnection & Block Diagram


(19D903822 Sh. 4 Rev. 0)

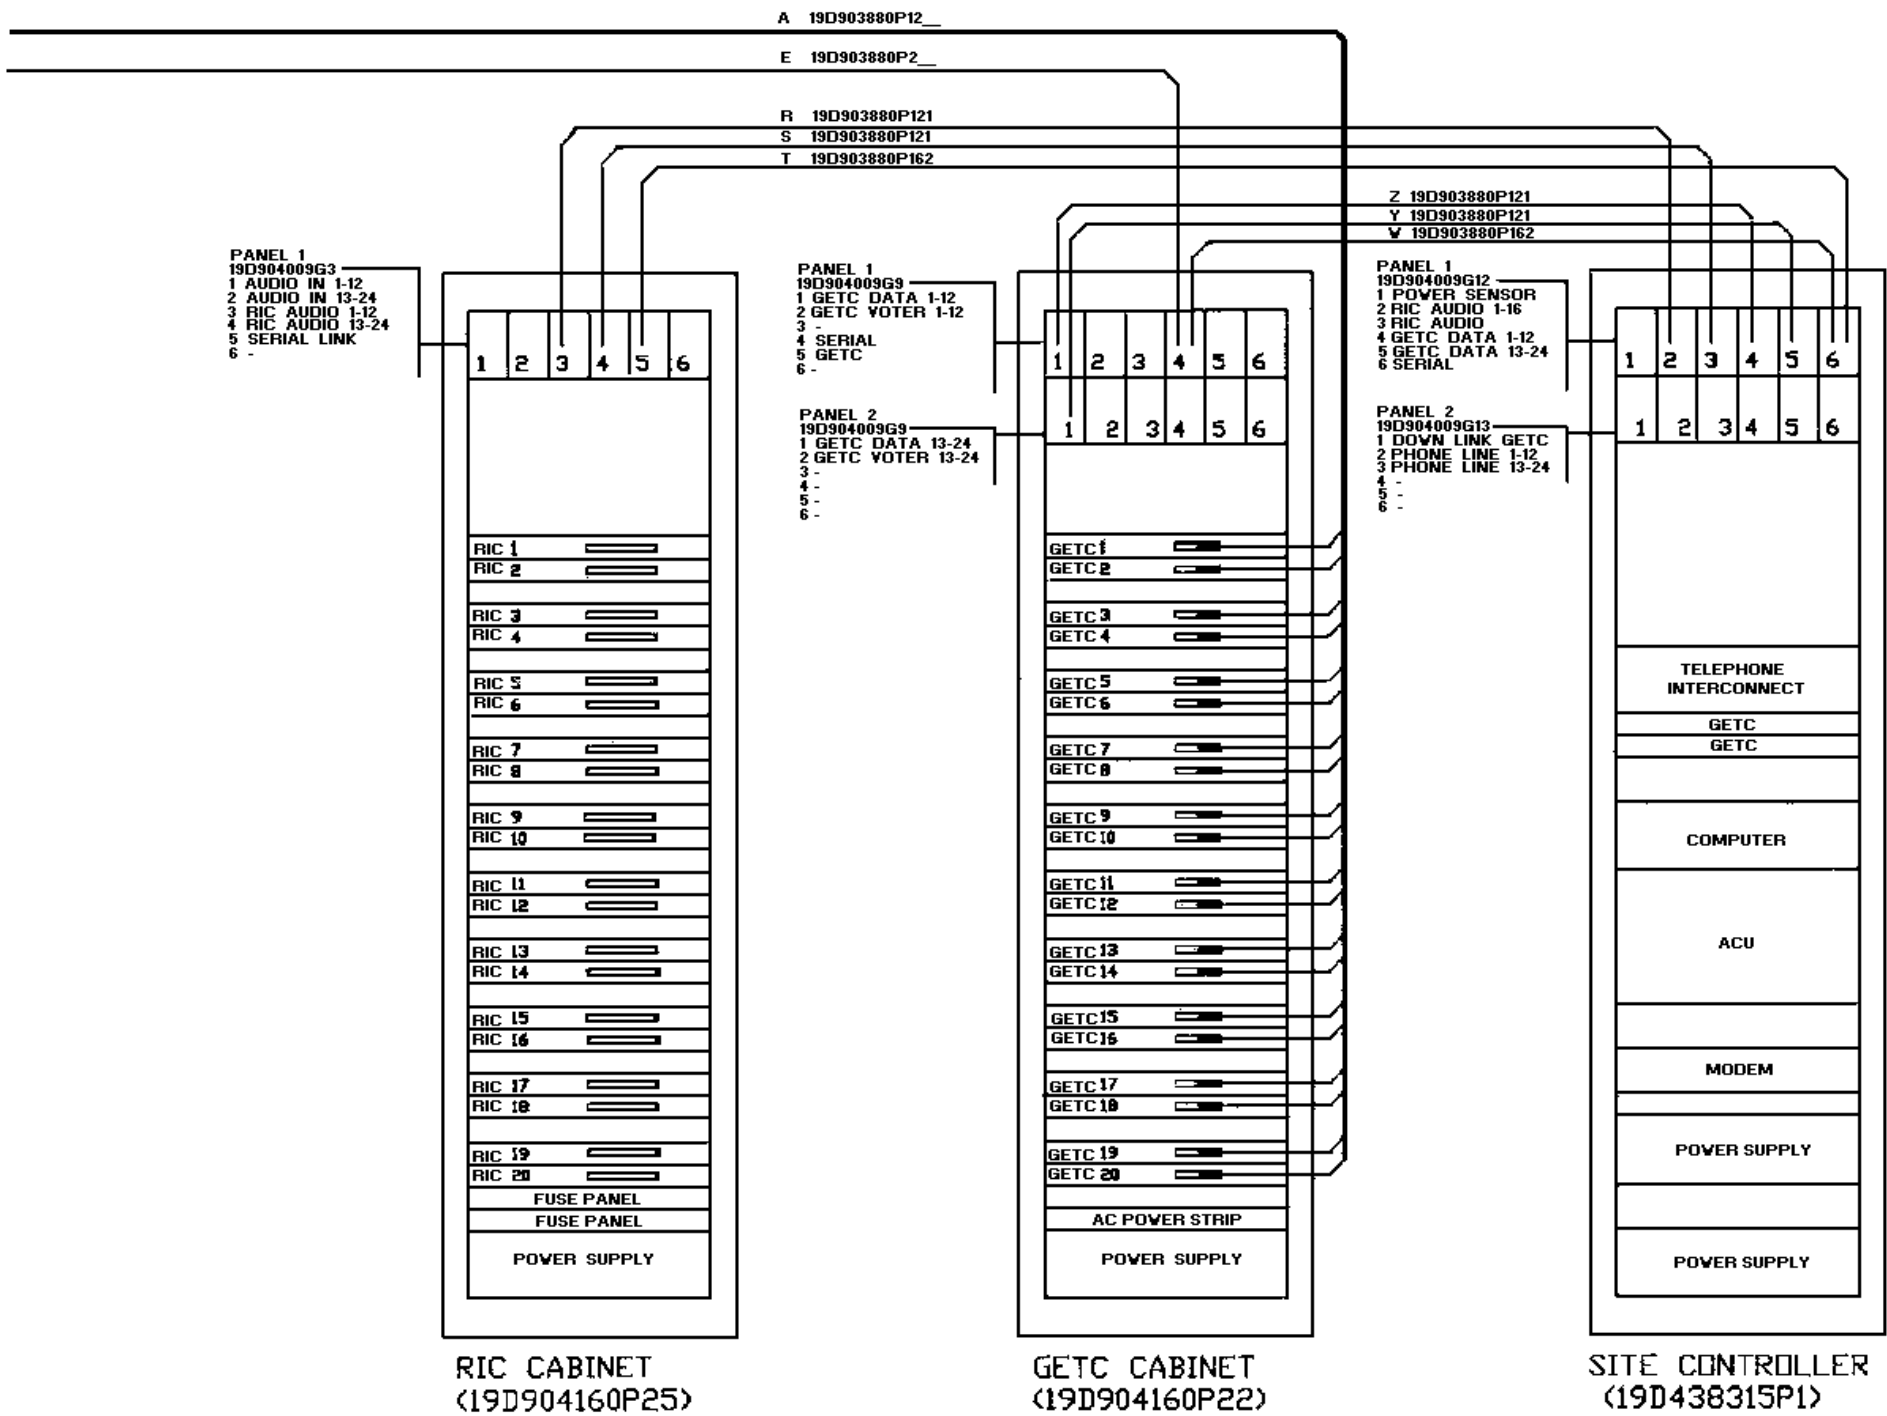

BACK VIEW OF RACKS SEE CONNECTION LIST FOR WIRING DETAILS

SIMULCAST CONTROL POINT SYSTEM ---- GREATER THAN 10 CHANNELS (20 CHAN MAX)

FIELD INSTALLATION DIAGRAM
Interrack Cabling, GETC/RIC/Site Controller, 20 Channels

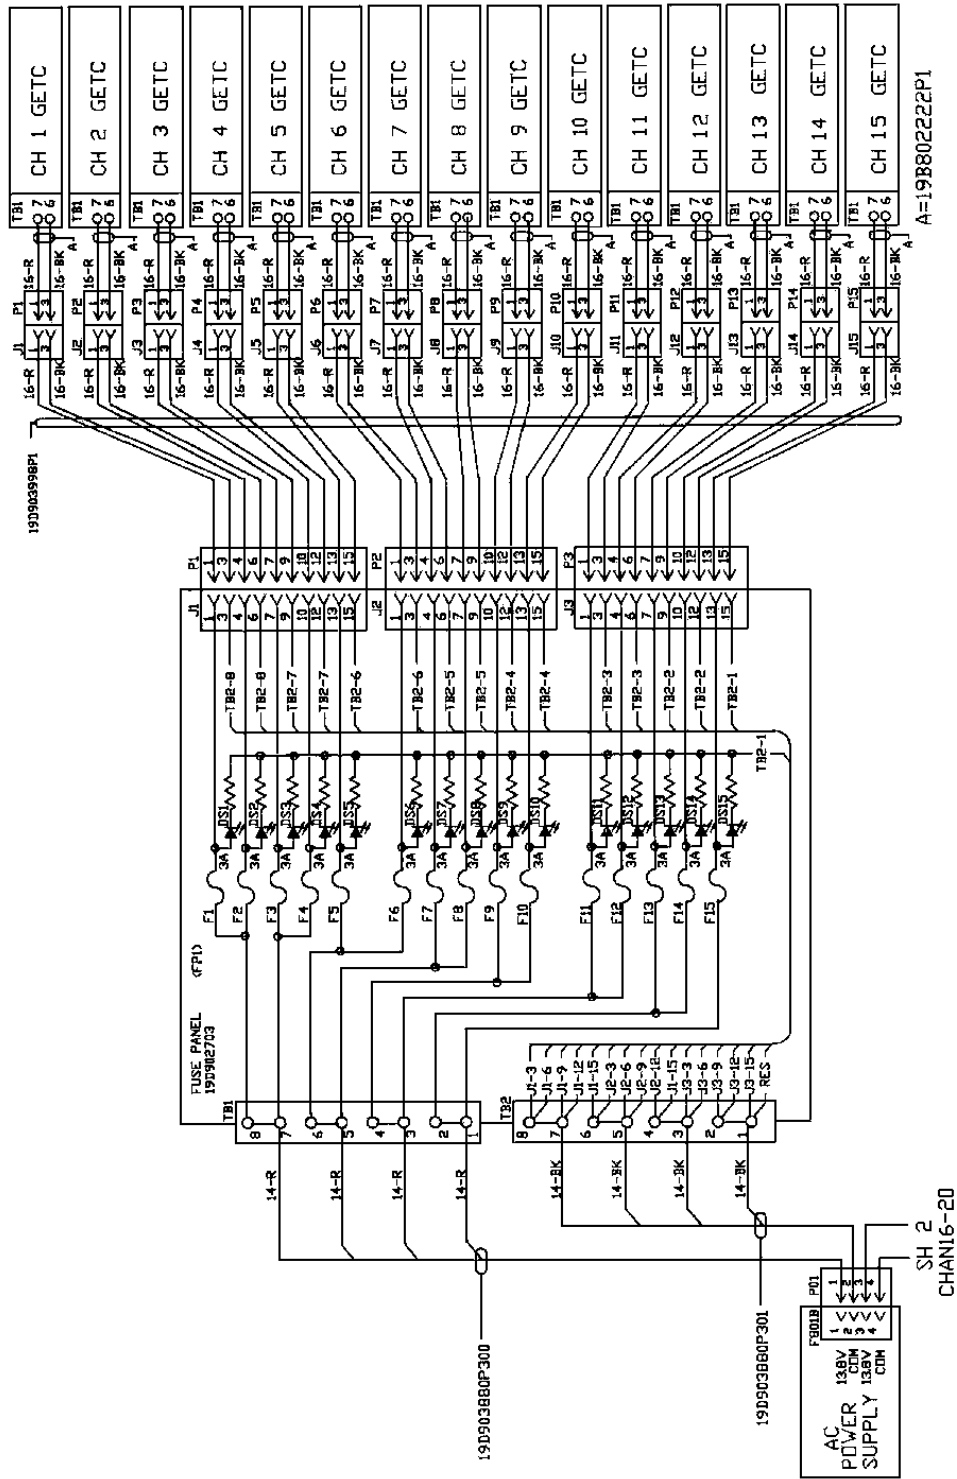


DC Power Wiring, GETC Cabinet, 20 Channels

(19C337779 Sh. 1 Rev. 0)

DC Power, GETC Cabinet, 20 Channels

(19C337779 Sh. 2 Rev. 0)

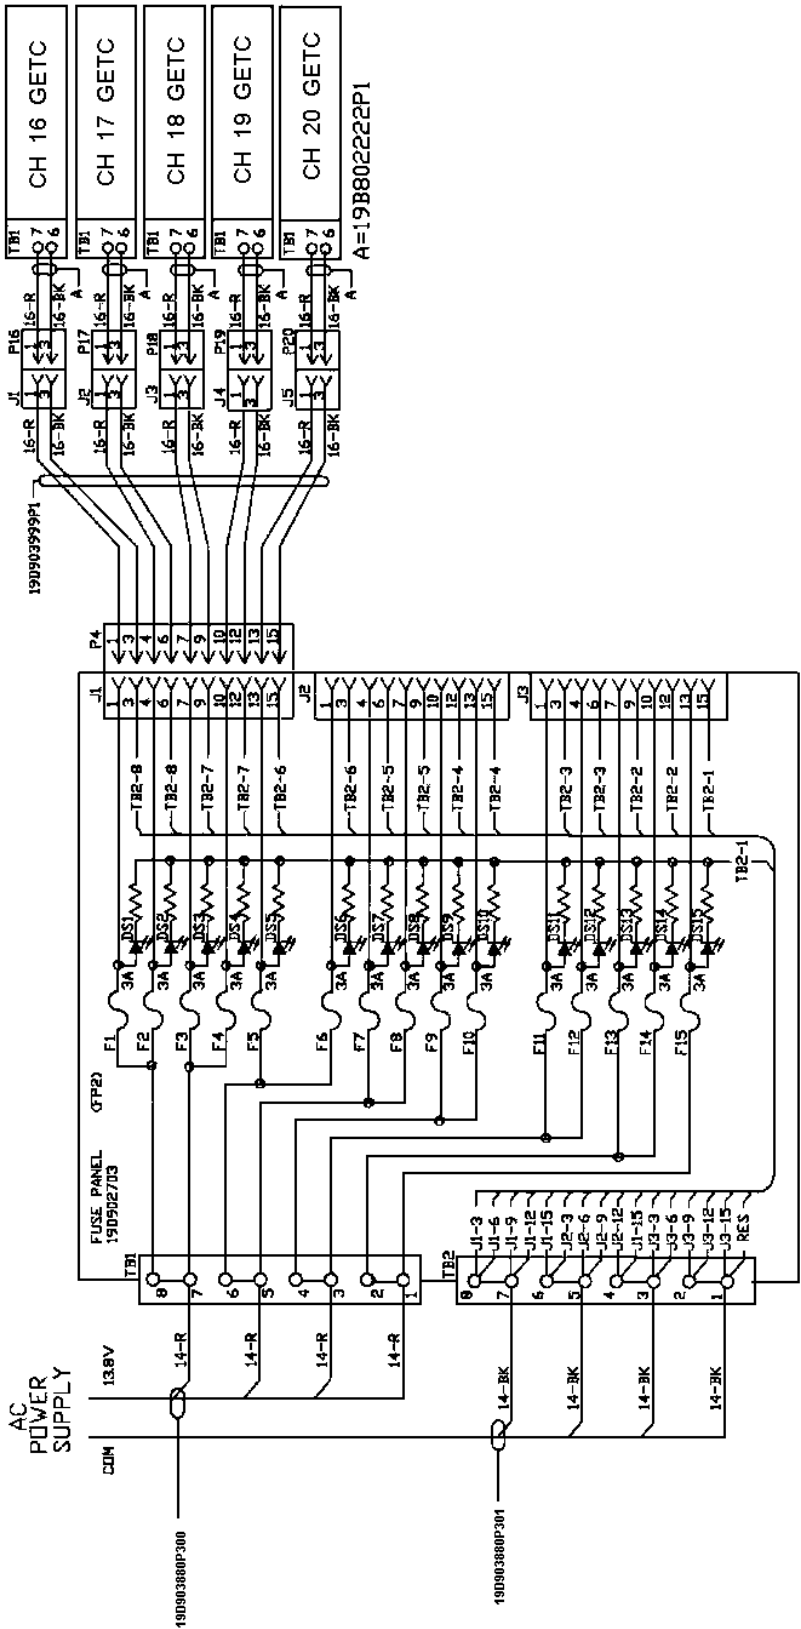

GETC DATA MODULE 1

FROM		TO		CABLE
CHANNEL 01	J01	GETC	J100	19D903880P21
CHANNEL 02	J02	GETC	J100	19D903880P21
CHANNEL 03	J03	GETC	J100	19D903880P21
CHANNEL 04	J04	GETC	J100	19D903880P21
CHANNEL 05	J05	GETC	J100	19D903880P21
CHANNEL 06	J06	GETC	J100	19D903880P21
CHANNEL 07	J07	GETC	J100	19D903880P21
CHANNEL 08	J08	GETC	J100	19D903880P21
CHANNEL 09	J09	GETC	J100	19D903880P21
CHANNEL 10	J10	GETC	J100	19D903880P21
CHANNEL 11	J11	GETC	J100	19D903880P22
CHANNEL 12	J12	GETC	J100	19D903880P22

GETC DATA MODULE 2

CHANNEL 13	J01	GETC	J100	19D903880P22
CHANNEL 14	J02	GETC	J100	19D903880P22
CHANNEL 15	J03	GETC	J100	19D903880P22
CHANNEL 16	J04	GETC	J100	19D903880P22
CHANNEL 17	J05	GETC	J100	19D903880P23
CHANNEL 18	J06	GETC	J100	19D903880P23
CHANNEL 19	J07	GETC	J100	19D903880P23
CHANNEL 20	J08	GETC	J100	19D903880P23
CHANNEL 21	J09	GETC	J100	19D903880P24
CHANNEL 22	J10	GETC	J100	19D903880P24
CHANNEL 23	J11	GETC	J100	19D903880P24
CHANNEL 24	J12	GETC	J100	19D903880P24

SERIAL MODULE 1

CHANNEL 01	J01	GETC	J102	19D903880P21
CHANNEL 02	J02	GETC	J102	19D903880P21
CHANNEL 03	J03	GETC	J102	19D903880P21
CHANNEL 04	J04	GETC	J102	19D903880P21
CHANNEL 05	J05	GETC	J102	19D903880P21
CHANNEL 06	J06	GETC	J102	19D903880P21
CHANNEL 07	J07	GETC	J102	19D903880P21
CHANNEL 08	J08	GETC	J102	19D903880P21
CHANNEL 09	J09	GETC	J102	19D903880P21
CHANNEL 10	J10	GETC	J102	19D903880P21
CHANNEL 11	J11	GETC	J102	19D903880P22
CHANNEL 12	J12	GETC	J102	19D903880P22
CHANNEL 13	J13	GETC	J102	19D903880P22
CHANNEL 14	J14	GETC	J102	19D903880P22
CHANNEL 15	J15	GETC	J102	19D903880P22
CHANNEL 16	J16	GETC	J102	19D903880P22
CHANNEL 17	J17	GETC	J102	19D903880P23

GETC Cable Connections, 24 Channels

(344A4660 Sh. 1, Rev. 1)

FROM		TO		CABLE
CHANNEL 18	J18	GETC	J102	19D903880P23
CHANNEL 19	J19	GETC	J102	19D903880P23
CHANNEL 20	J20	GETC	J102	19D903880P23
SERIAL MODULE 2				
SERIAL DATA FOR CH 21-24				
CHANNEL 21	J07GETCJ102	19D903880P24		
CHANNEL 22	J08GETCJ102	19D903880P24		
CHANNEL 23	J09GETCJ102	19D903880P24		
CHANNEL 24	J12GETCJ102	19D903880P24		
SERIAL MODULE 1 J22		SERIAL MODULE 2 J13		19D903880P160
RESET FOR CH 21-24				
CHANNEL 21	J03	GETCTB1-1/6*		19D903880P14
CHANNEL 22	J04	GETCTB1-1/6*		19D903880P14
CHANNEL 23	J05	GETCTB1-1/6*		19D903880P14
CHANNEL 24	J06	GETC TB1-1/6*		19D903880P14
GETC RESET	J21	SERIAL MODULE 2	J10	19D903880P160
* Wire Connections: Blue/White to TB1-1		White/Blue to TB1-6		
GETC RESET				
CHANNEL 01	J01	GETCTB1-1/6*		19D903880P11
CHANNEL 02	J02	GETCTB1-1/6*		19D903880P11
CHANNEL 03	J03	GETCTB1-1/6*		19D903880P11
CHANNEL 04	J04	GETCTB1-1/6*		19D903880P11
CHANNEL 05	J05	GETCTB1-1/6*		19D903880P11
CHANNEL 06	J06	GETCTB1-1/6*		19D903880P11
CHANNEL 07	J07	GETCTB1-1/6*		19D903880P11
CHANNEL 08	J08	GETCTB1-1/6*		19D903880P11
CHANNEL 09	J09	GETCTB1-1/6*		19D903880P11
CHANNEL 10	J10	GETCTB1-1/6*		19D903880P11
CHANNEL 11	J11	GETCTB1-1/6*		19D903880P12
CHANNEL 12	J12	GETCTB1-1/6*		19D903880P12
CHANNEL 13	J13	GETCTB1-1/6*		19D903880P12
CHANNEL 14	J14	GETCTB1-1/6*		19D903880P12
CHANNEL 15	J15	GETCTB1-1/6*		19D903880P12
CHANNEL 16	J16	GETCTB1-1/6*		19D903880P12
CHANNEL 17	J17	GETCTB1-1/6*		19D903880P13
CHANNEL 18	J18	GETCTB1-1/6*		19D903880P13
CHANNEL 19	J19	GETCTB1-1/6*		19D903880P13
CHANNEL 20	J20	GETCTB1-1/6*		19D903880P13
* Wire Connections: Blue/White to TB1-1		White/Blue to TB1-6		

GETC Cable Connections, 24 Channels

FROM		TO		CABLE
GETC INHIBIT/VOTER TONE DETECT/RS232 TO VOTER SELECTOR- MODULE 1				
CHANNEL 01	J01	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 02	J02	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 03	J03	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 04	J04	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 05	J05	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 06	J06	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 07	J07	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 08	J08	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 09	J09	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 10	J10	GETC	TB1-2/3/4/5	19D903880P11
CHANNEL 11	J11	GETC	TB1-2/3/4/	519D903880P12
CHANNEL 12	J12	GETC	TB1-2/3/4/5	19D903880P12
Wire Connections:		Blue/White to TB1-2 Orange/White to TB1-4	White/Blue to TB1-3 White/Orange to TB1-5	
GETC INHIBIT/VOTER TONE DETECT/RS232 TO VOTER SELECTOR-MODULE 2				
CHANNEL 13	J01	GETC	TB1-2/3/4/5	19D903880P12
CHANNEL 14	J02	GETC	TB1-2/3/4/5	19D903880P12
CHANNEL 15	J03	GETC	TB1-2/3/4/5	19D903880P12
CHANNEL 16	J04	GETC	TB1-2/3/4/5	19D903880P12
CHANNEL 17	J05	GETC	TB1-2/3/4/5	19D903880P13
CHANNEL 18	J06	GETC	TB1-2/3/4/5	19D903880P13
CHANNEL 19	J07	GETC	TB1-2/3/4/5	19D903880P13
CHANNEL 20	J08	GETC	TB1-2/3/4/5	19D903880P13
CHANNEL 21	J05	GETC	TB1-2/3/4/5	19D903880P14
CHANNEL 22	J06	GETC	TB1-2/3/4/5	19D903880P14
CHANNEL 23	J07	GETC	TB1-2/3/4/5	19D903880P14
CHANNEL 24	J08	GETC	TB1-2/3/4/5	19D903880P14
Wire Connections:		Blue/White to TB1-2 Orange/White to TB1-4	White/Blue to TB1-3 White/Orange to TB1-5	
DC POWER CONNECTION TO GETC				
CHANNEL 01	J01	GETC	TB1-6/7*	19B802222P1
CHANNEL 02	J02	GETC	TB1-6/7*	19B802222P1
CHANNEL 03	J03	GETC	TB1-6/7*	19B802222P1
CHANNEL 04	J04	GETC	TB1-6/7*	19B802222P1
CHANNEL 05	J05	GETC	TB1-6/7*	19B802222P1
CHANNEL 06	J06	GETC	TB1-6/7*	19B802222P1
CHANNEL 07	J07	GETC	TB1-6/7*	19B802222P1
CHANNEL 08	J08	GETC	TB1-6/7*	19B802222P1
CHANNEL 09	J09	GETC	TB1-6/7*	19B802222P1

GETC Cable Connections, GETC to Voter Selector, 24 Channels


FROM		TO		CABLE		FROM		TO		CABLE	
CHANNEL 10	J10	GETCTB1-6/7*		19B802222P1		TB2-5		P01-4	BLACK		
CHANNEL 11	J11	GETCTB1-6/7*		19B802222P1		TB2-7		P01-4	BLACK		
CHANNEL 12	J12	GETCTB1-6/7*		19B802222P1		TB1-1		TB1-2		7143964P1	
CHANNEL 13	J13	GETCTB1-6/7*		19B802222P1		TB1-3		TB1-4		7143964P1	
CHANNEL 14	J14	GETCTB1-6/7*		19B802222P1		TB1-5		TB1-6		7143964P1	
CHANNEL 15	J15	GETCTB1-6/7*		19B802222P1		TB1-7		TB1-8		7143964P1	
CHANNEL 16	J16	GETCTB1-6/7*		19B802222P1		TB2-1		TB2-2		7143964P1	
CHANNEL 17	J17	GETCTB1-6/7*		19B802222P1		TB2-3		TB2-4		7143964P1	
CHANNEL 18	J18	GETCTB1-6/7*		19B802222P1		TB2-5		TB2-6		7143964P1	
CHANNEL 19	J19	GETCTB1-6/7*		19B802222P1		TB2-7		TB2-8		7143964P1	
CHANNEL 20	J20	GETCTB1-6/7*		19B802222P1		J1		P4		19D903998P1	
CHANNEL 21	J21	GETCTB1-6/7*		19B802222P1		J2		P5			
CHANNEL 22	J22	GETCTB1-6/7*		19B802222P1		J3		P6			
CHANNEL 23	J23	GETCTB1-6/7*		19B802222P1							
CHANNEL 24	J24	GETCTB1-6/7*		19B802222P1							
						GETC CHANNEL		P01 J01		19D903998P1	
						GETC CHANNEL		P02 J02			
						GETC CHANNEL		P03 J03			
						GETC CHANNEL		P04 J04			
						GETC CHANNEL		P05 J05			
						GETC CHANNEL		P06 J06			
						GETC CHANNEL		P07 J07			
						GETC CHANNEL		P08 J08			
						GETC CHANNEL		P09 J09			
						GETC CHANNEL		P10 J10			
						GETC CHANNEL		P11 J11			
						GETC CHANNEL		P12 J12			
						GETC CHANNEL		P13 J13			
						GETC CHANNEL		P14 J14			
						GETC CHANNEL		P15 J15			
						GETC CHANNEL		P16 J01		19D903998P1	
						GETC CHANNEL		P17 J02			
						GETC CHANNEL		P18 J03			
						GETC CHANNEL		P19 J04			
						GETC CHANNEL		P20 J05			
						GETC CHANNEL		P21 J06			
						GETC CHANNEL		P22 J07			
						GETC CHANNEL		P23 J08			
						GETC CHANNEL		P24 J09			

Cable Connections, DC Power To GETC & Fuse Panel 1, 24 Channels

(344A4660 Sh. 4, Rev. 1)

GETC DC Power Connections, Fuse Panel 2, 24 Channels

(344A4660 Sh. 5, Rev. 1)

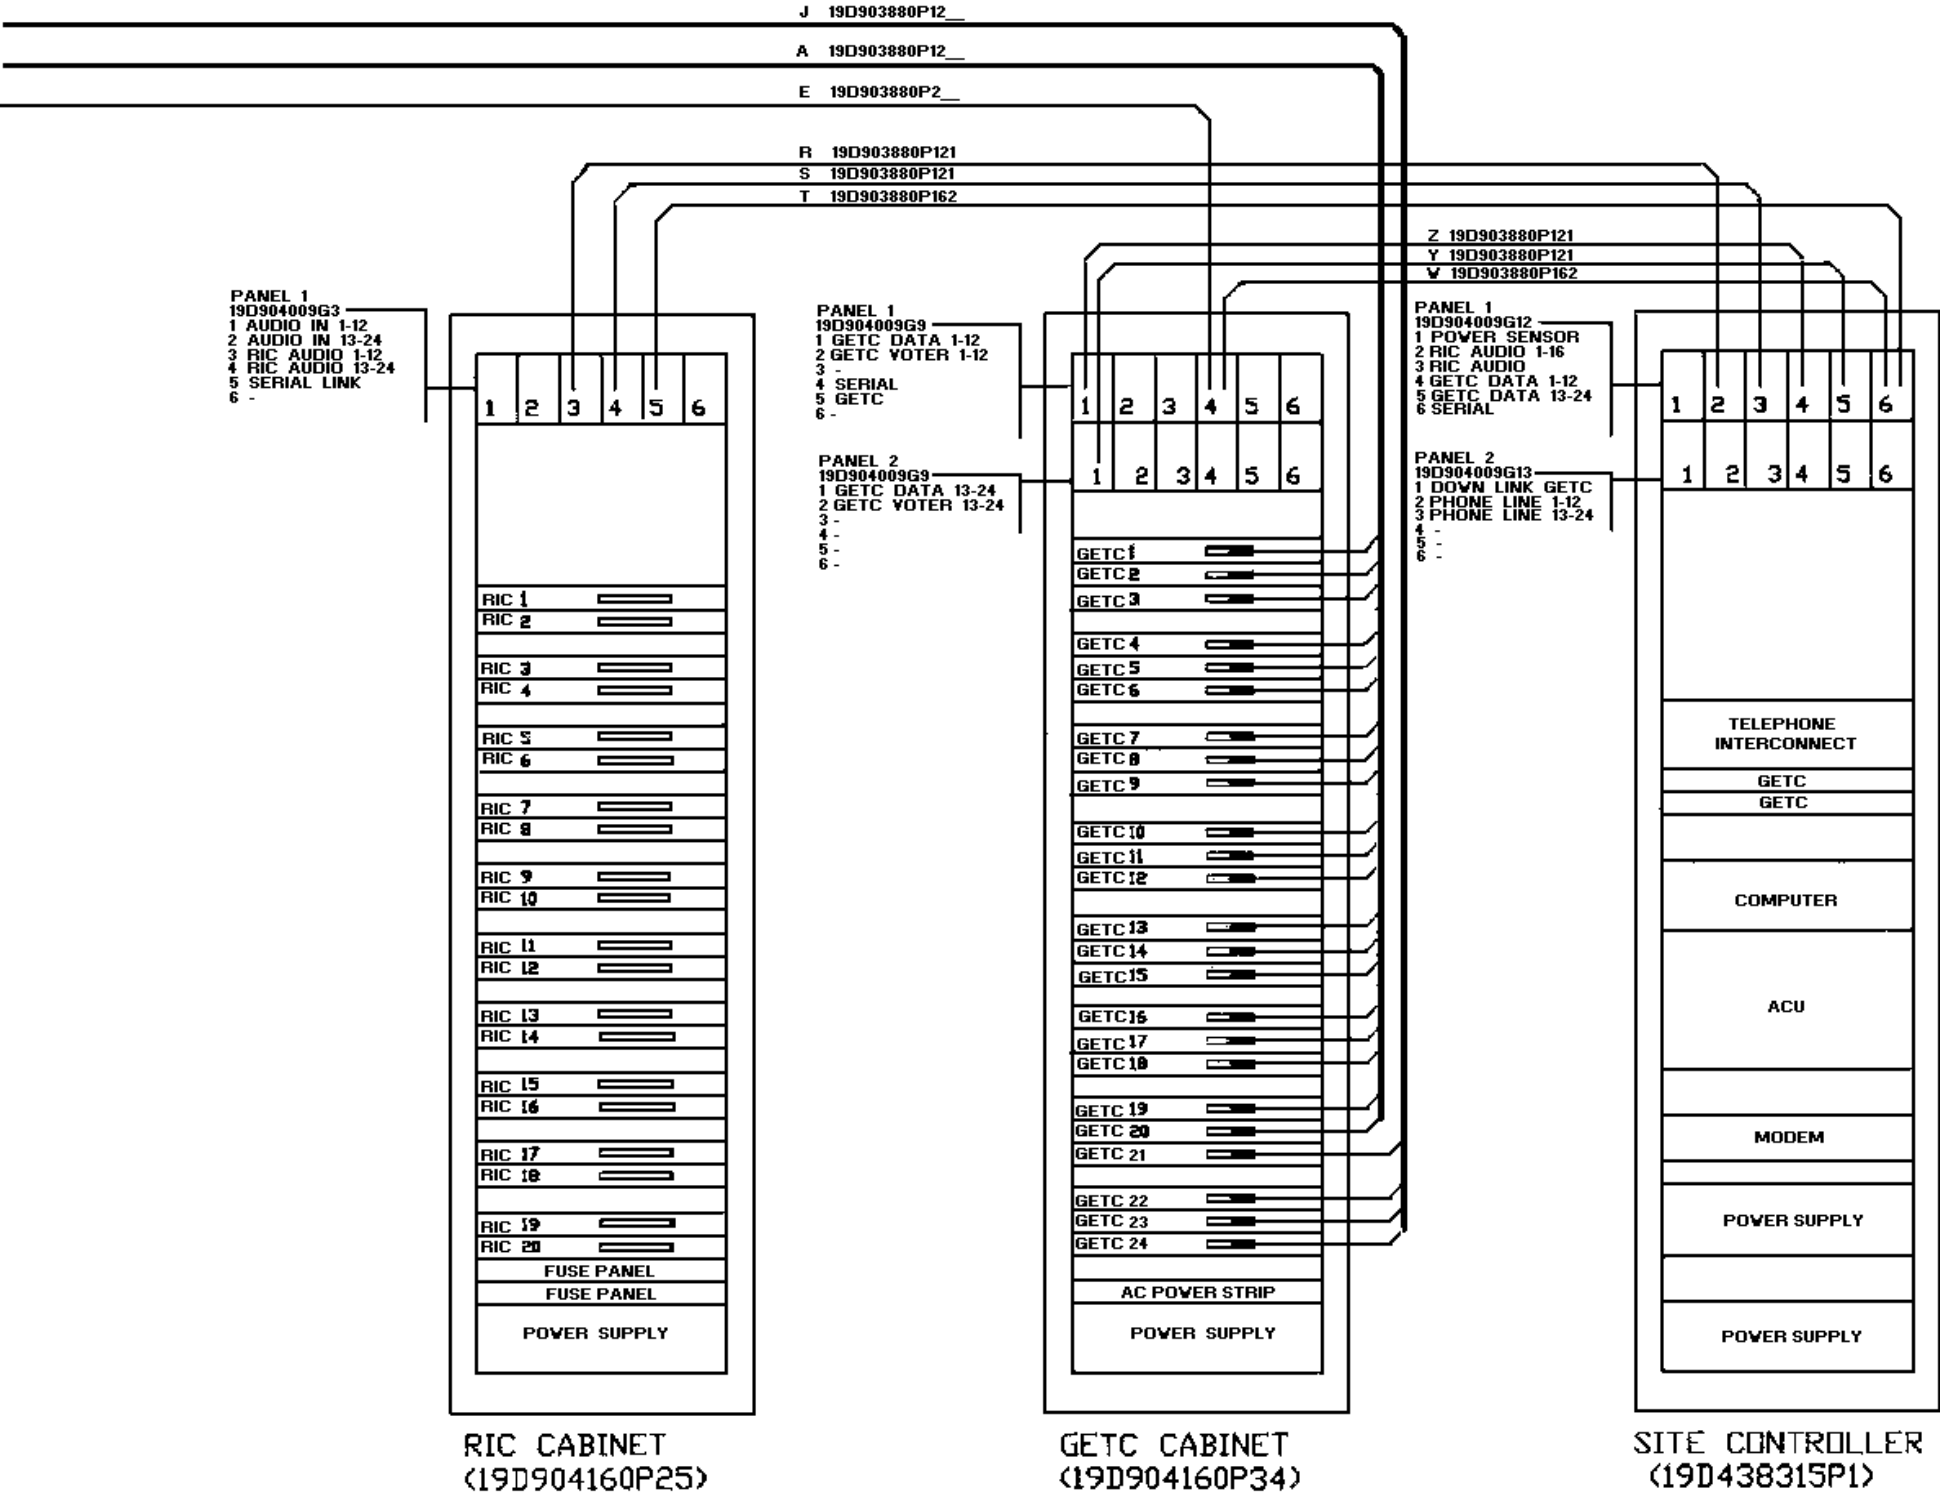


BACK VIEW OF RACKS

SEE CONNECTION LIST FOR WIRING DETAILS

System Interrack Cabling, 24 Channels

(19C852388 Sh. 1 Rev. 0)


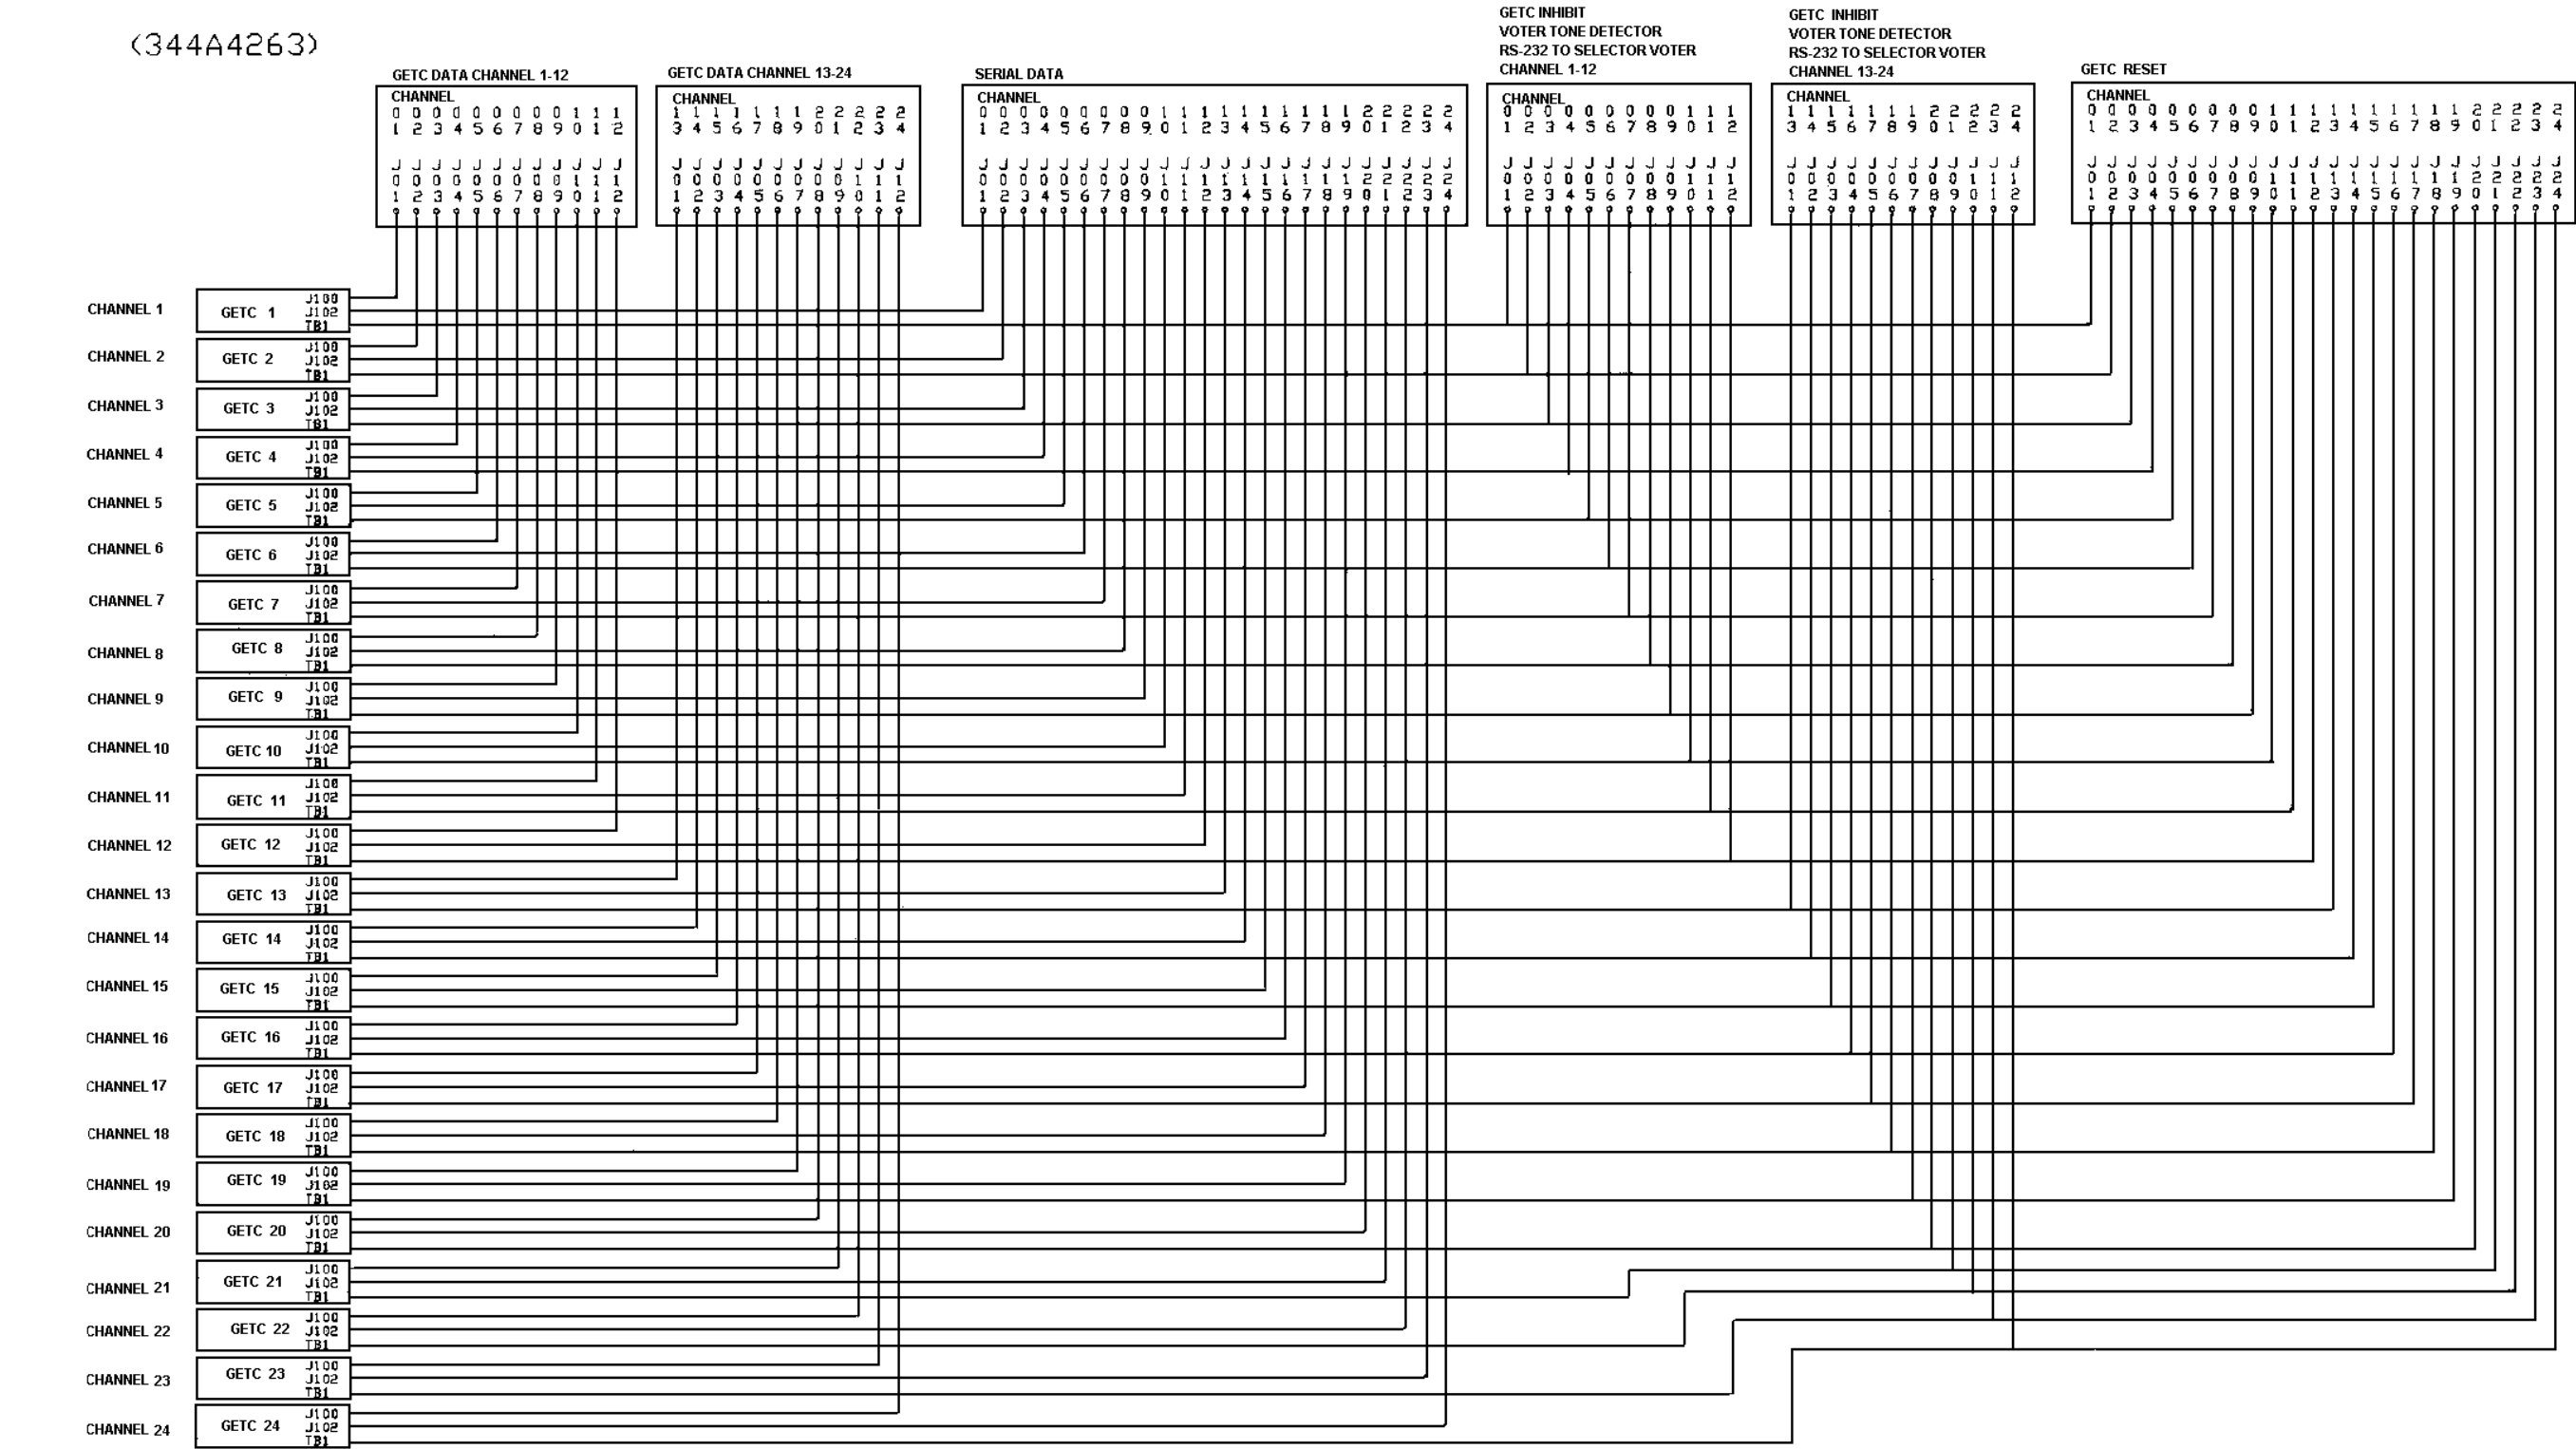


Intrrack Wiring , Station GETC, 24 Channels

(19D904230 Sh. 8, Rev. 0)


DC Power Wiring Diagram, GETC Rack, 24 Channel

(19C337780 Sh. 1, Rev. 0)

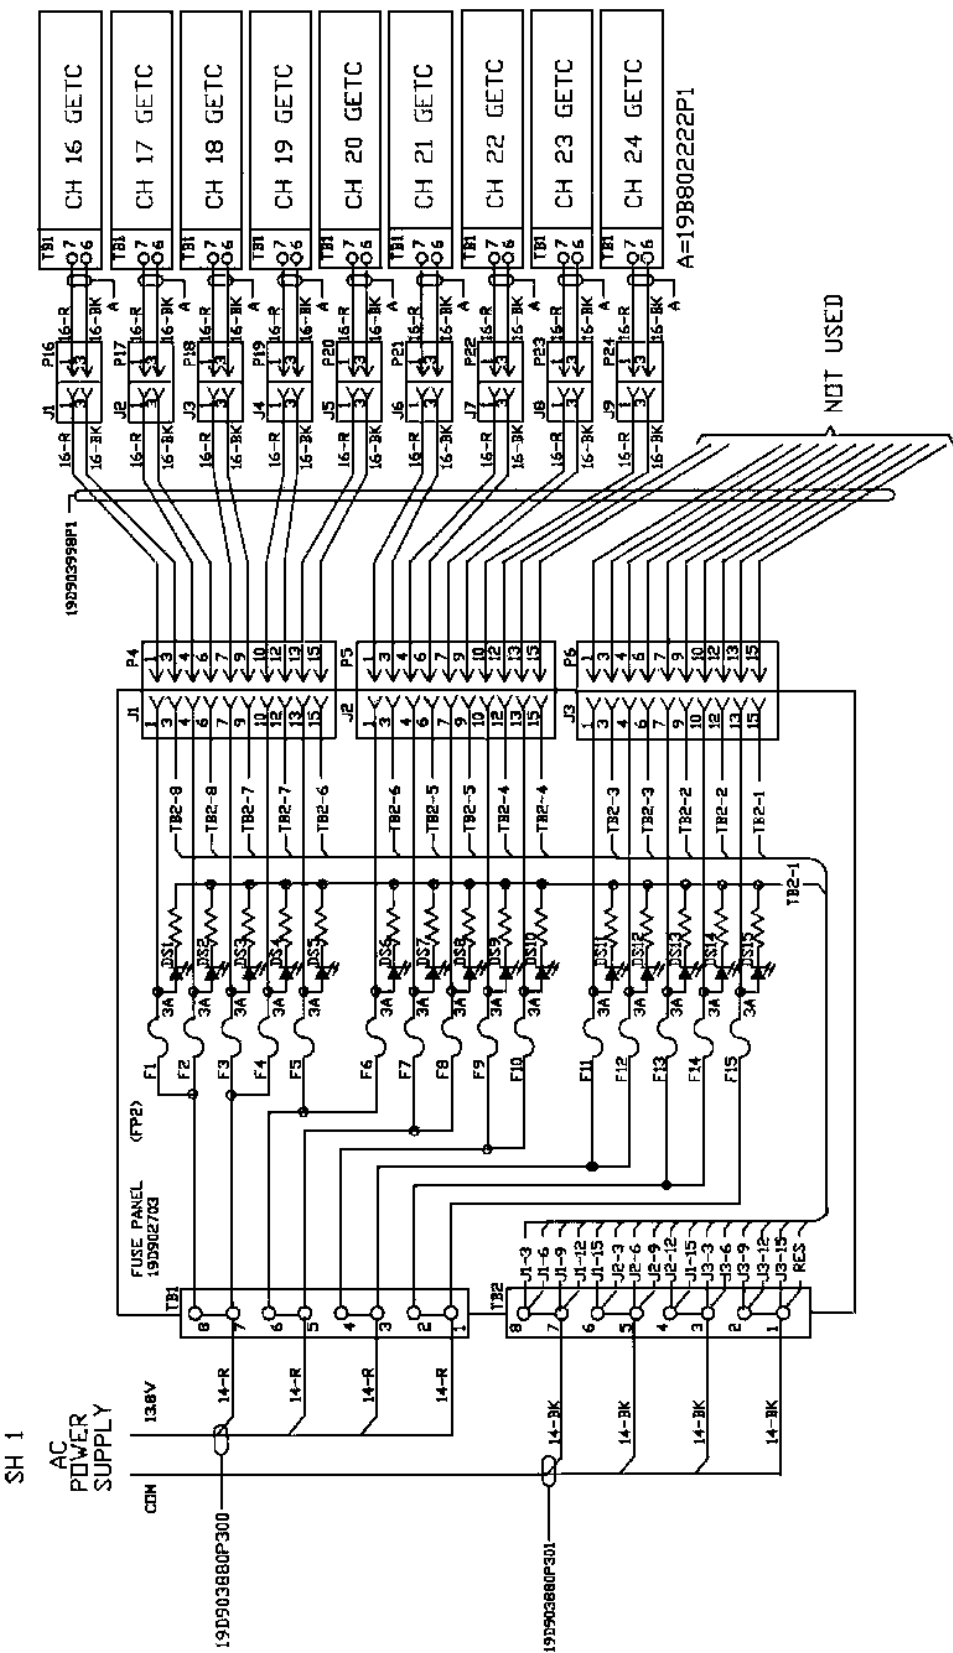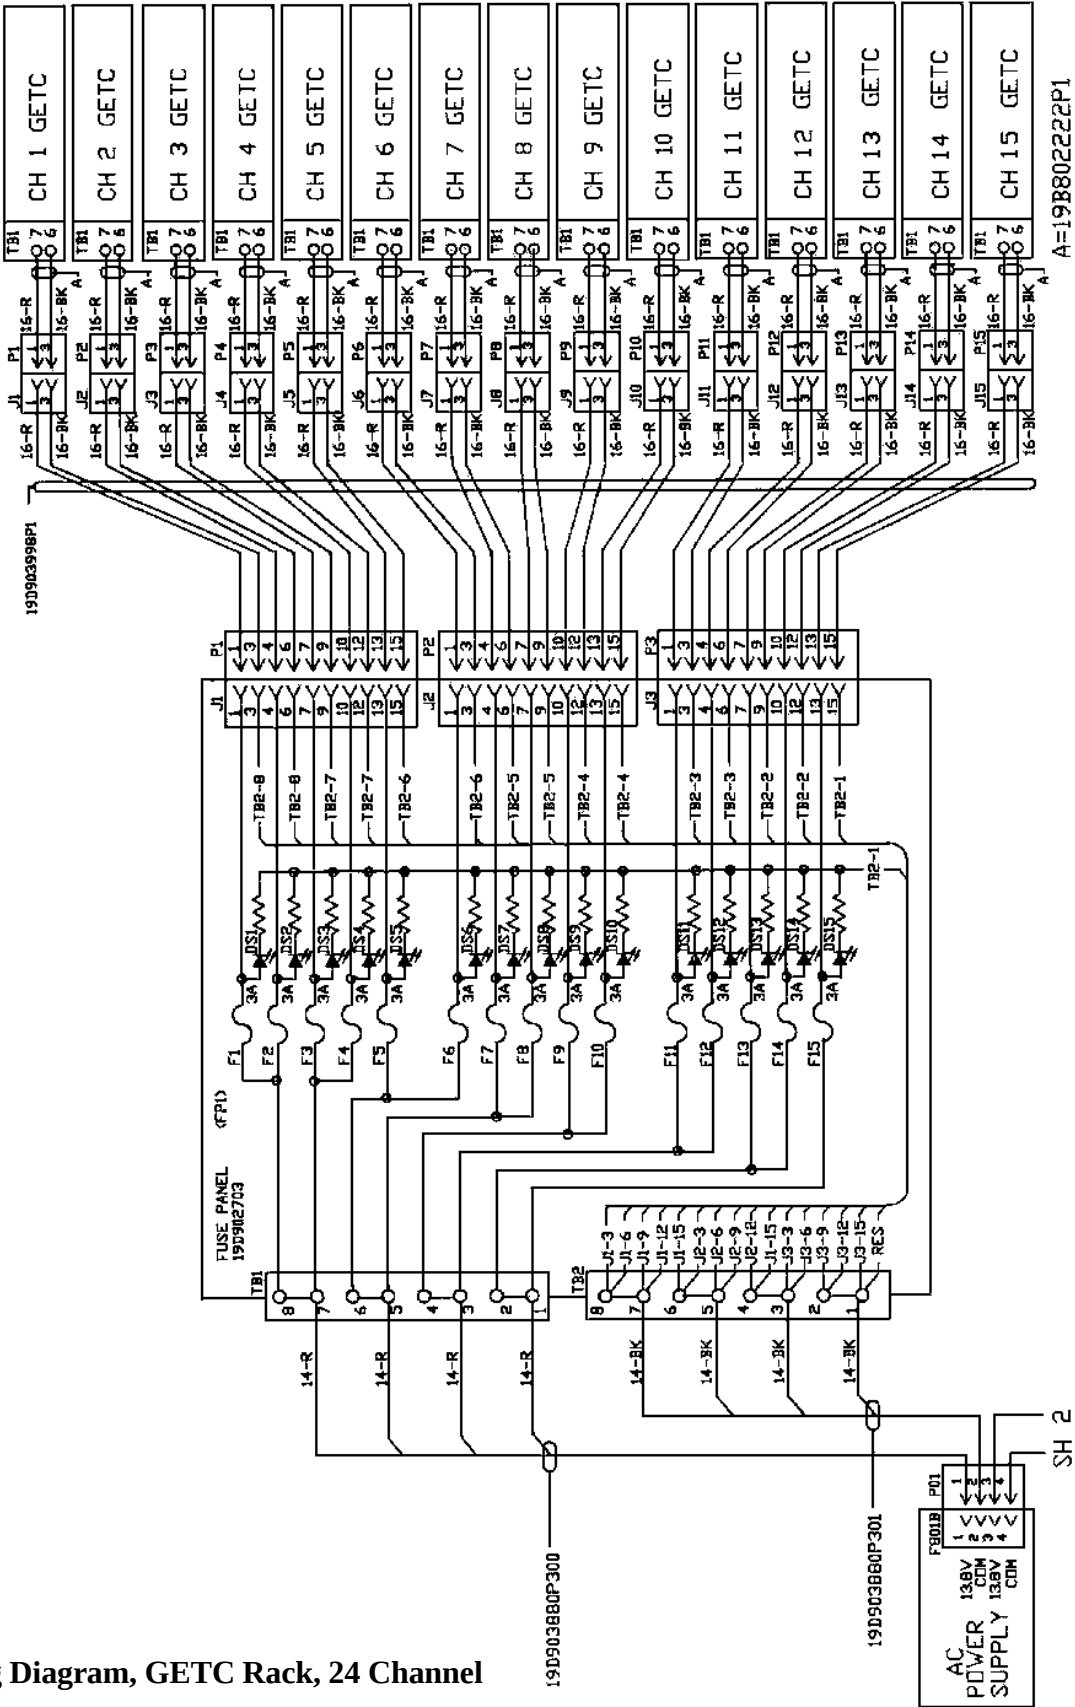


DC Power Wiring Diagram, GETC Rack, 24 Channel


(19C337780 Sh. 2, Rev. 0)

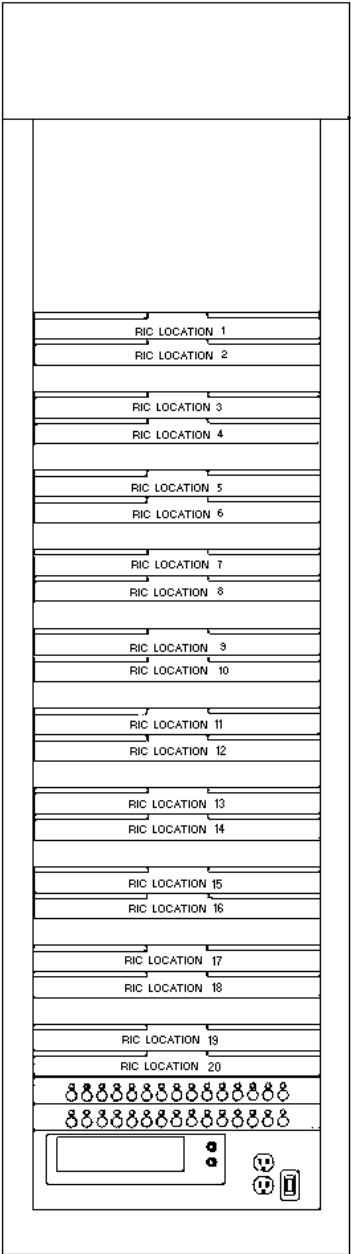

26 RIC CABINET
FRONT VIEW

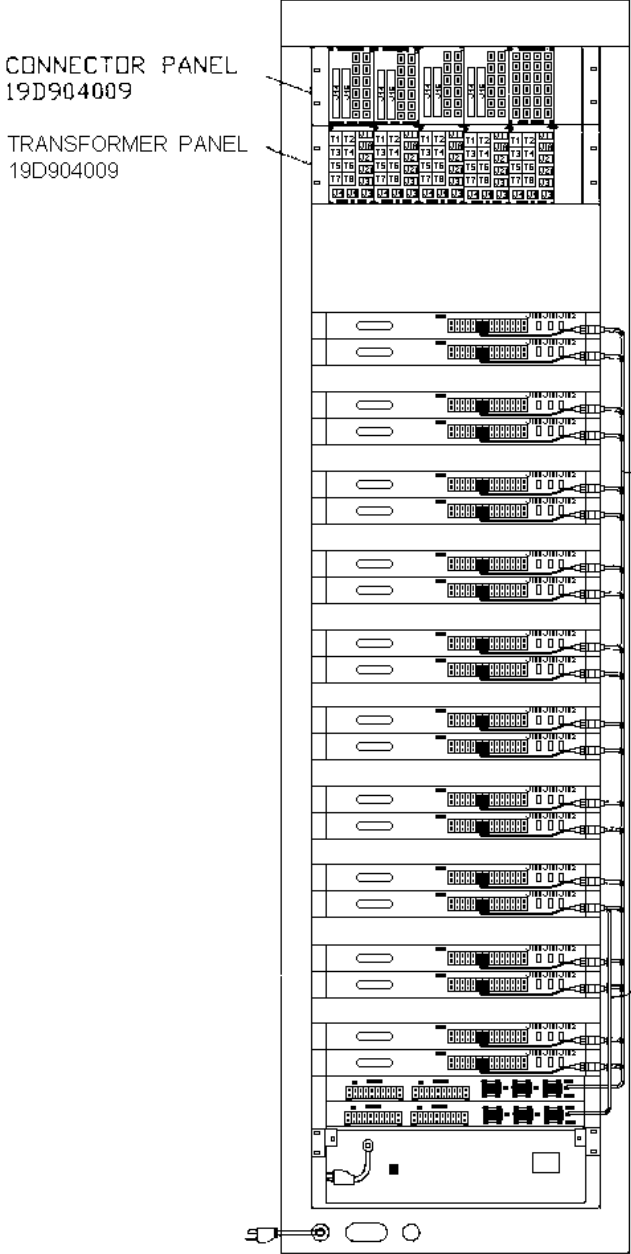

RIC CABINET
REAR VIEW
(POWER WIRING)

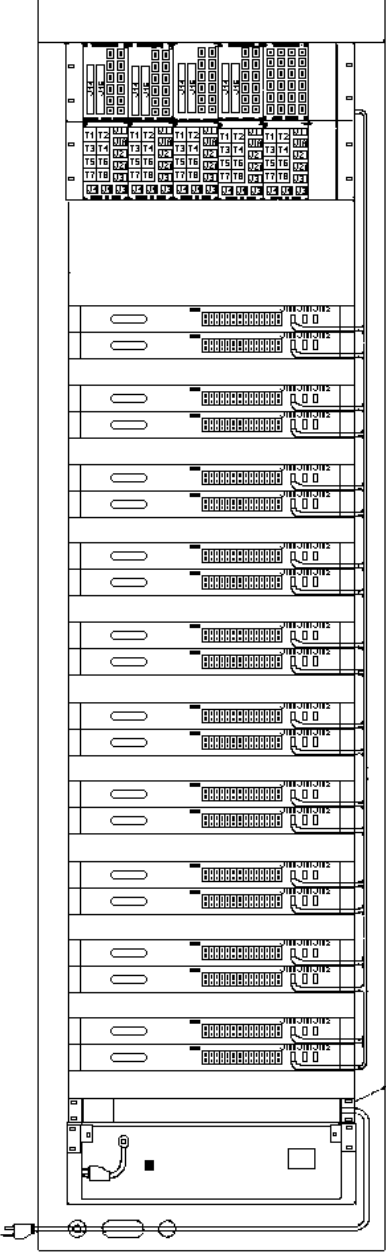

RIC CABINET
REAR VIEW
(SIGNAL WIRING)

RIC Cabinet Equipment Rackup
19D904160P25

(19D904160 Sh. 13 Rev. 2)

SEE 344A4264 FOR
MODULE IDENTIFICATION
AND CONNECTION LIST


FROM		TO		CABLE
RIC AUDIO #1 TO LIX PANEL				
CHANNEL 01	J01	RIC 01	J100	19D903880P41
CHANNEL 02	J02	RIC 02	J100	19D903880P41
CHANNEL 03	J03	RIC 03	J100	19D903880P41
CHANNEL 04	J04	RIC 04	J100	19D903880P41
CHANNEL 05	J05	RIC 05	J100	19D903880P41
CHANNEL 06	J06	RIC 06	J100	19D903880P41
CHANNEL 07	J07	RIC 07	J100	19D903880P41
CHANNEL 08	J08	RIC 08	J100	19D903880P41
CHANNEL 09	J09	RIC 09	J100	19D903880P41
CHANNEL 10	J10	RIC 10	J100	19D903880P41
CHANNEL 11	J11	RIC 11	J100	19D903880P41
CHANNEL 12	J12	RIC 12	J100	19D903880P41
RIC AUDIO 2 TO LIX PANEL				
CHANNEL 13	J01	RIC #13	J100	19D903880P43
CHANNEL 14	J02	RIC #14	J100	19D903880P43
CHANNEL 15	J03	RIC #15	J100	19D903880P43
CHANNEL 16	J04	RIC #16	J100	19D903880P43
CHANNEL 17	J05	RIC #17	J100	19D903880P43
CHANNEL 18	J06	RIC #18	J100	19D903880P43
CHANNEL 19	J07	RIC #19	J100	19D903880P43
CHANNEL 20	J08	RIC #20	J100	19D903880P43
DC POWER WIRING				
RIC CHANNEL 01	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 02	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 03	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 04	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 05	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 06	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 07	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 08	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 09	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 10	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 11	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 12	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 13	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 14	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 15	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 16	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 17	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 18	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 19	TB10-7 RED	TB10-6 BLACK		19B802222P1
RIC CHANNEL 20	TB10-7 RED	TB10-6 BLACK		19B802222P1

FROM			TO		CABLE
PHONE LINES TRANSFORMER MODULE 1 (PANEL 2--19D904009G)					
CHANNEL 01	TRANS MODULE 1	J01	RIC 01	TB10-9/10/11/12*	19D903880P11
CHANNEL 02	TRANS MODULE 1	J02	RIC 02	TB10-9/10/11/12*	19D903880P11
CHANNEL 03	TRANS MODULE 1	J03	RIC 03	TB10-9/10/11/12*	19D903880P11
CHANNEL 04	TRANS MODULE 1	J04	RIC 04	TB10-9/10/11/12*	19D903880P11
PHONE LINES TRANSFORMER MODULE 2 (PANEL 2--19D904009G)					
CHANNEL 05	TRANS MODULE 2	J01	RIC 05	TB10-9/10/11/12*	19D903880P11
CHANNEL 06	TRANS MODULE 2	J02	RIC 06	TB10-9/10/11/12*	19D903880P11
CHANNEL 07	TRANS MODULE 2	J03	RIC 07	TB10-9/10/11/12*	19D903880P11
CHANNEL 08	TRANS MODULE 2	J04	RIC 08	TB10-9/10/11/12*	19D903880P11
PHONE LINES TRANSFORMER MODULE 3 (PANEL 2--19D904009G)					
CHANNEL 09	TRANS MODULE 3	J01	RIC 09	TB10-9/10/11/12*	19D903880P11
CHANNEL 10	TRANS MODULE 3	J02	RIC 10	TB10-9/10/11/12*	19D903880P11
CHANNEL 11	TRANS MODULE 3	J03	RIC 11	TB10-9/10/11/12*	19D903880P11
CHANNEL 12	TRANS MODULE 3	J04	RIC 12	TB10-9/10/11/12*	19D903880P11
PHONE LINES TRANSFORMER MODULE 4 (PANEL 2--19D904009G)					
CHANNEL 13	TRANS MODULE 4	J01	RIC 13	TB10-9/10/11/12*	19D903880P13
CHANNEL 14	TRANS MODULE 4	J02	RIC 14	TB10-9/10/11/12*	19D903880P13
CHANNEL 15	TRANS MODULE 4	J03	RIC 15	TB10-9/10/11/12*	19D903880P13
CHANNEL 16	TRANS MODULE 4	J04	RIC 16	TB10-9/10/11/12*	19D903880P13
PHONE LINES TRANSFORMER MODULE 5 (PANEL 2--19D904009G)					
CHANNEL 17	TRANS MODULE 5	J01	RIC 17	TB10-9/10/11/12*	19D903880P13
CHANNEL 18	TRANS MODULE 5	J02	RIC 18	TB10-9/10/11/12*	19D903880P13
CHANNEL 19	TRANS MODULE 5	J03	RIC 19	TB10-9/10/11/12*	19D903880P13
CHANNEL 20	TRANS MODULE 5	J04	RIC 20	TB10-9/10/11/12*	19D903880P13
* Wire Connections:	Blue/White	TB10-9	White/Blue	TB10-9	
	Orange/White	TB10-11	White/Orange	TB10-12	
AUDIO IN 1					
CHANNEL 01	TRANS MODULE 1	J01A	RIC AUDIO MODULE 1		J0119D90388P160
CHANNEL 02	TRANS MODULE 1	J02A	RIC AUDIO MODULE 1		J0219D90388P160
CHANNEL 03	TRANS MODULE 1	J03A	RIC AUDIO MODULE 1		J0319D90388P160
CHANNEL 04	TRANS MODULE 1	J04A	RIC AUDIO MODULE 1		J0419D90388P160
CHANNEL 05	TRANS MODULE 2	J01A	RIC AUDIO MODULE 1		J0519D90388P160
CHANNEL 06	TRANS MODULE 2	J02A	RIC AUDIO MODULE 1		J0619D90388P160
CHANNEL 07	TRANS MODULE 2	J03A	RIC AUDIO MODULE 1		J0719D90388P160
CHANNEL 08	TRANS MODULE 2	J04A	RIC AUDIO MODULE 1		J0819D90388P160
CHANNEL 09	TRANS MODULE 3	J01A	RIC AUDIO MODULE 1		J0919D90388P160
CHANNEL 10	TRANS MODULE 3	J02A	RIC AUDIO MODULE 1		J1019D90388P160
CHANNEL 11	TRANS MODULE 3	J03A	RIC AUDIO MODULE 1		J1119D90388P160
CHANNEL 12	TRANS MODULE 3	J04A	RIC AUDIO MODULE 1		J1219D90388P160

RIC CABINET
Telephone Lines & DC Power


RIC CABINET
Phone Line Transformer/RIC Audio

(344A4264 Sh. 2, Rev. 2)

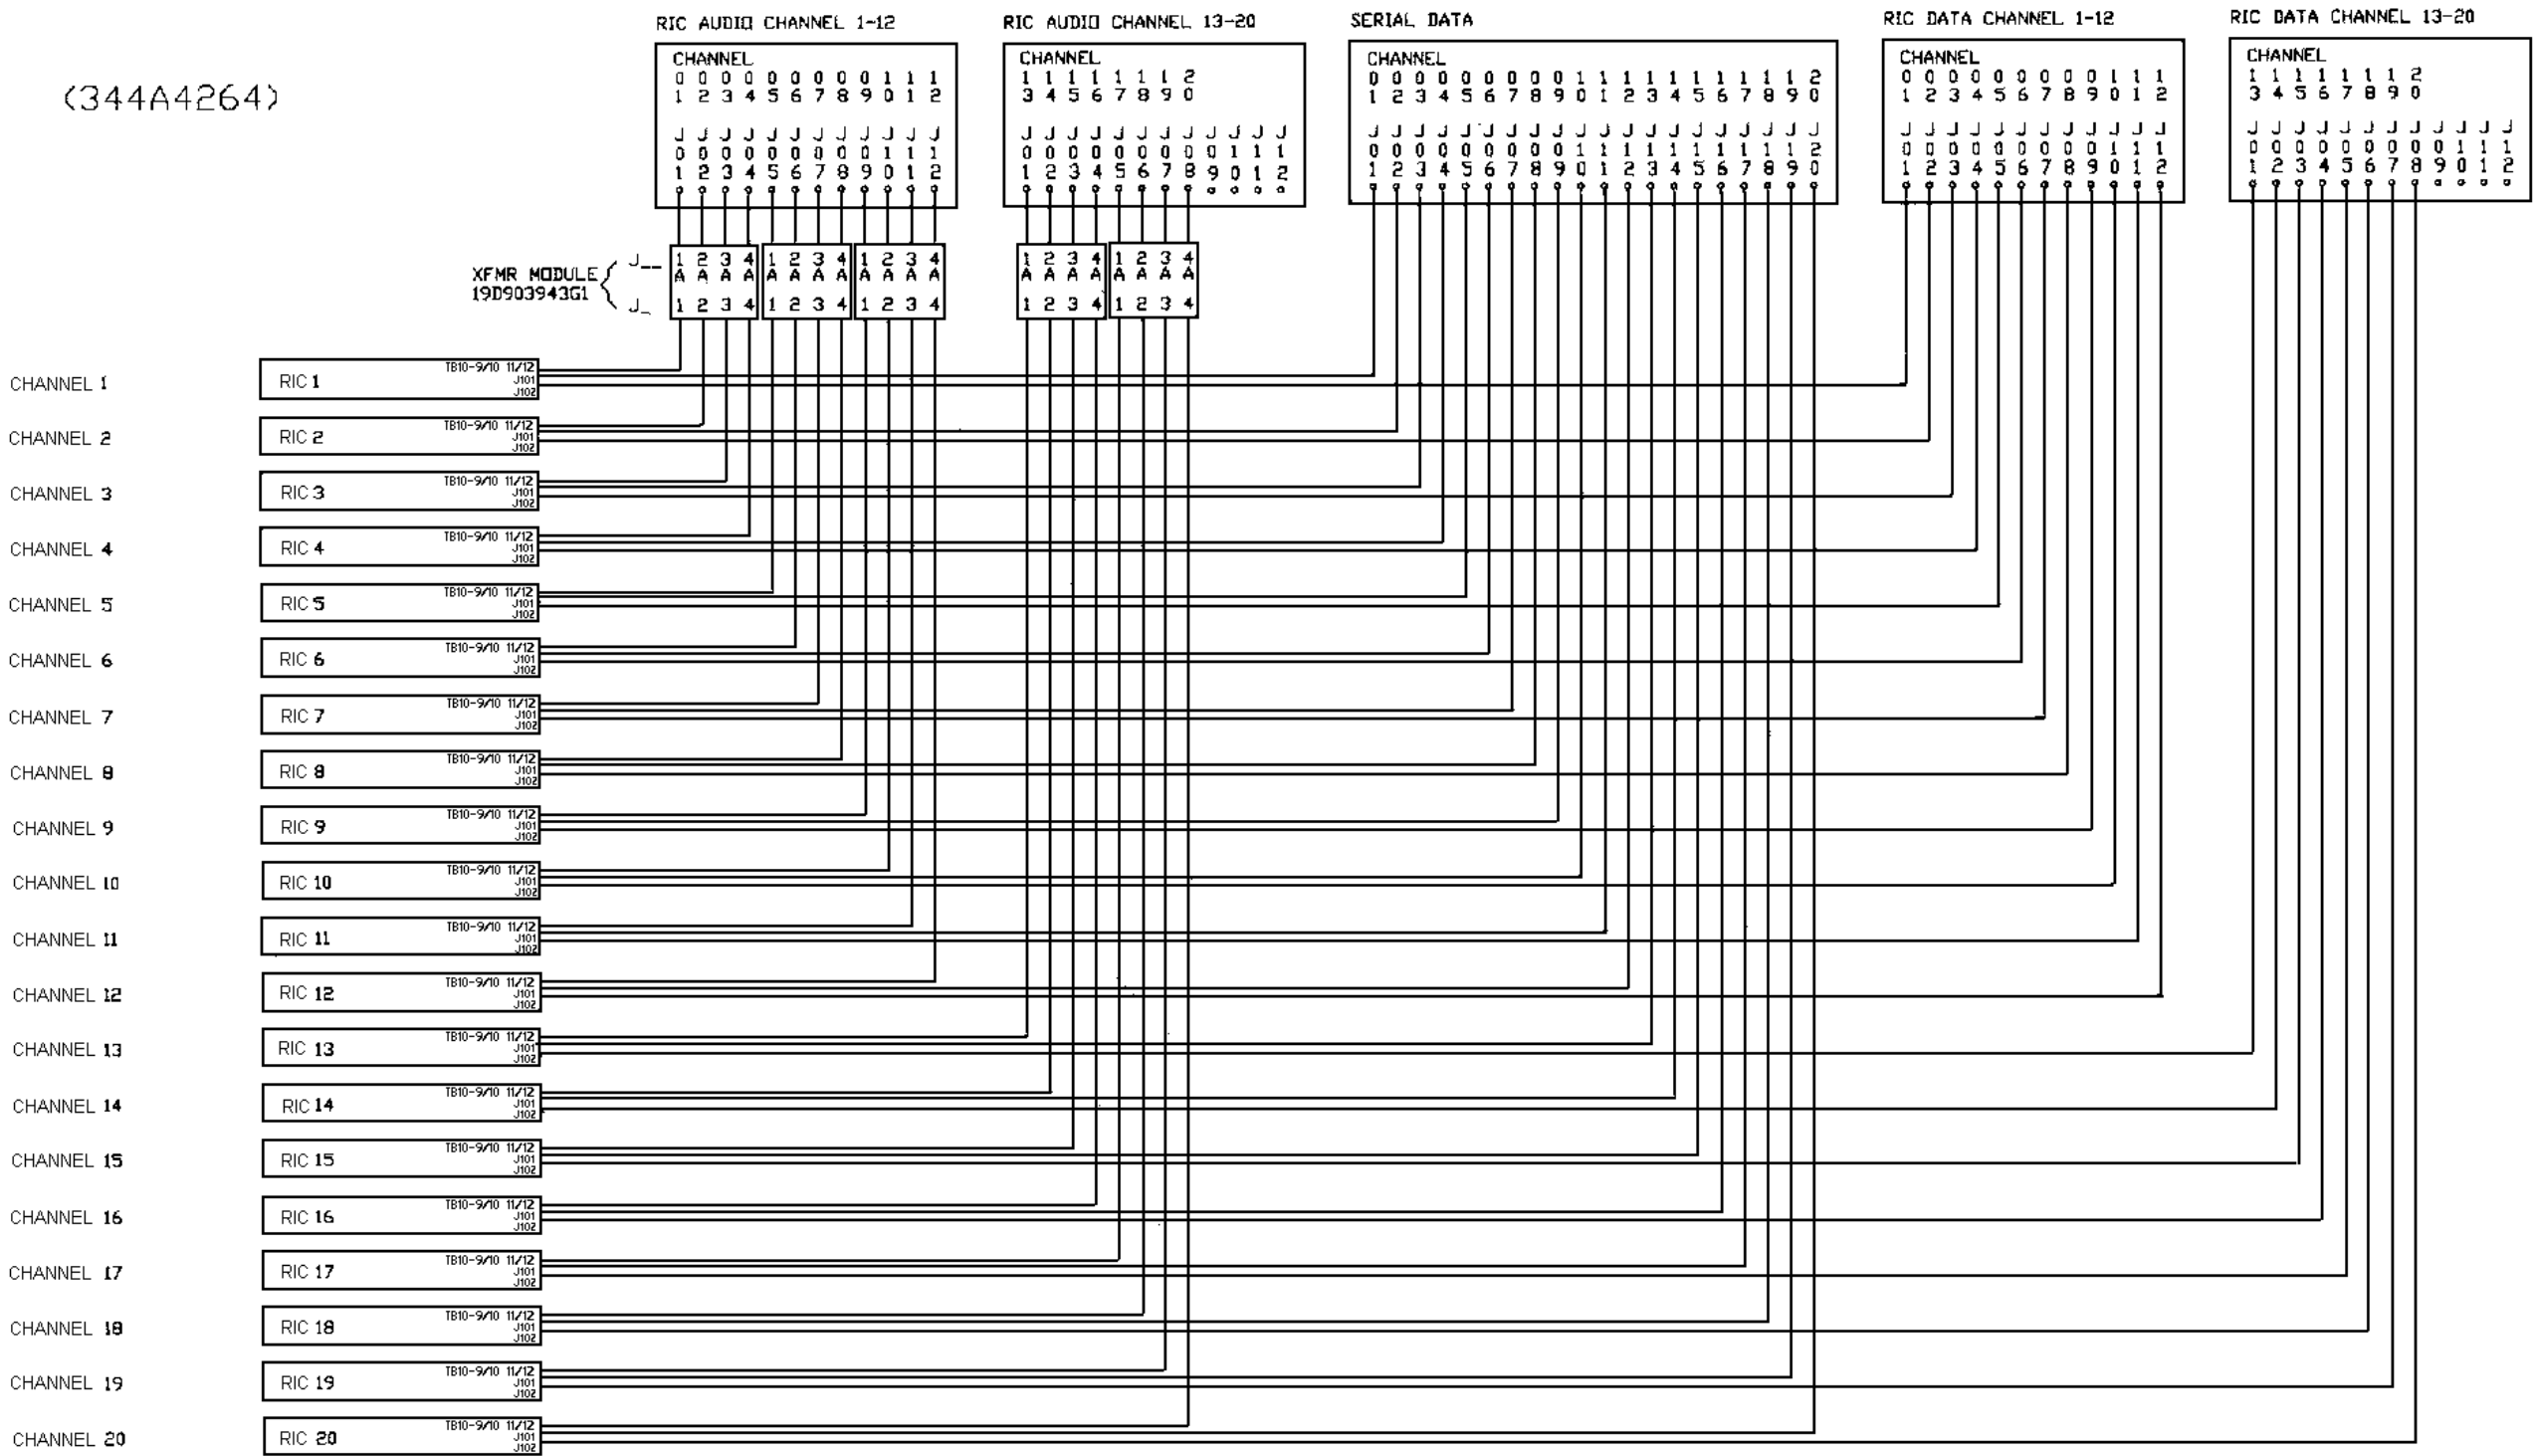


RIC Intra Cabinet Wiring, 20/24 Channels

(19D904230 Sh. 5, Rev. 1)

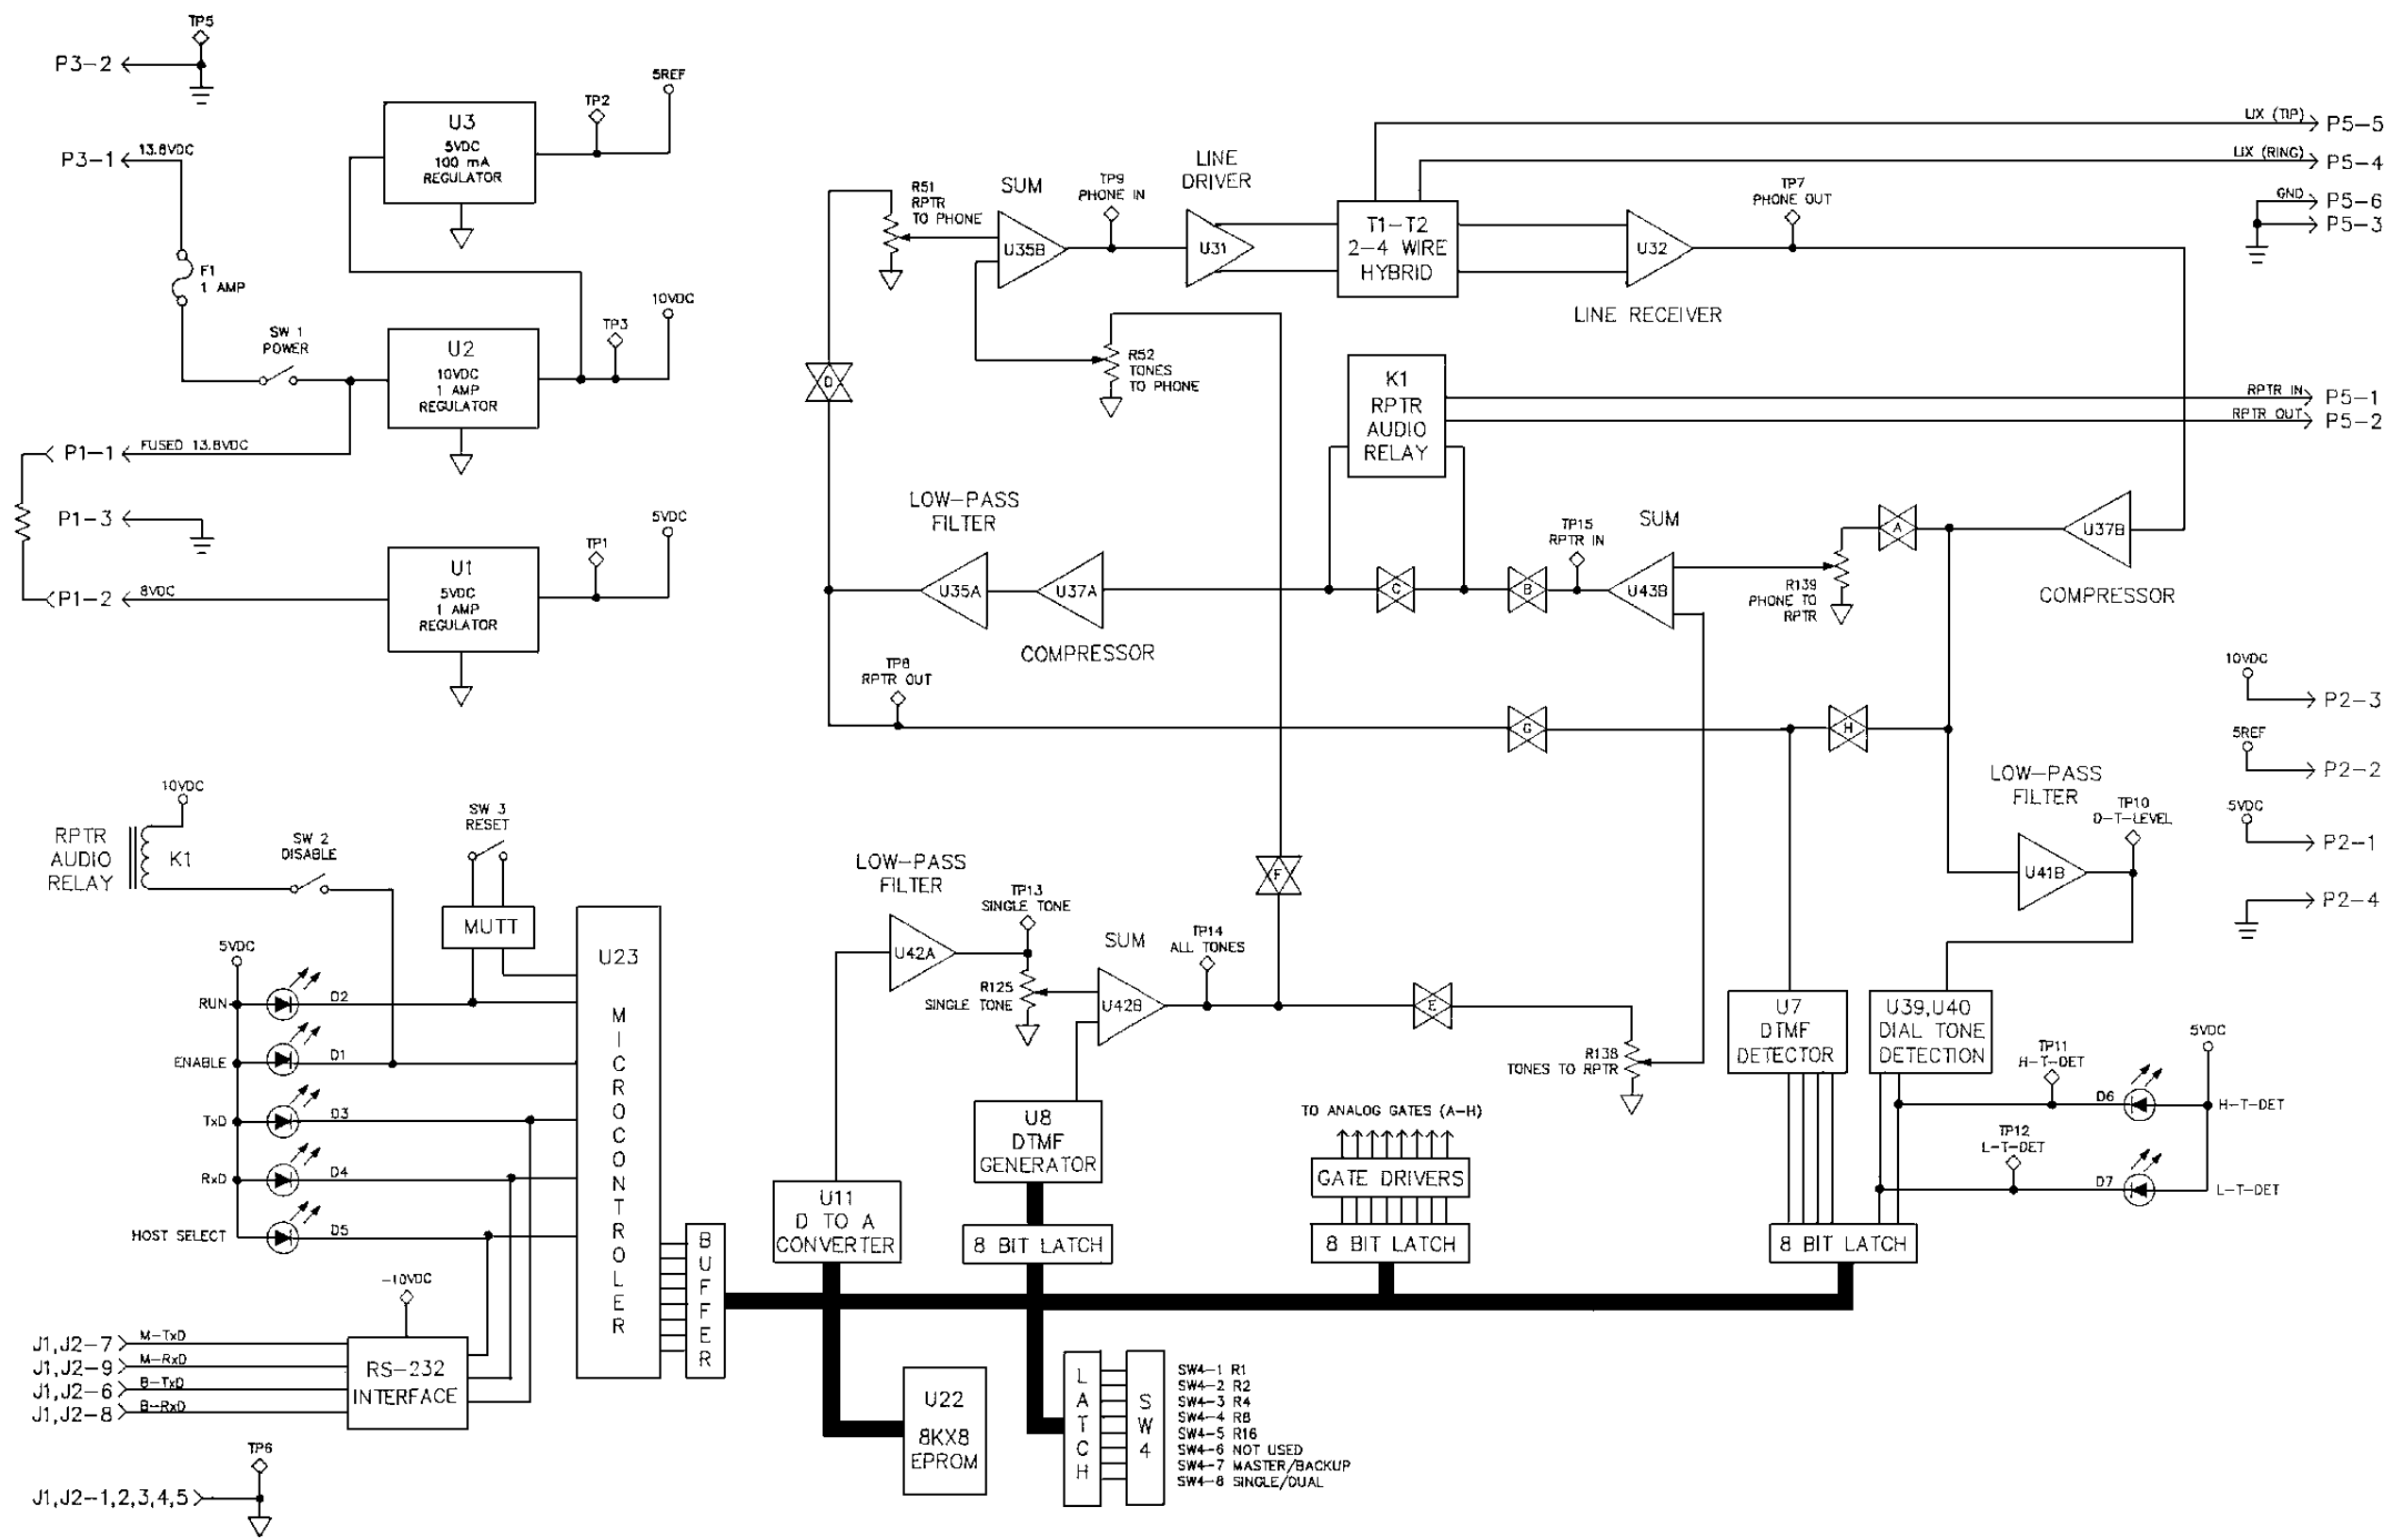


RIC Application Assembly

(4169-S-02)

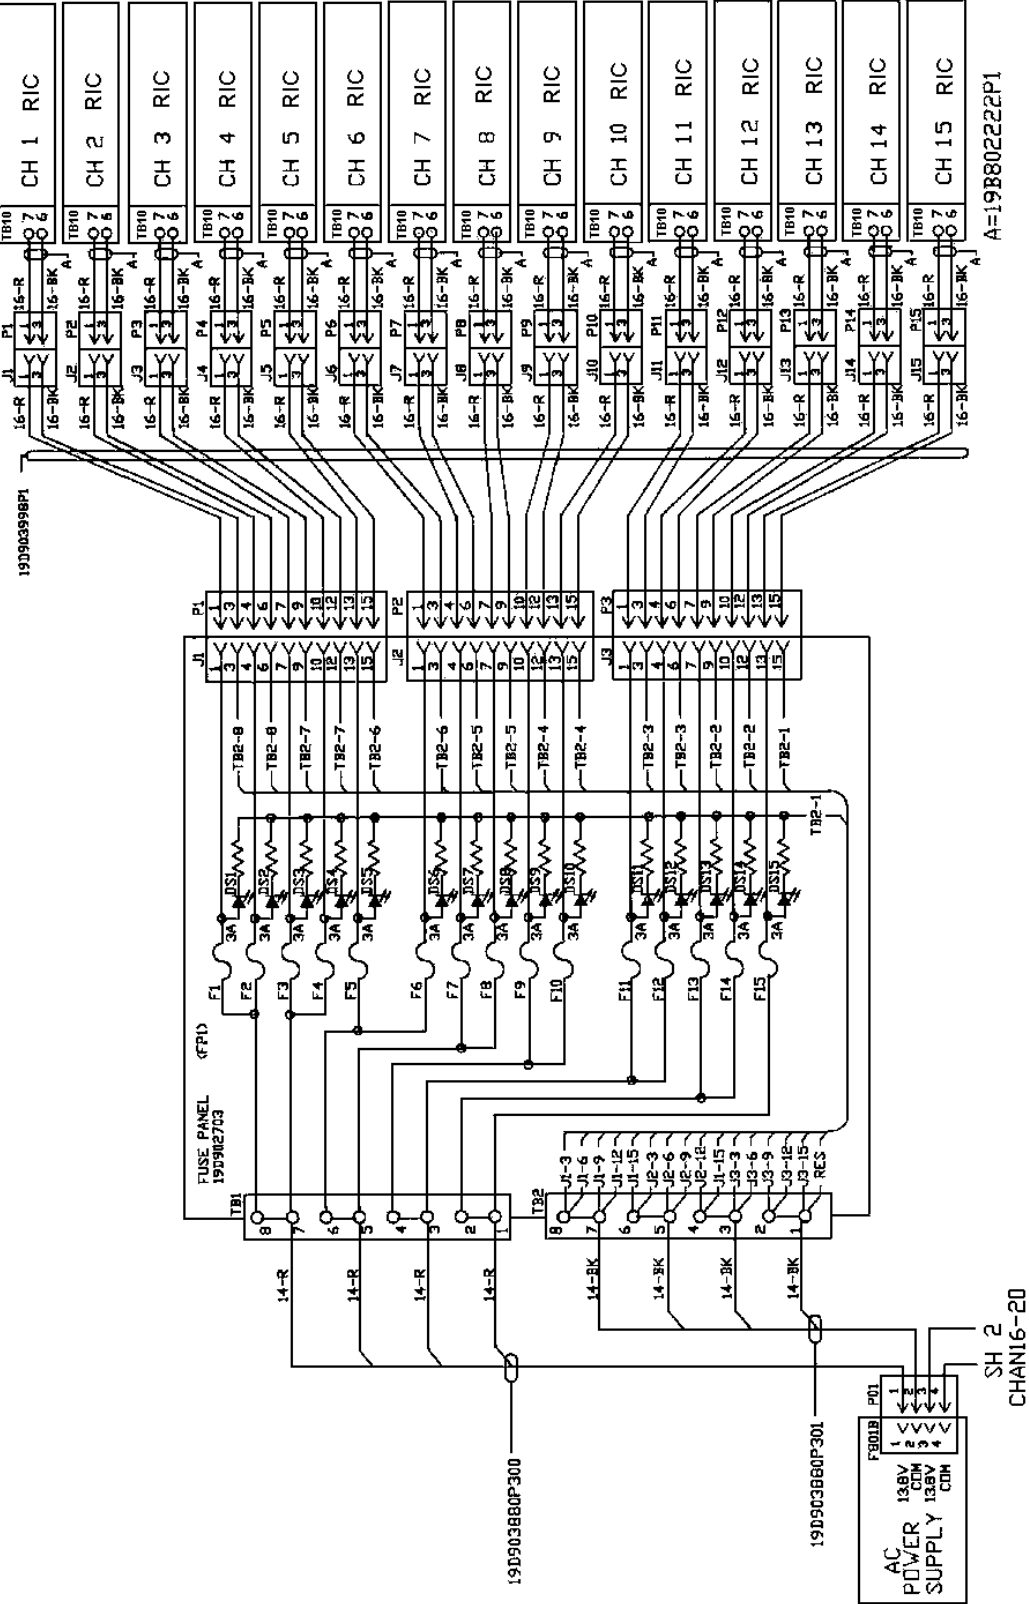

DC Power, RIC Cabinet, 20/24 Channels

(19C337783 Sh. 1, Rev. 0)

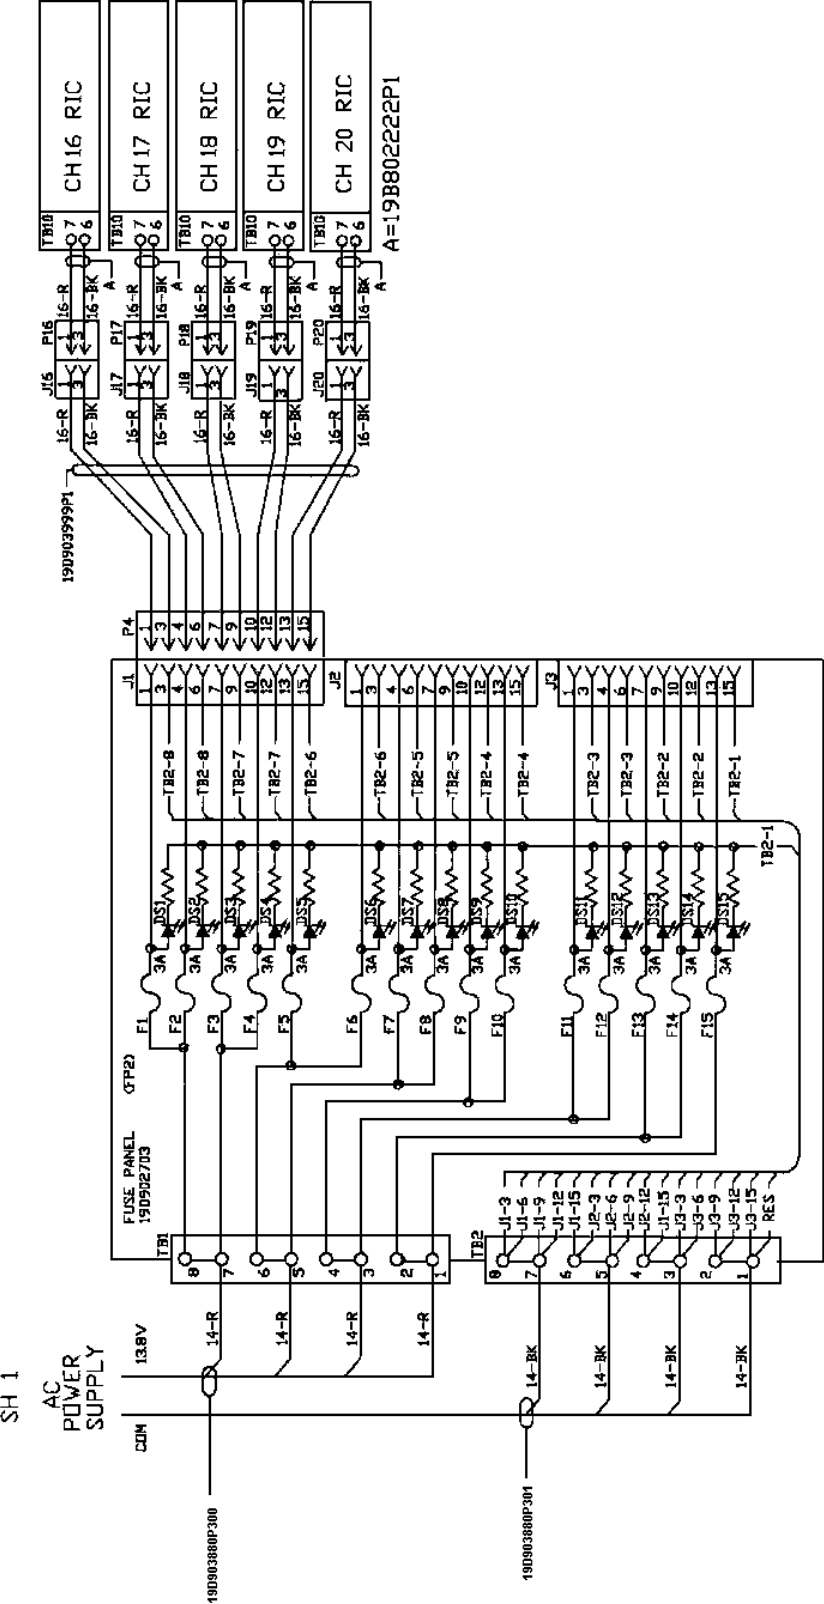

DC Power, RIC Cabinet, 20/24 Channels

(19C337783 Sh. 2, Rev. 0)