

uniden®

ARH 351

148-174 MHz
35 WATTS REPEATER



uniden®

UNIDEN AMERICA CORPORATION
Commercial Communications Division
4700 Amon Carter Blvd.
Fort Worth, TX 76155
(817) 858-3300

**SERVICE
MANUAL**

CC SM 7

SAFETY INFORMATION

Through the provisions of the Occupational Safety and Health Act (OSHA) of 1970, the United States Department of Labor has established an electromagnetic safety standard which applies to the use of two-way radio equipment. The proper use of this transceiver will result in exposure below the OSHA limit.

The following precautions shall be observed.:

WARNING

DO NOT operate the transmitter of any radio equipment with the antenna touching, or close to the eyes, face, or exposed body parts.

DO NOT operate the transmitter of any radio equipment unless all the Radio Frequency (RF) connectors are secure and any open connectors are properly terminated.

DO NOT operate the transmitter of any radio equipment near electrical blasting caps or in an explosive atmosphere.

DO NOT let children operate any transmitter-equipped radio equipment.

Have your radio equipment installed and serviced by a qualified technician.

TABLE OF CONTENTS

SAFETY INFORMATION	IFC
SPECIFICATIONS	4
FOREWORD	5
DESCRIPTION	5
DUPLEXER	5
OPERATING INSTRUCTIONS	6
OPERATING CONTROLS AND THEIR FUNCTIONS	7
THEORY OF OPERATION	7
TIMING CHART A	10
SUGGESTED TEST EQUIPMENT	11
ARH 351 BLOCK DIAGRAM	12
POWER SUPPLY ALIGNMENT PROCEDURE	13
TRANSMITTER ALIGNMENT PROCEDURE	13
TRANSMITTER TEST EQUIPMENT SETUP	14
TRANSMITTER ALIGNMENT LOCATION CHART	15
RECEIVER ALIGNMENT PROCEDURE	16
RECEIVER TEST EQUIPMENT SETUP	16
RECEIVER ALIGNMENT LOCATION CHART	17
CONTROL BOARD ALIGNMENT PROCEDURE	18
CONTROL BOARD TEST EQUIPMENT SETUP	19
NEW CONTROL BOARD ALIGNMENT LOCATION CHART	20
VOLTAGE CHART	21
EXCITER VOLTAGE CHART	21
POWER AMPLIFIER VOLTAGE CHART	21
RECEIVER VOLTAGE CHART	21
CONTROL BOARD VOLTAGE CHART	22
POWER SUPPLY VOLTAGE CHART	23
WAVE FORM PHOTOGRAPHS	23
POWER SUPPLY SCHEMATIC	24
POWER SUPPLY P.C.B. X-RAY VIEW	25
VHF POWER AMPLIFIER SCHEMATIC	26
VHF POWER AMPLIFIER P.C.B. X-RAY VIEW	27
VHF EXCITER SCHEMATIC	28
VHF EXCITER P.C.B. X-RAY VIEW	29
VHF EXCITER INTERFACE P.C.B. X-RAY VIEW	29
VHF RECEIVER SCHEMATIC	30
VHF RECEIVER P.C.B. X-RAY VIEW	31
POSISTOR P.C.B. X-RAY VIEW	31
REPEATER CONTROL BOARD SCHEMATIC	32
REPEATER CONTROL P.C.B. X-RAY VIEW	33
REPEATER WIRING DIAGRAM	34
LED P.C.B. X-RAY VIEW	35
SEMICONDUCTORS PIN CONNECTIONS	36
MECHANICAL PARTS LIST	38
ELECTRICAL PARTS LIST	39
APPENDIX A (PIN CONNECTIONS FOR CONTROL PCB)	A1
OPTIONS	
ARX 400 (19 INCH RACK MOUNT BRACKETS)	
ARX 500 (CTCSS DECODER BOARD)	
WARRANTY	

SPECIFICATIONS

This Equipment Meets or Exceeds the Following Specifications

GENERAL

Channels	1
Frequency Range	148 - 174 MHz
Size	14 ⁷ / ₈ "W × 5 ³ / ₈ "H × 12 ³ / ₄ "D
Weight	25 lbs.
Input Power	
Standard	117 VAC, 60 Hz
Optional	117/220 VAC, 50/60 Hz
Current Drain	
Transmit	1.0 AMP @ 117 VAC/ 8 AMP @ 13.6 VDC
Receive	0.5 AMP @ 117 VAC/ 0.5 AMP @ 13.6 VDC
Operating Temperature Range	-30° C to +60° C
Channel Spacing	30 kHz
Tone Module (optional)	1 Tone Encode/Decode
Community Repeater Panel (optional)	Holds 7 Additional Tones
FCC Type Acceptance & Certification	Parts 21, 90, 15

TRANSMITTER

RF Power Output	35 Watts (EIA DUTY CYCLE) 15 Watts Continuous
Modulation Distortion	3%
Modulation	16F3
FM Hum and Noise	60 dB
Spurious and Harmonic Suppression	60 dB
Frequency Stability	± 0.0005% (-30° C +60° C)

RECEIVER

Sensitivity	
12 dB S INAD	0.35 uV
20 dB Quieting	0.50 uV
Selectivity	70 dB
Intermodulation Rejection	70 dB
Spurious Rejection	70 dB
Image Rejection	70 dB
Modulation Acceptance	7 kHz
Audio Output (@ 10% THD)	2.5 W
Frequency Stability	± 0.0005%

Specifications subject to change without notice.

INTRODUCTION

Scope of Manual

This service manual is intended for use by experienced technicians familiar with similar types of equipment. The manual contains all service information required for the equipment described and is current as of the printing date. Changes that occur after the printing date are incorporated by Service Manual Revisions. The revisions are added to the manual as engineering changes are incorporated into the equipment.

Description

The ARH 351 repeater is a solid state FM repeater that is capable of 35 watts of RF power. The ARH 351 normally operates from a 117 volt (60 Hz) AC source. You can also order it to operate from a switchable 117/220 volt (50/60 Hz) AC source. The ARH 351 is designed so that a 12 volt battery source can take over if AC power fails. However, the ARH 351 is not designed to recharge the battery during normal operation.

You can access the standard repeater by using a carrier only or by using a single CTCSS tone. You can add an ARX 200 Community Repeater Panel to upgrade the tone accessed system to an eight user community repeater. The ARH 351 has a time-out timer that you can adjust to between 2 and 8 minutes. It also has a warning beep to alert the operator when the AC power source fails and the repeater is operating on the 12 volt battery source.

Duplexer

Since a wide variety of transmit and receive spacings are used in the VHF band, the ARH 351 does not come with a duplexer.

When you select a duplexer to use with the ARH 351, choose one that has a receive to transmit isolation of at least 80 dB. Higher receive to transmit isolation causes less receiver desensitization. The insertion loss of the duplexer should be kept to a minimum.

Licensing

Before using your transceiver, it must be properly licensed by the Federal Communications Commission (FCC) and properly installed. Your Uniden Dealer will be able to help you with any or all of these requirements and will be there to help you with all your future communications needs.

Technical Support

Technical Assistance and information is available from the Technical Support Group during normal work days between the hours of 8:00 A.M. and 5:00 P.M. Central Time. You may reach the Technical Support Group by writing to:

UNIDEN AMERICA CORPORATION
Commercial Communications Division
Technical Support
4700 Amon Carter Boulevard
Fort Worth, Texas 76155

Or by telephone:
1-800-231-2868 (outside Texas)
1-800-621-8527 (Texas only)

Replacement Parts

Replacement parts are available through the Parts Department located in Fort Worth, Texas. When ordering replacement parts, please use the complete identification number of the part. If the identification number is not known, the order should contain the Part Symbol Number, the Unit Model Number, and a description of the part so that the part may be properly identified. Parts orders may be placed by writing to:

UNIDEN AMERICA CORPORATION
Commercial Communications Division
Parts Department
4700 Amon Carter Boulevard
Fort Worth, Texas 76155

or by telephone: 1-817-858-3600
or by FAX: 1-817-858-3523

Ordering Additional Manuals

To order additional copies of this Service Manual, send order for CC SM 58 to:

UNIDEN AMERICA CORPORATION
Commercial Communications Division
Repair/Parts Department
4700 Amon Carter Boulevard
Fort Worth, Texas 76155


or by telephone: 1-817-858-3638

In Canada, write to:

UNIDEN CANADA, INCORPORATED
11 Plateau Street
Pointe Claire, (Montreal) Quebec
Canada H9R 9Z7

or by telephone: 1-514-697-6920
or by FAX: 1-514-697-7700

OPERATING INSTRUCTIONS

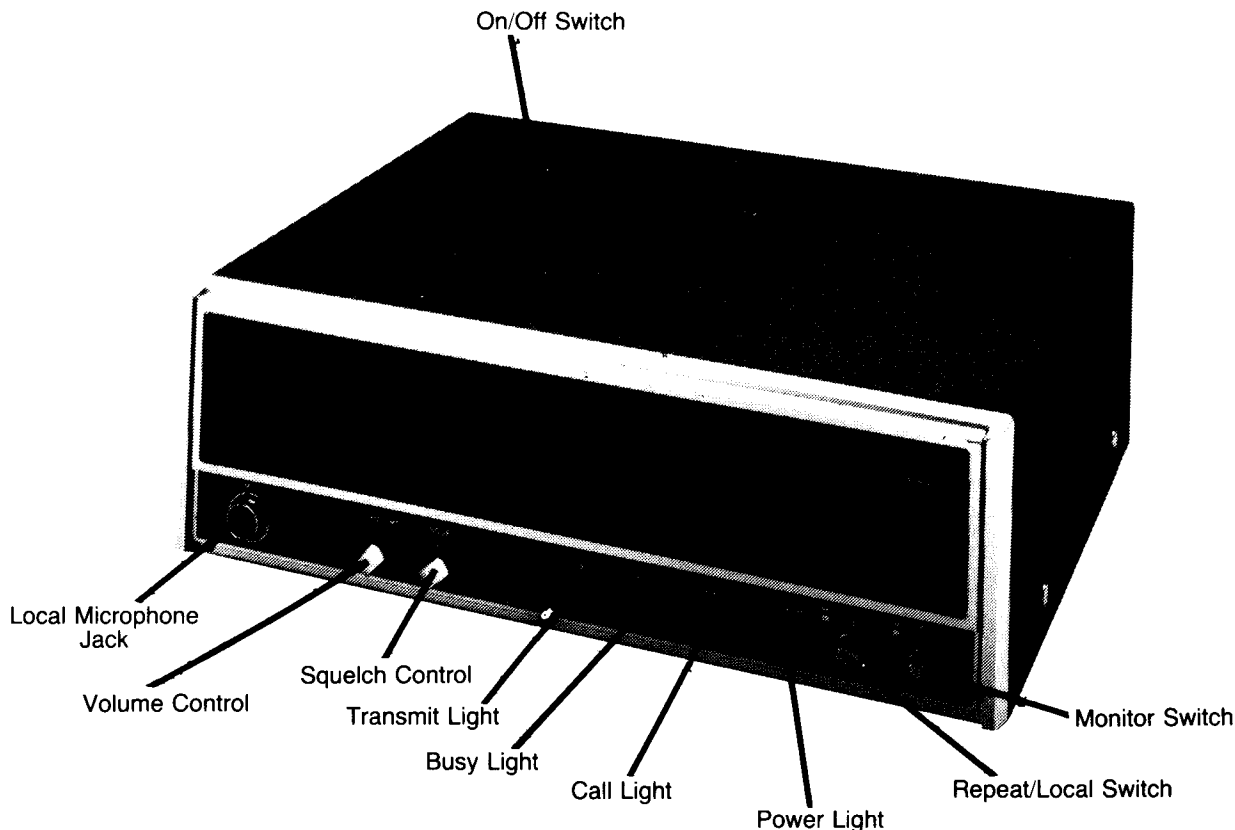

CONGRATULATIONS

You now own the best value in land mobile radio . . . a Uniden/Force Communications Radio from Uniden. You'll find that it gives you consistently outstanding performance in virtually all conditions and situations.

Before using, your radio must be properly licensed by the Federal Communications Commission (FCC) and be properly installed. Your Uniden Dealer will be able to help you with any or all these requirements. He will be there to help you with all your future communication needs.

LOCAL CONTROL REPEATER/BASE STATION OPERATION

1. After initial power-up, allow a 5 minute warm-up period to ensure that the transmitter is within FCC frequency specifications.
2. Rotate the squelch control fully counterclockwise.
3. Adjust the volume control for a comfortable listening level.
4. Turn the squelch control clockwise until all background noise disappears.
5. Place the REPEAT/LOCAL switch in the "LOCAL" (OUT) position.
6. The monitor switch is used as follows:
 - 6.1 Switch In: Lets you receive all calls broadcast on the channel.
 - 6.2 Switch Out: Lets you hear only those calls meant for your group, if the unit is equipped with

CTCSS, and if the microphone is hung-up in a properly grounded hang-up bracket. When a call is received, the CALL light will come on and remain on until you pick up the microphone or reset the light by momentarily depressing and releasing the monitor "MON" switch. The CALL light will alert you that a call was received while you were away from your station.

7. Before transmitting, monitor your channel to ensure that it is not busy. The BUSY light will be on if the channel is busy.
8. To transmit, depress the Push-To-Talk switch on the side of the microphone and hold it in while you transmit your message. Release the switch when your message is finished. For better voice quality in your transmissions, hold the microphone vertically in front of your face with the top of the microphone approximately level with your lips and about 2 inches away from your mouth.
9. When your call is finished, and a reply has been made, it is a good practice to hang-up the microphone.

REPEATER OPERATION

1. After initial power-up, allow a 5 minute warm-up period to ensure that the transmitter is within FCC frequency specifications.
2. Place the Repeat/Local switch in the Repeat (IN) position.
3. That's it! The ARH 351 is now a repeater.

OPERATING CONTROLS AND THEIR FUNCTIONS

On/Off Switch:	Located on the rear panel. When activated, the switch applies power to the unit.
Power Light:	This green LED will glow steady during AC power operation, and flash during battery operation.
Transmit Light:	This red LED indicates the presence of the transmitter RF carrier.
Busy Light:	This yellow LED indicates the presence of a carrier on the receive frequency, and shows the user that the channel is busy.
Monitor Switch:	By placing this switch in the monitor position, the user can monitor or receive all calls broadcast on the channel. When the switch is in the "TONE SQ" position, the user will only hear the calls intended for his group, if the unit is equipped with the CTCSS option.
Call Light:	This yellow LED indicator is provided for use when the ARH 351 is utilized as a local control repeater/base station. It will come on and remain on when the correct CTCSS tone has been received, provided the unit is equipped with CTCSS, and the microphone is in a properly grounded hang-up bracket and the "MON" switch is in the "TONE SQ" position. Resetting the call light can be accomplished by simply removing the microphone from the hang-up bracket or momentarily depressing and releasing the "MON" switch.
Repeat/Local Switch:	When this switch is in the "Repeat" (IN) position, the repeater action is automatic and can be accessed by another station as well as the local microphone. In the "Local" (OUT) position, keying of the transmitter can only be accomplished by the local microphone.
Squelch Control:	This control adjusts the Local audio amplifier opening sensitivity and should be adjusted in the following manner. Note: This control has no effect on repeater operation. 1. Rotate the squelch control fully counterclockwise. 2. Then rotate the control clockwise until the noise just disappears. For the best results, leave the control in this position. Turning the control further will result in diminished sensitivity.
Volume Control:	This control adjusts the local speaker audio output level.

THEORY OF OPERATION

To better understand the theory of operation of the ARH 351, refer to the block diagram located on page 12 and the schematic diagrams located on page 24-32.

TRANSMITTER OSCILLATOR

The transmitter frequency is controlled by a crystal oscillator, composed of a third overtone series resonant crystal X001, transistors Q001, and Q009, varactor diode D003, and tuning capacitor CV001. This circuit oscillates at a frequency between 16.4 to 19.3 MHz as determined by the crystal that is installed. The oscillator is modulated by the frequency modulator D003. Thermistor TH001, diode D002 and varactor D003 make up the temperature compensation network for the transmit oscillator. All components used in the oscillator and compensation network were chosen to have a minimal effect on the frequency as the operating temperature changes.

SPEECH AMPLIFIER

In the local mode, the output of the dynamic microphone is amplified by the speech amplifier Q011. IC001 (1/2) acts as an amplifier and limiter. The output from the limiter is fed into an active low-pass filter, IC001 (2/2), which provides a very sharp attenuation of frequencies above 3000 Hz to prevent radiation outside the permissible bandwidth.

FREQUENCY MODULATOR

The output of the speech amplifier is fed to the frequency modulator, D003 through D001 and VR001, Modulation Limit Control, where it then modulates the transmit oscillator at the transmit crystal. The CTCSS encoded tone is applied to the modulator, D003 through VR002, Tone Limit Control.

FREQUENCY MULTIPLIER

The modulated RF signal from the transmit oscillator is fed to the frequency multiplier, where the signal is tripled by Q008, and Q006 for a total multiplication of 9. Transistor Q007 serves as a buffer amplifier. Transistor Q005, Q004, Q003, and Q002 amplifies the signal to about 300 mW to provide sufficient drive level for the final amplifier. The output of Q002 is then passed through a tuned network to suppress harmonics and other spurious emission before being applied to the power amplifier.

RF POWER AMPLIFIER

The signal, at the proper transmit frequency and containing modulation, is fed to the power amplifier consisting of Q302, and Q301. This RF power amplifier increases the output power to 35 watts. The signal then

passes through a tuned output circuit to transform the collector impedance of Q301 to 50 ohms; followed by a fixed tuned low-pass filter to suppress harmonics of the transmitter.

POWER CONTROLS

The ALC, Automatic Level Control, circuit consists of D303, VR302, Q006 and Q007. The ALC monitors the forward power and controls the collector voltage on Q002 to maintain 35 watts of output power under varying conditions.

The APC, Automatic Power Control, circuit consists of D301, VR301, Q303, Q006, and Q007. The APC monitors the reflected power and aids in protecting the Power Amplifier by decreasing the collector voltage to Q002 under mismatched load conditions.

RECEIVER RF SECTION

The received signal passes through a dual-tuned bandpass filter, L101 and L102, to the RF amplifier Q101. The diodes D101 and D102 provide overload protection for the first RF amplifier. The output of Q101 is passed through a triple-tuned bandpass filter L103, L104, and L105 to the first mixer Q102. This signal is then mixed with the signal from the receive oscillator to produce the first I.F. of 21.4 MHz.

RECEIVER OSCILLATOR

The receive crystal X102 is connected to the oscillator Q107 by switching transistor Q109. The oscillator oscillates at a frequency of 42.2 to 50.9 MHz. This signal is tripled by Q106, L114, and L113. The tripler output is then buffered by Q105 and filtered by L112 and L111 before it is applied to the mixer Q102. The output level of Q105 is stabilized by the ALC circuit consisting of D104, D105, and Q110.

FIRST and SECOND I.F.

The output of the first mixer, at L106, is passed through a 21.4 MHz crystal filter FT101 to obtain the desired selectivity. The I.F. signal is then amplified by the I.F. amplifier Q103. This amplified I.F. signal is then applied to pin 16 of the integrated circuit IC101. This integrated circuit contains the second mixer and the second local oscillator. A 20.945 MHz crystal is connected to pins 1 and 2 of IC101 to complete the second local oscillator. The output of the second mixer, pin 3 of IC101, is passed through a 455 kHz ceramic filter FT102 and is applied to the amplifiers, limiters, and quadrature detector contained in IC101. The recovered audio is available at pin 9 of IC101 and is applied to the squelch gate, audio amplifier and CTCSS decoder if the unit is so equipped.

SQUELCH GATE

The noise signal from IC101 is fed to the squelch control VR502 via the limit control VR101. This signal is then amplified by the noise amplifier Q104 and fed to the active filter of IC101, pin 10. The output of the filter, pin 11, is then rectified by D103 and used to drive the squelch trigger circuit in IC101, pin 12. The output of the trigger, pin 13 of IC101, drives the base of Q113 high in the squelched mode, thus pulling the gate of Q112 low muting the audio noise in the speaker with no carrier present.

RECEIVER AUDIO

The audio signal from IC101 is fed through an active high pass filter FT103 to the audio preamplifier Q111. The output of this amplifier passes through the squelch gate, Q112, to the volume control VR501, then to the audio power amplifier IC102, which amplifies the recovered audio to a level sufficient to drive the speaker.

TX AND BUSY LEDS

The TX LED is activated by detecting a portion of the transmitted RF signal by D304 which turns Q305 on, pulling the cathode of D500 near ground potential. The anode of D500 is connected to the 8V line.

The BUSY LED is activated when a received signal causes pin 14, of IC101 to go high, turning on Q407, pulling the cathode of D501 near ground potential. The anode of D501 is connected to the 8V receive line.

CALL MEMORY

The CTCSS includes a call memory feature. On reception of a proper CTCSS signal Q406 is turned on, which also turns on Q402 and Q403, which turns on D502, the yellow call LED. Transistors Q402 and Q403 remain latched on until reset by the monitor switch or by removing the microphone from the hang-up clip.

CRYSTAL TEMPERATURE CONTROL

A posistor is clipped to the receive crystal which is used to heat the crystal when the ambient temperature is about -10°C or lower.

As the temperature decreases, the resistance of thermistor TH505 increases, allowing Q501 and Q502 to turn on. Q502 supplies power to posistor TH501 and TH502.

POWER SUPPLY

The output voltage is regulated by a 317-T adjustable voltage regulator IC1. This regulator controls the output voltage by maintaining a reference voltage between the output and adjustment pins. This reference voltage is applied across R712 resulting in a current flow of $(1.25\text{V}/R712)$, which also flows through the series combination of R713 and VR701. The current flowing through R712 and VR701 will produce a voltage of $(1.25\text{V}/R712) \times (R713 + VR701)$. The output voltage is the result of the addition of this voltage to the reference voltage.

The high output current capability is provided by the pass transistor Q705 and driver Q703. As the load current increases, the output voltage tends to decrease, which forces the reference voltage lower. Since the reference voltage must be maintained, IC1 draws more current from Q702. The increased current flowing through R703, supplies more base current to Q703, increasing its collector current and the base drive to Q705, thus allowing a higher load current at a set output voltage.

As the load current increases, the base emitter junction voltage of Q701 increases due to the current sensing resistor R716. As this voltage approaches 0.7 volts Q701 begins to conduct reverse biasing, Q702, forcing it into cutoff. With Q702 no longer fully conducting, the input to IC1 will be decreased below the necessary mini-

mum, thus causing the output voltage to decrease. As Q702 is driven into cutoff, the emitter - collector current of Q702 will decrease, thus decreasing the base current to Q703. As the base current of Q703 is decreased, the collector current must also decrease, thus decreasing the drive to Q705 and the output load current.

As the load attempts to draw, increasing amounts of current from the power supply, Q701 is driven further into conduction, thus driving Q702 further into cutoff. As this happens, the output voltage is decreased, thus decreasing the output current. This condition is known as current fold-back.

When the output becomes shorted, the base of Q705 is pulled close to ground, thus driving Q705 into cutoff, severely limiting the output current. Also, the emitter of Q704 is pulled low turning on Q704 and unbalancing the resistor network of R705, R704, R701 and R716 turning on Q701 and folding back the current as above.

When the output voltage reaches a danger point, about 16.5 volts, the zener diode D703 breaks over and applies a voltage to the gate of the SCR, IC2. This gate voltage causes the SCR to fire, shorting the output of the power supply, thus protecting the equipment that is connected to it. The SCR will remain fired until the supply voltage has been removed.

REPEATER CONTROL BOARD

In the repeat mode, the audio signal from IC101 (push pin P22), is fed to the control PCB. On the control PCB the audio path is split; one path will cause the transmitter to key, the other path is the repeat audio to the transmitter.

REPEAT AUDIO

In repeat mode, the CTCSS tone is stripped from the recovered audio signal by the high pass filter IC606, before it is de-emphasized by IC600-4. This audio signal is then passed through the audio transmission gate IC604 to the speech amplifier, via the gain control VR604. The audio signal is then processed by the speech amplifier in the same way as the signal from the local microphone.

In the repeat mode, one input of IC602-3 is held high by switch SW500, the other input is allowed to follow the C.O.S. line. When the C.O.S. goes high, the output of IC602-3 goes low and is inverted by IC602-4, thus opening the speech transmission gate. In the local mode the speech transmission gate is held closed by grounding one input of IC602-3.

REPEATER SQUELCH GATE

The recovered audio is also fed to the repeater squelch circuit, and the CTCSS tone decoder, if the unit is equipped with CTCSS. Op amp IC600-1 buffers the audio so as not to load down the receiver output. IC600-2 is a Hi-Pass filter which allows the high frequency "rush" noise to pass. This noise is rectified by D601 and used to charge capacitor C615. In the absence of carrier, C615 will remain charged, thus keeping the output of IC600-3 low. When an RF carrier is present, the "rush" noise is reduced, thus allowing C615 to discharge through R610, causing the output of IC600-3 to go high. The output of IC600-3 is wired OR'ed to the output of a second squelch

gate IC611-1, and is connected to the input of IC611-2. This second squelch gate is composed of D612, IC611-1, C621 and R653 which parallels the operation of IC600-3, but with a shorter time constant. The output of IC611-2 is connected to one input of NAND gate IC602-4. When the output of IC600-3 or IC611-2 goes high it turns Q600 on, lighting up the yellow LED D609, showing that a carrier has been detected.

A portion of the recovered audio is fed to the tone decoder through P1-1. When the decoder sees the correct CTCSS tone it will output a high on P1-7. This high is fed to the second input of IC602-1 through S1, to the base of Q601 turning on the green LED D610, indicating that a CTCSS tone has been detected, and to the call memory circuit of the receiver, causing it to latch if the microphone is hung-up in a grounded bracket. When both inputs of NAND gate IC602-1 are high the output is low this is inverted by IC602-2 and fed to the speech and tone transmission gate, and to the transmitter Push-To-Talk line.

The repeater can be operated as a carrier access unit by placing switch S1 in the carrier squelch mode. When placed in this mode the red LED D611 is turned on as an indication that the unit is in carrier only operation, and a logic high is placed on the tone input of IC602-1.

REPEATER PTT and DROP OUT TIMER

When the C.O.S. goes high, it turns on Q603, thus charging C617 and turning off IC603-1. When the output of IC603-1 goes low, the output of IC603-2 goes high, turning on Q602, pulling the collector near ground potential keying the transmitter. When the C.O.S. goes low, C617 will discharge through R624 and VR601, thus keeping the transmitter up until the input of IC603-1 is low enough for it to turn on. This dropout time can be set from 1 to 10 seconds. When the local microphone is keyed in the repeat mode, diode D605 is forward biased and will conduct keying the transmitter.

CTCSS TONE ENCODER

The CTCSS tone encoder is composed of IC605 and the resistor network R638, R639, R640 and VR605. Jumpers J7 and J8 control the frequency range of the encoder and VR605 controls the tone frequency. The output tone is taken from pin 3 of IC605 and fed to the tone transmission gate IC604-4 to P2-5 (tone input to the Phase Modulator VR202). When the C.O.S. line is high, the tone transmission gate is opened. In local mode the tone transmission gate is opened by pressing the Push-To-Talk key, causing the output of IC603-3 to go high. Diodes D606 and D607 are used as isolation diodes.

TIME-OUT-TIMER

When the C.O.S. line goes high it will reset the T.O.T. pin 11 of IC601 via IC603-1, and start the T.O.T. oscillator IC603-4 via IC603-2. The output of the oscillator is fed to the counter IC601 pin 10. The counter is programmed to count 8192 cycles of the oscillator before sending pin 3 high. The high on pin 3 of IC601 starts the beep tone oscillator, sending 2 to 3 seconds of alert tone before C618 charging through R626 turns off IC603-2 un-keying the transmitter.

When the internal AC power supply fails, and the external battery takes over the operation of the repeater, the system warns the operator by flashing the green power LED, and transmitting an alert tone, consisting of two half-second tone burst every ten seconds.

of IC607, pin 14 is used to flash the green power LED and is divided again by IC608 to produce two signals of 1 second on and 9 seconds off with one offset by 1 second. These two outputs are OR'ed together in IC610-3, IC610-2 and IC609-4 to produce an output signal of 2 seconds on and 8 seconds off. This signal is NAND'ed in IC609-1 with the 1 Hz signal to produce two half-second pulses every 10 seconds. The signal is then inverted by IC609-2 and NAND'ed with the clock signal in IC609-3. The output is inverted by IC610-1 and applied to the modulator via VR606.


Timing diagram showing waveforms for IC607, IC608, IC609-4, IC609-2, and IC610-1. The diagram includes a 1 Hz frequency reference and a 1 sec. duration reference. Waveforms are labeled: OUTPUT OF IC607 PIN 14, OUTPUT OF IC608 PIN 3, OUTPUT OF IC608 PIN 2, OUTPUT OF IC609-4 PIN 10, OUTPUT OF IC609-2 PIN 3, and OUTPUT OF IC610-1 PIN 12. A note indicates '990 Hz 5 sec. DURATION'.

SUGGESTED TEST EQUIPMENT

The following is a list of suggested test equipment that will be needed to repair this unit. Many of the individual items can be replaced by a service monitor. However, to completely test this unit you **must** be able to generate an RF signal while monitoring the transmitter.

TEST INSTRUMENT	REQUIRED SPECIFICATIONS	SUGGESTED TYPE
DC Power Supply	Voltage: 13.8 VDC Current: 10 Amps Cont.	Ratelco PS-9 12VDC Battery
RF Wattmeter	Frequency: 148 - 174 MHz Power: 0 - 50 Watts	Bird Model 43 & 50 C Element
RF Dummy Load	Impedance: 50 Ohms Power: 50 Watts	Bird Model 8085 Bird Model 8135
DC Voltmeter	Range: 0 - 10 V DC Resistance: 10 Meg Ohm	Simpson 260 Fluke D802 or D804
AC Voltmeter	Range: 3 mV - 10 V	Leader LMV 181 A
Audio Generator	Frequency: 10 - 10 kHz Level: 0-1 V	Leader LGA 120 A
Deviation Meter	Range: 0 - 5 kHz	Marconi TF 2304
Distortion Meter or	Range: 30 - 10 kHz Level: 1 mV - 300 V	Leader LDM 170
Sinadder	Input Level: 1 - 5 VAC	Helpers Sinadder 3
RF Frequency Counter	Range: 148 - 174 MHz Accuracy: ± 2 ppm/yr.	HP - 5383 A Data Precision 500/TB8
Oscilloscope	Bandwidth: 50 - 100 MHz Triggered Sweep	Tektronics 2213 or 456 Hameg HM705
RF Signal Generator	Range: 148 - 174 MHz Level: 0.1 - 1000 μ V Modulation: Int/Ext Deviation: 0 - 5 kHz	Wavetek 3005
Attenuator	Attenuation: 20 dB Power: 50 Watts Min.	Bird 8341-200 Bird 8343-200
Service Monitor		Motorola RS2001 IFR 500, 1000S, 1200 or 1500 Wavetek 3000 or 3000B Cushman CE-4000 or CE-50

ARH 351 BLOCK DIAGRAM

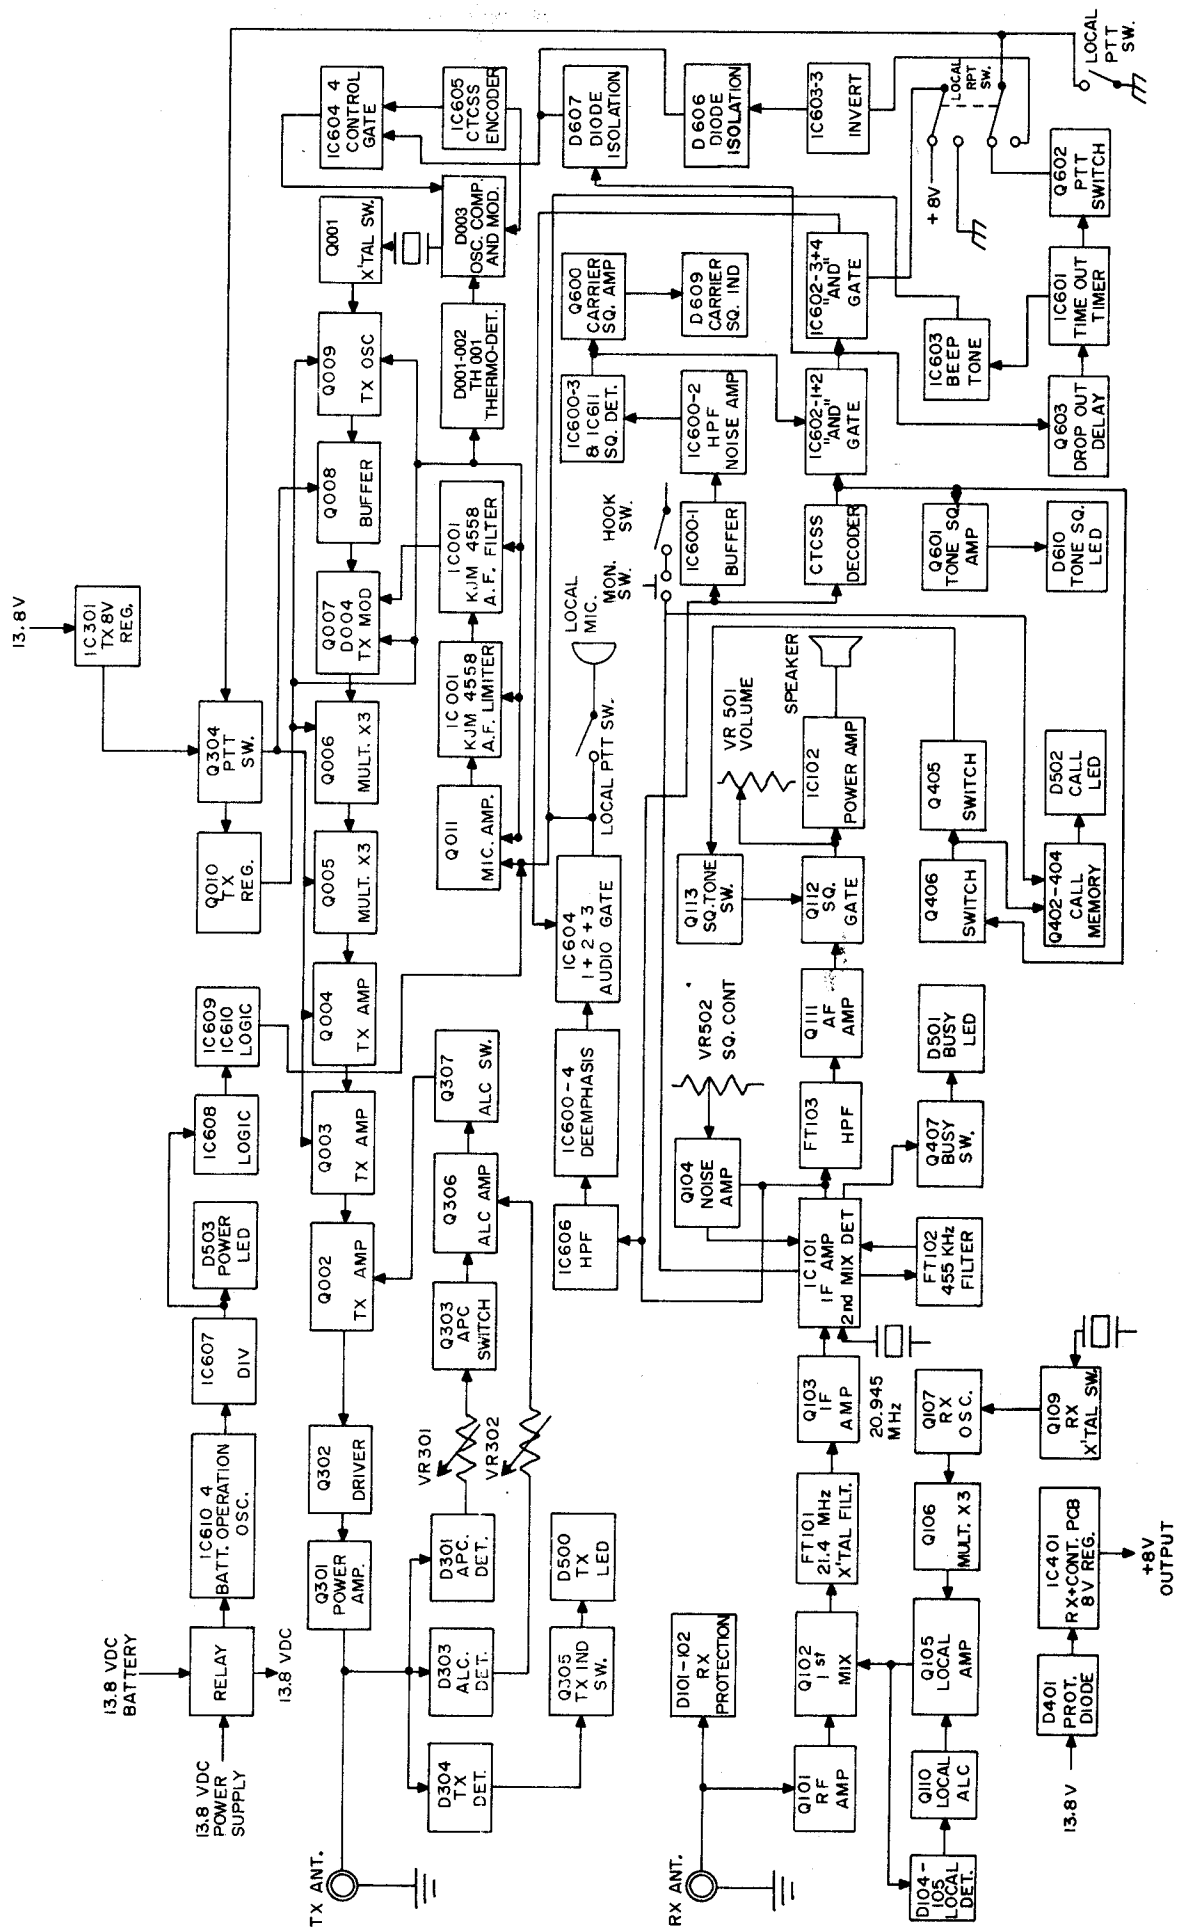

POWER SUPPLY ALIGNMENT PROCEDURE

STP	PRESET TO	ADJUSTMENT	REMARKS
1	Connect unit to 117 VAC Source. Power switch: ON	VR701 (On Power Supply PCB)	Connect a DC Voltmeter to the emitter of Q705. Adjust VR701 to obtain a 13.8 VDC reading on the Voltmeter.


TRANSMITTER ALIGNMENT PROCEDURE

STP	PRESET TO	ADJUSTMENT	REMARKS
1.	Volume: Min (CCW) Squelch: Max (CW) Mode: Local	VR301, VR302	Preset VR301 and VR302 fully counter clockwise. Preset VR604 (on control board) to Mid-Range point. Connect wattmeter, frequency counter and FM modulation meter to the TX antenna connector.
2	Same as Above	L019	Connect DC Voltmeter (+) to CM001 Pin 5, (-) to Ground. Adjust L019 for maximum DC Voltage.
3	Same as Above	L015, L016 L017	Connect DC Voltmeter (+) to CM001 Pin 3, (-) to Ground. Adjust L015, L016, and L017 for maximum DC Voltage.
4	Same as Above	L015, L016 L017, L018	Connect DC Voltmeter (+) to CM001 Pin 3, (-) to Ground. Repeat step three several times, then adjust L018 for maximum DC Voltage.
5	Same as Above	L013, L014	Connect DC Voltmeter (+) to CM001 Pin 2, and (-) to Ground. Adjust L013 and L014 for maximum DC Voltage.
6	Same as Above	L012	Connect DC Voltmeter (+) to CM001 Pin 1, (-) to Ground. Adjust L012 for maximum DC Voltage.
7	Same as Above EXCEPT: VR302: Fully CCW	CV002, CT301	Adjust CV002 and CT301 for maximum RF power output.
8	Same as Above	VR302	Adjust VR302 for the desired RF output power level. 35 watts Intermittent Duty. 15 watts Continuous Duty.

TRANSMITTER ALIGNMENT PROCEDURE cont'd


STP	PRESET TO	ADJUSTMENT	REMARKS
9	Same as Above	CV001	Adjust CV001 to obtain the correct transmit frequency as shown on the frequency counter.
CTCSS ALIGNMENT STEP 10			
10	Same as Above	VR003	Adjust VR003 to obtain 550 to 750 Hz CTCSS deviation.
11	Same as Above EXCEPT: AF SG: FREQ: 1kHz LEVEL: 30 mV	VR002	Apply output of AF generator to local microphone input. Adjust VR002 for 4.7 kHz total system deviation.
12	Same as Step 10 EXCEPT: No RF Load	VR301	Adjust for 3 watts of reflected RF power with the RF load removed.

TRANSMITTER TEST EQUIPMENT SETUP

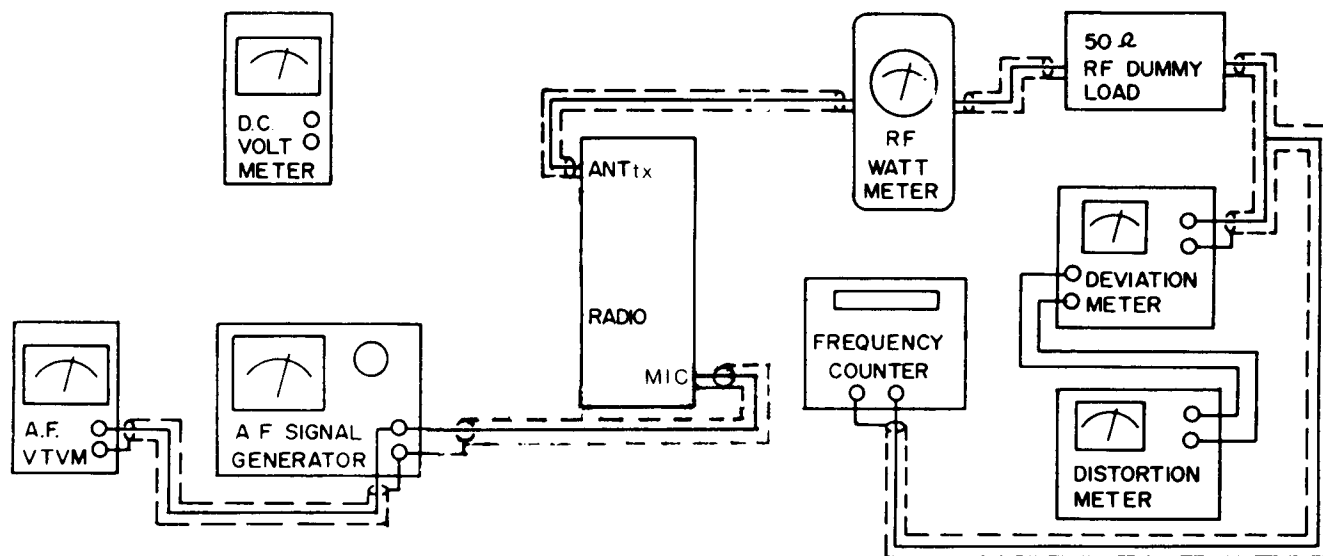


PD-023AA


POWER AMPLIFIER

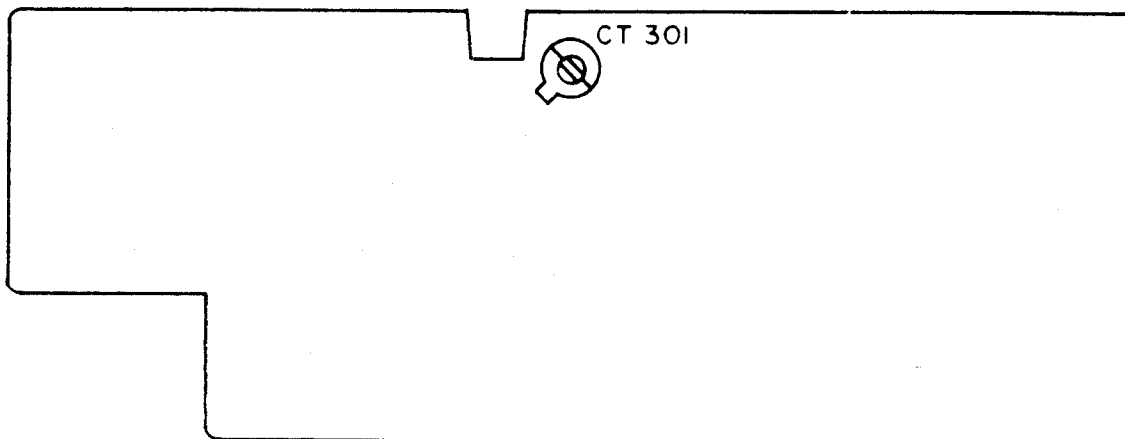

EXCITER INTERFACE
3500-0147

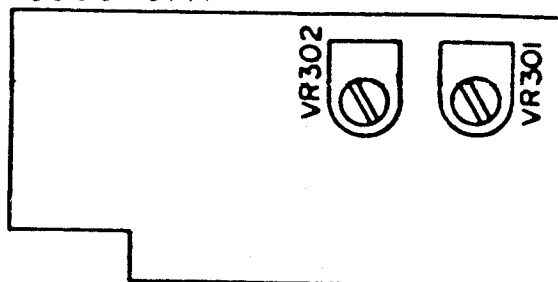

EXCITER
PD-012AE

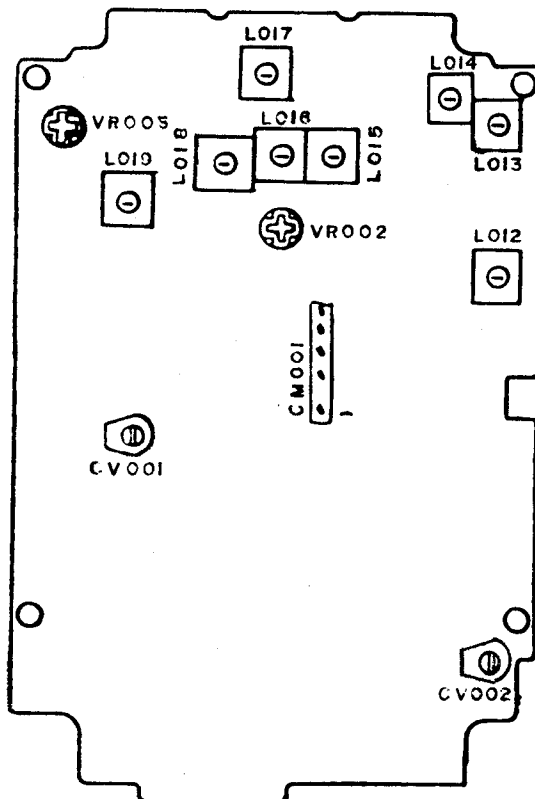


ALIGNMENT LOCATION CHART

RECEIVER ALIGNMENT PROCEDURE


STP	PRESET TO	ADJUSTMENT	REMARKS
1	Volume: Max (CW) Squelch: Min (CCW) Mode: Local	L111, L112 L113, L114	Connect DC Voltmeter (+) to CM101 pin 1, (-) to Ground. Adjust L111, L112, L113, and L114 for maximum DC Voltage.
2	Same as Above	L116	Connect RF counter to TP101. Adjust L116 to obtain a frequency of RX frequency - 21.4 MHz on the RF counter.
3	Same as Above	L108	Connect DC Voltmeter (+) to CM101 pin 3, and (-) to Ground. Adjust L108 to obtain a 4V + 0.2V reading on the DC Voltmeter.
4	Same as Above EXCEPT: Mod. Freq. 1 kHz Dev: 3 kHz	L101, L102 L103, L104 L105	Connect RF SG to the RX antenna jack Adjust L101, L102, L103, L104, and L105 for best SINAD. Decrease the level of the RF SG and repeat to obtain sensitivity.
5	Same as Above EXCEPT: RF SG Level: 1 mV	L106, L107	Adjust L106 and L107 to obtain minimum audio distortion indication on the distortion meter.
6	Same as Above EXCEPT: Squelch: Max (CW) RF SG Level: 1 uV	VR101	Adjust VR101 so that the squelch will open at 1 uV.
With CTCSS; the Brown wire from FT4 must be connected to Push Pin P06. Without CTCSS; the Brown wire from FT4 must be connected to Push Pin P27.			

RECEIVER TEST EQUIPMENT SETUP

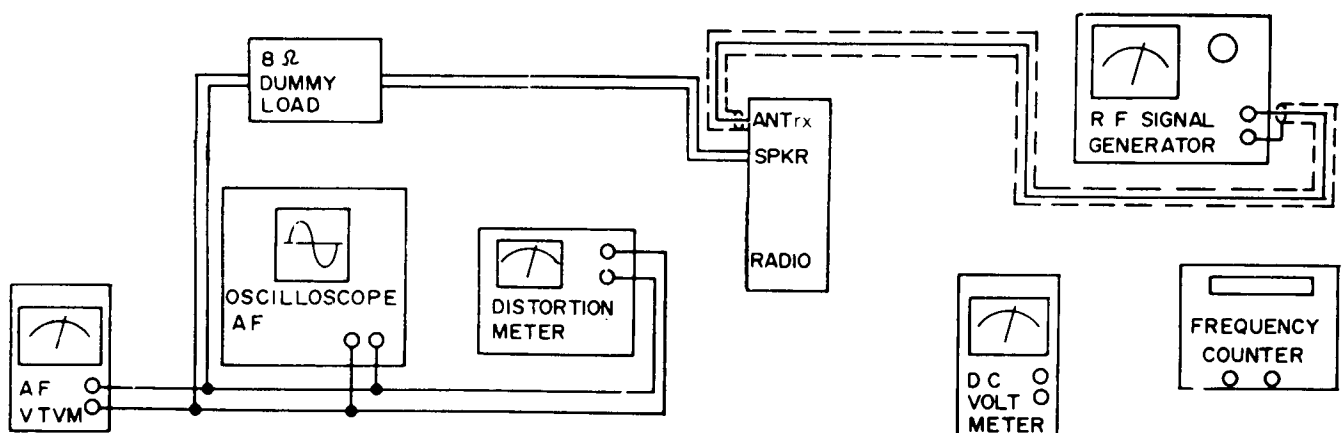

PD-024AA

RECEIVER P.C. BOARD

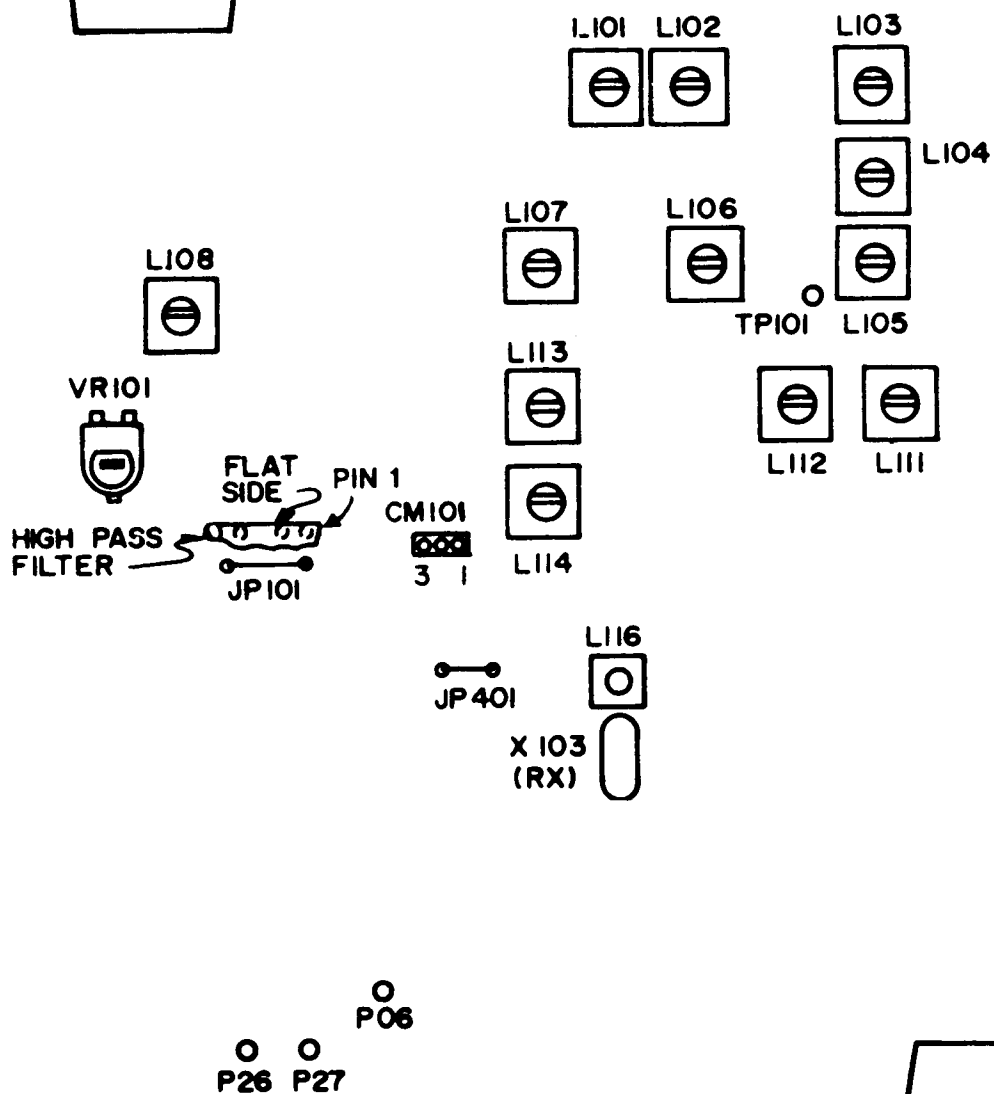

ALIGNMENT LOCATION CHART

CONTROL BOARD ALIGNMENT PROCEDURE

STP	PRESET TO	ADJUSTMENT	REMARKS
1	Volume: Max (CW) Squelch: Min (CCW) Mode: Local RF SG: Freq 1kHz Dev: 3 kHz Level 0.25 uV	VR600, VR601 VR602, VR603 VR604, VR605 VR606	Preset controls to mid-range.
2	Same as Above Rptr Squelch Adj.	VR600	Adjust VR600 until the yellow L.E.D. (D609) just comes on. (Repeater squelch is opening.)
CTCSS ALIGNMENT STEPS 3, 4, 5, & 6 With CTCSS; the Brown wire FT4 must be connected to Push Pin P06. Without CTCSS; the Brown wire FT4 must be connected to Push Pin P27.			
3	Same as Above	JP1, JP2 (On Decoder) (ARX 500)	Cut jumpers JP1 and JP2 on the Tone decoder Board for the desired decode tone range. Refer to TABLE 1 below.
4	Same as Above	VR1 (On Decoder) (ARX 500)	Connect a frequency counter to test point 1 on the decoder board. Make sure J4 on control board is connected. Adjust VR1 on the decoder to obtain the desired decode frequency. Cut J4 on the control board.
5	Same as Above	J7, J8 (On Control Board)	Cut jumpers J7 and J8 for the desired encode tone range. Refer to TABLE 2.
6	Same as Above	VR605* (On Control Board)	Connect frequency counter to TP3. Adjust VR605 to obtain the desired encode CTCSS frequency.
7	Same as Above Rptr Audio Level EXCEPT: Mode: Repeat RF SG: Level 1 mV SW600: Carrier Sq.	VR604	Adjust VR604 to obtain 4.7 kHz deviation of the transmitter, with signal generator deviation set to 3 kHz. TX should key

* **NOTE:** When changing CTCSS Frequency it may be necessary to readjust the transmitter deviation. Refer to the transmitter alignment procedure, Steps 10 and 11.

CONTROL BOARD ALIGNMENT PROCEDURE cont'd

STP	PRESET TO	ADJUSTMENT	REMARKS
8	Same as Above Rptr T.O.T. Adj.	VR602	Connect frequency counter to TP2. Adjust VR602 to obtain the desired Time-Out time using the formula: $FR = 8192 / (\text{Time} - 2)$ Time is in seconds
9	Same as Above Drop-out Time Adj	VR601	Apply a carrier to the receiver. Transmitter should key-up. Remove carrier. Adjust VR601 for the desired dropout delay.
10	Same as Above TOT Warning Level	VR603	Cut Jumper J6. Apply a carrier to the receiver. Allow the transmitter to time out. Adjust VR603 for the desired modulation level of the beep tone. (Approx. 3 kHz) Connect Jumper J6.
11	Same as Above Batt Warning Level EXCEPT: AC Power Removed 13.8V Applied to battery back-up terminals.	VR606	In Repeat Mode. Adjust VR606 for the desired modulation level of warning tone. (Approx. 1 kHz)


TABLE 1
DECODER CTCSS FREQUENCY CHART

FREQUENCY	JP1	JP2
160 — 300	IN	IN
125 — 165	CUT	IN
60 — 135	CUT	CUT

TABLE 2
ENCODER CTCSS FREQUENCY CHART

FREQUENCY	J7	J8
180 — 340	IN	IN
140 — 190	CUT	IN
60 — 150	CUT	CUT

CONTROL BOARD TEST EQUIPMENT SETUP

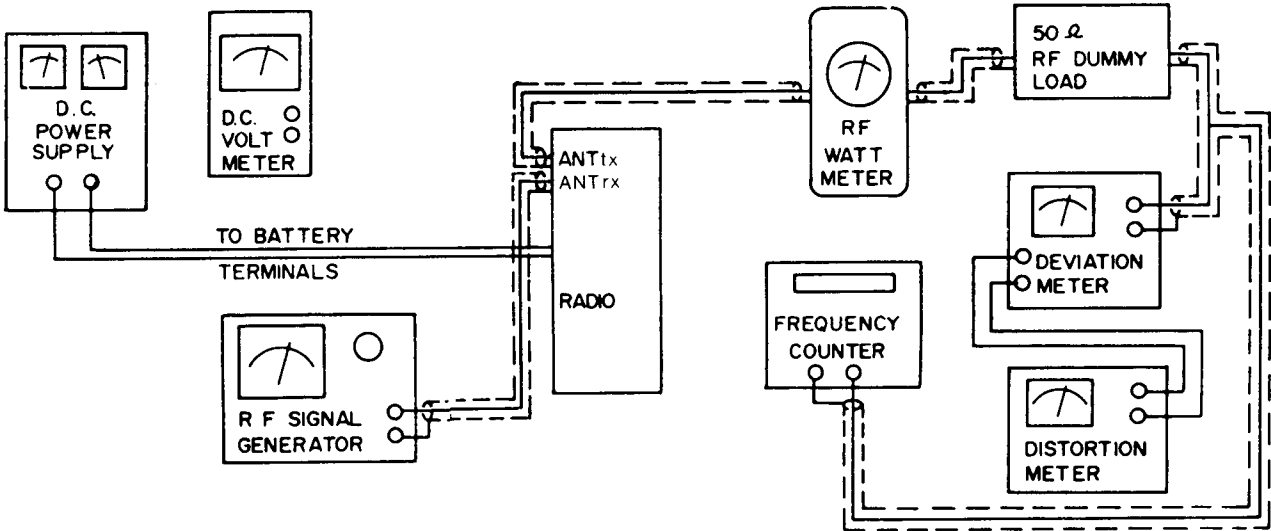

The diagram illustrates the internal components and connections of the TSC-92A receiver. Key components include:

- IC607, IC611, IC608, IC610, IC600, IC602, IC603, IC604, IC605:** Integrated circuits (chips) distributed throughout the circuit.
- VR600, VR606, VR602, VR601, VR603, VR604, VR605:** Variable resistors (potentiometers) used for adjustments like RPTR. SQ. ADJ., BATTERY BACKUP WARNING TONE LEVEL ADJUST, T.O.T. ADJ., RPTR. TAIL LENGTH ADJ., T.O.T. WARNING TONE LEVEL ADJ., and ENCODE CTCSS FREQ. ADJ.
- Q600, Q601, Q602, Q603:** Diodes.
- P01, P02, P03, P04:** Pin headers or connectors.
- TP1, TP2, TP3:** Test points.
- SW600:** A switch labeled "TONE & CARRIER SQ."
- Connectors:** J1, J2, J4, J5, J6, J7, J8, and P2 are shown as connection points.
- Other Labels:** "CARRIER SQ.", "TONE & CARRIER SQ.", "BATTERY BACKUP WARNING TONE LEVEL ADJUST", "RPTR. SQ. ADJ.", "T.O.T. ADJ.", "RPTR. TAIL LENGTH ADJ.", "T.O.T. WARNING TONE LEVEL ADJ.", "ENCODE CTCSS FREQ. ADJ.", "RPTR. AUDIO LEVEL ADJ.", and "P3" (a vertical component).

The diagram shows the physical layout and electrical connections between these components, including signal paths and power/ground connections.

Page 20 ARH 351

VOLTAGE CHART

EXCITER VOLTAGE CHART

PART NO.	PART NAME	EMITTER SOURCE	BASE GATE	COLLECTOR DRAIN	REMARKS
Q001	2SC2668	2.34	3.10	2.33	TX
Q002	2SC2221	0.00	0.00	7.42	TX
Q003	2SC2407K	0.63	1.11	7.59	TX
Q004	2SC2026L	0.59	1.01	7.20	TX
Q005	2SC2026L	0.59	1.10	7.20	TX
Q006	2SC2026L	1.18	1.20	7.28	TX
Q007	2SC1675L	0.31	1.03	1.20	TX
Q008	2SC1675L	1.64	1.80	4.96	TX
Q009	2SC1675L	2.34	1.80	4.96	TX

PART NO.	PART NAME	EMITTER SOURCE	BASE GATE	COLLECTOR DRAIN	REMARKS
Q010	2SC2458LY	4.99	5.72	7.59	TX
Q011	2SC2458LY	0.97	0.40	2.32	TX
Q303	2SC945A-Q	0.00	0.00	7.47	TX
Q304	2SA733	7.90	7.06	7.59	TX
Q305	2SC945A-Q	0.00	0.71	0.09	TX
		0.00	0.00	6.89	RX
Q306	2SC945A-Q	0.00	0.56	11.61	TX
Q307	2SB772-R	13.77	13.00	10.60	TX
		13.80	13.34	13.80	RX

PART NO.	PART NAME	1	2	3	4	5	6	7	8
IC001	NJM4558D	2.78	2.98	2.82	0.00	2.78	2.86	2.86	5.00
IC301	MC7808CT	INPUT 13.80	COM 0.00	OUTPUT 7.90					

NOTES:

All voltage readings were taken reference to ground using a D.V.M. with a 10 Meg Ohm DC input resistance.
Power supply voltage was set to 13.8 VDC.

POWER AMPLIFIER VOLTAGE CHART

PART NO.	PART NAME	EMITTER SOURCE	BASE GATE	COLLECTOR DRAIN	REMARKS
Q301	2SC1446A	0.00	0.00	13.65	TX
Q302	2SC2237-22	0.00	0.00	13.65	TX

NOTES:

All voltage readings were taken reference to ground using a D.V.M. with a 10 Meg Ohm DC input resistance.
Power supply voltage was set to 13.8 VDC.

RECEIVER VOLTAGE CHART

PART NO.	PART NAME	EMITTER SOURCE	BASE GATE	COLLECTOR DRAIN	REMARKS
Q101	2SK168E	0.43	0.00	12.90	RX
Q102	J310	0.00	2.15	13.34	RX
Q103	2SC1675L	0.95	1.64	5.75	RX
Q104	2SC945AP	0.00	0.62	1.71	RX
Q105	MPSH(10)	3.06	3.81	7.70	RX
Q106	MPSH(10)	2.32	2.91	8.33	RX
Q107	2SC1675-L	2.90	3.48	5.46	RX
Q109	2SC1675-L	3.88	3.24	4.54	RX

RECEIVER VOLTAGE CHART, cont.

PART NO.	PART NAME	EMITTER SOURCE	BASE GATE	COLLECTOR DRAIN	REMARKS
Q110	2SC945A-Q	0.00	0.69	0.13	RX
Q111	2SC945A-Q	4.32	4.95	8.09	RX
Q112	2SK117-GR	0.00	4.32	0.81	RX, SQ ON
		4.04	4.32	4.32	RX, SQ OFF
Q113	2SC945A-Q	0.00	0.64	0.00	RX, SQ ON
		0.00	0.01	4.03	RX, SQ OFF
Q401	2SC945A-P	13.00	14.00	13.80	RX
Q402	2SC945A-P	7.87	7.29	6.98	RX
Q403	2SA733P	6.98	6.98	7.29	RX
Q404	2SC945A-Q	0.00	0.41	0.00	RX
Q405	2SC945A-P	0.00	0.61	0.03	RX
Q406	2SC945A-P	0.00	3.97	8.38	RX
Q407	2SC945A-P	0.00	0.69	0.10	RX, SQ OFF
		0.00	0.00	6.99	RX, SQ ON
Q501	2SA945A-Q	0.29	0.44	13.51	RX
Q502	2SB722-B	13.80	13.51	0.00	RX

PART NO.	PART NAME	1	2	3	4	5	6	7	8
IC101	MC3357-P	8.34	7.79	7.81	8.37	1.06	1.06	1.06	8.37
		8.34	7.79	7.81	8.37	1.06	1.06	1.06	8.37
PIN NO.	9	10	11	12	13	14	15	16	REMARKS
	4.02	1.97	1.99	0.98	0.00	4.54	0.00	2.02	RX, SQ OFF
	4.02	1.97	1.99	0.30	7.48	0.00	0.00	2.02	RX, SQ ON
PART NO.	PART NAME	1	2	3	4	5	6	7	8
IC102	MB3713	7.00	12.00	13.20	0.00	NC	0.00	0.55	0.58
IC401	MB3756	8.20	13.80	8.20	0.00	13.70	8.20	NC	NC

NOTES:

All voltage readings were taken reference to ground using a D.V.M. with a 10 Meg Ohm DC input resistance.
Power supply voltage was set to 13.8 VDC.

CONTROL BOARD VOLTAGE CHART

PART NO.	PART NAME	EMITTER SOURCE	BASE GATE	COLLECTOR DRAIN	REMARKS
Q600	2SC945A-Q	0.00 0.00	0.20 0.71	6.80 0.07	NO SIGNAL SIGNAL
Q601	2SC945A-Q	0.00 0.00	0.00 0.70	6.70 0.13	NO SIGNAL SIGNAL
Q602	2SC945A-Q	0.00 0.00	0.12 0.70	7.50 0.03	NO SIGNAL SIGNAL
Q603	2SC945A-Q	0.00 7.55	0.00 8.14	8.20 8.20	NO SIGNAL SIGNAL

PART NO. IC600	PART NAME LM324		1 4.10 4.17	2 4.10 4.26	3 4.10 4.10	4 8.20 8.26	5 3.90 3.95	6 3.90 3.95	7 3.80 3.80	8 0.60 6.92
PIN NO.	9 4.20 3.68	10 4.00 4.18	11 0.00 0.00	12 4.10 4.10	13 4.10 4.12	14 4.10 4.10				REMARKS NO SIGNAL SIGNAL
PART NO. IC601	PART NAME MC14020BCP		1 0.00 0.00 0.00	2 0.00 0.00 0.00	3 0.00 0.00 8.18	4 0.00 4.06 0.00	5 0.00 4.29 0.00	6 0.00 3.82 0.00	7 0.00 4.00 0.00	8 0.00 0.00 0.00
PIN NO.	9 0.00 4.12 0.00	10 7.90 4.13 8.14	11 8.20 0.00 0.40	12 0.00 8.25 8.25	13 0.00 7.78 8.25	14 0.00 8.24 0.00	15 0.00 0.00 0.00	16 8.20 8.25 8.26		REMARKS NO SIGNAL SIGNAL TIMED OUT
PART NO. IC602	PART NAME MC14011BCP		1 8.20 8.26 8.26	2 0.00 8.25 8.26	3 8.20 0.00 0.00	4 0.00 8.25 8.26	5 8.20 0.00 0.00	6 8.20 0.00 0.00	7 0.00 0.00 0.00	8 0.60 6.92 6.91
PIN NO.	9 0.00 6.86 6.87	10 8.20 0.00 0.00	11 0.00 8.25 8.25	12 8.20 0.00 0.00	13 8.20 0.00 0.00	14 8.20 8.26 8.26				REMARKS NO SIGNAL SIGNAL TIMED OUT
PART NO. IC603	PART NAME MM74C14		1 8.20 0.00 6.35	2 0.16 8.04 0.00	3 0.74 4.13 0.59	4 0.00 4.13 8.15	5 0.00 7.75 0.00	6 8.20 0.00 0.00	7 0.00 0.00 0.00	8 0.00 0.00 0.00
PIN NO.	9 0.22 0.00 0.72	10 0.00 0.00 0.50	11 8.20 8.25 8.25	12 8.20 8.20 4.11	13 0.53 0.53 4.11	14 8.20 8.25 8.26				REMARKS NO SIGNAL SIGNAL TIMED OUT
PART NO. IC604	PART NAME MC14066BCP		1 3.60 3.67	2 0.50 3.67	3 0.00 3.63	4 0.00 3.70	5 0.00 8.21	6 0.00 8.21	7 0.00 0.00	8 3.80 3.81
PIN NO.	9 0.10 3.71	10 0.10 3.70	11 0.10 3.71	12 0.00 8.21	13 0.10 8.07	14 8.20 8.25				REMARKS NO SIGNAL SIGNAL
PART NO. IC605	PART NAME DE-390		1 0.00	2 3.63	3 3.67	4 3.67	5 0.00	6 0.00	7 2.75	8 0.00
PIN NO.	9 2.37	10 8.26								REMARKS SIGNAL
PART NO. IC606	PART NAME DE-334		1 8.60 8.25	2 3.97 3.97	3 0.00 0.00	4 4.43 4.80	5	6	7	8 SIGNAL NO SIGNAL
PART NO. IC607	PART NAME MC14020BCP		1 0.06 14.20	2 0.06 14.20	3 0.06 0.00	4 0.06 7.15	5 0.02 7.15	6 0.01 7.37	7 0.00 7.14	8 0.00 0.00
PIN NO.	9 0.00 7.14	10 0.37 7.11	11 8.40 0.00	12 0.54 7.02	13 0.06 7.13	14 1.51 PULSE	15 0.06 PULSE	16 13.80 14.20		REMARKS AC BATTERY
PART NO. IC608	PART NAME MC14017		1 0.00 PULSE	2 0.00 PULSE	3 0.00 PULSE	4 0.00 PULSE	5 0.00 PULSE	6 0.00 PULSE	7 13.80 PULSE	8 0.00 0.00
PIN NO.	9 0.00 PULSE	10 0.00 PULSE	11 13.80 PULSE	12 0.00 PULSE	13 0.00 0.00	14 1.58 PULSE	15 0.00 0.00	16 13.80 13.40		REMARKS AC BATTERY
PART NO. IC609	PART NAME MC14011BCP		1 13.80 PULSE	2 13.80 PULSE	3 0.00 PULSE	4 13.80 PULSE	5 1.58 PULSE	6 0.00 PULSE	7 0.00 0.00	8 13.80 PULSE

CONTROL BOARD VOLTAGE CHART, cont.

PIN NO.	9	10	11	12	13	14			REMARKS
	13.80 PULSE	0.00 PULSE	13.80 PULSE	0.39 SQ.	0.00 PULSE	13.80 14.20			AC BATTERY
PART NO.	PART NAME		1	2	3	4	5	6	7 8
IC610	MM74C14		0.19 0.00	13.80 14.10	0.00 PULSE	13.80 PULSE	0.00 PULSE	13.80 PULSE	0.00 0.39 0.00 SQ.
PIN NO.	9	10	11	12	13	14			REMARKS
	8.30 TRI.	0.00 0.00	0.18 0.00	0.00 PULSE	13.80 PULSE	13.80 14.20			AC BATTERY

NOTES:

All voltage readings were taken reference to ground using a D.V.M. with a 10 Meg Ohm DC input resistance.

Power supply voltage set to 13.8 VDC.

SQ: A Square wave form. PULSE: A pulsed wave form.

TRI: A triangular wave form.

POWER SUPPLY VOLTAGE CHART

PART NO.	PART NAME	EMITTER SOURCE	BASE GATE	COLLECTOR DRAIN	REMARKS
Q701	MPSA55	24.00	23.90	22.70	RX
Q702	MPSA55	23.40	22.70	23.40	RX
Q703	TIP32	24.00	23.40	14.40	RX
Q704	MPSA05	0.90	1.30	24.00	RX
Q705	2N3771	13.80	14.40	24.00	RX
		INPUT	ADJ.	OUTPUT	
IC701	LM317T	23.30	12.60	13.80	
		CATH	GATE	ANODE	
IC702	2N6504	0.00	0.00	13.80	

NOTES:

All voltage readings were taken reference to ground using a D.V.M. with a 10 Meg Ohm DC input resistance.

Power supply voltage was set to 13.8 VDC.

FEED THRU VOLTAGE CHART

FT1	FT2	FT3	FT4	FT5	FT6	FT7	FT8	REMARKS		
0.00	0.00	0.00	7.87	6.97	0.00	0.00	0.00	RX, SQ. OFF		
FT9	FT10	FT11	FT12	FT13	FT14	FT15	FT16	REMARKS		
0.00	0.00	0.00	0.10	0.00	8.37	2.04	13.80	RX, SQ OFF		
FT17	FT18	FT19	FT20	FT21	FT22	FT23	FT24	FT25	FT26	REMARKS
6.87	0.00	0.00	0.00	8.23	0.00	0.01	0.87	0.00	14.03	RX
6.29	0.00	0.00	0.00	0.00	0.00	2.99	-2.97	0.02	13.79	TX

NOTE:

All voltage readings were taken reference to ground using a D.V.M. with a 10 Meg Ohm input resistance.

Power supply voltage set to 13.8 VDC.

Photo 1

Pin 1 of P2
Recovered Audio

RFSG to Rx Ant.
Level: 1000 uV
Dev: 3 kHz
Mod. Freq: 1 kHz

Scale
H: 1 ms/Div
V: 0.5V/Div
DCV: 4.8V

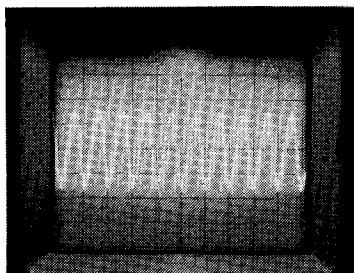


Photo 2

Pin 1 of P1
Tone decoder input

RFSG to Rx Ant.
Level: 1000 uV
Dev: 500 Hz
Mod Freq: 150 Hz

Scale
H: 5ms/Div
V: 50mV/Div
DCV: 1V

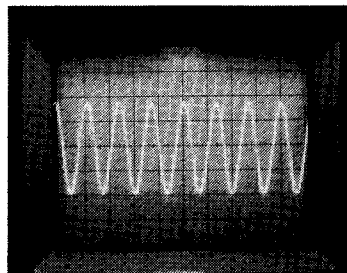
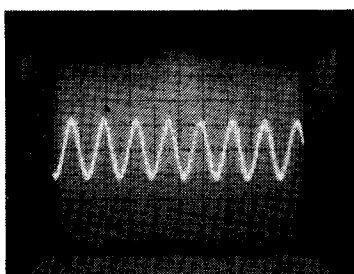


Photo 3

Test Point 3
Input to tone
transmission gate.
Tx Keyed.


Scale
H: 5ms/Div
V: 0.5V/Div
DCV: 3.6V


Photo 4

Pin 8 of IC604
Input of audio
transmission gate.
Carrier Sq. Operation.


RFSG to Rx Ant.
Level: 1000uV
Dev: 3 Hz
Mod. Freq: 1 kHz

Scale
H: 1ms/Div
V: 0.2V/Div
DCV: 3.8V

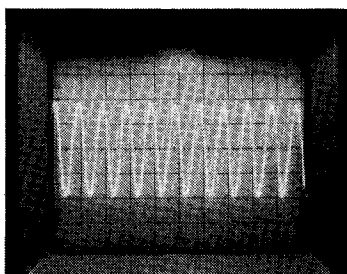

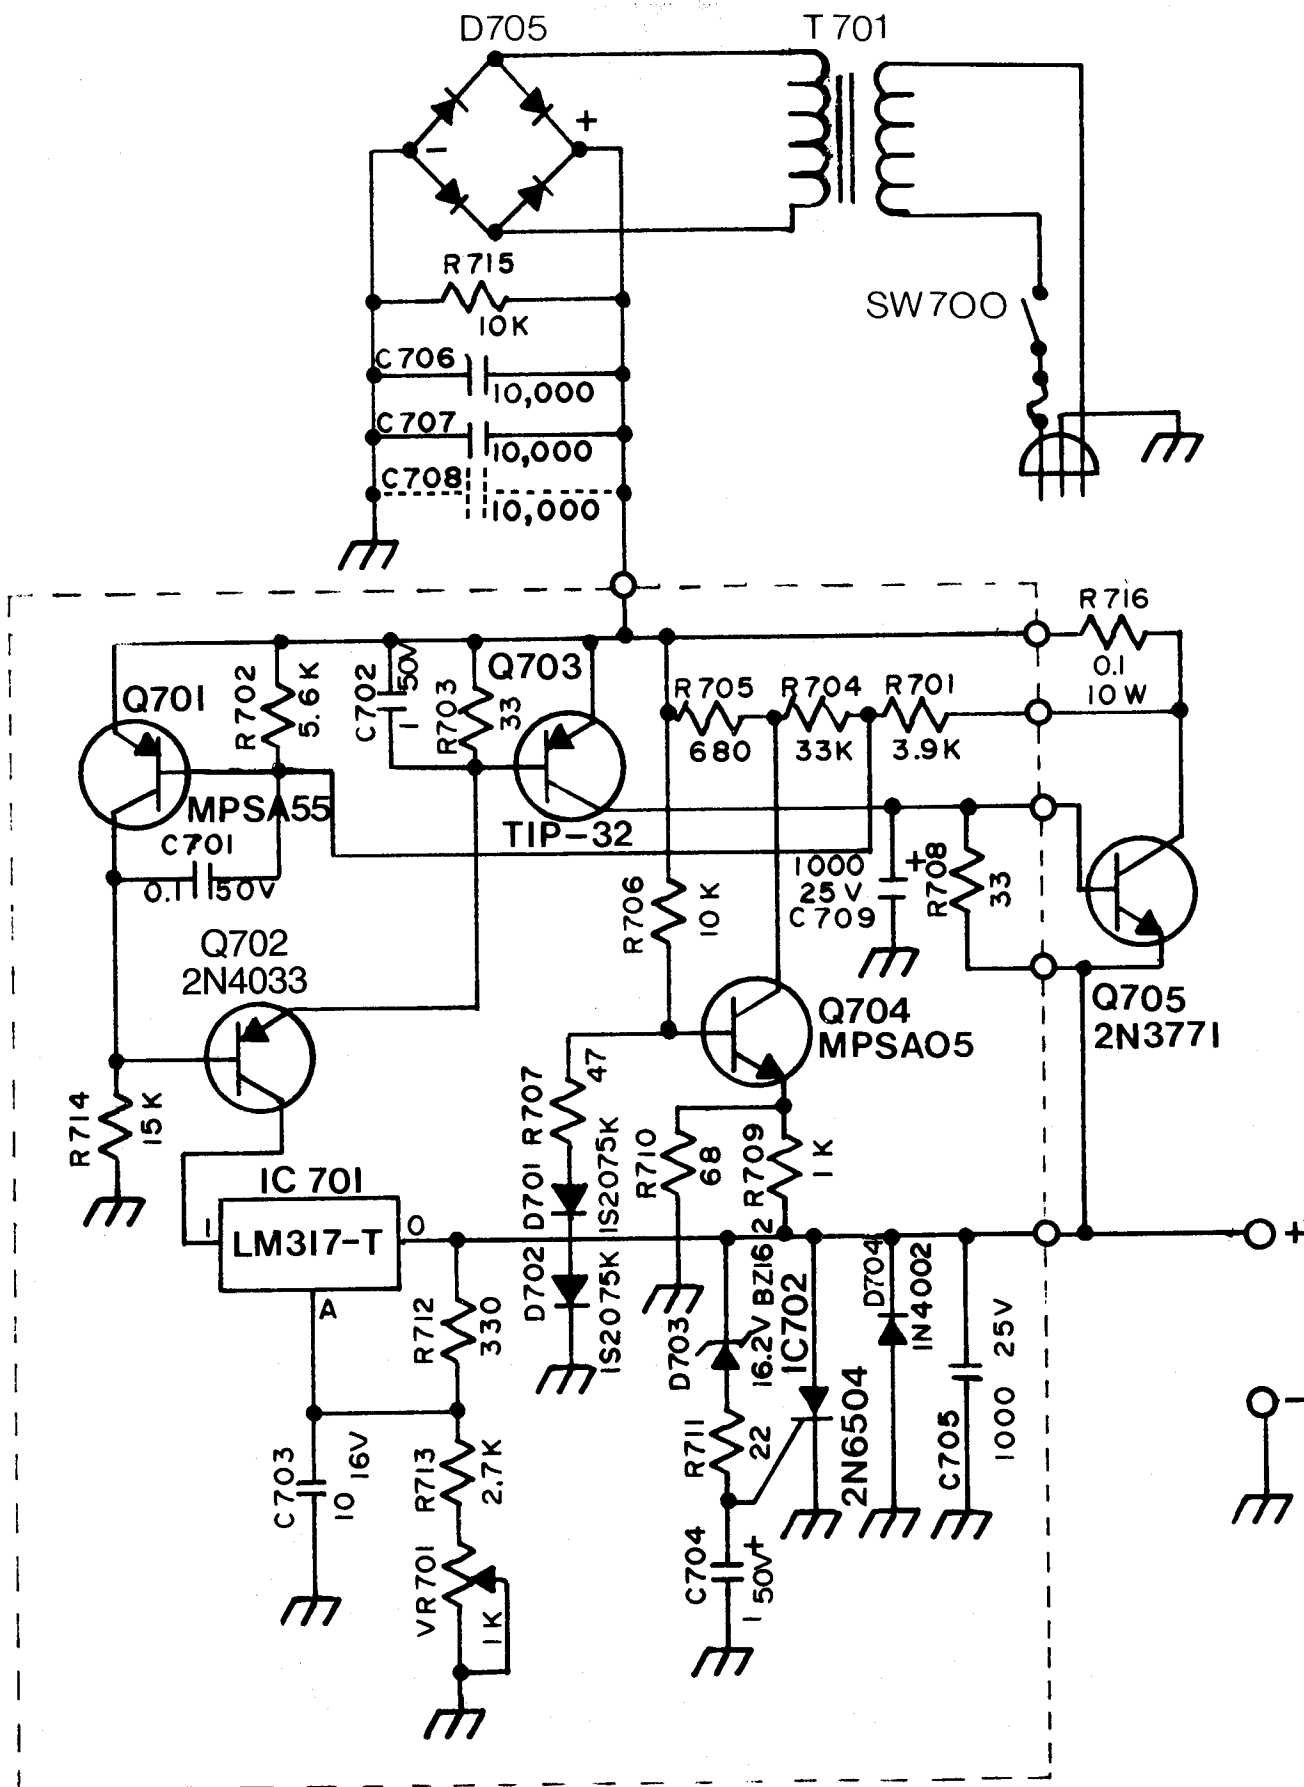


**POWER SUPPLY
SCHEMATIC**

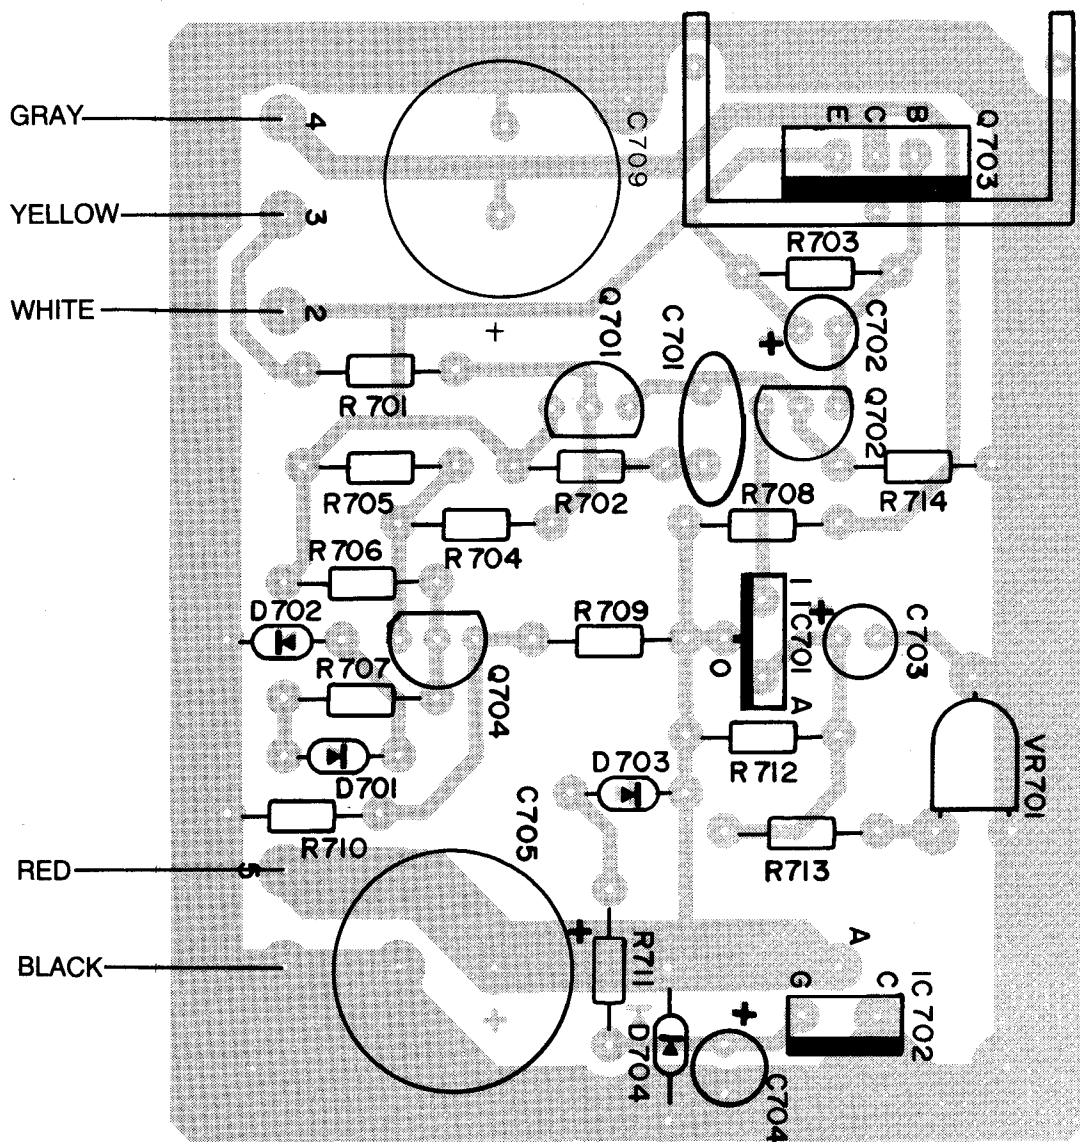


**POWER SUPPLY
X-RAY VIEW**


FD-049AB

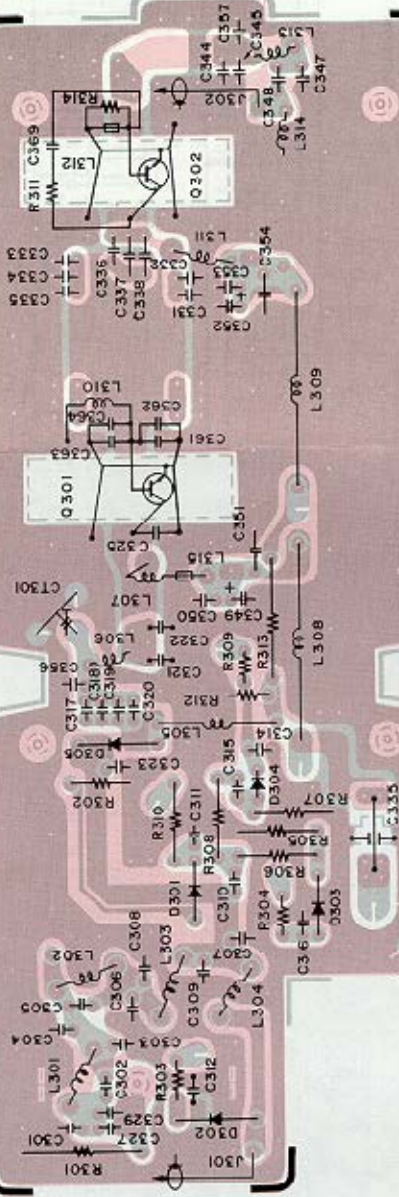


VIEWED FROM COMPONENT SIDE

POWER AMPLIFIER
VIEWED FROM COMPONENT SIDE

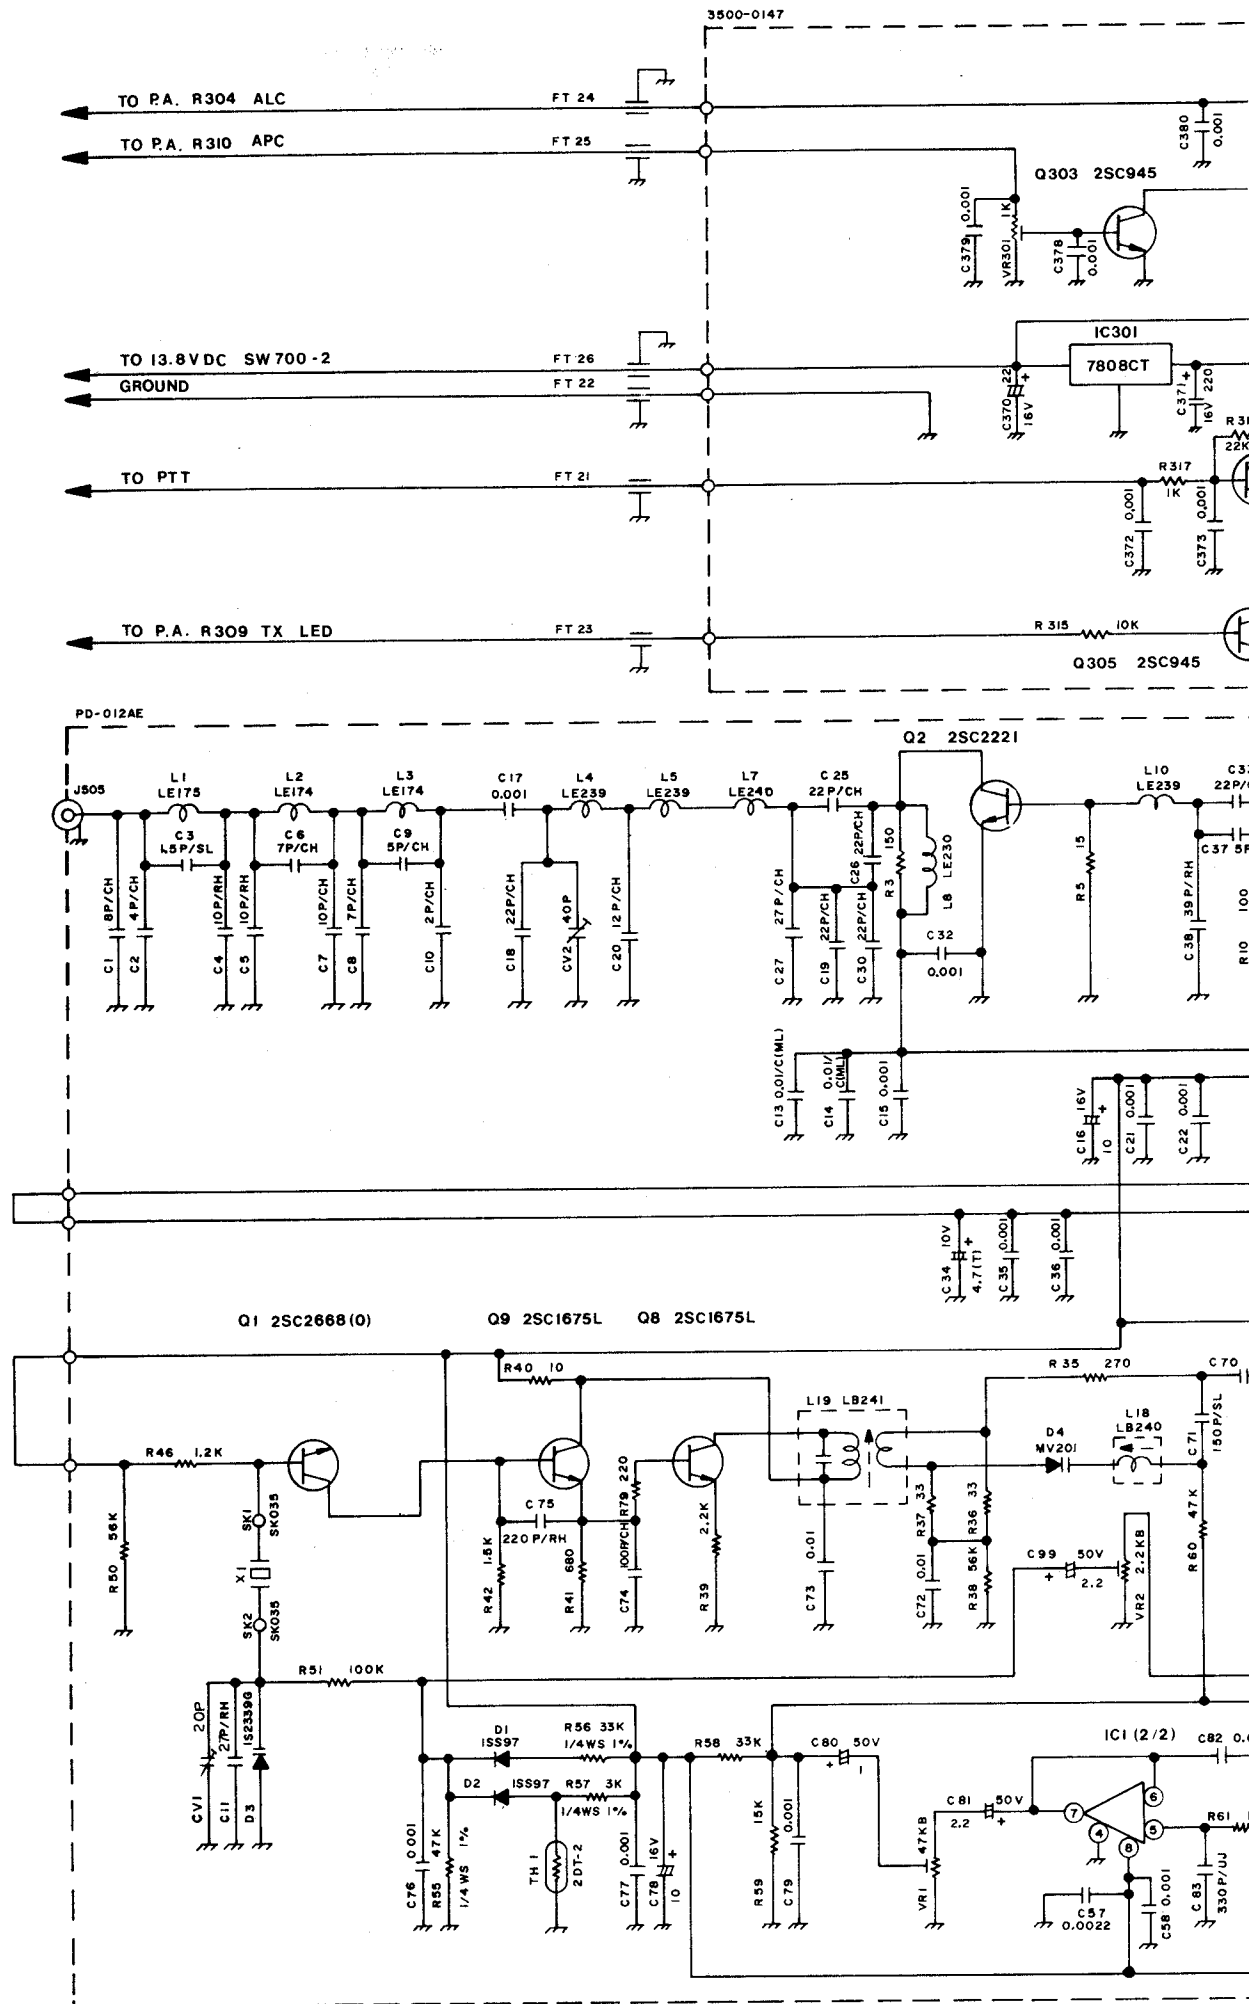


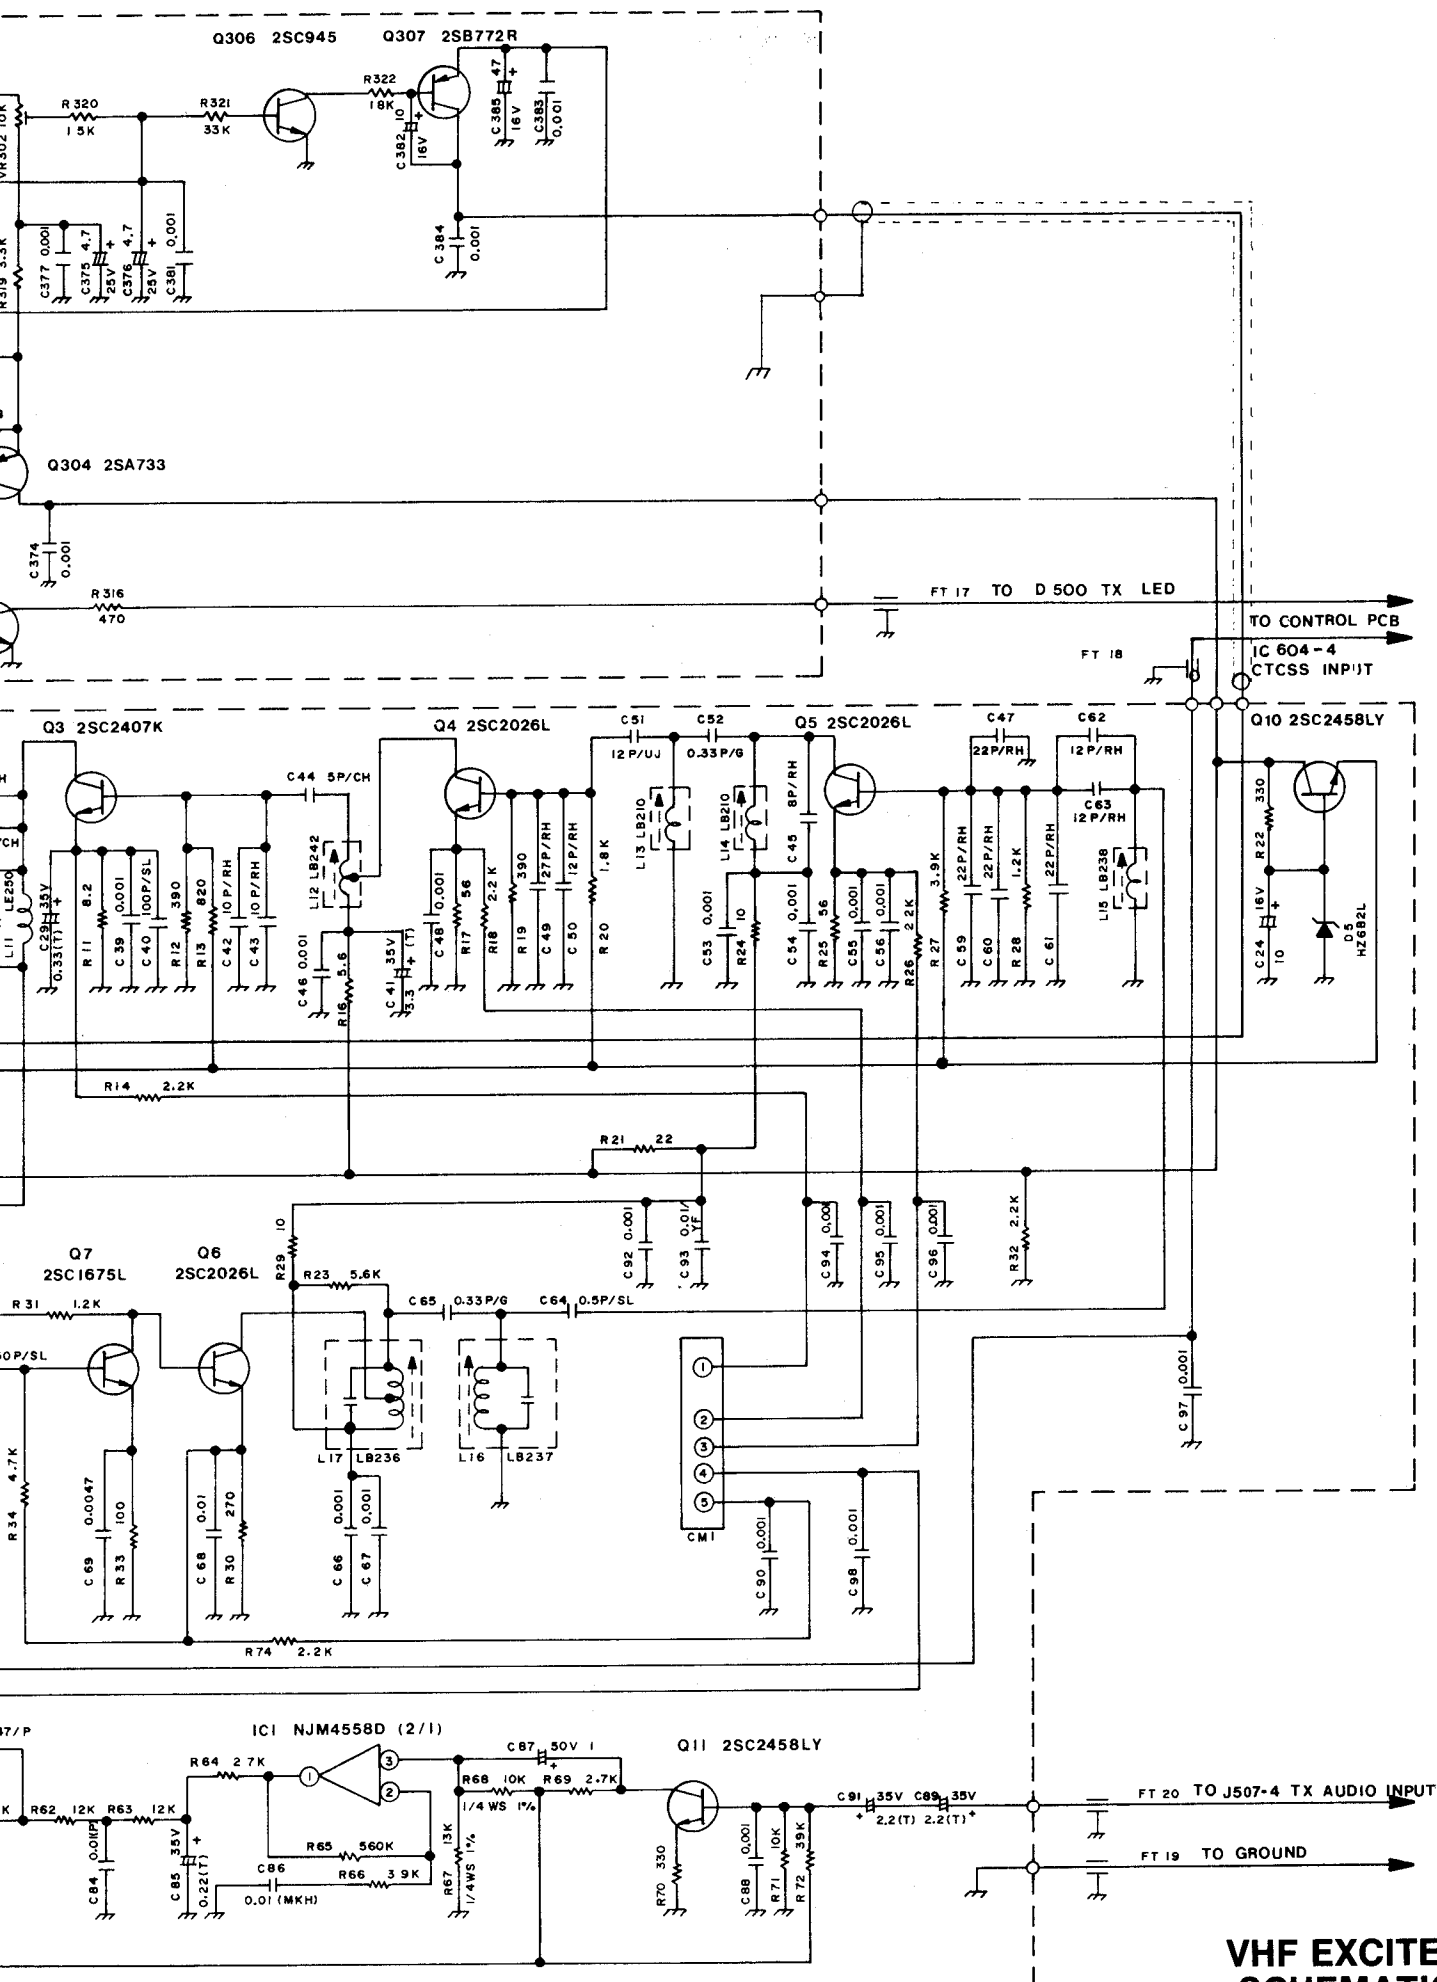


**VHF EXCITER
SCHEMATIC**

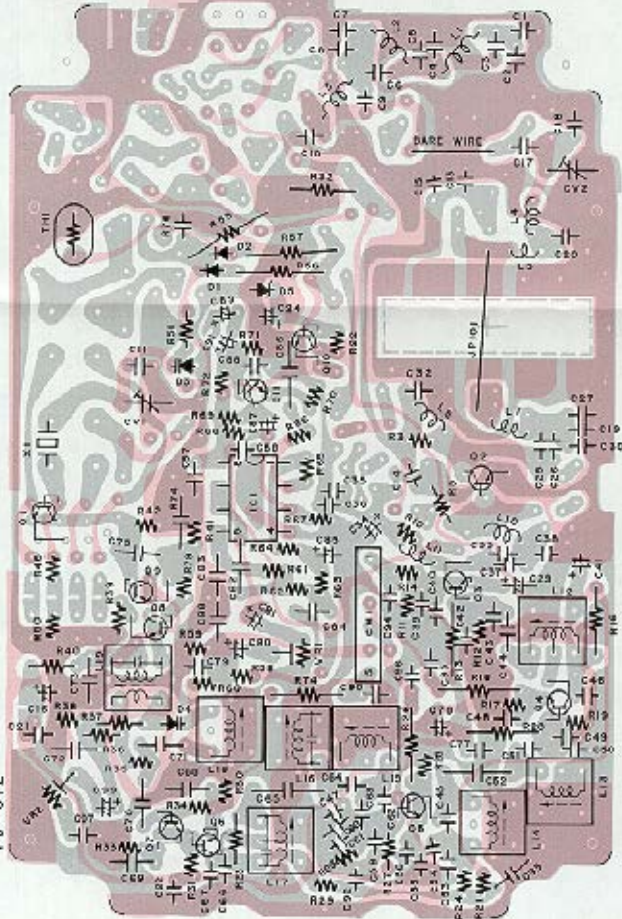

EXCITOR P.C. BOARD
X-RAY VIEW
SOLDER SIDE

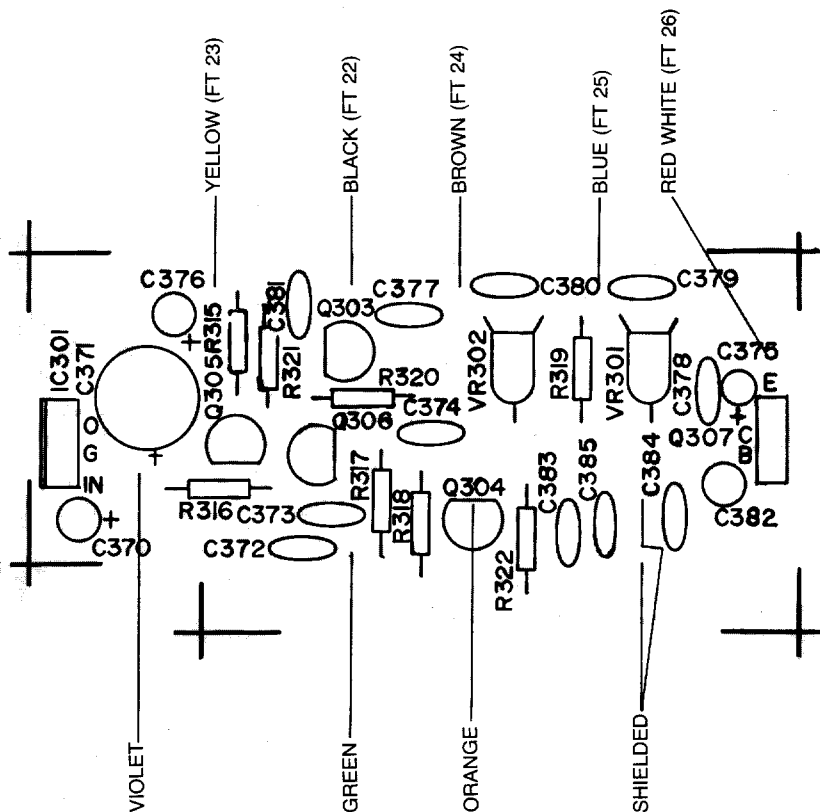


EXCITOR INTERFACE
P.C. BOARD
X-RAY VIEW
COMPONENT SIDE




NOTES

- 1.RESISTANCE VALUES ARE SHOWN IN OHMS UNLESS OTHERWISE NOTED.(K)
- 2.RESISTOR WATTAGES ARE 1/4 W UNLESS OTHERWISE NOTED.
- 3.CAPACITANCE VALUES ARE INDICATED IN MICROFARADS UNLESS OTHER (P= MICRO-MICRO FARAD)
- 4.ALL CAPACITORS TEMPERATURE CHARACTERISTICS ARE YD UNLESS OTHER


Q101 2SK168E

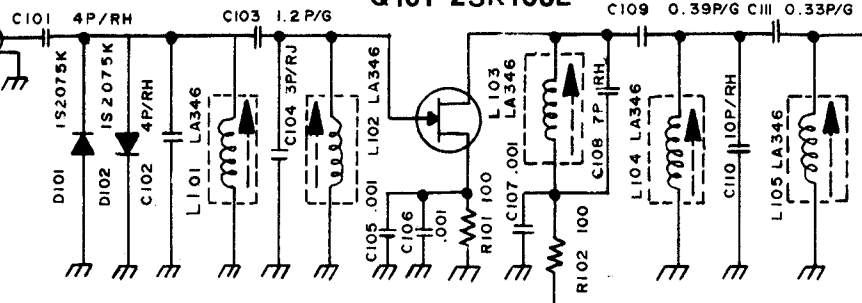


Q105 MPSH10

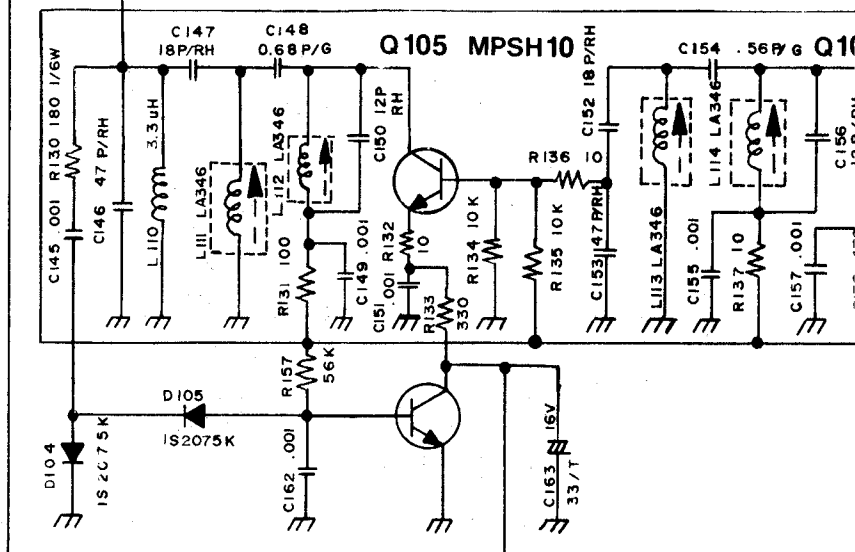


Q110 2SC945AQ

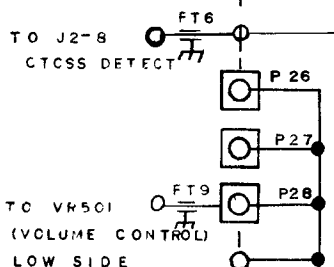


IC 401 MB37

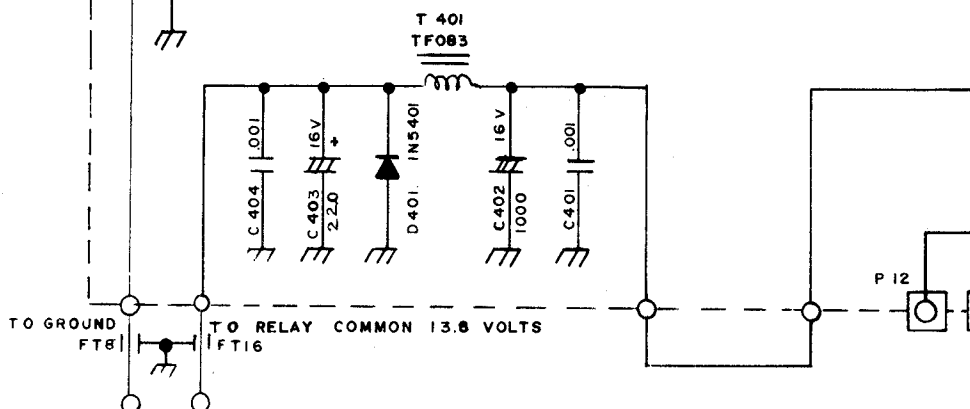


WISE NOTED.

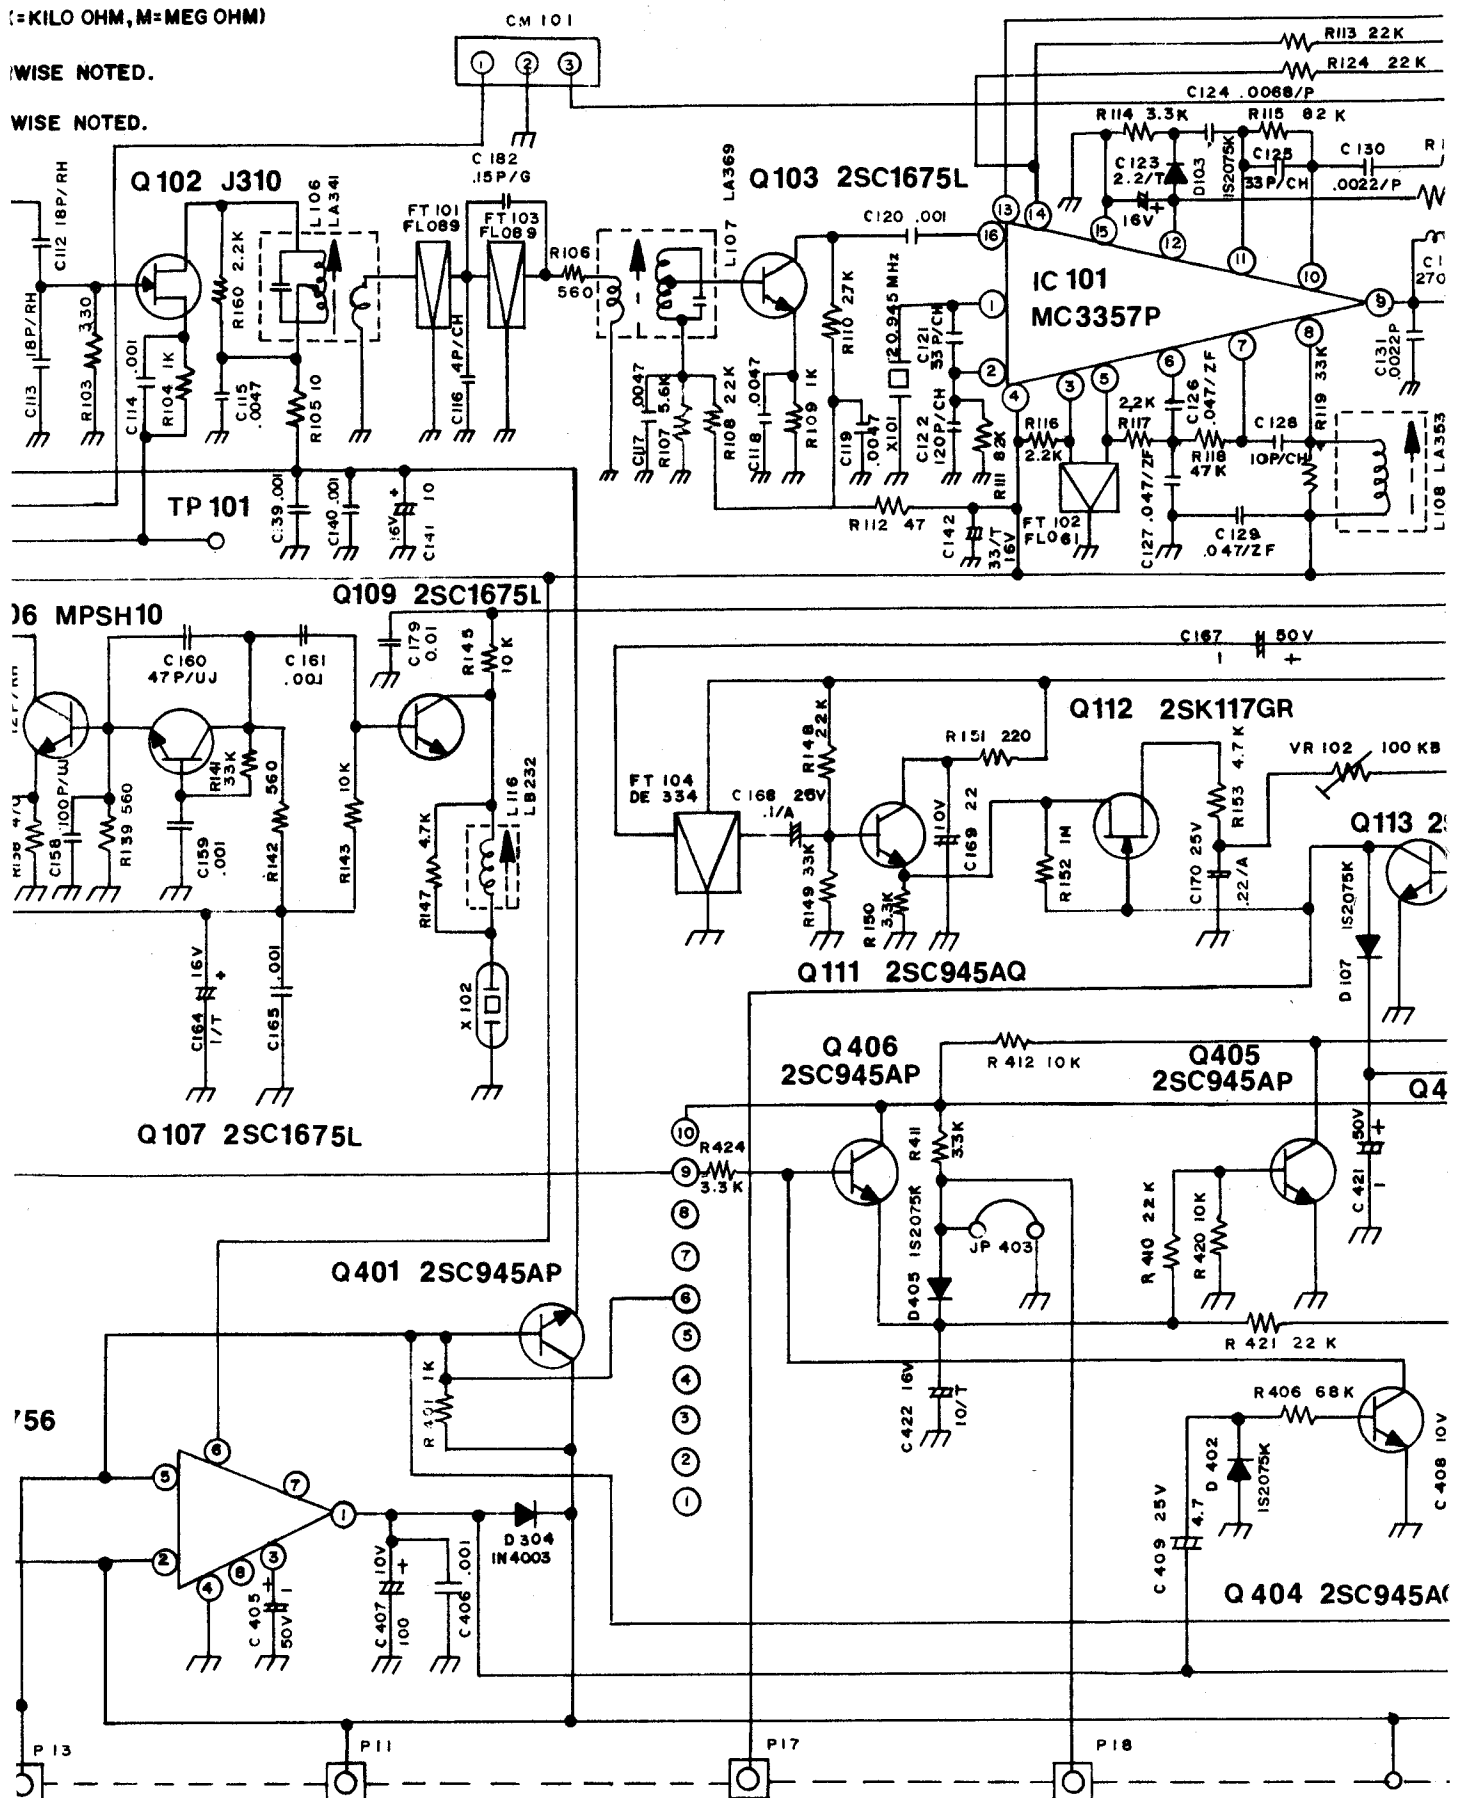

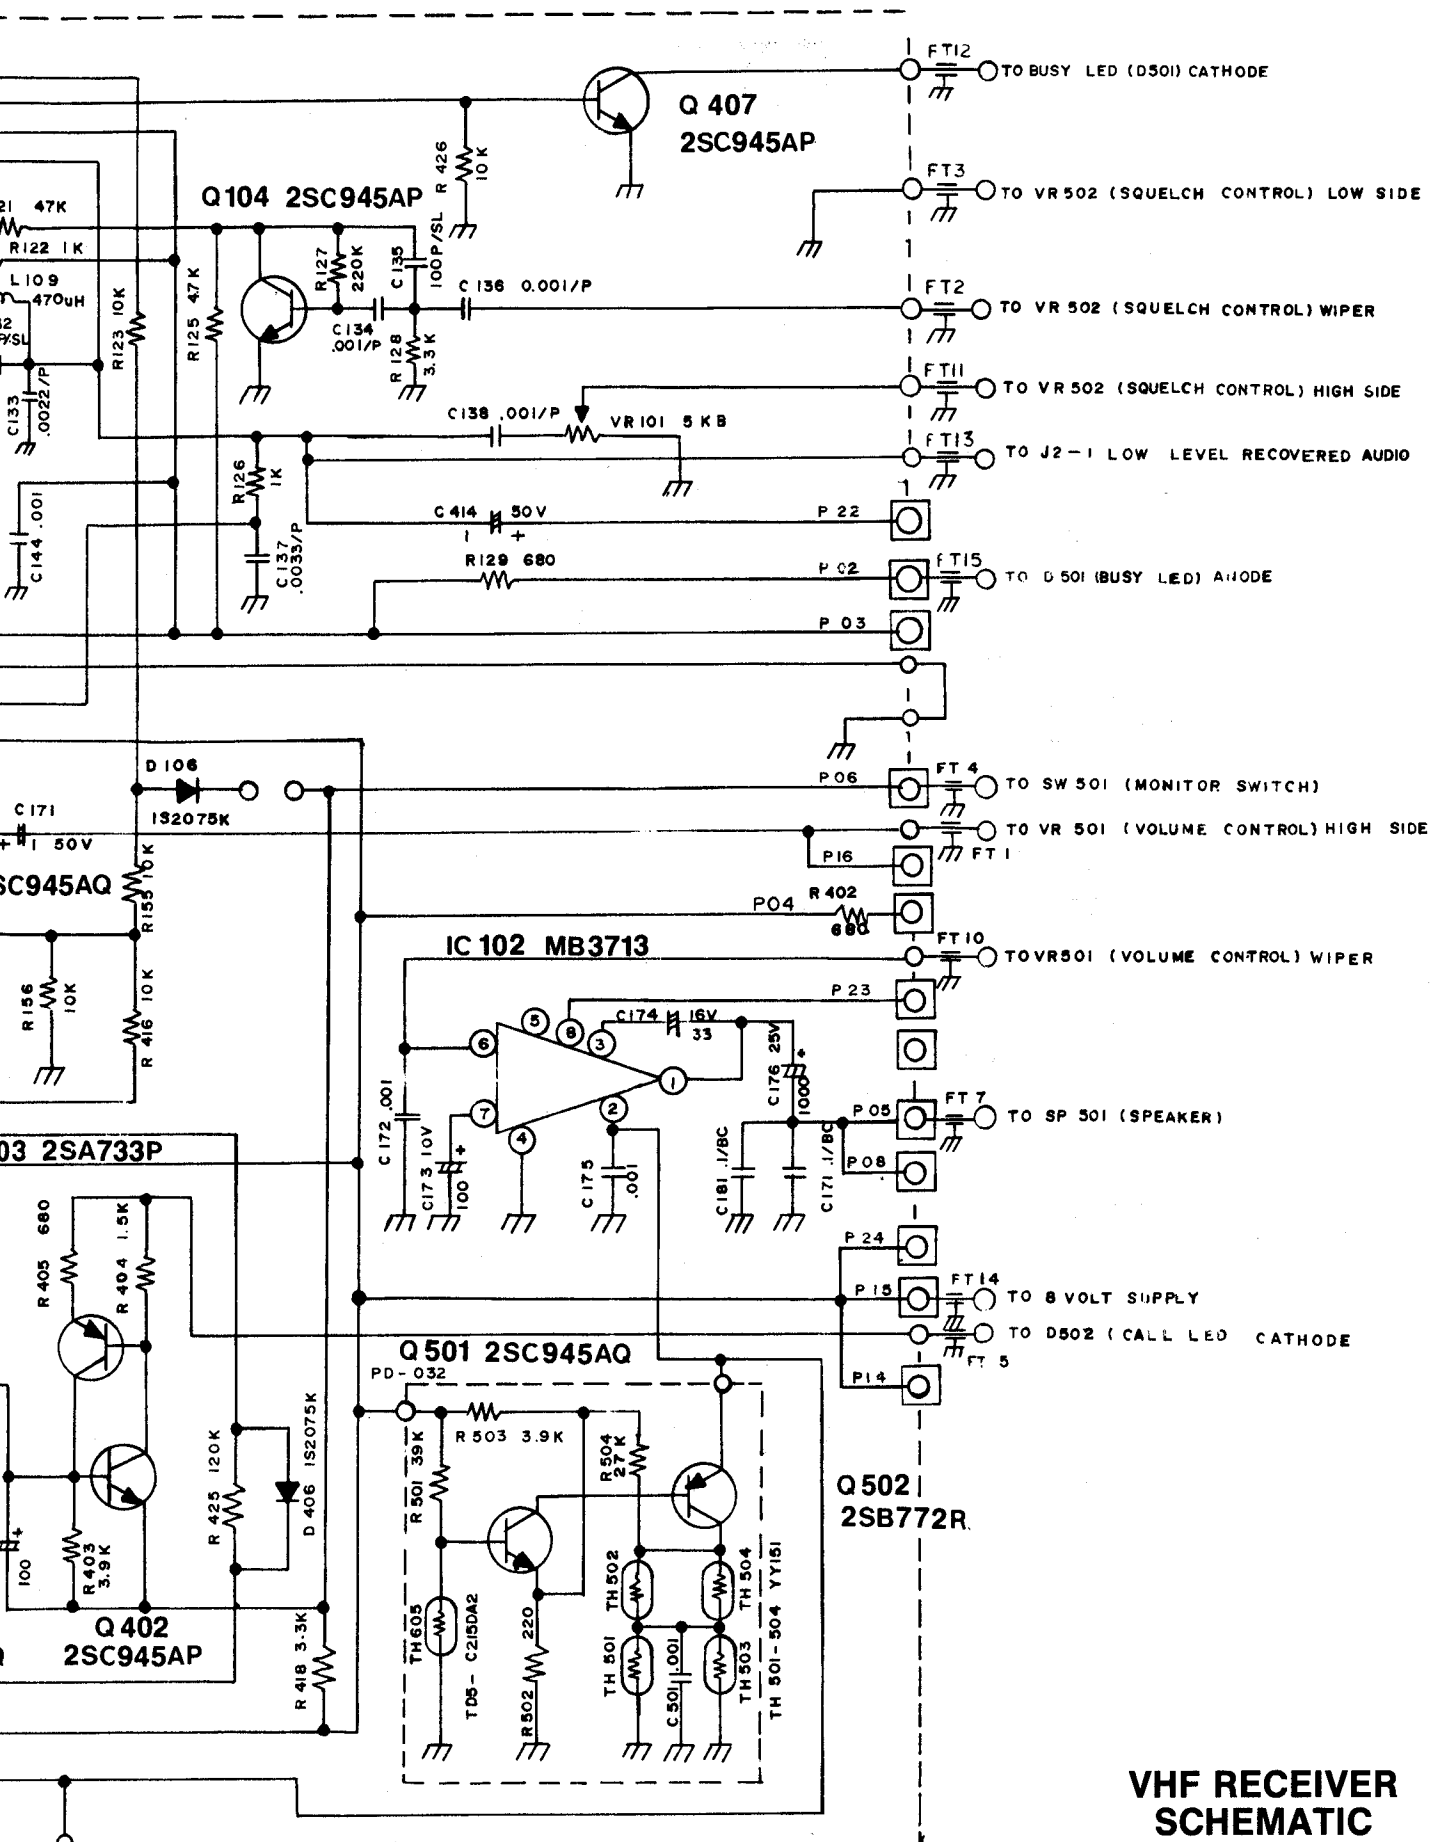



VHF RECEIVER SCHEMATIC

PD-032AA

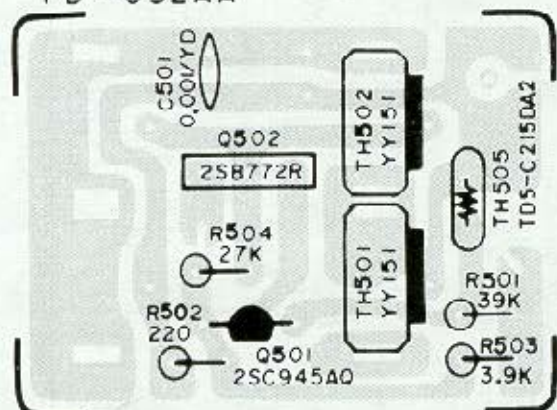



POSISTOR P.C. BOARD
SHOWN FROM COMPONENT SIDE

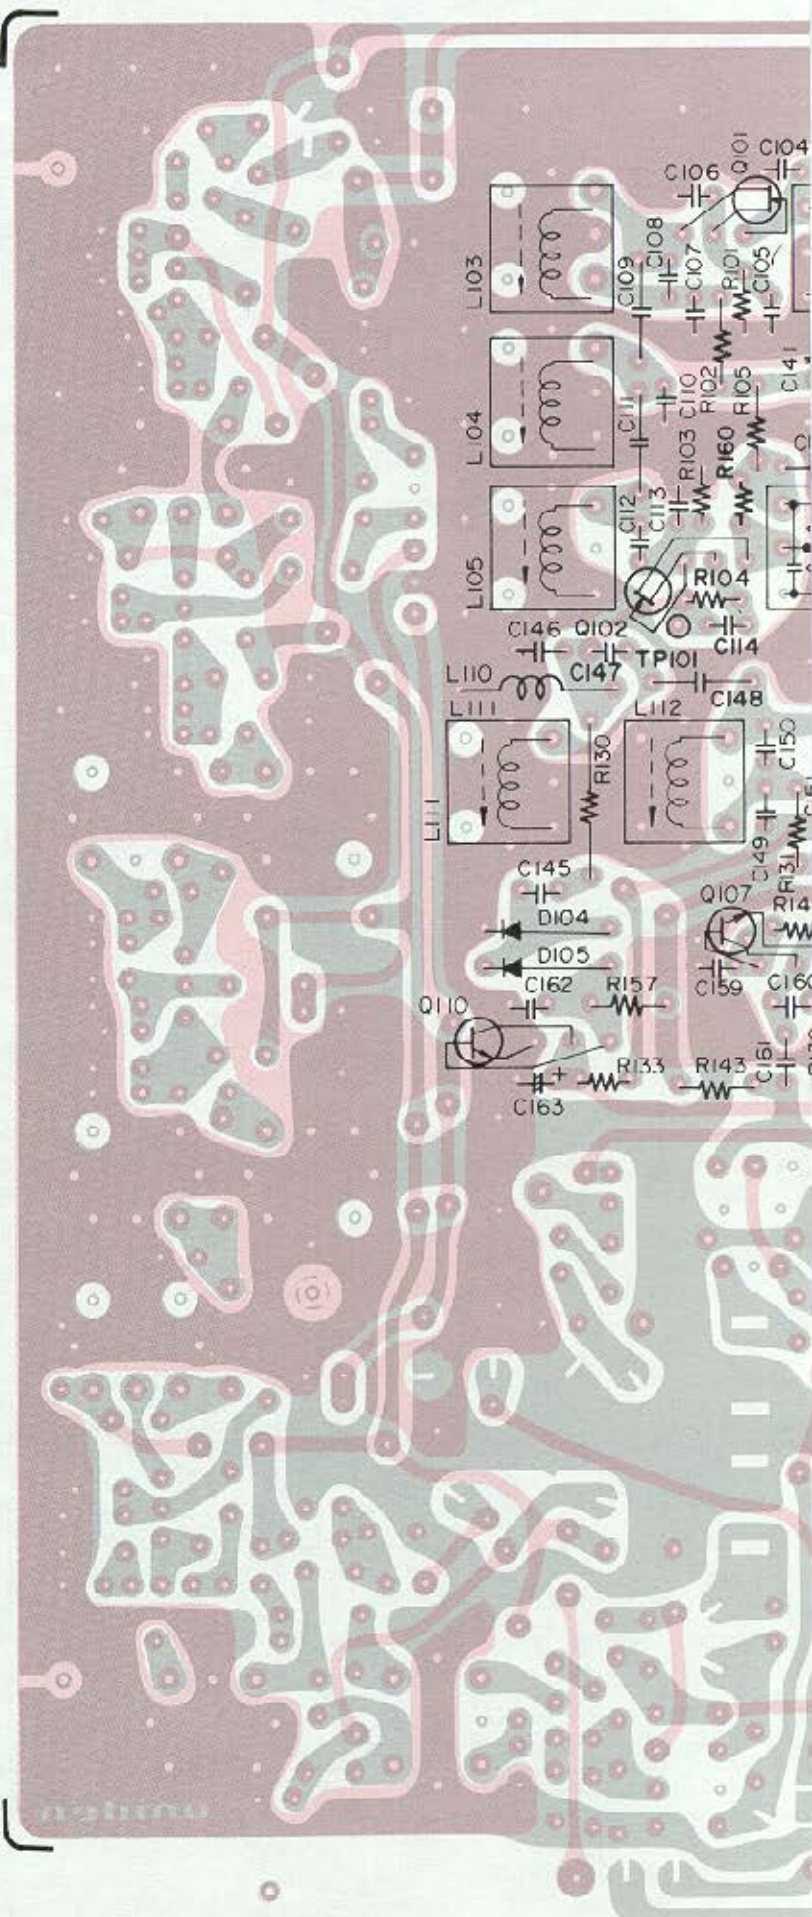

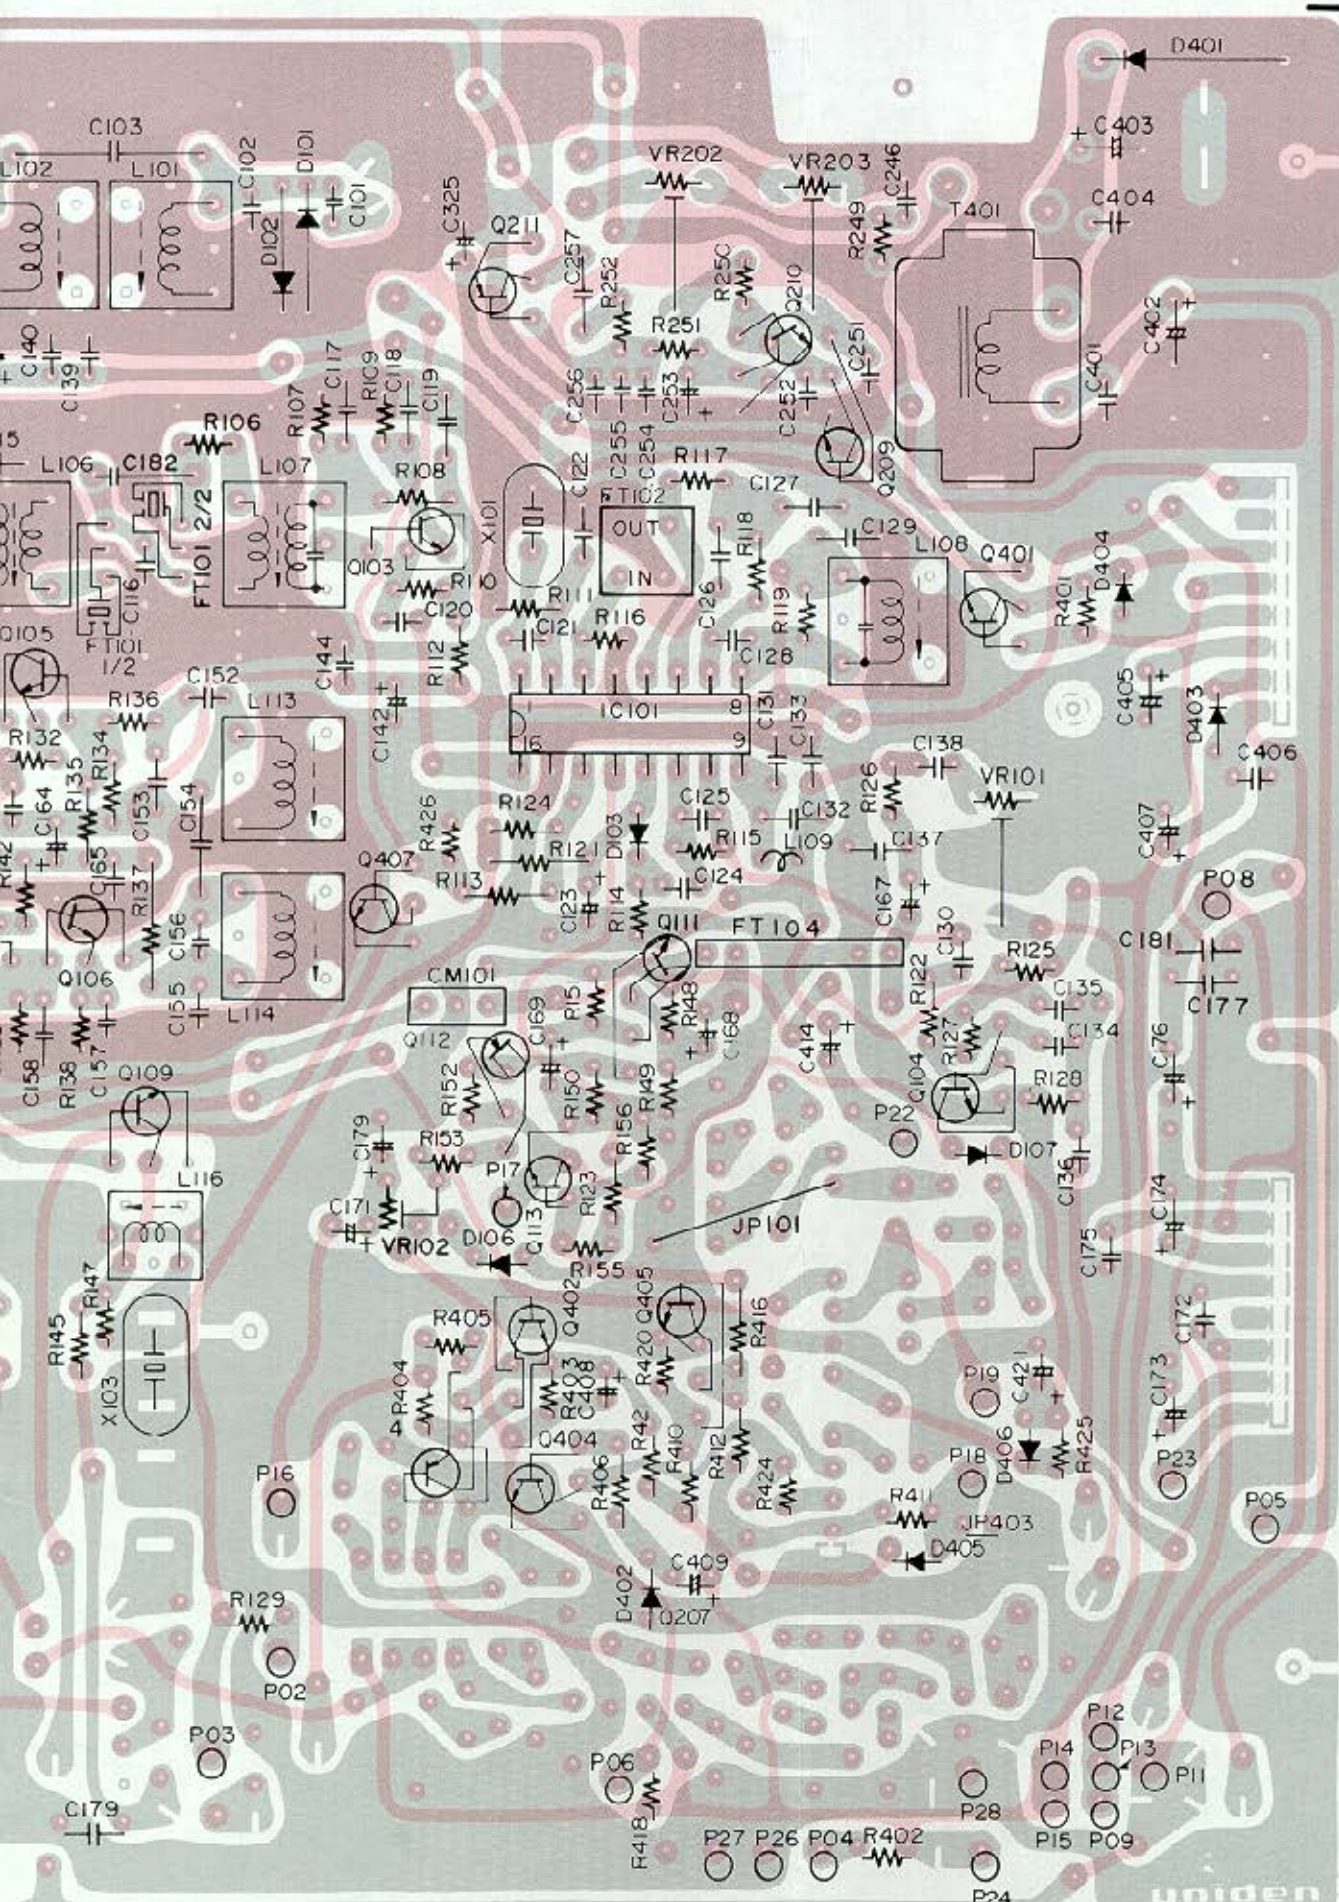


**VHF RECEIVER P.C. BOARD
SHOWN FROM SOLDER SIDE**

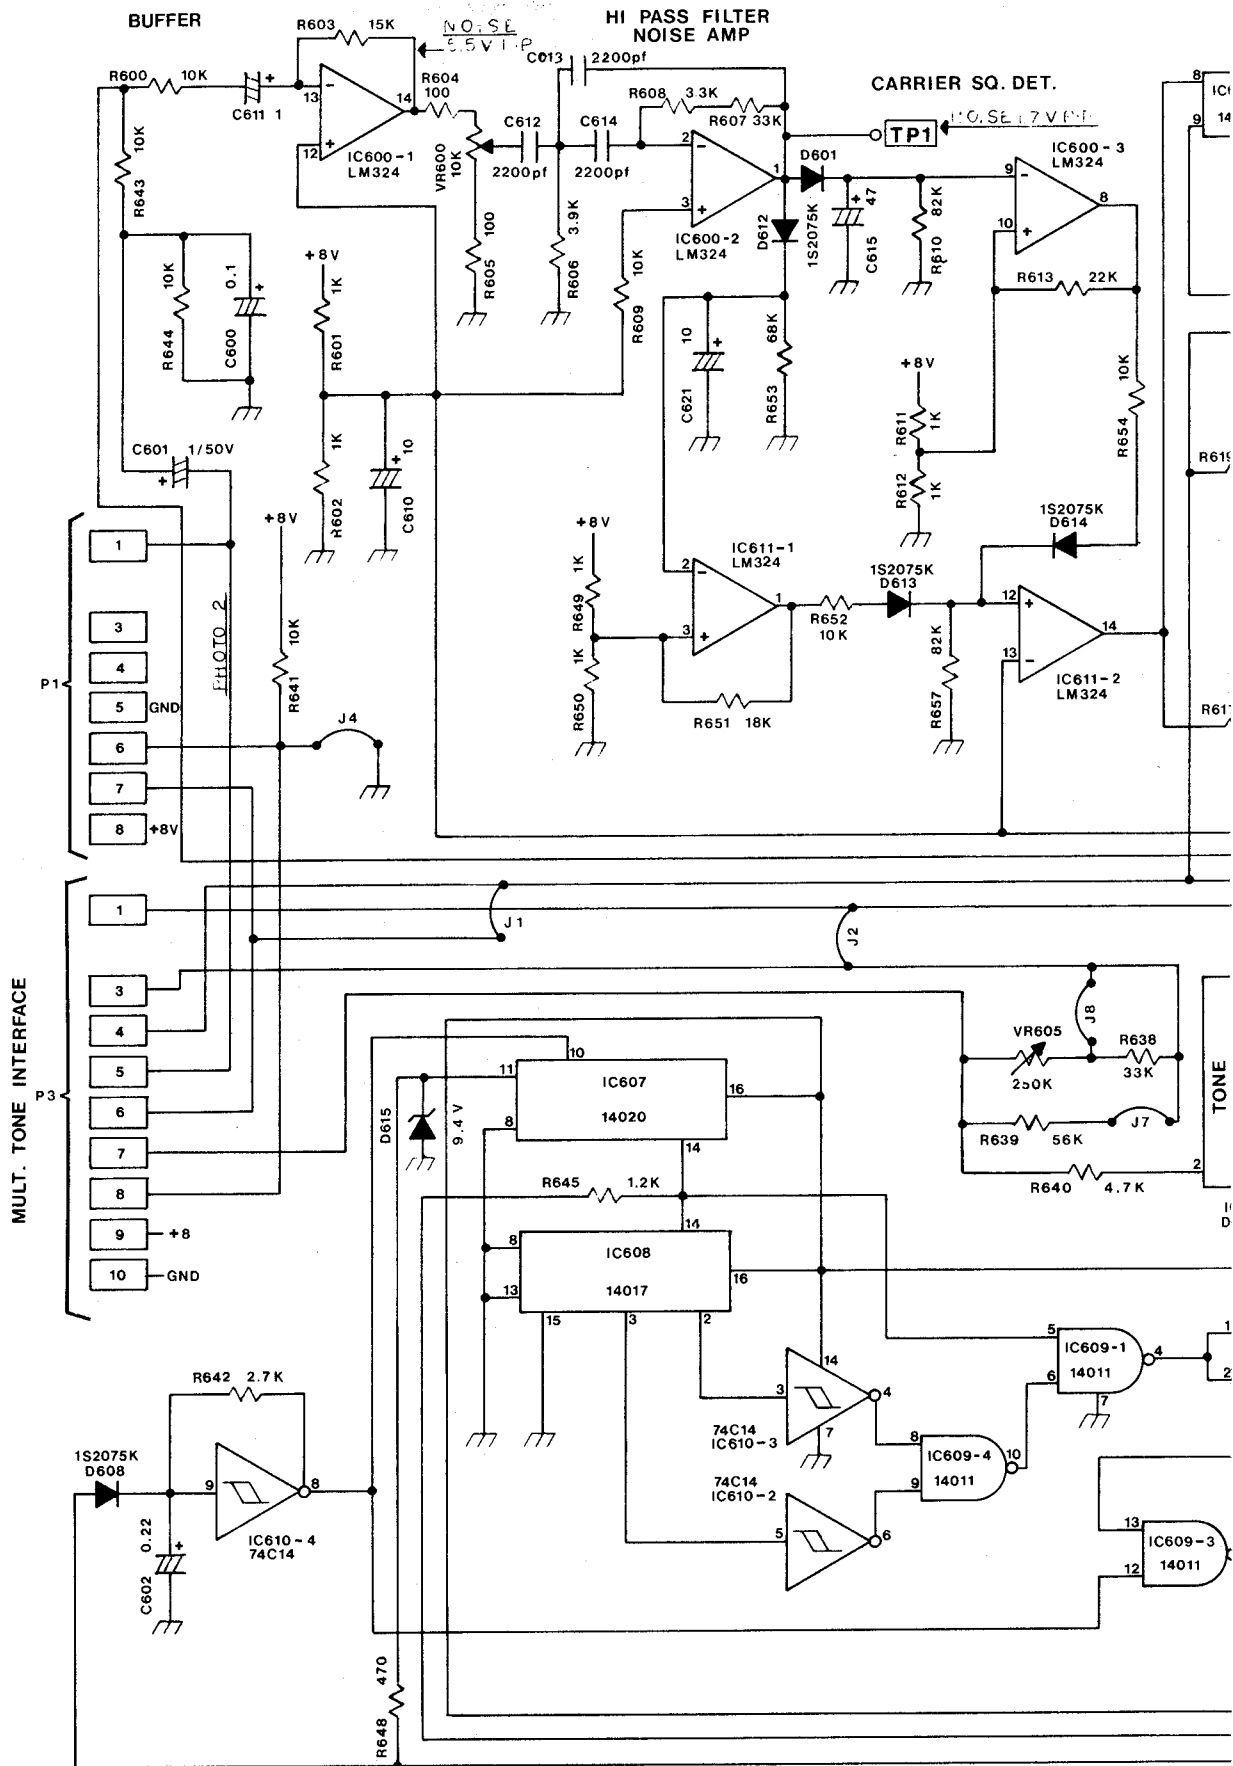


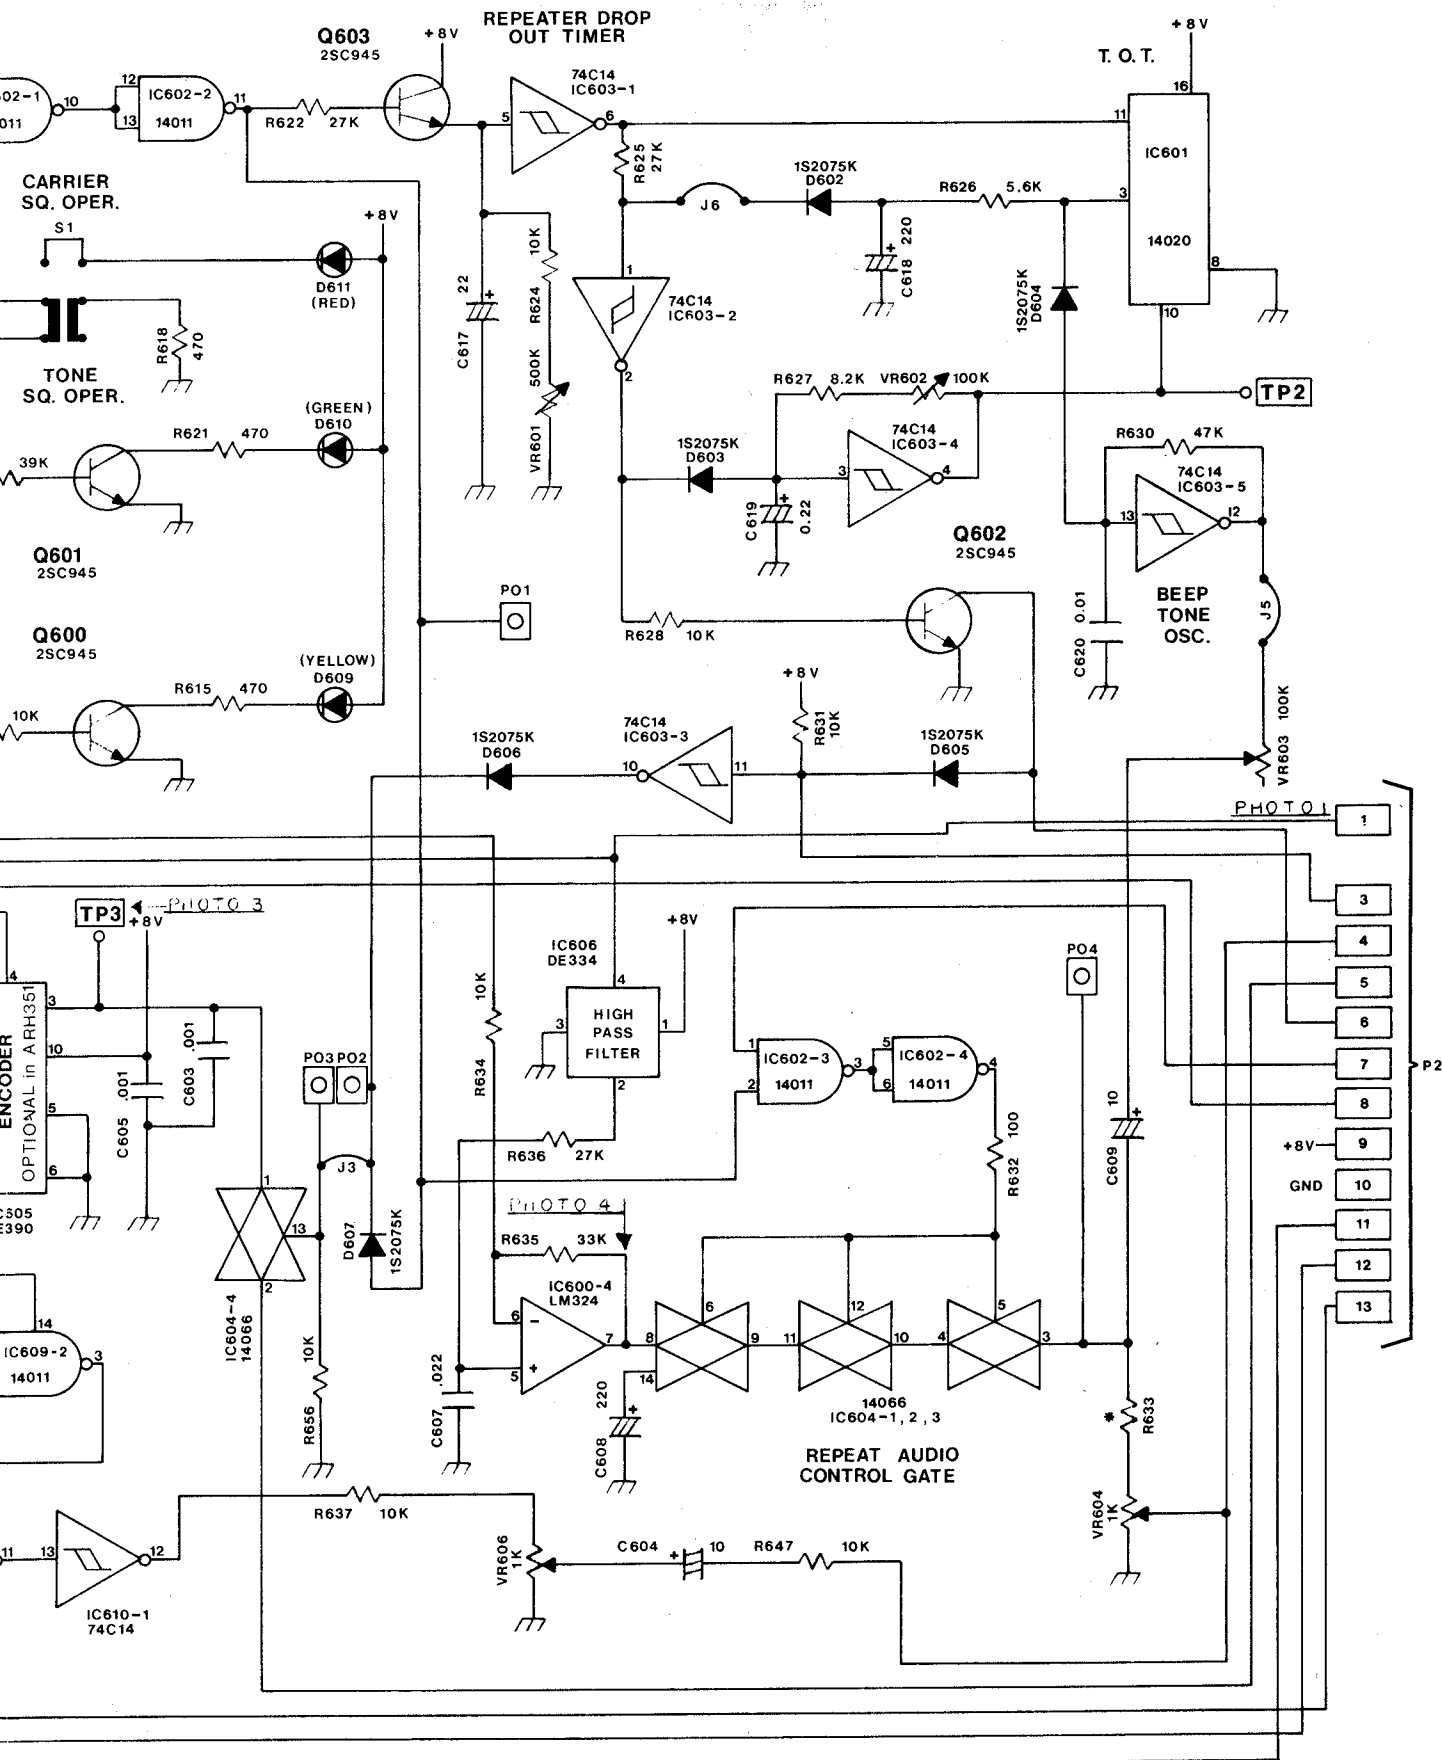


REPEATER CONTROL BOARD

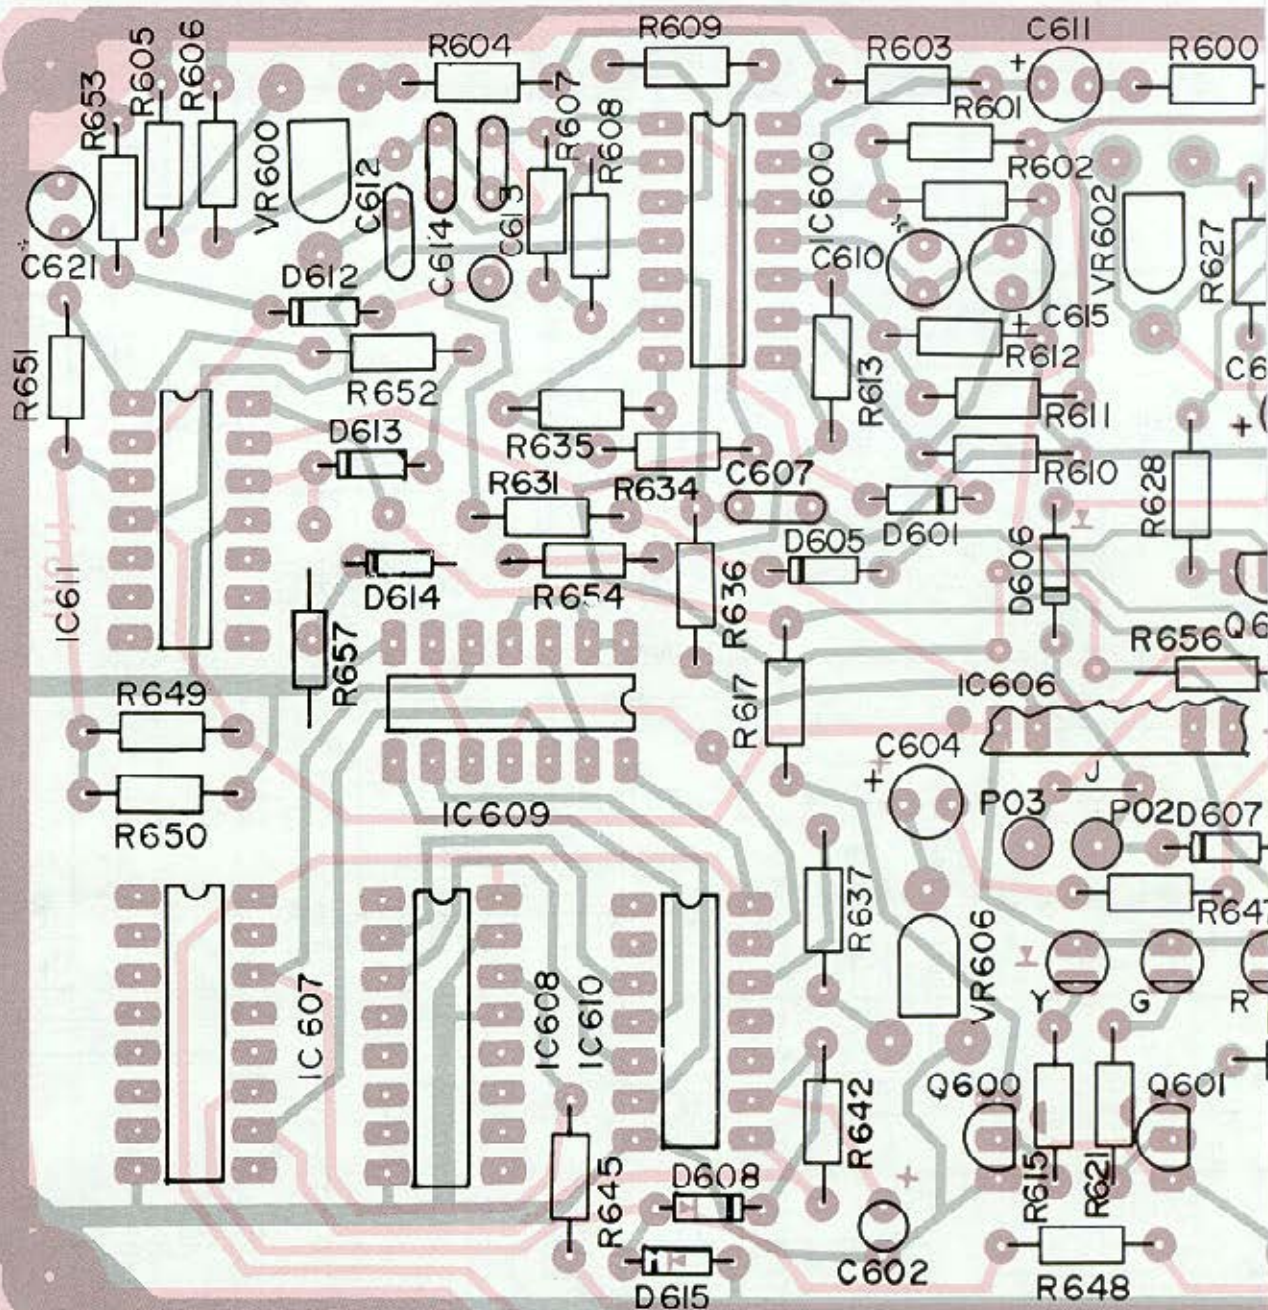


CONTROL P.C. BOARD
SHOWN FROM COMPONENT SIDE

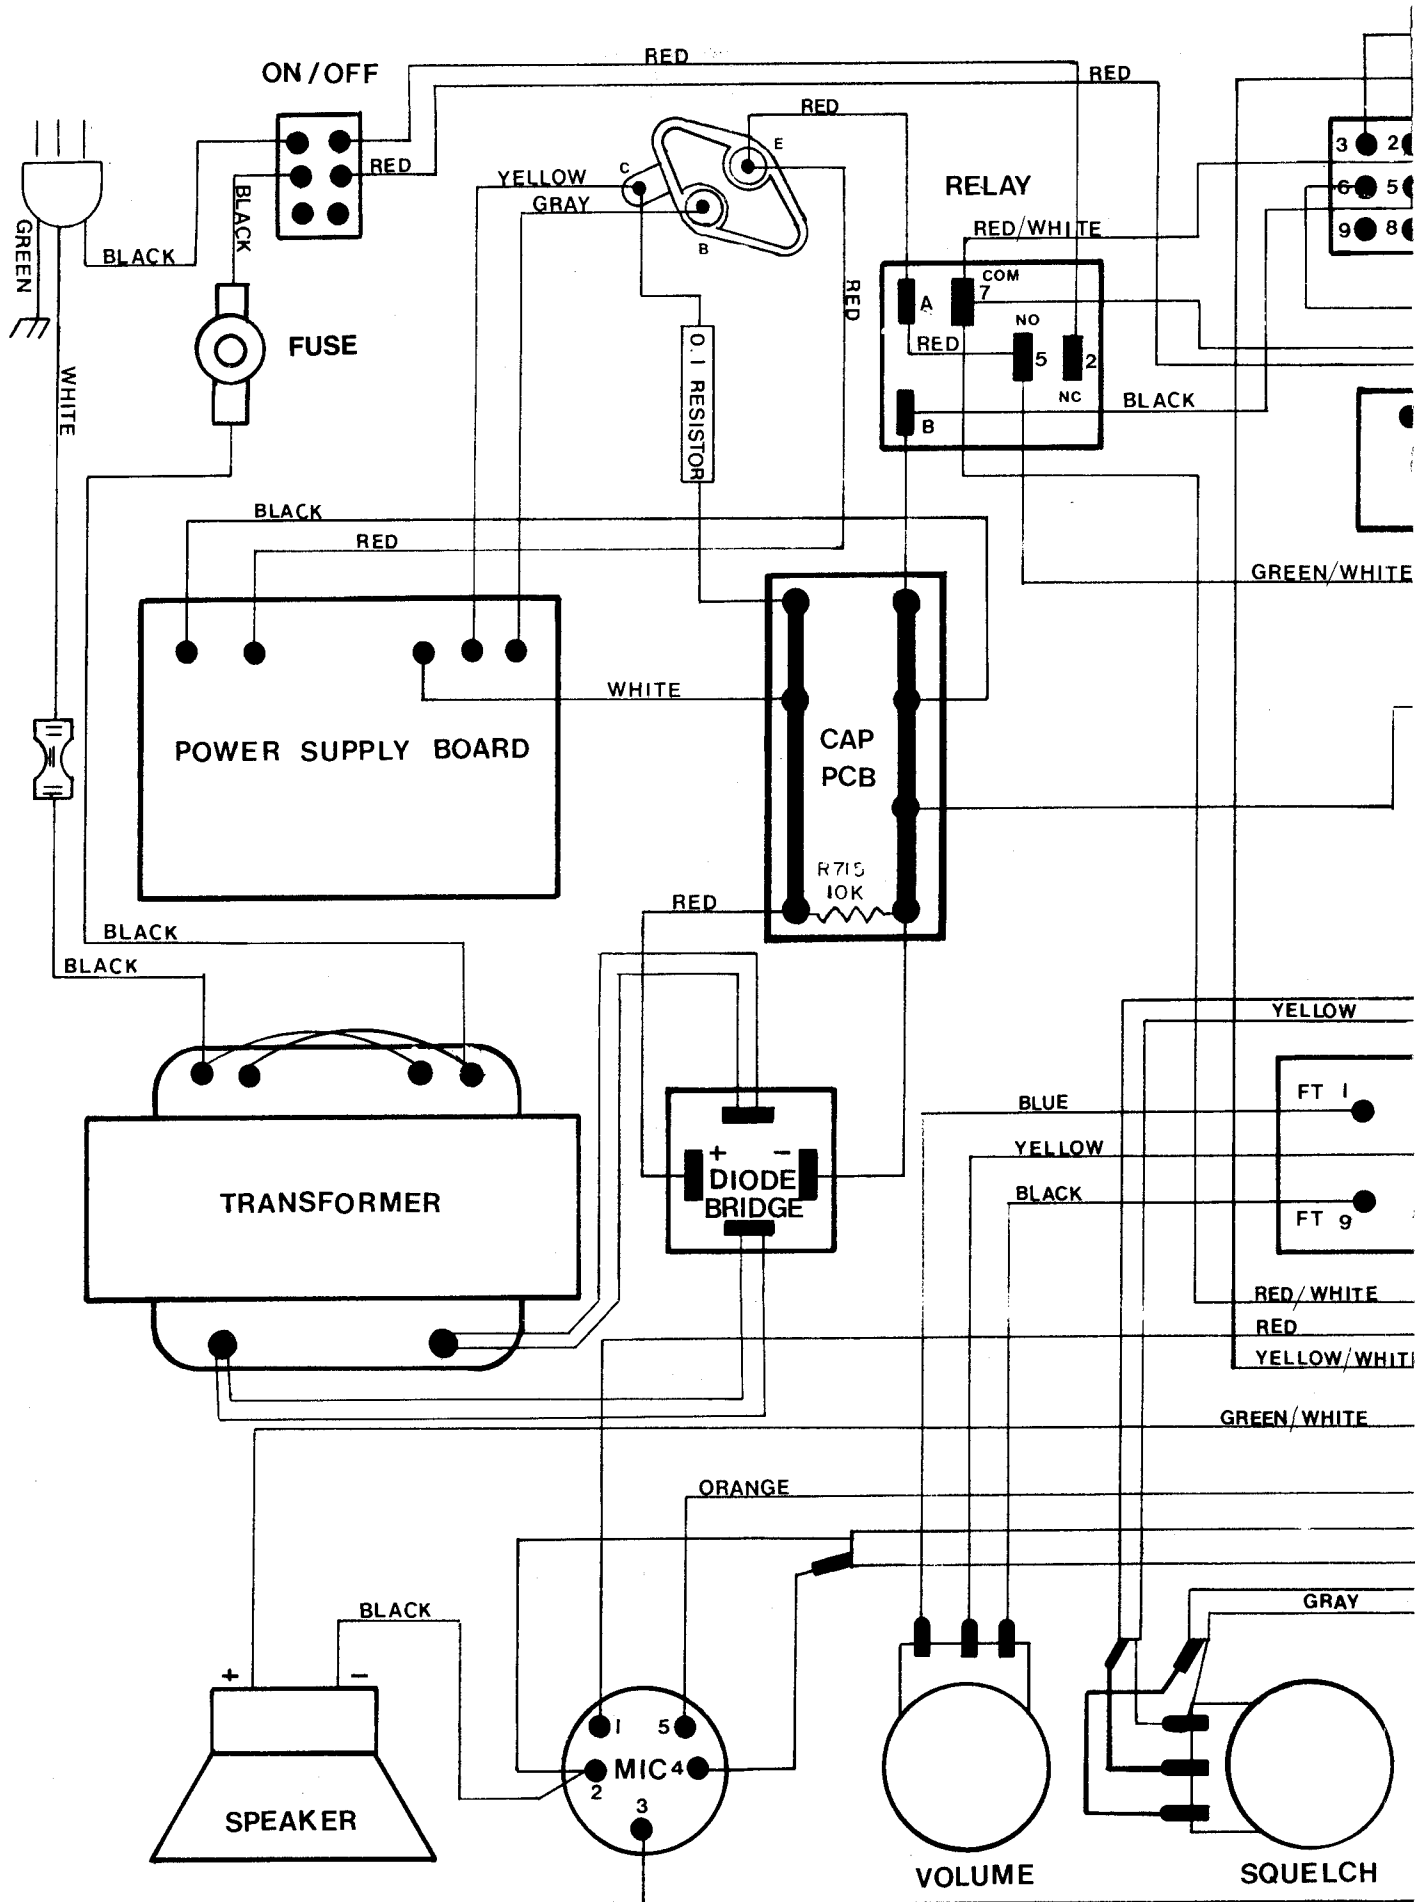

REPEATER WIRING DIAGRAM

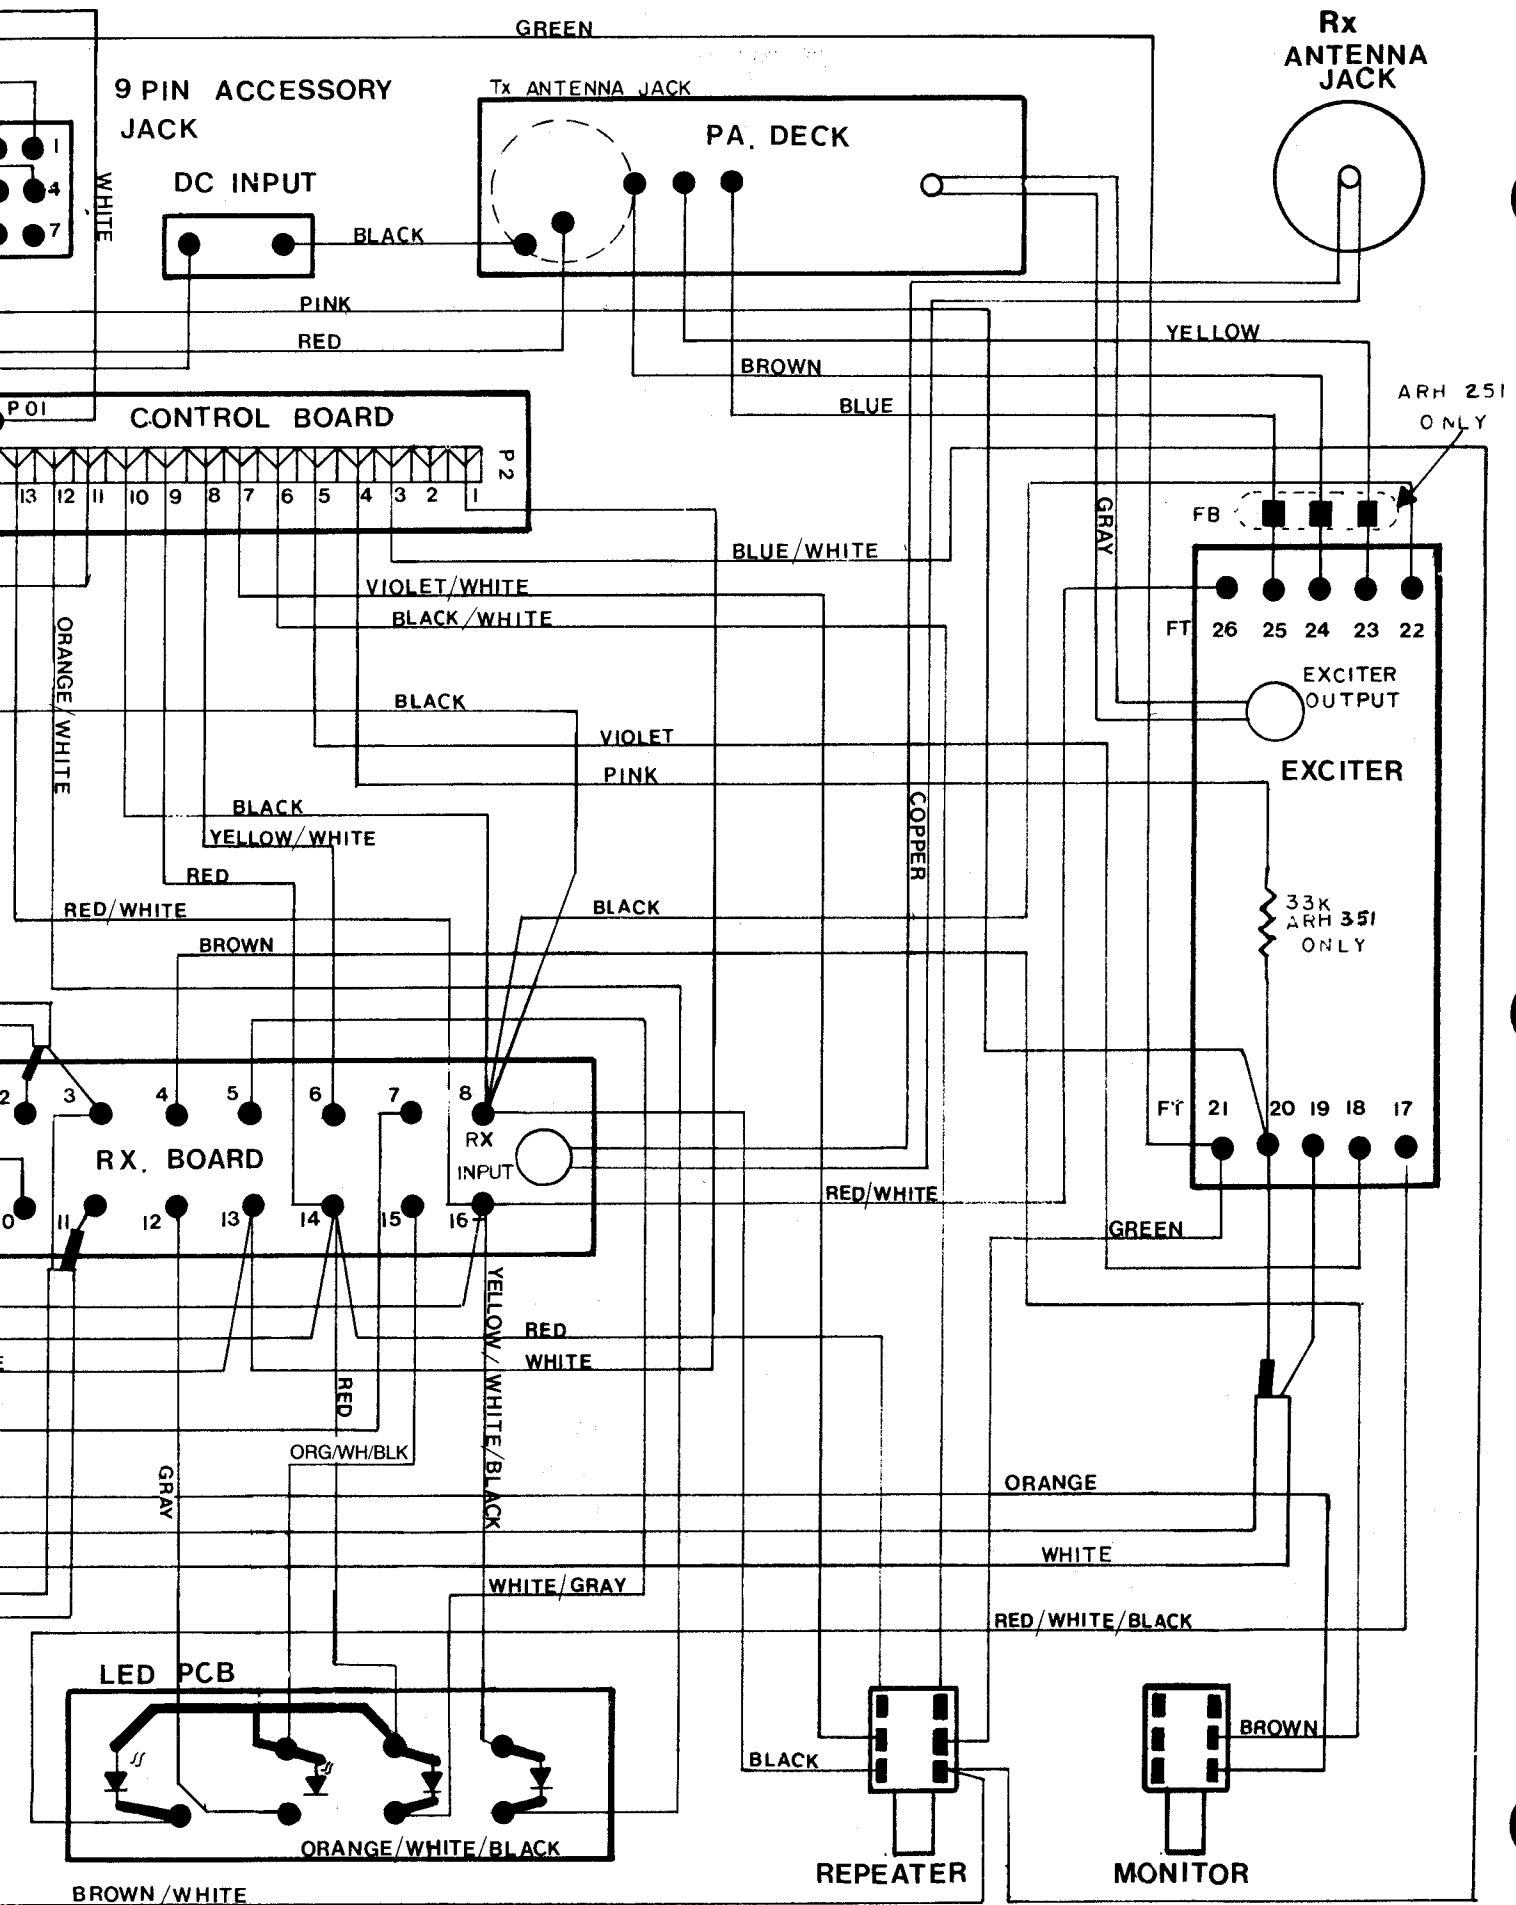











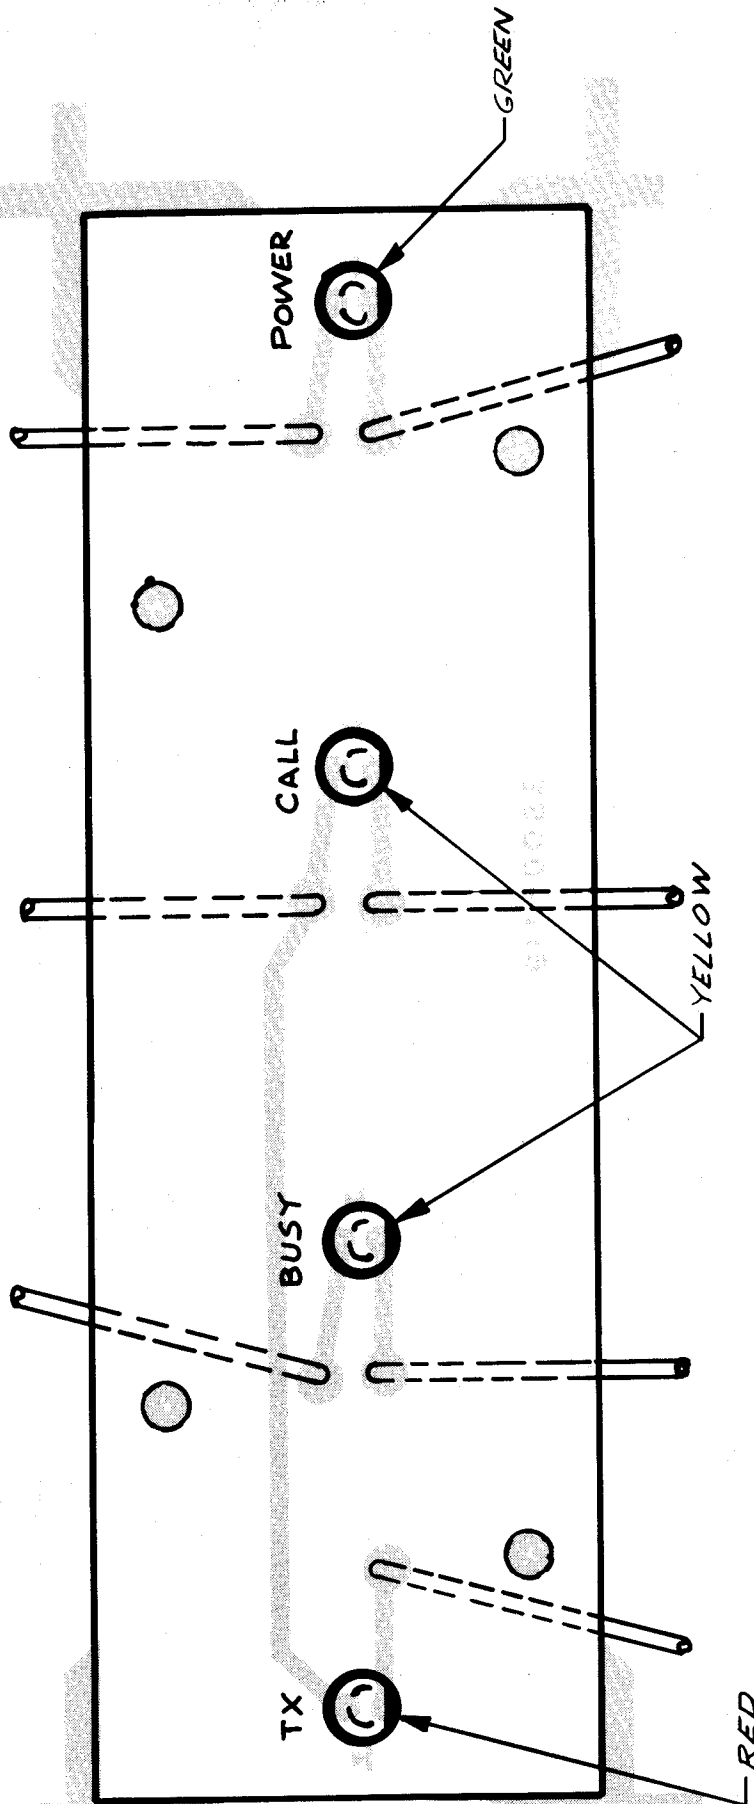


LED P.C. BOARD
SHOWN FROM COMPONENT SIDE






Semiconductor Pin Connections

FET

Transistors

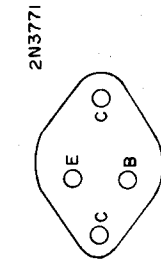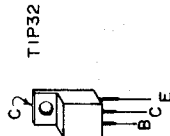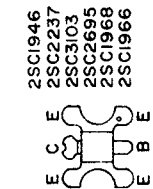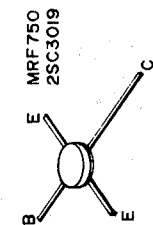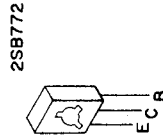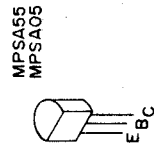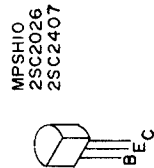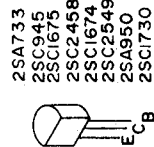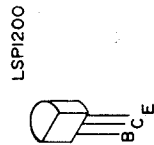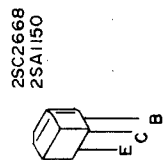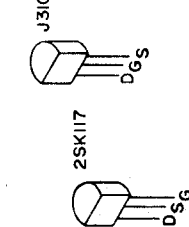

Diodes

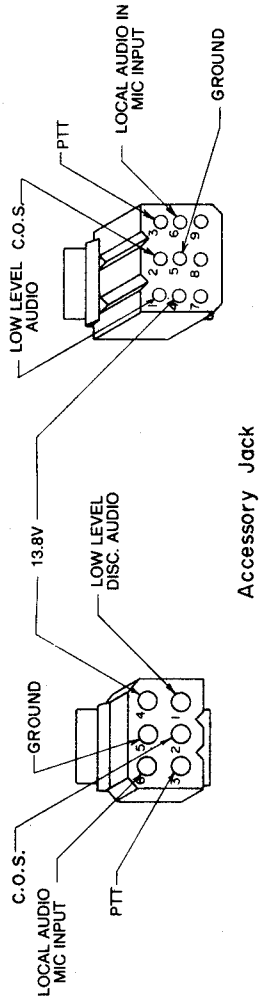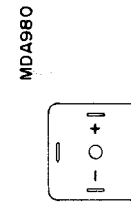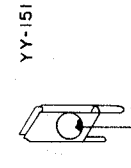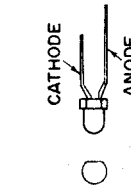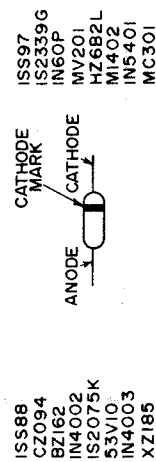


INTEGRATED CIRCUITS

MC14020B

TRUTH TABLE		
CLOCK	RESET	OUTPUT STATE
0	0	No Change
0	1	Advance to
1	1	All outputs are


X = Don't Care

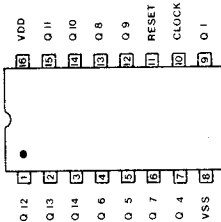


MC14017B

FUNCTIONAL TRUTH TABLE		
CLOCK	RESET	OUTPUT
0	0	0
0	1	0
1	0	0
1	1	1


X = Don't Care

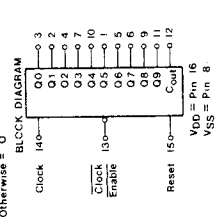


MM74C14

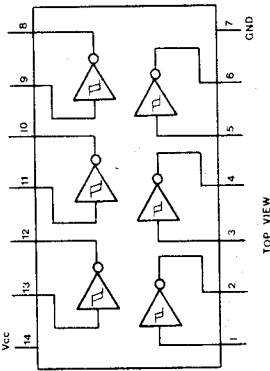


LM324

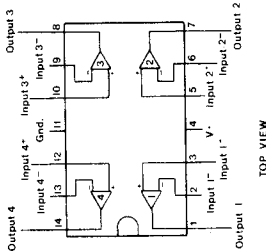

MC14011

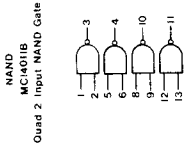


MC14066B

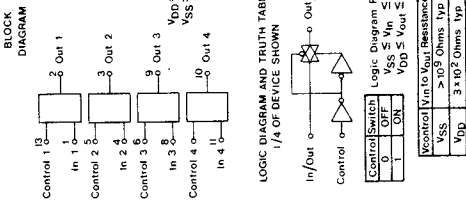

NUM4558D



MC3357P

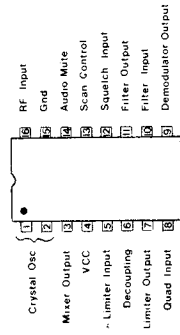


HI PASS FILTER (DE 334)

PART NO. 2200-331




CTCSS HYBRID IC (DE 390)

PART NO. 2000-1001




MB3713




MB3756




LM317

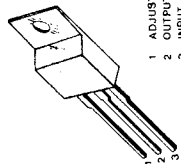

MC 7808CT

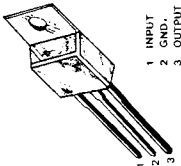

2N6504

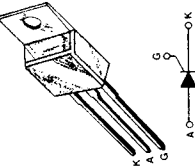

MECHANICAL PARTS LIST

ARH 351

QUANTITY	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
1	INSULATION PLATE	RZEB480438Z	*
1	TERMINAL:ANT	HTML480822Z	*
1	HOLDER:IC	HHDE480101A	*
1	INSULATION PLATE X'TAL	RTLA480052A	*
1	WASHER:ANT	HWSR480823Z	*
2	SPACER	HCLR480102Z	*
1	SHIELD PLATE	HSDP480437Z	*
13	TIE WRAP: 4"	PLT1M-MO	1100-0843
1	PCB:POWER SUPPLY		3500-0118
1	PCB:LED BOARD		3500-0119
1	PCB:CAPACITOR REPEATER		3500-0124
1	PCB:EXCITER INTERFACE VHF		3500-0147
2	SCREW:M FLAT HD M2.6x6 NI	SSCW132606N	1100-1702
8	SCREW:M BIND HD M3x5 NI	SSCW193005N	1100-0728
6	SCREW:M FLAT HD M3x6 NI	SSCW133006N	1100-0703
6	SCREW:M FLAT HD M3x6 BLACK	SSCW143006K	1100-0788
43	SCREW:T BIND HD M3x6 NI	SSCW343006N	1100-0725
3	SCREW:M BIND HD M3x6 NI	SSCW193006N	1100-0704
4	SCREW:M PAN HD M3x8 NI	SSCW103008N	1100-0785
8	SCREW:M BIND HD M3x8 BLACK	SSCW193008B	1100-0705
19	SCREW:M BIND HD M3x8 NI	SSCW193008N	1100-0723
4	SCREW:T BIND HD M3x14 NI	SSCW343014N	1100-0733
4	SCREW:M BIND HD M5x10 NI	SSCW195010N	1100-0748
4	SCREW:M PHIL HD #4-40x14		1100-1713
23	SCREW:M PAN HD #4-40x1/4		1100-1734
12	SCREW:T PAN HD #4-40x1/4		1100-0715
4	SCREW:T PAN HD 4-40x3/8		1100-1708
10	SCREW:T PAN HD #6-32x1/4		1100-0713
2	SCREW:M PAN HD #6-32x1/4		1100-0799
2	SCREW:M PAN HD 6-32x3/4		1100-1704
1	SCREW:M ROUND HD 6-32x1		1100-1706
4	SCREW:M PAN HD 8-32x1/2		1100-0795
4	SCREW:T PAN HD #8-32x1/2		1100-0796
1	SCREW:T PAN HD 8-32x3/4		1100-1703
3	HEX NUT M3 NI	SSCW430030N	1100-0735
7	HEX NUT #4-40		1100-0717
4	HEX NUT #6-32		1100-0714
4	HEX NUT #8-32		1100-0797
4	STAR WASHER #8 EXT TOOTH		1100-0798
1	STUD	MSTD0410426Z	1100-0786
3	THREADED STUD 4-40-5	FH-440-5	1100-0722
6	BANC-LOCK: M3 '2T	TSTD0263020	1100-0326
15	STANDOFF - PEM NUT	SO-440-6CI	1100-0911
4	STANDOFF - PEN NUT	SO-440-8CI	1100-0912

QUANTITY	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
1	BUTT SPLICE	34070	1100-0076
5	SOLDERLESS TERMINALS	61974-2	1100-0077
3	LOCKING TERMINAL LUG	1415-6	1100-0784
2	INSULATED TAB RECEPTACLE	640934-1	1100-0090
1	FUSE HOLDER	341001	1100-0852
1	SOCKET:TRANSISTOR T0-3	8080-1G3	1400-0009
1	STRAIN RELIEF	SR-5N-4	1100-0824
2	GROMMET	2817	1100-0825
1	CAPACITOR MOUNTING CLAMP	1780-11	1100-0844
1	TERMINAL STRIP KEY	15-04-9209	1100-0087
4	LED SPACER	LHDL411326Z	3400-0019
1	INSULATOR:WASHER MICA	BYDY0003002	3400-0226
1	INSULATOR:MICA WASHER	BYDY0003003	3400-0233
1	TRANSISTOR HEAT SINK	5630B	3000-0318
1	FRONT PANEL	GCMF180751A	3300-0574
1	FRONT PANEL SLIDE PIECE	GCMZ414434Z	3400-0756
2	NYLON EDGING	TSTD0191110	4000-0062
2	KNOB (REPEATER)	GNBY408150Z	1300-0093
2	PUSH BUTTON KNOB REPEATER	GNBP480760Z	1300-0094
4	RUBBER FEET 20x16 (ABS)	TSTD0100004	1100-0745
3	DP-562 BLACK HOLE PLUGS	2653	1100-0842
3	PLASTIC STANDOFF	1919N	1100-0336
3	FRONT INSERT CLAMP	3400-0024	1100-0838
1	FCC LABEL ARH351		1700-0414
1	REPEATER FUNCTION LABEL		1700-0611
1	REPEATER REAR PANEL LABEL		1700-0615
1	REPEATER FRONT INSERT		3300-0014
1	MOBILE NAMEPLATE (UNIDEN)	JDPA480523A	3400-0163
1	CHASSIS:REAR MOBILE	FCSR280096B	3300-0010
1	CHASSIS:FRONT	HCSF280753Z	3300-0012
1	CHASSIS:MAIN (STATION)	HCSY180752Z	3300-0013
1	CHASSIS:REAR (STATION)	HCSR280754Z	3300-0015
1	BRACKET:XFORMER SUPPORT		3300-0018
1	COVER:TOP (STATION)	HCMT204085Z	3300-0125
1	HEAT SINK:POWER SUPPLY		3300-0317
1	HOLDER:RIGHT	HHDF404083Z	3300-0805
1	HOLDER:LEFT	HHDF404084Z	3300-0806
1	COVER:BOTTOM (STATION)	HCMB204566Z	3300-0810
1	SHIELD BOX:RX		4000-0500
1	SHIELD BOX:TX		4000-0501
1	SHIELD COVER:TX		4000-0502
1	SHIELD COVER:RX		4000-0503

ELECTRICAL PARTS LIST

ABBREVIATIONS:

Resistors . . . CF: Carbon Film, MF: Metal Film, VR: Variable Resistor, SER: Semi-Fixed Resistor

Capacitors . . . AS: AL Solid, CC: Ceramic Chip, CD: Ceramic Disc, CG: Ceramic Gimmick, EL: Electrolytic, FS: Feed thru, MF: Myler Film, SD: Semiconductor, TT: Tantalum

The last code indicates tolerance of resistance: J = $\pm 5\%$, K = $\pm 10\%$.

The first code indicates tolerance of capacitance:

C = $\pm 0.25\text{pF}$, D = $\pm 0.5\text{pF}$, F = $\pm 1\text{pF}$, G = $\pm 2\%$, J = $\pm 5\%$, K = $\pm 10\%$, M = $\pm 20\%$, Z = $\pm 80\% - 20\%$.

The second code indicates variation of capacitance with temperature:

YA = $\pm 5\%$, YB = $\pm 10\%$, YD = $+20 - 30\%$, YE = $+20 - 50\%$, YF = $+30 - 80\%$ (– 25 to + 85°C), ZF = $+30\% - 80\%$ (– 10 to + 70°C),

CH = $0 \pm 60\text{ppm}/^\circ\text{C}$, RH = $-220\text{ppm}/^\circ\text{C}$, CJ = $0 \pm 120\text{ppm}/^\circ\text{C}$ RJ = $-220\text{ppm}/^\circ\text{C}$ = $-120\text{ppm}/^\circ\text{C}$, TH = $470\text{ppm}/^\circ\text{C} \pm 60\text{ppm}/^\circ\text{C}$,

UJ = $-750\text{ppm}/^\circ\text{C} \pm 120\text{ppm}/^\circ\text{C}$, SL = $\pm 350\text{ppm}/^\circ\text{C}$ to $-1000\text{ppm}/^\circ\text{C}$

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
CAPACITORS			
C001	CD 8PF 50V D CH	BCCC818092Z	1800-0096
C002	CD 4PF 50V C CH	BCCC814091Z	1800-0112
C003	CD 1.5PF 50V C SL	BCCG811591Z	
C004	CD 10PF 50V D RH	BCCR811002Z	
C005	CD 10PF 50V D RH	BCCR811002Z	
C006	CD 7PF 50V D CH	BCCC817092Z	1800-0058
C007	CD 10PF 50V D CH	BCCC811002Z	
C008	CD 7PF 50V D CH	BCCC817092Z	1800-0058
C009	CD 5PF 50V D CH	BCCC815092Z	1800-0095
C010	CD 2PF 50V C CK	BCCF812091Z	
C011	CD 18PF 50V J RH	BCCR811804Z	18-0511-1805
C013	CD 0.01UF 50V K X7R(C)	BCPE811035Z	
C014	CD 0.01UF 50V K X7R(C)	BCPE811035Z	
C015	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C016	EL 10UF 16V M C-095	BCER311006Z	
C017	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C018	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C019	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C020	CD 12PF 50V J CH	BCCC811204Z	1800-0113
C021	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C022	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C024	EL 10UF 16V M C-095	BCER311006Z	
C025	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C026	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C027	CD 27PF 50V J CH	BCCC812704Z	1800-0099
C029	TT 0.35UF 35V M	BCSE663386Z	
C030	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C032	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C033	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C034	TT 4.7UF 10V M	BCSE114796Z	
C035	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C036	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C037	CD 5PF 50V D CH	BCCC815092Z	1800-0095
C038	CD 39PF 50V J RH	BCCR813904Z	
C039	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C040	CD 100PF 50V J SL	BCCG811014Z	
C041	TT 3.3UF 35V M	BCSE663396Z	
C042	CD 10PF 50V D RH	BCCR811002Z	
C043	CD 10PF 50V D RH	BCCR811002Z	
C044	CD 5PF 50V D RH	BCCR815092Z	1800-0005*
C045	CD 8PF 50V D RH	BCCR818092Z	
C046	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C047	CD 22PF 50V J RH	BCCR812204Z	1800-0007
C048	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C049	CD 27PF 50V J RH	BCCR812704Z	1800-0044
C050	CD 12PF 50V J RH	BCCR811204Z	
C051	CD 12 PF 50V J UJ	BCCU811204Z	
C052	CG 0.33PF 500V K	BCBA823385Z	
C053	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C054	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C055	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C056	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C057	CD 0.0022UF 50V M YD	BCKD812226Z	
C058	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C059	CD 22PF 50V J RH	BCCR812204Z	1800-0007
C060	CD 22PF 50V J RH	BCCR812204Z	1800-0007
C061	CD 22PF 50V J RH	BCCR811204Z	
C062	CD 12PF 50V J RH	BCCR811204Z	
C063	CD 12PF 50V J RH	BCCR811204Z	
C064	CD 0.5PF 50V C SL	BCCG815081Z	

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
C065	CG 0.33PF 500V K	BCBA823385Z	
C066	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C067	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C068	CD 0.01UF 50V M YD	BCKD811036Z	1800-0119
C069	CD 0.0047UF 50V M YD	BCKD814726Z	1800-0118
C070	CD 150PF 50V J SL	BCCG811514Z	1800-0037
C071	CD 150PF 50V J SL	BCCG811514Z	1800-0037
C072	CD 0.01UF 50V M YD	BCKD811036Z	1800-0119
C073	CD 0.01UF 50V M YD	BCKD811036Z	1800-0119
C074	CD 100PF 50V J CH	BCCC811014Z	18-0510-1015
C075	CD 220PF 50V J RH	BCCR812214Z	
C076	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C077	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C078	EL 10UF 16V M C-095	BCER311006Z	
C079	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C080	EL 1UF 50V M C-095	BCER811096Z	
C081	EL 2.2UF 50V M C-095	BCER812296Z	
C082	MC 0.047UF 50V K	BCQM814735Z	
C083	CD 330PF 50V J UJ	BCCU813314Z	
C084	MC 0.01UF 50V K	BCQM811035Z	1800-0407
C085	TT 0.22UF 35V M	BCSE662286Z	1800-0614
C086	MC 0.01UF 250V K	BCQS21035Z	
C087	EL 1UF 50V M C-095	BCER811096Z	
C088	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C089	TT 2.2UF 35V M	BCSE662296Z	
C090	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C091	TT 2.2UF 35V M	BCSE662296Z	
C092	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C093	CD 0.01UF 50V Z YF	BCKG811030Z	1800-0148
C094	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C095	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C096	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C097	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C098	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C099	EL 2.2UF 50V M C-095	BCER812296Z	
C101	CD 4PF 50V C RH	BCCR814091Z	1800-0012
C102	CD 4PF 50V C RH	BCCR814091Z	1800-0012
C103	CG 1.2PF 500V K	BCBA821295Z	1800-0803
C104	CD 3PF 50V C RJ	BCCD813091Z	1800-0139
C105	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C106	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C107	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C108	CD 7PF 50V D RH	BCCR817092Z	1800-0011*
C109	CG 0.39PF 500V K	BCBA823985Z	
C110	CD 10PF 50V D RH	BCCR811002Z	
C111	CG 0.33PF 500V K	BCBA823385Z	
C112	CD 18PF 50V J RH	BCCR811804Z	18-0511-1805
C113	CD 18PF 50V J RH	BCCR811804Z	18-0511-1805
C114	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C115	CD 0.0047UF 50V M YD	BCKD814726Z	1800-0118
C116	CD 4PF 50V C CH	BCCC814091Z	1800-0112
C117	CD 0.0047UF 50V M YD	BCKD814726Z	1800-0118
C118	CD 0.0047UF 50V M YD	BCKD814726Z	1800-0118
C119	CD 0.0047UF 50V M YD	BCKD814726Z	1800-0118
C120	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C121	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C122	CD 120PF 50V J CH	BCCC811214Z	
C123	TT 2.2UF 16V	BCSE312290Z	1800-0601*
C124	MC 0.0068UF 50V K	BCQM816825Z	1800-0414
C125	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C126	CD 0.047UF 25V Z ZF	BCKC514730Z	1800-0106
C127	CD 0.047UF 25V Z ZF	BCKC514730Z	1800-0106

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
C128	CD 10PF 50V D CH	BCCC811002Z	
C129	CD 0.047UF 25V Z ZF	BCKC514730Z	1800-0106
C130	MC 0.0022UF 50V K	BCQM812225Z	1800-0419
C131	MC 0.0022UF 50V K	BCQM812225Z	1800-0419
C132	CD 270PF 50V J SL	BCCG812714Z	1800-0163
C133	MC 0.0022UF 50V K	BCQM812225Z	1800-0419
C134	MC 0.001UF 50V M	BCQM811026Z	1800-0401
C135	CD 100PF 50V J SL	BCCG811014Z	
C136	MC 0.001UF 50V M	BCQM811026Z	1800-0401
C137	MC 0.0033UF 50V K	BCQM813325Z	1800-0421
C138	MC 0.001UF 50V M	BCQM811026Z	1800-0401
C139	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C140	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C141	EL 10UF 16V	BCCL311000Z	1800-0306
C142	TT 33UF 16V M	BCSE313306Z	
C144	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C145	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C146	CD 47PF 50V J RH	BCCR814704Z	1800-0001
C147	CD 18PF 50V J RH	BCCR811804Z	18-0511-1805
C148	CG 0.68PF 50V K	BCBA826885Z	1800-0801
C149	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C150	CD 12PF 50V J RH	BCCR811204Z	
C151	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C152	CD 18PF 50V J RH	BCCR811804Z	18-0511-1805
C153	CD 47PF 50V J RH	BCCR814704Z	1800-0001
C154	CG 0.56PF 500V K	BCBA825685Z	1800-0804
C155	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C156	CD 12PF 50V J RH	BCCR811204Z	
C157	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C158	CD 100PF 50V J UJ	BCCU811014Z	
C159	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C160	CD 47PF 50V J UJ	BCCU814704Z	
C161	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C162	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C163	TT 0.33UF 16V M	BCSE313386Z	
C164	TT 1 UF 16V M	BCSE311096Z	
C165	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C167	EL 1UF 50V	BCCL811090Z	1800-0302
C168	AS 0.1UF 25V M	BCAA511086Z	
C169	EL 22UF 10V	BCCL12200Z	1800-0331
C170	AS 0.22UF 25V M	BCAA512286Z	
C171	EL 1UF 50V	BCCL811090Z	1800-0302
C172	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C173	EL 100UF 10V	BCCL111010Z	1800-0310
C174	EL 33UF 16V	BCCL313300Z	1800-0307
C175	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C176	EL 1000UF 25V C-095	BCER511020Z	
C177	SD 0.1UF 25V Z	BCGA511040Z	1800-0701
C179	CD 0.01UF 50V M YD	BCKD811036Z	1800-0119
C181	SD 0.1UF 25V Z	BCGA511040Z	1800-0701
C182	CG 0.15PF 500V K C-090	BCBB821585Z	
C278	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C301	CD 6PF 50V D CH	BCCC816092Z	
C302	CD 6PF 50V D CH	BCCC816092Z	
C303	CD 10PF 50V D CH	BCCC811002Z	
C304	CD 8PF 50V D CH	BCCC818092Z	1800-0096
C305	CD 7PF 50V D CH	BCCC817092Z	1800-0058
C306	CD 10PF 50V D CH	BCCC811002Z	
C307	CD 7PF 50V D CH	BCCC817092Z	1800-0058
C308	CD 4PF 50V C CH	BCCC814091Z	1800-0112
C309	CD 4PF 50V C CH	BCCC814091Z	1800-0112
C310	CD 1PF 50V C CK	BCCF811091Z	
C311	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C314	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C315	CD 5PF 50V D CH	BCCC815092Z	1800-0095
C316	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C317	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C318	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C319	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C320	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C321	CC 120PF 500V J C-073	BCDD821214Z	18-9800-1215
C323	CD 1PF 50V C CK	BCCF811091Z	
C325	CC 27PF 500V J C-073	BCDD822704Z	18-9800-2705
C327	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C329	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
C331	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C332	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C333	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C334	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C335	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C336	CD 39PF 50V J RH	BCCR813904Z	
C337	CD 47PF 50V J CH	BCCC814704Z	1800-0064
C338	CD 47PF 50V J CH	BCCC814704Z	1800-0064
C344	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C345	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C347	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C348	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C349	EL 10UF 25V M C-095	BCER511006Z	
C350	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C351	CD 0.01UF 50V M YD	BCKD811036Z	1800-0119
C352	EL 10UF 16V M C-095	BCE8311006Z	
C353	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C354	CD 0.01UF 50V M YD	BCKD811036Z	1800-0119
C355	FT 1000PF CZ-086	BCZY0086001	1800-0703
C356	CD 22PF 50V J CH	BCCC812204Z	1800-0061
C357	CD 33PF 50V J CH	BCCC813304Z	1800-0062
C359	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C361	CC 150PF 500V J C-073	BCDD821514Z	18-9800-1515
C363	CC 120PF 500V J C-073	BCDD821214Z	18-9800-1215
C370	EL 22UF 16V	BCCL312200Z	4000-0047
C371	EL 220UF 16V	BCCL312210Z	1800-0308
C372	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C373	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C374	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C375	EL 4.7UF 25V	BCCL514790Z	1800-0304
C376	EL 4.7UF 25V	BCCL514790Z	1800-0304
C377	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C379	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C380	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C381	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C382	EL 10UF 16V	BCCL311000Z	1800-0306
C383	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C385	EL 4.7UF 16V	BCCL314700Z	1800-0316
C389	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C401	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C402	EL 1000UF 16V	BCCL311020Z	1800-0328
C403	EL 220UF 16V	BCCL312210Z	1800-0308
C404	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C405	EL 1UF 50V	BCCL811090Z	1800-0302
C406	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C407	EL 100UF 10V	BCCL111010Z	1800-0310
C408	EL 100UF 10V	BCCL111010Z	1800-0310
C409	EL 4.7UF 25V	BCCL514790Z	1800-0304
C414	EL 1UF 50V	BCCL811090Z	1800-0302
C421	EL 1UF 50V	BCCL811090Z	1800-0302
C442	TT 10UF 16V M	BCSE311006Z	1800-0615
C501	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C600	TT 0.1UF 35V M	BCSE661086Z	1800-0613
C601	EL 1UF 50V	BCCL811090Z	1800-0302
C602	TT 0.22UF 35V M	BCSE662286Z	1800-0614
C603	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C604	EL 10UF 16V	BCCL311000Z	1800-0306
C605	CD 0.001UF 50V M YD	BCKD811026Z	1800-0117
C607	MC 0.022UF 50V K	BCQM812235Z	1800-0408
C608	EL 220UF 16V	BCCL312210Z	1800-0308
C609	EL 10UF 16V	BCCL311000Z	1800-0306
C610	EL 10UF 16V	BCCL311000Z	1800-0306
C611	EL 1UF 50V	BCCL811090Z	1800-0302
C612	MC 0.0022UF 50V K	BCQM812225Z	1800-0419
C613	MC 0.0022UF 50V K	BCQM812225Z	1800-0419
C614	MC 0.0022UF 50V K	BCQM812225Z	1800-0419
C615	EL 47UF 16V	BCCL314700Z	1800-0316
C617	TT 22UF 16V	BCSC312206Z	
C618	EL 220UF 16V	BCCL312210Z	1800-0308
C619	TT 0.22UF 35V M	BCSE662286Z	1800-0614
C620	MC 0.01UF 50V M	BCQM811036Z	1800-0402
C621	EL 10UF 16V	BCCL311000Z	1800-0306
C701	CD 0.1UF 50V Z ZF	BCKC811040Z	1800-0080
C702	EL 1UF 50V	BCCL811090Z	1800-0302

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
C703	EL 10UF 16V	BCEL811000Z	1800-0302
C704	EL 1UF 50V	BCEL811090Z	1800-0333
C705	EL 1000UF 25V	BCEL511020Z	1800-0339
C706	EL 10000UF 25V	25TWP10000	1800-0339
C707	EL 10000UF 25V	25TWP10000	1800-0339
C708	EL 10000UF 25V	25TWP10000	1800-0339
C709	EL 1000UF 25V	BCEL511020Z	1800-0333
FT01-26	FT 1000PF CZ-086	BCZY0086001	1800-0703
TRIMMER CAPACITORS			
CT301	CT-057 22PF	BCTY0057220	1800-0221
CV001	CT-054 11PF	BCTY0054110	1800-0216
CV002	CT-020 40PF	BCTY0020400	1800-0226
DIODES			
D001	1SS97 DIODE	BDAY0164001	2000-0378
D002	1SS97 DIODE	BDAY0164001	2000-0378
D003	1S2339G VARACTOR	BDAY0030001	2000-0309
D004	MV-201 VARACTOR	BDAY0028001	2000-0600
D005	HZ682L	BDAY0198001	2000-0669
D101	1S2075K DIODE	BDAY0063001	2000-0332
D102	1S2075K DIODE	BDAY0063001	2000-0332
D103	1S2075K DIODE	BDAY0063001	2000-0332
D104	1S2075K DIODE	BDAY0063001	2000-0332
D105	1S2075K DIODE	BDAY0063001	2000-0332
D106	1S2075K DIODE	BDAY0063001	2000-0332
D107	1S2075K DIODE	BDAY0063001	2000-0332
D301	1SS97 DIODE	BDAY0164001	2000-0378
D303	1SS97 DIODE	BDAY0164001	2000-0378
D304	IN60 P DIODE	BDAY0001002	2000-0318
D305	MI-402 DIODE	BDAY0059001	2000-0351
D401	1N5401	BDAY0245001	2000-0670
D402	1S2075K DIODE	BDAY0063001	2000-0332
D403	1N4003 DIODE	BDAY0133001	2000-0608
D405	1S2075K DIODE	BDAY0063001	2000-0332
D406	1S2075K DIODE	BDAY0063001	2000-0332
D500	TLR-124 RED LED	BDAY0100001	2000-0347
D501	TLY-124 YELLOW LED	BDAY0122001	2000-0368
D502	TLY-124 YELLOW LED	BDAY0122001	2000-0368
D503	TLG-124A GREEN LED	BDAY0116001	2000-0355
D601	1S2075K DIODE	BDAY0063001	2000-0332
D602	1S2075K DIODE	BDAY0063001	2000-0332
D603	1S2075K DIODE	BDAY0063001	2000-0332
D604	1S2075K DIODE	BDAY0063001	2000-0332
D605	1S2075K DIODE	BDAY0063001	2000-0332
D606	1S2075K DIODE	BDAY0063001	2000-0332
D607	1S2075K DIODE	BDAY0063001	2000-0332
D608	1S2075K DIODE	BDAY0063001	2000-0332
D609	TLY-124 YELLOW LED	BDAY0122001	2000-0368
D610	TLG-124A GREEN LED	BDAY0116001	2000-0355
D611	TLR-124 RED LED	BDAY0100001	2000-0347
D612	1S2075K DIODE	BDAY0063001	2000-0332
D613	1S2075K DIODE	BDAY0063001	2000-0332
D614	1S2075K DIODE	BDAY0063001	2000-0332
D615	CZ-094 9.4V ZENER	BDAY0008030	2000-0368
D701	1S2075K DIODE	BDAY0063001	2000-0332
D702	1S2075K DIODE	BDAY0063001	2000-0332
D703	BZ-162 ZENER: 16.2V	BDAY0009003	2000-0312
D704	1N4002 DIODE	1N4002	2000-0623
D705	DIODE BRIDGE RECTIFIER	MDA980-2	2000-0619
CERAMIC FILTERS			
FT101	FL-089 FILTER 21.4 MHZ	BFLY0089001	2200-0325
FT102	FL-061 FILTER 455 KHZ	BFLY0061001	2200-0318
FT103	FL-089 FILTER 21.4 MHZ	BFLY0089001	2200-0325
FT104	DE-334 HI-PASS FILTER	BDEY0334001	2200-0331
INTEGRATED CIRCUITS			
IC001	NJM4558D IC	BDEY0145001	2000-0043
IC101	MC3357P IC	BDEY0293001	2000-0060
IC102	MB3713 IC	BDEY0159001	2000-0067
IC301	MC7808CT I.C.	MC7808	2000-0098
IC401	MB3756 IC	BDEY0131001	2000-0033
IC600	LM324 IC	LM324	2000-0088
IC601	MC14020BCP IC	MC14020	2000-0095
IC602	MC14011BCP IC	MC14011	2000-0093
IC603	MM74C14 IC	MM74C14	2000-1017

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
IC604	MC14066BCP IC	MC14066	2000-0096
IC605	DE-390 CT-SS IC	BDEY0390001	2000-1001
IC606	DE-334 HI-PASS FILTER	BDEY0334001	2200-0331
IC607	MC14020BCP IC	MC14020	2000-0095
IC608	MC14017 IC	MC14017	2000-0094
IC609	MC14011BCP IC	MC14011	2000-0093
IC610	MM74C14 IC	MM74C14	2000-1017
IC611	LM324 IC	LM324	2000-0088
IC701	LM317-T IC	LM317T	2000-0099
IC702	2N6504 SCR	2N6504	2000-0433
CONNECTORS			
CM001	JK-195 5048-05A RED	BJKY0195005	
CM101	JK-206 5045-03A 3 PIN	BJKY0206003	1100-0057
J302	JK-208 JACK.RF	BJKY0208001	1100-0046
J501	JK-068 JACK.ANTENNA	BJKY0068001	1100-0002
J502	SO-239 CONNECTOR:BULKHEAD	83-798	1100-0072
	SO-239 HOOD	83-765	1100-0073
J503	WZ-225 JACK.POWER	BWZY0225001	2700-0205
	PIN: DC POWER JACK	02-09-2103	1100-0116
J504	RECEPTACLE:FEMALE 6 PIN	03-06-1061	1100-0074
J504#	RECEPTACLE:FEMALE 9 PIN	03-06-0191	1100-0074-9
	CONNECTOR:PIN FEMALE 0.062	02-06-1103	1100-0117
J505	JACK:PHONO RF	3501FP	1100-0085
J506	JACK:PHONO RF	3501FP	1100-0085
J507	JK-207 JACK:MICROPHONE	BJKY0207001	1100-0045
J2	CONNECTOR:FEMALE 13 POS.	10-11-2133	1100-0086
	TERMINAL:CRIMP	08-50-0005	1100-0118
P1	HEADER: 8 POSITION	22-04-2081	1100-0078
P2	HEADER: 13 POSITION	22-04-2131	1100-0080
P3	HEADER: 10 POSITION	22-04-2101	1100-0079
P504	PLUG:MALE 6 PIN	03-06-2061	1200-0013
P504#	PLUG:MALE 9 PIN	03-06-2092	1200-0013-9
	CONNECTOR:PIN MALE 0.062	02-06-2103	1100-0109
P505	PLUG:PHONO RF	3501MC	1200-0005
P506	PLUG:PHONO RF	3501MC	1200-0005
P507	PLUG:MICROPHONE		1200-0012
INDUCTORS			
L001	LE-175	BLEY0175001	2200-1508
L002	LE-174	BLEY0174001	2200-1507
L003	LE-174	BLEY0174001	2200-1507
L004	LE-239	BLEY0239001	2200-1510
L005	LE-239	BLEY0239001	2200-1510
L007	LE-240	BLEY0240001	2200-1509
L008	LE-230	BLEY0230001	2200-0617
L010	LE-239	BLEY0239001	2200-1510
L011	LE-250	BLEY0250001	2200-0150
L012	LB-242	BLBY0242001	2200-0157
L013	LB-210	BLBY0210001	2200-0592
L014	LB-210	BLBY0210001	2200-0592
L015	LB-238	BLBY0238001	2200-0596
L016	LB-237	BLBY0237001	2200-1135
L017	LB-236	BLBY0236001	2200-0595
L018	LB-240	BLBY0240001	2200-1136
L019	LB-241	BLBY0241001	2200-1137
L101	LA-346	BLAY0346001	2200-0586
L102	LA-346	BLAY0346001	2200-0586
L103	LA-346	BLAY0346001	2200-0586
L104	LA-346	BLAY0346001	2200-0586
L105	LA-346	BLAY0346001	2200-0586
L106	LA-341	BLAY0341001	2200-0581
L107	LA-369	BLAY0369001	2200-0590
L108	LA-353	BLAY0353001	2200-0112
L109	LZ-016 SLO609-471K 470UH	BLZY0016471	2200-0621
L110	LZ-021 SP0406-3R3K 3.3UH	BLZY0021339	2200-0220
L111	LA-346	BLAY0346001	2200-0586
L112	LA-346	BLAY0346001	2200-0586
L113	LA-346	BLAY0346001	2200-0586
L114	LA-346	BLAY0346001	2200-0586
L116	LB-232	BLBY0232001	2200-0131
L301	LE-183	BLEY0183001	2200-0612
L302	LE-184	BLEY0184001	2200-0613
L303	LE-184	BLEY0184001	2200-0613
L304	LE-150	BLEY0150001	2200-0540
L305	LZ-021 SP0406-3R3K 3.3UH	BLZY0021339	2200-0220
L306	LE-235	BLEY0235001	2200-0619
L307	LE-237	BLEY0237001	2200-0158
L308	LD-139	BLDY0139001	2200-0606
L309	LD-031	BLDY0031001	2200-0603

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
L310	LD-153	BLDY0153001	2200-0610
L311	LE-186	BLEY0186001	2200-0132
L312	LD-087	BLDY0087001	2200-0052
L313	LE-155	BLEY0155001	2200-0541
L314	LE-156	BLEY0156001	2200-0542
L315	LD-087	BLDY0087001	2200-0052
TRANSISTORS			
Q001	2SC2668-0	BDBC2668114	2000-0410
Q002	2SC2221	BDBC2221000	2000-0471
Q003	2SC2407-K	BDBC2407110	2000-0283
Q004	2SC2026-L	BDBC2026111	2000-0442
Q005	2SC2026-L	BDBC2026111	2000-0442
Q006	2SC2026-L	BDBC2026111	2000-0442
Q007	2SC1675-L	BDBC1675111	2000-0213
Q008	2SC1675-L	BDBC1675111	2000-0213
Q009	2SC1675-L	BDBC1675111	2000-0213
Q010	2SC2458L-Y	BDBC2458521	2000-0461
Q011	2SC2458L-Y	BDBC2458521	2000-0461
Q101	2SK168-E	BDCB0168105	2000-0112
Q102	J310	BDCZ0207001	2000-0114
Q103	2SC1675-L	BDBC1675111	2000-0213
Q104	2SC945A-P	BDBC0945506	2000-0235
Q105	MPS H 10	BDBZ0520001	2000-0419
Q106	MPS H 10	BDBZ0520001	2000-0419
Q107	2SC1675-L	BDBC1675111	2000-0213
Q109	2SC1675-L	BDBC1675111	2000-0213
Q110	2SC945A-Q	BDBC0945507	2000-0258
Q111	2SC945A-Q	BDBC0945507	2000-0258
Q112	2SK117-GR	BDCB0117303	2000-0115
Q113	2SC945A-Q	BDBC0945507	2000-0258
Q301	2SC1946A-23	BDBC1946718	2000-0425
Q302	2SC2237-22	BDBC2237213	2000-0439
Q303	2SC945A-Q	BDBC0945507	2000-0258
Q304	2SA733-P	BDBA0733115	2000-0218
Q305	2SC945A-Q	BDBC0945507	2000-0258
Q306	2SC945A-Q	BDBC0945507	2000-0258
Q307	2SB772-R	BDBB0772117	2000-0286
Q401	2SC945A-P	BDBC0945506	2000-0235
Q402	2SC945A-P	BDBC0945506	2000-0235
Q403	2SA733-P	BDBA0733115	2000-0218
Q404	2SC945A-Q	BDBC0945507	2000-0258
Q405	2SC945A-P	BDBC0945506	2000-0235
Q406	2SC945A-P	BDBC0945506	2000-0235
Q407	2SC945A-P	BDBC0945506	2000-0235
Q501	2SC945A-Q	BDBC0945507	2000-0258
Q502	2SB772-R	BDBB0772117	2000-0286
Q600	2SC945A-Q	BDBC0945507	2000-0258
Q601	2SC945A-Q	BDBC0945507	2000-0258
Q602	2SC945A-Q	BDBC0945507	2000-0258
Q603	2SC945A-Q	BDBC0945507	2000-0258
Q701	MPSA 55	MPSA55	2000-0435
Q702	2N4033	2N4033	2000-1216
Q703	TIP-32	TIP32	2000-0436
Q704	MPSA 05	MPSA05	2000-0437
Q705	2N3771	2N3771	2000-0434
RESISTORS			
R003	CF 150 ohms 1/8W J	BRUB6115142	19-1018-1515
R005	CF 15 ohms 1/8W J	BRUB6115042	19-1018-1505
R010	CF 100 ohms 1/8W J	BRUB6110142	19-1018-1015
R011	CF 8.2 ohms 1/8W J	BRUB6182942	19-1018-8295
R012	CF 390 ohms 1/8W J	BRUB6139142	19-1018-3915
R013	CF 820 ohms 1/8W J	BRUB6182142	19-1018-8215
R014	CF 2200 ohms 1/8W J	BRUB6122242	19-1018-2225
R016	CF 5.6 ohms 1/8W J	BRUB6156942	19-1018-5695
R017	CF 56 ohms 1/8W J	BRUB6156042	19-1018-5605
R018	CF 2200 ohms 1/8W J	BRUB6122242	19-1018-2225
R019	CF 390 ohms 1/8W J	BRUB6139142	19-1018-3915
R020	CF 1800 ohms 1/8W J	BRUB6118242	19-1018-1825
R021	CF 22 ohms 1/8W J	BRUB6122042	19-1018-2205
R022	CF 330 ohms 1/8W J	BRUB6133142	19-1018-3315
R023	CF 5600 ohms 1/8W J	BRUB6156242	19-1018-5625
R024	CF 10 ohms 1/8W J	BRUB6110042	19-1018-1005
R025	CF 56 ohms 1/8W J	BRUB6156042	19-1018-5605
R026	CF 2200 ohms 1/8W J	BRUB6122242	19-1018-2225
R027	CF 3900 ohms 1/8W J	BRUB6139242	19-1018-3925
R028	CF 1200 ohms 1/8W J	BRUB6112242	19-1018-1225
R029	CF 10 ohms 1/8W J	BRUB6110042	19-1018-1005
R030	CF 270 ohms 1/8W J	BRUB6127142	19-1018-2715
R031	CF 1200 ohms 1/8W J	BRUB6112242	19-1018-1225

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
R032	CF 2200 ohms 1/8W J	BRUB6122242	19-0018-2225
R033	CF 100 ohms 1/8W J	BRUB6110142	19-1018-1015
R034	CF 4700 ohms 1/8W J	BRUB6147242	19-1018-4725
R035	CF 270 ohms 1/8W J	BRUB6127142	19-1018-2715
R036	CF 33 ohms 1/8W J	BRUB6133042	19-1018-3305
R037	CF 33 ohms 1/8W J	BRUB6133042	19-1018-3305
R038	CF 56K ohms 1/8W J	BRUB6156342	19-1018-5635
R039	CF 2200 ohms 1/8W J	BRUB6122242	19-1018-2225
R040	CF 10 ohms 1/8W J	BRUB6110042	19-1018-1005
R041	CF 680 ohms 1/8W J	BRUB6168142	19-1018-6815
R042	CF 1500 ohms 1/8W J	BRUB6115242	19-1018-1525
R046	CF 1200 ohms 1/8W J	BRUB6112242	19-1018-1225
R050	CF 56K ohms 1/8W J	BRUB6156342	19-1018-5635
R051	CF 100K ohms 1/8W J	BRUB6110442	19-1018-1045
R055	MF 47K ohms 1/4WS F	BRSS444733Z	19-2014-4731
R056	MF 33K ohms 1/4WS F	BRSS443333Z	19-2014-3331
R057	MF 3000 ohms 1/4WS F	BRSS443023Z	19-2014-3021
R058	CF 33K ohms 1/8W J	BRUB6133342	19-1018-3335
R059	CF 15K ohms 1/8W J	BRUB6115342	19-1018-1535
R060	CF 47K ohms 1/8W J	BRUB6147342	19-1018-4735
R061	CF 12K ohms 1/8W J	BRUB6112342	19-1018-1235
R062	CF 12K ohms 1/8W J	BRUB6112342	19-1018-1235
R063	CF 12K ohms 1/8W J	BRUB6112342	19-1018-1235
R064	CF 2700 ohms 1/8W J	BRUB6127242	19-1018-2725
R065	CF 560K ohms 1/8W J	BRUB6156442	19-1018-5645
R066	CF 3900 ohms 1/8W J	BRUB6139242	19-1018-3925
R067	MF 13K ohms 1/4WS F	BRSS441333Z	19-2014-1331
R068	MF 10K ohms 1/4WS F	BRSS441033Z	19-2014-1031
R069	CF 2700 ohms 1/8W J	BRUB6127242	19-1018-2725
R070	CF 330 ohms 1/8W J	BRUB6133142	19-1018-3315
R071	CF 10K ohms 1/8W J	BRUB6110342	19-1018-1035
R072	CF 39K ohms 1/8W J	BRUB6139342	19-1018-3935
R074	CF 2200 ohms 1/8W J	BRUB6122242	19-0018-2225
R079	CF 220 ohms 1/8W J	BRUB6122142	19-1018-2215
R101	CF 100 ohms 1/4W J	BRUB1810142	19-1014-1015
R102	CF 100 ohms 1/4W J	BRUB1810142	19-1014-1015
R103	CF 330 ohms 1/4W J	BRUB1833142	19-1014-3315
R104	CF 1000 ohms 1/4W J	BRUB1810242	19-1014-1025
R105	CF 10 ohms 1/4W J	BRUB1810042	19-1014-1005
R106	CF 560 ohms 1/4W J	BRUB1856142	19-1014-5615
R107	CF 5600 ohms 1/4W J	BRUB1856242	19-1014-5625
R108	CF 22K ohms 1/4W J	BRUB1822342	19-1014-2235
R109	CF 1000 ohms 1/4W J	BRUB1810242	19-1014-1025
R110	CF 2700 ohms 1/4W J	BRUB1827242	19-1014-2725
R111	CF 82K ohms 1/4W J	BRUB1882342	19-1014-8235
R112	CF 47 ohms 1/4W J	BRUB1847042	19-1014-4705
R113	CF 22K ohms 1/4W J	BRUB1822342	19-1014-2235
R114	CF 3300 ohms 1/4W J	BRUB1833242	19-1014-3325
R115	CF 82K ohms 1/4W J	BRUB1882342	19-1014-8235
R116	CF 2200 ohms 1/4W J	BRUB1822242	19-1014-2225
R117	CF 2200 ohms 1/4W J	BRUB1822242	19-1014-2225
R118	CF 47K ohms 1/4W J	BRUB1847342	19-1014-4735
R119	CF 33K ohms 1/4W J	BRUB1833342	19-1014-3335
R121	CF 47K ohms 1/4W J	BRUB1847342	19-1014-4735
R122	CF 1000 ohms 1/4W J	BRUB1810242	19-1014-1025
R123	CF 10K ohms 1/4W J	BRUB1810342	19-1014-1035
R124	CF 22K ohms 1/4W J	BRUB1822342	19-1014-2235
R125	CF 4700 ohms 1/4W J	BRUB1847242	19-1014-4725
R126	CF 1000 ohms 1/4W J	BRUB1810242	19-1014-1025
R127	CF 220K ohms 1/4W J	BRUB1822442	19-1014-2245
R128	CF 3300 ohms 1/4W J	BRUB1833242	19-1014-3325
R129	CF 680 ohms 1/4W J	BRUB1868142	19-1014-6815
R130	CF 180 ohms 1/8W J	BRUB6118142	19-0018-1815
R131	CF 100 ohms 1/4W J	BRUB1810142	19-1014-1015
R132	CF 10 ohms 1/4W J	BRUB1810042	19-1014-1005
R133	CF 330 ohms 1/4W J	BRUB1833142	19-1014-3315
R134	CF 10K ohms 1/4W J	BRUB1810342	19-1014-1035
R135	CF 10K ohms 1/4W J	BRUB1810342	19-1014-1035
R136	CF 10 ohms 1/4W J	BRUB1810042	19-1014-1005
R137	CF 10 ohms 1/4W J	BRUB1810042	19-1014-1005
R138	CF 470 ohms 1/4W J	BRUB1847142	19-1014-4715
R139	CF 560 ohms 1/4W J	BRUB1856142	19-1014-5615
R141	CF 33K ohms 1/4W J	BRUB1833342	19-1014-3335
R142	CF 560 ohms 1/4W J	BRUB1856142	19-1014-5615
R143	CF 10K ohms 1/4W J	BRUB1810342	19-1014-1035
R145	CF 10K ohms 1/4W J	BRUB1810342	19-1014-1035
R147	CF 4700 ohms 1/4W J	BRUB1847242	19-1014-4725
R148	CF 22K ohms 1/4W J	BRUB1822342	19-1014-2235
R149	CF 33K ohms 1/4W J	BRUB1833342	19-1014-3335

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
R150	CF 3300 ohms 1/4W J	BRUB183324Z	19-1014-3325
R151	CF 220 ohms 1/4W J	BRUB182214Z	19-1014-2215
R152	CF 1M ohms 1/4W J	BRUB181054Z	19-1014-1055
R153	CF 4700 ohms 1/4W J	BRUB184724Z	19-1014-4725
R155	CF 10K ohms 1/4W J	BRUB181034Z	19-1014-1035
R156	CF 10K ohms 1/4W J	BRUB181034Z	19-1014-1035
R157	CF 56K ohms 1/4W J	BRUB185634Z	19-1014-5635
R160	CF 2200 ohms 1/4W J	BRUB182224Z	19-1014-2225
R301	CF 2200 ohms 1/2W J	BRPB122224Z	19-0012-2225
R302	CF 82 ohms 1/8W J	BRPB618204Z	19-0018-8205
R304	CF 470 ohms 1/4W J	BRPB184714Z	19-0014-4715
R305	CF 680 ohms 1/4W J	BRPB186814Z	19-0014-6815
R306	CF 1000 ohms 1/4W J	BRPB181024Z	19-0014-1025
R307	CF 1500 ohms 1/4W J	BRPB181524Z	19-0014-1525
R308	CF 1000 ohms 1/4W J	BRPB181024Z	19-0014-1025
R309	CF 2200 ohms 1/4W J	BRPB182224Z	19-0014-2225
R310	CF 10 ohms 1/4W J	BRPB181004Z	19-0014-1005
R311	CF 150 ohms 1/4W J	BRPB181514Z	19-0014-1515
R312	CF 390 ohms 1/4W J	BRPB183914Z	19-0014-3915
R313	CF 390 ohms 1/2W J	BRPB123914Z	19-0012-3915
R314	CF 100 ohms 1/4W J	BRPB181014Z	19-0014-1015
R315	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R316	CF 470 ohms 1/4W J	BRPB144714Z	19-0014-4715
R317	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R318	CF 22K ohms 1/4W J	BRPB142234Z	19-0014-2235
R319	CF 3300 ohms 1/4W J	BRPB143324Z	19-0014-3325
R320	CF 1500 ohms 1/4W J	BRPB141524Z	19-0014-1525
R321	CF 3300 ohms 1/4W J	BRPB143324Z	19-0014-3325
R322	CF 1800 ohms 1/4W J	BRPB141824Z	19-0014-1825
R401	CF 1000 ohms 1/4W J	BRUB181024Z	19-1014-1025
R402	CF 680 ohms 1/4W J	BRUB186814Z	19-1014-6815
R403	CF 3900 ohms 1/4W J	BRUB183924Z	19-1014-3925
R404	CF 1500 ohms 1/4W J	BRUB181524Z	19-1014-1525
R405	CF 680 ohms 1/4W J	BRUB186814Z	19-1014-6815
R406	CF 68K ohms 1/4W J	BRUB186834Z	19-1014-6835
R410	CF 22K ohms 1/4W J	BRUB182234Z	19-1014-2235
R411	CF 3300 ohms 1/4W J	BRUB183324Z	19-1014-3325
R412	CF 10K ohms 1/4W J	BRUB181034Z	19-1014-1035
R416	CF 10K ohms 1/4W J	BRUB181034Z	19-1014-1035
R418	CF 3300 ohms 1/4W J	BRUB183324Z	19-1014-3325
R420	CF 10K ohms 1/4W J	BRUB181034Z	19-1014-1035
R421	CF 22K ohms 1/4W J	BRUB182234Z	19-1014-2235
R424	CF 3300 ohms 1/4W J	BRUB183324Z	19-1014-3325
R425	CF 120K ohms 1/4W J	BRUB181244Z	19-1014-1245
R426	CF 10K ohms 1/4W J	BRUB181034Z	19-1014-1035
R501	CF 39K ohms 1/4W J	BRUB183934Z	19-1014-3935
R502	CF 220 ohms 1/4W J	BRUB182214Z	19-1014-2215
R503	CF 3900 ohms 1/4W J	BRUB183924Z	19-1014-3925
R504	CF 27K ohms 1/4W J	BRUB182734Z	19-1014-2735
R600	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R601	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R602	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R603	CF 15K ohms 1/4W J	BRPB141534Z	19-0014-1535
R604	CF 100 ohms 1/4W J	BRPB141014Z	19-0014-1015
R605	CF 100 ohms 1/4W J	BRPB141014Z	19-0014-1015
R606	CF 3900 ohms 1/4W J	BRPB143924Z	19-0014-3925
R607	CF 33K ohms 1/4W J	BRPB143334Z	19-0014-3335
R608	CF 3300 ohms 1/4W J	BRPB143324Z	19-0014-3325
R609	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R610	CF 82K ohms 1/4W J	BRPB148234Z	19-0014-8235
R611	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R612	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R613	CF 22K ohms 1/4W J	BRPB142234Z	19-0014-2235
R615	CF 470 ohms 1/4W J	BRPB144714Z	19-0014-4715
R617	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R618	CF 470 ohms 1/4W J	BRPB144714Z	19-0014-4715
R619	CF 39K ohms 1/4W J	BRPB143934Z	19-0014-3935
R621	CF 470 ohms 1/4W J	BRPB144714Z	19-0014-4715
R622	CF 27K ohms 1/4W J	BRPB142734Z	19-0014-2735
R624	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R625	CF 27K ohms 1/4W J	BRPB142734Z	19-0014-2735
R626	CF 5600 ohms 1/4W J	BRPB145624Z	19-0014-5625
R627	CF 8200 ohms 1/4W J	BRPB148224Z	19-0014-8225
R628	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R630	CF 47K ohms 1/4W J	BRPB144734Z	19-0014-4735
R631	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
R632	CF 100 ohms 1/4W J	BRPB141014Z	19-0014-1015
R633	CF 2200 ohms 1/4W J	BRPB142224Z	19-0014-2225
R634	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R635	CF 33K ohms 1/4W J	BRPB143334Z	19-0014-3335
R636	CF 27K ohms 1/4W J	BRPB142734Z	19-0014-2735
R637	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R638	CF 33K ohms 1/4W J	BRPB143334Z	19-0014-3335
R639	CF 56K ohms 1/4W J	BRPB145634Z	19-0014-5635
R640	CF 4700 ohms 1/4W J	BRPB144724Z	19-0014-4725
R641	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R642	CF 2700 ohms 1/4W J	BRPB142724Z	19-0014-2725
R643	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R644	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R645	CF 1200 ohms 1/4W J	BRPB141224Z	19-0014-1225
R647	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R648	CF 470 ohms 1/4W J	BRPB144714Z	19-0014-4715
R649	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R650	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R651	CF 18K ohms 1/4W J	BRPB141834Z	19-0014-1835
R652	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R653	CF 68K ohms 1/4W J	BRPB146834Z	19-0014-6835
R654	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R656	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R657	CF 82K ohms 1/4W J	BRPB148234Z	19-0014-8235
R701	CF 3900 ohms 1/4W J	BRPB143924Z	19-0014-3925
R702	CF 5600 ohms 1/4W J	BRPB145624Z	19-0014-5625
R703	CF 33 ohms 1/4W J	BRPB143304Z	19-0014-3305
R704	CF 33K ohms 1/4W J	BRPB143334Z	19-0014-3335
R705	CF 680 ohms 1/4W J	BRPB146814Z	19-0014-6815
R706	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R707	CF 47 ohms 1/4W J	BRPB144704Z	19-0014-4705
R708	CF 33 ohms 1/4W J	BRPB143304Z	19-0014-3305
R709	CF 1000 ohms 1/4W J	BRPB141024Z	19-0014-1025
R710	CF 68 ohms 1/4W J	BRPB146804Z	19-0014-6805
R711	CF 22 ohms 1/4W J	BRPB142204Z	19-0014-2205
R712	CF 330 ohms 1/4W J	BRPB143314Z	19-0014-3315
R713	CF 2700 ohms 1/4W J	BRPB142724Z	19-0014-2725
R714	CF 15K ohms 1/4W J	BRPB141534Z	19-0014-1535
R715	CF 10K ohms 1/4W J	BRPB141034Z	19-0014-1035
R716	WW 0.1 ohm 10W J		1900-0340
SEMIFIXED RESISTORS			
VR001	RT-528 47K ohms	BRTY0528473	1900-0236
VR002	RT-528 2200 ohms	BRTY0528222	1900-0234
VR101	RT-189 5K ohms	BRTY0189502	1900-0201
VR102	RT-513 100K ohms	BRTY0513104	1900-0238
VR301	RT-645 1000 ohms	TM8KV2-645-102	1900-0241
VR302	RT-645 10K ohms	TM8KV2-645-103	1900-0242
VR600	RT-645 10K ohms	TM8KV2-645-103	1900-0242
VR601	RT-645 500K ohms	TM8KV2-645-504	1900-0240
VR602	RT-645 100 K ohms	TM8KV2-645-104	1900-0239
VR603	RT-645 100 K ohms	TM8KV2-645-104	1900-0239
VR604	RT-645 1000 ohms	TM8KV2-645-102	1900-0241
VR605	RT-494 250K ohms	BRTY0494254	1900-0237
VR606	RT-645 1000 ohms	TM8KV2-645-102	1900-0241
VR701	RT-645 1000 ohms	TM8KV2-645-102	1900-0241
VARIABLE RESISTORS			
VR501	RV-239 10K ohms	BRVY0239001	1900-0119
VR502	RV-324 10KB ohms	BRVY0324001	1900-0141
SWITCHES			
S500.1	SW-395 SWITCH-PUSH	BSWY0395001	3000-0083
S600	DPDT PCB: SWITCH-SLIDE	MHS222	3000-0081
SW700	SWITCH-ROCKER DPDT	XRM-210N-00	3000-0082
THERMISTORS and POSISTORS			
TH001	2DT-2 THERMISTOR	BDFY0014002	2000-0399
TH501	YY-151 POSISTOR	BYYY0151001	1900-0700
TH502	YY-151 POSISTOR	BYYY0151001	1900-0700
TH503	YY-151 POSISTOR	BYYY0151001	1900-0700
TH504	YY-151 POSISTOR	BYYY0151001	1900-0700
TH505	TD5-C215DA2	BDFY0036001	2000-0671
MISCELLANEOUS			
1	MOBILE MICROPHONE with HANG-UP CLIP		AMX 100
1	MOBILE POWER CORD		AMX 120
1	MICROPHONE HANGER	HMHG480108Z	4000-0112
X101	QX-120 20.945MHZ	BQXY0120001	2100-0068

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
SK001	SK-035 SOCKET:CRYSTAL	BSKY0035001	1400-0010
SK002	SK-035 SOCKET:CRYSTAL	BSKY0035001	1400-0010
SK101	SK-036 SOCKET:CRYSTAL	BSKY0036001	1400-0002*
RELAY	RELAY: 12VDC SPDT	1515-1C-12VDC	2400-0008
T401	TF-083 CHOKE:AF	BTFY0083001	2300-0001
T701	TRANSFORMER:POWER	16167-P	2600-0030
SP501	SP-014 SPEAKER	BSPY0014001	3100-0004
F701	FUSE SLOW-BLOW: 2 AMP	313002	2800-0013
P01	TP-043 PUSH PIN MALE	BTPY0043001	1100-0108
P02	TP-043 PUSH PIN MALE	BTPY0043001	1100-0108
P03	TP-043 PUSH PIN MALE	BTPY0043001	1100-0108

SYMBOL NUMBER	DESCRIPTION	VENDOR PART NUMBER	UNIDEN PART NUMBER
P04	TP-043 PUSH PIN MALE	BTPY0043001	1100-0108
P1-28	TP-043 PUSH PIN MALE	BTPY0043001	1100-0108
TP1	TP-019	BTPY0019001	1100-0102
TP2	TP-019	BTPY0019001	1100-0102
TP3	TP-019	BTPY0019001	1100-0102
TP101	TP-019	BTPY0019001	1100-0102
1	PUSH PIN FEMALE	60790-1	1100-0107
1	AC POWER CORD	17236	2700-0203
(OPT)	UU-015 TONE BOARD	UU015	ARX 500
(IC605)	DE-390 CTCSS IC	BDEY0390001	2000-1001
#	VALUE CHANGED ON LATTER PRODUCTIONS RUNS.		

APPENDIX A

PIN CONNECTIONS FOR CONTROL PCB

P1 CTCSS DECODER (ARX 500) 1 FILTERED TONE AUDIO 3 N.C. 4 N.C. 5 GROUND 6 TEST ENABLE HIGH NORMAL OPERATION, LOW TEST MODE 7 DECODE LINE 8 +8 V DC	P2 INTERFACE CONNECTOR 1 DISCRIMINATOR AUDIO 3 LOCAL PTT 4 REPEATER VOICE MODULATION 5 REPEATER TONE ENCODE MODULATION 6 REPEATER PTT 7 REPEATER MODULATION DISABLE CONTROLLED BY LOCAL REPEAT SWITCH 8 TONE DECODE CONTROL FOR CALL LIGHT ON FRONT PANEL 9 +8 V DC 10 GROUND 11 +13.5 POWER SUPPLY SENSE FOR BATTERY BACKUP RELAY 12 FRONT PANEL POWER LED - INTERNAL POWER SUPPLY LED LIGHTS SOLID, BATTERY BACKUP LED FLASHES 13 +13.5 V DC
P3 COMMUNITY PANEL INTERFACE 1 ENCODE FREQUENCY SELECT LINE 2 N.C. 3 ENCODE FREQUENCY SELECT LINE TONE #1 4 TONE DECODE LINE FROM ARX 200 ALL TONES 5 FILTERED TONE AUDIO 6 TONE #1 DECODE LINE TO ARX 200 7 ENCODE FREQUENCY SELECT LINE HIGH SIDE 8 TONE #1 TEST ENABLE LINE 9 +8 V DC 10 GROUND	
CONTROL BOARD JUMPER SELECTIONS J1 MUST BE CUT ONLY WHEN ARX 200 USED J2 MUST BE CUT ONLY WHEN ARX 200 USED J3 IF CUT ENCODE TONE WILL PASS TO EXCITER ONLY IF P02 AND P03 ARE SHORTED J4 TONE #1 TEST MODE WHEN IN NORMAL OPERATION THIS JUMPER SHOULD BE CUT, IF ARX 200 IS USED. J5 TOT-WARNING TONE CUT TO DISABLE TONE J6 TOT-CUT TO DISABLE TOT	
CONTROL BOARD PUSH PIN IDENTIFICATION P01 COS LINE-(CMOS LEVEL) TONE 7 CARRIER CONTROLLED DEPENDING ON SI SETTING. P02 ENCODE ENABLE OR DISABLE--IF J3 IS CUT , THESE PINS MUST BE SHORTED TO ENABLE TONE ENCODE AUDIO. P03 ENCODE ENABLE OR DISABLE--IF J3 IS CUT , THESE PINS MUST BE SHORTED TO ENABLE TONE ENCODE AUDIO. P04 REPEAT AUDIO	

FEED THRU

RECEIVER

FT 1 TO VR501 (VOLUME CONTROL) HIGH SIDE
 FT 2 TO VR502 (SQ. CONTROL) WIPER
 FT 3 TO VR502 (SQ. CONTROL) LOW SIDE
 FT 4 TO SW501 (MONITOR SWITCH)
 FT 5 TO D502 (CALL LED CATHODE)
 FT 6 TO J2-8 CTCSS DETECT
 FT 7 TO SPEAKER SP501
 FT 9 TO VR501 (VOLUME CONTROL) LOW SIDE
 FT10 TO VR501 (VOLUME CONTROL) WIPER
 FT11 TO VR 502 (SQ. CONTROL) HIGH SIDE
 FT12 TO D501 (BUSY LED CATHODE)
 FT13 TO J2-1 LOW LEVEL RECOVERED AUDIO
 FT14 +8 VOLT
 FT15 TO D501 (BUSY LED) ANODE
 FT16 TO RELAY COMMON +13.8V DC

EXCITER

FT17 TO D500 TX LED
 FT18 TO CONTROL PCB IC604-4
 FT19 GROUND
 FT20 TX AUDIO INPUT (J507-4)
 FT21 PTT
 FT22 GROUND
 FT23 TO P.A. R309 TX LED
 FT24 TO P.A. R304 ALC
 FT25 TO P.A. R310 APL
 FT26 TO 13.8V SW 700-2

J504 ACCESSORY JACK

1 LOW LEVEL AUDIO (YELLOW)
 2 C.O.S. (WHITE)
 3 PTT (GREEN)
 4 +13.8 V DC (RED)
 5 GROUND (BLACK)
 6 LOCAL MIC INPUT (PINK)
 7 AUDIO AMP OUTPUT (VIOLET)
 8 HIGH SIDE OF SPEAKER (GRAY)
 9 OPTION

NOTE: JUMPER PLUG MUST BE INSTALLED TO ENABLE THE LOCAL SPEAKER

J507 MICROPHONE JACK

1 +8 V DC
 2 GROUND
 3 LOCAL PTT
 4 MIC INPUT (AUDIO)
 5 MONITOR

PUSH PINS ON RECEIVER BOARD

P02 TO D501 (BUSY LED) ANODE
 P03 +8 V DC RX
 P04 +8 V DC
 P05 TO SP 501 (SPEAKER)
 P06 TO SW501 (MONITOR SWITCH)
 P08 HIGH LEVEL AUDIO 9SPEAKER)
 P11 +13.8 V DC
 P14 +8 V DC
 P15 +8 V DC

P16 TO VR501 (VOLUME CONTROL) HIGH SIDE
 P17 SQUELCH MUTING
 P18 CALL LATCH CONTROL
 P22 RECOVERED AUDIO
 P23 ALERT TUNE INPUT
 P24 +8 V DC
 P26 GROUND
 P27 GROUND
 P28 GROUND

ARX 400

19 INCH RACK MOUNT BRACKETS

The ARU 251 UHF repeater and the ARH 351 VHF repeater may be mounted in a 19 inch rack using the ARX 400 brackets. There are two (2) brackets in the kit, one left side bracket, and one right side bracket.

INSTALLATION INSTRUCTIONS

1. Remove the four (4) rubber feet from the bottom of the repeater.
2. Remove the screws from the feet and insert them in through the holes in the bracket to the bottom plate.
3. Tighten Securely.

The brackets are made so that the screws securing the top cover can be removed without removing the ARX 400 brackets.

ARX 500

CONTINUOUS TONE — CONTROLLED SQUELCH

GENERAL

The ARX 500 is a TUNABLE SINGLE TONE DECODER for use with the Uniden/Force repeaters.

THEORY OF OPERATION

The tone selection is determined by the resistor network composed of R1, R2, and VR1. The jumpers JP1 and JP2 are used to select the correct CTCSS frequency range. Refer to the CTCSS frequency chart below for the correct jumper arrangement. The received signal is applied to pin 1 of DE-390. When a proper decode tone is received, pin 9 of the DE-390, goes high opening the squelch circuit.

INSTALLATION

1. Plug the ARX 500 into the seven pin header strip (P1) on the control board, or P802 to P808 on the community repeater panel. Pin 2 of the ARX 500 is plugged to prevent installing the decoder in backwards.

ARH 351 ONLY: STEPS 2 THROUGH 6

2. Remove the four (4) screws securing the control board to the receiver box cover, disconnect the cable at P2, and remove the control board from the unit.
3. Install IC605 (DE-390) in the control board, solder and trim leads to prevent any possible shorts.
4. Remove the four (4) screws securing the receiver box cover, and remove the cover.
5. Move the Brown wire from push pin P27 or P26 to push pin P06.
6. Reassemble the receiver box cover and the control board.

ALIGNMENT PROCEDURE

1. Cut jumpers JP1 and JP2 (located on the ARX 500) for desired frequency range.
2. **Key the transmitter** and adjust VR1 (located on the ARX 500) to obtain the correct tone frequency.
3. Adjust the CTCSS deviation to about 700 Hz. See service manual.
4. Adjust total system deviation to 4.7 kHz. See service manual.


CTCSS FREQUENCY CHART

FREQUENCY	JP1	JP2
60 - 135 Hz	CUT	CUT
125 - 165 Hz	CUT	IN
160 - 300 Hz	IN	IN

ELECTRICAL PARTS LIST

SYMBOL NUMBER	DESCRIPTION	UNIDEN PART NUMBER	
C2	TT 0.47UF 16V	1800-0611	
C3	CD 0.001UF 50V M YD	1800-0117	
C4	CD 0.001UF 50V M YD	1800-0117	
C5	CD 0.001UF 50V M YD	1800-0117	
IC1	DE-390 CTCSS IC	2000-1001	
R1	MF 33K ohm 1/4W F	19-2014-3331	
R2	MF 56K ohm 1/4W F	19-2014-5631	
R3	CF 1 ohm 1/4W J	19-0014-1085	
VR1	250 K ohm		
J1	JK-075 3024-8AH	1100-0061	

PD-085AA

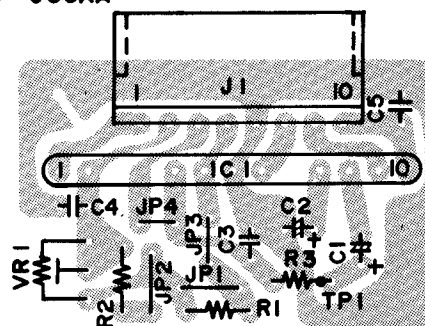


COMPONENT LOCATION
DIAGRAM

DE 390

PIN 1-SIGNAL IN
PIN 2-EXT. RESISTOR
PIN 3-ENCODE OUT
PIN 4-EXT. RESISTOR
PIN 5-GND.
PIN 6-ENCODE SW.
PIN 7-EXT. CAPACITOR
PIN 8-DECODE OUT
PIN 10-+VCC

PD-085

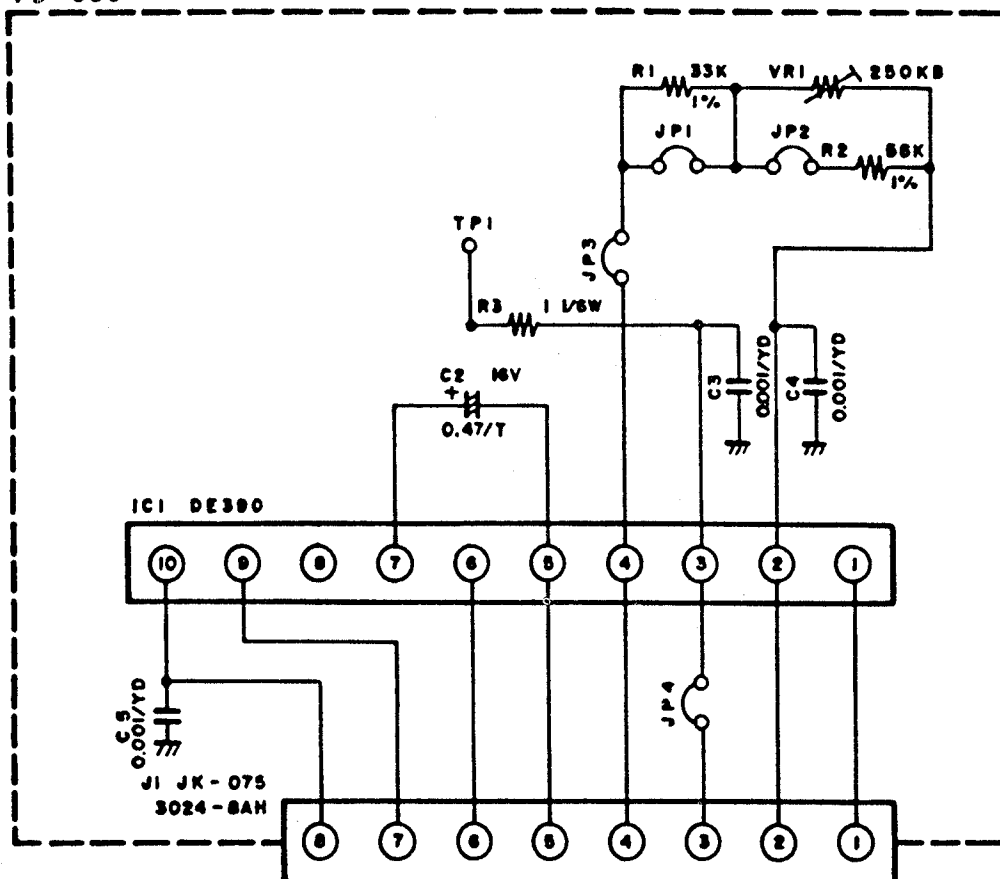

SCHEMATIC
DIAGRAM



UNIDEN AMERICA CORPORATION
Support Engineering Group
Commercial Communications Division
4700 Amon Carter Boulevard
Fort Worth, Texas 76155

REVISION

MODEL: ARH 351

EFFECTIVE DATE: DECEMBER 1, 1989


DATE OF NOTICE: NOVEMBER 13, 1989

DESCRIPTION OF CHANGE:


Effective December 1, 1989, significant changes will be made to the Power Supply section of all ARH 351 Repeaters.


The Regulator PCB assembly, Filter PCB assembly, Bridge Rectifier, and Relay will be replaced. The new PCB assembly (PD201AA) combines the Regulator, Filter, and Relay onto one circuit board.

The Repeater Control PCB (PD200AA) will be replaced with an updated version (PD200AB)

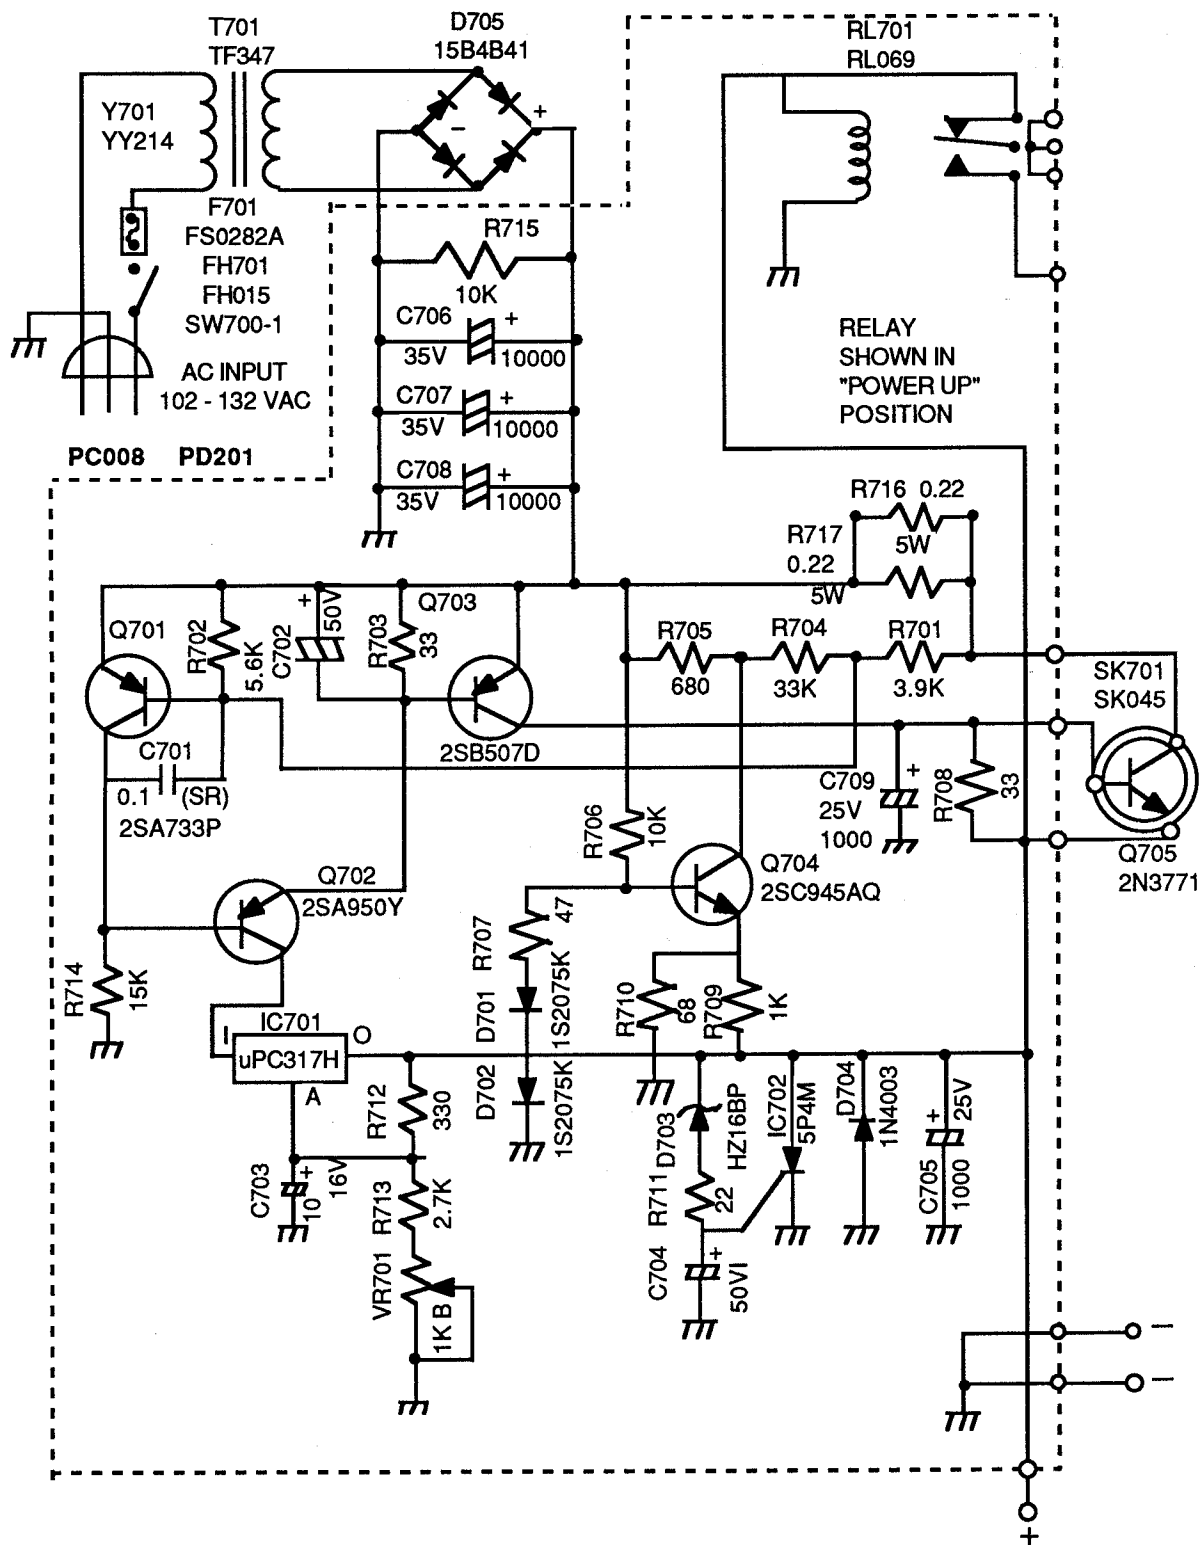



ARH 351 POWER SUPPLY SCHEMATIC DIAGRAM

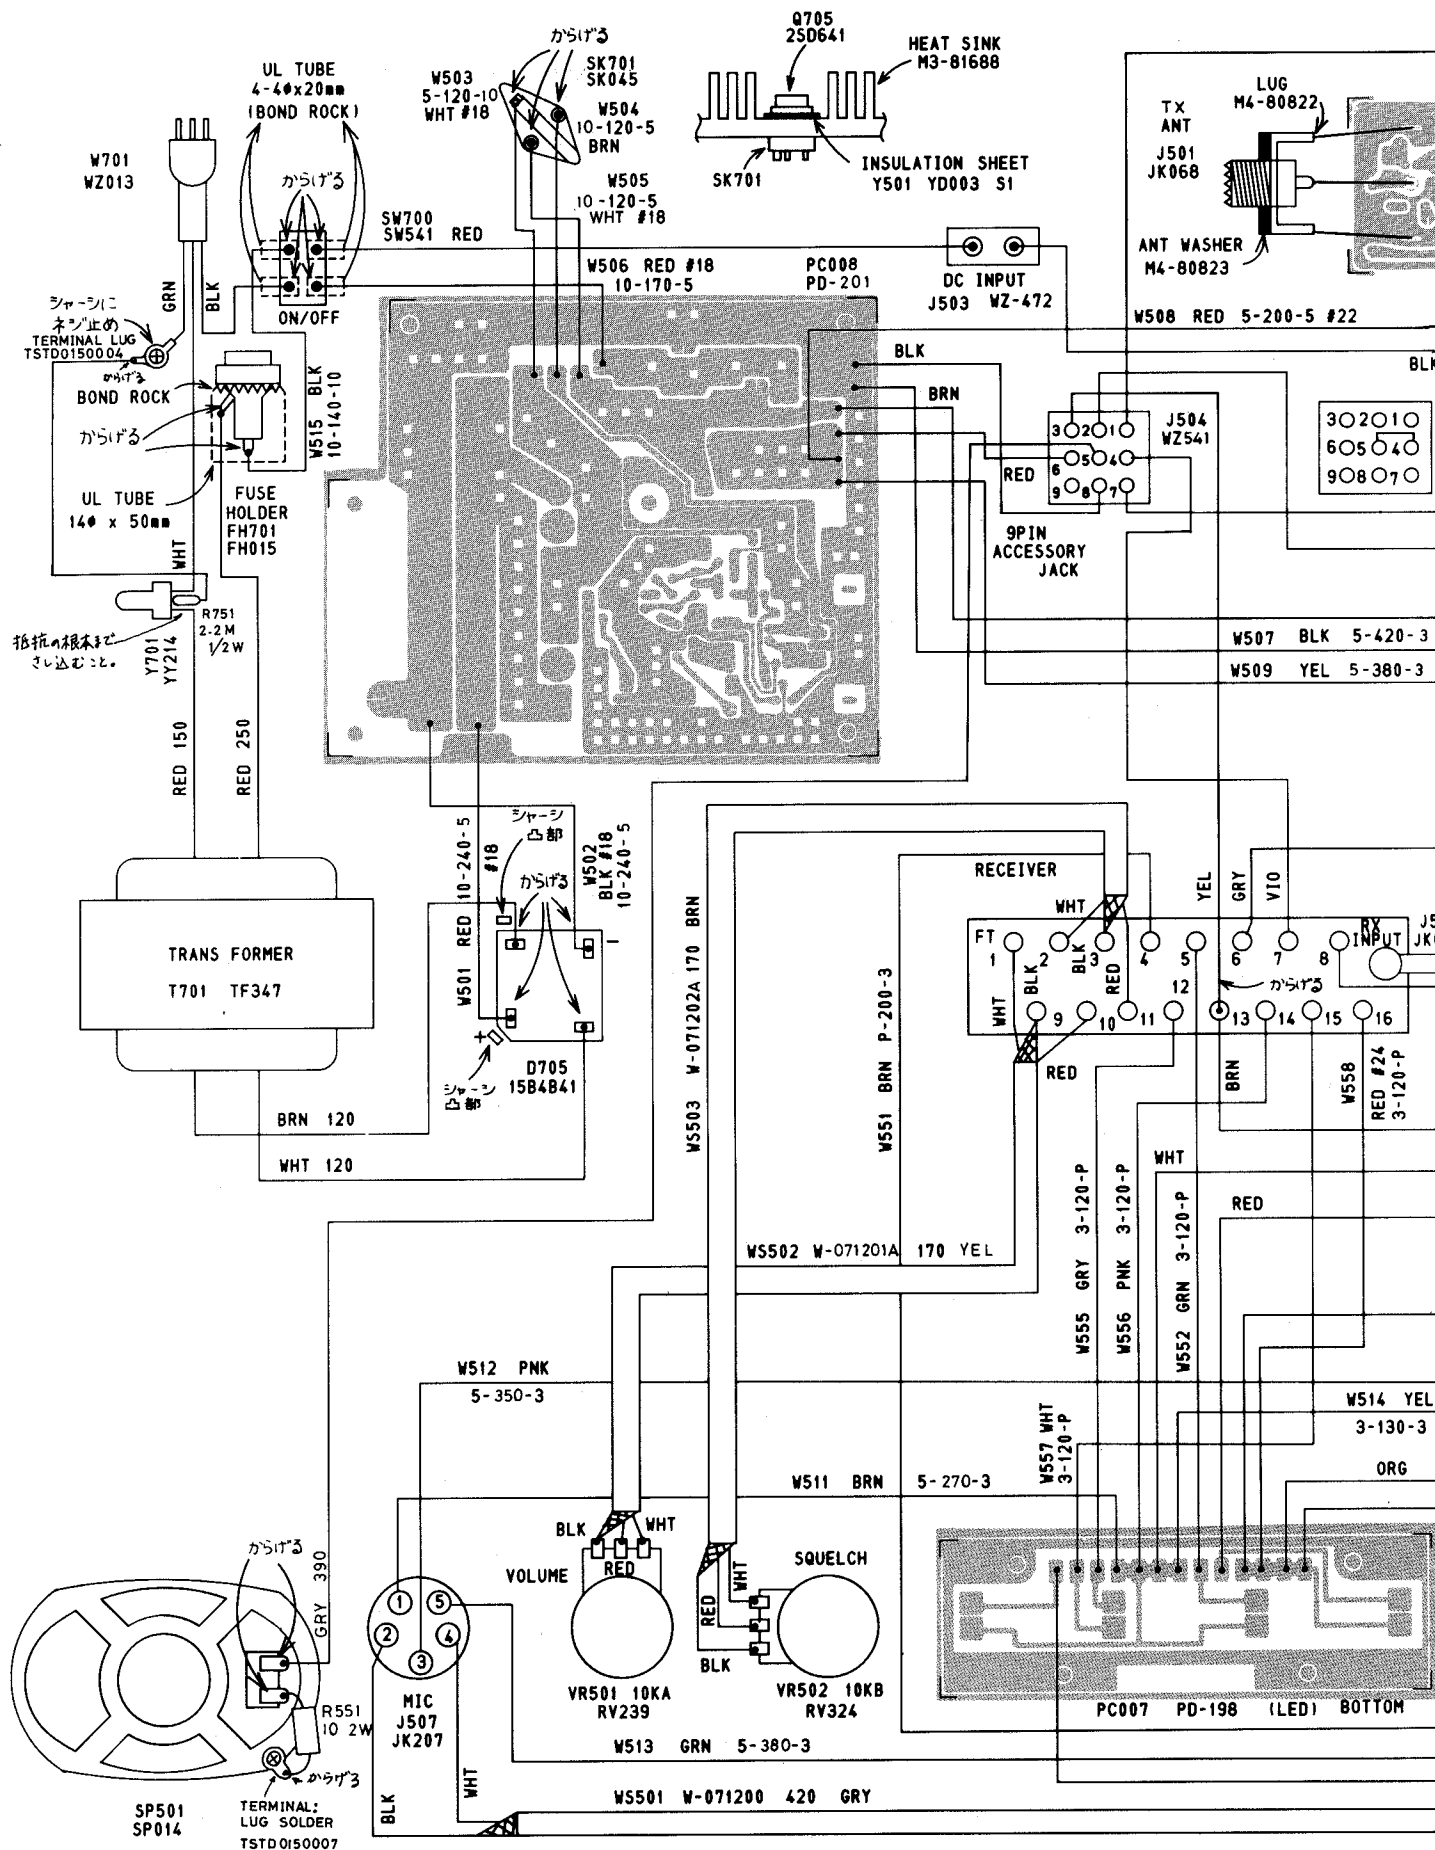

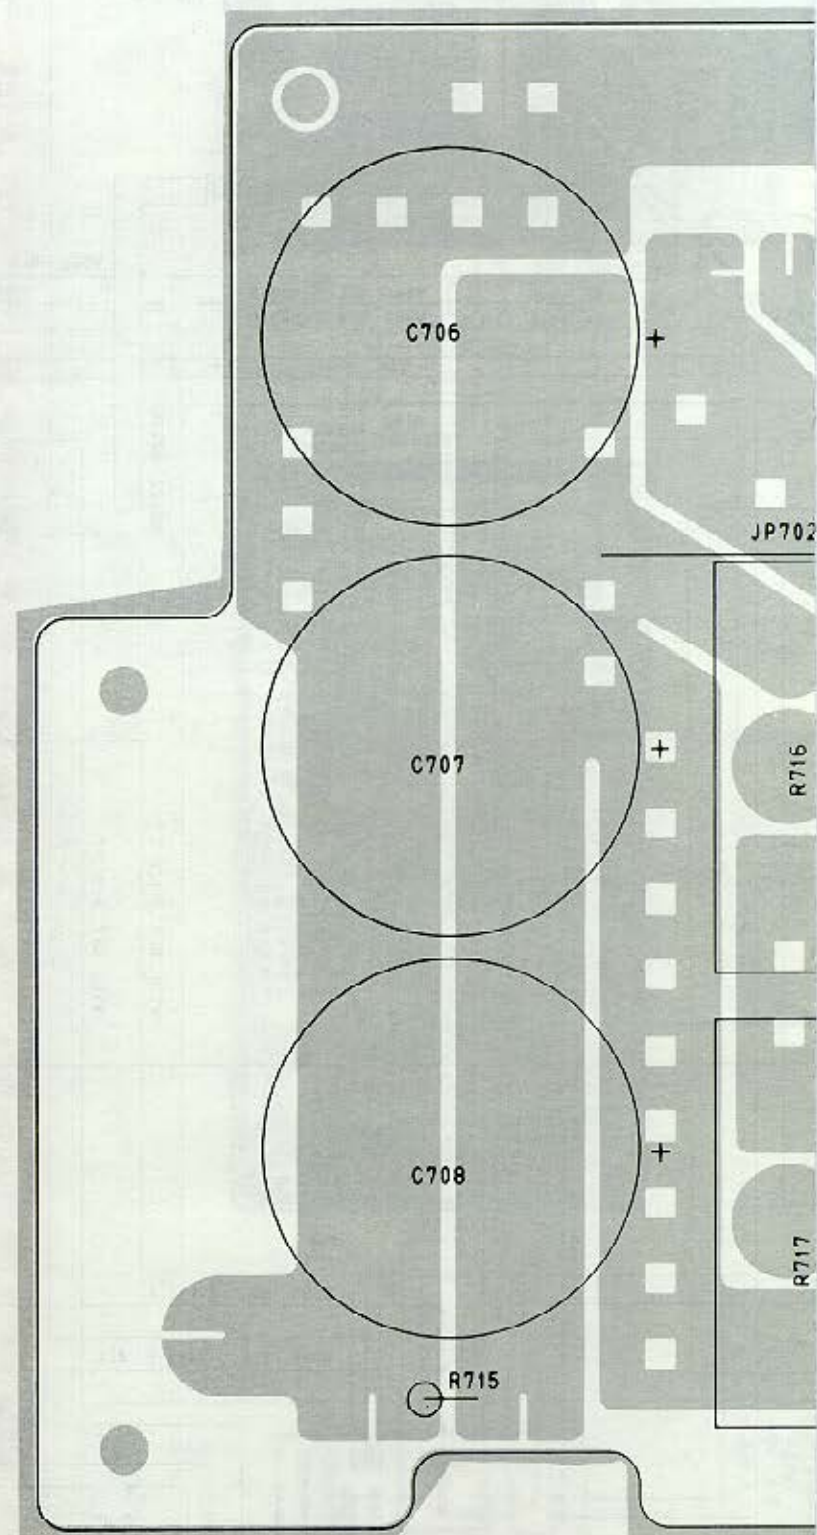

**ARH 351
POWER SUPPLY PCB (PD 201 AA)
BOARD VIEW
COMPONENT SIDE**

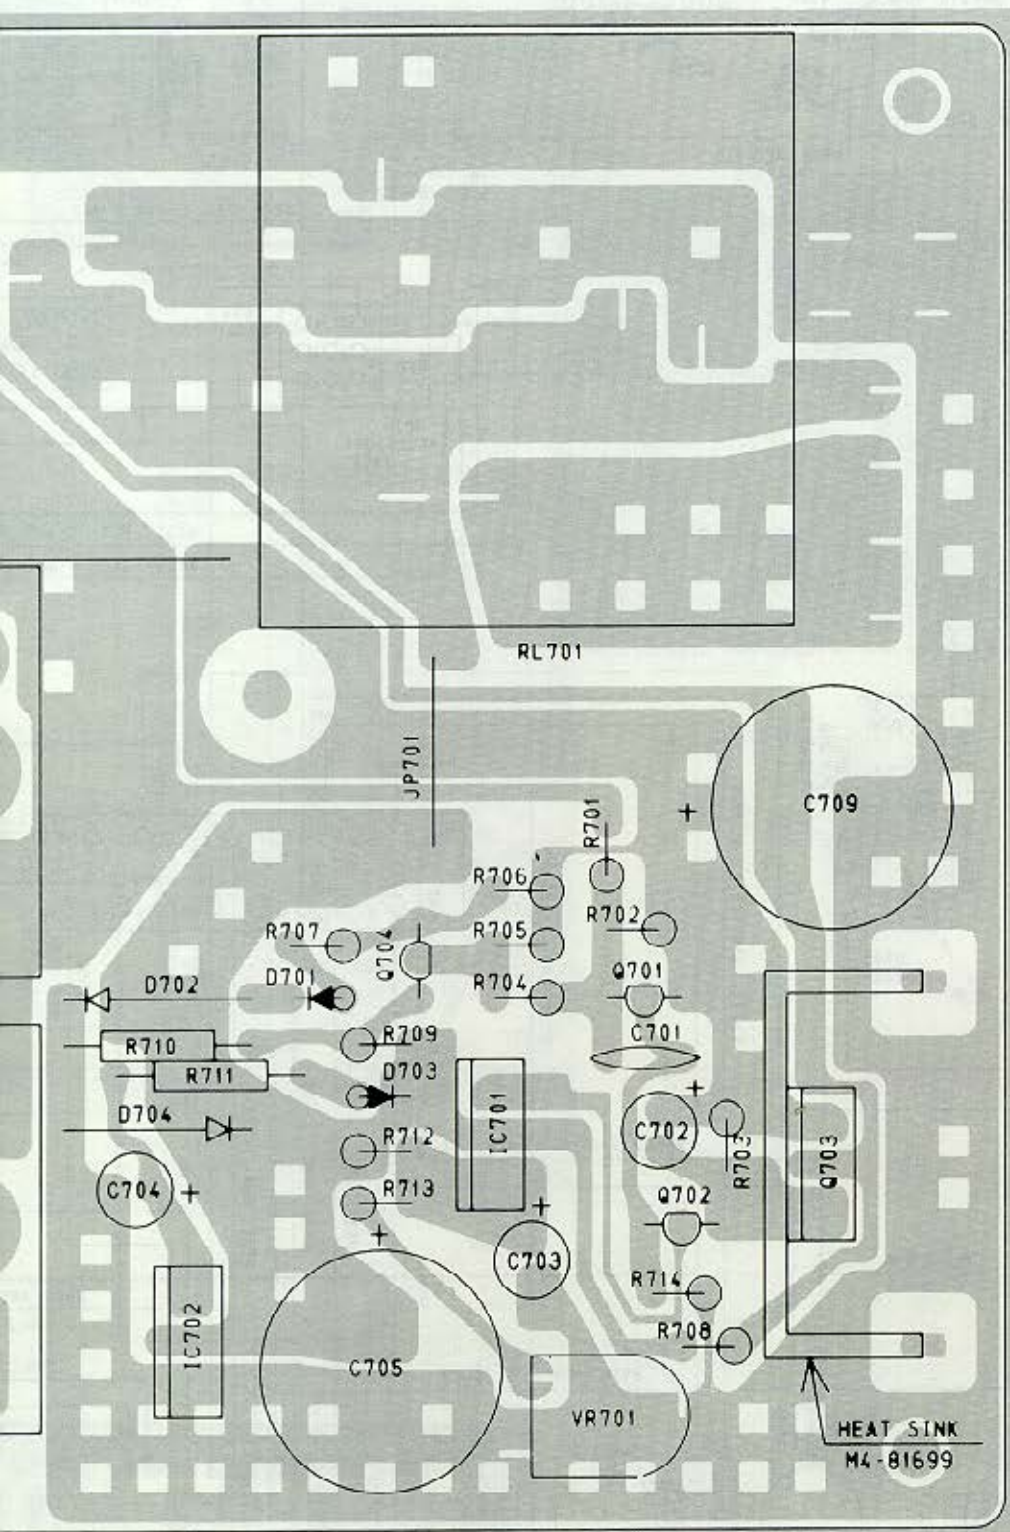

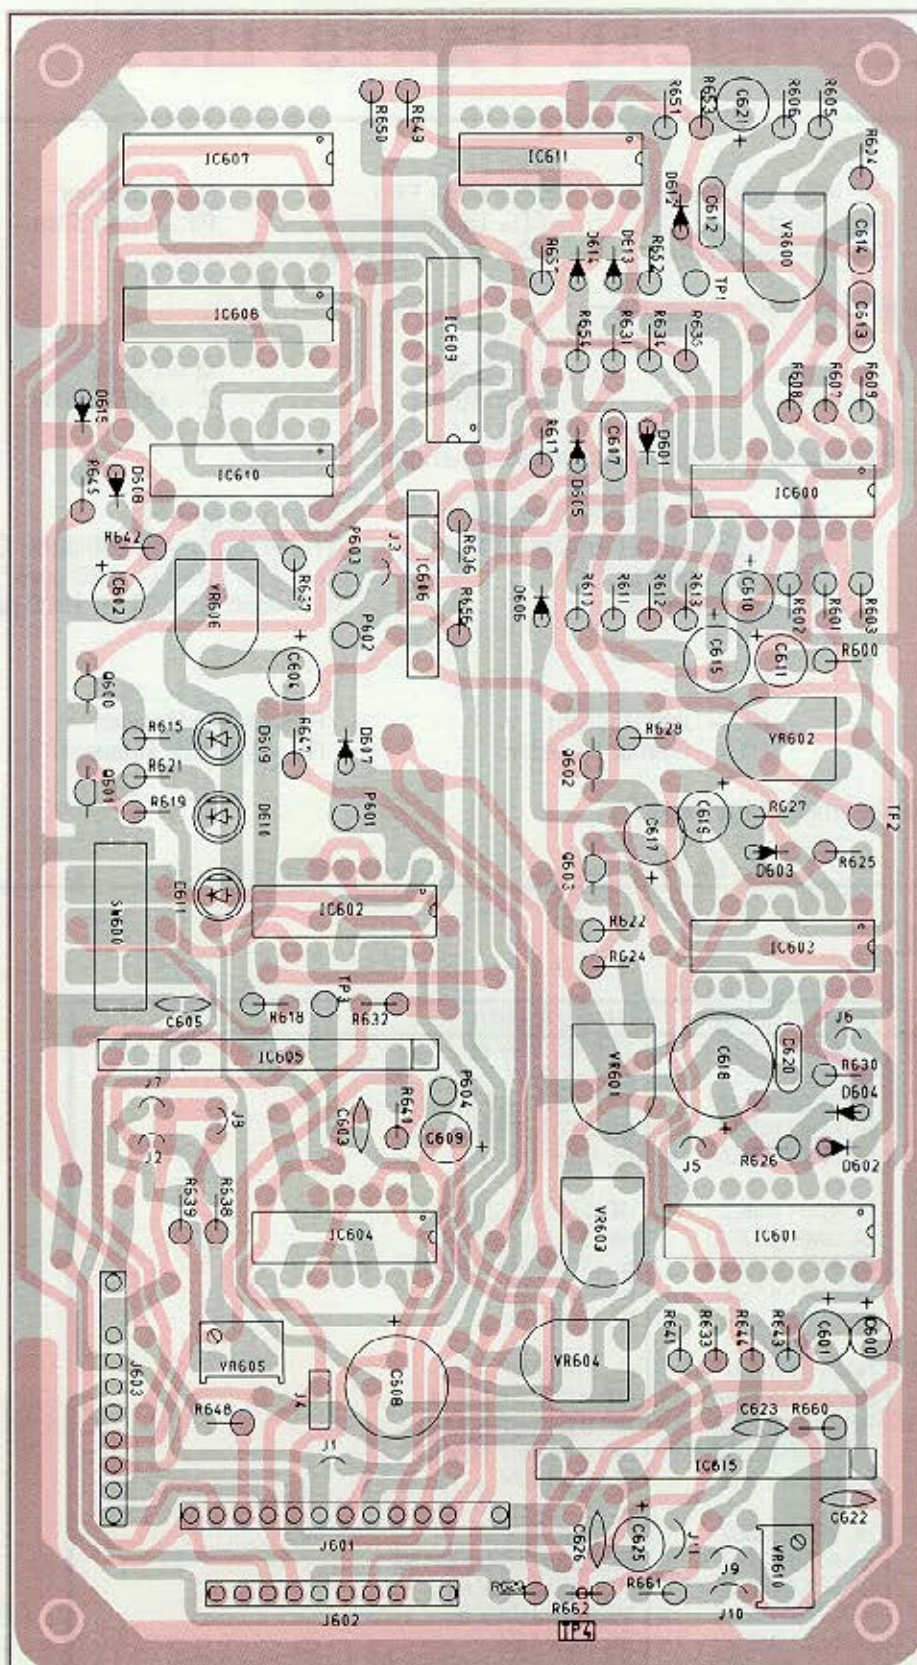

**ARH 351
REPEATER CONTROL PCB
BOARD VIEW
COMPONENT SIDE**

ELECTRICAL PARTS LIST

Capacitors

AS = Al Solid	CG = Ceramic Gimmick	MF = Mylar Film	CT = Trimmer
CC = Chip Capacitor	EL = Electrolytic	TT = Tantalum	FT = Feed Thru
CD = Ceramic Disk	SD = Semi-Conductor	TC = Tantalum Chip	

The first code indicates the tolerance of the capacitor:

C = ± 0.25 PF	F = ± 1	J = ± 5 %	M = ± 20 %
D = ± 0.5 PF	G = ± 2 %	K = ± 10 %	Z = $+80$ % - 20 %

The second code Indicates the variation of capacitance with temperature:

YA = ± 5 %	YF = $+30$ % - 38 % (-25°C to $+85^{\circ}\text{C}$)	CJ = ± 120 ppm/ $^{\circ}\text{C}$
YB = ± 10 %	ZF = $+30$ % - 80 % (10°C to 70°C)	TH = -470 ppm/ $^{\circ}\text{C}$ ± 60 ppm/ $^{\circ}\text{C}$
YD = $+20$ % - 30 %	CH = ± 60 ppm/ $^{\circ}\text{C}$	UJ = -750 ppm/ $^{\circ}\text{C}$ ± 120 ppm/ $^{\circ}\text{C}$
YE = $+20$ % - 50 %	RH = -220 ppm/ $^{\circ}\text{C}$	SL = $+350$ ppm/ $^{\circ}\text{C}$ to -1000 ppm/ $^{\circ}\text{C}$

Resistors

CF = Carbon Film	RC = Chip Resistor	RM = Micro Resistor
MF = Metal Film	RT = Trimmer Resistor	RV = Variable Resistor

The last code Indicates the tolerance of the resistor:

F = 1%	J = 5%	K = 10%
--------	--------	---------

CAPACITORS

Symbol	Part Number	Description
C600	BCSE661086Z	TT 0.1 μ F 35V M
C601	BCEL811090Z	EL 1 μ F 50V
C602	BCSE662286Z	TT 0.22 μ F 35V M
C603	BCKD811026Z	CD 0.001 μ F 50V M YD
C604	BCEL311000Z	EL 10 μ F 16V
C605	BCKD811026Z	CD 0.001 μ F 50V M YD
C607	BCQM812235Z	MC 0.022 μ F 50V K
C608	BCAY312216Z	EL 220 μ F 16V M C-152
C609	BCEL311000Z	EL 10 μ F 16V
C610	BCEL311000Z	EL 10 μ F 16V
C611	BCEL811090Z	EL 1 μ F 50V
C612	BCQM812225Z	MC 0.0022 μ F 50V K
C613	BCQM812225Z	MC 0.0022 μ F 50V K
C614	BCQM812225Z	MC 0.0022 μ F 50V K
C615	BCEL114700Z	EL 47 μ F 10V
C617	BCSE212206Z	TT 22 μ F 16V M
C618	BCAY312216Z	EL 220 μ F 16V M C-152
C619	BCSE664786Z	TT 0.47 μ F 35V M
C620	BCQM811035Z	MF 0.01 μ F 50V K
C621	BCEL311000Z	EL 10 μ F 16V
C622	BCKD811026Z	CD 0.001 μ F 50V M YD
C623	BCKD811026Z	CD 0.001 μ F 50V M YD
C625	BCEL811026Z	EL 0.47 μ F 50V
C626	BCKD811026Z	CD 0.001 μ F 50V M YD
C701	BCGC511045Z	SD 0.1 μ F 25V K

Symbol	Part Number	Description
C702	BCEL811090Z	EL 1 μ F 50V
C703	BCEL311000Z	EL 10 μ F 16V
C704	BCEL811090Z	EL 1 μ F 50V
C705	BCAY511026Z	EL 1000 μ F 25V M C-152
C706	BCAR661036Z	EL 10,000 μ F 35V M C-132
C707	BCAR661036Z	EL 10,000 μ F 35V M C-132
C708	BCAR661036Z	EL 10,000 μ F 35V M C-132
C709	BCAY511026Z	EL 1000 μ F 25V M C-132

DIODES

Symbol	Part Number	Description
D601	BDAY0063001	1S2075K
D602	BDAY0063001	1S2075K
D603	BDAY0063001	1S2075K
D604	BDAY0063001	1S2075K
D605	BDAY0063001	1S2075K
D606	BDAY0063001	1S2075K
D607	BDAY0063001	1S2075K
D608	BDAY0063001	1S2075K
D609	BDAY0122001	TLY124 Yellow LED
D610	BDAY0116001	TLG-124A Green LED
D611	BDAY0100001	TLR-124 Red LED
D612	BDAY0063001	1S2075K
D613	BDAY0063001	1S2075K
D614	BDAY0063001	1S2075K
D615	BDAY0272004	HZ9.1BP Zener
D701	BDAY0063001	1S2075K
D701#	BDAY0181001	1S1555
D702	BDAY0063001	1S2075K
D702#	BDAY0181001	1S1555
D703	BDAY0272005	HZ16BP Zener
D704	BDAY0133001	1N400D
D705	BDAY0309001	15B4B41

INTEGRATED CIRCUITS

Symbol	Part Number	Description
IC600	BDEY0356001	LM324N OP-AMP
IC601	BDEY0774001	TC4020BP
IC602	BDEY0129001	TC4011BP
IC603	BDEY0529001	TC4584BP
IC604	BDEY0411001	TC4066BP
IC605	BDEY0390001	DE-390 CTCSS IC
IC606	BDEY0334001	DE-334 Hi-Pass Filter
IC607	BDEY0774001	TC4020BP
IC608	BDEY0188001	TC4017BP
IC609	BDEY0129001	TC4011BP
IC610	BDEY0529001	TC4584BP
IC611	BDEY0356001	LM324N OP-AMP
IC615	BDEY0390001	DE-390 CTCSS IC
IC701	BDEY0773001	UPC317HIC
IC702	BDFY0038001	DF-038 5P4M Thyristor

TRANSISTORS

Symbol	Part Number	Description
Q600	BDBC0945507	2SC945A-Q DB-224
Q601	BDBC0945507	2SC945A-Q DB-224
Q602	BDBC0945507	2SC945A-Q DB-224
Q603	BDBC0945507	2SC945A-Q DB-224
Q701	BDBA0733115	2SA7330 DB-003
Q702	BDBA0950124	2SA950-Y DB-010
Q703	BDBB0507104	2SB507-D DB-120
Q704	BDBC0945507	2SC945A-Q DB-224
Q705	2000-0434	2N3771

RESISTORS

Symbol	Part Number	Description
R600	BRUB181034Z	CF 10K Ω 1/4W J (V)
R601	BRUB181024Z	CF 1000 Ω 1/4W J (V)
R602	BRUB181024Z	CF 1000 Ω 1/4W J (V)
R603	BRUB181534Z	CF 15K Ω 1/4W J (V)
R604	BRUB181014Z	CF 100 Ω 1/4W J(V)
R605	BRUB181014Z	CF 100 Ω 1/4W J(V)
R606	BRSS443923Z	MF 3900 Ω 1/4W F(A)
R607	BRUB183334Z	CF 33K Ω 1/4W J (V)
R608	BRUB183324Z	CF 3300 Ω 1/4W J (V)
R609	BRUB181034Z	CF 10K Ω 1/4W J (V)
R610	BRUB188234Z	CF 82K Ω 1/4W J(V)
R611	BRUB181024Z	CF 1000 Ω 1/4W J (V)
R612	BRUB181024Z	CF 1000 Ω 1/4W J (V)
R613	BRUB182234Z	CF 22K Ω 1/4W J(V)
R615	BRUB184714Z	CF 470 Ω 1/4W J(V)
R617	BRUB181034Z	CF 10K Ω 1/4W J (V)
R618	BRUB184714Z	CF 470 Ω 1/4W J(V)
R619	BRUB183934Z	CF 39K Ω 1/4W J (V)
R621	BRUB184714Z	CF 470 Ω 1/4W J(V)
R622	BRUB182734Z	CF 27K Ω 1/4W J (V)
R624	BRUB181034Z	CF 10K Ω 1/4W J (V)
R625	BRUB182734Z	CF 27K Ω 1/4W J (V)
R626	BRUB185624Z	CF 5600 Ω 1/4W J (V)
R627	BRUB184724Z	CF 4700 Ω 1/4W J (V)
R628	BRUB181034Z	CF 10K Ω 1/4W J (V)
R629	BRUB183334Z	CF 33K Ω 1/4W J (V)
R630	BRUB188234Z	CF 82K Ω 1/4W J(V)
R631	BRUB181034Z	CF 10K Ω 1/4W J (V)
R632	BRUB181014Z	CF 100 Ω 1/4W J(V)
R633	BRUB181034Z	CF 10K Ω 1/4W J (V)
R634	BRUB181034Z	CF 10K Ω 1/4W J (V)
R635	BRUB183334Z	CF 33K Ω 1/4W J (V)
R636	BRUB182734Z	CF 27K Ω 1/4W J (V)
R637	BRUB185634Z	CF 56K Ω 1/4W J (V)
R638	BRSS443333Z	MF 33K Ω 1/4W F (A)
R639	BRSS445633Z	MF 56K Ω 1/4W F (A)
R640	BRSS444723Z	MF 4700 Ω 1/4W SF (A)
R641	BRUB181034Z	CF 10K Ω 1/4W J (V)
R642	BRUB182724Z	CF 2700 Ω 1/4W J (V)
R643	BRUB181034Z	CF 10K Ω 1/4W J (V)

Symbol	Part Number	Description
R644	BRUB181034Z	CF 10K Ω 1/4W J (V)
R645	BRUB181224Z	CF 1200 Ω 1/4W J (V)
R647	BRUB181034Z	CF 10K Ω 1/4W J (V)
R648	BRUB184714Z	CF 470 Ω 1/4W J(V)
R649	BRUB181024Z	CF 1000 Ω 1/4W J (V)
R650	BRUB181024Z	CF 1000 Ω 1/4W J (V)
R651	BRUB181834Z	CF 18K Ω 1/4W J (V)
R652	BRUB181034Z	CF 10K Ω 1/4W J (V)
R653	BRUB186834Z	CF 68K Ω 1/4W J (V)
R654	BRUB181034Z	CF 10K Ω 1/4W J (V)
R656	BRUB181034Z	CF 10K Ω 1/4W J (V)
R657	BRUB188234Z	CF 82K Ω 1/4W J(V)
R660	BRSS445633Z	MF 56K Ω 1/4W F (A)
R661	BRSS443333Z	MF 33K Ω 1/4W F (A)
R662	BRPB181094Z	CF 1 Ω 1/4W J (A)
R701	BRUB183924Z	CF 3900 Ω 1/4W J (V)
R702	BRUB185624Z	CF 5600 Ω 1/4W J (V)
R703	BRUB183304Z	CF 33 Ω 1/4W J (V)
R704	BRUB183334Z	CF 33K Ω 1/4W J (V)
R705	BRUB186814Z	CF 680 Ω 1/4W J (V)
R706	BRUB181034Z	CF 10K Ω 1/4 W J (V)
R707	BRUB184704Z	CF 47 Ω 1/4W J (V)
R708	BRUB183304Z	CF 33 Ω 1/4W J (V)
R709	BRUB181024Z	CF 1000 Ω 1/4W J (V)
R710	BRPB186804Z	CF 68 Ω 1/4W J (A)
R711	BRPB182204Z	CF 22 Ω 1/4W J (A)
R712	BRUB183314Z	CF 330 Ω 1/4W J (V)
R713	BRUB182724Z	CF 2700 Ω 1/4W J (V)
R714	BRUB181534Z	CF 15K Ω 1/4W J (V)
R715	BRUB181034Z	CF 10K Ω 1/4W J (V)
R716	BRXM502284Z	CERMET 0.22 Ω 5W J
R717	BRXM502284Z	CERMET 0.22 Ω 5W J

VARIABLE RESISTORS

Symbol	Part Number	Description
VR600	BRTY0526103	RT-526 10KB Ω
VR601	BRTY0526504	RT-526 500KB Ω
VR602	BRTY0526104	RT-526 100KB Ω
VR603	BRTY0526104	RT-526 100KB Ω
VR604	BRTY0526102	RT-526 1KB Ω
VR605	BRTY0494254	RT-494 250KB Ω
VR606	BRTY0526102	RT-526 1KB Ω
VR610	BRTY0494254	RT-494 250KB Ω
VR701	BRTY0526102	RT-526 1KB Ω

CONNECTORS

Symbol	Part Number	Description
J4	BJKY0321002	JK-321 68908-002 2 pin Jack
J601	BJKY0032012	JK-032 5048-12A Jack
J602	BJKY0032009	JK-032 5048-09A Jack
J603	BJKY0032009	JK-032 5048-09A Jack
P601	BTPY0043001	TP-043 Male Push Pin
P602	BTPY0043001	TP-043 Male Push Pin
P603	BTPY0043001	TP-043 Male Push Pin
P604	BTPY0043001	TP-043 Male Push Pin
TP1	BTPY0019001	TP-019 Test Point
TP2	BTPY0019001	TP-019 Test Point
TP3	BTPY0019001	TP-019 Test Point

MISCELLANEOUS

Symbol	Part Number	Description
SW600	BSWY0315001	SW-315 SSFU-22-07 Switch
T701	BTFY0347001	TF-347 Power Transformer