

# MAINTENANCE MANUAL

## EDACS™ M-PA™ UHF SERVICE SECTION

### TABLE OF CONTENTS

	PAGE
INTRODUCTION .....	2
TEST EQUIPMENT .....	2
FRONT COVER TEST ACCESSORY KIT .....	3
TROUBLESHOOTING SOFTWARE .....	3
FUNCTIONAL TESTS .....	4
DISASSEMBLY / REASSEMBLY .....	4
ALIGNMENT PROCEDURES .....	8
SET-UP PROCEDURE .....	10
TRANSMITTER ALIGNMENT .....	10
RECEIVER ALIGNMENT .....	12
TRACKING AND CHANNEL DATA .....	12
TROUBLESHOOTING .....	13
REAR COVER ASSEMBLY .....	15
FRONT COVER ASSEMBLY .....	19
COMPONENT REPLACEMENT .....	28
SURFACE MOUNTED COMPONENTS .....	28
SURFACE MOUNTED COMPONENT REMOVAL .....	28
SURFACE MOUNTED COMPONENT REPLACEMENT .....	28
SURFACE MOUNTED IC REPLACEMENT .....	28
MODULE REPLACEMENT .....	29
WEATHERPROOF INTEGRITY .....	29
INTERNAL LITHIUM BATTERY .....	29
BATTERY PACKS .....	30
CHARGING THE BATTERY PACKS .....	30
DISPOSAL OF RECHARGEABLE BATTERIES .....	31
CONTROL KNOB STOP PLATE .....	31
MODULE AND INTEGRATED CIRCUIT DATA .....	33

## INTRODUCTION

This manual outlines service procedures for the EDACS™ M-PA™ UHF portable radio. Troubleshooting information presented in this manual will help localize trouble to the board and/or component level. Alignment procedures will aid a technician adjust the radio to factory specifications.

Information is presented for tracking/channel data and surface mount component replacement. Preventive maintenance information includes weatherproofing procedures and service data on the batteries. Module and integrated circuit data sheets are listed at the end of this manual.

In order to perform many of the following alignments, tests and troubleshooting checks, it will be necessary to (re)program the radio. Further programming information can be found in the Programming Manual and software TQ-3340.

It is suggested that an improperly operating radio be first bench tested thoroughly in the conventional mode. This allows the technician, using standard test equipment, to insure the majority of the radio's circuitry is functional. Any necessary repairs can be completed and the radio can then be tested in trunked mode using an available site.

Conventional mode testing can (and will) verify proper operation of all of the radio's circuitry with the following exceptions:

- modem IC operation
- data modulation circuitry (transmit mode only)
- data demodulation circuitry (receive mode only)
- trunked mode associated areas of the radio's memory

### CAUTION

ALWAYS remove the battery pack before disassembling the unit to avoid blowing the fuse or causing other component damage.

This radio contains CMOS ICs that can be damaged by static electricity. Observe static handling precautions.

## TEST EQUIPMENT

The following is a list of test equipment which may be required to troubleshoot and/or align the portable radio.

### GENERAL

- RF Signal Generator
- RF Wattmeter with 10 Watt capability
- Audio Distortion Analyzer with VU Meter
- Oscilloscope with x1 and x10 Probes
- Audio Oscillator
- Frequency Counter
- Modulation Analyzer
- SINAD Meter
- Adjustable Regulated DC Power Supply, 5 - 9 Vdc, 5 amperes
- Digital Multimeter

### SPECIALIZED

- K19/A4WX01542 RF Test Cable (UDC mount)
- K19/A4WX01543 Battery Eliminator ("Dummy Battery")
- K19/A4WX01544 RF/Logic Extender Cable
- K19/A4WX01604 Discharge Analyzer (checks battery pack capacity and battery chargers)
- LBI-38518 Front Cover Test Accessory Kit Manual
- SPK9010 Front Cover Test Accessory Kit; Includes:  
19D902562P5 Front Cover Test Cable  
19D902562P1 LCD Extender Plate & Clamp  
19D902562P2 LCD Test Cable  
19D902562P6 Test Program Diskette

- SPK9011 Front Cover Test Accessory Kit; Includes:  
19D902562P3 Adapter Board  
19D902562P4 Control Board  
Extender
- ST3559P2 RF Antenna Adapter (top jack to BNC female)
- TQ-0609 Test Box (simulates all external UDC options)
- 19B219079P1 Alignment Tool, 0.1" slotted (metal) tips
- 19B801640P1 Alignment Tool, 0.1" slotted tips

In addition to the above listed equipment, access to a local trunked site and a second portable or mobile (trunked) radio will be necessary to test trunked mode operation.

## PROGRAMMING

- IBM PC Compatible Computer
- TQ-3340 Programming Manual and Software
- TQ-3310 PC Programming Adapter (Serial Adapter Box and PC-to-Adapter Box Interface Cable)
- TQ-3311 Radio Programming Cable (Adapter Box-to-radio Cable)

## FRONT COVER TEST ACCESSORY KIT

A Front Cover Test Accessory Kit is available for exercising and troubleshooting the circuits in the front cover. Connection to an IBM PC or compatible computer (parallel printer port) allows all of the circuits in the front cover, less Control Board, to be exercised via the PC computer.

An adapter and extender board in the kit allows the Control Board to be extended out of the case for troubleshooting access. See TEST EQUIPMENT for a breakdown of the kit.

## KEYPAD FLEX AND LCD BOARD TESTING (IN CASE)

The Keypad Flex and LCD Board can be exercised while still in the radio's case. These tests are made without the Control Board. All of the switches and the logic circuitry on the Keypad Flex as well as the Emergency Switch

can be tested via the PC connection. Status of the switches is displayed on the PC. The LCD Board can be fully exercised by sending it various patterns from the PC to be displayed. LCD/Keypad backlighting can also be toggled on and off.

Test points are provided for the volume control and microphone audio. A resistor network on the Front Cover Test Cable provides a dc bias to the mic in the absence of the Control Board's bias.

## LCD BOARD TESTING (REMOVED FROM CASE)

The LCD Board can be tested with the kit and PC after it has been removed from the front cover. A test cable is provided in the kit that interconnects the board and PC computer. Complete display and backlight functions can be exercised.

## TROUBLESHOOTING SOFTWARE

The M-PA Control Board contains extensive diagnostic capabilities within its operating system. A troubleshooting program (actually several small programs) is included with the Programming Software. This program gives the service technician the ability to quickly isolate many failures in the radio.

The PC computer communicates with the radio via the UDC. Necessary hardware items include the standard PC Programming Adapter Box and PC Interface Cable (TQ-3310), the Radio Programming Cable (TQ-3311), and a PC computer. The Troubleshooting Software program that runs on the PC utilizes the Adapter Box and cables as an interface between the PC computer and the radio.

Connect the Adapter Box and associated cables in the same manner as if the radio were to be programmed. Execute the Troubleshooting Software as follows:

- At the DOS prompt, log-on to the drive that contains the PC Programming Software (and Troubleshooting Software).
- Execute the program by typing MPATEST < CR > at the DOS prompt.

A menu screen will appear that will prompt the technician to select a test routine. Test routines include:

- various receive and transmit audio path tests
- tone (CG, T99, etc.) path tests

- a squelch circuit test
- a synthesizer serial loading test
- a volume, keypad and UDC test
- various D/A and A/D circuit tests such as TX Power Set and battery voltage
- a RAM test
- Modem TX and RX Data Path tests including a loop-back test

If there is a communication problem between the computer and radio after a selection is made, the message "No response from radio", "Press Enter to continue" will be displayed on the computer. Check cable connections or troubleshoot the Front Cover Assembly if this message is displayed. There may be a problem with the UDC Flex or the TX DATA/RX DATA circuitry.

Follow the instructions given with each test routine to isolate a failure to a particular circuit or component.

## **FUNCTIONAL TESTS**

The following test procedure outlines a functional bench test of the radio. It may be necessary to (re)program the radio before proceeding with this test.

1. Power the radio up using the Dummy Battery and the bench power supply. See Table 6 for supply current demands for all operating modes.
  2. Rotate the Control Knob and verify the display changes and indicates the proper programmed information. On Scan and System models, press the STEP key to scroll through various groups or channels.
  3. Connect a wattmeter and frequency counter to the radio and select a conventional (test) channel. Press the PTT Button to key the transmitter and measure RF power and frequency. See Table 4 for transmitter power specs. See Table 3 for transmitter frequency error specs. The TX flag should appear in the display when the radio is transmitting.
  4. Select a channel that has been programmed for receive only. Press the PTT Button. The radio should beep and the display should flash.
  5. Select a conventional channel that has been programmed for Channel Guard decode operation. The CG flag should appear. Press the Monitor Button to unsquelch the radio. Receiver noise should be heard from the internal speaker and the noise level should follow the rotation of the Volume Control.
- Hold the Monitor Button and verify that the CG flag disappears after two seconds. Release the button and then press it again. Channel Guard operation should return after two seconds as indicated by the CG flag.
6. Remove the wattmeter and connect the radio to an RF signal generator. Test several conventional channels. Verify receiver specifications.
  7. Verify proper scan operation on Scan and System model radios. The SCN flag should appear when the radio is scanning. See the operating procedures for complete details.
  8. Verify DTMF keypad operation on System model radios. Each character (0-9, \* and #) should be displayed when the corresponding key is pressed. See the operating procedures for complete details.
  9. Remove the signal generator and install an antenna. Select a local trunked site which is programmed into the radio. Transmit a group call from a second mobile or portable radio set to the same group. Verify the BSY flag turns on, the radio unsquelches, and receives the call.
  10. Transmit a group call from the radio under test. Verify the TX and BSY flags turn on and the call is heard in the second mobile or portable radio.

## **DISASSEMBLY / REASSEMBLY**

In the event internal service is required, disassemble the radio in accordance with the below outlined steps. See Figures 1 - 6.

Reassemble the unit by following the steps in reverse order. Observe screw lengths and do not over tighten the screws when reassembling the unit. Torque specifications are listed in Table 1.

## **TOOLS REQUIRED**

- TORX® T6 Driver
- M1.5 Hex Driver or Wrench
- Needle-nose Pliers
- Small Flat-Blade Screwdriver
- Spanner Wrench (top antenna jack removal)
- Spanner Wrench (UDC antenna jack removal)
- Spanner Wrench (volume control and channel switch removal)

## FRONT AND REAR COVER SEPARATION

Lay the radio face down and loosen the four Torx® screws (A) on the back of the radio. Separate the two halves by carefully lifting the Rear Cover Assembly straight-up to avoid bending the connector pins between the RF and Control Boards.

When reassembling the unit, be sure the rubber gasket surrounding the perimeter of the cover is in good condition and it is in the groove. Also insure the connector pins align properly. For proper operation the four screws should be tightened so there is no gap between the covers. It is recommended that the two top screws be tightened first while squeezing the radio together to ensure the gap is completely closed. The bottom screws can then be tightened.

### CAUTION

ALWAYS remove the battery pack before disassembling the unit to avoid blowing the fuse or causing other component damage.

This radio contains CMOS ICs that can be damaged by static electricity. Observe static handling precautions.

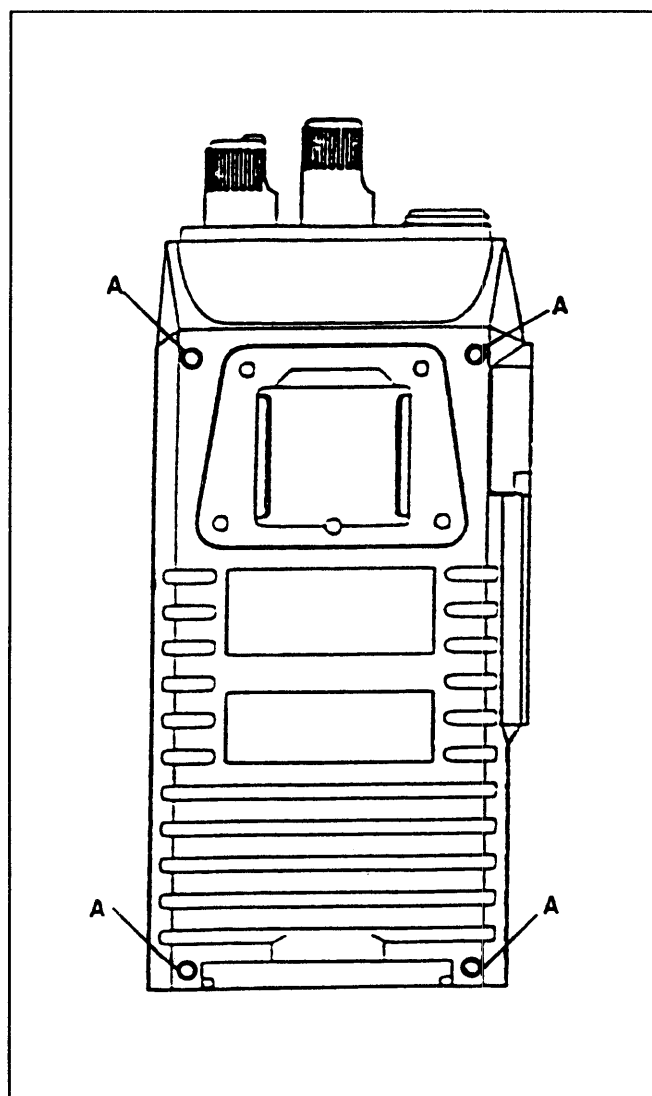


Figure 1 - Front and Rear Cover Separation

Table 1 - Torque Specifications

LOCATION	QUANTITY	LB-IN.
Rear/Front Cover Assembly Screws	4	5.0
Rear Cover Assembly		
Antenna Insert	1	10.0
UDC RF Connector	1	10.0
RF Board/Eggcrate Screws	13	4.0
PA Support Screws	2	10.0
Antenna Switch (SW1) Screw	1	1.5
Front Cover Assembly		
Knob Set Screws	2	3.0
Control/Volume Control Nuts	2	8.0
UDC Ground Screw	1	3.0
All M1.6 and M2 Screws	29	3.0

## RF BOARD ACCESS

Holes are located in the RF Board shield for alignment of the Reference Oscillator (U3), Modulation Balance (R18), VCO Modulation (R19), 2nd Local Oscillator Adjustment (T1), and the Quadrature Detector Adjustment (T2).

If removal of the RF Board from the case is necessary, first remove the UDC antenna jack and the top RF antenna jack with appropriate spanner wrenches. Next, remove the five (5) Torx® screws (B) that secure the shield and remove the shield. Remove the two (2) remaining Torx® screws (C) near the Power Amplifier module. The RF Board and eggcrate casting may now be lifted from the Rear Cover. The chip component side of the board is now accessible for service.

If necessary, the RF Board may be separated from the eggcrate casting. Remove the two (2) Torx® screws that secure the Power Amplifier module and remove the four (4) screws on the chip component side of the board that secure it to the casting.

Reassemble the unit in reverse order. Observe screw lengths.

## CONTROL BOARD ACCESS

Remove the six screws (D) securing the shield and Control Board to gain access to the board. Remove the shield.

### NOTE

Many of the test points on the Control Board are accessible at this point; however, the Front Cover Assembly should not be powered-up without first installing a screw in the lower right-hand hole to ground the board. Also, the three screws securing the top flex connectors need to be installed for good flex connections. **USE CAUTION:** Excess screw length may damage the flex circuits or the case threads. The lower left-hand screw will also have to be in place to supply battery power to the board.

To remove the Control Board, remove the two Torx® screws (E). Lift the board and carefully unplug the Speaker Flex from J3. Avoid bending this or any other flex circuits at sharp angles. The Control Board may now be removed. Note the battery power and ground connections at the bottom of the board where the screws have been removed.


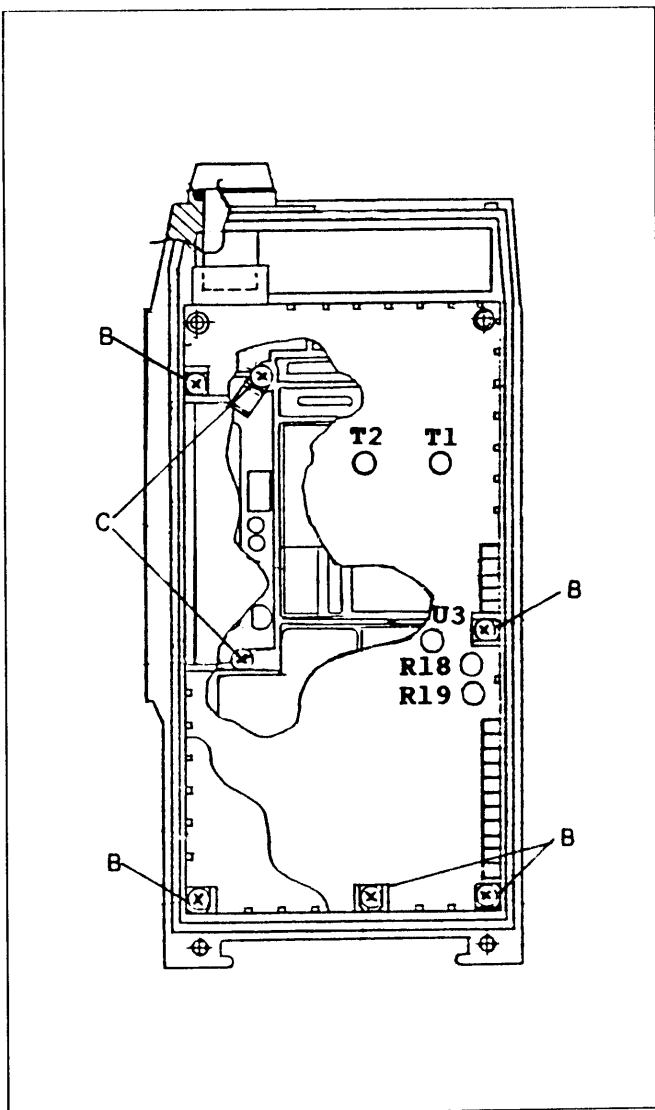


Figure 2 - RF Board Access

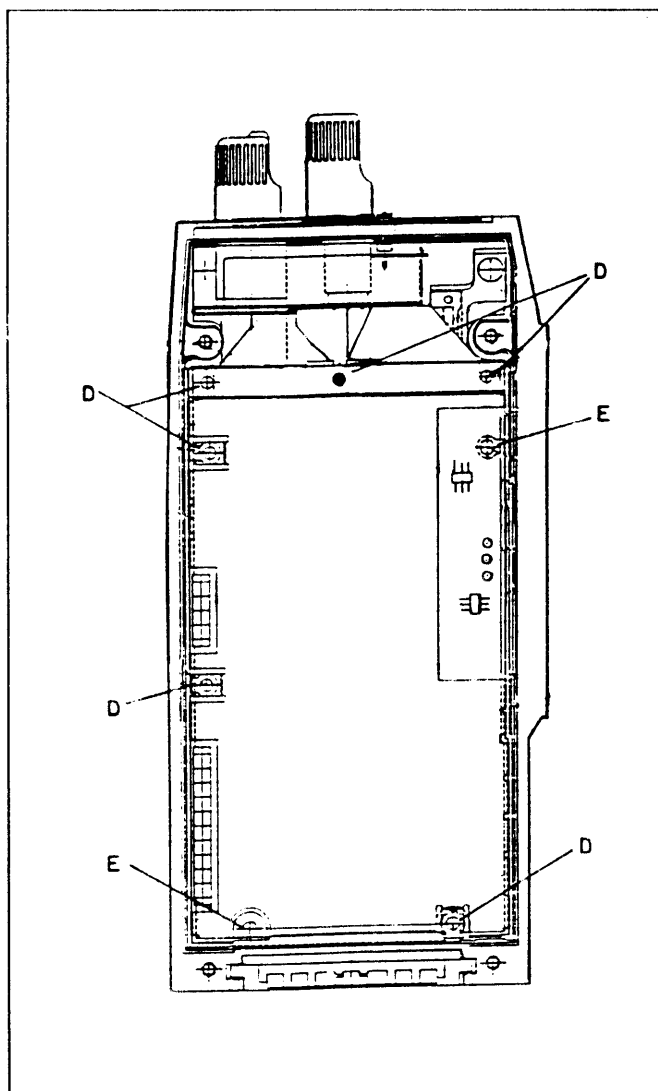

**Figure 3 - Control Board Access**

### **SPEAKER, MICROPHONE AND FLEX CIRCUIT ACCESS**


Remove the Control Board and the six die cast shield screws. Remove the die-cast shield by lifting the top end first and sliding it towards the top of the radio. The internal speaker, microphone, Keypad and UDC Flex circuits are now accessible.

If UDC Flex removal is necessary, first un-solder the microphone. Remove the UDC securing screw (the UDC

ground pin). Lift the UDC/Monitor Button/PTT Switch assembly from the side of the case and slide the flex through the slot.

To remove the Keypad Flex, first remove the Flex/UDC/Monitor Button/PTT Switch assembly as previously stated. Next remove the knobs using the hex driver. Unscrew the two screws (F) securing the top panel and remove the panel. Lift the Emergency Button Board by carefully unplugging J6 from P6. Using a spanner wrench, remove the nuts securing the volume and channel controls. Unscrew the two screws (G) and remove the J10/P10 Zebra strip securing plate (H). The Keypad Flex is now free for removal.

In order to replace the Speaker Flex, it must be unsoldered from the speaker and the Battery Plate.

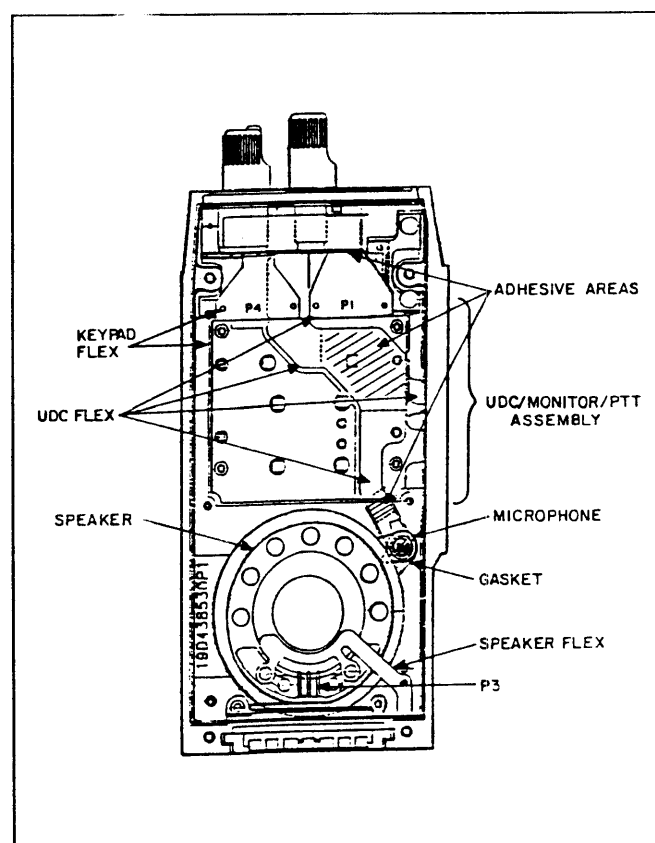

**Figure 4 - Speaker, Microphone and Flex Circuits Access**

## LCD BOARD

After the Keypad Flex has been removed, the LCD Board assembly can be removed by removing the two remaining screws (J).

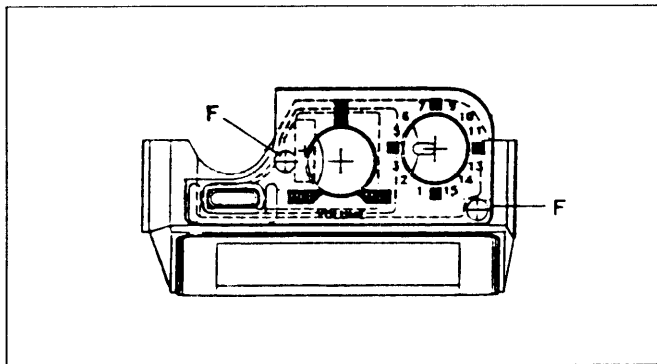


Figure 5 - Top Panel and Knobs

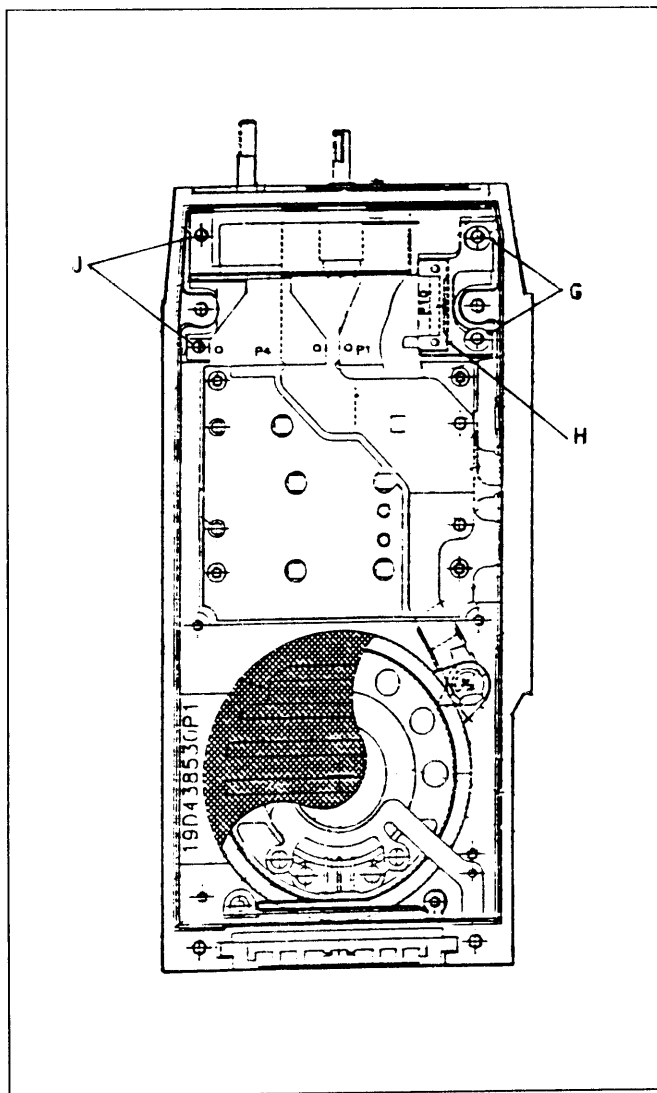


Figure 6 - Keypad and LCD Board Access

## ALIGNMENT PROCEDURES

This section outlines alignment procedures for the UHF RF Board located in the Rear Cover Assembly. Several test procedures are presented which will help isolate a problem if it exists.

The circuits in the Front Cover Assembly contain no adjustments and therefore no alignment is necessary. See the TROUBLESHOOTING section for test information if a problem is suspected in the control circuits.

Alignment procedures must be performed in the order presented to insure proper radio operation.

## SERVICE NOTES

Throughout the service procedures presented in this manual, the following information should be observed:

- The bench power supply should be set for  $7.5 \pm 0.1$  Vdc (unless otherwise noted) during troubleshooting procedures presented in this manual. If a battery pack is used, it should be fully charged. Typical battery pack voltage will be  $7.5 \text{ Vdc} \pm 20\%$  over its full discharge cycle.
- Logic Levels:  
 Logic 1 = high = greater than 4.5 Vdc  
 Logic 0 = low = less than 0.5 Vdc
- The modules are not field repairable. Schematics and Outline diagrams for the modules are presented in this manual as a troubleshooting reference only.
- The Front Cover Test Accessory Kit allows the Control Board to be extended out of the case for troubleshooting access. The LCD and Keypad circuits can be tested in the case via a PC computer connection.
- The personality information stored in the radio should be backed-up on the PC computer before any service procedure is performed.



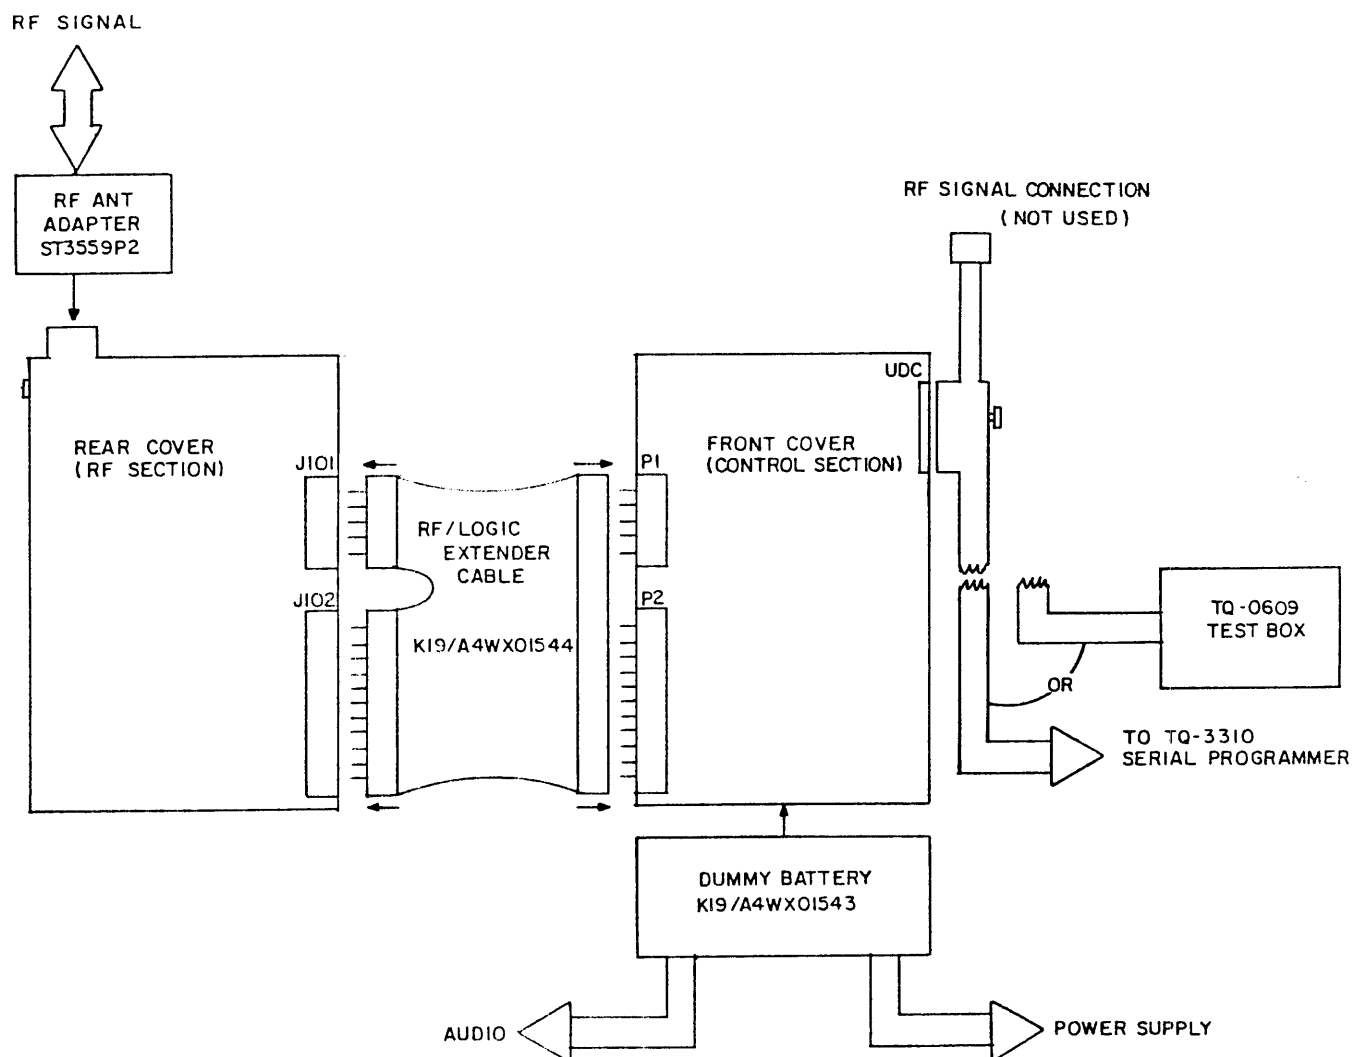


Figure 7 - Test Set-Up

## SET-UP PROCEDURE

1. Separate the Front and Rear Cover Assemblies and connect the RF/Logic Extender cable between the RF Board and the Control Board. See Figure 7. Use caution when working with these connectors.
2. Slide the Dummy Battery onto the Front Cover and connect the audio output leads to the distortion analyzer. Place the Dummy Battery ON/OFF switch in the OFF position to direct the speaker audio to the distortion analyzer. Connect the PC Programmer to the UDC.
3. Set the power supply to  $7.5 \pm 0.1$  Vdc and connect the Dummy Battery supply leads to the power supply. See Table 6 for current consumption data.
4. Program the radio with the LOW, MIDDLE and HIGH-side test channels listed in Table 2. To fully test the transmitter, program a channel pair for each frequency, one at high power and one at low power. It may be desirable to program more test channels into the unit.
5. Remove power from the radio and replace the PC programming cable with the TQ-0609 Test Box.

**NOTE**

LBI-38203 contains detailed information on the TQ-0609 Test Box.

6. Connect the radio to the wattmeter using the RF Antenna Adapter. Couple a small amount of the RF signal to the frequency counter.

Table 2 - RF Test Channels

RF BAND	TEST FREQUENCY (MHz)		
	LOW	MIDDLE	HIGH
403-423 MHz	403.025	412.875	422.975
450-470 MHz	450.025	460.025	469.975

## TRANSMITTER ALIGNMENT

The following information can be used to test and align the transmitter's output frequency and its modulation characteristics. Completion of these tests/alignments will verify a near 100% operating synthesizer and transmitter stages.

**Reference Oscillator**

1. On the TQ-0609 Test Box, select UDC switch position 6 and apply power to the radio. This enables the radio's control circuits for an external microphone and its internal speaker amplifier.
2. Channel the unit to the MIDDLE test channel listed in Table 2 (low power) and key the transmitter using the TQ-0609. DO NOT apply any modulation at this time.
3. Monitor the transmitter's frequency and adjust Reference Oscillator U3 to obtain a frequency error of less than  $\pm 100$  Hz (a small trimmer hole is located on top of module). If the  $\pm 100$  Hz maximum error (at room temperature) can not be secured, Reference Oscillator replacement may be necessary. Table 3 list maximum transmitter errors for the specified temperature range.

**NOTE**

Reference Oscillator U3 is factory adjusted and should not normally need readjustment. **Use a recently calibrated and stable frequency counter to determine if oscillator adjustment is needed.** The above test/alignment should be done at a room temperature of  $25^{\circ}\text{C} \pm 5^{\circ}\text{C}$ .

4. Check all TX test channels for an error of less than  $\pm 100$  Hz.

**Table 3 - Maximum Transmitter Frequency Error\*  
And Typical VCO TX Tuning Voltages**

CHANNEL (MHz)	TOLERANCE (Hz)	LOWEST (MHz)	HIGHEST (MHz)	VCO TUNING VOLTAGE
403.025000	± 1008	403.023992	403.026008	1.5 Vdc
412.875000	± 1032	412.873968	412.876032	2.5 Vdc
422.975000	± 1057	422.973943	422.976057	3.5 Vdc
450.025000	± 1125	450.023875	450.026125	1.5 Vdc
460.025000	± 1150	460.023850	460.026150	2.5 Vdc
469.975000	± 1175	469.973825	469.976175	3.5 Vdc

\* Based on specified ±2.5 ppm over the entire operating temperature range

## Modulation

### NOTE

Modulation adjustment should only be necessary if changes in the Tracking Data values will not compensate deviation levels to within specifications. Adjustment of R18 and R19 will obsolete all Tracking and Channel Data modulation values. See the TRACKING AND CHANNEL DATA section in this manual for further details.

The following procedure balances and "coarse aligns" the VCO and Reference Oscillator deviation. The Audio Processor IC will perform "fine level adjustment" of TX deviation via the Tracking and Channel Data.

1. To align R18 and R19 it will be necessary to modify the RF/Logic Extender cable as follows:

- Add two 10K ohm resistors in series from 5.4 Vdc (J102 pin 6) to ground (J102 pin 7).
- Break the connection at TX AUDIO, J102/P2 pin 1.
- Bias TX AUDIO into the RF Board to 2.7 Vdc by connecting the junction of the 10K resistors to J102 pin 1.

2. Using a 100 uF (or greater) capacitor, couple a 1 kHz, 600 mV rms audio signal into TX AUDIO, J102 pin 1.
3. Connect the radio to the modulation analyzer and key the transmitter at the MIDDLE test channel listed in Table 2.
4. Adjust the VCO Modulation, R19, for a deviation of 5.0 kHz ± 100 Hz.
5. Remove the sine wave signal, and apply a 20 Hz, 1 Volt peak-to-peak square wave. Set the modulation analyzer as follows:
  - No High-pass Filters
  - > 20 kHz Low-pass Filter
6. Key the transmitter and monitor the demodulated output from the modulation analyzer. Adjust Modulation Balance, R18, for minimum peak-to-peak deviation or best square wave response.

## Distortion Test

1. Measure transmitter audio distortion on the LOW, MIDDLE and HIGH-side test channels. Distortion readings should be less than 3% at 3 kHz deviation with a 1000 Hz tone.

## **RECEIVER ALIGNMENT**

The following information can be used to check and align the receiver circuits. Successful completion of these alignment procedures will verify a near 100% operating synthesizer and receiver stages.

### **2nd Local Oscillator**

1. Check Reference Oscillator alignment as outlined in the TRANSMITTER ALIGNMENT section.
2. Channel the unit to the MIDDLE test channel listed in Table 2.
3. Set the RF signal generator to the corresponding channel, -20 dBm and no modulation. Apply this signal to the radio.
4. To measure the IF signal, connect the frequency counter to U6 pin 5. Use an appropriate high impedance probe (or amp).
5. Adjust the signal generator level to achieve accurate counting of the IF signal; the RF signal generator should be set 10 dBm above the lowest level which gives accurate counting.
6. Adjust the 2nd local oscillator via T1 for 455.000 kHz  $\pm$  90 Hz. Disconnect the probe.

### **Quadrature Detector**

1. Modulate the signal generator with a 1 kHz tone, 3 kHz deviation at the MIDDLE test channel. Set RF level to -50 dBm.
2. Adjust T2 for maximum audio level at J101/P1 pin 4.

### **12 dB SINAD and Distortion Tests**

1. Connect the distortion analyzer or SINAD meter to the speaker load (in Dummy Battery).
2. With the RF signal generator and radio set to the MIDDLE test channel, modulate the generator with a 1 kHz tone at 3 kHz deviation. Measure the 12 dB SINAD sensitivity. This reading should be  $\leq$  -116 dBm (0.35  $\mu$ V).

3. Return the signal level to -50 dBm.
4. Check audio distortion. Readings should be  $\leq$  5% at rated audio output. Audio amplitude should be 100 - 150 mV rms ( $\approx$  350 mVp-p) at J101/P1 pin 4.
5. Repeat the 12 dB SINAD sensitivity and distortion check for the LOW and HIGH-side channels. See Table 2.

## **TRACKING AND CHANNEL DATA**

The personality RAM memory map includes distinct areas which are reserved for Tracking and Channel Data.

Tracking Data establishes individual radio parameters and tailors the operation of the unit across the band. The four parameters include high RF power, low RF power, modulation level and receiver squelch opening. This data is programmed into the RAM at the factory after the front and rear covers are "married". The PC Programmer allows alteration of this data if necessary.

Channel Data is the individual channel information such as TX and RX frequencies, CG information, CCT information, and the four previously mentioned parameters. This data is stored in the RAM on a per channel basis as each channel is programmed. The PC Programmer allows alteration of this data (on a per channel basis) if necessary.

Low, medium and high-side of the band values are programmed into the radio for each Tracking parameter. When a channel is added to the radio, the Programmer reads the Tracking values and calculates necessary values for each channel using a linear interpolation technique. The Programmer stores the newly calculated values in the Channel Data area of memory along with the associated channel information.

Changing the Tracking Data will not alter Channel Data of previously programmed channels. Tracking Data should not normally be altered; however, it may be necessary to reprogram some of the values after aligning circuitry, or replacing modules or other components which obsolete the previously programmed values. Settings for each parameter are listed in Table 4. If Tracking Data is altered for the above reason, it will be necessary to reprogram all channels to establish the new Channel Data for each channel. See the Programming Manual for further information on altering Tracking and Channel Data.

Digital values stored for the PWR SET analog voltage are one example of tracking information. As no two transmitter stages are exactly matched, the PWR SET dc voltage will be slightly different with any two radios to produce the same power output. Tracking and Channel Data allows the microprocessor to tailor the PWR SET line for the RF stage differences from unit-to-unit and across the band.

**Table 4 - Tracking Data Parameters**

PARAMETER	FACTORY SETTING	HEX VALUE*
High Power	5.0 Watts	81
Low Power	1.0 Watt	3F
Modulation	4.3 kHz **	0F
Squelch Opening	8-10 dB SINAD	A3

\* Listed values are approximate; final programmed values will vary from unit-to-unit and will need to be adjusted as such.

\*\* EXT MIC HI = 1 kHz, 110 mV rms

## TROUBLESHOOTING

The following procedures are designed to quickly lead the service technician to the area of trouble. Rear and Front Cover Assembly troubleshooting procedures are outlined. The test set-up should be identical to the set-up used in the ALIGNMENT PROCEDURES section in this manual.

Table 5 lists common problems and most likely problem areas.

## SERVICE NOTES

Throughout the service procedures presented in this manual, the following information should be observed:

- The bench power supply should be set for  $7.5 \pm 0.1$  Vdc (unless otherwise noted) during troubleshooting procedures presented in this manual. If a battery pack is used, it should be fully charged. Typical battery pack voltage will be  $7.5$  Vdc  $\pm 20\%$  over its full discharge cycle.
- Logic Levels:  
Logic 1 = high = greater than 4.5 Vdc  
Logic 0 = low = less than 0.5 Vdc
- The modules are not field repairable. Schematics and Outline diagrams for the modules are presented in this manual as a troubleshooting reference only.
- The Front Cover Test Accessory Kit allows the Control Board to be extended out of the case for troubleshooting access. The LCD and Keypad circuits can be tested in the case via a PC computer connection.
- The personality information stored in the radio should be backed-up on the PC computer before any service procedure is performed.
- The Large-Scale Integration ICs located on the Control Board (U4, U7 and U18) are very reliable devices. Replace these integrated circuits only after troubleshooting all associated circuitry and resoldering the leads. Faulty solder connections will cause inoperative or intermittent operation.

**Table 5 - General Troubleshooting**

SYMPTOM	POSSIBLE CAUSES
Completely inoperative (no audio and no LCD indication)	<ol style="list-style-type: none"> <li>1. Dead Battery Pack.</li> <li>2. Fuse blown: Check radio fuse in Battery Plate.</li> <li>3. Control circuit problem: Troubleshoot Front Cover Assembly.</li> </ol>
At power-up, radio beeps: <ol style="list-style-type: none"> <li>a. twice (once in addition to power-up beep)</li> <li>b. continuously at an <math>\approx 2</math> Hz rate</li> <li>c. continuously at an <math>\approx 2</math> Hz rate and "NO LOCK" is displayed</li> </ol>	<ol style="list-style-type: none"> <li>1a. Weak Battery Pack.</li> <li>1b. Unit is not programmed: Program radio - See TQ-3340.</li> <li>2b. Lithium battery (BT1) on Control Board defective.</li> <li>1c. Synthesizer is not locked: Check LOCK DETECT line, synthesizer loading and VCO tuning voltage.</li> </ol>
At power-up, display: <ol style="list-style-type: none"> <li>a. flashes "PERS ERR "</li> <li>b. flashes all segments and the radio beeps</li> </ol>	<ol style="list-style-type: none"> <li>1a. Internal lithium battery failure.</li> <li>2a. RAM failure: Troubleshoot Front Cover.</li> <li>1b. Interprocessor communication failure: Troubleshoot Front Cover Assembly.</li> </ol>
Receiver inoperative or weak.	<ol style="list-style-type: none"> <li>1. Squelch levels programmed too high: Press Monitor Button to disable squelch.</li> <li>2. Channel Guard or Type 99 Enabled: See operating procedures.</li> <li>3. Defective antenna.</li> <li>4. RF Board problem: Troubleshoot Rear Cover Assembly.</li> </ol>
Transmitter inoperative or low range.	<ol style="list-style-type: none"> <li>1. Power levels programmed low: Check RF output and reprogram unit if necessary.</li> <li>2. Weak battery. Note "BAT" flag.</li> <li>3. Defective antenna.</li> <li>4. RF Board problem: Troubleshoot Rear Cover Assembly.</li> </ol>
TX and RX inoperative on some channels only	<ol style="list-style-type: none"> <li>1. Programming incorrect: Reprogram unit - See TQ-3340.</li> <li>2. Synthesizer problem (VCO or prescaler): Check LOCK DETECT (high = lock), VCO tuning voltage and modulus control line.</li> <li>3. RAM Problem: Troubleshoot Front Cover.</li> </ol>
TX and RX inoperative on all channels	<ol style="list-style-type: none"> <li>1. Programming incorrect: Reprogram unit - See TQ-3340.</li> <li>2. Synthesizer problem: Check LOCK DETECT (high = lock), VCO tuning voltage and modulus control line.</li> <li>3. Control circuit problem: Troubleshoot Front Cover Assembly.</li> <li>4. Check antenna switch SW1 and the low-pass filter circuit on RF Board.</li> </ol>
Trunk Mode Problem	<ol style="list-style-type: none"> <li>1. Modem circuitry problem: Check U5, U6.1, and U17.3 on Control Board.</li> <li>2. Low-speed data problem.</li> </ol>

## REAR COVER ASSEMBLY

The troubleshooting procedures that follow primarily assume a problem has been narrowed to a problem on the RF Board. Transmitter, receiver and synthesizer symptoms/causes are outlined.

Troubleshooting procedures for the Front Cover Assembly list appropriate techniques for locating a problem with the circuits in this assembly.

### Transmitter Troubleshooting

#### Inoperative Or Low Power

Power sources and regulated power supplies should be one of the first areas to check before troubleshooting any transmitter problem. The radio's power source, whether it be a battery or a bench power supply, is especially critical when troubleshooting a portable radio. Current consumption is an excellent troubleshooting tip when troubleshooting a dead or weak transmitter. See Table 6 for details. See the Front Cover Assembly TROUBLESHOOTING procedures if there is a problem in any of the dc supplies to the RF Board.

If the synthesizer is not locked, the radio should be beeping, and flashing "NO LOCK" in the display. See Synthesizer Troubleshooting.

#### NOTE

If the synthesizer does not lock or stay locked at the start of or during a transmission, I/O Microcontroller will not enable or continue the transmission. Check LOCK DETECT at J102/P2 pin 8 for a low or pulsing (not locked) condition.

1. Check for battery power on J102/P2 pin 2.
2. Check 5.4V REG from the Control Board at J102/P2 pin 6 with the transmitter enabled. It should be within  $\pm 0.1$  Vdc. Also check the operation of the TX 5.4V switch (D14.2 and Q4 on Control Board) to insure 5.4 Vdc is being delivered to the RF Board at J101/P1 pin 5 when the PTT button is pressed.
3. Battery power (7.5 Vdc) should be present at the Power Amplifier module pins 2 and 4. If current consumption appears normal (See Table 6) for both high and low power modes, the problem may be antenna T/R switch D1/D2, the low-pass filter circuit or the

antenna switch SW1. If the low-pass filter circuit or the antenna switch have a problem, generally the receiver will also be weak. A shorted or open pin diode may cause transmitter and/or receiver problems.

4. If low RF power is a symptom, check the operation of Power Controller A1 and Q1. PWR SET on J101/P1 pin 1 should be approximately 1.0 Vdc in low power mode and 4.0 Vdc in high power mode. If Q1 is saturated (collector voltage is  $\approx 7.5$  Vdc), troubleshoot the PA for a gain problem. Also check the VCO for low RF drive. Nominal VCO power from pin 1 is 8 dBm.
5. Check Tracking and Channel Data. Reprogram if necessary.

#### Excessive Power Output

Short battery life and possible damage to the PA module may result if this problem occurs in the power controlling circuitry.

1. Check PWR SET from the Control Board. PWR SET on J101/P1 pin 1 should be approximately 1.0 Vdc in low power (1 Watt) mode and 4.0 Vdc in high power (5 Watts) mode. If incorrect, troubleshoot the D/A converter circuits (in Audio Processor U7) on the Control Board. Check Tracking and Channel Data. Reprogram if necessary.
2. The collector of Q1 should be approximately 3.5 Vdc in low power mode and 5.5 Vdc in high power mode. If Q1's collector stays near 7.5 Vdc in receive mode, it is most likely shorted. Temporarily short the emitter and base while monitoring the collector voltage. If the collector voltage falls, there is a problem in Power Controller A1.

#### Will Not Lock Or Stay Locked, Receiver OK

1. Check programming.
2. Check regulated supplies to the synthesizer when PTT is pressed.
3. See Synthesizer Troubleshooting.

#### Frequency Error

If transmit frequency error exists (greater than 2.5 ppm) and the synthesizer stays locked, Reference Oscillator U3 alignment or replacement is necessary. See ALIGNMENT PROCEDURES for details.

The I/O Microcontroller will not enable a transmission if the synthesizer is not locked.

**Modulation Problems**

Modulation problems can be caused by a failure in the audio circuits in the front cover or the modulating circuitry of the RF Board.

1. Insure modulating audio is present on J102/P2 pin 1. A 1 kHz, 600 mV rms TX AUDIO signal should produce 5.0 kHz deviation.

Improper modulation from 300 - 3000 Hz points to a VCO modulation problem. Check VCO A4 pin 4 for the TX AUDIO signal. Suspect A4 if the signal is present and incorrect modulation exists.

2. If improper low-frequency (Channel Guard) modulation exists, first check J102 pin 1 for the proper tone. Next check U3 pin 4 for the tone; suspect C30 if the tone is not present. Replace U3 if the tone is present on pin 4 and incorrect low-frequency modulation exists. See the ALIGNMENT PROCEDURES for details.
3. Check Tracking and Channel Data. Reprogram if necessary.
4. See TROUBLESHOOTING the Front Cover Assembly.

**Modulation Distortion**

Check TX AUDIO for an undistorted signal to the RF Board. The audio signal on J102/P2 pin 1 should appear undistorted at maximum deviation and it should be riding on a 2.7 Vdc bias from U6.2 on the Control Board.

1. If TX AUDIO distortion is minimal and transmitter distortion is excessive, suspect the VCO or the Reference Oscillator on the RF Board.
2. If TX AUDIO is distorted, suspect a defective microphone, mic amps, modulation limiting, or pre-emphasis circuitry.

If audio sensitivity is good the microphone, amplifiers and limiters are probably OK. Regeneration from an open decoupling capacitor or a stage gain too high may make the unit appear to be too sensitive. See TROUBLESHOOTING the Front Cover Assembly.

**Receiver Troubleshooting****Inoperative**

1. Press the Monitor Button, if receiver noise is heard, it can be assumed that most of the receiver's circuitry is good.

2. If the synthesizer is not locked, the radio should be beeping and flashing "NO LOCK" in the LCD. See Synthesizer Troubleshooting.

3. Check RX AUDIO for signal and/or noise. With an RF input modulated at 1 kHz, 3 kHz deviation, RX AUDIO should be 100 - 150 mV rms ( $\approx$  350 mV p-p). If the 1 kHz audio is present, troubleshoot the audio circuits in the Front Cover Assembly. Noise only levels on RX AUDIO should be approximately 700 mV p-p.

4. Check for 7.5 Vdc at RF Amp A6 pin 5 and IF Amp A2 pin 1. Check U6 pin 4 for 5.4 Vdc from A5. Insure TX 5.4V is low in receive mode.

5. Insure the mixer injection from the VCO is present at U5 pin 8. Check the VCO output with a frequency counter. The VCO should be running 45 MHz below the RX frequency. VCO output power level is typically +8 dBm at U5 pin 8 into 50 ohms (mixer still connected).

6. To eliminate a problem in the back-end circuits, follow the below procedure:

- Insure 5.4 Vdc is present on U6 pin 4.
- Connect a frequency counter to U6 pin 5 to monitor the IF. Use an appropriate high impedance probe (or amp).
- Couple a 45 MHz signal from an HF signal generator to the emitter of Q3. Adjust the signal generator level to achieve accurate counting of the IF; the signal generator should be set 10 dBm above the lowest level which gives stable counting of the 455 kHz IF. See ALIGNMENT PROCEDURES if the 2nd IF is in error by more than 90 Hz.

**Low Sensitivity**

Low receiver sensitivity and/or failure of a modulation acceptance bandwidth test indicates a receiver gain or selectivity problem in the IF stages. A bandwidth that is too wide will cause unnecessary noise, detracting from the receiver quieting. If the bandwidth is too narrow squelching could occur at the modulation peaks. Suspect a defective IF filter if one of the above symptoms occurs.

A 12 dB SINAD sensitivity of around -90 dBm indicates a problem with High-IF Amp A2. The module provides a nominal gain of around 17 dB.

A 12 dB SINAD sensitivity of around -100 dBm could be caused by a problem with RF Amp A6. This module provides 8 dB of gain.



### Squelch Problem

A squelch circuit problem (assuming good signal and/or noise is present at J101 pin 4) indicates a problem with the Audio Processor chip on the Control Board. Troubleshooting should begin at the discriminator output. Signal trace through the discriminator amp to the Audio Processor. Check the operation of the noise rectifier to be sure the noise is being converted into the proper dc voltage.

See TROUBLESHOOTING the Front Cover Assembly for details on receiver audio failures. Check Tracking and Channel Data.

### Excessive Distortion

If the measured distortion exceeds the rated specification signal trace starting at the discriminator output and through the audio stages until the fault is isolated. Signal tracing with an oscilloscope proves very useful in locating the trouble areas.

### Synthesizer Troubleshooting

#### Will Not Lock Or Stay Locked

Each time the channel is changed, the PTT Button is pressed or the PTT Button is released, Synthesizer IC U1 is serially loaded with new TX or RX data. If the synthesizer does not lock or stay locked, the following will be observed:

- the radio continuously or intermittently beeps
- "NO LOCK" will flash in the display
- LOCK DETECT (J102 pin 8) will be low or pulsing to flag the I/O Microcontroller of the unlocked condition

If the above condition occurs, the I/O Microcontroller will continue to try to reload U1 with data until the synthesizer locks.

1. Insure the 5.4 Vdc supply to the RF Board is within  $\pm 0.1$  Vdc, 7.5V BATT is present, and TX 5.4 V is low (receive mode only).
2. Monitor STROBE, DATA and ENABLE (on J102 pins 11, 10 and 9 respectively) for pulse activity when a channel is changed. See Figure 8. If these signals are not present, suspect a defective I/O Microcontroller.
3. Check A5 pin 9 for 5.4 Vdc to A4, U2 and U6. If this power source is not present, check A5 pins 7 and 13 for 5.4 Vdc and check A5 pin 11 for 7.5 Vdc. Replace A5 if the inputs are good and the output is not.
4. Using a frequency counter with a high impedance probe or amp, check U1 pin 2 for the 13.2 MHz ( $\pm 100$  Hz at 25°C) signal from Reference Oscillator U3. Replace U3 if this signal is not present and pin 3 is 5.4 Vdc. See ALIGNMENT PROCEDURES for oscillator alignment details.

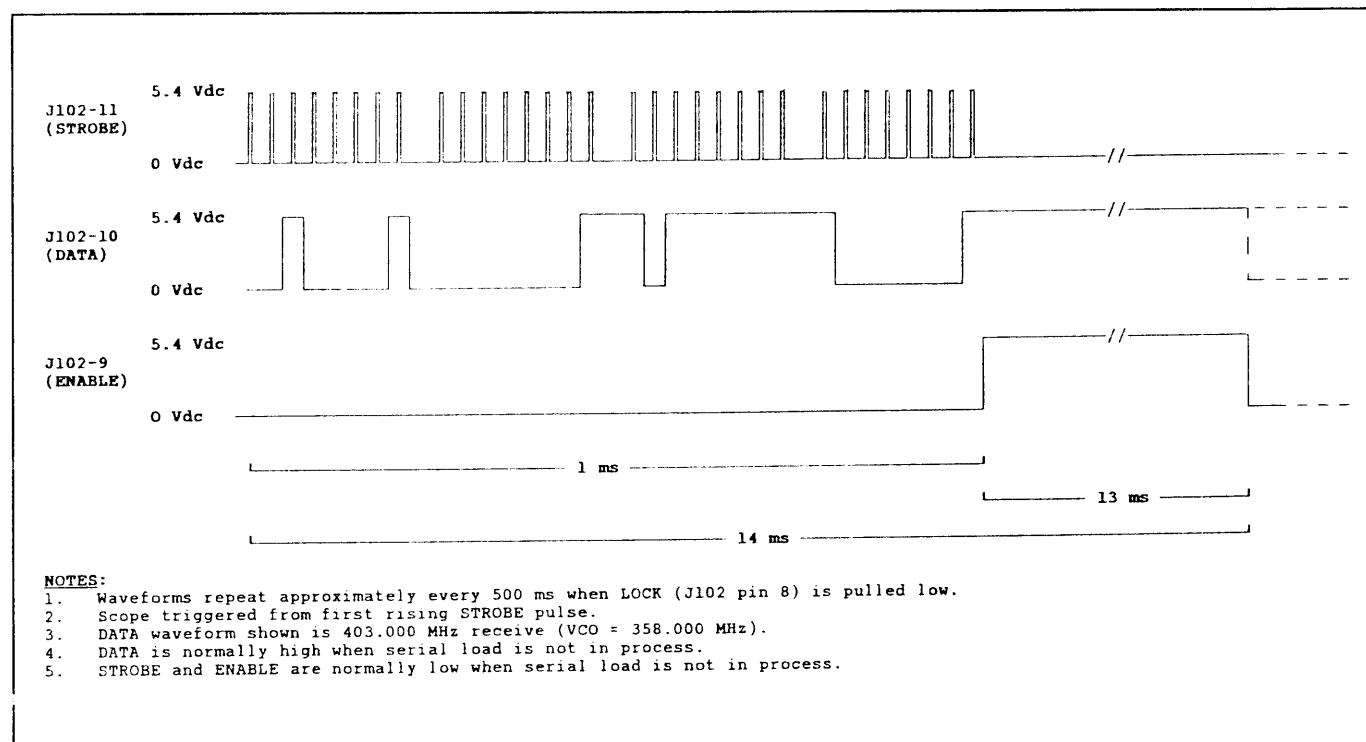


Figure 8 - STROBE, DATA and ENABLE Pulses


5. If LOCK DETECT is low and not pulsing, temporarily pull it high by connecting J102 pin 6 to J102 pin 8. If the radio now operates normally on all test TX and RX channels, replace U1 - the output on pin 9 is defective.
6. Check the VCO output with a frequency counter at A4 pin 9 or by tuning a service monitor to the radio's local oscillator (VCO) signal and loosely coupling the VCO signal into the service monitor. The VCO should be running 45 MHz below the RX frequency. VCO output power level is typically +8 dBm into 50 ohms (mixer still connected).
7. The VCO tuning voltage can be monitored at A4 pin 5. See Table 3 for details. Also check A4 pin 6 for a -3.7 Vdc supply voltage. This supply is developed from the OSC OUTput from U1, D3 and associated components.

8. If a synthesizer lock problem can not be narrowed to a problem in the Rear Cover Assembly, reprogram the inoperative channels and test the unit again. Also see the TROUBLESHOOTING procedures for the Front Cover Assembly.

### Excessive Switching Time

The synthesizer should generally lock within 10 milliseconds after a frequency change.

1. Suspect leaky low-pass filter capacitors C25 or C26 if slow switching time is a symptom. Replace these components with original equipment parts only. See the RF Board parts list for part numbers.
2. Module A5 also influences switching time. Insure the ENABLE pulse is present at A5 pin 4. See Figure 8 for details.

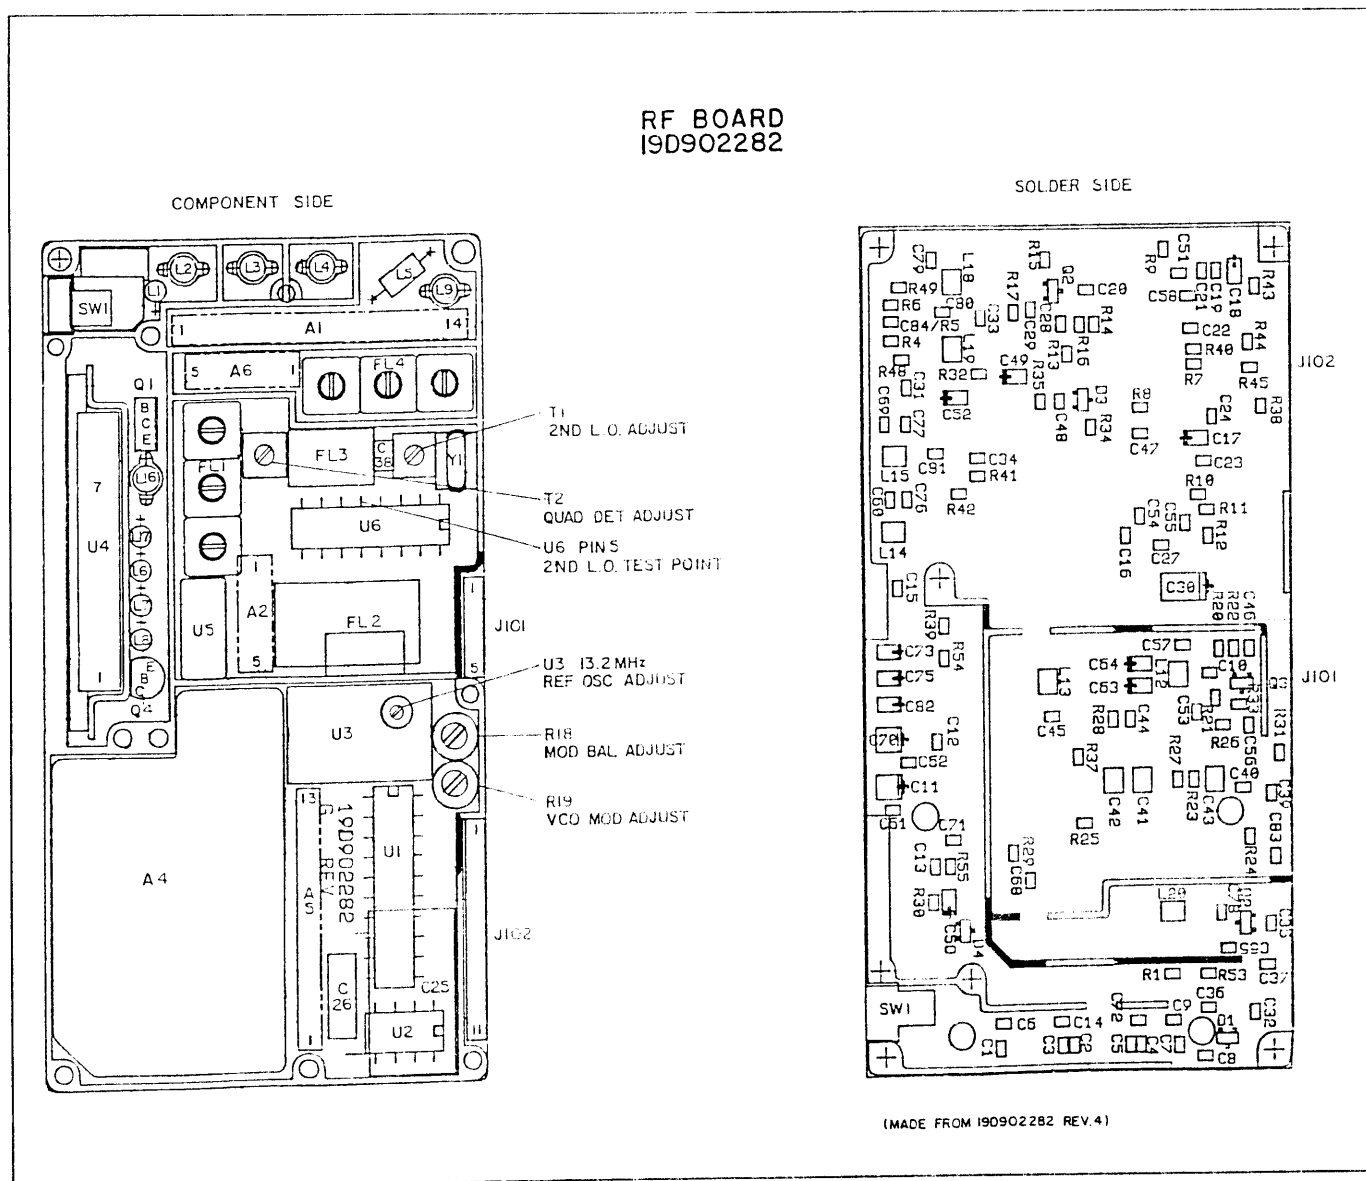

**Figure 9 - RF Board Test Locations**

## FRONT COVER ASSEMBLY

The following outline will help lead the service technician to a problem with the Control Board or other associated control circuits. The Control Board should be removed and electrically extended from the front cover for troubleshooting access. Use the Front Cover Test Accessory Kit adapter and extender cable.

### NOTE

Failure of the lithium battery B1 on the Control Board will erase all personality data stored in the radio.

Use caution when handling the Control Board. Shorting B1 (+), U1 pin 28 or D2 to ground will result in loss of personality.

## Completely Inoperative Radio

### Check Power Supplies

Power supplies should be the first area to check in the event of a completely inoperative unit. The battery fuse is located in the Battery Plate on the bottom of the radio. If the radio is dead, check the fuse. Table 6 lists supply current for various operating modes.

DC power into the radio (7.5 Vdc battery voltage) can be tested by monitoring the input connections (screw mounting points) located on the bottom of the Control Board. If dc power is not present at this point, suspect fuse F1 or the battery plate connections.

Voltage regulators for the Front Cover Assembly circuits are the 5.0 Vdc (+5V) and the 5.4 Vdc (V1) sources. The RF 5.4 Vdc supply (RF5.4) delivers dc power to the RF Board only. Supply outputs can be tested at collector (center terminal) of the associated pass transistor (Q3, Q10 and Q13). The regulated supplies should be stable to within 0.1 Vdc during each operating mode (transmit, receive, standby, program). If all of the regulated supplies are in error check zener reference CR5. Pin 8 of CR5 should be 2.5 Vdc  $\pm$  0.05 Vdc.

A failure of R133 or R57 most likely indicates a shorted decoupling capacitor on the associated supply rail. Temporarily remove the flex connections to assure there is no short on the flex strips or the LCD Board.

Table 6 - Typical Battery Current

OPERATING MODE	BATTERY CURRENT (at 7.5 Vdc)
Program	< 100 mA
Receive (Squelched)	< 100 mA
Receive (Rated Audio)	< 300 mA
Transmit (Low Power)	< 1250 mA
Transmit (High Power)	< 1900 mA

### Check Reset Logic

Monitor RSTOUT at TP2 from the modem IC as the unit is powered up. Trigger the scope on the rising 7.5 Vdc power supply. RSTOUT should stay high for 400 - 600 ms then transition and stay low. If TP2 remains high the radio will be inoperative since the microprocessors are not released from reset.

Check VCB at TP4 if a problem exists with RSTOUT. TP4 should also stay high for 400 - 600 ms after turn on. If this signal is OK, suspect a problem in the modem IC or a shorted input on U11.2. Also check CPURST at U18 pin 25 and verify it is low. If TP4 is not OK, troubleshoot the reset comparators U17.2, U17.1 and the associated RC networks. NOTE: U17 has open-collector outputs. If TP4 remains high, it can be shorted to ground to eliminate a problem with the reset comparator circuit.

Slowly lower the battery supply voltage until TP4 transitions high. This should occur at an approximate battery voltage of 5.4 Vdc. Next, slowly raise the supply voltage and verify that TP4 returns low. There should be less than 0.1 Vdc hysteresis.

Monitor U7 pin 49 when the unit is powered-up; C46's charge should be seen. Pin 49 should reach a final value of 5.4 Vdc within 100 milliseconds after power-up.

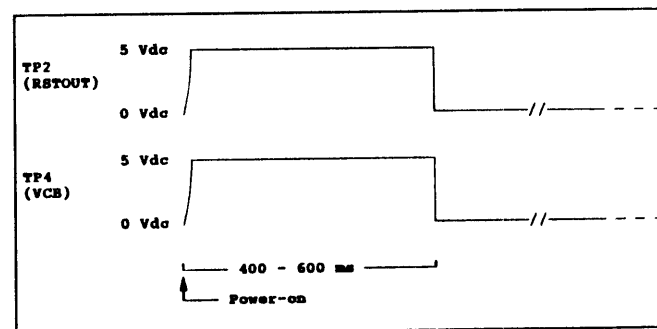


Figure 10 - Reset Waveforms

**Table 7 - Clock Test Points**

TEST POINT	CRYSTAL/IC	FREQUENCY (MHz)	MAX. ERROR (Hz)
OS1	Y4 / U18	2.0000	± 200
TP1	Y1 / U5	11.0592	± 1100
TP7	Y3 / U7	8.0000	± 800

**Check Clocks**

Monitor Test Point OS1 near crystal Y4 on the component side of the printed wire board. NOTE: Use an oscilloscope with a x10 probe or a frequency counter that has a high input impedance (at least 10M ohms). OS1 is the 2.00 MHz clock for the I/O Microcontroller. Replace Y4 if this clock frequency is in error. Suspect Y4 or U18 if no signal is present. Generally, if the crystal is defective (open),  $\approx 2.5$  Vdc will be present at OS1 and no signal will be present.

Check TP1, OSCOUT, for an 11.059 MHz clock from the modem IC to the Personality Microprocessor. NOTE: Use an oscilloscope or a frequency counter that has a high input impedance. U11 pin 13 should be low and pin 12 should be high. Suspect Y1 if this clock frequency is in error. Suspect Y1 or U5 if no signal is present.

The Audio Processor's clock will also have to be operating for proper audio and A/D converter operation. Monitor TP7 for an 8 MHz square-wave output from U7. Replace crystal Y3 if this clock frequency is in error. Suspect Y3 or U7 if the signal is not present.

**Check Keypad Scanning**

Approximately every 50 milliseconds pulse activity should be present on the serial lines to and from the Keypad Flex. See Figure 11. These pulses are loading a data byte into shift register U2 and reading U1 on the Keypad Flex. The Audio Processor is also being read and written to at this time. If these signals are not present, the I/O Microcontroller is not operating properly and it may not be communicating with the Personality Microprocessor.

1. Insure U18 pin 44 is 5 Vdc. Troubleshoot the +5V regulator if it is not.
2. Insure all clocks are operating.
3. Reset the radio by turning it off and back on. Check U18 pin 1 and insure RSTOUT on TP2 is being inverted by U11.2; U18 pin 1 is high when the radio is operating normally.
4. See "Check Inter-processor Communication".

For further troubleshooting procedures related to keypad specific problems, see **Keypad Flex Failures**.

**Check Inter-processor Communication**

The I/O (68HC705) and Personality (80C52) Micros communicate via four lines. UPHSOUT, UPHSIN, UP-DATA and UPCNTRL provide all handshake, data and control signals for message transfers between the two chips. Messages transfers consist of one or more byte transfers.

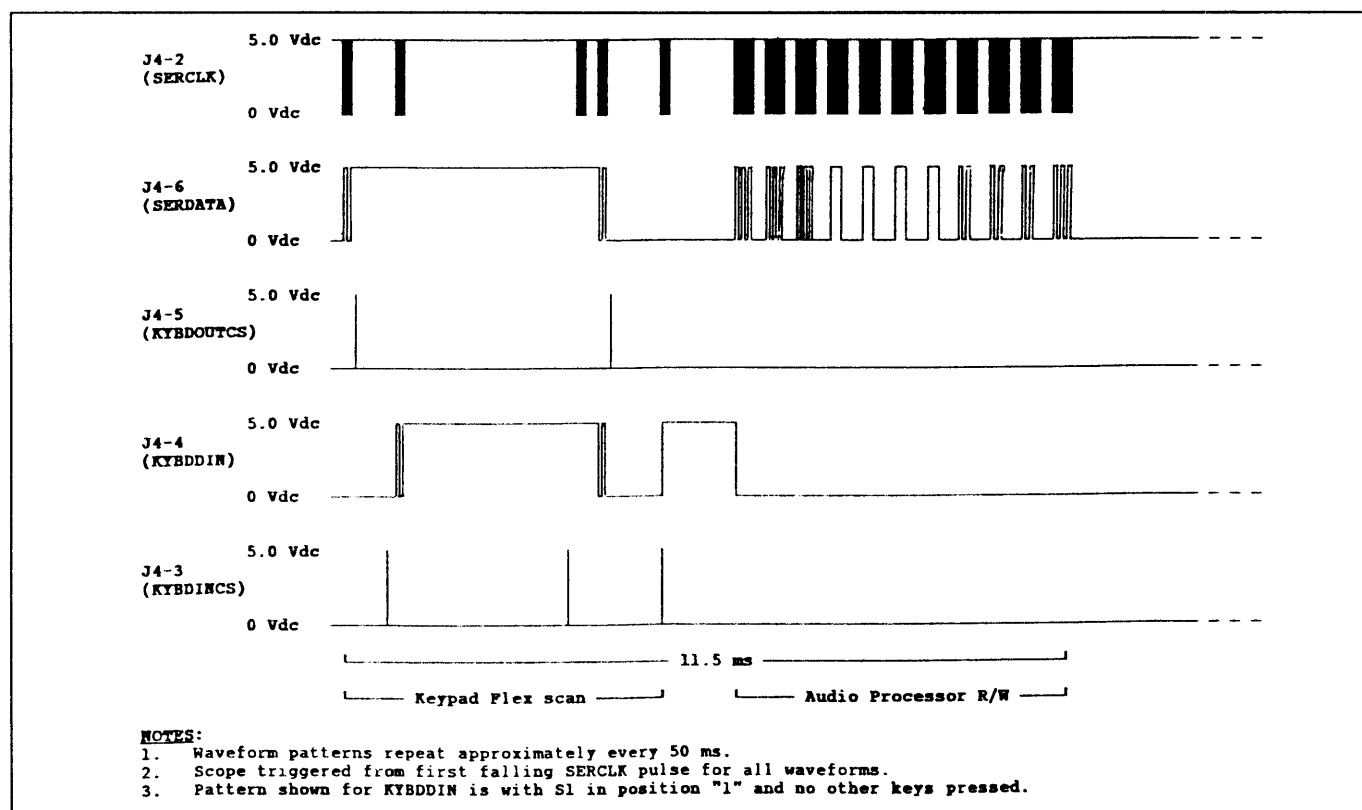


Figure 11 - Keypad Scanning Waveforms

Each processor has a handshake input and a handshake output. A common bidirectional data line, UPDATA, is shared by the chips. A control line, UPCNTRL, is an output from the Personality Micro to the I/O Micro.

Message transfers from the Personality Micro to the I/O Micro are primarily commands which cause the I/O Micro to execute a commanded function. Some examples include power-up status, Keypad Flex scan, LCD load, Audio Processor A/D converter write/read, synthesizer load and tone generation. All Personality to I/O Micro message transfers are initiated by a low pulse on the UPCNTRL.

Message transfers from the I/O Micro to the Personality Micro include status data such as power-up status report, key(s) pressed, UDC device connected, volume control position, synthesizer lock status and squelch status. I/O Micro to Personality Micro transfers are initialized by the I/O Micro pulling its handshake output (UPHSIN) low.

Inter-processor communication failure will generally cause the unit to appear dead at power-up or flash all of the segments in the display and beep.

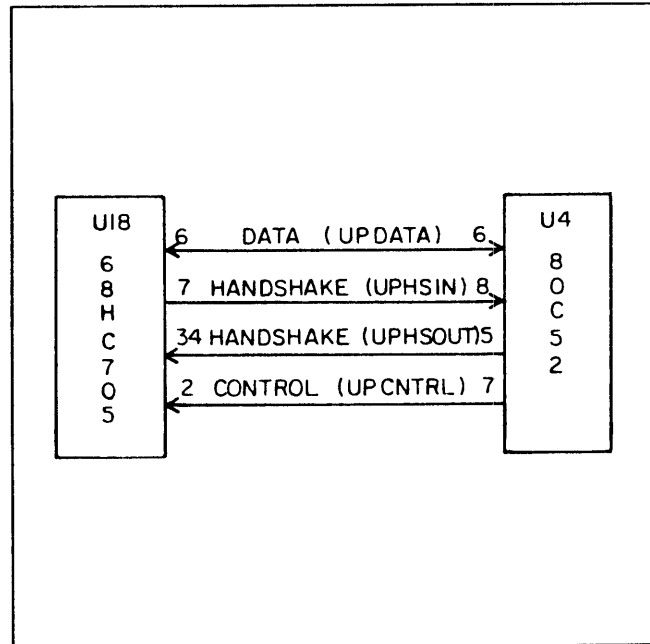


Figure 12 - Inter-Processor Communication

### **Synthesizer Lock Failure**

Each time the channel is changed, the PTT Button is pressed or the PTT Button is released, the I/O Microcontroller serially loads U1 on the RF Board with new TX or RX data. If the synthesizer does not lock or stay locked, the following should be observed:

- the radio continuously or intermittently beeps
- "NO LOCK" flashes in the display
- LOCK DETECT (J102 pin 8) is low or pulsing flagging the I/O Microcontroller of the unlocked condition

If the above condition occurs, the I/O Microcontroller should continue to try to reload U1 with data until the synthesizer locks.

Synthesizer lock failure can be caused by a problem on the RF or Control Boards. If the radio locks only on some frequencies (for example high-side channels) the problem is most likely on the RF Board (the VCO or prescaler circuits for example). The following checks deal with problems associated with the Control Board.

1. Read the radio personality with the PC Programmer and reprogram the unit to insure there is good Channel Data for each channel programmed into the radio. Check the lithium battery.
2. Insure the 5.4 Vdc supply to the RF Board is within  $\pm 0.1$  Vdc, 7.5V BATT is present, and TX 5.4 V is low (RX mode).
3. Monitor STROBE, DATA and ENABLE (on J102/P2 pins 11, 10 and 9 respectively) for pulse activity when a channel is changed. See Figure 8. If these signals are not present, suspect a defective I/O Microcontroller. A failure of only one signal points to an open series resistor on the Control Board or a defective output from U18. NOTE: Temporarily connect LOCK DETECT (J102/P2 pin 8) to ground to view these waveforms.
4. Suspect a problem on the RF Board if all of the above outputs to it are good. See Rear Cover Assembly TROUBLESHOOTING for details.

### **Radio Will Not Program**

#### **Check PC Programmer Power**

The Control Board must first recognize the programming resistor (short to ground at UDC pin 9) with the PC Interface connected. It should then supply 7.5 Vdc (battery power, current limited by Q9.2) to the PC Interface via UDC pin 4 (UDC SW BATT).

1. Attempt to reprogram the unit with the external PC Interface power adapter; if successful, suspect transistors DI5.1, Q2 or the SW1 output from U7 pin 34. U7 pin 34 should be  $\approx 0.5$  Vdc in programming mode and less than 0.1 Vdc otherwise.
2. Less than 0.6 Vdc should be on U7 pin 58 with the PC Interface connected to enable programming mode. If incorrect suspect R47, R91 or the UDC Flex. Most of the A/D conversion circuitry is operational if the volume control and low battery detector is functional.
3. Check RX and TX DATA from/to the radio and PC Programmer. See below.

#### **Check TX Data**

To check the TX DATA input, connect the PC Interface and computer and proceed as follows:

1. Check for logic 0 at J1 pin 5 (UDCTXDATA). Pulses should be seen here when a radio read is attempted. Suspect the UDC Flex if pulses are not present and the pin is high all the time.
2. Check for logic 1 at U4 pin 11 (inverted UDCTXDATA). Pulses should be seen when a radio read is attempted. Suspect U11.3, R7, R8, or CR1 if they are not. If pulses are present on U4, suspect U4 or the A/D converter circuits of U7; the Control Board may not be recognizing program mode.

#### **Check RX Data**

Attempt to read the radio repeatedly and check for a short serial data burst at the following points:

- U4 pin 13 (signal origin)
- Inverter U11.5 pin 10 (UDCRXDATA)
- P1 pin 7 (RX DATA).

Check UDC Flex continuity from P1 pin 7 to UDC J101 pin 7. The short data burst should be present at the UDC pin.

## Transmit Audio Failures

### Internal Microphone Audio Failure

With no external option connected to the UDC, U7 pin 58 should be 5.4 Vdc. The I/O Microcontroller should enable the internal mic circuit via the Audio Processor when the radio is turned on.

1. Check J1/P1 pin 14 for an internal mic dc bias of  $\approx 2.2$  Vdc. If this voltage is near 2.7 Vdc, suspect an open UDC Flex or MK1.
2. Average speech into the front cover should produce 10 - 30 mV rms at J1/P1 pin 14.
3. Op Amp U19.2 should provide a signal (BUFINTMIC) level 7 to 10 times greater than the mic audio. Diode D1 begins limiting at about 350 mV rms output.

### External Microphone Audio Failure

1. Insure the I/O Microcontroller is recognizing the externally connected option. The voltage on U7 pin 58 should be approximately 2.5 Vdc with the external

mic connected. This voltage is developed from voltage divider R91, R47 and the resistor in the external option.

2. Check for  $\approx 2.7$  Vdc microphone bias at UDC pin 12 and J1/P1 pin 12. ( $\approx 2.2$  Vdc with the external microphone attached). If this bias is incorrect, suspect resistor R69.
3. If the internal microphone is operating normally, suspect the UDC Flex or Op Amp U19.1. Connect an external microphone and check the audio level at J1 pin 12. Average speech in the microphone should produce 10 - 30 mV rms here. Signal on U19.1 pin 1 (BUFINTMIC) should be 7 to 10 times greater than EXT MIC HI.

### Complete Mic Audio Failure

If both the external and internal microphones are not functioning apply an ac coupled 110 mV rms, 1 kHz tone to the UDC EXT MIC HI input using the TQ-0609 Test Box. Select switch position 6 (external mic) on the Test Box and turn the radio off and back on so it will recognize the external option. Key the radio. Typical signal levels with radio keyed are shown in Table 8.

**Table 8 - Transmitter Audio Signal Levels  
with 110 mV rms, 1 kHz EXT MIC input**

TEST LOCATION	LEVEL (mV p-p)	COMMENT
U19 pin 1 (TP9)	260	External Mic Amp Output (BUFEXTMIC)
U7 pin 13	260	Audio Processor External Mic Input
U7 pin 26	2700 *	Audio Processor TX Audio Output
U6 pin 7 (P2 pin 1)	1800 *	TX Audio To RF Board (RFTXAUD)

\* Signal levels with no Channel Guard modulation.

## Receive Audio Failures

Verify that discriminator audio from the RF Board is present at J101/P1 pin 4. Typical signal level is 100 - 150 mV rms (  $\approx$  350 mV p-p) for 1 kHz tone, 3 kHz deviation. Noise only levels on RX AUDIO will typically be 700 mV p-p.

### Squelch Circuits

There should be a dc voltage on U7 pin 4 between 2.7 Vdc and 5.0 Vdc (proportional to receiver noise).

Check the squelch opening Tracking Data parameters using the PC Programmer. Higher numbers should make

squelch open at lower signal levels, and lower numbers should make squelch open at higher signal levels. Typical squelch opening Tracking Data values are 90 to C0 hex. Values below 78 should always squelch the radio and values above E0 should always unsquelch the radio. If the radio does not operate as described, suspect C86, C92 or the Audio Processor IC.

### Audio Path

Typical audio levels with the volume control fully clockwise and 100 mV rms, 1 kHz tone from the discriminator are shown in Table 10.

**Table 9 - Approximate Receiver Noise and Signal Levels**

TEST LOCATION	NO RF SIGNAL (noise levels)	STRONG RF SIGNAL (no modulation)
J101/P1 pin 4	700 mV p-p	0 V p-p
U8 pin 8	2100 mV p-p	0 V p-p
U7 pin 3	650 mV p-p	0 V p-p
U7 pin 56	3.2 V dc	2.7 V dc
U7 pin 55	3.5 V dc	2.7 V dc

**Table 10 - Typical Receiver Audio Levels At Maximum Volume**

TEST LOCATION	LEVEL (mV p-p)	COMMENT
J101/P1 pin 4	300	RX Output (RXDISCOUT)
U8 pin 8	900	RX Buffer Output (BUFDISC)
U7 pin 18	450	Audio Processor Output
U7 pin 19	120	Audio Processor Input
U7 pin 27	530	Audio Processor RX Output
U8 pin 14	290	Audio Preamp Output (BUFRXOUT)
U10 pin 7	50	Speaker Audio Amp Input
U10 pin 1	3700	Speaker Audio Amp Output (Differential)
U10 pin 3	3700	Speaker Audio Amp Output (Differential)



## Volume Control

The volume control operates by digitizing the dc voltage from the volume potentiometer wiper and varying the digital attenuator in the Audio Processor.

1. Check the dc voltage at J4/P4 pin 9. It should be near 0 Vdc with the volume control fully counterclockwise and near 5.0 Vdc with the control fully clockwise. If not, check the volume control and Keypad Flex.
2. The volume control wiper voltage should also be present at U7 pin 59. If not, suspect J4/P4 or R111.
3. If there is a problem with volume control and wiper voltage is present at U7 pin 59, suspect the U7.

## Speaker Amplifier

1. Check the Battery Plate speaker contacts for proper connections.
2. If the speaker is inoperative and audio is present on UDC pin 3 (or U7 pin 27 and U8 pin 14, see Table 10), check U10 pin 2 for battery power from Q11. Audio should be on U10 pin 7.
3. Using a scope, check U10's differential outputs on pins 1 and 3. Replace U10 if power and audio inputs are good and the differential outputs are not.

The internal speaker can be quickly tested by applying audio from a signal generator to the appropriate pins on the Battery Plate with the battery removed. With the Front Cover face-down on the bench, apply audio from a signal generator to the second and third pins from the left. The speaker impedance is 24 ohms and it is a 1/2 Watt device.

## Keypad Flex Failures

The keypad is arranged as a matrix of 4-columns by 8-rows. Columns 0 (C0) through 2 (C2) are connected to the buttons on the flex. Column 3 (C3) is connected to S1's common terminal (the Control Knob switch). See the charts on the Keypad Flex schematic for details on column-to-row connections and the coding of S1.

The I/O Micro serially reads the matrix as follows (See Figure 11):

- Using SERCLK (CLOCK) and SERDATA (DATA OUT), a byte is clocked into U2 on the Keypad Flex.
- The byte is then latched to the Q outputs of U2 via KYBDOUTCS (SR STB), the strobe pulse; one of the C0 - C3 columns is set low.

- KYBDINCS (SER ENA) is pulsed to latch new instantaneous row data into shift register U1 on the Keypad Flex. (Any row with a closed switch contact will latch a 0 into U1 for that row. NOTE: Switch S1 is gray-coded; see the chart on the schematic.)

- Using SERCLK (CLOCK) and KYBDDIN (DATA IN), the I/O Micro clocks the new row data into itself.

- This process is repeated twice every 50 ms, with the I/O Micro scanning each column by setting its column output low.

Shift register U2 also contains outputs for LCD command/data selection (DISP C/D) and backlight control (DISP LIGHT). They are clocked-out as part of the same byte that sets column outputs.

The Keypad Flex circuitry can be easily tested using the Front Cover Test Accessory Kit. Troubleshooting information is presented below.

1. Insure the flex is properly connected to the Control Board.
2. Insure 5.0 Vdc is present on pin 16 of U1 and U2.
3. Verify the C0 - C3 outputs of U2 on the flex are being sequentially set to logic 0. If they are not and the serial inputs are good, replace U2. See Figure 11.
4. Suspect D5, D6 or D8 if all rows on a single column are inoperative and the corresponding U2 output is OK. For example, if D8 opens, the Monitor and PTT Buttons will not operate, but the Control Knob will operate normally.
5. Suspect one of the series connecting 1K resistors, the 100K pull-ups or an input of U1 on the Keypad Flex if the same row in each column is inoperative. For example, if R9 opens, PTT and some positions of the Control Knob will not operate, but the Monitor Button will operate normally.
6. Monitor KYBDDIN (DATA IN) for a change of pulse pattern when a button is pressed or the Control Knob is rotated. See Figure 11.

## LCD Board Failures

Follow the below steps if a problem on the LCD Board is suspected. Remove the board and use the Front Cover Test Accessory Kit if it is necessary to gain access to all of the test locations. See LBI-38518 for details.

1. Since the Keypad Flex interconnects the LCD Board to the Control Board, check associated flex connections first. Failures of the LCD Board are generally due to a problem with J10/P10, J4/P4 or DS3.

#### NOTE

Avoid touching the J10/P10 Zebra connector. Body oils and/or dirt may contaminate the contacts.

2. Insure 5.0 Vdc is on J10 pin 1. The display board consumes less than 1.5 mA with all segments and backlighting off.
3. Inspect display DS3 and insure it is tightly secured and there are no cracks in it.
4. U2 on the Keypad Flex must be operating properly for the display to function. The Q5 output from U2 is the Command/Data (DISP C/D) line to the display controller chip. Check J10/P10 pin 2 for pulse activity when the display is updated.
5. Check voltage divider R2 - R5 and insure proper LCD reference voltages are being delivered to U1 pins 3, 4 and 5. The measurements should be within  $\pm 0.3$  Vdc of the values listed on the Keypad Flex schematic.
6. Monitor U1 pin 2 with an oscilloscope. A test pad is provided. Negative-going pulse pairs should be present spaced 4 milliseconds apart. The pulses will be approximately 30  $\mu$ s wide. Suspect R1 or U1 if this signal is not present.
7. Monitor J10/P10 pins 4 and 5 for pulse activity. See Figure 11. SERDATA (DATA OUT) and SERCLK (CLOCK) from the Control Board should be seen here. These signals from the I/O Micro are writing/reading the Keypad Flex, writing/reading the Audio Processor IC and writing to the LCD controller/driver IC.

#### Display/Keypad Backlighting Problems

1. With the PC Programmer, insure backlighting is enabled for the particular channel(s).
2. Monitor J10/P10 pin 3 (DISP LIGHT). It should go high when the Control Knob is rotated. Suspect U2 on the Keypad Flex if this signal does not change.
3. On the LCD Board, check Q2's collector. It should be less than 1.0 Vdc with backlighting on.

4. On the LCD Board, check Q1's collector. It should be greater than 4.0 Vdc with backlighting on.
5. If there is a problem with keypad backlighting on Scan and System model radios (with LCD backlighting OK), suspect the J10/P10 pin 8 contact.

#### Trunked Mode Problems

The following troubleshooting procedure assumes all conventional mode functions are operating properly and a trunk mode problem exists. This procedure gives basic signal tracing steps.

#### Modem TX Data

1. Monitor modem U5 pin 21 (MODTXDATA) for 9600 baud pulses when a trunk call is attempted. Signal level should be  $> 3$  Vp-p with rise and fall times  $< 100$  microseconds. If no pulses are present there is a communication problem between U4 and U5, or U5 is defective.
2. Check U14 pin 9. It should be high for UHF applications.
3. Stage U6.1 and associated RC networks filter or "round" the data pulses to a signal which can modulate the FM transmitter. Check U6 pin 1 for a 9600 baud "rounded" signal at 12 mVp-p. Suspect C42, C81 or U6 if this signal is incorrect. Suspect C42, C81 or C88 if the output is skewed.
4. Ensure the 9600 baud signal is on U7 pin 26 at a level of 2.0 Vp-p. Suspect U7 if the signal level is incorrect.
5. Check U6 pin 7 (RFTXAUD) for the 9600 baud signal to the RF Board. Signal into the RF Board should be 800 mVp-p.

#### Modem RX Data

1. Monitor U5 pin 19 (MODRXDATA) for demodulated data when the radio is receiving 9600 baud transmissions. Signal level should be approximately 5.0 Vp-p. If pulses are not present, suspect comparator U17.3 or integrating capacitor C80.
2. U5 should interrupt U4 when it receives valid data. Check U5 pin 24 for low going pulses when the radio is receiving data transmissions. Suspect U4 if the data pulses are present and U5 does not interrupt U4.
3. If U4 is being interrupted by U5 when a valid data transmission is received and the radio does not recognize the transmission, suspect U4.



## COMPONENT REPLACEMENT

### SURFACE MOUNTED COMPONENTS

Surface mounted "chip" components should always be replaced using a temperature-controlled soldering system. The soldering tools may be either a temperature-controlled soldering iron or a temperature-controlled hot-air soldering station. A hot-air system is recommended for the removal of components on the multi-layer boards utilized throughout the radio. With either soldering system, a temperature of 700°F (371°C) should be maintained.

The below procedures outline the removal and replacement of surface mounted components. If a hot-air soldering system is employed, see the manufacturer's operating instructions for detailed information on the use of your system.

#### CAUTION

Avoid applying heat to the body of any chip component when using standard soldering methods. Heat should be applied only to the metallized terminals of the components. Hot-air systems do not damage the components since the heat is quickly and evenly distributed to the external surface of the component.

#### CAUTION

As the radio contains many static sensitive components, observe static handling precautions during all service procedures.

### SURFACE MOUNTED COMPONENT REMOVAL

1. Grip the component with tweezers or small needle-nose pliers.
2. Alternately heat the metallized terminal ends of the component with the soldering iron. If a hot-air system is used, direct the heat to the terminals of the component. Use extreme care with the soldering equipment to prevent damage to the printed wire board (PWB) and the surrounding components.
3. When the solder on all terminals is liquefied, gently remove the component. Excessive force may cause the PWB pads to separate from the board if all solder is not completely liquefied.

4. It may be necessary to remove excess solder using a vacuum de-soldering tool or Solderwick®. Again, use great care when de-soldering or soldering on the printed wire boards. It may also be necessary to remove the epoxy adhesive that was under the component.

### SURFACE MOUNTED COMPONENT REPLACEMENT

1. "Tin" one terminal end of the new component and the corresponding pad on the PWB. Use as little solder as possible.
2. Place the component on the PWB pads, observing proper orientation for capacitors, diodes, transistors, etc.
3. Simultaneously touch the "tinned" terminal end and the "tinned" pad with the soldering iron. Slightly press the component down on the board as the solder is liquefied. Solder all terminals, allowing the component time to cool between each application of heat. Do not apply heat for an excessive length of time and do not use excessive solder.

With a hot-air system, "tin" all terminals and apply heat until all "tinned" areas are melted and the component is seated in place. It may be necessary to slightly press the component down on the board. Touch-up the soldered connections with a standard soldering iron if needed. Do not use excessive solder.

4. Allow the component and the board to cool and then remove all flux from the area using alcohol or another Ericsson GE approved flux remover.

#### CAUTION

Some chemicals may damage the internal and external plastic and rubber parts of the radio.

### SURFACE MOUNTED INTEGRATED CIRCUIT REPLACEMENT

Soldering and de-soldering techniques of the surface mounted ICs are similar to the above outlined procedures for the surface mounted chip components. Use extreme care and observe static precautions when removing or replacing the defective (or suspect) ICs. This will prevent any damage to the printed wire board or the surrounding circuitry.

Replacement of the surface mounted ICs is best completed using a hot-air soldering system. The ICs can easily be removed and installed using hot-air. See the manufacturers instructions for complete details on tip selection and other operating instructions unique to your system.

If a hot-air system is not available, the service technician may wish to clip the pins near the body of the defective IC and remove it. The pins can then be removed from the PWB with a standard soldering iron and tweezers, and the new IC installed. It should not be necessary to "tin" any of the IC pins before the installation process.

## MODULE REPLACEMENT

The modules, all of which are located on the RF Board, are very reliable devices. Before replacing any of the modules, check the associated circuitry thoroughly to insure there is not a problem elsewhere. If replacement is necessary, follow the below procedures.

All of the component lead holes on the RF Board for the modules are plated through from the top to the bottom of the board. This allows for easy removal and replacement of the modules as long as appropriate soldering techniques are observed. Always observe static precautions when handling the board.

To remove the PA module, it is first necessary to remove the hardware which supports it. Two Torx® screws and a support bracket secure the module to the component side eggcrate casting. Two Torx® screws also secure the VCO to the board.

To remove a module, position the RF Board in a work vice (face down, chip components up) and remove the solder from the plated-through points at the appropriate pins. If a hot-air system is employed, use an appropriate tip that will localize the heat on the pins and not on surrounding chip components. Solderwick® or a vacuum desoldering iron will also remove the solder if a hot-air station is not available. When all solder has been removed or liquefied, the module should drop out of the eggcrate casting.

To install a module, clean any solder from the plated-through holes and clean all flux from the board. Next, install the replacement module making sure that all pins align in the proper holes. Resolder the pins to the board. Clean the flux from the board using an approved solvent and clip any excess lead length.

## WEATHERPROOF INTEGRITY

The M-PA radio is designed to meet the MIL-810C & D environmental specifications. The internal circuitry

is protected from moisture by appropriate seals. Rear Cover Assembly seals include the Front/Rear Cover Assembly gasket and the antenna insert gaskets. Front Cover Assembly seals include the speaker/microphone seal, the battery plate seal, and the volume and channel control seals. The UDC/Monitor Button/PTT Assembly is also designed to seal out moisture.

These seals should be inspected during any disassembly/reassembly process for cracks and tears. A defective seal warrants replacement. See the Mechanical Parts breakdown drawings and the Parts Lists for locations and part numbers for these seals. When installing a new seal, make sure it is seated properly before reassembly.

## INTERNAL LITHIUM BATTERY

All personality data is stored in RAM IC U1 on the Control Board. This data includes TX and RX operating frequencies, Channel Guard tones, CCT information, Tracking Data, etc.. The lithium battery on the Control Board supplies keep-alive power to this RAM IC when the radio is turned off. This battery should be changed every 3 to 5 years.

Before replacing the battery, copy the personality data to the PC computer. The battery can be replaced without losing the personality data stored in the radio by following the below procedure.

1. Remove the Control Board. See DISASSEMBLY/REASSEMBLY instructions. Use caution when handling the board; do not short the connections between the lithium battery, D2 and the RAM IC. Also observe static handling precautions.
2. Using clip leads, apply power (7.0 - 9.0 Vdc) to the Control Board at the bottom mounting holes. OBSERVE POLARITY. See Figure 13.
3. Remove the plastic cover from the lithium battery. This battery's case is positive polarity, opposite of what would be expected.
4. Unplug and remove the battery from the support and contact.
5. Carefully install the new battery in the support, plugging the negative terminal into the contact. Record installation date.
6. Install the plastic cover over the new battery.
7. Remove power from the board.
8. Reassemble the radio and test for proper operation.

## BATTERY PACKS

Rechargeable battery packs available for use with the portable radio include medium and extra high capacity. All of the packs are factory sealed and are not field serviceable other than properly charging, and cleaning the contacts.

Radio contacts located on the top of the pack include switched power, ground, the speaker enabling contacts and a continuous power contact. Four charging contacts are located on the rear side of the battery pack. These four contacts provide connections to the slip-in type chargers or vehicular chargers/repeaters while the battery pack is still connected to the unit. The battery charging contacts are diode protected from external shorts.

Chargers are available with nominal charge times of 1 (rapid) and 14 (standard) hours. Combinations include single (1) and multi (5) position, standard and rapid charge units. The chargers utilize an internal thermistor in the battery pack to sense temperature and automatical-

ly control charge rate of the battery. This allows for a maximum charge rate without overheating the battery. All battery packs can be charged in less than 1 1/2 hours with the rapid type chargers. Nominal full charge time in a standard charger is 14 hours. Figure 14 outlines a typical battery pack.

## CHARGING THE BATTERY PACKS

After receiving a new battery pack from the factory, it should be fully charged before it is placed into service. This also applies to batteries that have been stored for long periods. For specific instructions for the particular charger, refer to the applicable charger's Operating Manual.

A fully charged battery pack should provide an open terminal voltage greater than 7.5 Vdc (typically 9 Vdc). A fully discharged battery pack should be no less than 6 Vdc. When the battery pack drops below 6.8 Vdc the radio will warn the operator with an alert tone.

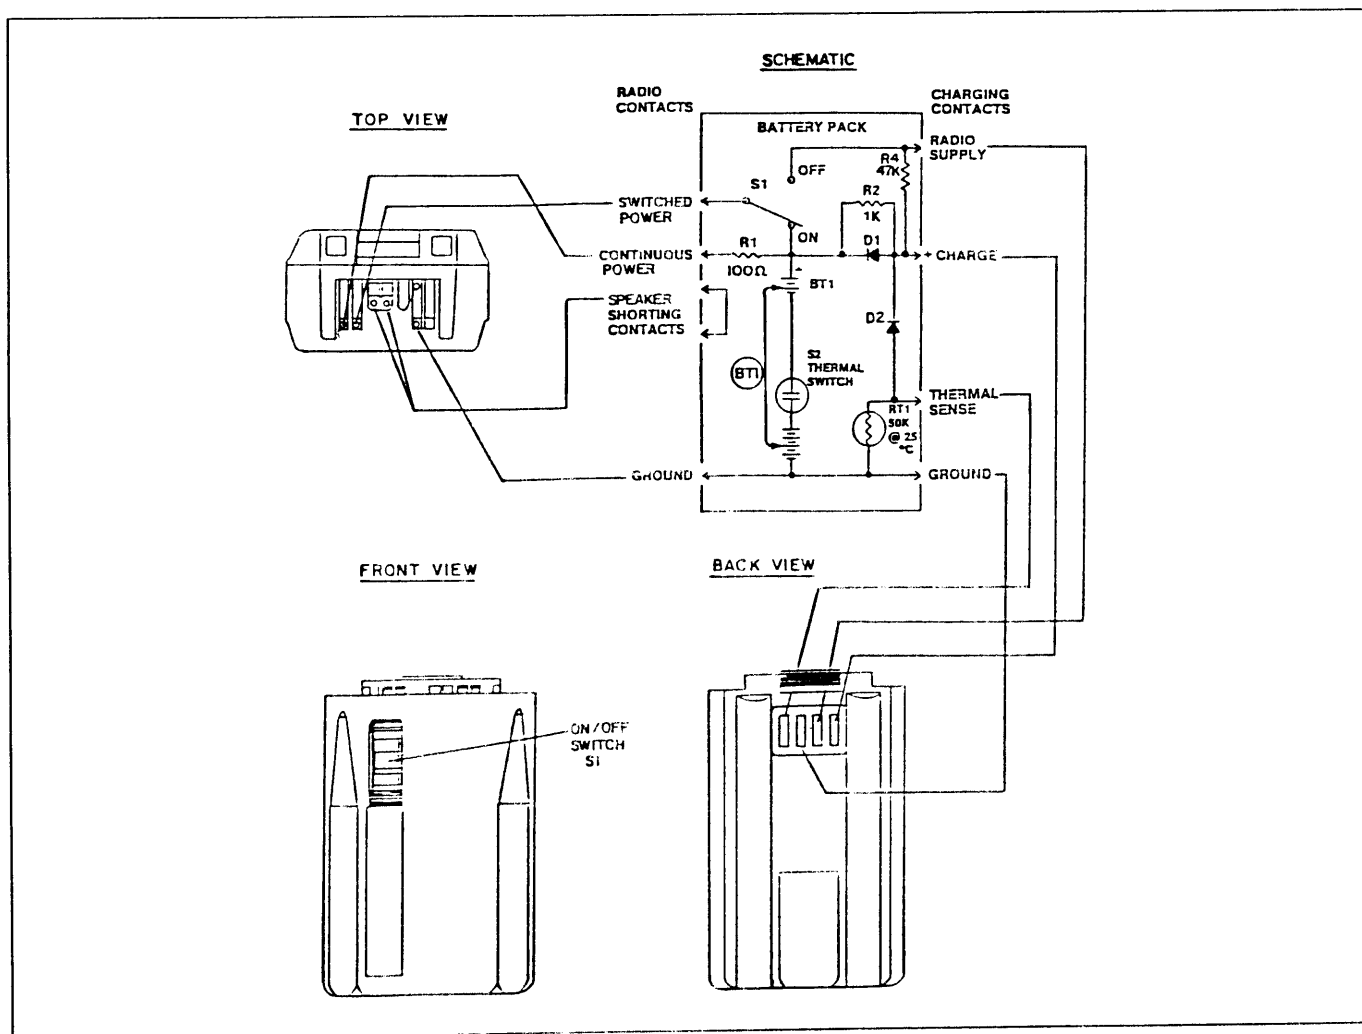


Figure 14 - Battery Packs

Rechargeable batteries can develop a condition of reduced capacity sometimes called "Memory Effect". This condition can occur when a battery is continuously charged for long periods of time or when a regularly performed duty cycle allows the battery to expend only a limited portion of its capacity.

If the battery pack is seldom used and left on a continuous charge for long periods, it may develop reduced capacity. On the first discharge cycle, the capacity may be significantly lowered, reducing useful service hours.

Any rechargeable battery pack showing signs of reduced capacity should be checked before being replaced. If reduced capacity is in fact a problem, the following procedure may restore capacity:

1. Discharge the battery pack at a normal discharge rate until the output voltage is approximately 1 Volt per cell. This equals 6 Volts output for the M-PA battery packs. Refer to Figure 15. Note the flatness of the discharge curve from 0% - 90%. Experience shows discharging below the "knee" is not necessary.
2. Complete a full charge cycle using an Ericsson GE charger.
3. Repeat steps 1 and 2. Performing this deep cycle at least twice should be sufficient to restore battery pack capacity.

#### NOTE

This procedure is easily completed using Discharge Analyzer 19B801506P9 and Rapid Multi-Charger 19B801506P16 or P18.

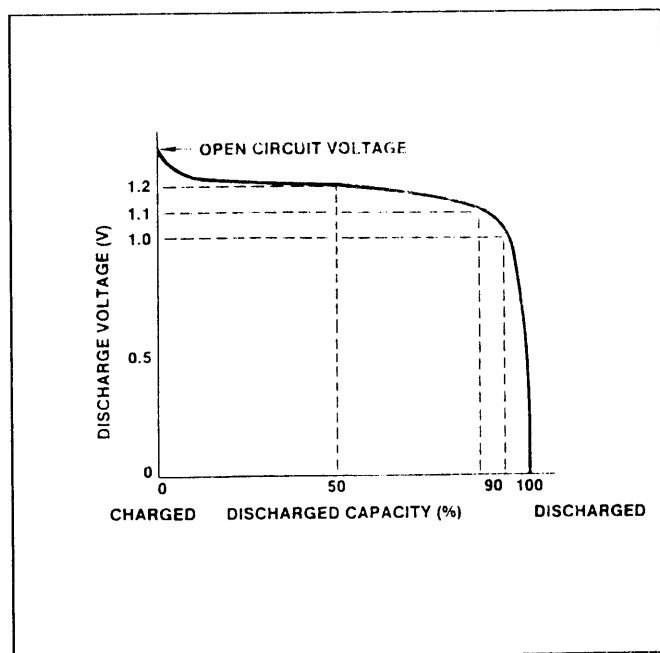


Figure 15 - Typical Cell Discharge Curve

## DISPOSAL OF RECHARGEABLE BATTERIES

Under specific state laws, it may be illegal to dispose of rechargeable batteries, rechargeable battery packs and/or products powered by rechargeable batteries except in accordance with specific procedures. Special collection systems are in place in certain states. Call Toll Free 1-800-822-9362 for specific procedures for returning rechargeable batteries in your state.

## CONTROL KNOB STOP PLATE

A stop plate is located under the Control Knob. This plate can be repositioned, if desired, to limit the number of unique Control Knob positions. The stop plate is factory placed for 15 positions unless 16 unique factory programmed positions are ordered.

### MODIFICATION PROCEDURE

Follow the below procedure if repositioning of the stop plate is desired.

1. Remove the Control Knob using an M1.5 hex wrench.
2. Lift the stop plate using small needle-nose pliers.
3. Reposition the stop plate by aligning the raised bar to the channel marking one number higher than the number of positions required. For example, if 8 unique positions are required, align the bar to the "9". See Figure 16. If 16 positions are required, do not reinstall the stop plate.
4. Replace the Control Knob and torque the set screw to 3 lb./in.. The set screw must align on the flat area of the switch shaft. Test for proper operation.


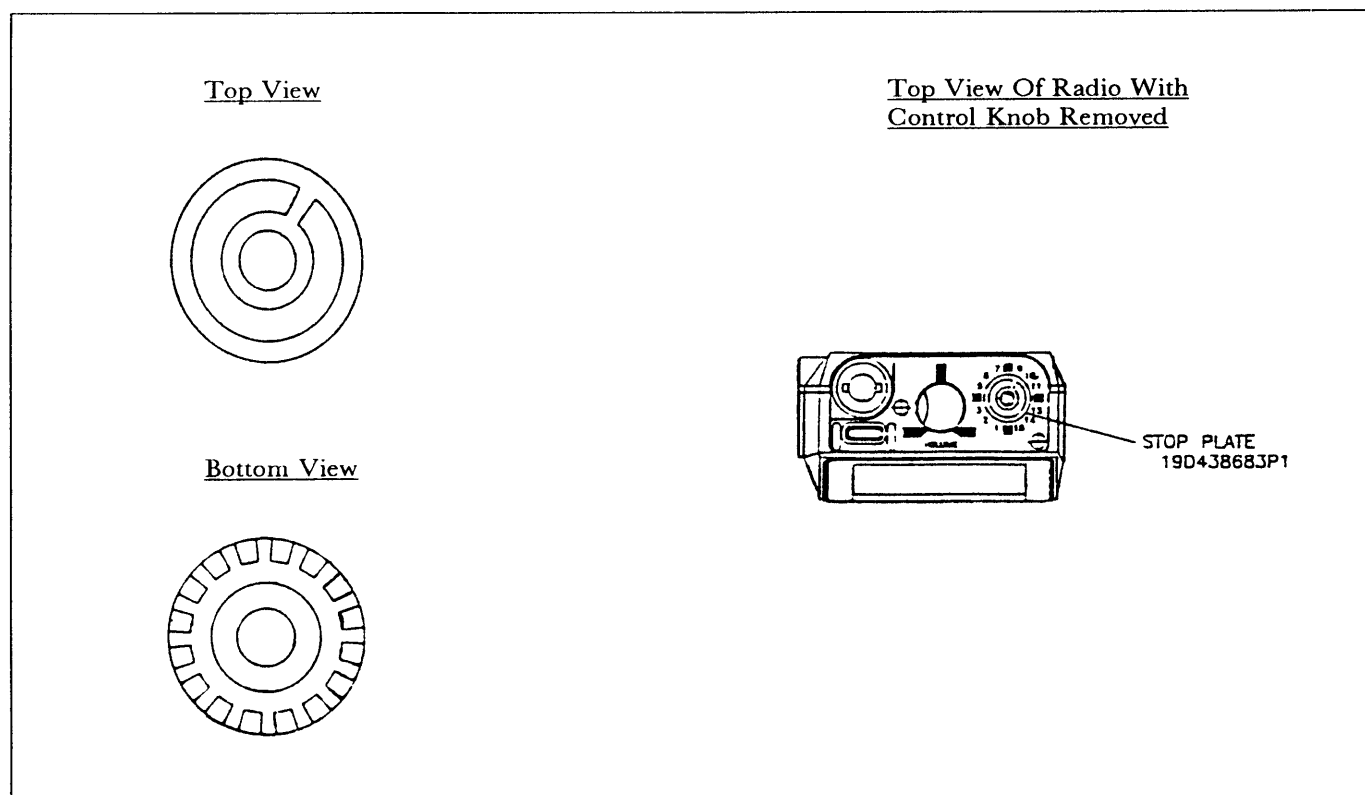


Figure 16 - Control Knob Stop Plate 19D438683P1




Ericsson GE Mobile Communications Inc.  
Mountain View Road • Lynchburg, Virginia 24502



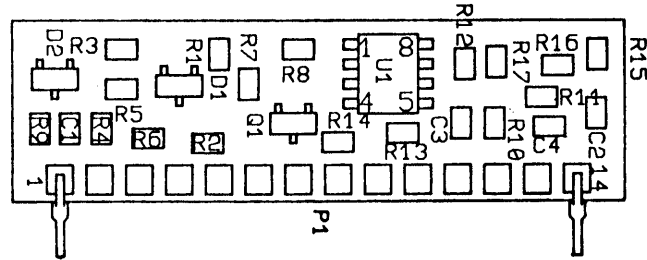

(19C337063, Rev. 1)

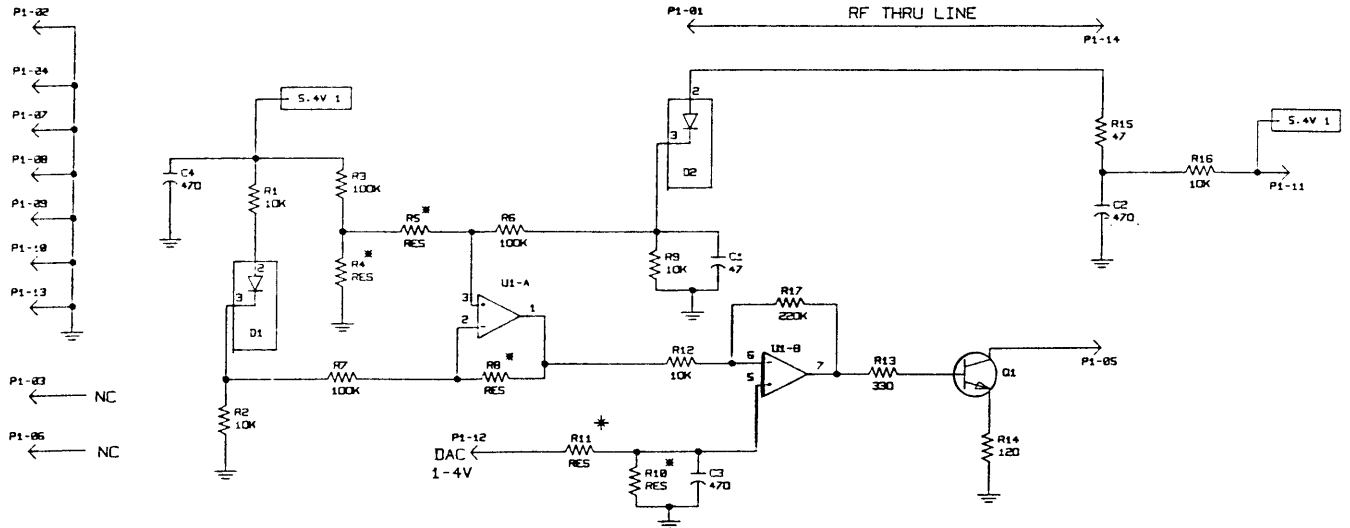


POWER AND GROUND CONNECTIONS		
ITEM	5.4V	GROUND
U1	PIN 8	PIN 4

FREQUENCY DEPENDENT PARTS		
ITEM	VHF (G1)	UHF (G3)
R4	10K	4.7K
R5	100K	68K
R8	100K	68K
R10	10K	22K
R11	10K	6.8K


(19C337315, Rev. 1)

## RF BOARD

POWER CONTROLLER A1  
19C337063G3

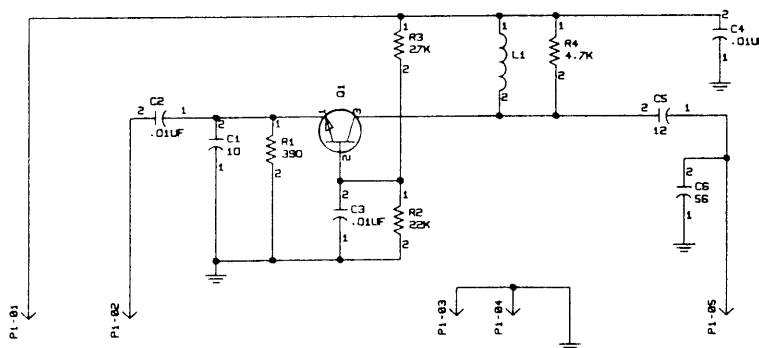




(19C337062, Rev. 0)

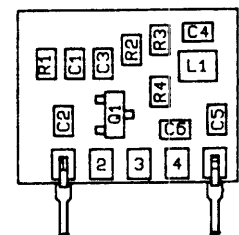

(19C336876, Rev. 0)



## RF BOARD

IF AMPLIFIER A2  
19C336876G1




VCO A4  
19D438605

(19D438604, Sh. 2, Rev. 3)

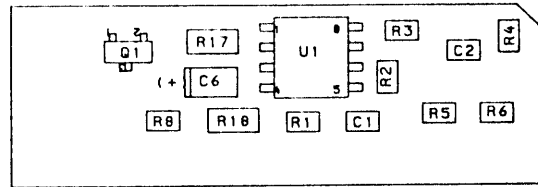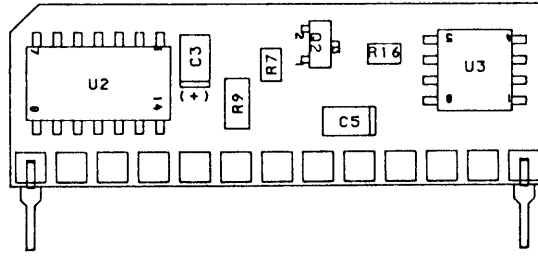


(19C852056, Sh. 1, Rev. 0)

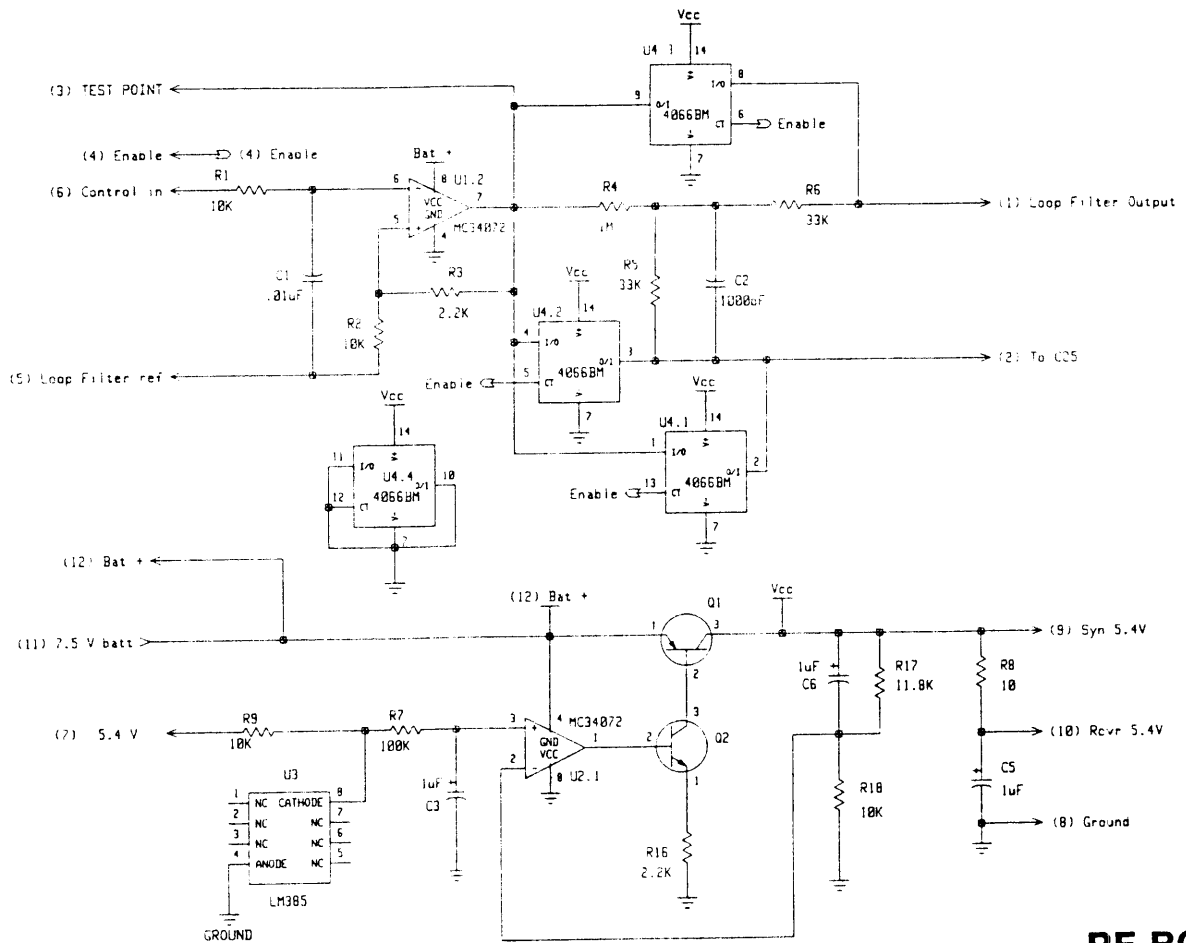


(19C852057, Sh. 1, Rev. 0)

**RF BOARD**

PLL LOW-PASS FILTER/REGULATOR A5  
19C852056G1

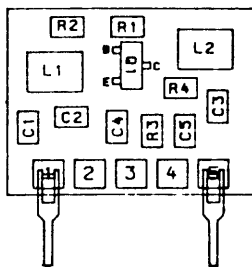


(19B235081, Sh. 1, Rev. 2)

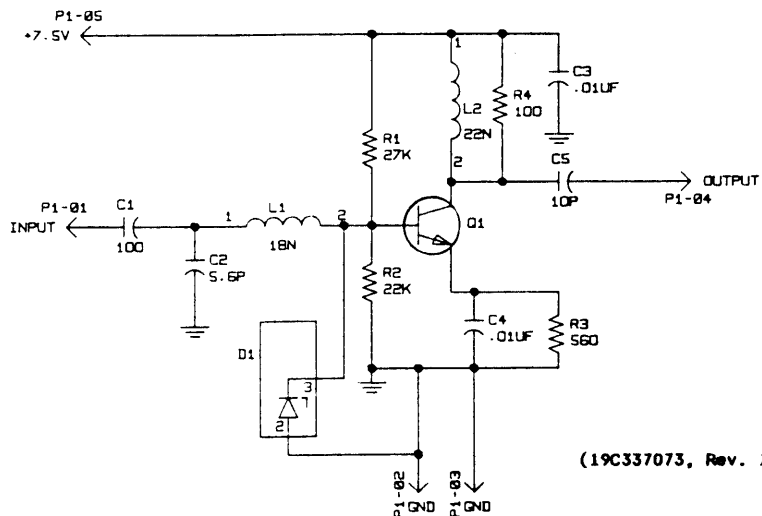



(19C337073, Rev. 1)

**RF BOARD**

UHF RF AMPLIFIER A6  
19B235081

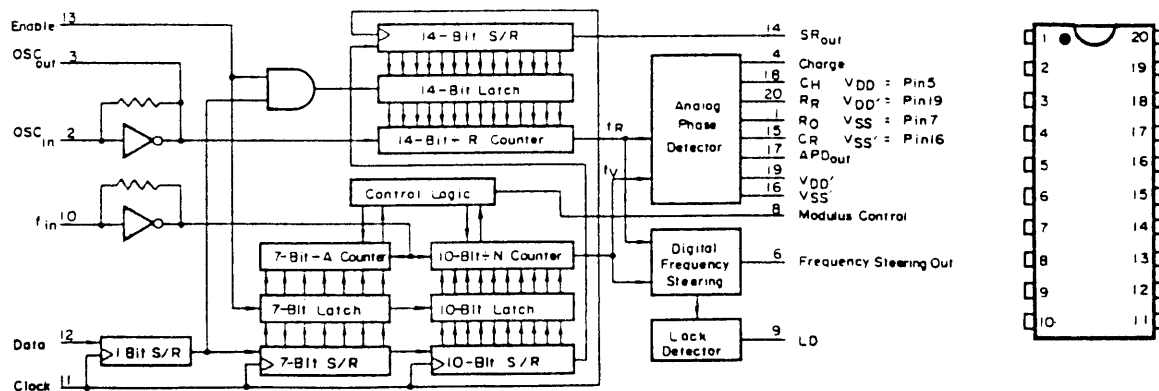
**RF BOARD**

SYNTHESIZER U1  
19B800902P4

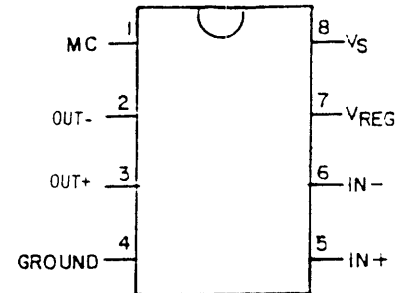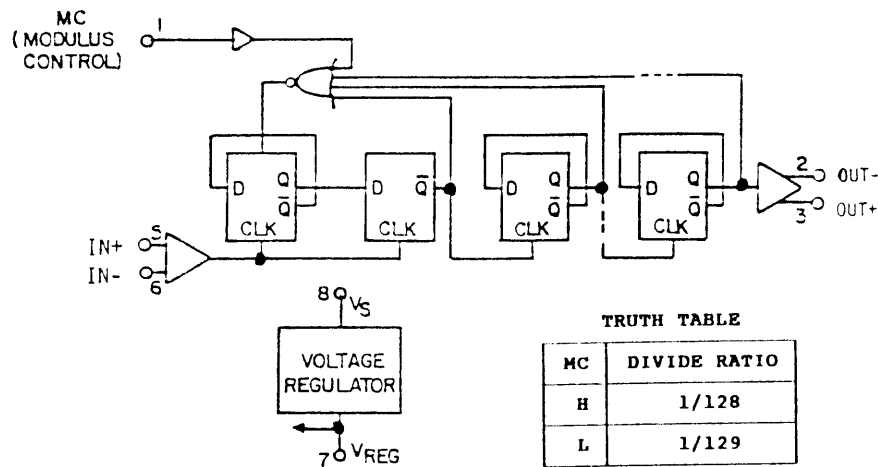**RF BOARD**


PRESCALER U2  
19A704287P2

PIN	FUNCTION
1	COMMON (& CASE)
2	13.2 MHz OUTPUT
3	$V_{CC}$
4	MODULATION INPUT

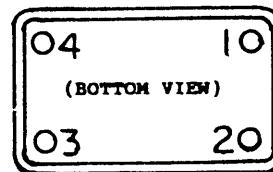**RF BOARD**

13.2 MHz REFERENCE OSCILLATOR U3  
19B801351P15



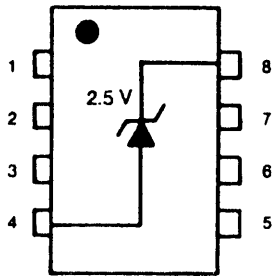



CONTROL BOARD

2.5 VOLT REFERENCE CR5  
19A149634P1

TRUTH TABLE


WE	CS <sub>1</sub>	CS <sub>2</sub>	OE	MODE	I/O	Icc
X	H	X	X	Not Selected	High Z	Standby
X	X	L	X	Not Selected	High Z	Standby
H	L	H	H	Output Dis.	High Z	Active
H	L	H	L	Read	Data	Active
L	L	H	H	Write	Data	Active
L	L	H	L	Write	Data	Active

X = H or L

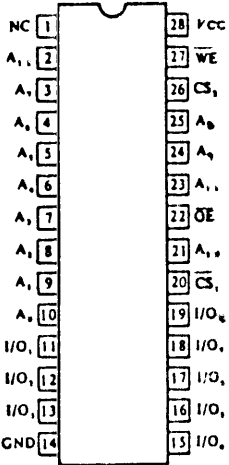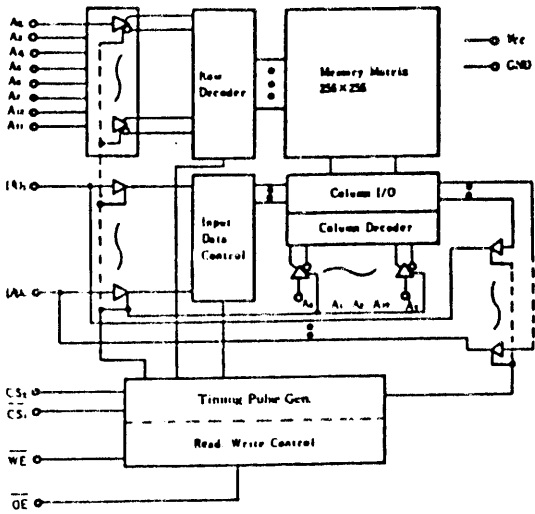

CONTROL BOARD

8K x 8-BIT STATIC RAM U1  
19A705603P2

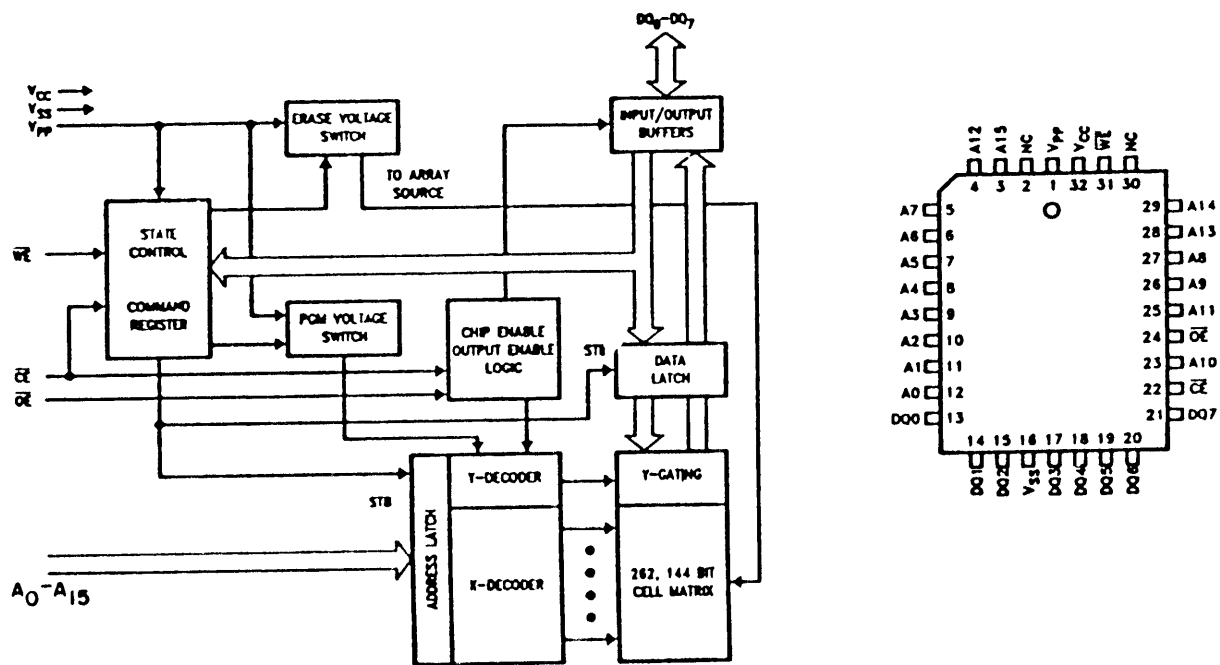



CONTROL BOARD

64K x 8-BIT EPROM U2  
19A705963P2

TRUTH TABLE

INPUTS			OUTPUTS
OE	LE	D	O <sub>0</sub> - O <sub>7</sub>
L	H	H	H
L	H	L	L
L	L	X	No Change
H	X	X	High Z


X = H or L

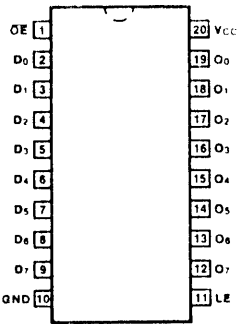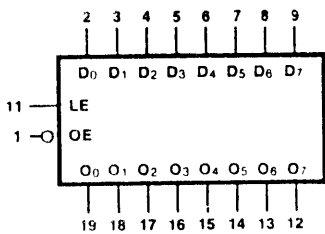

CONTROL BOARD

TRI-STATE TRANSCEIVER U3  
19A703471P118



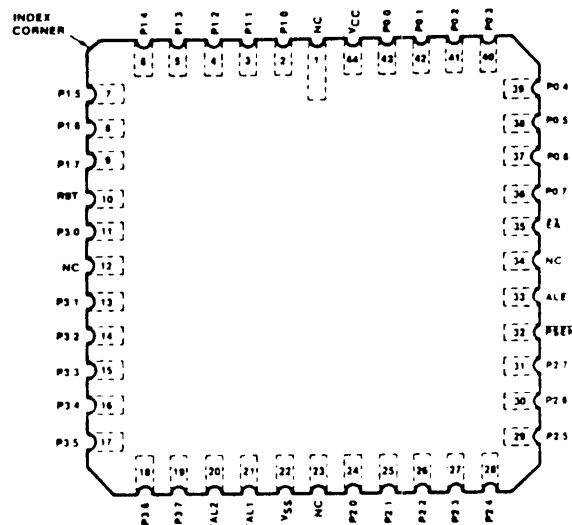


8-BIT MICROCOMPUTER U4  
19A705557P3

The diagram illustrates the 28C01 EPROM, showing its physical package and internal functional blocks. The top part of the diagram shows the package with pins numbered 1 through 28. The bottom part is a block diagram of the internal components:



- DATA RECOVERY**: Receives **DATA IN** and outputs **DATA** to the **DATA RECEIVER**.
- DATA RECEIVER**: Receives **DATA** from the **DATA RECOVERY** block and outputs to the **RX REGISTER**.
- RX REGISTER**: Receives data from the **DATA RECEIVER** and outputs to the **CPU**.
- CPU**: The central processing unit, connected to various control signals and data buses.
  - Control Signals**: **ALE**, **WR**, **RD**, **CS**, **CE**, **RESOUT**, **INT**, **VDD**, **VSS**.
  - Data Buses**: **ADDRESS DATA BUS** (8-BITS), **DATA** (8-BITS), **TX DATA** (8-BITS).
- DATA TRANSMITTER**: Receives **TX DATA** from the **CPU** and outputs to the **SAT COUNTER**.
- SAT COUNTER**: Receives **TX DATA** from the **CPU** and outputs to the **WATCH DOG TIMER**.
- WATCH DOG TIMER**: Receives **TX DATA** from the **CPU** and outputs to the **OSCILLATOR**.
- OSCILLATOR**: Receives **TX DATA** from the **CPU** and outputs to the **WATCH DOG TIMER**.
- XTAL 1** and **XTAL 2**: Crystal inputs to the **OSCILLATOR**.
- CLK1**, **CLK2**, **CLK3**: Clock inputs to the **OSCILLATOR**.

MODEM U5  
19A704727P1

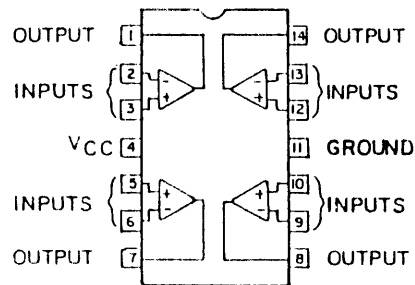


## CONTROL BOARD

QUAD OP AMP U6 & U8  
19A702293P1

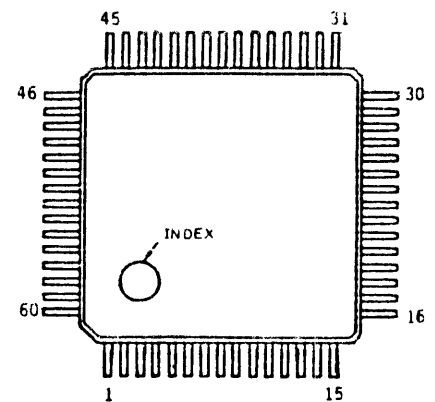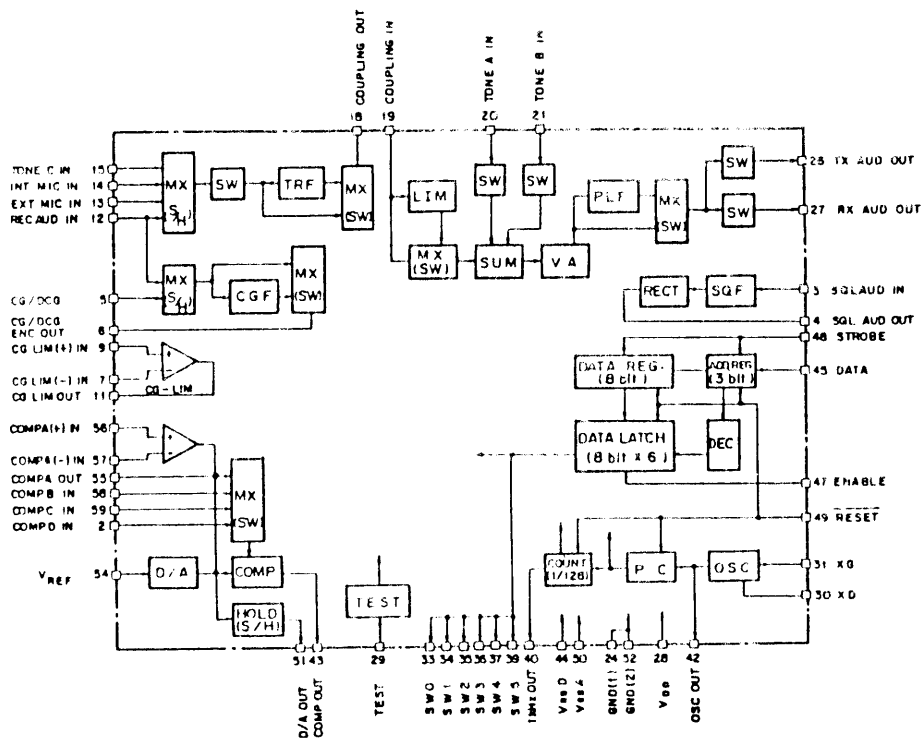


## CONTROL BOARD


AUDIO PROCESSOR U7  
19A705851P1

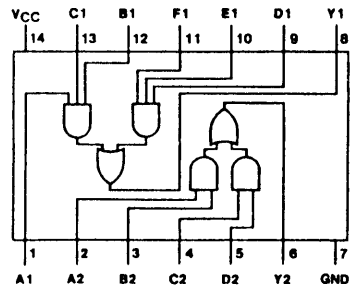**CONTROL BOARD**


DUAL AND/OR GATE U9  
19A703483P113

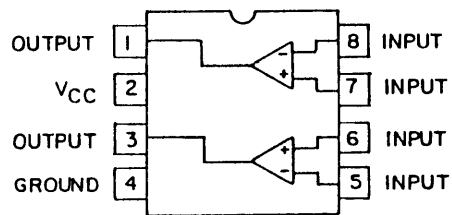**CONTROL BOARD**

AUDIO AMPLIFIER U10  
19A705452P2

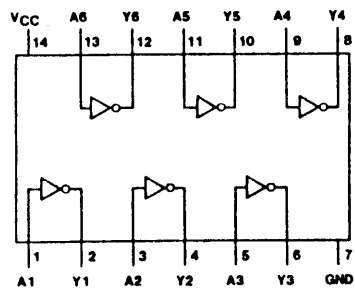
**CONTROL BOARD**

HEX INVERTER U11  
19A703483P104

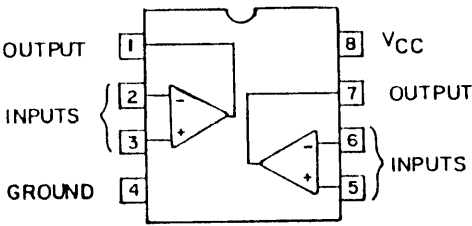


CONTROL BOARD

DUAL OP AMP U12  
19A702293P2

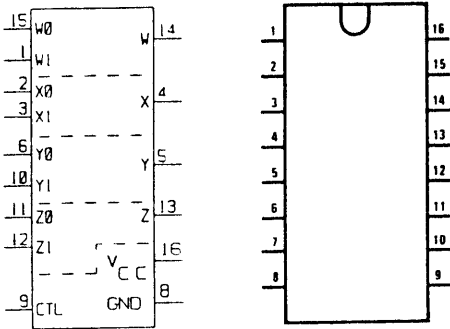


CONTROL BOARD

QUAD MULTIPLEXER U14  
19A700029P633

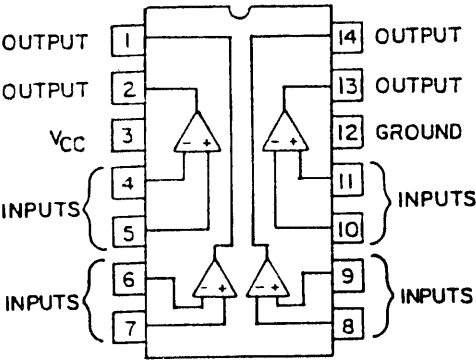



CONTROL BOARD

QUAD COMPARATOR U17  
19A704125P1

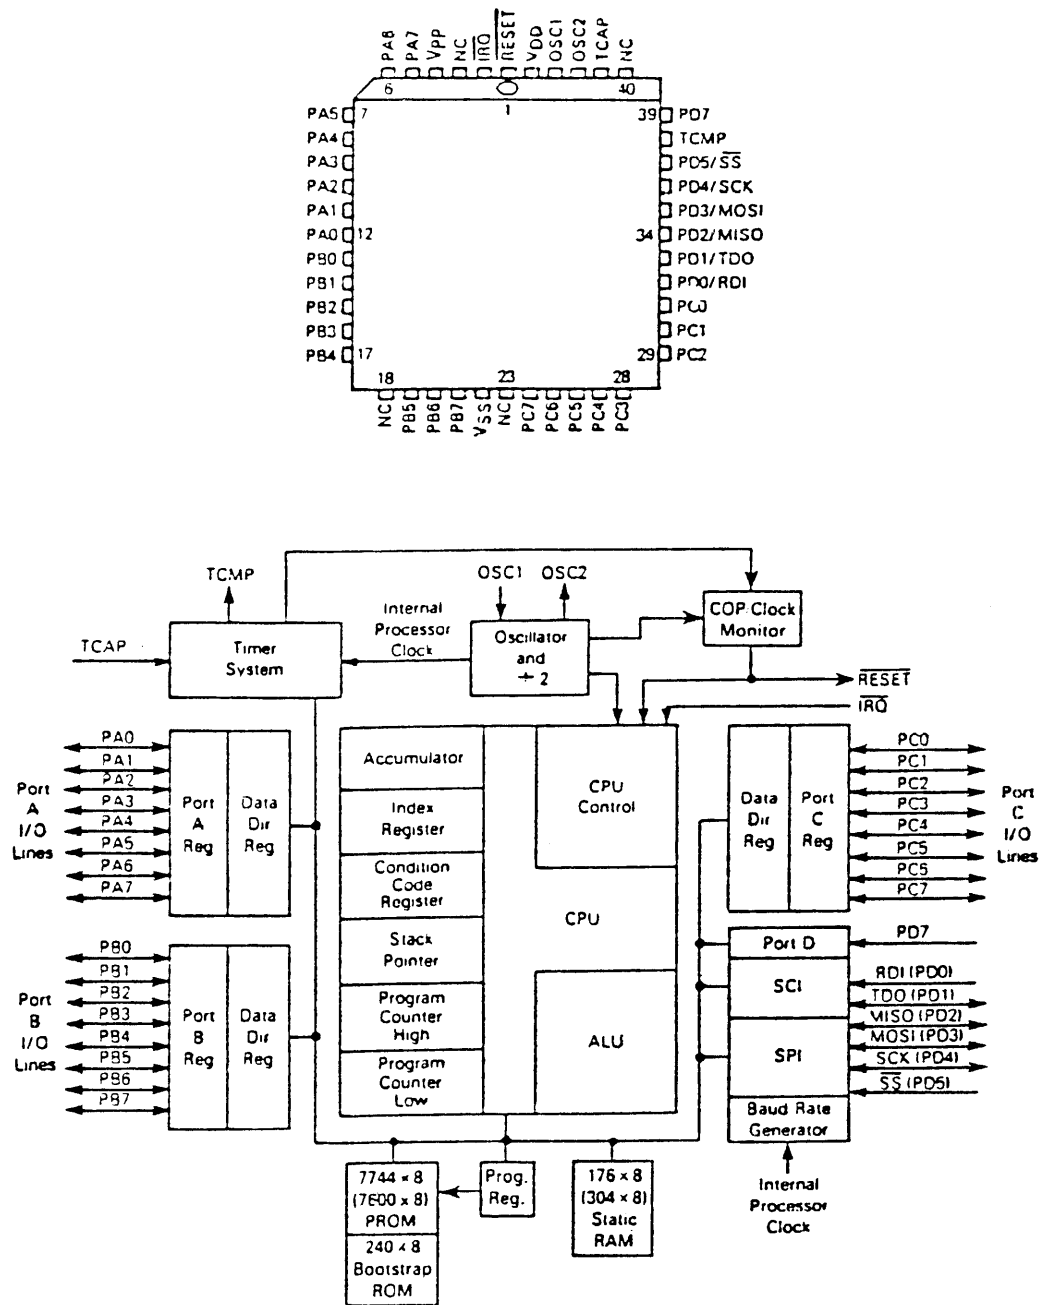**CONTROL BOARD**

MICROPROCESSOR U18

19A149861

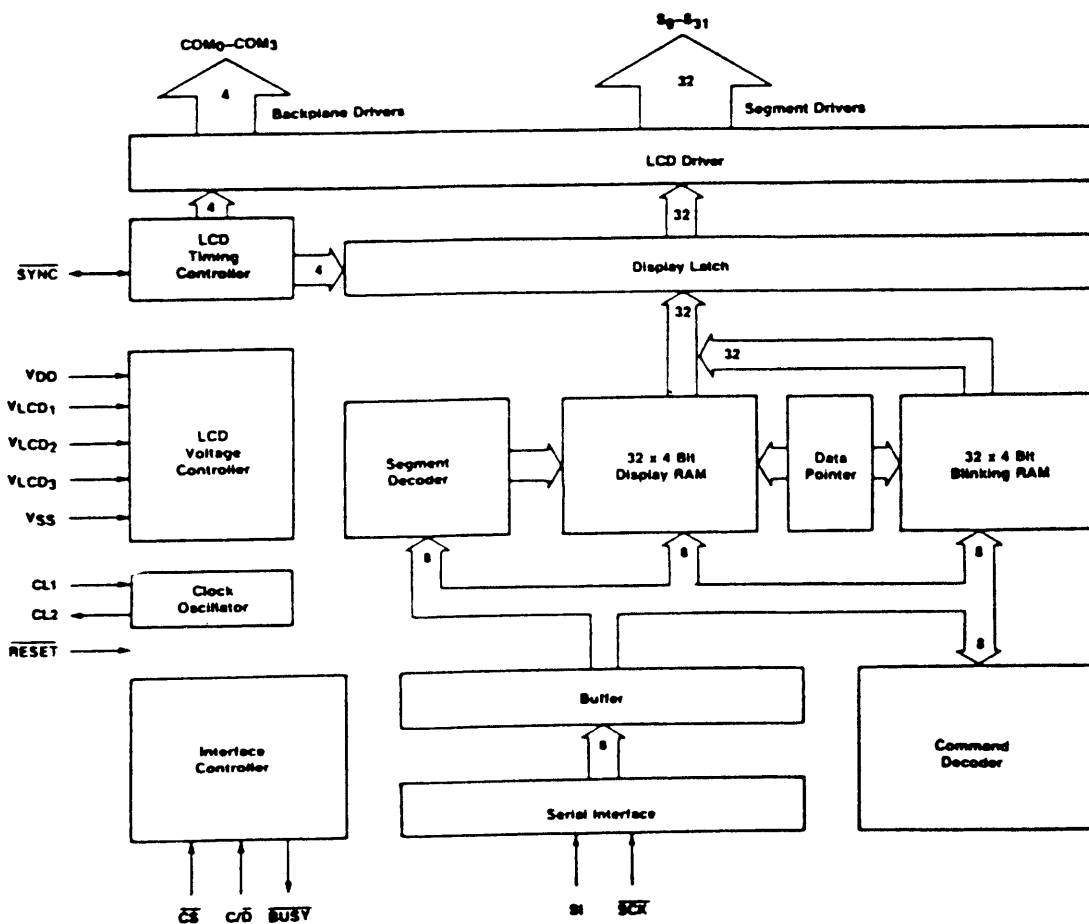
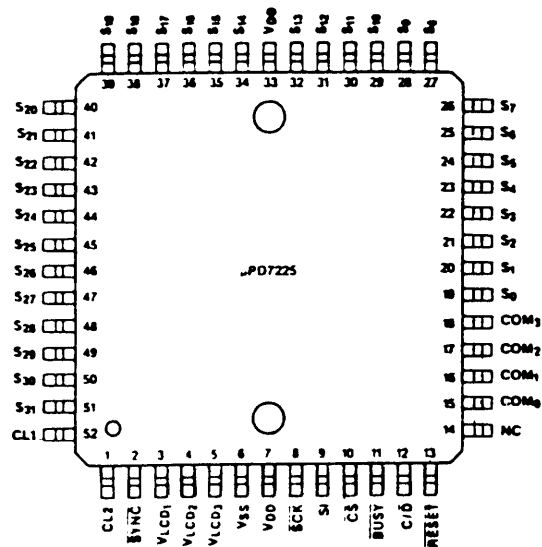


## LCD BOARD

LCD CONTROLLER/DRIVER U1  
19A705799P1

CL*	Serial Input	Parallel/Serial Control	PI 1	PI n	Q1 (Internal)	Q <sub>n</sub>
X	X	1	0	0	0	0
X	X	1	0	1	0	1
X	X	1	1	0	1	0
X	X	1	1	1	1	1
—	0	0	X	X	0	Q <sub>n-1</sub>
—	1	0	X	X	1	Q <sub>n-1</sub>
—	X	0	X	X	Q1	Q <sub>n</sub>

\* Level change  
X = Don't care case

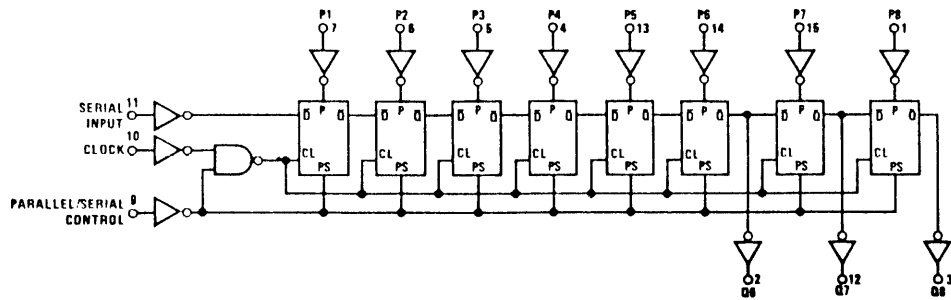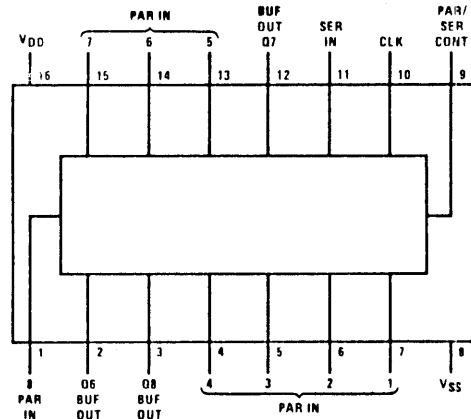



## KEYPAD FLEX

8-BIT SHIFT REGISTER U1  
19A704423P2

Clock	Output Enable	Strobe	Data	Parallel Outputs		Serial Outputs	
				Q1	Q <sub>N</sub>	Q <sub>S</sub> *	Q's
—	0	X	X	Hi-Z	Hi-Z	Q7	No Chg.
—	0	X	X	Hi-Z	Hi-Z	No Chg.	Q7
—	1	0	X	No Chg.	No Chg.	Q7	No Chg.
—	1	1	0	0	Q <sub>N</sub> -1	Q7	No Chg.
—	1	1	1	1	Q <sub>N</sub> -1	Q7	No Chg.
—	1	1	1	No Chg.	No Chg.	No Chg.	Q7

X = Don't Care

\* At the positive clock edge, information in the 7th shift register stage is transferred to Q8 and Q<sub>S</sub>

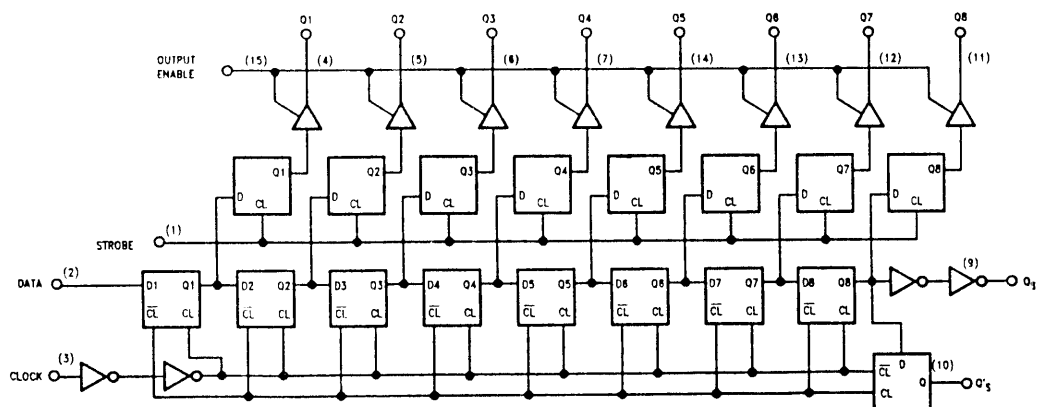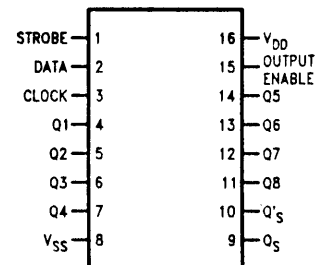

## KEYPAD FLEX

8-BIT LATCHING SHIFT REGISTER U2  
19A704423P3

## **FIELD RF RETUNING PROCEDURES**

This addendum incorporates field RF retuning procedures which will be necessary if the factory tuned 20 MHz operating band does not meet needed requirements. For example, the factory tuned 450 - 470 MHz band can be retuned to cover the 440 - 460 MHz band. Factory tuned RF bands are listed in Table 2 of this manual and on the specification page. Synthesizer and receiver circuits must be retuned when the 20 MHz operating band is moved. Note that if the radio is retuned, the frequency range limits of the RF Board cannot be exceeded. Perform the procedures in the order presented.

### **SET-UP PROCEDURE**

1. Program the radio with the low, middle and high-side retune channels in the desired operating frequency band. The low and high-side channels should 20 - 22 MHz apart and the middle channel should be centered between the two. Do not exceed the frequency range limits for the RF Board.
2. Separate the Front and Rear Cover Assemblies and connect the RF/Logic Extender cable between the RF Board and the Control Board.

### **SYNTHESIZER RETUNING**

1. Set the radio to the middle retune channel. Monitor the VCO tuning voltage at TP1 (A5 pin 3) with a dc voltmeter. Adjust the RX VCO coil for a reading of 2.5 Vdc. See Figure 1A.
2. Set the radio to the lowest retune channel. The monitored voltage should be greater than 1.0 Vdc.
3. Set the radio to the highest retune channel. The monitored voltage should be less than 4.0 Vdc.
4. If the lowest and highest retune channels push the VCO tuning voltage measured at TP1 outside of the specified limits, slightly readjust the RX VCO coil to center the low and high retune channel tuning voltages within or around this 1.0 - 4.0 Vdc window.
5. Repeat steps 1 - 4 for the TX VCO coil with the following exceptions: The radio must be keyed when adjustments are made to the TX VCO coil. Also, connect an appropriate RF load to the antenna before keying.
6. Turn the radio off and connect the PC Programmer to the radio. Power the radio back up. Using the PC Programmer, set the modulation Tracking Data value to OD (hex).
7. Set the radio to the middle retune channel.
8. Couple a modulation analyzer (with a monitoring oscilloscope) to the RF output of the radio. Set the modulation analyzer's filters as follows: no high-pass filters and 20 kHz low-pass filter. The modulation analyzer should have an almost dc response. If it does not, an alternative is to use a second M-PA monitoring the transmit frequency and monitor the discriminator output from the RF Board with a dc coupled oscilloscope. The monitoring point is J101 pin 4.
9. Apply a 110 mV rms, 1 kHz tone to the TQ-3310's modulation input. Key the radio from the TQ-3310 and adjust R19 on the RF Board for a deviation of  $\pm 4.3$  kHz.
10. Modify the RF/Logic Extender cable so a low-frequency signal can be injected directly into the RF Board. This modification procedure is outlined in the **TRANSMITTER ALIGNMENT** section of this manual.



## **ADDENDUM NO. 1 TO LBI-38604A**

11. Using a 100 uF (or greater) capacitor, couple 20 Hz, 1.0 Vp-p square wave signal into TX AUDIO (J102 pin 1).
12. Key the radio and monitor the demodulated output from the modulation analyzer. Adjust R18 (modulation balance pot) for a good square wave response.

## **RECEIVER RETUNING**

Retuning the UHF M-PA receiver involves retuning the two (2) helical filters at the input and output of RF Amplifier module A6. There are three (3) different procedures that can be used to retune the receiver. The most accurate method involves the use of a network analyzer. If a network analyzer is not available, a spectrum analyzer and signal generator can be used, but with less accurate results. Finally, the receiver can be retuned with some compromise in receiver performance using a best quieting (SINAD) tuning technique.

### **Network Analyzer Method**

1. Remove the solder mask on the solder side of the RF Board at the thin run between the output of FL4 and the input of A6 (A6 pin 1). Cut this run.
2. Solder the center conductor of a small 50-ohm coax cable to FL4's output at the cut run. Solder the coax shield near FL4.
3. Terminate the radio's antenna with a 50-ohm load.
4. Connect the other end of the coax to the network analyzer and tune FL4 (all three sections) for best return loss over the desired receive frequency range.
5. Un-solder the coax cable from the output of FL4 and solder it to the input of A6. Ground the shield near A6.
6. With the network analyzer's output at -30 dBm or lower, adjust FL1 (all three sections) for best return loss over the desired receive frequency range. The receiver must be powered-up during this adjustment.
7. With a small jumper, reconnect the output of FL4 to the input of A6. Test the radio over the new frequency range.

### **Spectrum Analyzer And Best Quieting Methods**


This procedure involves retuning the receiver's helical filters at the low, middle and high-side frequencies. The same frequencies used to retune the VCO can be used.

The preferred method is to connect a small 50-ohm coax to the output of IF crystal filter FL2, ground, and connect this cable to a spectrum analyzer tuned to 45 MHz and set to 2 dB/division.

A less desirable alternative using the same tuning sequence can be achieved by varying the signal generator's level and tuning for best quieting (SINAD). No coax cable connections are required using this procedure.

1. Remove the input and output (outer) tuning cores from FL1 and FL4 (four cores total).
2. Set the radio and signal generator to the low-side receive frequency.

3. Set the signal generator's level to -30 dBm. If tuning by quieting, set the generator's level for a high receiver noise level.
4. Alternately tune the center cores of FL1 and FL4 for maximum IF signal. If tuning by quieting, tune for best sensitivity and reduce the generator's level as the receiver becomes more sensitive.
5. Set the radio and signal generator to the high-side receive frequency.
6. Reinstall the input tuning cores into FL1 and FL4. Alternately adjust these cores for maximum signal or best quieting.
7. Set the radio and signal generator to the middle receive frequency.
8. Reinstall the output tuning cores into FL1 and FL4. Alternately adjust these cores for maximum signal or best quieting.
9. Under certain circumstances, best tuning may be achieved when certain tuning cores are not reinstalled. This is acceptable. Also, any excessively loose core should be secured with a drop of adhesive.

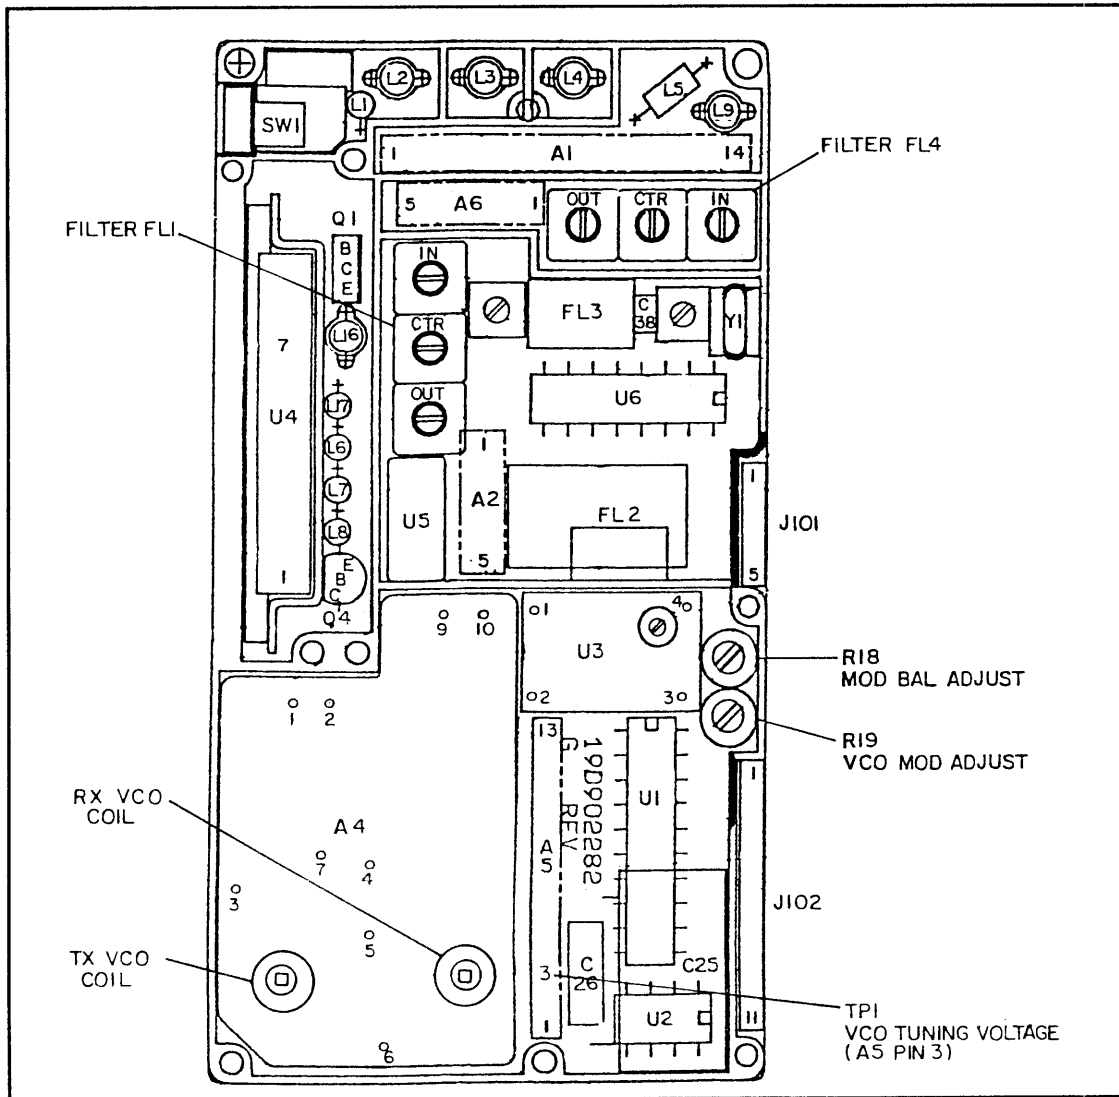

**Figure 1A - RF Board 19D902282 Retuning Areas (Component Side View)**