

 **MOBILE RADIO**

MASTR

Progress Line

MAINTENANCE MANUAL



DESK MATE STATION

**TWO-WAY FM
DESK MATE
STATION
COMBINATION**

REPEATER CONTROL

LBI-3603G



SPEAKER

DF. 9014

GENERAL  ELECTRIC

TABLE OF CONTENTS

| | Page |
|--|------|
| EQUIPMENT INDEX..... | iii |
| SPECIFICATIONS..... | iv |
| DESCRIPTION..... | 1 |
| Servicing..... | 1 |
| Transmitter..... | 1 |
| Receiver..... | 1 |
| Power Supply..... | 1 |
| Antenna Circuits..... | 1 |
| Control Panel..... | 1 |
| AC Input..... | 1 |
| Microphone..... | 2 |
| Speakers..... | 2 |
| INITIAL ADJUSTMENT..... | 2 |
| Test Equipment Required..... | 2 |
| Transmitter Adjustment..... | 2 |
| Receiver Adjustment..... | 2 |
| Power Supply Adjustment..... | 2 |
| Control Panel Adjustment..... | 2 |
| MAINTENANCE..... | 2 |
| Test and Troubleshooting Procedures..... | 2 |
| Preventive Maintenance..... | 3 |
| INTERCONNECTION DIAGRAM..... | 4 |
| PARTS LIST | |
| Desk-Mate Cabinet 7354211-G4..... | 5 |
| Microphone Model 4EM25A10..... | 5 |
| Speaker Assembly 19B219618G1..... | 5 |
| Speaker, 4EZ16A21..... | 6 |

WARNING

No one should be permitted to handle any portion of the equipment that is supplied with high voltage; or to connect any external apparatus to the units while the units are supplied with power. KEEP AWAY FROM LIVE CIRCUITS.

EQUIPMENT INDEX

| EQUIPMENT | TYPE OR MODEL NUMBER |
|---|------------------------------------|
| Transmitter | ET-55-A through ET-60-H |
| Receiver | ER-39-A through ER-42-L |
| Desk Mate Cabinet | 7354211-G4 |
| Station Power Supply | EP-38-A |
| Control Panel | 4KC19A10 |
| Microphone | 4EM25A10 |
| Microphone Mounting Kit | 7141414-G2 |
| Speaker Assembly | 19B219618G1 |
| 117-VAC Power Cable | 7491206-P1 |
| Alignment Tools (hex slug type) (slotted screw type) | 4038831-P2 4033530-G2 |
| Lock Assembly Keys Lock (with Key) | 5491682-P4 (BF-10A) 5491682-P13 |

OPTIONAL EQUIPMENT

| EQUIPMENT | OPTION NO. | TYPE OR MODEL NUMBER |
|--|------------|----------------------|
| Test Meter Panel | 7609 | 19A121953-G1 |
| Metering Switching Panel | 7609 | 19A121460-G1 |
| Transmitter Metering Cover | 7648 | 19C303676-G3 |
| Receiver Metering Cover | 7649 | 19C303676-G2 |
| 220/110 volt Stepdown Transformer Kit | 7608 | 19A121971-G1 |

SPECIFICATIONS *

| | |
|---------------------------------|--|
| DIMENSIONS (H x W x D) | 30-3/8" x 14" x 25-1/2" |
| WEIGHT | Approximately 112 pounds |
| DUTY CYCLE (Transmit & Receive) | Continuous |
| INPUT VOLTAGE | 117 VAC, $\pm 10\%$, 50/60 Hz |
| INPUT POWER | Transmit: 2.9 amps max, 340 watts Receive: 0.8 amps max, 95 watts |
| OPERABLE TEMPERATURE RANGE | -30°C (-22°F) to +60°C (+140°F) |

* These specifications are intended primarily for use by the serviceman. Refer to the appropriate Specification Sheet for complete specifications.

COMBINATION NOMENCLATURE

| 1st Digit | 2nd Digit | 3rd Digit | 4th Digit | 5th Digit | 6th Digit | 7th Digit | 8th & 9th Digit |
|-------------------------------|---------------------|--------------------------|--------------------|------------------------------|----------------------------------|---------------------------|----------------------------|
| Mechanical Package | Operating Voltage | RF Power Output Range | Channel Spacing | Control | Number of Freq. | Options | Frequency Range |
| D Desk Mate Station | M 117 VAC | 5 16—38 watts | 4 20 kHz | Y Repeater Station | A 1-Freq.T 1-Freq.R | S Standard | 11 25—33 MHz |
| | | 6 38—64 watts | 5 25 kHz | | | U Channel Guard | 22 33—42 MHz |
| | | 7 64—128 watts | 6 30 kHz | | | | 33 42—50 MHz |
| | | | 7 40 kHz | | | | 44 66—77 MHz |
| | | | 8 50 kHz | | | | 45 77—88 MHz |
| | | | 9 60 kHz | | | | 55 132—150.8 MHz |
| | | | | | | | 66 150.8—174 MHz |
| | | | | | | | 77 406—420 MHz |
| | | | | | | | 88 450—470 MHz |
| | | | | | | | 89 470—494 MHz |
| | | | | | | | 91 494—512 MHz |

DESCRIPTION

The General Electric MASTR Progress Line DESK-MATE Repeater Station is a complete two-way radio station designed to simultaneously receive and re-transmit signals in a communication system. The station is usually located in an appropriate area where the signal can be adequately received and re-transmitted to another base station or to mobiles.

The station cabinet can be placed adjacent to a desk to provide additional working area--or at any other suitable location. Both the transmitter exciter and the receiver are fully transistorized. Silicon transistors are used throughout for added reliability.

SERVICING

Both side panels on the station cabinet can be easily removed to gain access to the transmitter, receiver and power supply. The transmitter and receiver modules are equipped with centralized metering jacks, and are mounted on swing-out chassis for simplified alignment and troubleshooting.

The transmitter and receiver modules may be used interchangeably in mobile and station installations. No modifications are required when transferring the units from one type of operation to another.

The station may also be equipped with an optional built-in Test Set to facilitate servicing.

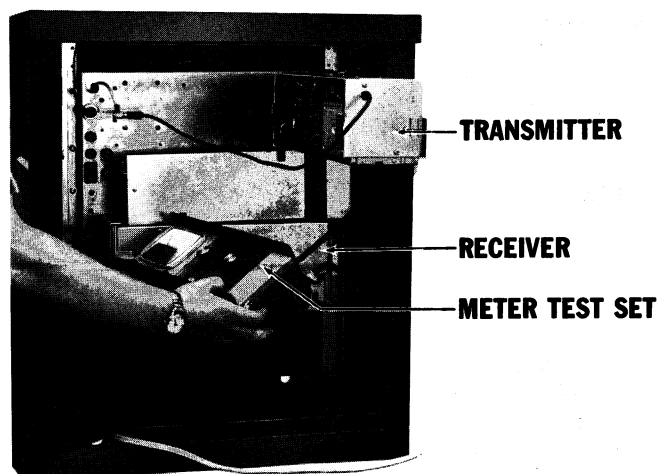


Figure 1 - Transmitter-Receiver Test

TRANSMITTER

The transmitter assembly consists of the transistorized exciter board and the power amplifier section. The standard transmitter may be equipped with Channel Guard (tone squelch).

RECEIVER

The fully transistorized receiver is completely contained in an aluminum casting, which provides excellent electrical shielding and reduces the effects of vibration. The standard receiver may be equipped with:

- Channel Guard (tone squelch)
- Noise Blanker

POWER SUPPLY

Station Power Supply Type EP-38-A provides operating voltages for both the transmitter and receiver. In addition to plate, screen and bias voltages for the transmitter, the power supply provides:

- Regulated -20 volts for the transistorized transmitter exciter-board.
- Regulated +10 volts for the receiver and for transmitter Channel Guard.
- Regulated +12.6 volt transmitter filaments, receiver audio, relays, and pilot lights.

Antenna Circuits

The receive antenna is connected to the left socket and the transmit antenna to the right socket on the antenna mounting bracket. From the antenna mounting bracket, the receive antenna is connected to receiver jack J441 and the transmitter antenna to transmitter jack J103.

CONTROL PANEL

The Control Panel contains the AC input circuit, audio coupler, carrier operated relay, 5-second and 3-minute timers, and the Channel Guard filter (if used). The panel is mounted on the chassis mounting frame below the Transmitter-Receiver Power Supply.

AC Input

The 117-volt AC input is connected directly to TB706-1 and 2. All power to the station is controlled by switch S701 on the control panel.

An optional 220/110 Volt AC Stepdown Transformer Kit is available for use when the input line voltage is 220 Volts AC.

WARNING

117-Volts AC is always present at TB706-1 and 2, even when S701 is in the OFF position. Always use care when servicing the Control Panel.

MICROPHONE (4EM25A10)

A microphone is mounted inside the station for use during service and maintenance work by the serviceman. The Microphone is connected to mike jack J902 located on the front side of the power supply.

SPEAKERS**Speaker Assembly**

Speaker Assembly 19B219618G1 is used in later station combinations, and provides an audio output of 1.5 Watts. The speaker assembly mounts on the chassis of Transmitter-Receiver power supply Model 4EP38A12.

NOTE

When a speaker is not used, a 3.5-ohm, 10-Watt resistor must be connected from TB501-11 to TB502-5 as a substitute for the speaker load impedance.

Speaker 4EZ16A20

Speaker Model 4EZ16A20 is used in earlier station combinations, and provides an audio output of 5 Watts, an attenuator is located on the speaker case for adjustment of audio output level by the serviceman.

The 4EZ16A20 is available as an external speaker option.

INITIAL ADJUSTMENT

After the MASTR Desk Mate Station has been installed as described in the Installation Manual, the transmitter, receiver, power supply and control panel must be adjusted by an electronics technician who holds a 1st or 2nd Class FCC Radiotelephone or Radiotelegraph license before the station can be placed in operation.

TEST EQUIPMENT REQUIRED

The following test equipment is required for the adjustment of both transmitter and receiver:

1. A tuning tool and a screwdriver.
2. G-E Test Meter Model 4EX3A10, built-in Station Test Metering Panel (Optional), or a 20,000 ohms-per-volt multimeter.
3. A signal source operating at the system frequency (preferably the transmitter which will normally be monitored by the receiver).

TRANSMITTER ADJUSTMENT

The initial adjustment for the transmitter includes:

- Loading the power amplifier into the antenna.
- Checking the frequency and modulation.

For the Initial Adjustment procedure, refer to the ALIGNMENT PROCEDURE in the MAINTENANCE MANUAL for the transmitter.

RECEIVER ADJUSTMENT

The initial adjustment for the receiver includes:

- Zeroing the receiver to the system operating frequency.
- Matching the antenna transformer to the antenna.

For the Receiver Initial Adjustment Procedure, refer to the FRONT END ALIGNMENT PROCEDURE in the MAINTENANCE MANUAL for the receiver.

POWER SUPPLY ADJUSTMENT

The initial adjustment for the power supply includes:

- Turning the power switch (S501) on.
- Adjusting the VOLUME (R511) and SQUELCH (R512) controls as follows: Set the SQUELCH Control to point at which noise disappears; then set VOLUME Control to optimum listening level.

CONTROL PANEL ADJUSTMENT

The initial adjustment for the control panel includes:

- Turning the power switch (S701) ON.
- Adjusting the AUDIO COUPLER LEVEL Control (R2) on Audio Coupler Circuit Board.

For the control initial adjustment procedure, refer to the Control Panel MAINTENANCE MANUAL.

MAINTENANCE

TEST AND TROUBLESHOOTING PROCEDURES

The individual Maintenance Manual for the transmitter and receiver describe standard test procedures which the serviceman can use to compare the actual performance of the transmitter or receiver against the specifications of the unit when shipped from the factory.

In addition, specific troubleshooting procedures are available to assist the serviceman in troubleshooting the transmitter, receiver and power supply.

For best results in servicing the station, the TEST PROCEDURES should be used in conjunction with the TROUBLESHOOTING PROCEDURES. Both sheets are listed in the Table of Contents of the applicable Maintenance Manual.

PREVENTIVE MAINTENANCE

To insure high operating efficiency and to prevent mechanical and electrical failures from interrupting system operations, routine checks should be made of all mechanical and electrical parts. This preventive maintenance should include the maintenance checks listed below:


PREVENTIVE MAINTENANCE PROGRAM

CHECK THE FOLLOWING ONCE A YEAR:

- | | |
|--|--------------------------|
| 1. Transmitter frequency and deviation (FCC requires this check-up ONCE a year. | <input type="checkbox"/> |
| 2. Measure and record the antenna system V.S.W.R. | <input type="checkbox"/> |
| 3. Check input voltage at TB706-1 and -2 on control panel. Reading should be within 10% of 117 VAC. (Also check during routine service calls). | <input type="checkbox"/> |
| 4. Compare and record transmitter meter readings with voltages taken during initial tune-up. Retune, if necessary. | <input type="checkbox"/> |
| 5. Compare and record receiver meter readings with voltages taken during initial tune-up. Retune, if necessary. | <input type="checkbox"/> |
| 6. Check for positive indication of pressure on transmission line pressure gauge (if pressurized line is used). | <input type="checkbox"/> |
| 7. Clean dust from fan blades and lubricate bearings. | <input type="checkbox"/> |
| 8. Burnish pitted or coated relay contacts to smooth out metallic deposits or remove the coating. | <input type="checkbox"/> |

MAKE THE FOLLOWING MAINTENANCE CHECKS DURING ROUTINE SERVICE CALLS:

- | | |
|--|--------------------------|
| 1. Check antenna lines and mast for mechanical stability. | <input type="checkbox"/> |
| 2. Visually check: | |
| External cables | <input type="checkbox"/> |
| Internal cables | <input type="checkbox"/> |
| plugs | <input type="checkbox"/> |
| sockets | <input type="checkbox"/> |
| terminal boards | <input type="checkbox"/> |
| 3. Check for tightness of nuts, bolts, and screws to make sure nothing is working loose from its mounting. | <input type="checkbox"/> |
| 4. Replace tubes as necessary. (It may be convenient to replace all station tubes during the yearly check-up). | <input type="checkbox"/> |

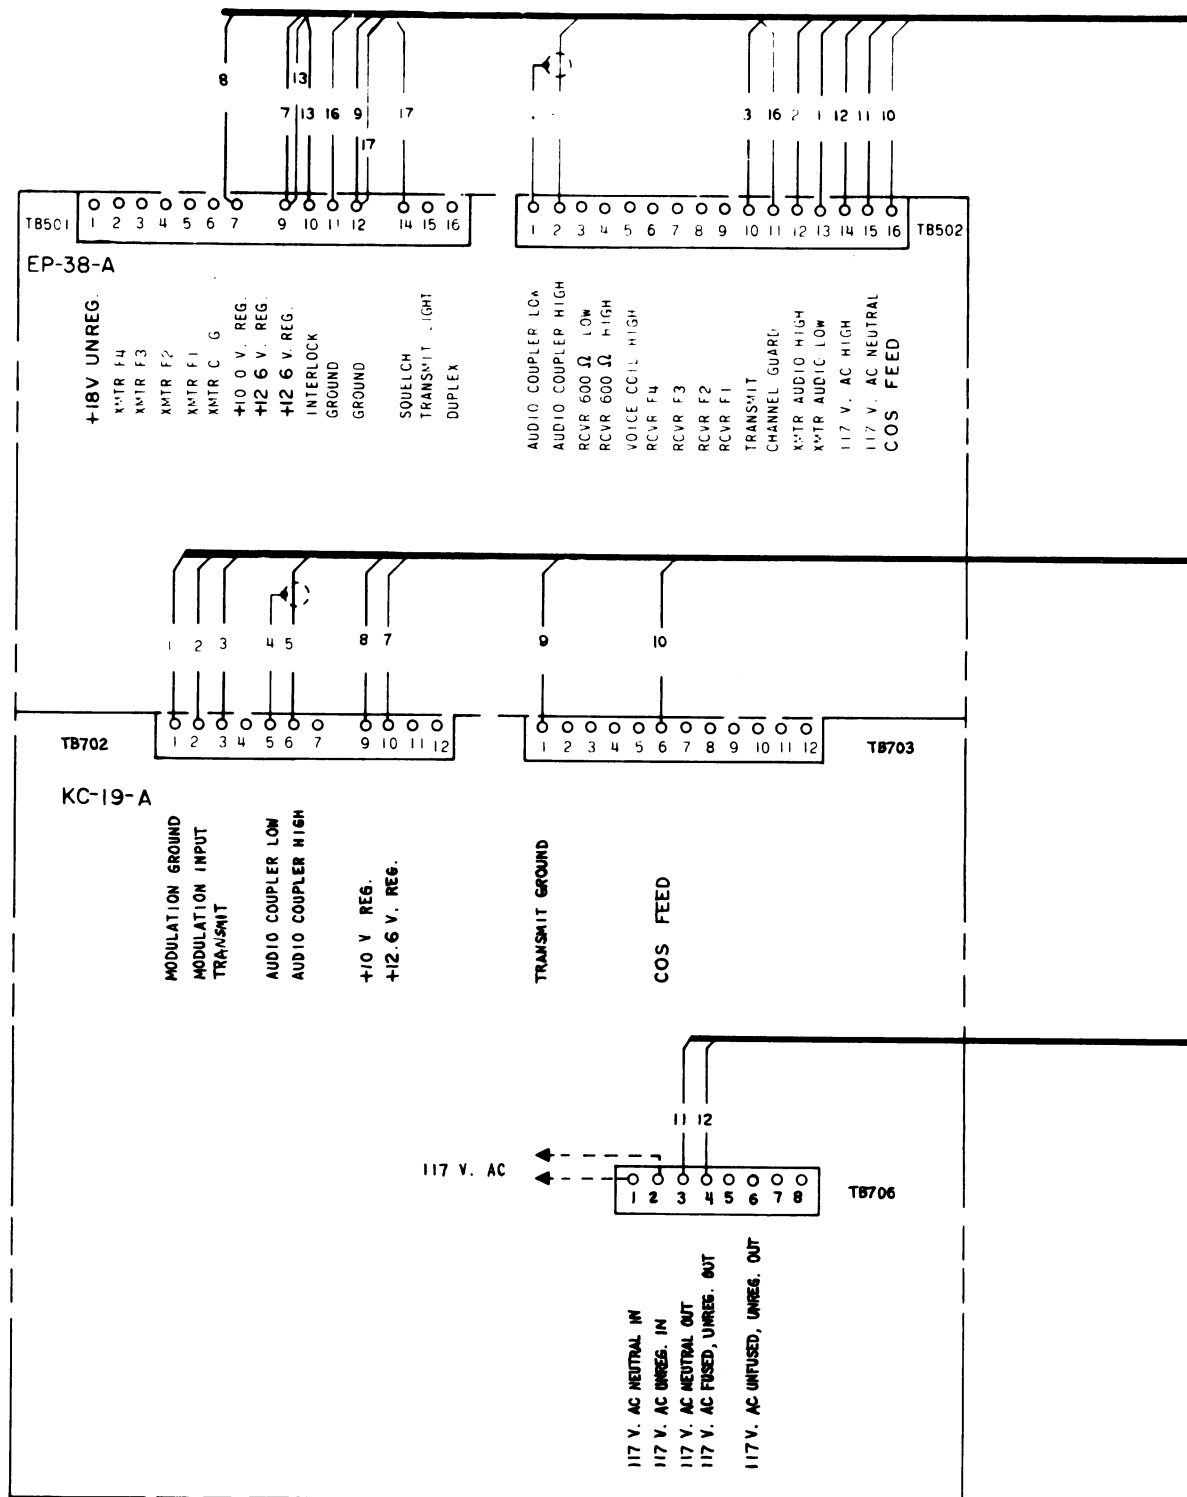

(19D402349, Rev. 9)

NOTES:

1. TB706-1 MUST BE CONNECTED TO GROUND OR NEUTRAL OF THE BUILDING WIRING SYSTEM.
2. MOVE N22-BL WIRE ON 4EP38A10-11 OR N22W-R WIRE ON 4EP38A12 INSIDE 4EP38 FROM TB501-16 TO TB501-7.
3. TO DISABLE RECEIVER CHANNEL GUARD, REMOVE WIRE FROM TB502-11 ON 4EP38A.


INTERCONNECTION DIAGRAM

MASTR DESK MATE STATION COMBINATION
 REPEATER CONTROL PANEL

PARTS LIST
LBI-3558B
MILITARY MICROPHONE
MODEL 4EM25A10
(PL-19B209102-P1)
(SEE RC-1163)

| SYMBOL | G-E PART NO. | DESCRIPTION |
|--------|--------------|---|
| | | MECHANICAL PARTS |
| | | MODEL 4EM25A10 |
| 1 | | Cable clamp. Shure Brothers RP-16. |
| 2 | | Switch. Shure Brothers RP26. |
| 3 | | Case (back) and mounting button: plastic. Shure Brothers RP-67. |
| 4 | | Switch button: red plastic. Shure Brothers RP-25. |
| 5 | | Spring. Shure Brothers RP-1. |
| 6 | | Shield. Shure Brothers RP-23. |
| 7 | | Magnetic controlled cartridge. Shure Brothers RP-13. |
| 8 | | Case (front) plastic. (Part of item 3). |
| 9 | | Cable and plug: approx 6 feet long. Shure Brothers RP-14. |


*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

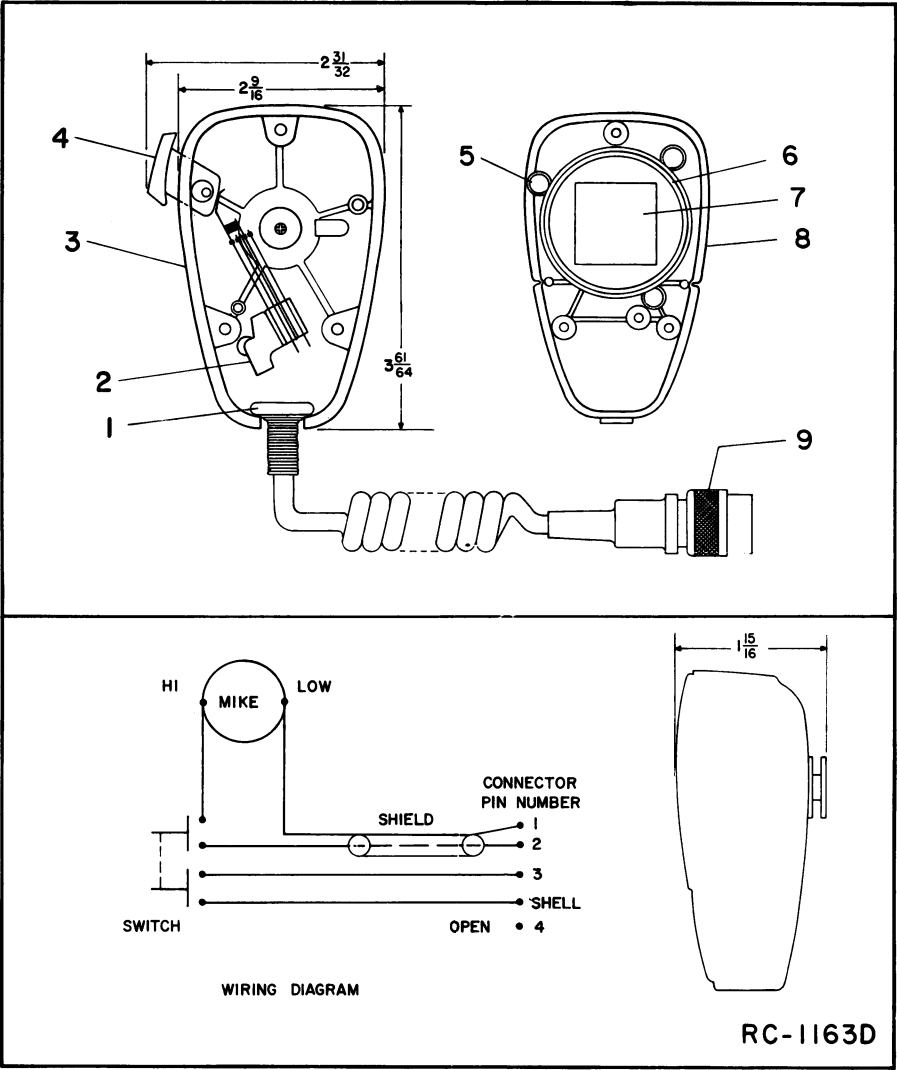



PARTS LIST
LBI-4427
STATION SPEAKER
19B219618G1

| SYMBOL | GE PART NO. | DESCRIPTION |
|--------|---------------|---|
| LS1 | 19A115964P1 | LOUDSPEAKERS Weatherproof, Permanent Magnet: 3-1/2 inch, 18 ohm $\pm 10\%$ imp at 1000 Hz, 15-19 ohms DC; sim to Oaktron S-9847. |
| | 19B219615P1 | MISCELLANEOUS Cover. |
| | 19B209260P103 | Terminal, solderless: sim to AMP 60495-1. |
| | 5490407P10 | Grommet. |
| | 19B201074P304 | Tap screw: No. 6-32 x 1/4. |

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

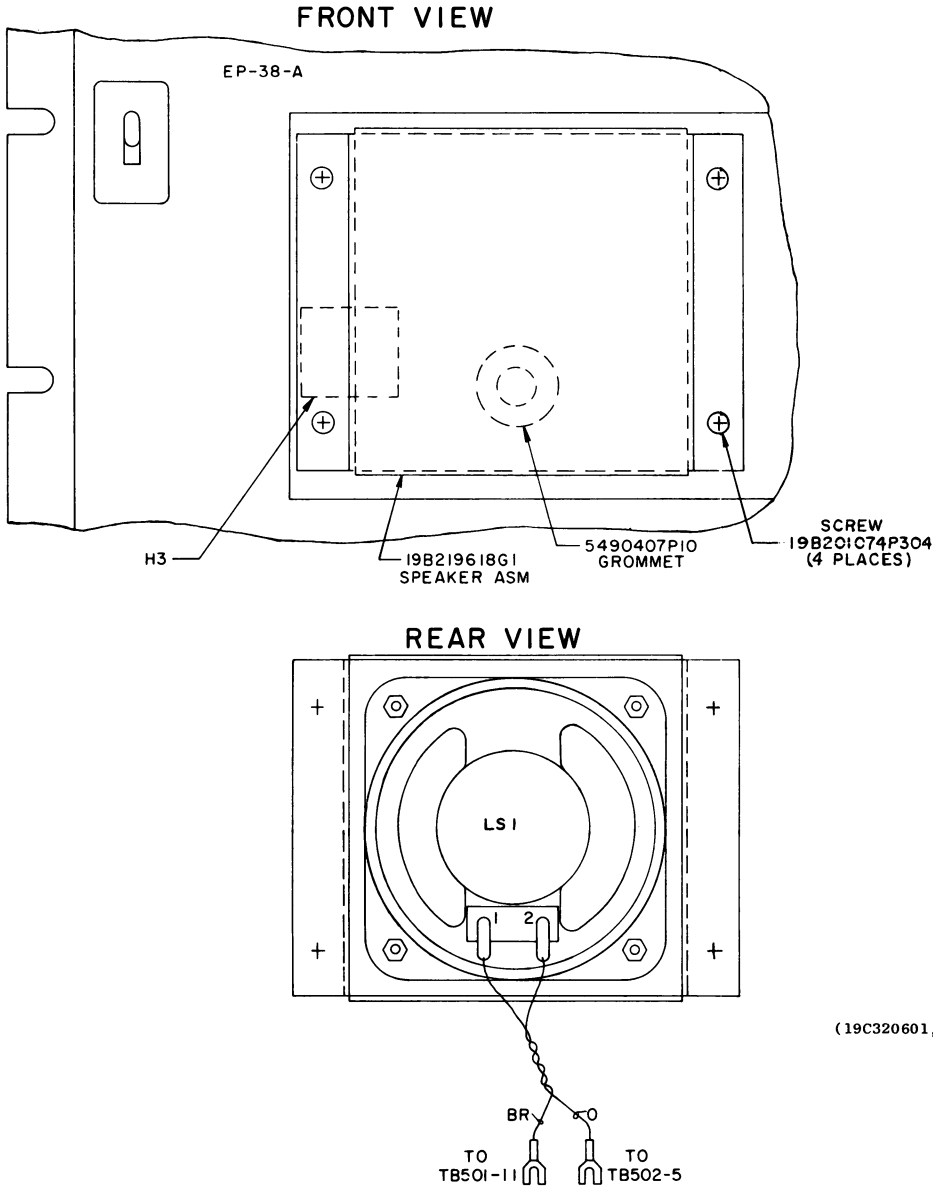


(19C320601, Rev. 1)

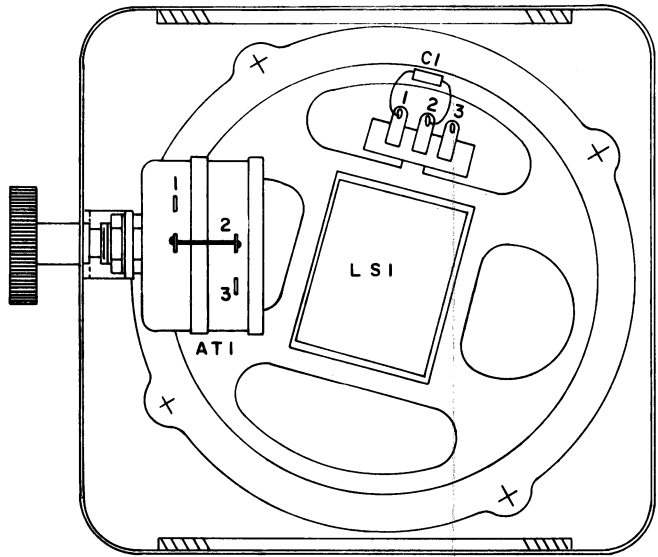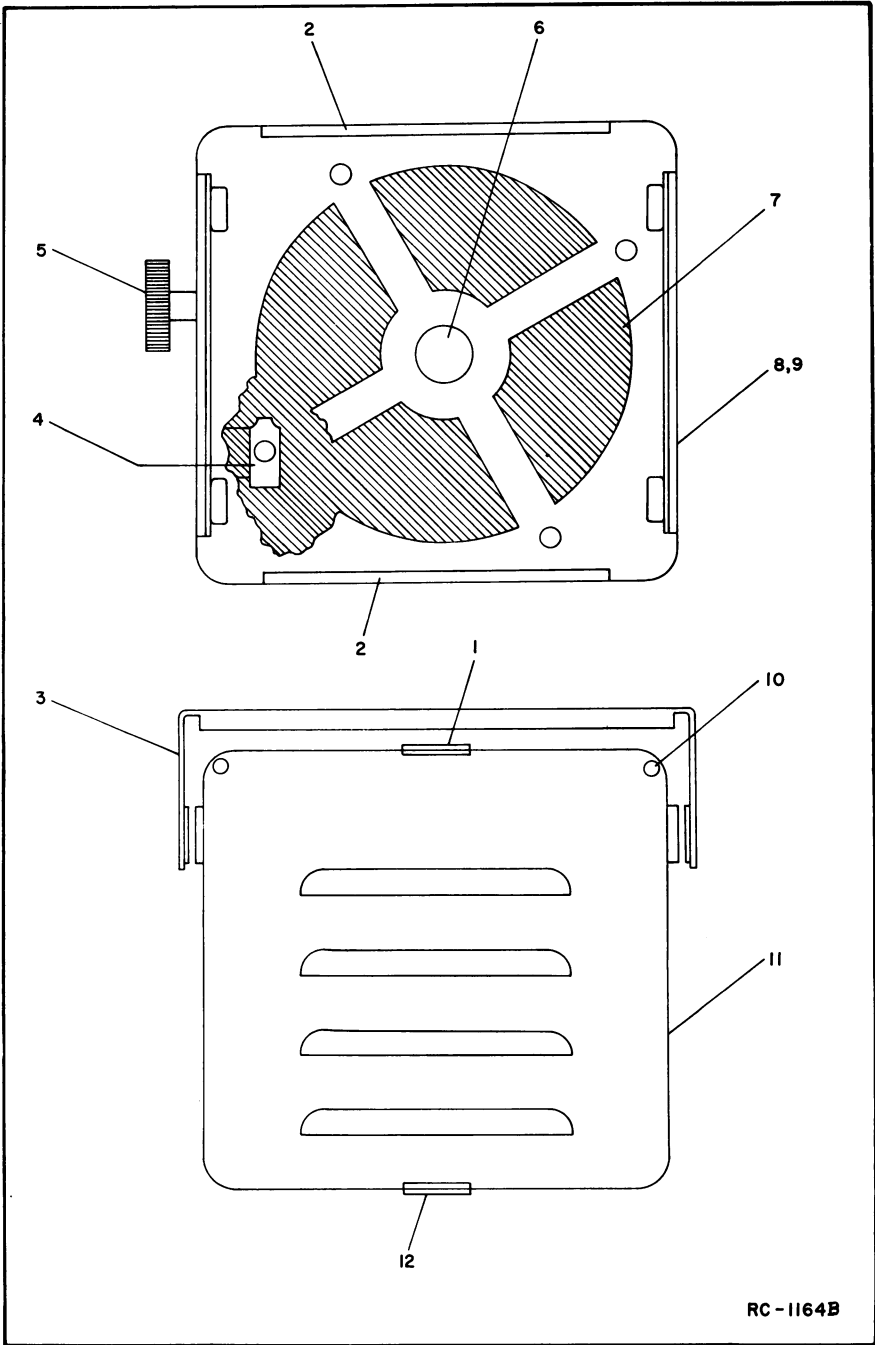

NOTE: ATTENUATOR (ATI) USED ON
MODEL 4EZ16A20 ONLY

RC-1363 B

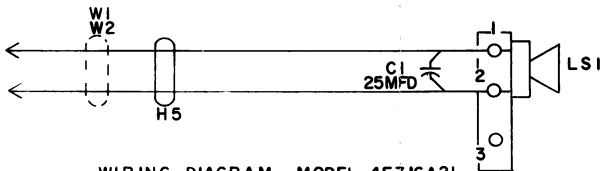

WIRING DIAGRAM - MODEL 4EZ16A21

RC-1118 B

The speaker leads connect to TB501-11 and TB502-5
on the Transmitter-Receiver Power Supply.

SPECIFICATIONS

| | |
|--------------------|-------------|
| Audio Power Input: | 5-watts |
| Frequency Range: | 300-3000 Hz |
| Input Impedance: | 3.2 ohms |
| Attenuator: | 3.5 ohms |

PARTS LIST

LBI-4081
FIVE-WATT STATION SPEAKER
MODEL 4EZ16A20 19D402449-G13
MODEL 4EZ16A21 19D402449-G14

| SYMBOL | G-E PART NO. | DESCRIPTION |
|-----------------------------------|--------------|--|
| ----- ATTENUATORS ----- | | |
| AT1 | 7478301-P48 | L-pad, variable, audio: 3.5 ohms res, 4 w, 40 db min attenuation max, 294° rotation. |
| ----- CAPACITORS ----- | | |
| CI | 19B209233-P1 | Electrolytic, non-polarized: 25 µf ±20%, 25 VDCW; sim to Sprague 41D. |
| ----- LOUDSPEAKERS ----- | | |
| LS3 | 19B209422-P1 | Permanent magnet: 5 inch, 3.2 ohms ±10% imp, 2.98 ohms ±15% DC res, 7.5 w max operating. |
| ----- CABLES ----- | | |
| W2 | 7484521-G7 | Speaker: 2 conductor with 2 spade tongue terminals, approx 4 feet long. |
| MECHANICAL PARTS (SEE RC-1164) | | |
| 1 | 5490407-P3 | Neoprene grommet. |
| 2 | 19A121623-P1 | (Not used). |
| 3 | 19A121521-G1 | Mounting support. |
| 4 | 7160861-P20 | (Not used). |
| 5 | 19A115837-P1 | Plastic knob. (Used in Model 4EZ16A20). |
| 6 | 19A12467-P1 | (Not used). |
| 7 | 19C303500-P1 | (Not used). |
| 8 | 19B216269-G3 | Can. (Used in Model 4EZ16A20). |
| 9 | 19B216269-G2 | Can. (Used in Model 4EZ16A21). |
| 10 | 4037072-P10 | (Not used). |
| 11 | 19A121550-G3 | Speaker cover. |
| 12 | 19A115470-P1 | Rubber grommet: approx 3/4 inch dia; sim to Atlantic Rubber 2279 (without hole). |

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

ORDERING SERVICE PARTS

Each component appearing on the schematic diagram is identified by a symbol number, to simplify locating it in the parts list. Each component is listed by symbol number followed by its description and GE Part Number.

Service parts may be obtained from Authorized GE Communication Equipment Service Stations or through any GE Radio Communication Equipment Sales Office. When ordering a part, be sure to give:

1. GE Part Number for component
2. Description of part
3. Model number of equipment
4. Revision letter stamped on unit

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance.

Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, contact the nearest Radio Communication Equipment Sales Office of the General Electric Company.

MAINTENANCE MANUAL

LBI-3603

MOBILE RADIO DEPARTMENT
GENERAL ELECTRIC COMPANY • LYNCHBURG, VIRGINIA 24502

GENERAL  ELECTRIC

PRINTED IN U.S.A.

DF-9014