



Mobile Communications

**MASTR[®] III
RF PACKAGE,
HIGH BAND**

TABLE OF CONTENTS

TRANSMIT SYNTHESIZER	LBI-38640
RECEIVE SYNTHESIZER	LBI-38641
RECEIVE RF MODULE	LBI-38642
IF MODULE	LBI-38643
POWER AMPLIFIER	LBI-38531
DUPLEXER	LBI-38763

Maintenance Manual



TABLE OF CONTENTS

	<u>Page</u>
SPECIFICATIONS	1
REGULATORY APPROVALS	1
MODULE NUMBERS	1
ISOLATOR	2
ANTENNA SWITCH	2
INTERCONNECTION DIAGRAM	3

Table 1 - Station Specifications

ITEM	SPECIFICATION
RECEIVER	
SENSITIVITY (12 dB SINAD)	-116 dBm [0.35 μV]
SELECTIVITY (25 kHz) (30 kHz)	-95 dB -100 dB
INTERMODULATION REJECTION	-90 dB
INTERMEDIATE FREQUENCY	21.4 MHz (low side injection)
IMAGE REJECTION	-100 dB
SPURIOUS RESPONSE REJECTION	-100 dB
HUM & NOISE (300-3000 Hz)	-55 dB
AUDIO RESPONSE (de-emphasis)	+1/-3 dB of 6 dB/OCTAVE (@ Line Output) +2/-8 dB of 6 dB/OCTAVE (@ Local Speaker)
FREQUENCY SPREAD (range) (full specification) (3 dB degradation)	150.8-174 MHz 2 MHz 3 MHz
TRANSMITTER	
RATED POWER OUTPUT	110 Watts
FREQUENCY STABILITY	±1.5 ppm
CONDUCTED SPURIOUS EMISSIONS	-36 dBm
MODULATION DEVIATION	±5 kHz
FM HUM & NOISE (300-3000 Hz)	-55 dB
AUDIO RESPONSE (pre-emphasis)	+1/-3 dB of 6 dB/OCTAVE
FREQUENCY SPREAD (range) (full specification)	<150.8-174 MHz) <150.8-174 MHz)

REGULATORY APPROVALS

The following equipment authorization numbers have been granted:

<u>COUNTRY</u>	<u>REGULATORY APPROVAL</u>
United States	FCC (Parts 15, 22, 74, 80, 90) AXATR-197-A2
Canada	DOC (RSS-119)

MODULE NUMBERS

TRANSMIT SYNTHESIZER	19D902780G1
RECEIVE SYNTHESIZER	19D902781G2
RX FRONT END MODULE (150.8-174 MHz)	19D902782G2
IF MODULE	19D902783G1
POWER AMPLIFIER	19D902797G1
LOW PASS FILTER	19D902856G1
ANTENNA SWITCH	19B235897P1
ISOLATOR	344A3406P1
DUPLEXER (150-162 MHz)	344A3371P1
DUPLEXER (162-174 MHz)	344A3371P2

Specifications


Frequency Range	136-174 MHz (no tuning)
Input Power	150 W (at max VSWR of 3.7:1)
Short Circuit Duration	100 ms max
Insertion Loss	0.3 dB max (25°C) 0.8 dB max (-40°C to +85°C)
Isolation	18 dB min (25°C) 15 dB min (-40°C to +85°C)

Description

The isolator has an internal load connected to an RF detector (sensor), the output from the sensor is continually monitored by the station for a fault condition (high VSWR). Once the station detects a sensor voltage above the threshold the transmitter is automatically de-keyed and a FAULT condition is reported.

IMPORTANT: The sensor output must be connected to P108 on the Interface Board when the Isolator is used, failure to make this connection with the Isolator installed will cause the isolator to be damaged under high VSWR conditions.


REFLECTED POWER	VSWR	TYPICAL SENSOR VOLTAGE
10W	1.70:1	3.9V
15W	1.92:1	4.8V
20W	2.15:1	5.7V
25W	2.38:1	6.4V
30W	2.62:1	6.8V

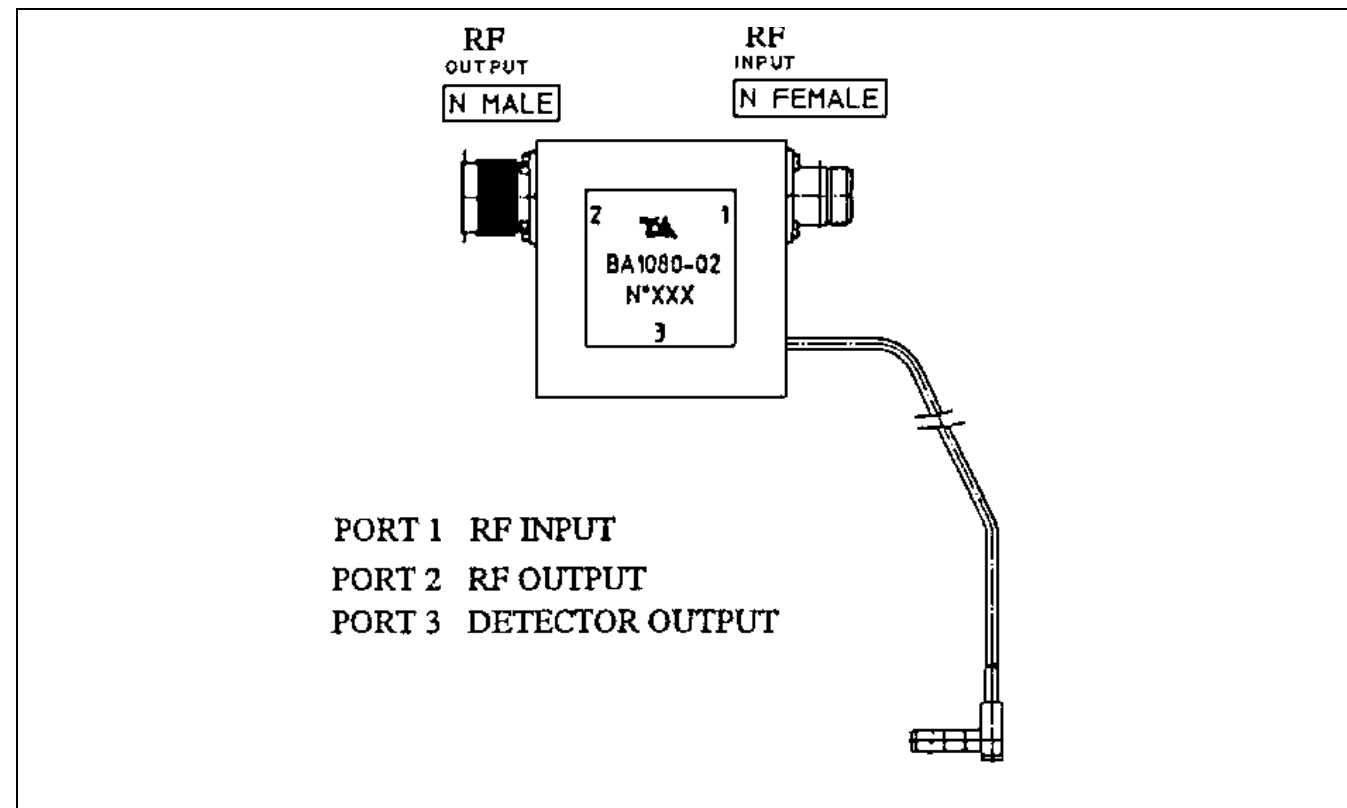


WARNING

DO NOT USE ISOLATOR WITHOUT CONNECTING THE SENSOR TO THE STATION



ISOLATOR
344A3406P1

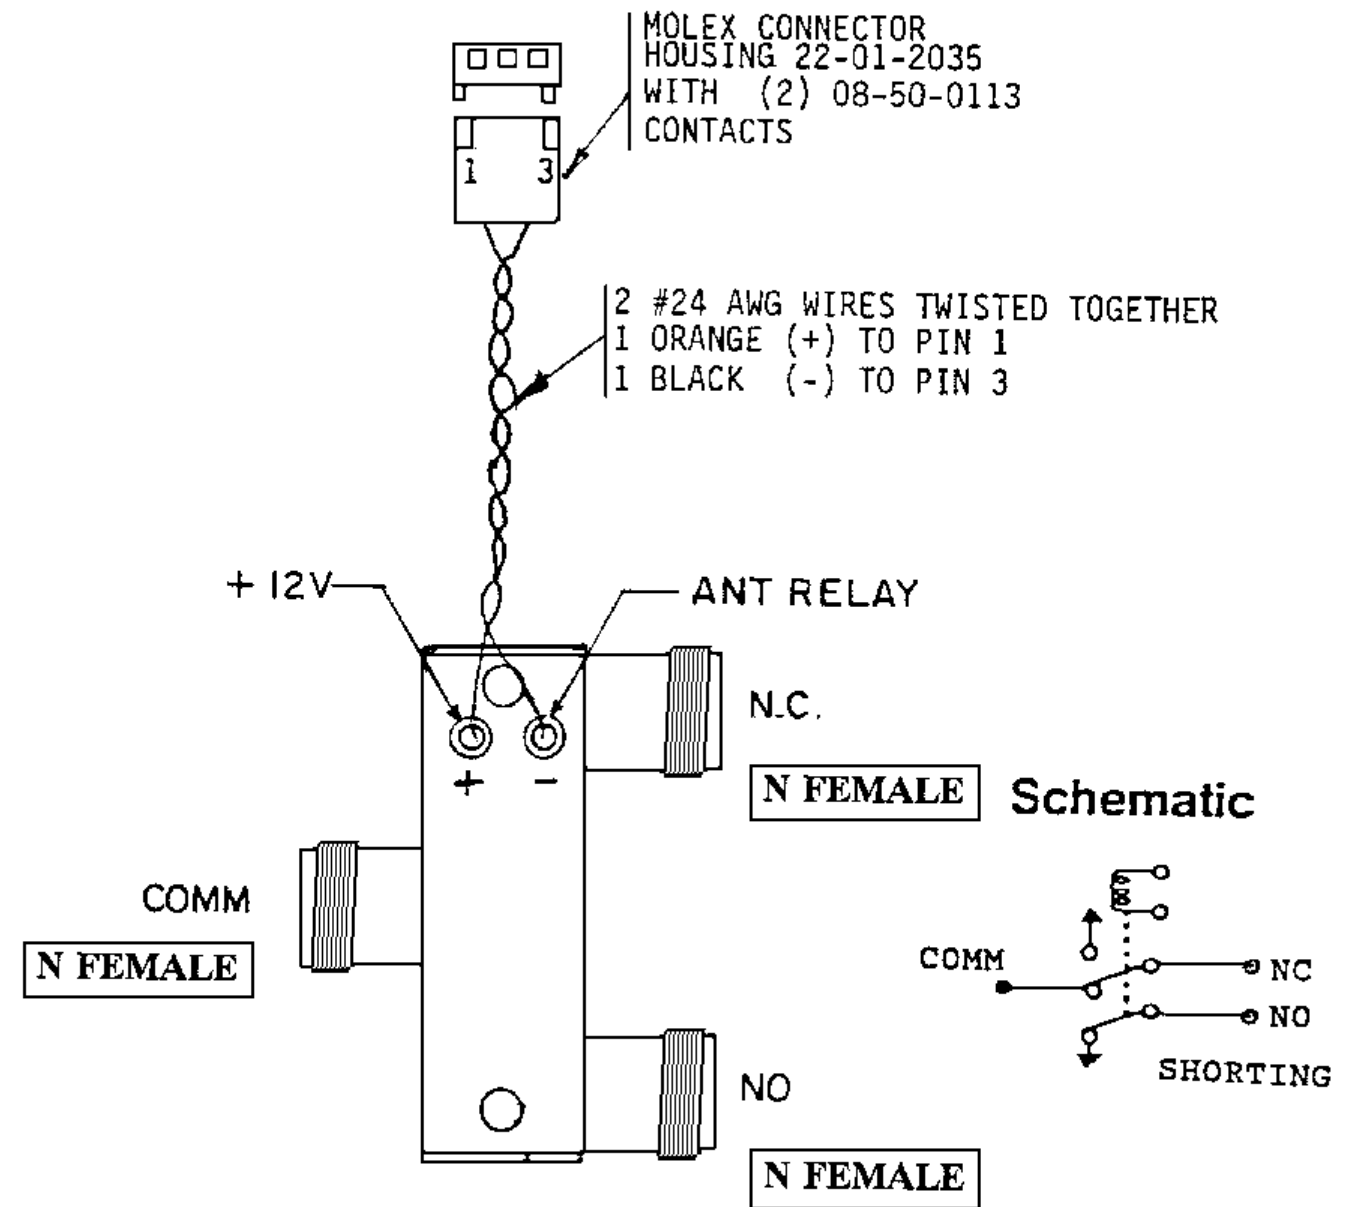

ANTENNA SWITCH
19B235897P1

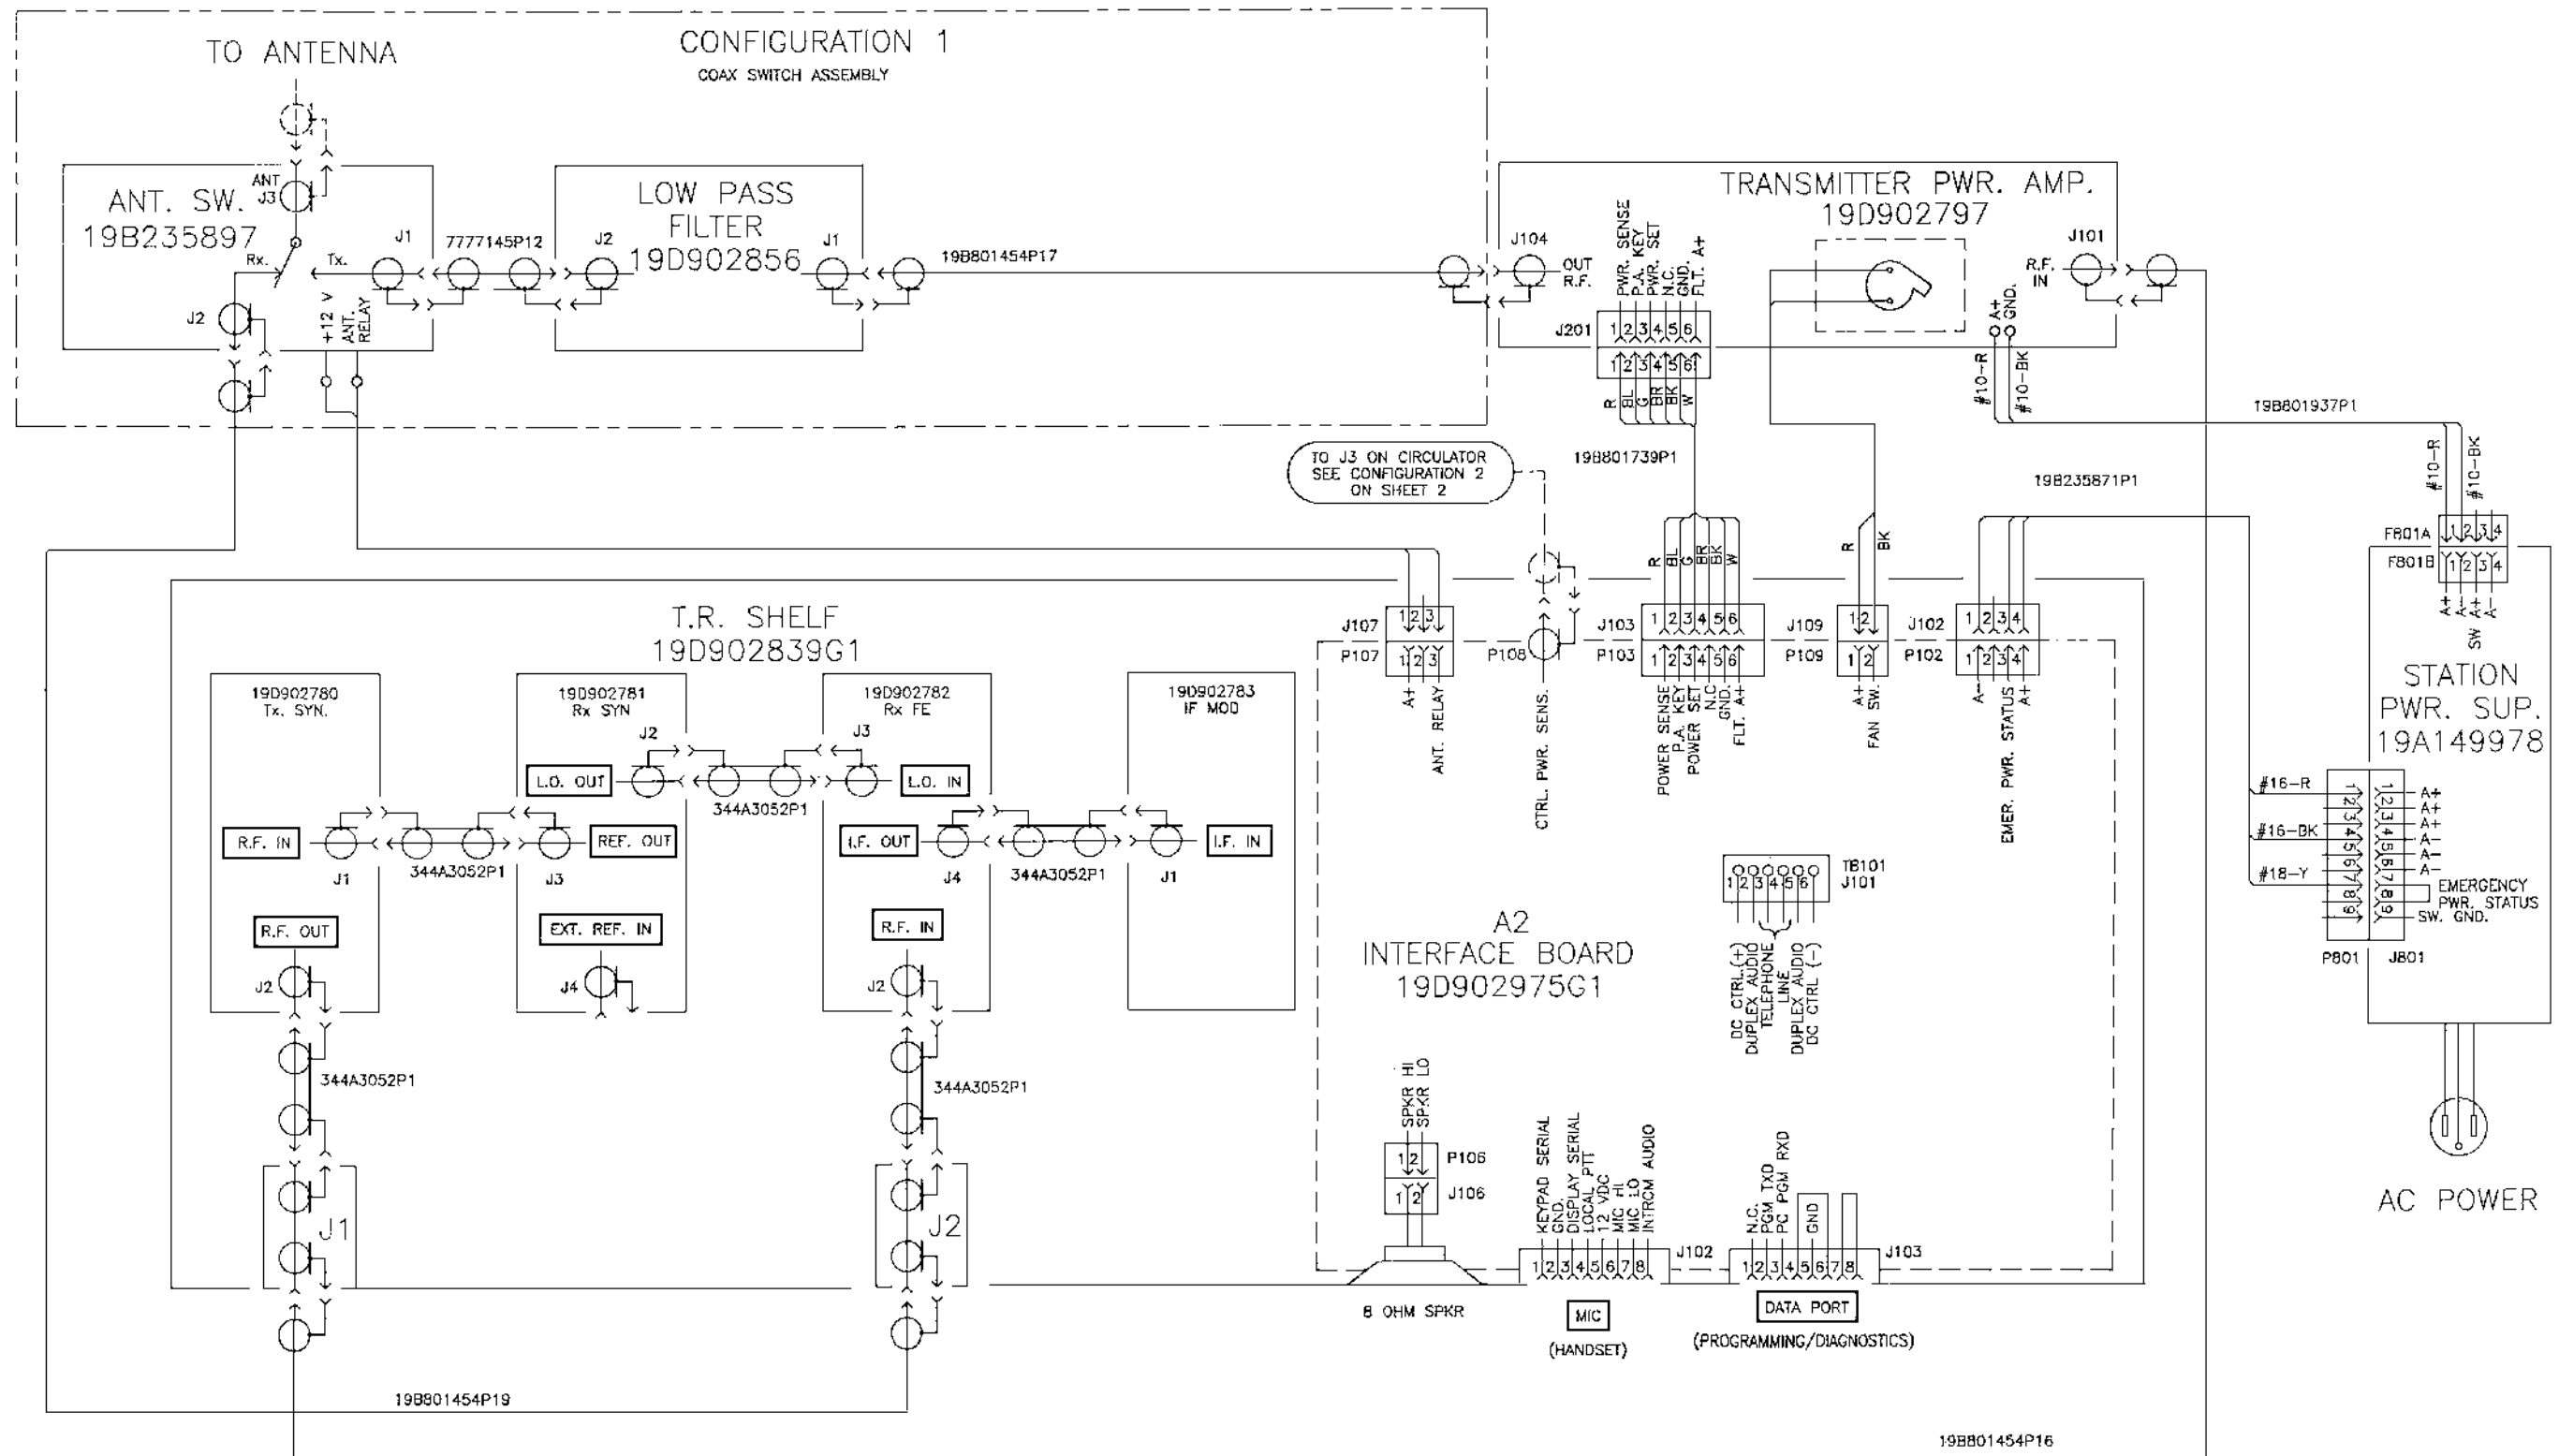

MASTR III STATION (19D903635 Sh. 1, Rev. 2)

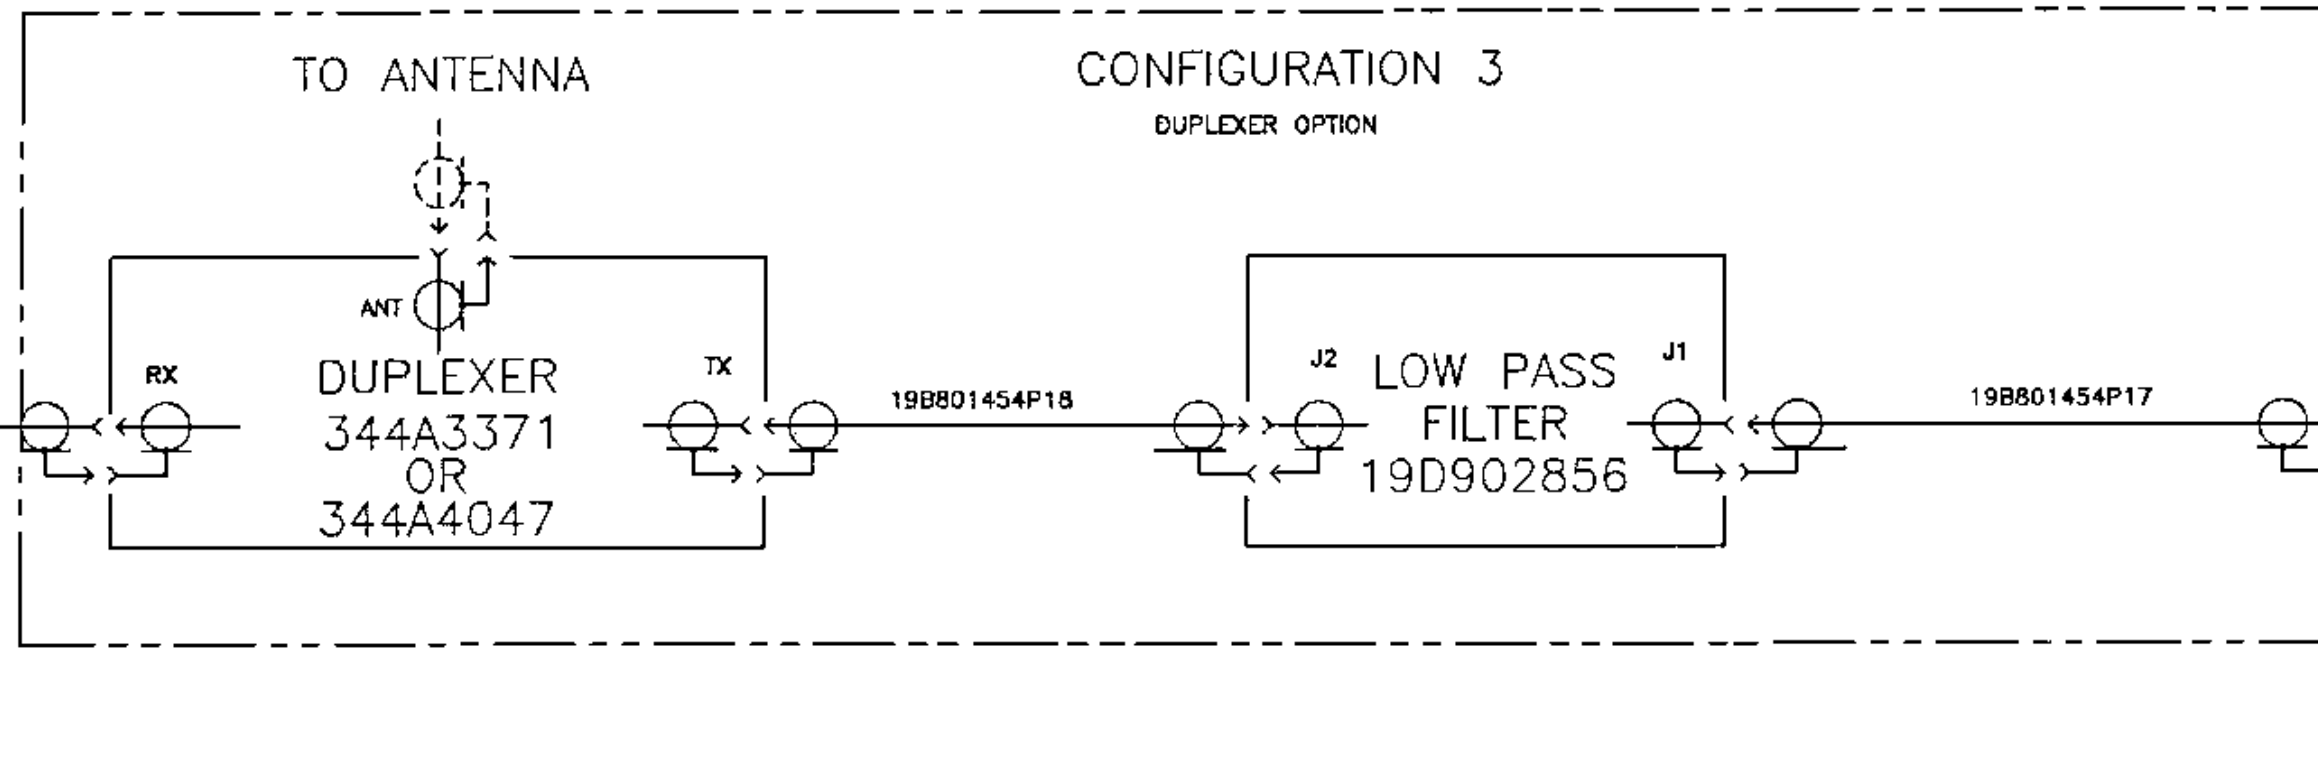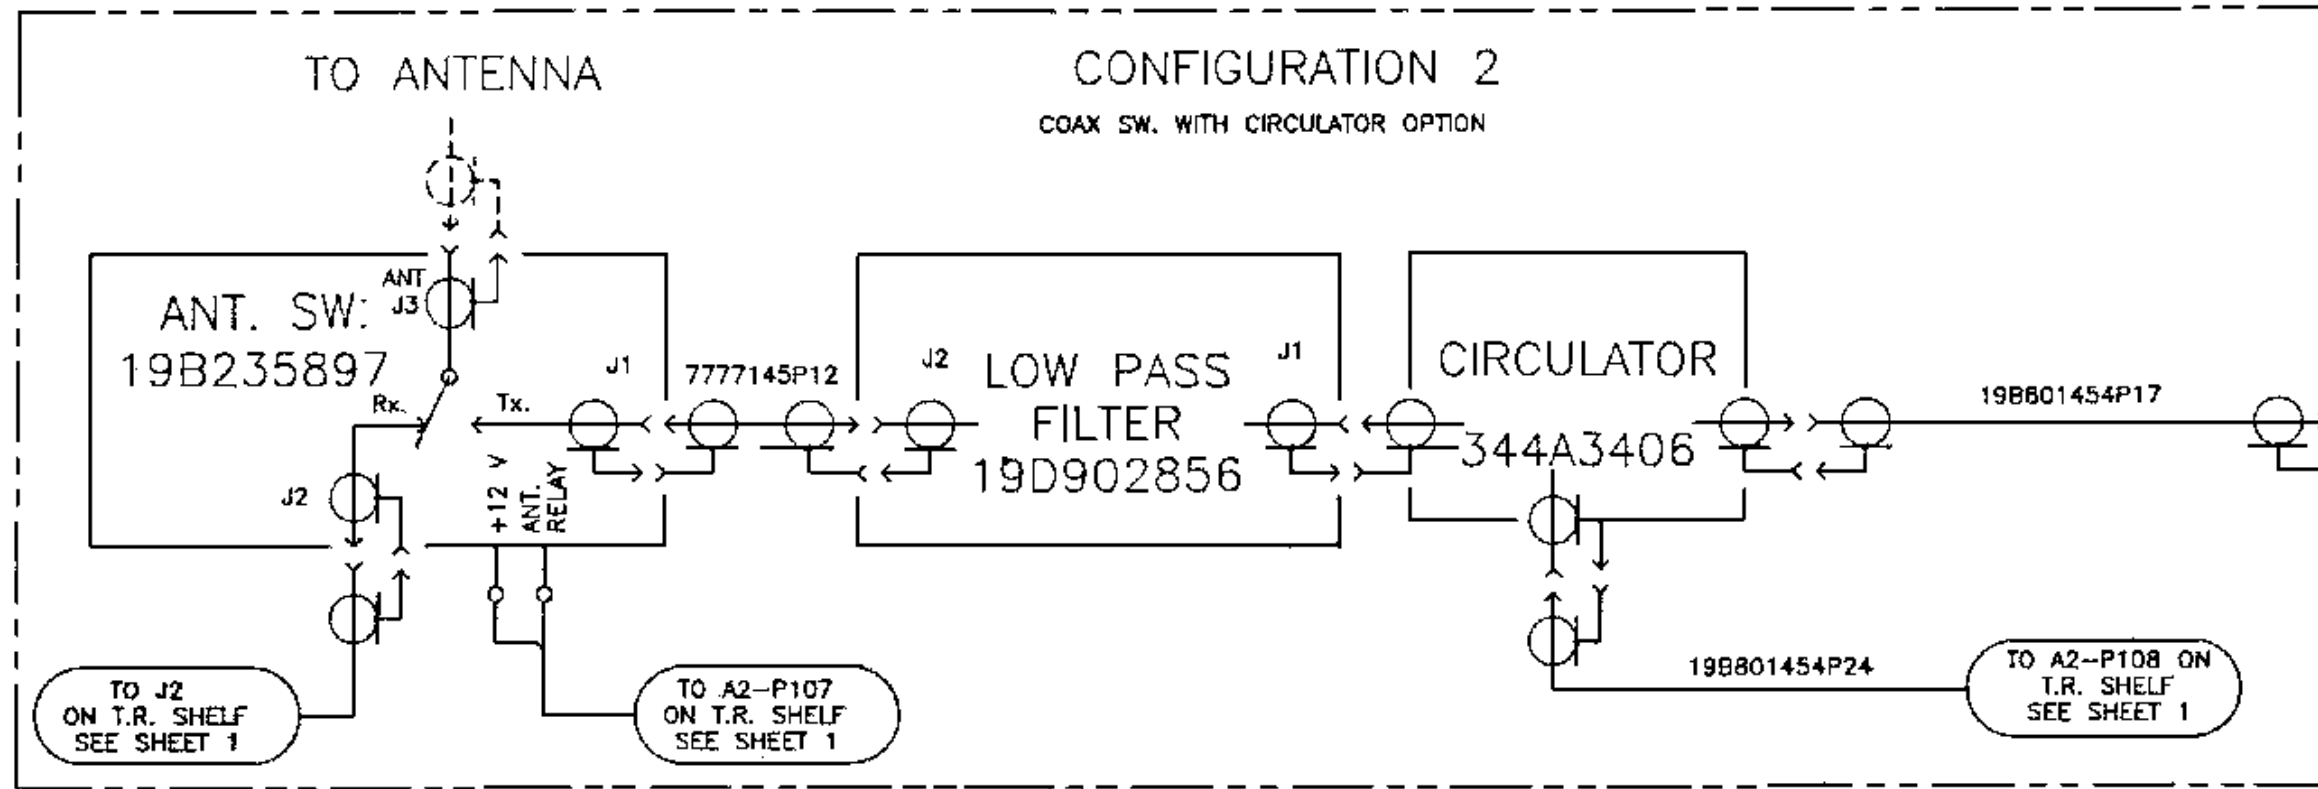

MASTR III STATION
(19D903635, Sh. 2, Rev. 4)

This page intentionally left blank