

 **MOBILE RADIO**

MAINTENANCE MANUAL

C-500 SERIES

1-THRU 12 - FREQUENCY CONTROL UNIT - 19D423590G5



SPECIFICATIONS *

Controls

Power-On
Volume
Squelch
Channel Selector Switch
Option Switch
Optional Blanker Disable Switch

Indicators

Power On Light
Transmit Light
Optional Channel Busy Light
Option Light

*These specifications are intended primarily for the use of the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

GENERAL  ELECTRIC

TABLE OF CONTENTS

SPECIFICATIONS	Cover
COMBINATION NOMENCLATURE	iii
DESCRIPTION	1
CIRCUIT ANALYSIS	1
OPTIONS	2
MAINTENANCE	4
TRANSMITTER KEYING & POWER DISTRIBUTION DIAGRAM	7
OUTLINE DIAGRAM	8
SCHEMATIC DIAGRAM	9
PARTS LIST	10
MICROPHONE & HOOKSWITCH	11
HANDSET & HOOKSWITCH	12
SPEAKER	13

OPTIONS

DESCRIPTION	MODEL NUMBER
Fixed Squelch (Option 9276)	19A129567G3
Channel Busy Light (Option 9277)	19A129567G6
Noise Blanker Switch (Option 9279)	19A129567G7
Universal Tone Jack (Option 9278)	19A129567G17
Extender Board (Option 9029)	19C320588G1
Window Mount Speaker Kit (Option 9053)	19A130023G1
Ignition Switch Standby Cable (Option 9065)	19B219537G1
Control Hump Mount Bracket (Option 9079)	19A130889G1
35 Foot Ground Cable (Option 9081)	19A136690G1

WARNING

Although the highest DC voltage in the radio is supplied by the vehicle battery, high current may be drawn under short circuit conditions. These currents can possibly heat metal objects such as tools, rings watchbands, etc. enough to cause burns. Be careful when working near energized circuits!

High-level RF energy in the transmitter Power Amplifier assembly can cause RF burns. KEEP AWAY FROM THESE CIRCUITS when the transmitter is energized!

COMBINATION NOMENCLATURE

1st Digit	2nd Digit	3rd Digit	4th Digit	5th Digit	6th & 7th Digits	8th Digit	
Mechanical Package	System Voltage	Channel Capacity	Number of Operating Channels	Microphone or Handset	Options	Options (cont'd)	Control Unit Series
F Control Unit w/mounting Bracket only	1 ±12 VDC MASTR II Appl	P 12 Channels	A One	1 None	BB Standard May apply all four digit options and Handset with Hook-switch	QK Type 90 Decoder w/External Alarm	5 C-500
G Control Unit w/mounting Bracket, Cables and Speaker. MASTR II Appl	2 ±24 to 48 VDC MASTR II Appl		C Two	2 Std. Microphone	CC Dual Control	QL Type 90 Encoder	
			E Three	3 Std. Microphone w/CG Hookswitch	DD Public Address	QM Type 90 Encoder with Auto Burst	
			F Four	4 Handset with Hookswitch (Compatible with C.G.)	EE Marine Hi-Lo Power Option	HH Int/Ext Speaker	
			G Five	5 Noise Canceling Microphone	FF Type 99 Decoder, Individual Call	LL PSLM, 2-Frequency	
			H Six	6 Noise Canceling Microphone with C.G. Hookswitch	FQ Type 99 Decoder, Group Call	LM PSLM, 2- of 8-Frequency (Locked Priority)	
			J Seven	7 Handset With Hookswitch, Duplex (Compatible with C.G.)	FH Type 99 Decoder, Individual call w/External Alarm	LN PSLM, 2- of 8-Frequency (Locked Non-Priority)	
			K Eight	8 Handset (Decoder App)	FJ Type 99 Decoder, Group Call with External Alarm	MM External CG Encoder Application Kit	
			L Nine		QQ Type 90 Encoder/Decoder	NN GE Star Encoder	
			M Ten		QH Type 90 Encoder/Decoder with External Alarm		
			N Eleven		QJ Type 90 Decoder		
			P Twelve				

DESCRIPTION

MASTR II Control Units are attractively styled, highly functional units that are enclosed in a two-piece molded Lexan® housing for durability and ease of disassembly. The Control Units are mounted to the vehicle with a Safety Release Lexan® mounting bracket assembly for passenger safety.

The Control Unit uses a printed wiring board to provide a minimum of wiring. The only internal wires used are on the POWER-ON switch, indicator lights, and jumpers for various options.

Cable plugs are secured to the back of the Control Unit by plastic locking clips. The plugs are equipped with indexing tabs to assure connection to the correct jack. The cable is equipped with a strain relief hook that attaches to a steel plate on the bottom rear of the Control Unit.

The microphone plug is secured to a jack on the bottom of the unit by means of a captive locking screw.

All indicator lights are light-emitting diodes (LEDs) for reliability, long life, and low power consumption.

CIRCUIT ANALYSIS

The Control Units are equipped with a VOLUME control, SQUELCH control and a POWER-ON rocker switch. The multi-frequency Control Unit is also equipped with a frequency selector switch.

When the POWER-ON switch (S701) is in the OFF position, power is removed from the

radio except for the transmitter PA, which is connected to the vehicle battery at all times. Pushing the switch to the ON position applies power to the radio, provides power for the push-to-talk (PTT) circuit and lights the power-on LED in the Power-ON/Frequency Indicator window.

Pressing the PTT switch on the microphone energizes the antenna switch, keys the transmitter, mutes the receiver, and lights the transmit indicator LED.

Releasing the PTT switch turns off the transmitter and transmit indicator, de-energizes the antenna switch and un-mutes the receiver. Refer to the Table of Contents for a Simplified Transmitter Keying and Power Distribution Diagram.

CR701 and CR708 are protective diodes. CR701 will cause the fuse in the yellow lead to blow if the polarity is reversed. CR708 inhibits the PTT circuit if the polarity is reversed.

MULTI-FREQUENCY SWITCH (S704)

The frequency selector switch is a 12-position switch with mechanical stops that limit rotation from one through twelve positions as required.

The frequency selector switch selects the desired channel for both transmitting and receiving. The switch connects A- to the selected transmitter and receiver ICOM so that the radio operates on the selected channel.

DC CONVERTER MODIFICATIONS

In radios equipped with the DC converter, the POWER-ON switch is modified so that

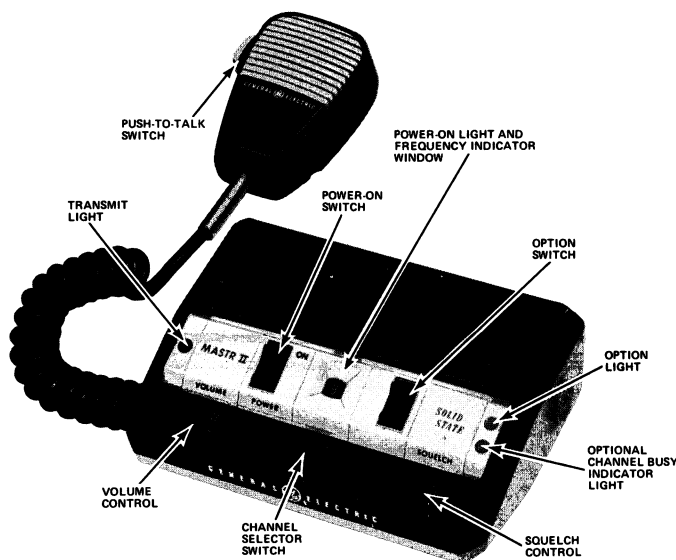


Figure 1 - Control Unit Layout

placing the switch in the ON position applies the input voltage directly to the DC converter. Instructions for the modification are shown on the control unit Schematic Diagram.

OPTIONS

MASTR II control units may be equipped with different options. All controls and indicator lights (LEDs) are shown in Figure 1.

Channel Busy Indicator

When no signal is applied to the receiver, the Carrier Activity Sensor (CAS) voltage from the receiver squelch IC is near A-. This forward biases diode CR702 in the control unit, keeping Q701 turned off. When a signal is applied to the receiver (with or without audio), the CAS voltage rises to approximately 10 Volts. This reverse biases CR702, allowing Q701 to conduct, turning on Channel Busy Indicator CR706. The indicator will remain on as long as a signal is applied to the receiver, or until the transmitter is keyed.

Noise Blanker Disable Switch

Noise Blanker Disable switch S1 mounts on the back of the control unit (see Outline Diagram). Placing the switch in the "OFF" position applies A- to the blanker disable lead. The A- is connected to pin 4 of the receiver blanker IC (U551), disabling the noise blanker circuit. The A- is connected to the blanker disable circuit by a jumper from H63 to H66 on the system board (see Front Panel and System Board Maintenance Manual).

Placing the switch in the "ON" position removes the A- to pin 4 of the blanker IC, allowing the blanker to operate.

Fixed Squelch

In radios with the Fixed Squelch option, a two-position rotary switch replaces the standard variable squelch potentiometer. A squelch potentiometer is then mounted on J904 on the system board (see Front Panel and System Board Maintenance Manual).

Turning the optional squelch switch on the Control Unit to the right applies A- to the squelch disable lead. The A- is connected to pin 2 of the receiver audio IC (U604), disabling the squelch circuit (and Channel Guard if present). Turning the switch to the left removes the A- to Pin 2 of the squelch IC, enabling the squelch circuit (and Channel Guard).

Internal/External Speaker

For radios equipped with the Internal/External Speaker option, the control unit

will be equipped with optional SPEAKER switch (marked INT-EXT), an Option indicator light and an Internal/External Speaker component board. The radio also has an external speaker mounted outside of the vehicle passenger compartment (on the roof, under the hood, etc.).

With the switch in the INT (Internal) position, all of the messages received will be heard on the speaker mounted in the vehicle.

Placing the switch in the EXT (External) position turns on the option light, and applies all received messages to both the external and internal speaker. This allows the received messages to be heard while the operator is inside or outside of the vehicle.

For complete details, refer to the Maintenance Manual for the Internal/External Speaker option.

Public Address

With the Public Address option, the control unit will be equipped with an optional PA-ON switch, an Option indicator light, and a Public Address component board. The vehicle will also have an additional speaker mounted outside the passenger compartment.

With the PA switch in the "OFF" position, the operator can send and receive messages as he normally does. Placing the PA switch in the ON position lights the Option light, disables the transmitter, and switches the receiver audio output to the external speaker.

Pressing the PTT switch on the microphone switches the microphone output through the receiver audio amplifier circuit so that the amplified message is heard on the external speaker only. No messages can be transmitted in this mode of operation, and all incoming messages will be heard on the external speaker.

For complete details, refer to the Maintenance Manual for the Public Address option.

Priority Search-Lock Monitor

For radios equipped with Priority Search-Lock Monitor, (PSLM), the control unit will be equipped with a SEARCH-ON switch, a Channel Busy light, and a PSLM board.

With the SEARCH switch in the ON position, the PSLM provides two channel monitoring (depending on the PSLM option used) by alternately sampling a priority channel and then a non-priority channel.

When a signal is received on the priority channel, the PSLM stops searching and locks on the priority channel for the duration of the message. When a signal is first received on the non-priority channel, the

PSLM stops on that channel while monitoring the priority channel. If a signal is received on the priority channel while the PSLM is stopped on the non-priority channel, the PSLM reverts to the priority channel and locks on that channel for the duration of the message.

NOTE

The PSLM will operate only when the receiver is squelched. When the receiver is unsquelched, the PSLM will lock on the first channel that receives a message.

The Channel Busy light will glow steadily whenever a message is received on the priority channel. When a message is received on a non-priority channel, the Channel Busy light will flash on and off. Keying the transmitter turns on the red Transmit light, and turns off the Channel Busy light.

Placing the SEARCH switch in the "OFF" position disables the PSLM circuit, and messages can be sent and received only on the channel selected by the frequency selector switch.

For complete details, refer to the Maintenance Manual for the Priority Search-Lock Monitor option.

Squelch Operated Relay

In radios equipped with the Squelch Operated Relay option, the control unit will be equipped with an OPTION-ON switch an Option light and a Squelch Operated Relay component board.

When the switch is in the ON position, the relay will energize and the Option light will turn on each time a message is received (receiver unsquelches). The relay will remain on until the OPTION switch is turned "OFF". The relay can be connected to turn on a light, operate an alarm or perform other functions as desired.

For complete details, refer to the Maintenance Manual for the Squelch Operated Relay option.

Type 99 Tone Decoders

Type 99 Tone equipment eliminates reception of unwanted calls through the use of a sequential tone decoder. The equipment provides individual or group call capability using either two or four Versatone networks. (Versatone networks determine the Tone frequencies that the unit responds to.

Decoder operation is controlled by the Monitor/Reset switch and/or Hookswitch. When the microphone or handset is removed from the hookswitch, the decoder is deactivated and the receiver reverts to noise

squelch operation. Replacing the microphone or handset automatically resets the receiver to respond to only those calls properly tone coded. A Decoder Call Indicator will light each time a properly coded call is received.

An optional external alarm relay is controlled by the two position Option-On switch. When a properly tone coded call is received and the Option switch is in the On position, the relay will operate an external horn or light.

For complete details, refer to the Maintenance Manual for the Type 99 Tone Decoder Option.

Type 90 Tone Encoder and Decoders

Type 90 Tone equipment provides tone coded message transmission to eliminated reception of unwanted calls. All Type 90 Tone Encoders and Decoders operate on a single tone selectable from ten standard frequencies between 1000 and 3000 Hz.

A single tone burst automatically precedes the first transmission in the standard unit. The tone burst is initiated by removing the microphone or handset from the hookswitch and keying the PTT. The pushbutton Tone-On switch allows the tone to be sent manually if desired.

Decoder operation is controlled by the Monitor/Reset switch and/or hookswitch. When the microphone or handset is removed, the receiver reverts to noise squelch operation. Replacing the microphone or handset, automatically resets the unit to the decode function. A Decoder Call Indicator will light each time a properly tone coded call is received.

An optional external alarm relay is controlled by the two position Option-On switch. When a properly tone coded call is received and the Option-On switch is in the On position, the relay will operate an external horn or light.

For complete details, refer to the Maintenance Manual for the Type 90 Tone Encoder/Decoder option.

Dual Control

The Dual Control equipment allows the radio to be operated by either of two remotely located control units. Control is transferred between control units by depressing the Control switch on the Control unit where control is desired.

When the Control switch is depressed, the control light indicates the unit with control. Control remains with this unit until the Dual Control switch on the second control unit is operated.

For complete details, refer to the Maintenance Manual for the dual Control Option.

Universal Tone Jack

The Universal Tone Jack (J750) mounts on the back of the control unit (see Outline Diagram). The nine pin jack provides interface connections between the control unit and external tone equipment.

Extender Board

Troubleshooting the component board options in the control unit is facilitated by using Extender Board 19C320588G1 (Option 9029). The extender board provides feed throughs for all connections between the control unit printed wire board and the option component board.

12-VOLT IGNITION SWITCH CONNECTIONS

In 12-Volt vehicle systems, the Control Unit may be connected for two different modes of operation, depending on the way the ignition switch cables are connected in the vehicle system. The black cable provides the system ground connection. The yellow fused lead provides the receiver hot connections and the transmitter Push-To-Talk hot connection. The two types of operation are:

1. Ignition Switch Control - For ignition switch control, the Yellow fused lead (connects) to the ACCESSORY or ON terminal of the ignition switch. The transmitter and receiver will operate only when the ignition switch is in the ACCESSORY or ON position. Turning the ignition switch OFF removes all power to the Control Unit.
2. Ignition Switch Bypass - For ignition switch bypass, the Yellow fused lead connects to the "hot" side of the ignition switch or the vehicle fuse block assembly. Both the transmitter and receiver operate independently of the ignition switch and are turned on and off only by the POWER-ON switch on the Control Unit.

DC CONVERTER CONNECTIONS

For combinations equipped with the DC converter, a single red fused lead is used. The fused lead always connects to battery plus in either positive or negative ground systems.

CAUTION

When using the DC Converter, do not connect battery ground to the Control Unit A-. To do so may cause failure of the current limiting circuit in the converter.

MAINTENANCEDISASSEMBLY

To gain access to the inside of the Control Unit, simply remove the two screws on the bottom of the front edge of the unit, and lift off the top cover.

To remove the printed wiring board from the control unit housing:

1. Remove the two screws holding the microphone jack.
2. Remove the screw between J701 and J702, and remove the screw between J702 and J703.
3. Remove the screw at each end of the switch and control mounting bracket.
4. Remove the screw holding Power-On switch S701 to the bottom housing. Then swing the printed wiring board up from the front and lift the board out.

RE-INSTALLATION±12-Volt Systems

If the radio is moved to a different vehicle, always check the battery polarity and voltage of the new system before using the radio.

If the radio is moved to a vehicle with different battery polarity, it will be necessary to change the ignition switch leads to the vehicle system plug. Use the extraction tool as shown in Figure 2, and change the leads as shown in Figures 3 and 4 as required.

DC CONVERTER

For radios equipped with the DC converter, no changes are required in the lead to the vehicle system plug.

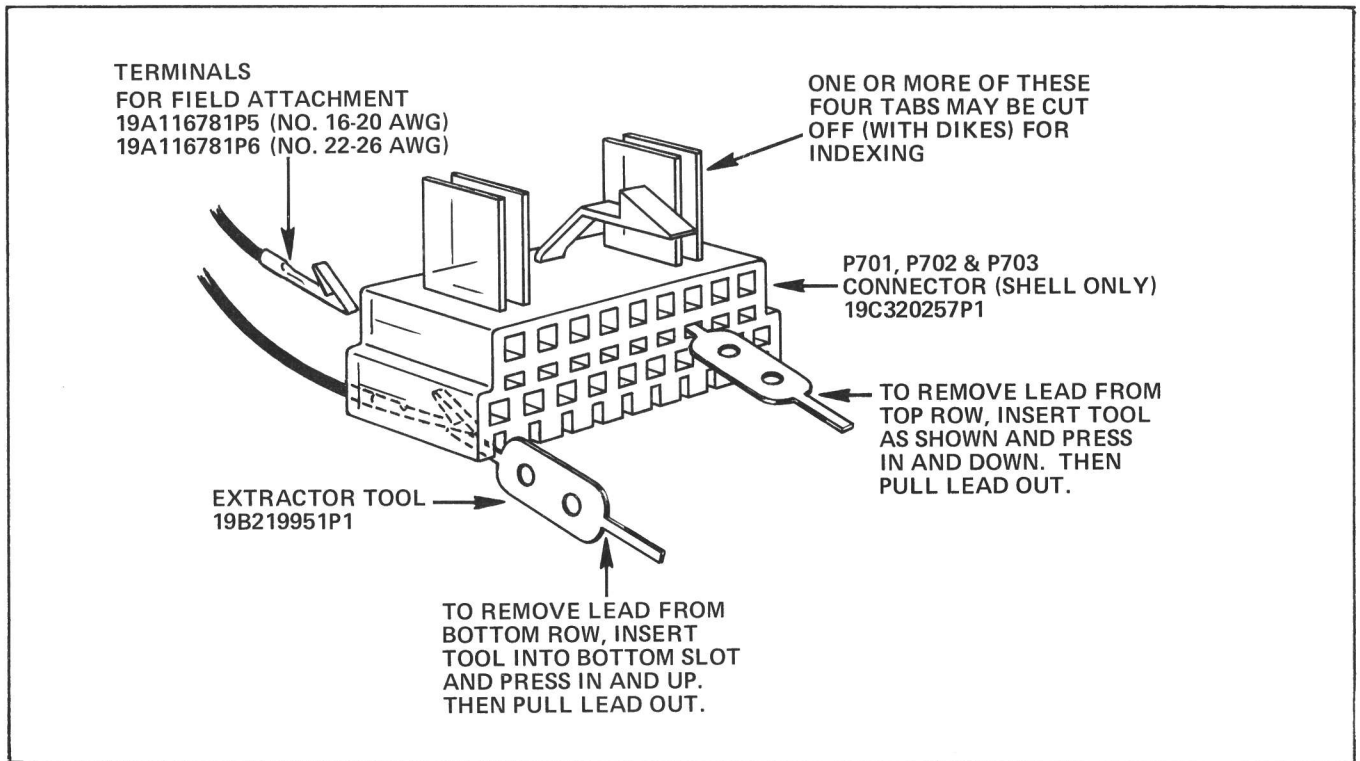


Figure 2 - Using Extraction Tool

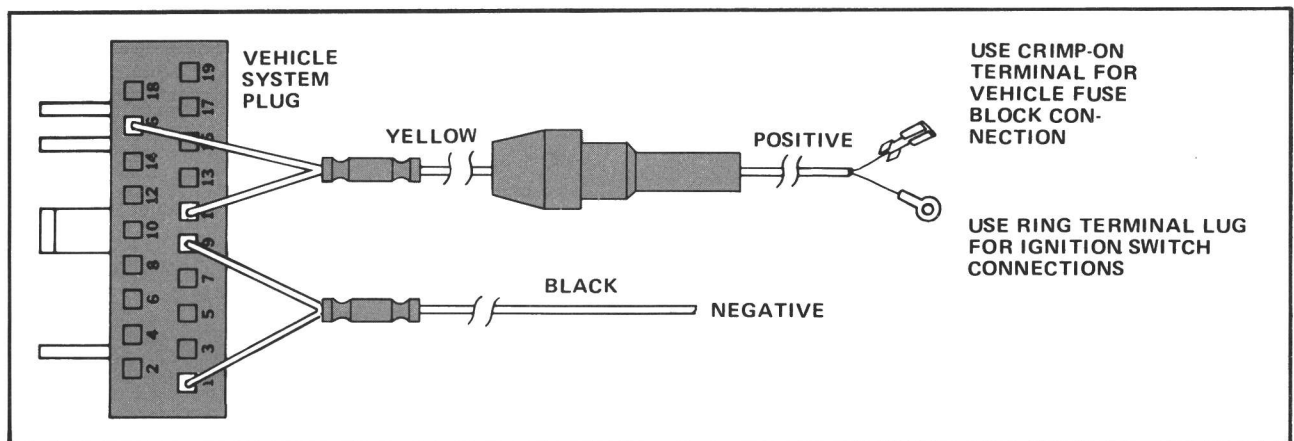


Figure 3 - 12-Volt, Negative Ground Connections









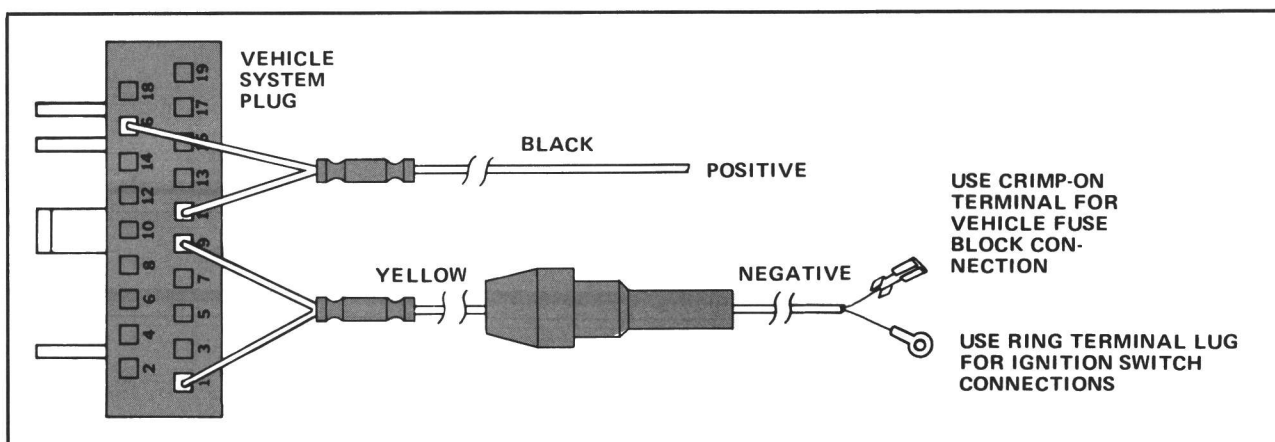


Figure 4 - 12-Volt, Positive Ground Connections

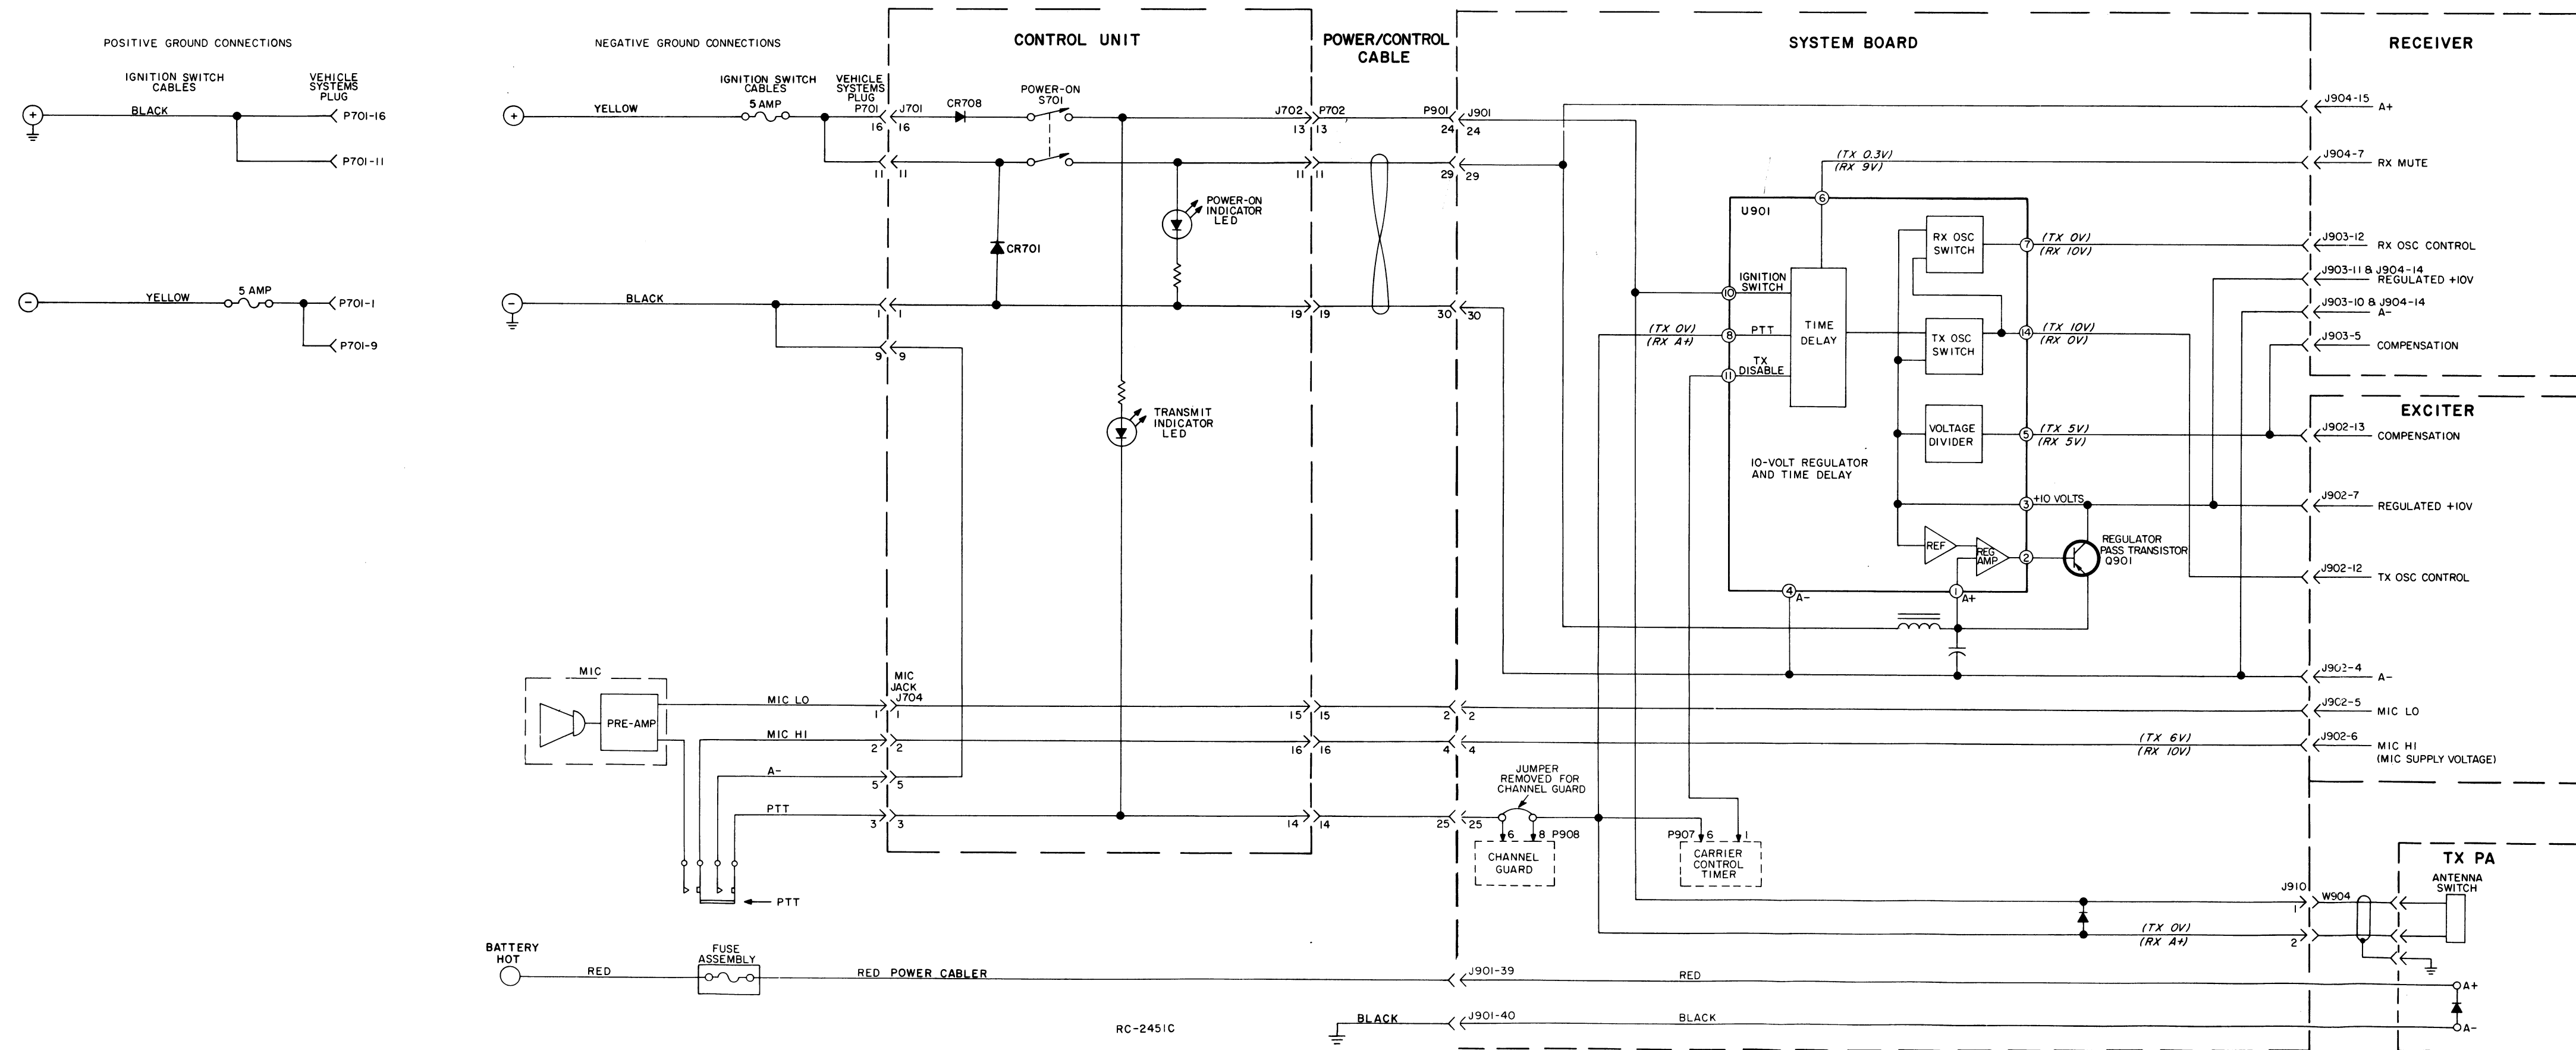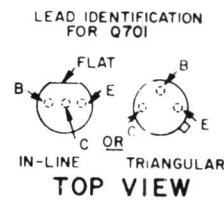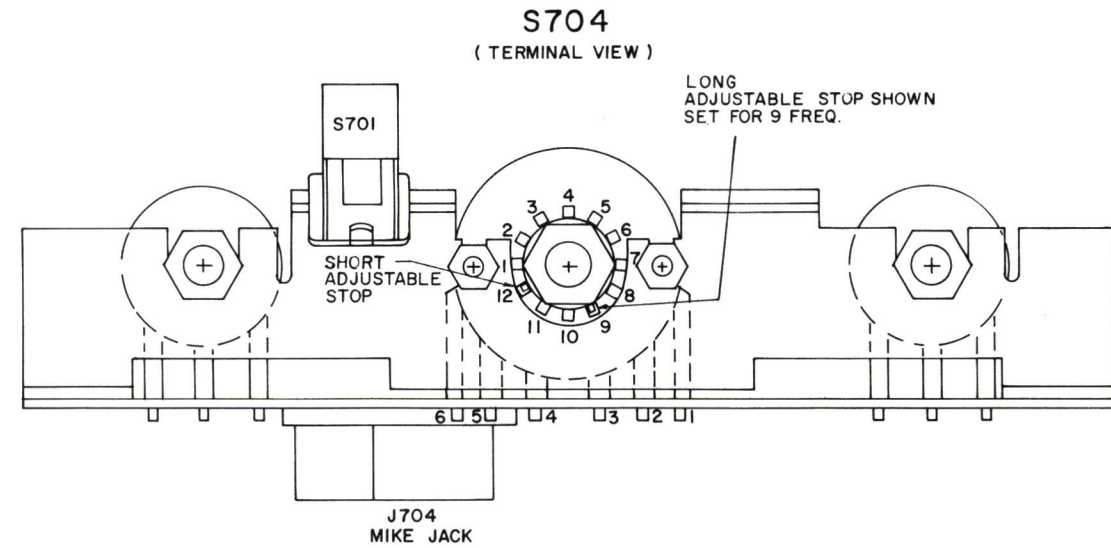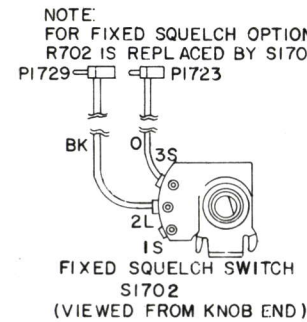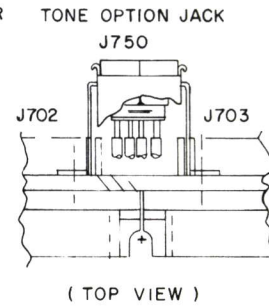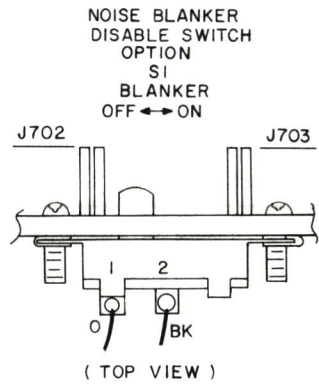


TRANSMITTER KEYING & POWER DISTRIBUTION DIAGRAM

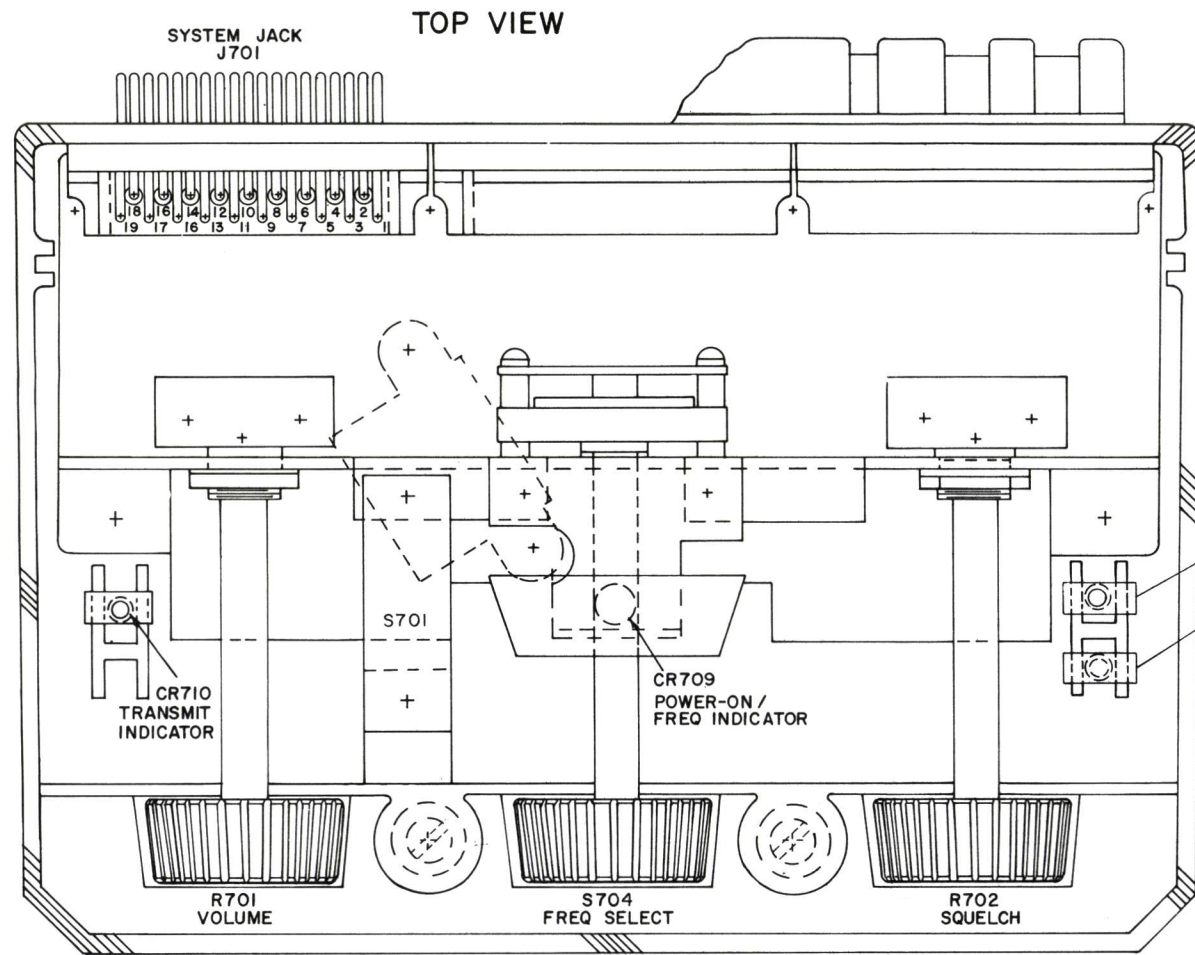

NOTE: LEAD ARRANGEMENT, AND NOT
CASE SHAPE, IS DETERMINING
FACTOR FOR LEAD IDENTIFICATION.


(19R622258, Rev. 2)

COMPONENT SIDE

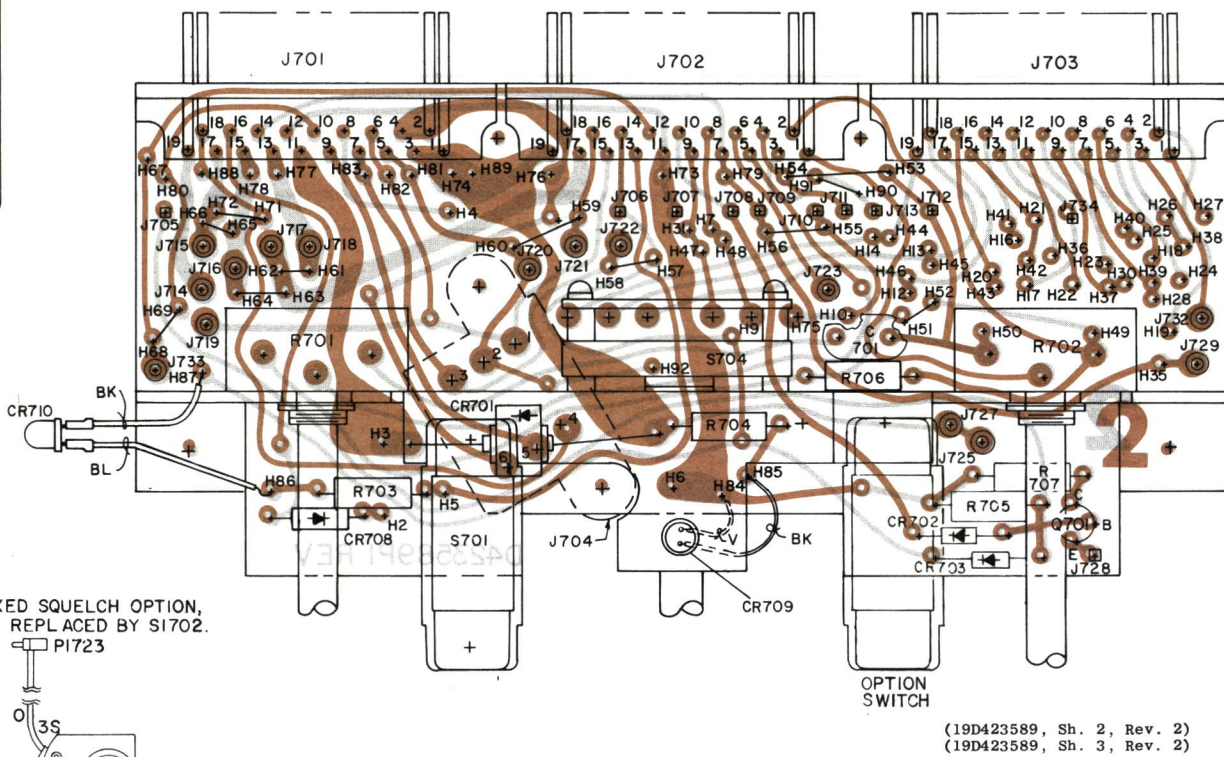

(19D423589, Sh. 2, Rev. 2)
(19D423589, Sh. 3, Rev. 2)

SOLDER SIDE

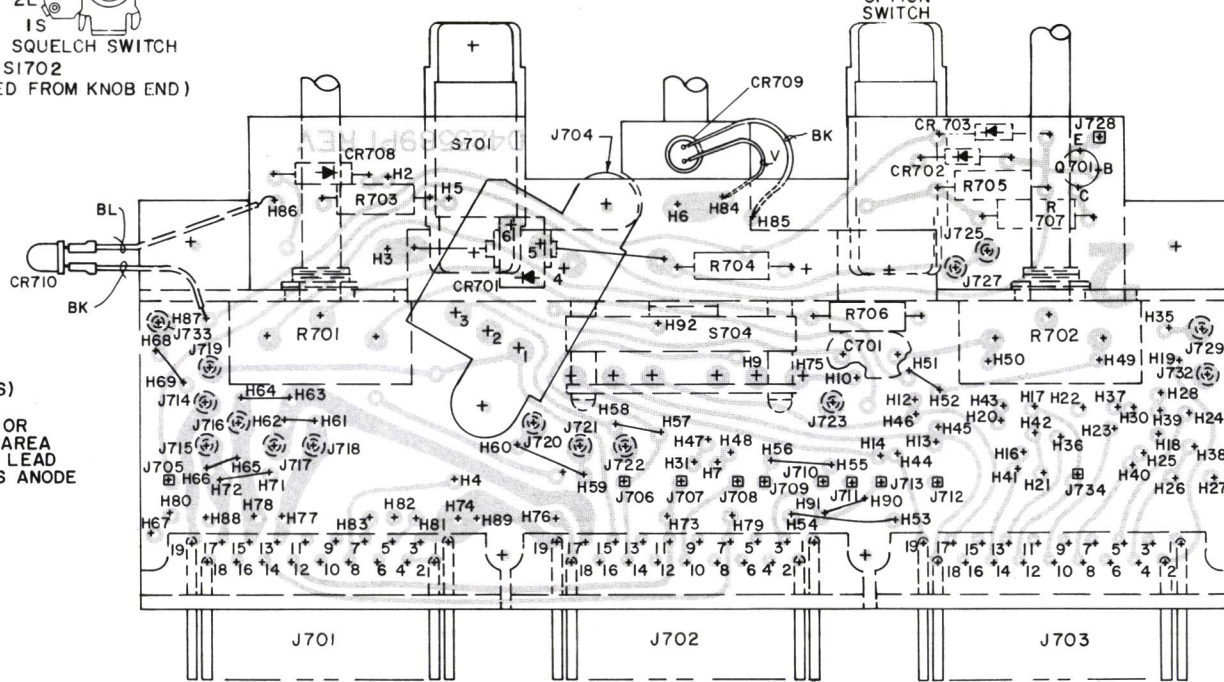

(19D423589, Sh. 2, Rev. 2)

FREQUENCY SELECTOR SWITCH STOP SETTING

IF THE NUMBER OF OPERATING FREQUENCIES ARE CHANGED,
IT WILL BE NECESSARY TO CHANGE THE STOP SETTINGS ON
THE FREQUENCY SELECTOR SWITCH. TO SET THE STOPS:

1. REMOVE THE TWO SCREWS ON THE BOTTOM OF THE
FRONT EDGE OF THE CONTROL UNIT, AND LIFT THE
TOP COVER OFF.
2. REMOVE THE TWO MOUNTING SCREWS ON THE POWER-ON/
FREQUENCY INDICATOR (CR709) RETAINER AND MOVE
THE INDICATOR AND RETAINER TO ONE SIDE.
3. LOOSEN AND SLIDE BACK ON THE FREQUENCY SELECTOR
SWITCH SHAFT THE 3/8-INCH NUT AND WASHER HOLDING
THE SWITCH STOPS IN PLACE.
4. MAKE SURE THE SHORT ADJUSTMENT STOP IS IN POSITION
12 (SEE OUTLINE DIAGRAM).
5. HOLD THE SHORT ADJUSTMENT STOP IN PLACE AND ROTATE
THE FREQUENCY SELECTOR SWITCH FULLY COUNTERCLOCK-
WISE TO THE SHORT STOP POSITION (CHANNEL 1 ON THE
FREQUENCY SELECTOR SWITCH INDICATOR).
6. PLACE THE LONG ADJUSTMENT STOP IN THE STOP POSITION
CORRESPONDING TO THE DESIRED NUMBER OF OPERATING
FREQUENCIES.


NOTE


FOR TWELVE FREQUENCY OPERATION, BREAK THE TABS OFF
OF BOTH STOPS.

7. REPLACE THE 3/8-INCH NUT AND WASHER, THE POWER-ON/
FREQUENCY INDICATOR RETAINER AND MOUNTING SCREWS,
AND THE CONTROL UNIT TOP COVER AND RETAINING SCREWS.
8. CHECK THE FREQUENCY SELECTOR SWITCH FOR PROPER
OPERATION.

OUTLINE DIAGRAM

1 THRU 12-FREQUENCY
CONTROL UNIT 19D423590G5



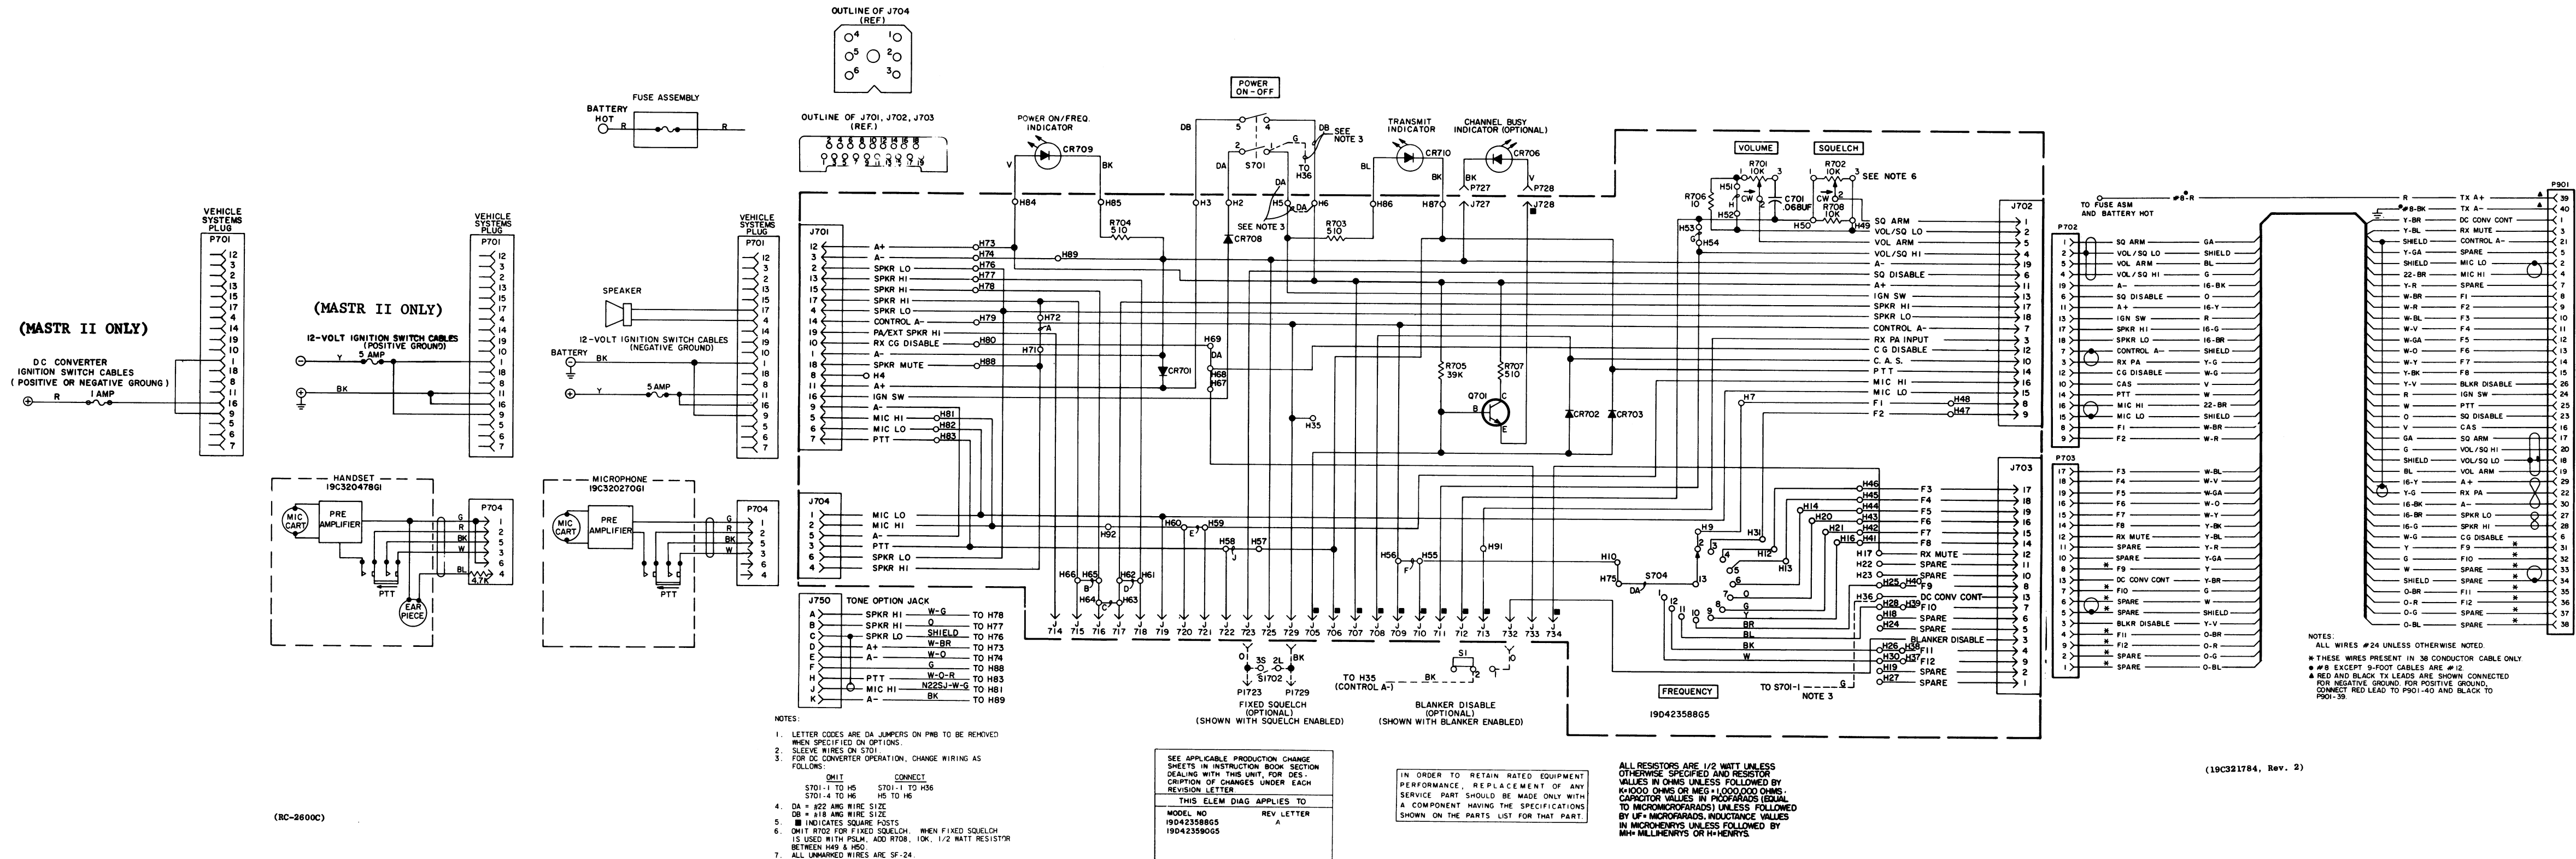

PARTS LIST		
LBI30257A		
C-500 SERIES CONTROL UNIT 19D423580G5 (12 FREQ) AND ASSOCIATED ASSEMBLIES		
SYMBOL	GE PART NO.	DESCRIPTION
C701	19A116080P106	COMPONENT BOARD 19D423580G5
		----- CAPACITORS -----
		Polyester: 0.068 pF ±10%, 50 VDCW.
		----- DIODES AND RECTIFIERS -----
		Silicon.
	19A116783P1	Silicon, fast recovery, 225 mA, 50 PIV.
	19A115250P1	
	4037822P1	Silicon, 1000 mA, 400 PIV.
	19B219800G3	Diode, red light emitting.
		----- JACKS AND RECEPTACLES -----
J701 thru J703	19C320257P2	Pin wafer assembly: 19 contacts.
		----- RESISTORS -----
	19B219627G1	Connector: 6 contacts.
	19A116779P1	Contact, electrical: sim to Molex 08-50-0404.
		----- SWITCHES -----
	4033513P4	Contact, electrical: sim to Bead Chain L93-3.
		----- UNIVERSAL TONE JACK OPTION 19A129567G17
	4033513P4	Contact, electrical: sim to Bead Chain L93-3.
	4033513P4	Contact, electrical: sim to Bead Chain L93-3.
	4033513P4	Contact, electrical: sim to Bead Chain L93-3.
J704 thru J713	19A116779P1	Contact, electrical: sim to Molex 08-50-0404.
		----- TRANSISTORS -----
		Silicon, NPN.
		----- RESISTORS -----
	19A116687P2	Variable, carbon film: 10K ohms ±20%, 1/4 w; sim to Mallory K204.
	19A116687P1	Variable, carbon film: 10K ohms ±20%, 1/2 w; sim to Mallory M101.
	3R77P511J	Composition: 510 ohms ±5%, 1/2 w.
		----- SWITCHES -----
	3R77P393K	Composition: 39K ohms ±10%, 1/2 w.
	3R77P100K	Composition: 10 ohms ±10%, 1/2 w.
J714 thru J723	3R77P511J	Composition: 510 ohms ±5%, 1/2 w.
		----- SWITCHES -----
		Push: DPST, 0.5 amp VDC or 3.0 amps at 125 v; sim to Switchcraft 11K1040.
	19B21999G1	Rotary: 1 sections, 1 poles, 9 positions (adj stop), 2 amps at 28 VDC or 1 amp at 110 VRMS; sim to Oak Type "F".
		FREQUENCY INDICATOR LIGHT ASSEMBLY 19B21969G3
		----- DIODES AND RECTIFIERS -----
	19A134146P7	Diode, optoelectronic: green; sim to Opcoa LSM-16.
J724 thru J733		
J734 thru J743		

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

SYMBOL	GE PART NO.	DESCRIPTION
18	N710P16012C6	Screw, hexhead, slotted: No. 10-16 x 3/4. (Quantity 3, used without safety release disc & retainer bracket).
	N130P1624C6	Screw, thread forming: No. 10-16 x 1-1/2. (Quantity 3, used without safety release disc & retaining bracket for extra thick carpet.
	19D416594P1	Mounting bracket.
	19E500988P1	Cover.
	N187P16010C6	Machine screw: slotted, hex/washer head, No. 10-32 x 5/8.
	NP270753P1	Nameplate. (MASTR II SOLID STATE).
	19B219626P1	Knob plug. (Not Used).
	7140578P4	Nut, push on: sim to Tinnerman C1259-014-27. (Not Used).
	19A130009P1	Diffuser. (Not Used).
	7160815P4	(Not Used).
19		
20		
21		
22		
23		
24		
25		
26		

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

SYMBOL	GE PART NO.	DESCRIPTION
7491823P7		Ring terminal, solderless: wire size No. 16-14 AWG.
	7491823P8	Ring terminal, solderless: wire size No. 16-14 AWG.
	4029484P2	Terminal, quick connect: wire size 14-18 AWG, fits 1/4 x .032 tab; sim to AMP 41274.
	19A115579P1	Insulated splice.
	19A116781P5	Contact, electrical: wire size No. 18-24 AWG; sim to Molex 08-50-0106.
		DC CONVERTER IGNITION SWITCH CABLE 19B219537G3
		----- PLUGS -----
		Connector. Includes:
		Shell.
		Jumper.
P701		
	19B226516P3	
	19A130117G1	
	1R16P3	Fuse, quick blowing: 1 amp 250 v; sim to Littelfuse 312001 or Bussmann AGC-1.
	19A115776P2	Fuseholder, phen: sim to Bussmann Type HHJ.
	19A115776P3	Contact, electrical: sim to Littelfuse 904-83. (Located inside fuseholder).
	7491823P7	Ring terminal, solderless: wire size No. 16-14 AWG.
	7491823P8	Ring terminal, solderless: wire size No. 16-14 AWG.
	4029484P2	Terminal, quick connect: wire size 14-18 AWG, fits 1/4 x .032 tab; sim to AMP 41274.
P701		
	19A115579P1	Insulated splice.
	19A116781P5	Contact, electrical: wire size No. 18-24 AWG; sim to Molex 08-50-0106.
		OPTIONAL 12-VOLT 3-WIRE IGNITION SWITCH CABLE 19B219537G1
		----- PLUGS -----
		Connector. Includes:
		Shell.
		Y Cable. (BLACK).
		FUSED LEAD ASSEMBLY 19A129480G1 1 AMP (RED) (Used with 19B219537G1)
	1R16P3	Fuse, quick blowing: 1 amp 250 v; sim to Littelfuse 312001 or Bussmann AGC-1.
19A115776P2		
	19A115776P3	Contact, electrical: sim to Littelfuse 904-83. (Located inside fuseholder).
	7491823P7	Ring terminal, solderless: wire size No. 16-14 AWG.
	7491823P8	Ring terminal, solderless: wire size No. 16-14 AWG.
	4029484P2	Terminal, quick connect: wire size 14-18 AWG, fits 1/4 x .032 tab; sim to AMP 41274.
	19A115579P1	Insulated splice.
	19A116781P5	Contact, electrical: wire size No. 16-20 AWG; sim to Molex 08-50-0106.
		FUSED LEAD ASSEMBLY 19A129480G2 5 AMP (YELLOW) (Used with 19B219537G1)
	1R16P8	Fuse, quick blowing: 5 amp 250 v; sim to Littelfuse 312005 or Bussmann MTH-5.
	19A115776P2	Fuseholder, phen: sim to Bussmann Type HHJ.
19A115776P3		
	19A115776P3	Contact, electrical: sim to Littelfuse 904-83. (Located inside fuseholder).

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

SYMBOL	GE PART NO.	DESCRIPTION
7491823P7		Ring terminal, solderless: wire size No. 16-14 AWG.
	7491823P8	Ring terminal, solderless: wire size No. 16-14 AWG.
	4029484P2	Terminal, quick connect: wire size 14-18 AWG, fits 1/4 x .032 tab; sim to AMP 41274.
	19A115579P1	Insulated splice.
	19A116781P5	Contact, electrical: wire size No. 16-20 AWG; sim to Molex 08-50-0106.
		25 - 50 MHz ANTENNA
7491074P1		
	7491074P2	Antenna: includes stainless steel rod approx 98-1/2 inches long; ball tip; lockwasher; No. 10-32 hex socket set screw; sim to Antenna Specialists ASPA38GE. (30-50 MHz).
		Antenna: includes stainless steel rod approx 102 inches long; ball tip; No. 10-32 hex socket set screw; sim to Antenna Specialists ASPA38GE. (25-30 MHz).
	7102930P3	Adapter, antenna: approx 2-5/16 inches long. (Used with GE Dwg 7491074P1).
	4KY9A1	Loading coil: 25-33 MHz; sim to Antenna Specialists ASPA87.
	19A121577G1	Antenna hook kit.
	7134724P1	Antenna hook.
	19C307172P1	Antenna Package: Includes base and ball assembly, adapter spring assembly, cable assembly, horseshoe plate, and rubber gasket.
		Base and ball assembly. Newtronics 5495.
		Adapter spring assembly. Newtronics 3327.
19C320111G1		
	19C320111G2	Cable assembly. Newtronics 183-BAO.
		Horseshoe plate. Newtronics 3393-3.
		Rubber gasket. Newtronics 3320.
		66-88 MHz ANTENNA 19C320111P3
19C320111G2		
		Antenna base: 15 ft. cable with M2822P1 connector with 7105381P1 adaptor; sim to Decibel Products DB719.
		Antenna whip and Spring base: sim to Decibel Products DB670A.
19B209018P5		
		132-512 MHz ANTENNA 19B209568P1
19B209018P5		
		Whip assembly. 068110-001.
		Whip nut assembly. 068047-001.
		Base nut assembly. 068048-001.
		"O" Ring (LARGE). 007059-122.
		Stud assembly. 068046-001.
		RC58/U Cable, 15 feet. 068115-001.
19B209018P5		
		800-870 MHz ANTENNA 19B209568P4
19B209018P5		
		Whip assembly. 068110-001.
		Whip nut assembly. 068047-001.
		Base nut assembly. 068048-001.
		"O" Ring (LARGE). 007059-122.
		Stud assembly. 068046-001.
		Plug, Type N. sim to U55368/U.
		Cable. (included as part of complete antenna assembly only).

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

SYMBOL	GE PART NO.	DESCRIPTION
		12 VOLT FUSE ASSEMBLY 19B216021G4 (Fuses must be ordered separately)
		----- FUSES -----
F1	1R11P4	Quick blowing: 15 amps, 250 v; sim to Bussmann NON15. (Used with low power transmitters, 16-38 w).
F3	1R11P7	Quick blowing: 30 amps, 250 v; sim to Bussmann NON30. (Used with high power transmitters, 66-128 w).
F4	1R11P5	Quick blowing: 20 amps, 250 v; sim to Bussmann NON20. (Used with medium power transmitters, 38-66 w).

PRODUCTION CHANGES

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter," which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.


Component Board 19D423588G1_2

REV. A - Replace DA jumper between H90-H91 with printed wire run.


PRODUCTION CHANGES

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter," which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.

Component Board 19D423580G1, 2
REV. A - Replace DA jumper between H90-H91 with printed wire run.

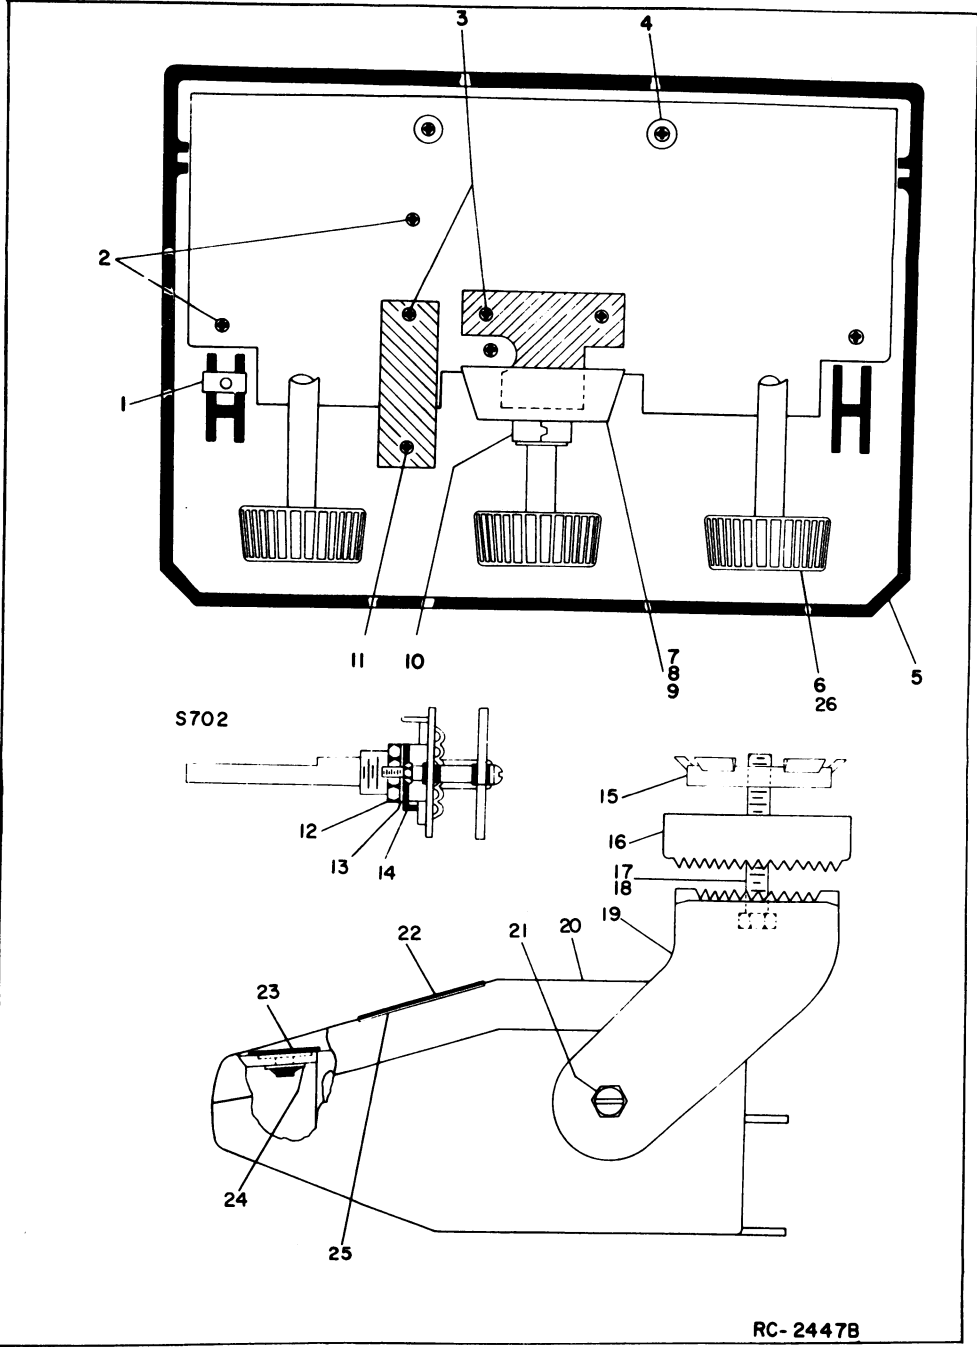


OUTLINE DIAGRAM

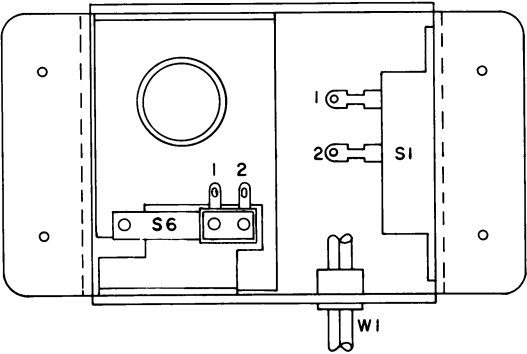

(19B227626, Rev. 0)

SCHEMATIC DIAGRAM

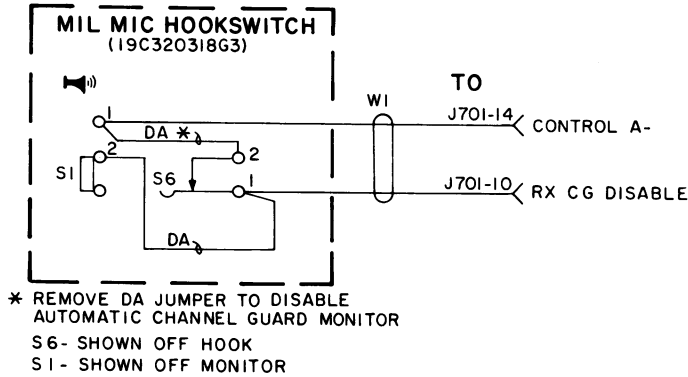

* REMOVE DA JUMPER TO DISABLE
AUTOMATIC CHANNEL GUARD MONITOR
S6- SHOWN OFF HOOK
S1- SHOWN OFF MONITOR

MODEL NO.	REV LETTER

(19A136836, Rev. 0)

PARTS LIST

LBI-30449

MICROPHONE HOOKSWITCH
19C320318G3

SYMBOL	GE PART NO.	DESCRIPTION
S6	19A134398P1	----- SWITCHES ----- Push: sim to Chicago Switch S-1527-1.
		----- CABLES ----- Cable: 2 conductor; approx 5 feet long, includes (2) 19A116781P3 contacts.
W1	19A129414G1	----- MISCELLANEOUS ----- Base plate.
		Bushing, strain relief: sim to Heyco SR-3P-4.
		Tap screw: No. 8-18 x 5/8. (Secures base plate to mounting surface).
		19B219694P1 19A116768P6 N193P1410C 19A134398P101 Metal plate. (Used with S6).

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES


PARTS LIST

LBI-44818

TRANSISTORIZED DYNAMIC MICROPHONE
19C320270G1, G2
(SEE RC-2454)

SYMBOL	GE PART NO.	DESCRIPTION
1		Front Case Assembly. RP127. (includes items 14, 15).
2		Retaining spring. (Part of item 18).
3		Tap screw, phillips. (Part of item 16).
4		Retaining bar. (Part of item 16).
5	19D416766P1	Connector base.
6	19A129435P1	Contact.
7	7109043P1	Retaining ring.
8	19D416767P1	Connector cover.
9	19B219723G1	Screw.
10	N136AP905C	Tap screw, phillips: No. 4 x 5/16.
11	19A116937P1	Cable clip.
12	19B219749P1	Strain relief.
13		Switch button kit. RP126.
14		Rear Case Assembly. (Part of item 1).
15		Tap screw, phillips. (Part of item 1).
16	19C321016G1	Cable assembly: Includes items 3-12 and cable RP129.
17		Switch Assembly. RP128.
18		Grille Assembly. RP130. (includes items 2, 19, 21).
19		"O" Ring. (Part of item 18).
20		Transistorized Cartridge. RP117.
21		Washer. (Located under cartridge- part of item 18).
22	19C321016G3	Connector assembly: Includes items 5-12.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

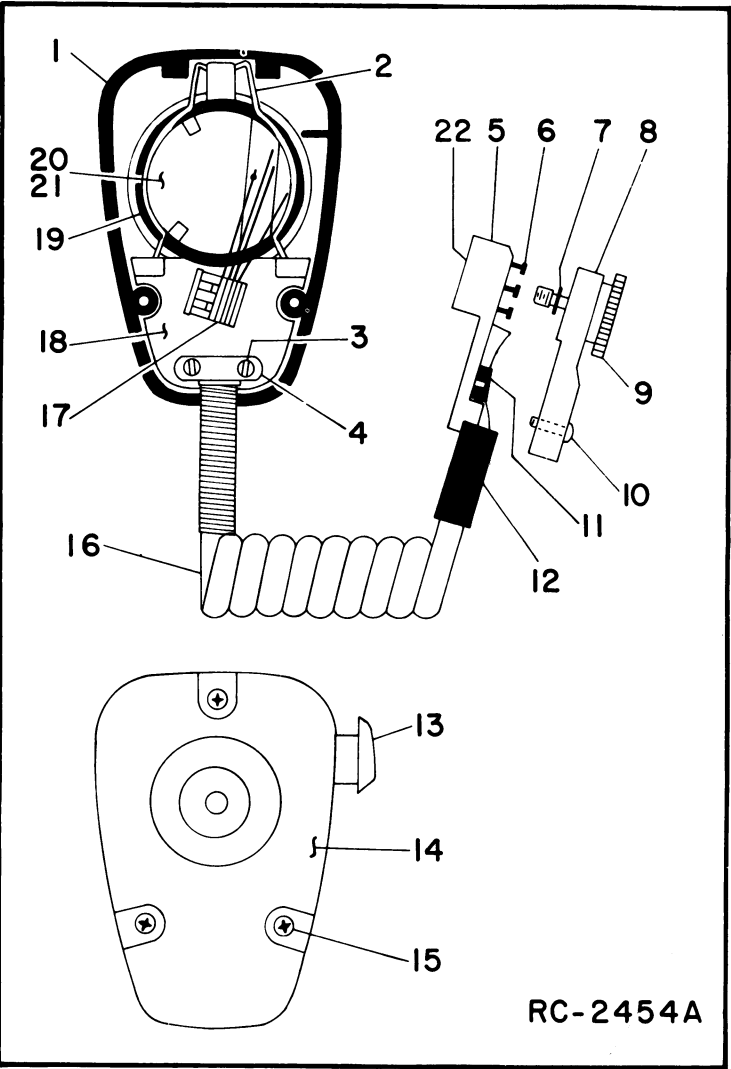


RC-2454A

SERVICE SHEET


MICROPHONE & HOOKSWITCH

LBI30240

OUTLINE DIAGRAM

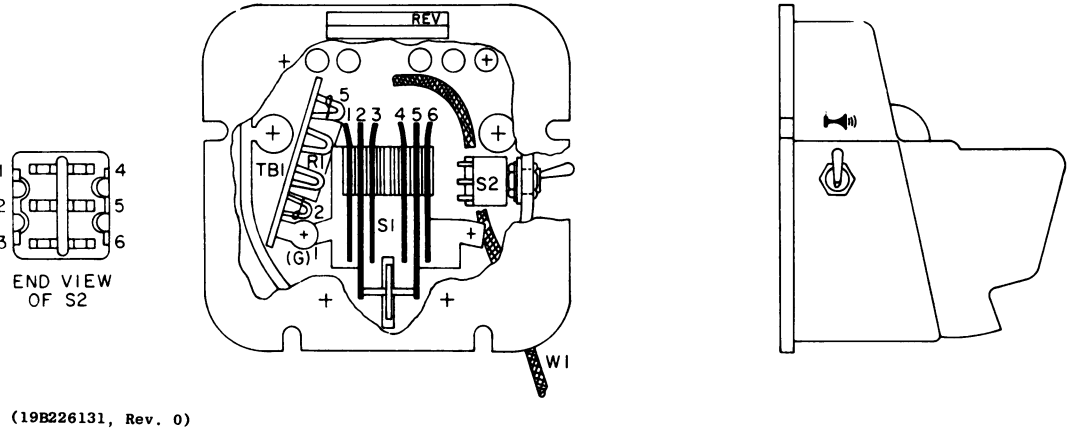

SCHEMATIC DIAGRAM

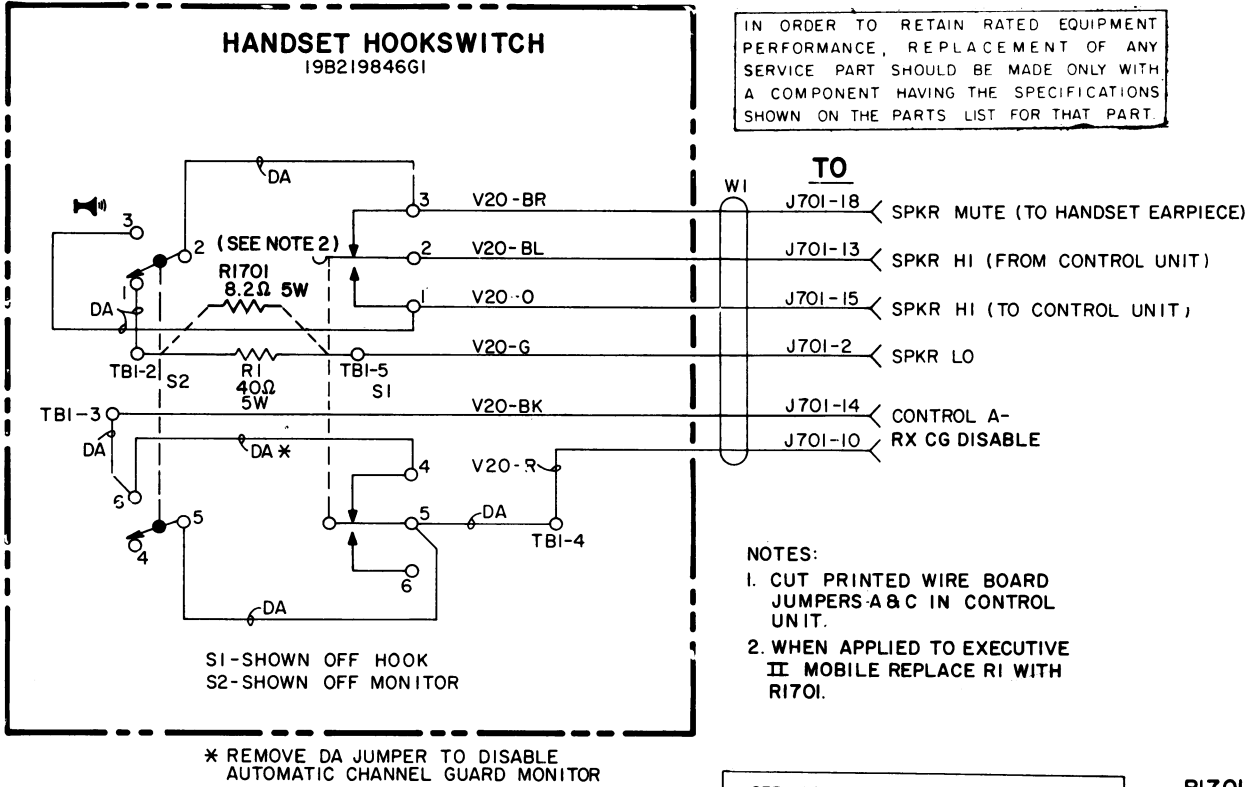

(19B219842, Rev. 7)


PARTS LIST

LBI4484E

HANDSET HOOKSWITCH
19B219846G1

SYMBOL	GE PART NO.	DESCRIPTION
----- RESISTORS -----		
R1*	5493035P11	Wirewound: 40 ohms $\pm 5\%$, 5 w; sim to Hamilton Hall Type HR.
	5493035P12	Wirewound: 60 ohms $\pm 5\%$, 5 w; sim to Hamilton Hall Type HR.
----- SWITCHES -----		
S1	19A129585G1	Holder and switch: Thermoplastic case, contact rating 1 amp at 125 v.
S2	19A116877P6	Toggle: DPDT, 5 amps at 28 VDC or 115 VAC; sim to C and K Components 7201G. (CHANNEL GUARD DIS-ABLE).
----- TERMINAL BOARDS -----		
TB1	7775500P203	Phen: 5 terminals.
----- CABLES -----		
W1	19B219841G1	Cable: 6 conductor; approx 5 feet long.
----- MISCELLANEOUS -----		
	N190P1312C	Tap screw, phillips: No. 6-20 x 3/4. (Secures housing to base plate).
	N101P1510P	Tap screw, phillips: No. 8-15 x 5/8. (Used for mounting base plate).
	19A129588G1	Bumper, rubber. (2).
	EXECUTIVE II MODIFICATION KIT 19A136767G1	
R1701	5493035P52	Resistor, wirewound: 8.2 ohms $\pm 10\%$, 5 w; sim to Hamilton Hall Type HR.
	19A136775P1	Label.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

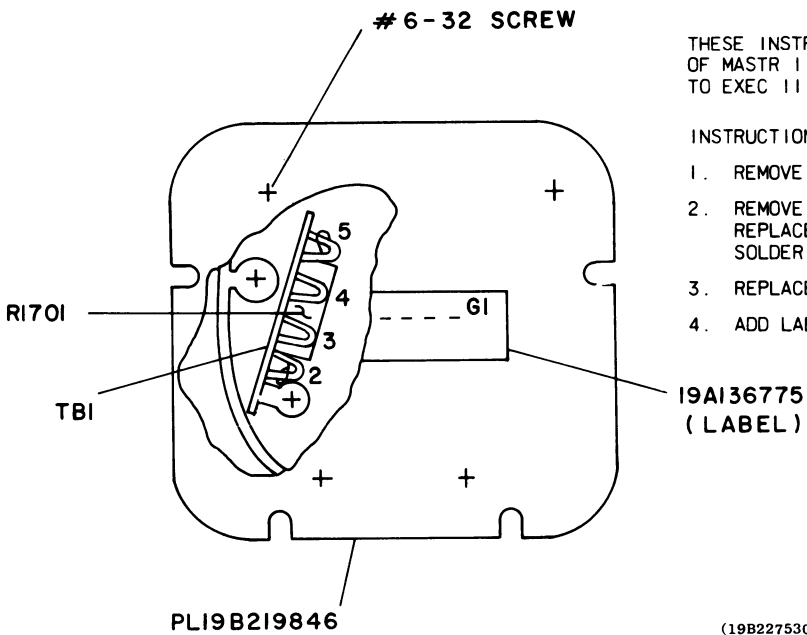

THESE INSTRUCTIONS COVER THE MODIFICATION OF MASTR II HANDSET HOOKSWITCH TO BE APPLIED TO EXEC II

INSTRUCTIONS:

1. REMOVE FOUR #6-32 SCREWS AND COVER.
2. REMOVE R1 RESISTOR (40 OHM) AND DISCARD. REPLACE WITH R1701 RESISTOR (8.2 OHM) AND SOLDER TO TBI-5 AND TBI-2 AS SHOWN.
3. REPLACE COVER AND SCREWS.
4. ADD LABEL (19A136775) AS SHOWN.

(19B227530, Rev. 1)

PARTS LIST

LBI-4482A

TRANSISTORIZED DYNAMIC HANDSET
19C320478G1

SYMBOL	GE PART NO.	DESCRIPTION
1		Case Assembly. Includes items 1, 2, 4, 5, 11, 12, 26. Shure Brothers RP142.
2		Adapter. Part of item 1.
3		Receiver Cartridge. Shure Brothers RP140.
4		Receiver Cap. Part of item 1.
5		Washer. Part of item 1.
6		Escutcheon. Part of item 27.
7		Flat head screw, socket cap: No. 4-40 x 1/4. Part of item 27.
8		Actuator. Part of item 27.
9		Spring. Part of item 27.
10		Plunger bar. Part of item 27.
11		Transmitter cap. Part of item 1.
12		Washer. Part of item 1.
13		Transmitter cartridge. Shure Brothers RP139.
14	19C321016G2	Cable assembly: Includes items 14-23 and cable RP141.
15	19B219749P1	Flex relief.
16	19A116937P1	Cable clamp: sim to Malco 21012-3.
17	3R77P472K	Resistor, (R1) Composition, 4700 ohms $\pm 10\%$, 1/2 w.
18	19D416766P1	Connector case.
19	N136AP905C	Screw.
20	19A129435P1	Pin contact.
21	7109043P1	Retaining ring. 3/16 inch, sim to National Lockwasher WA 510.
22	19D416767P1	Connector Cover.
23	19B219723G1	Screw. (Secures cover, item 22 to case, item 18).
24		Screw. Part of item 14.
25		Cable clamp. Part of item 14.
26		Shield. Part of item 1.
27		Switch Assembly. Includes items 6-10. Shure Brothers RP143.
28	19C321016G3	Connector assembly: Includes items 15, 16, 18-23. Does not include resistor, item 17.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

PARTS LIST

LBI30240

LBI-4488B

SPEAKER
19C320302G1

SYMBOL	GE PART NO.	DESCRIPTION
LS1	19A116694P1	----- LOUDSPEAKERS ----- Permanent magnet, 5 inch: 20 watts, 8 ohms ±10% imp, 100 to 10,000 Hz response; sim to Oaktron 5EU2189-2.
W1	19A129414G1	----- CABLES ----- 2 conductor cable: approx 5 feet long, includes (2) 19A116781P3 contacts.
		----- MISCELLANEOUS -----
	19B219692G1	Grille.
	19B227593G1	Housing.
	19C320016P1	Mounting bracket. (Located between housing and retaining bracket).
	19C320022P1	Retaining bracket. (Located between mounting bracket and safety release disc).
	19B219578G1	Safety Release Disc.
	19A116986P108	Tap screw, with lockwasher: No. 7-19 x 1/2. (Secures speaker to housing).
	19A116986P112	Tap screw, with lockwasher: No. 7-19 x 3/4. (Secures grille to housing).
	N187P16010C6	Machine screw: No. 10-32 x 5/8. (Secures mount- ing bracket to housing- used with safety release disc, retaining bracket).
	N710P16012C6	Screw, hexhead, slotted: No. 10-16 x 3/4. (Secures mounting bracket or retaining bracket).

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES