


# MAINTENANCE MANUAL

## MODEL 4EC76A18 CONTROL PANEL

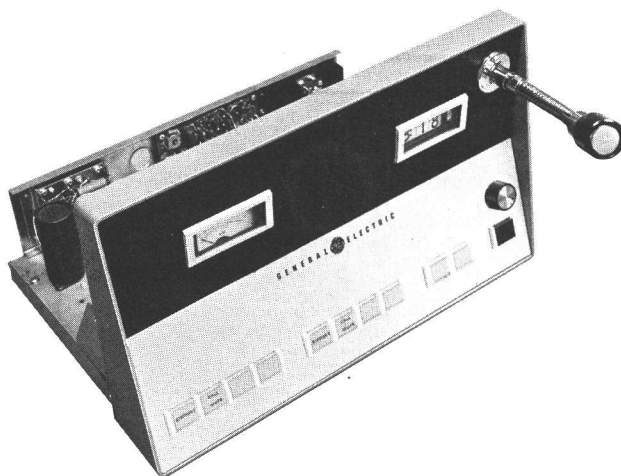

### SPECIFICATIONS \*

#### Audio Output

##### Speaker

Greater than 10 watts, less than 1-1/2% distortion @ 5 watts, 117 VAC, -15% +20%

##### Line

+16 dBm maximum with less than 1-1/2% distortion, with compression.

#### Frequency Response

+1/2 to -3 dB, 200 to 10,000 Hz, reference 1000 Hz

#### Compression Range

With audio input increase of 30 dB beyond start of compression, output level increased less than 3 dB.

#### Power Requirements

130 watts, 117 VAC, 50/60 Hz.

#### Input and Output Impedance

600 ohms

#### Temperature Range

-30°C to +60°C (-22°F to +140°F)

\*These specifications are intended primarily for the use of the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

## TABLE OF CONTENTS

SPECIFICATIONS .....	Cover
DESCRIPTION .....	1
ADJUSTMENT .....	1
Line Input .....	2
Release Time for Compressor .....	2
Microphone Gain .....	2
Line Output .....	2
Control Voltages .....	3
Speaker Amplifier Bias .....	3
Mute Control .....	3
Tone Alert Oscillator Output .....	3
Setting the Clock .....	4
CIRCUIT ANALYSIS .....	4
Audio Board A851 .....	4
Audio Board A853 .....	5
Speaker Amplifier A852 .....	5
Power Supply .....	5
Light Flashers A854 & A855 .....	6
Control Circuits .....	6
Other Accessories and Options .....	8
MAINTENANCE .....	9
Removing Control Panel from the Turret .....	9
Indicator Lamp Replacement .....	9
Troubleshooting Procedure .....	9
OUTLINE DIAGRAM .....	12
SCHEMATIC DIAGRAM .....	13
PARTS LIST & PRODUCTION CHANGES .....	11&14
SERVICE SHEETS FOR ACCESSORIES AND OPTIONS (Schematic & Outline Diagrams and Parts Lists)	
Station Select Switches .....	15
Call/Mute .....	15
2-Freq. Transmit & 1-Freq. Receive .....	16
1-Freq. Transmit & 2-Freq. Receive .....	16
2-Freq. Transmit & 2-Freq. Receive .....	16
Channel Guard .....	17
High Voltage Regulator .....	17
Repeater Diabie .....	18
Supervisory Control .....	18
Intercom .....	18
Tone Alert .....	19
VU Meter .....	19

### TABLES

Table 1 - Optional Equipment .....	iii
Table 2 - Compressor Release Time .....	2
Table 3 - Control Current and Function Chart .....	6
Table 4 - Troubleshooting Procedure .....	9

## FIGURES

Figure 1 - Control Panel Adjustments .....	1
Figure 2 - Block Diagram of Model 4EC76A18 .....	4
Figure 3 - Simplified Polarity Switching Diagram .....	6
Figure 4 - Simplified Control Current Switching Diagram .....	7
Figure 5 - Switch Indicator Assembly .....	9

Table 1 - Optional Equipment

OPTION	EQUIPMENT
5127	Repeater Disable
5131	Supervisory Control
5145	12/24-Hour, 60-Hz, Clock
5146	12-Hour, 50-Hz, Clock
5147	12/24-Hour, 50-Hz, Clock
5155	Tone Alert
5159	VU Meter
5161	Intercom

## WARNING

No one should be permitted to handle any portion of the equipment that is supplied with high voltage; or to connect any external apparatus to the units while the units are supplied with power. KEEP AWAY FROM LIVE CIRCUITS.



# DESCRIPTION

General Electric Control Panel Model EC76A18 is designed for use in the turret center section of a Radio Control Center. Electrical components are mounted on a 19-inch drawer-type chassis which can easily be removed from the turret to facilitate maintenance and servicing. The panel provides push button selection of remote control functions at two base stations by changing the level and polarity of DC control currents.

Printed circuit board techniques, silicon transistors and other solid state devices are designed into the basic modules of the panel to assure maximum reliability. The audio section of the panel contains a compression-amplifier for equalizing audio output levels over a wide range of microphone and line input levels. When sending messages, the compression-amplifier helps compensate for variations in speech levels. When receiving messages, the compression-amplifier prevents speaker "blasting" caused by variations in


the input signal levels from station or paralleled control equipment. A compression-amplifier accessory is available for use with the 4KC16A10 Remote Control Panel (at the base station) for simplifying or eliminating line level settings in parallel operations.

External control connections are made to the panel at TB801 and TB851. Power cable W801 connects to AC power through a convenience outlet on the console turret. Switch S801 on back of the panel chassis turns power ON and OFF.


Table 1 lists options which are available to meet different requirements of individual two-way radio systems.

# ADJUSTMENT

Before adjusting the control panel, make sure that all AC power lines, phone lines and ground connections have been completed at the control panel location

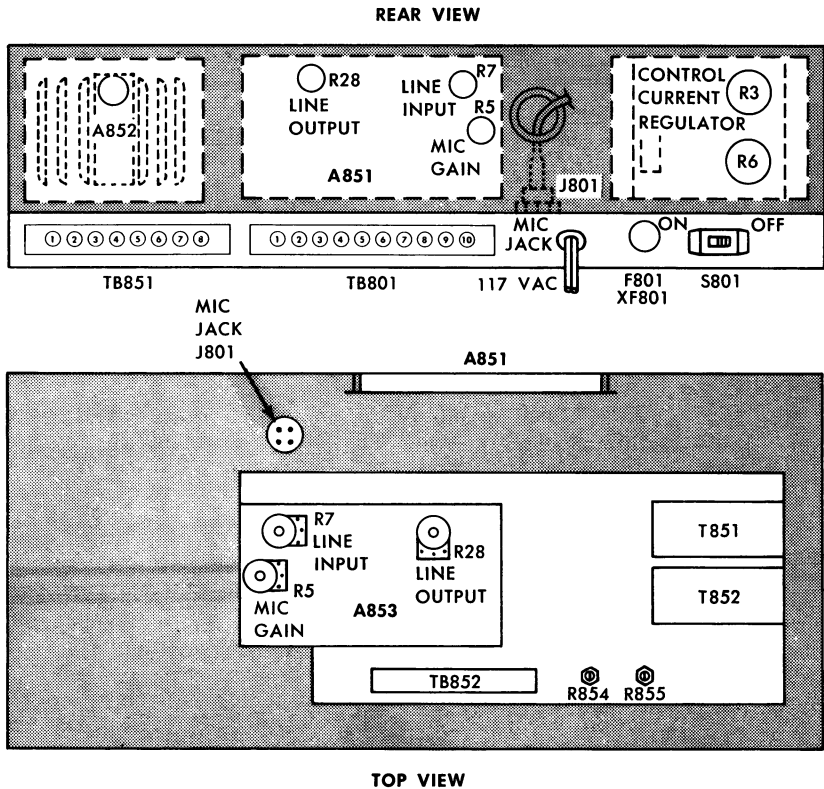

AUDIO BOARD  
A851/A853  
(COMPONENT SIDE)

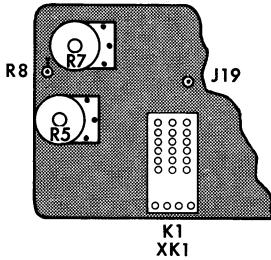

# NOTE

Temporarily short the control pair at the remote control panel and measure the loop resistance at the console. If the resistance is greater than 1000 ohms, connect jumpers across the 1 K-ohm resistor between TB806-5 & 6, and across the 1 K-ohm resistor between TB806-5 and TB805-7. These terminal boards are located on the under side of the chassis.

Figure 1 - Control Panel Adjustments

and the base station. Also, the base station should have been properly aligned, and the station VOLUME control (R511 on the EP-38-A in MASTER stations) set for not more than 6 volts RMS at the audio pair with maximum system deviation at 1000 Hz applied to the base station receiver antenna jack.

#### LINE INPUT

The LINE INPUT controls on A851 and A853 have been adjusted at the factory for an input of 180 millivolts RMS (-12 dBm) for threshold of compression. Use of excessive compression will accent background and line noise during pauses in transmission.

#### Procedure:

1. Feed a 1000-Hz signal onto station 1 audio pair (connected at TB1-1 and TB1-2) from the source with the largest line loss (this may be the base station or another console.) Adjust the audio generator to produce +18 dBm on the audio pair. However, if the source has been adjusted for less than +18 dBm on the line, set the audio generator to this lower level.
2. Select STATION 1 push button. (Switch must be lighted.)
3. Adjust the LINE INPUT control (R7) on A851 for threshold of compression as indicated by the line between the red and green area on the compression meter or by a reading of 0.4 volt DC on a 20,000 ohm-per-volt meter connected from A851-J19 to ground.
4. Press the STATION 1 switch to turn the switch light off. In this position STATION 2 audio is connected to the compression meter.
5. Feed a 1000 Hz signal onto Station 2 audio pair (connected at TB2-1 and TB2-2) from the source with the largest line loss (this may be the base station or another console). Adjust the audio generator to produce +18 dBm on the audio pair. However, if the source has been adjusted for less than +18 dBm on the line, set the audio generator to the lower level.
6. Adjust the LINE INPUT control (R7) on A853 for threshold of compression as indicated by the red line in the center of the compression meter, or by a reading of 0.4 volt DC on a 20,000 ohm-per-volt meter connected from A853-J19 to ground.

#### RELEASE TIME FOR COMPRESSOR

The release time of the compressor-amplifier circuit (on audio board A851/A853)

is the time required for the unit to restore full gain after an input signal that has driven the unit into compression is removed.

The release time is determined by the value of R25 which was selected at the factory for average operating conditions. When overall system requirements indicate that a shorter release time is needed. P25 may be replaced with a different value resistor as shown in Table 2.

Table 2 - Compressor Release Time

Value of R25	Release Time
100K-ohms (standard)	2 seconds
27K-ohms	1 second
17K-ohms	0.5 second

Reducing the release time, however, will result in an increase in background noise picked up during pauses in transmission.

#### MIC GAIN

The MIC GAIN Control (R5) has been adjusted at the factory according to the type of microphone ordered with the control equipment. Setting R5 for excessive compression will accent background noise during pauses in transmission.

#### Procedure:

1. Key the microphone and speak into it from a normal distance (12 to 15 inches for the desk or swinging arm microphone).
2. Adjust MIC GAIN control R5 on A851/A853 (see following note) for threshold of compression as indicated by the compression meter or by a reading of 0.4 volt DC on a 20,000 ohm-per-volt meter connected from A851/A853-J19 to ground).

#### NOTE

The compression meter is connected to A851 when STATION 1 switch is lighted and to A853 when STATION 1 switch is not lighted.

#### LINE OUTPUT

The control panel has been set at the factory for a maximum line output of 4.8 volts RMS (+16 dBm). The line output may be reduced when required by local telephone company regulations or whenever line losses and noise pickup permit an adequate signal-to-noise ratio.

Procedure:

1. Feed a 1000-Hz, 30 millivolt signal into pins 1 and 2 of microphone jack J801.
2. Connect an AC-VTVM across the audio pair. Use a 0.5-mFd capacitor in series with the meter if DC is being simplexed line-to-line.
3. For single Radio Control Centers or Paralleled Radio Control Centers (with Compression or Intercom accessory at the station): Adjust LINE OUTPUT control R28 on A851 for 4.8 volts RMS (or as required by local regulations), and R28 on A853 for 4.8 volts RMS (or as required by local regulations). Adjust LINE OUTPUT control on any parallel consoles for 4.8 volts RMS (or as required by local regulations).
4. For paralleled Radio Control Centers (and no Compression-Amplifier or Intercom accessory at the station): Set the control center with the highest line loss for 4.8 volts RMS (or as required by local regulations) as described in steps 2 and 3 above. Measure the RMS voltage at the station with an AC-VTVM. Then set the LINE OUTPUT control R28 on the remaining control centers to produce the same level at the station as the first control center.
3. Connect a DC milliammeter in series with the STATION 2 control line (positive lead to TB851-5).
4. Push in the STATION 2 switch and the associated CHANNEL GUARD MONITOR switch. Adjust CONTROL CURRENT adjustment R6 for 6 Milliamps.

## SPEAKER AMPLIFIER BIAS CONTROL

BIAS ADJ control R5 on A852 is pre-set at the factory and should not require further adjustment. However, if adjustment is necessary, use the following procedure.

1. Disconnect the wire from J3 and insert a milliammeter in series with J3 and the wire.
2. With no signal input, adjust BIAS ADJ control for 20 milliamps.

## MUTE CONTROL

Mute controls R854 and R855 have been set at the factory for 20-dB muting. They may be re-adjusted for any desired muting level between 0 and 40-dB in the following manner.

1. Select the STATION 1 mute function with the Station 1 CALL-MUTE switch (MUTE portion of the CALL-MUTE switch lighted).
2. With a signal input on audio line #1 (connected at TB1-1 and -2), adjust R854 for the desired mute level.
3. Select the STATION 2 mute function with STATION 2 CALL-MUTE switch.
4. With a signal input on audio line #2 (connected at TB2-1 and -2), adjust R855 for the desired mute level.

## TONE ALERT OSCILLATOR (Option 5155)

The Tone Alert Oscillator has been adjusted at the factory to provide 2 volts RMS output and should not require readjustment. If adjustment is necessary, use the following procedure.

1. Remove the control panel from the console turret and set panel on its side to expose the Tone Alert Oscillator Board.
2. Connect an AC-VTVM across audio pair TB801-1 and 2.
3. Press the TONE push button.
4. Adjust R8 on the Tone Alert Oscillator Board for a meter reading of 2 volts RMS (or less when required by local regulations).

## CONTROL VOLTAGES

Two-Frequency Transmit

1. Connect a DC milliammeter in series with the STATION 1 control line (positive lead of meter to TB801-5).
2. Select STATION 1 and the associated XMIT 1 push button.
3. Key the transmitter and set CONTROL CURRENT adjustment R3 for 6 milliamps.
4. Connect a DC milliammeter in series with the STATION 2 control line (positive lead of meter to TB851-5).
5. Select STATION 2 and the associated XMIT 1 push button.
6. Key the transmitter and set CONTROL CURRENT adjustment R6 for 6 milliamps.

Channel Guard

1. Connect a DC milliammeter in series with the STATION 1 control line (positive lead to TB801-5).
2. Push in the STATION 1 switch and the associated CHANNEL GUARD MONITOR switch. Adjust the CONTROL CURRENT adjustment (R3) for 6 milliamps.

## SETTING THE CLOCK

To set the clock, turn power OFF. (This may be done by unplugging the control panel line cord from the AC receptacle in the turret, or by operating the main power switch S1 on the desk console). Turn the indicator wheels in either direction until the correct time shows in the window, then turn power ON.

## CIRCUIT ANALYSIS

The control panel circuitry consists of dual-audio amplifier stages, a self contained power supply, and controls and indicator lights.

Audio circuits consist of audio boards A851 and A853, speaker amplifier A852 and two PA transistors (Q851 and Q852) mounted in a heat sink on the control panel chassis.


The power supply provides the control currents for the switching functions, and the supply voltages for the audio stages, relay and indicator lights.

The VOLUME control, push-button switches, indicator lights, clocks and meters mount on the front of the control panel.

For ease of adjustment, the LINE INPUT, LINE OUTPUT and MIC GAIN controls are adjusted through holes in the back panel. Instructions for setting the controls are contained in the Adjustment Procedure Section.

AUDIO BOARD A851

Audio board A851 is used with STATION 1 as a mike-to-line amplifier in the transmit or intercom mode, and as a line-to-speaker amplifier in the receiver mode. A simplified switching diagram is shown in Figure 2.

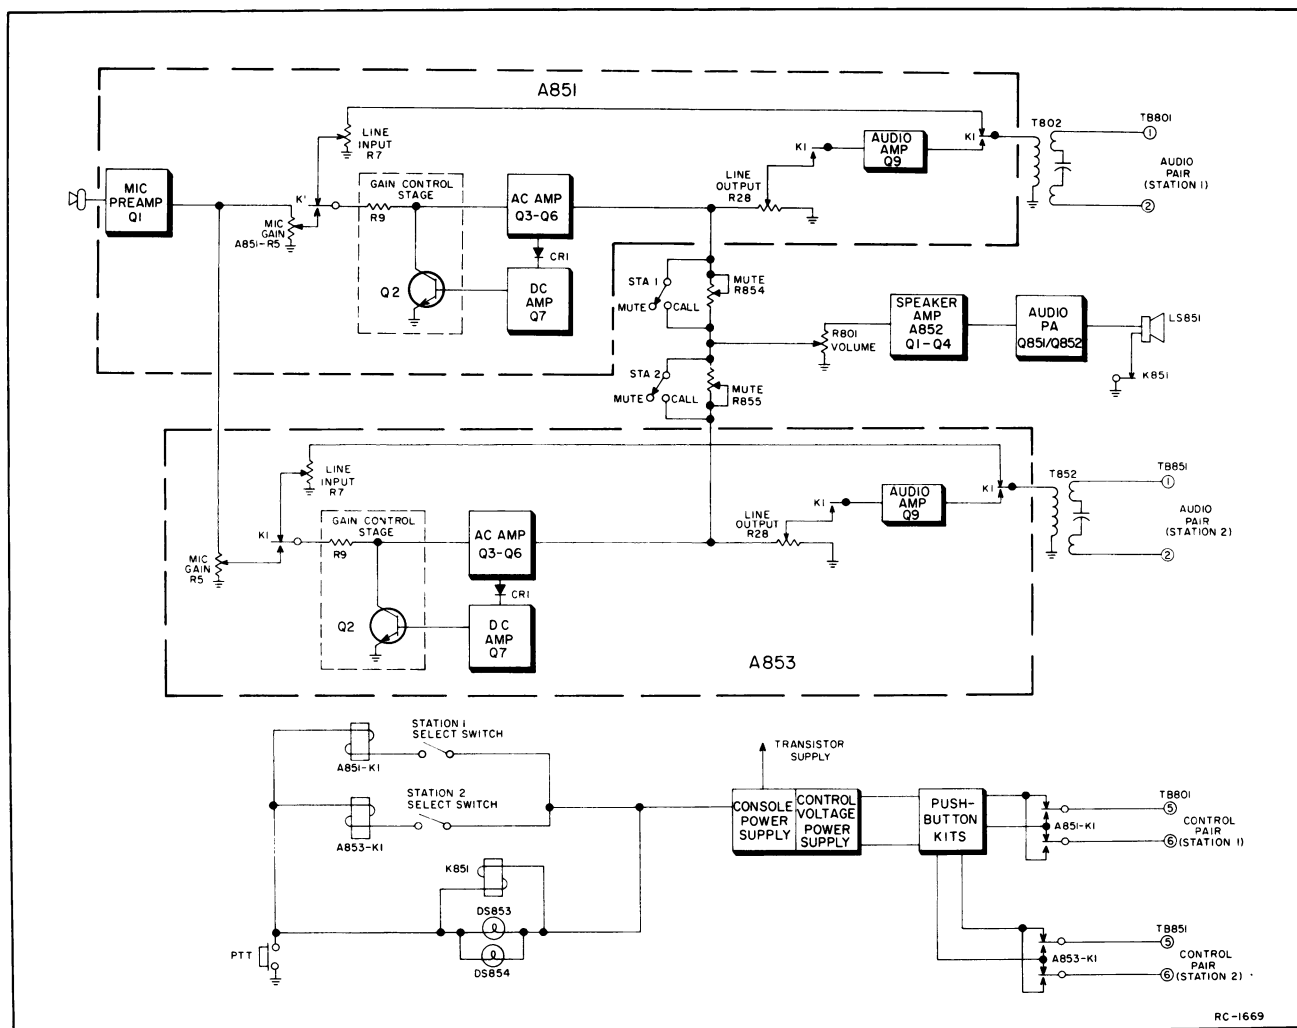

**Figure 2 - Block Diagram of Model 4EC76A18 Control Panel**



Transmit Mode

Pressing the TRANSMIT switch energizes relay K851, which mutes the loud speaker. Assuming STATION 1 is selected, A851-K1 also energizes and connects audio from the common-emitter preamplifier (Q1) through MIKE GAIN control R5 to the compressor-amplifier (Q2-Q7). The output of the compressor-amplifier is connected through LINE OUTPUT control R28 and contacts of K1 to class A audio amplifier Q9. A temperature compensating thermister (RT2) keeps the base bias of Q9 constant over wide variations in temperature. The output of Q9 is coupled through line matching transformer T802 to the audio pair.

Receive Mode

Incoming audio is coupled through line-matching transformer T802 to audio board A851. The audio input (from J17) is connected through the normally closed relay contact to LINE INPUT control R7, and then to the compressor-amplifier. One portion of the compression-amplifier output is connected through the CALL/MUTE circuits and the VOLUME control to the speaker amplifier (A852). The remaining portion is connected to the STATION 1 light flasher (A854).

Compressor-Amplifier

The compressor-amplifier circuit consists of gain control stage Q2, high gain audio amplifiers Q3 through Q6, and DC amplifier Q7.

When audio is applied to the compressor-amplifier, resistor R9 and the AC impedance of transistor Q2 act as a voltage divider for the AC input signal. The output of Q2 is amplified by a four stage, direct-coupled amplifier (Q3 through Q6). Both AC and DC feedback in the amplifier circuit provides for extremely stable operation.

One portion of the amplified output is fed through line output control R28 to audio amplifier Q9 (in the transmit mode) or through VOLUME control R801 to speaker amplifier A852 (in the receive mode). The remaining portion is rectified by detector CR1, filtered by C8 and amplified by DC current amplifier Q7. This DC output is fed back to the base of gain control transistor Q2.

The amount of DC feedback to the gain control stage determines the AC impedance of Q2. When the input level rises, the AC amplifier output starts to increase. The output is detected, amplified, and fed back to the base of Q2. The increase in feedback reduces the AC impedance of Q2 which decreases the audio voltage to the AC amplifier keeping the amplifier output constant.

When the audio input decreases, the output of the AC amplifier starts to decrease, reducing the feedback to Q2. This raises the AC impedance of Q2 and increases the audio voltage to the AC amplifier, keeping the amplifier output constant.

AUDIO BOARD A853

Audio board A853 is used with STATION 2 and is identical to audio board A851 except it does not have a microphone preamplifier. The microphone preamplifier on A851 serves A853 also, and is switched to the appropriate compressor-amplifier (on A851 or A853) by the transmit relay contacts.

SPEAKER AMPLIFIER

The speaker amplifier consists of Q1, Q2, Q3 and Q4 mounted on a printed board (A852) and power transistors Q851 and Q852 mounted on a separate heat sink. The input audio signal at J1 is applied to the base of Q1. The output of Q1 is applied to driver transistors Q3 and Q4 and then to power amplifiers Q851 and Q852. The amplified output at J2 of A852 is connected to the speaker high lead by means of jumpers on TB801.

Q2 provides a slight forward bias to the bias to the base circuit of driver transistors Q3 and Q4 to prevent cross-over distortion. The bias is controlled by R5 which is set at the factory for optimum circuit performance (refer to the Adjustment Section).

POWER SUPPLY

Turning OFF-ON switch S801 to the ON position applies 117 volts AC to the primary of power transformer T801. The primary is fused by F801. The power supply contains two rectifier circuits in the secondary of T801 to provide control and operating voltages for the control panel.

Full-wave bridge rectifiers CR801 through CR804 supply the control current. R806 is a bleeder resistor for filter capacitor C801. The output is connected to TB802 and TB852 for application of the push button switch kits.

Full-wave rectifiers CR805 and CR806 supply four operating voltages for the transistorized audio stages, indicator lights and switching relay. Two unregulated voltages operate the indicator lamps, relays K1 & K851 and supply the audio driver and final audio amplifier circuits. Two regulated outputs supply the AC and DC amplifiers and microphone preamplifier. The voltage regulator consists of C804, R804 and Zener diode VR801.

FUNCTION	Current at TB801-5 (relative to TB801-6) For STATION 1 Current at TB851-5 (relative to TB851-6) For STATION 2				
	0	+6ma	+15ma	-6ma	-15ma
One Frequency Transmit and 1 Frequency Receive (P)	Receive	Transmit			
Two Frequency Transmit and 1 Frequency Receive (P)	Receive	Transmit (Tx - F1)	Transmit (Tx - F2)		
One Frequency Transmit and 2 Frequency Receive	Receive (Rx-F1)	Transmit		Receive (Rx-F2)	
Two Frequency Transmit and 2 Frequency Receive	Receive (Rx-F1)	Transmit Tx-F1)	Transmit (Tx-F2)	Receive (Rx-F2)	
One Frequency Transmit and receive with Channel Guard (P)	Channel Guard Receive	Monitor (noise squelch)	Transmit		
Repeater Disable (Option 5127)	Receive	Transmit		Repeater Disable	

## NOTE

Only those functions followed by the symbol (P) can be used in parallel consoles.

Table 3 - Control Current and Function Chart

## LIGHT FLASHER (A854 and A855)

Light Flasher A854 (Station 1) or A855 (Station 2) samples the audio output of AC amplifier Q6 on the associated audio board. While a signal is being received, a portion of the audio at Q6 is connected through Q5 of the flasher circuit to emitter-follower Q4, causing Q4 to conduct. Q1 will then turn on and trigger relaxation oscillator Q2 and Q3. Each time Q3 in the oscillator conducts, the CALL lamp (connected in the Q3 collector circuit) flashes to indicate the presence of audio.

## CONTROL CIRCUITS

Through the use of accessory kits and options, the control panel can perform a maximum of five different control functions for each station. This is accomplished by applying two different levels and polarities of control current to activate up to four relays on the station remote control panel. The control current required to select each function is listed in Table 3. Instructions for setting control currents are given in the Adjustment Procedure Section.

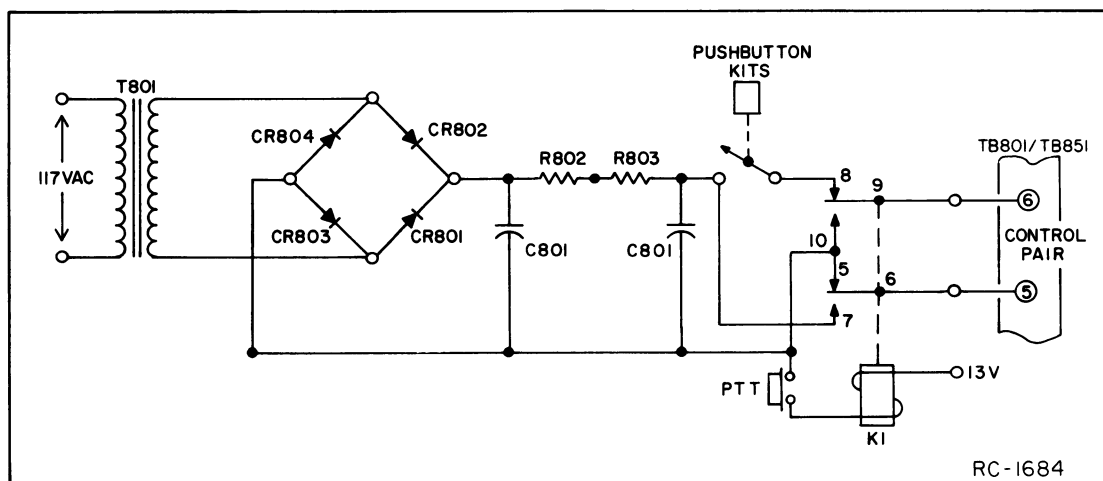


Figure 3 - Simplified Polarity Switching Diagram

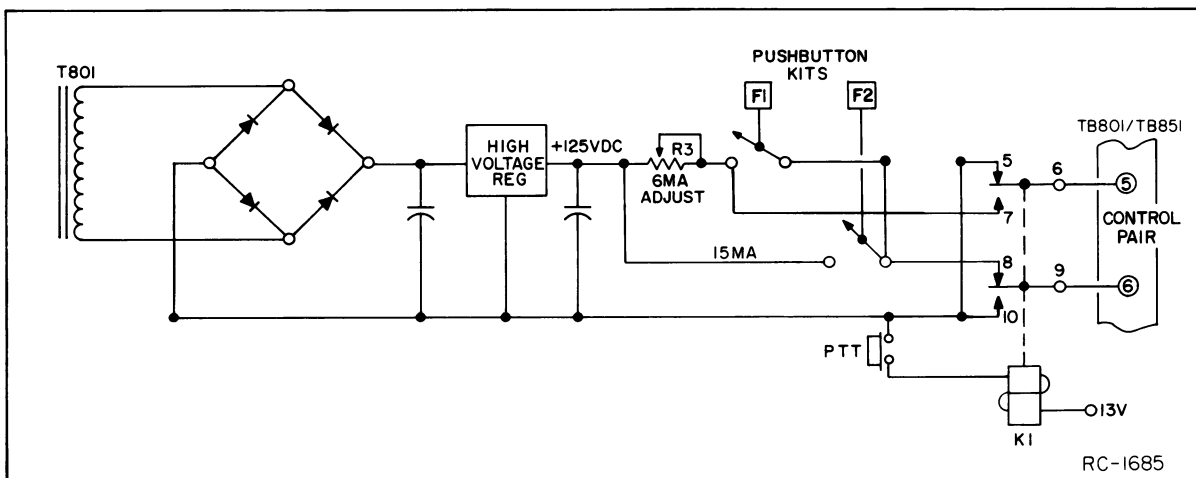


Figure 4 - Simplified Control Current Switching Diagram

### Single Frequency Transmit and Receive

When no accessory kits or options are used, the control panel provides a single, non-regulated DC control output of approximately 6 milliamps into a 7,500 ohm load (the equivalent of a 2,500 ohm line in series with a 5,000 ohm station control panel).

### Multi-Frequency Switching

Whenever two polarities are required for switching functions, connections from the power supply to the control pair are transposed by the push-button switch kit and relay K1 as shown in Figure 3.

When two levels of the same polarity are required, a high voltage regulator circuit and a variable resistor are provided in the power supply circuit as shown in Figure 4. The high-voltage regulator stabilizes the output of the control panel at 125 volts DC. This is to comply with telephone company regulations which require a maximum line-to-ground voltage of 135 volts DC.

The variable resistor is switched into the circuit to set the low level control current for 6 milliamps. This assures proper pick-up of the 6-mA relay, as well as the dropout of the 15-mA relay at the station control panel. The high level control current is not adjustable, since the 15-mA relay will operate satisfactorily at levels above 15 mA.

### Channel Guard

In standard Channel Guard applications,

the CHANNEL GUARD MONITOR switch is located on the front panel. In addition, a high voltage regulator and a series current regulator circuit is used. The current regulator is set for 6 milliamps into the line and prevents current soaring when several control consoles are operated in parallel.

When the CHANNEL GUARD MONITOR push-button switch is not depressed, bias for the series regulator is grounded through contacts 1 and 2 of the switch, and no control current is applied to the control pair. This selects Channel Guard operation at the base station and only those transmissions coded by the proper channel guard tone will be heard at the control panel.

Pressing the CHANNEL GUARD MONITOR push button, removes the ground on the series regulator, and applies 6 milliamps to the control pair. This disables the station Channel Guard, so that all transmissions on the receiver frequency can be heard. Pressing the TRANSMIT button applies 15 milliamps to the control pair to key the transmitter.

When the optional 4EM28B10 microphone is used, the station can be monitored by pressing the MONITOR button on the microphone.

### Remote/Repeater Control

In Remote/Repeater applications, the station transmitter may be keyed by either an incoming RF signal (repeater operation), or by a control current from the control panel. Two different methods may be employed to give the dispatcher priority over repeater operations.

### 1. Without Repeater Disable Option:

When the Repeater Disable option is not used pressing the TRANSMIT switch applies +6 milliamps to the control pair. This energizes the transmit relay on the remote control panel, which opens the ground return of the carrier operated switch or relay on the repeater panel. The station will operate as a remote only as long as the TRANSMIT switch at the control panel is pressed.

### 2. Repeater Disable (Option 5127):

With the Repeater Disable option, pressing in the REPEATER DISABLE push button applies -6 milliamps to the control pair. This energizes an optional relay on the remote control panel which opens the ground return to the carrier operated switch or relay on the repeater panel. The station will operate as a remote as long as the push button remains depressed.

## OTHER ACCESSORIES AND OPTIONS

### Supervisory Control (Option 5131)

According to FCC regulations, if other parallel remote control facilities are employed in the system and their number and location are not specified on the station license, the dispatcher must be able to cut any conversation off the air that he judges unfit for transmission.

Pressing the SUPV CONTROL push button shorts the control pair, terminating the transmission. The dispatcher can use the intercom (if present) to prevent a recurrence of the unauthorized transmission before releasing the short on the control pair.

### Tone Alert Oscillator (Option 5155)

The Tone Alert Oscillator accessory is used by the dispatcher to transmit an alerting tone to call attention to messages of more than usual importance. The accessory consists of a tone board, push button switch and indicator light. The tone oscillator includes a multivibrator circuit and a two section RC filter.

Pressing the tone alert push button applies a 13.5 volt supply voltage to the tone oscillator, energizes K851 to mute the speaker, energizes selected transmit relays (A851/A853-K1) to key the station transmitter, and lights the red transmit lamp on the front of the control panel. The nominal 1000-Hz output of the tone oscillator board is connected to J7 and J31 on Audio Board A851, fed to the selected audio-pair, and transmitted by the station. R8 has been adjusted to provide a tone output of approximately 2 volts RMS at the audio pair.

### Intercom Switch Kit (Option 5161)

The Intercom Switch Kit permits communication between paralleled control consoles without keying the transmitter. It also permits intercommunication between the control console and the base station when the remote control panel (4KC16A10) has been equipped with the intercom accessory.

Pressing the INTERCOM switch energizes K1 on the selected audio board (A851/A853) switching the board to the transmit mode. It also opens the control current path to prevent the transmitter from keying and disables the transmit light on the control panel.

### VU and Compression Meters

The control panel is supplied with a compression meter which enables the operator to check the line level of the control panel in the transmit, intercom or receive mode. The dial of the compression meter is not numerically calibrated. The line levels are indicated by red and green areas. The threshold of compression is marked by a red line in the center of the meter. A meter reading in the red area indicates undercompression, while a reading anywhere in the green area indicates a proper output level (within 1 dB of normal).

An optional VU meter (option 5159) is available for use in place of the compression meter if desired. The VU meter is calibrated to indicate the line levels in volume units. With a line level of +8 VU, the meter reads "0 VU". Levels lower than 8 VU are indicated by negative VU readings, and levels higher than 8 VU are indicated by positive VU readings. If the transmitter MOD ADJUST is set so that a line level of 8 VU produces maximum system deviation, the lower scale on the meter will indicate percentage of full modulation being produced. The meter can be adjusted to read "0 VU" with a line level of +4 VU by removing R4 and jumpering TB1-1 and TB1-5.

The operational status of the STATION 1 select switch determines which audio line is metered by the compression or VU meters. When STATION 1 is selected (switch lighted), audio line #1 is metered. When STATION 1 is not selected (switch not lighted), audio line #2 is metered.

### Clocks

A 12-hour clock, which operates on 117 VAC at 60 Hz, is provided on the control panel to facilitate log keeping. The clock is connected so that it operates with power switch S801 ON or OFF. Optional clock are available for operation on 50 or 60 Hz as described in the Option Index.

## MAINTENANCE

### REMOVING CONTROL PANEL FROM TURRET

Remove the control panel from the console turret in the following manner:

1. Grasp the control panel frame and pull the panel forward until the stop is reached.
2. To completely remove the panel from the turret, lift the panel to clear the stop and pull forward. No electrical disconnections are required to set the panel on the desk top.

indicator assembly and gain access to the indicator lamp.

2. Remove the defective indicator lamp from its socket by pressing on the bulb end, and install the new lamp.
3. Reinstall the indicator assembly. The assembly must be in the extended configuration shown in Figure 5 before it can be reinstalled in the panel.

### INDICATOR LAMP REPLACEMENT

Replace defective push-button switch lamp as follows:

1. Grasp the switch lens (nameplate) and pull forward to remove the

### TROUBLESHOOTING PROCEDURE

A step-by-step Troubleshooting Procedure is provided in Table 4 to help the serviceman quickly isolate and correct any problems that may arise.

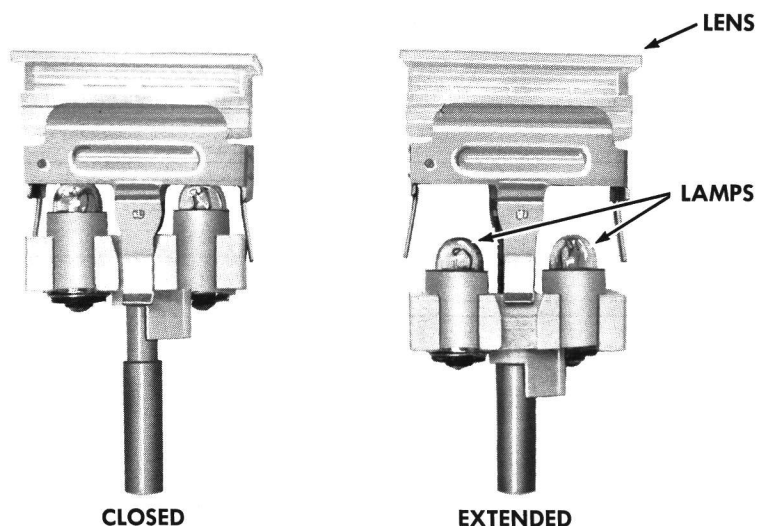


Figure 5 - Switch Indicator Assembly

Table 4 - Troubleshooting Procedure

SYMPTOM	PROCEDURE
No audio from the speaker.	<ol style="list-style-type: none"> <li>1. Make sure that VOLUME control R801 is not set at minimum (fully counterclockwise).</li> <li>2. Check to see that the console is not in the transmit mode (red transmit light on). If the light is on, check for a short in the push-to-talk circuit.</li> <li>3. Check supply voltage at J3 of A852.</li> <li>4. Check Bias Adjust R5 on A852 for setting described in the Adjustment Procedure. If R5 cannot be adjusted for the correct reading, check Q1-Q4, Q851 and Q852.</li> </ol>









Table 4 - Troubleshooting Procedure (Cont'd)

SYMPTOM	PROCEDURE
Audio from one station only.	<ol style="list-style-type: none"> <li>1. Check the audio input with an AC-VTVM across TB801-1 and -2 (for Station 1) or TB851-1 and -2 (for Station 2). If audio is present, go to step 2.</li> <li>2. Check with AC-VTVM for audio at A851-J17 (for Station 1) or A853-J17 (for Station 2).</li> <li>3. Check the setting of LINE INPUT control R7 on A851/A853 (refer to the Adjustment Procedure). If R7 cannot be adjusted for the correct reading, check relay contacts K1-11, -12 and -13.</li> <li>4. Check supply voltages J1, J2 and J13 on A851, or J1 and J13 on A853.</li> <li>5. Check the DC voltages for Q3- Q6 on A851/A853 (refer to the Schematic Diagram).</li> </ol>
No audio output for either line when the microphone is keyed.	<ol style="list-style-type: none"> <li>1. Check the microphone leads.</li> <li>2. Key the microphone and check the DC voltages on A851-A1 (refer to the Schematic Diagram).</li> </ol>
No audio output for one line when microphone is keyed. Other line OK.	<ol style="list-style-type: none"> <li>1. Check relay K1 on A851 (for Station 1) or K1 on A853 (Station 2).</li> <li>2. Check the setting of MIC GAIN control R5 on A851 (for Station 1) or Rt on A853 (for Station 2). Refer to the Adjustment Procedure.</li> <li>3. Check the setting of LINE OUTPUT control R28 on A851 (for Station 1) or R28 on A853 (for Station 2). Refer to the Adjustment Procedure.</li> <li>4. Check capacitor C13 on A851/A853.</li> </ol>
No control current for either control pair. (Refer to Table 3 for control currents and functions).	With the microphone unkeyed, check for a reading of 150 to 200 volts DC between TB802-3 and BT802-6.
No control current to one control pair. Current to other control pair OK.	<ol style="list-style-type: none"> <li>1. Check Station 1 control current circuit as follows: <ol style="list-style-type: none"> <li>a) Check to see that relay K1 on A851 energizes when the microphone is keyed. If relay K1 doesn't energize, check for 24 volts DC at J30. If 24 volts is present, check continuity between J801-3 and J29, and check for an open between J29 and J30 (relay coil).</li> <li>b) Check jumper connections on TB802 (refer to the Schematic Diagram and to the applicable Service Sheet for accessory kits and options).</li> </ol> </li> <li>2. Check Station 2 control current circuit as follows: <ol style="list-style-type: none"> <li>a) Check to see that relay K1 on A853 energizes when the microphone is keyed. If relay K1 doesn't energize, check for 24 volts DC at J30. If 24 volts is present check continuity between J801-3 and J29, and check for an open between J29 and J30 (relay coil).</li> <li>b) Check jumper connections on TB852 (refer to the Schematic Diagram and to the applicable Service Sheet for accessory kits and options).</li> </ol> </li> </ol>

PARTS LIST			SYMBOL	G-E PART NO	DESCRIPTION	SYMBOL	G-E PART NO	DESCRIPTION	SYMBOL	G-E PART NO	DESCRIPTION
LBI-3887A											
CENTER CONTROL PANEL MODEL 4EC76A18											
SYMBOL	G-E PART NO.	DESCRIPTION									
A851		CONTROL PANEL CHASSIS - 19E500826-G2 REV D WITH MODIFICATION KIT - 19A112731-G1									
		AUDIO BOARD 19C303936-G5									
		----- CAPACITORS -----									
C1 and C2	19B209243-P5	Polyester: 0.047 µf ±20%, 50 VDCW.									
C3	19A115028-P116	Polyester: 0.22 µf ±20%, 200 VDCW.									
C4	5496267-P2	Tantalum: 47 µf ±20%, 6 VDCW; sim to Sprague Type 150D.									
C5	5496267-P14	Tantalum: 15 µf ±20%, 20 VDCW; sim to Sprague Type 150D.									
C6	5496267-P10	Tantalum: 22 µf ±20%, 15 VDCW; sim to Sprague Type 150D.									
C7	5496267-P107	Tantalum: 100 µf ±20%, 10 VDCW; sim to Sprague Type 150D.									
C8	5496267-P103	Tantalum: 150 µf ±20%, 6 VDCW; sim to Sprague Type 150D.									
C10	5496267-P17	Tantalum: 1.0 µf ±20%, 35 VDCW; sim to Sprague Type 150D.									
C11	5496267-P9	Tantalum: 3.3 µf ±20%, 15 VDCW; sim to Sprague Type 150D.									
C13	5496267-P19	Tantalum: 22 µf ±20%, 35 VDCW; sim to Sprague Type 150D.									
C14	5494481-P128	Ceramic disc: 2700 pf ±10%, 1000 VDCW; sim to RMC Type JF Discap.									
C15	5496267-P17	Tantalum: 1.0 µf ±20%, 35 VDCW; sim to Sprague Type 150D.									
C17*	19A115028-P107	Polyester: 0.01 µf ±20%, 200 VDCW. Added by REV C. Deleted by REV D.									
C18*	5494481-P27	Ceramic disc: 2700 pf ±20%, 1000 VDCW; sim to RMC Type JF Discap. Added by REV D.									
		----- DIODES AND RECTIFIERS -----									
CR1	19A115250-P1	Silicon.									
CR2	4037822-P1	Silicon.									
		----- JACKS AND RECEPTACLES -----									
J1 thru J8	4033513-P4	Contact, electrical: sim to Bead Chain L93-3.									
J10 thru J14	4033513-P4	Contact, electrical: sim to Bead Chain L93-3.									
J16 thru J32	4033513-P4	Contact, electrical: sim to Bead Chain L93-3.									
		----- RELAYS -----									
K1	19C307010-P14	Armature: 24 VDC nominal, 1.5 w max operating, 430 ohms ±15% coil res, 6 form C contacts; sim to Allied Control T154-X-743.									
		----- TRANSISTORS -----									
Q1 thru Q7	19A115889-P1	Silicon, NPN; sim to Type 2N2712.									
Q9	19A115786-P1	Silicon, NPN.									
		----- RESISTORS -----									
R1	3R77-P474J	Composition: 0.47 megohms ±5%, 1/2 w.									
R2	3R77-P473J	Composition: 47,000 ohms ±5%, 1/2 w.									
R3	3R77-P272J	Composition: 2700 ohms ±5%, 1/2 w.									
		-----									
R4	3R77-P393J	Composition: 39,000 ohms ±5%, 1/2 w.									
R5	19B209115-P7	Variable, carbon film: 100,000 ohms ±20%, 0.5 w; sim to CTS Type UPE-70.									
R6	3R77-P472K	Composition: 4700 ohms ±10%, 1/2 w.									
R7	19B209115-P6	Variable, carbon film: 25,000 ohms ±20%, 0.5 w; sim to CTS Type UPE-70.									
R8	3R77-P361J	Composition: 360 ohms ±5%, 1/2 w.									
R9	3R77-P473K	Composition: 47,000 ohms ±10%, 1/2 w.									
R10	3R77-P103K	Composition: 10,000 ohms ±10%, 1/2 w.									
R11	3R77-P332J	Composition: 3300 ohms ±5%, 1/2 w.									
R12	3R77-P222J	Composition: 2200 ohms ±5%, 1/2 w.									
R13	3R77-P153J	Composition: 15,000 ohms ±5%, 1/2 w.									
R14	3R77-P101J	Composition: 100 ohms ±5%, 1/2 w.									
R15	3R77-P333J	Composition: 33,000 ohms ±5%, 1/2 w.									
R16	3R77-P104J	Composition: 0.10 megohms ±5%, 1/2 w.									
R17	3R77-P275J	Composition: 2.75 megohms ±5%, 1/2 w.									
R18	3R77-P331J	Composition: 330 ohms ±5%, 1/2 w.									
R19	3R77-P394J	Composition: 0.39 megohms ±5%, 1/2 w.									
R20	3R77-P623J	Composition: 62,000 ohms ±5%, 1/2 w.									
R21	3R77-P153J	Composition: 15,000 ohms ±5%, 1/2 w.									
R22	3R77-P102K	Composition: 1000 ohms ±10%, 1/2 w.									
R23	3R77-P103K	Composition: 10,000 ohms ±10%, 1/2 w.									
R25	3R77-P104K	Composition: 0.10 megohms ±10%, 1/2 w.									
R26	3R77-P102K	Composition: 1000 ohms ±10%, 1/2 w.									
R28	19B209115-P4	Variable, carbon film: 5000 ohms ±20%, 0.8 w; sim to CTS Type UPE-70.									
R31	3R77-P912J	Composition: 9100 ohms ±5%, 1/2 w.									
R38	3R77-P100K	Composition: 10 ohms ±10%, 1/2 w.									
R39	3R77-P511J	Composition: 510 ohms ±5%, 1/2 w.									
R40	3R77-P332K	Composition: 3300 ohms ±10%, 1/2 w.									
		----- THERMISTORS -----									
RT2	5490828-P14	Thermistor: 100 ohms ±5%, color code white; sim to Global Type 783F-6.									
		----- SOCKETS -----									
XK1	19B209172-P1	Relay, phen: 22 contacts; sim to Allied Control 30054-24.									
		SPEAKER AMPLIFIER BOARD 19B205803-G1									
		----- CAPACITORS -----									
C1	5496267-P20	Tantalum: 47 µf ±20%, 35 VDCW; sim to Sprague Type 150D.									
C2	7774750-P4	Ceramic disc: .001 µf +100% -0%, 500 VDCW.									
C3	19A115680-P10	Electrolytic: 200 µf +150% -10%, 18 VDCW; sim to Mallory Type TT.									
C4	7489162-P44	Silver mica: 510 pf ±5%, 300 VDCW; sim to Electro Motive Type DM-15.									
C5	5496267-P2	Tantalum: 47 µf ±20%, 6 VDCW; sim to Sprague Type 150D.									
C6*	7774750-P4	Ceramic disc: .001 µf +100% -0%, 500 VDCW. Added by REV C.									
		----- DIODES AND RECTIFIERS -----									
CR1 and CR2	19A115250-P1	Silicon.									
		----- JACKS AND RECEPTACLES -----									
J1 thru J4	4033513-P4	Contact, electrical: sim to Bead Chain L93-3.									
		----- TRANSISTORS -----									
Q1	19A115362-P1	Silicon, NPN; sim to Type 2N2925.									
		-----									
Q2	19A115315-P1	Silicon, NPN.									
Q3	19A115300-P2	Silicon, NPN; sim to Type 2N3053.									
Q4	19A115706-P2	Silicon, PNP.									
		----- RESISTORS -----									
R1	3R77-P272J	Composition: 2700 ohms ±5%, 1/2 w.									
R2	3R77-P131J	Composition: 130 ohms ±5%, 1/2 w.									
R3	3R77-P202J	Composition: 2000 ohms ±5%, 1/2 w.									
R4	3R77-P181K	Composition: 180 ohms ±10%, 1/2 w.									
R5	19B209113-P1	Variable, wirewound: 250 ohms ±20%, 2.5 w; sim to CTS Series 110.									
R6	3R77-P223J	Composition: 22,000 ohms ±5%, 1/2 w.									
R8	19B209022-P7	Wirewound: .47 ohms ±5%, 2 w; sim to IRC Type BWH.									
R9	3R77-P392K	Composition: 3900 ohms ±10%, 1/2 w.									
		AUDIO BOARD 19C303936-G5									
		----- CAPACITORS -----									
C2	19B209243-P5	Polyester: 0.047 µf ±20%, 50 VDCW.									
C3	19A115028-P116	Polyester: 0.22 µf ±20%, 200 VDCW.									
C4	5496267-P2	Tantalum: 47 µf ±20%, 6 VDCW; sim to Sprague Type 150D.									
C5	5496267-P14	Tantalum: 15 µf ±20%, 20 VDCW; sim to Sprague Type 150D.									
C6	5496267-P10	Tantalum: 22 µf ±20%, 15 VDCW; sim to Sprague Type 150D.									
C7	5496267-P107	Tantalum: 100 µf ±20%, 10 VDCW; sim to Sprague Type 150D.									
C8	5496267-P103	Tantalum: 150 µf ±20%, 6 VDCW; sim to Sprague Type 150D.									
C10	5496267-P17	Tantalum: 1.0 µf ±20%, 35 VDCW; sim to Sprague Type 150D.									
C11	5496267-P9	Tantalum: 3.3 µf ±20%, 15 VDCW; sim to Sprague Type 150D.									
C13	5496267-P19	Tantalum: 22 µf ±20%, 35 VDCW; sim to Sprague Type 150D.									
C14	5494481-P128	Ceramic disc: 2700 pf ±10%, 1000 VDCW; sim to RMC Type JF Discap.									
C15	5496267-P17	Tantalum: 1.0 µf ±20%, 35 VDCW; sim to Sprague Type 150D.									
C17*	19A115028-P107	Polyester: 0.01 µf ±20%, 200 VDCW. Added by REV C. Deleted by REV D.									
C18*	5494481-P27	Ceramic disc: 2700 pf ±20%, 1000 VDCW; sim to RMC Type JF Discap. Added by REV D.									
		----- DIODES AND RECTIFIERS -----									
CR1	19A115250-P1	Silicon.									
CR2	4037822-P1	Silicon.									
		----- JACKS AND RECEPTACLES -----									
J1 thru J8	4033513-P4	Contact, electrical: sim to Bead Chain L93-3.									
J10 thru J14	4033513-P4	Contact, electrical: sim to Bead Chain L93-3.									
J16 thru J32	4033513-P4	Contact, electrical: sim to Bead Chain L93-3.									
		----- RELAYS -----									
K1	19C307010-P14	Armature: 24 VDC nominal, 1.5 w max operating, 430 ohms ±15% coil res, 6 form C contacts; sim to Allied Control T154-X-743.									
		----- TRANSISTORS -----									
Q1	19A115123-P1	Silicon, NPN.									
Q2	19A115768-P1	Silicon, PNP; sim to Type 2N3702.									
Q3	19A115300-P2	Silicon, NPN; sim to Type 2N3053.									
Q4 and Q5	19A115123-P1	Silicon, NPN.									

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.



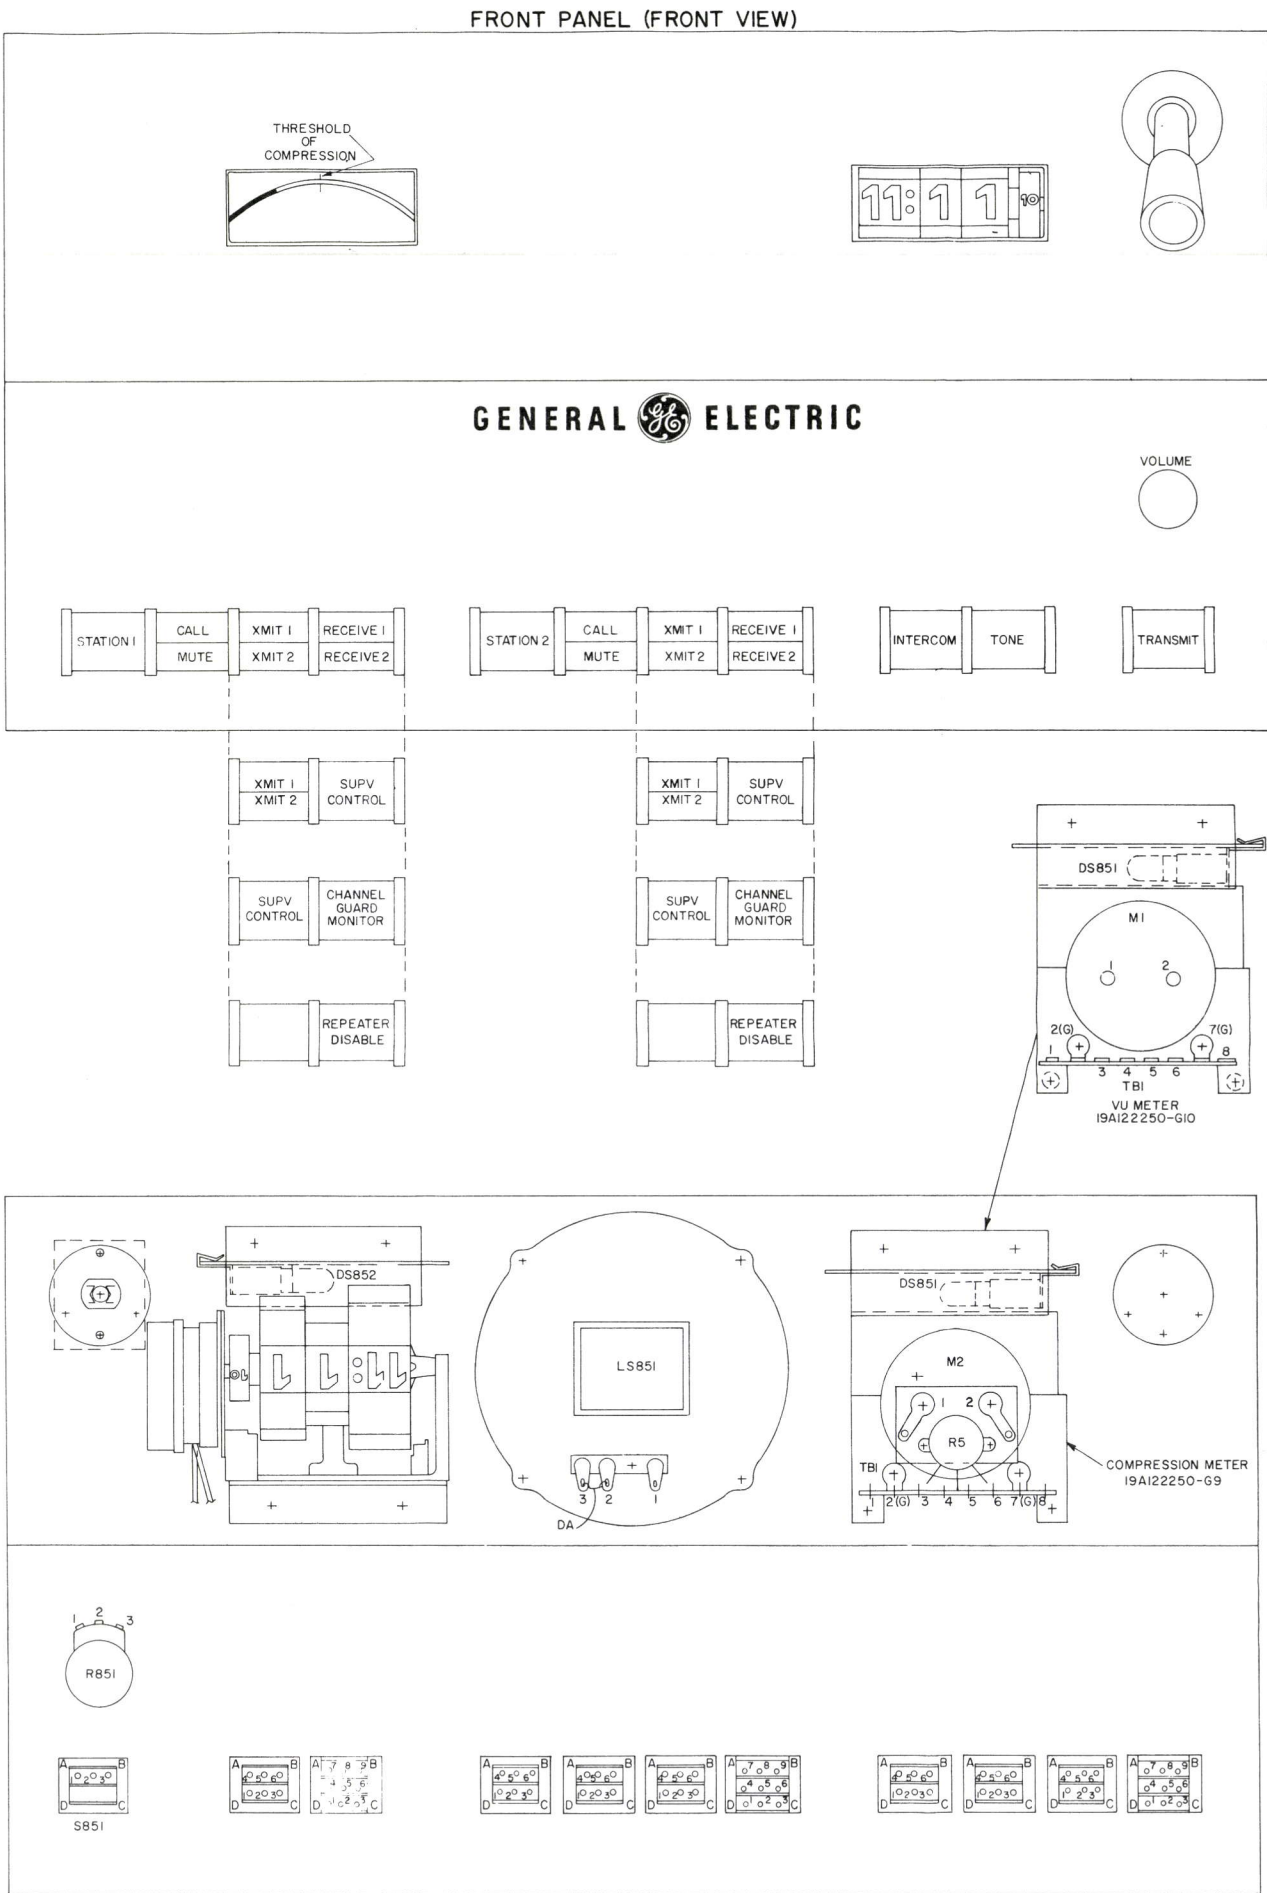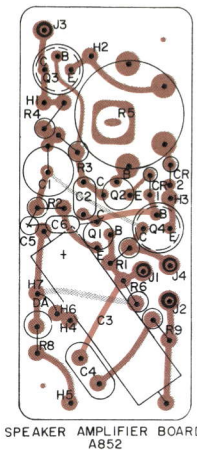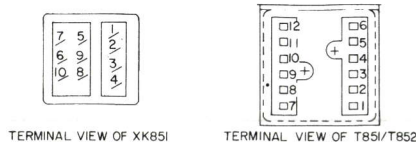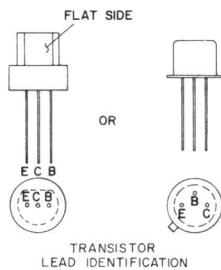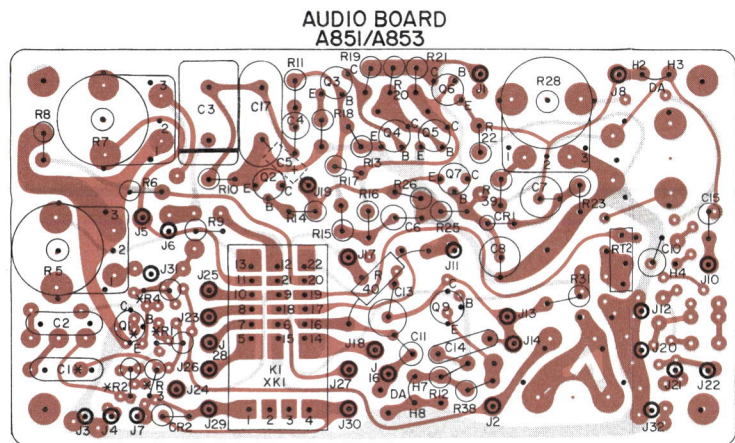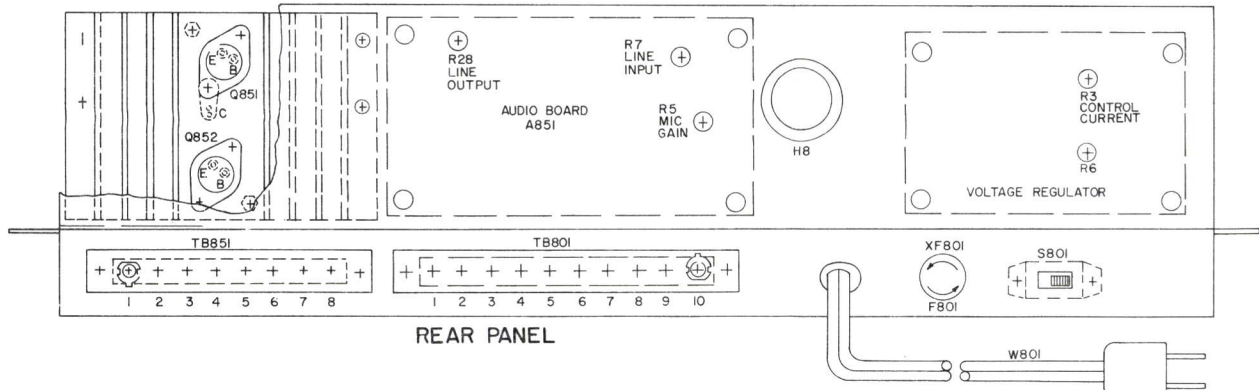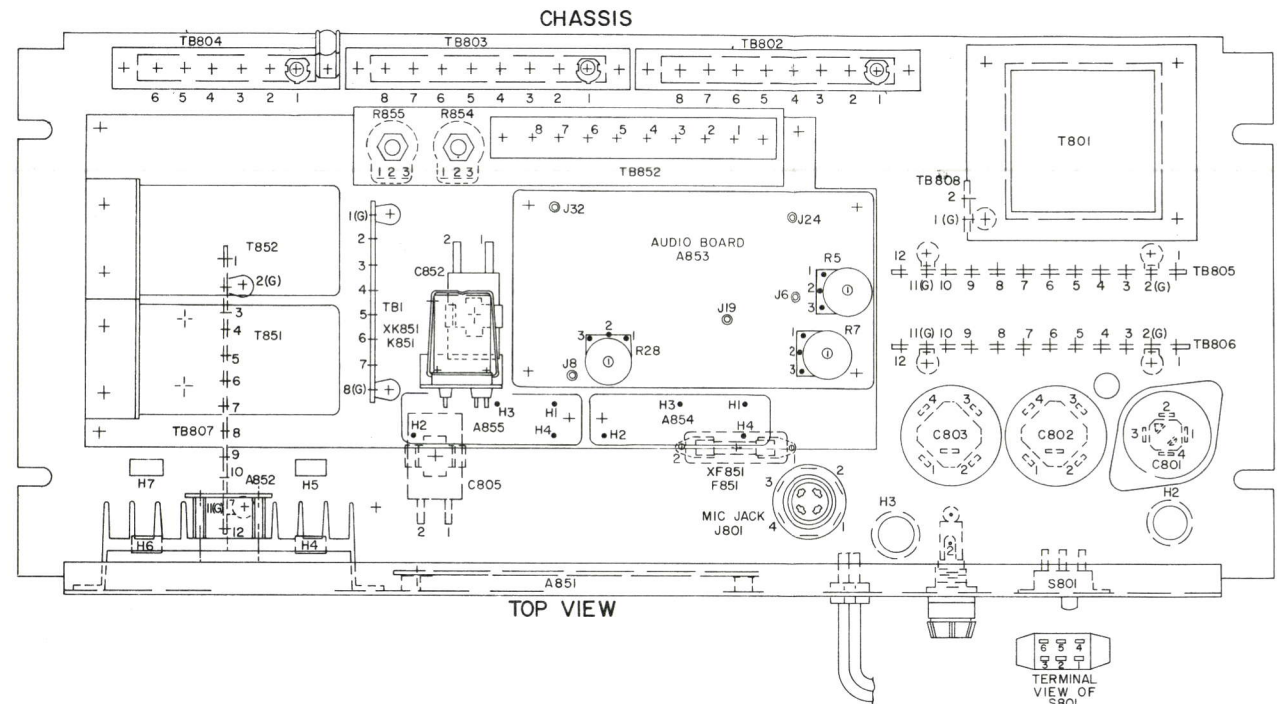


OUTLINE DIAGRAM

CONTROL PANEL  
MODEL 4EC76A18


(19C303937, Sh. 1, Rev. 7)  
(19C303937, Sh. 2, Rev. 7)

(19R640732, Rev. 2)



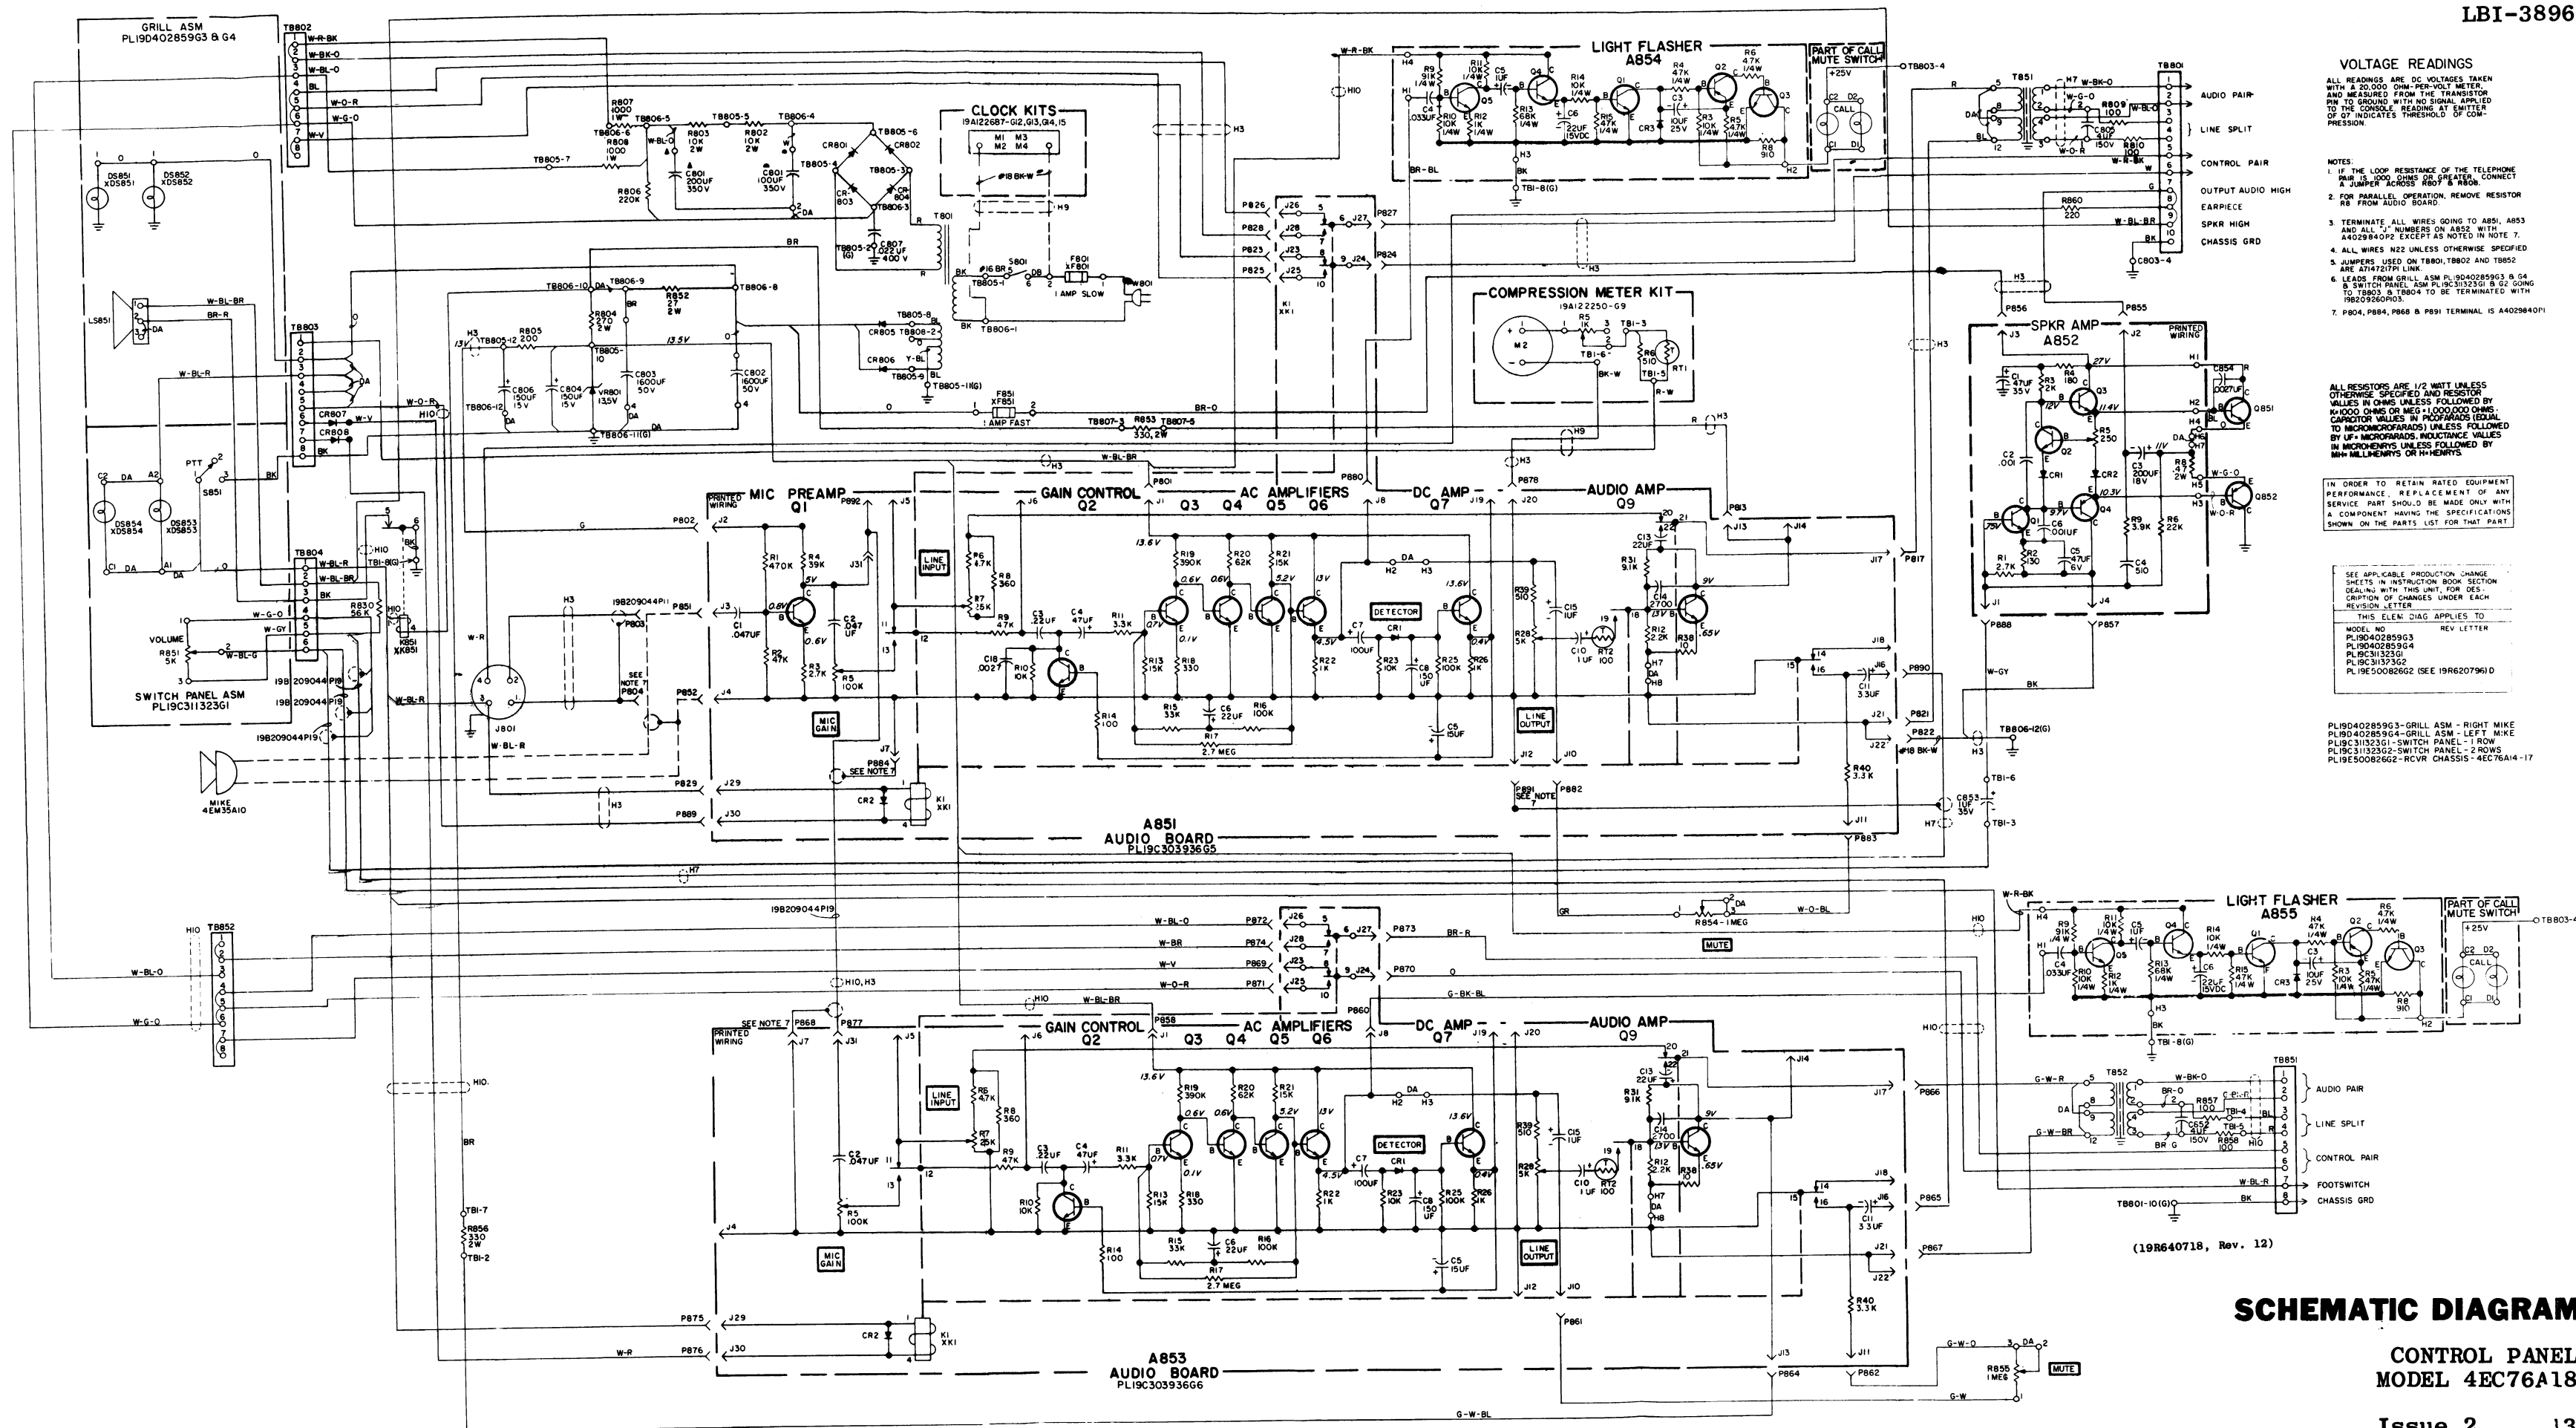

SYMBOL	G-E PART NO	DESCRIPTION	SYMBOL	G-E PART NO	DESCRIPTION	SYMBOL	G-E PART NO	DESCRIPTION	SYMBOL	G-E PART NO	DESCRIPTION
		----- RESISTORS -----									
R3	3R152-P103K	Composition: 10,000 ohms $\pm 10\%$ , 1/4 w.	P868	4029840-P1	Contact, electrical: sim to AMP 41854.			----- CABLES -----			12 HOUR CLOCK 19A122687-G12 CLOCK ASSEMBLY 19B205805-G1
R4	3R152-P473K	Composition: 47,000 ohms $\pm 10\%$ , 1/4 w.	P869 thru P877	4039840-P2	Contact, electrical: sim to AMP 42827-2.	W801	4036441-P7	Cable, power: 2 conductor with 2-contact plug, approx 7 feet long.			----- METERS -----
R5 and R6	3R152-P472K	Composition: 4700 ohms $\pm 10\%$ , 1/4 w.	P885	4029840-P2	Contact, electrical: sim to AMP 42827-2.	XF801	19B209005-P1	Fuseholder, post type: 15 amps at 250 v; sim to Littelfuse 342012.	M1	7491080-P5	Clock, cyclometer: 117 VAC, 50 cycles; sim to Pennwood Numechron 1P-12H.
R8	3R77-P911J	Composition: 910 ohms $\pm 5\%$ , 1/2 w.	P886 and P887	4029840-P1	Contact, electrical: sim to AMP 41854.	XF851	7141008-P1	Fuseholder: 5 amps at 125 v; sim to Littelfuse L357001.			12 HOUR CLOCK 19A122687-G13 CLOCK ASSEMBLY 19B205805-G2
R9	3R152-P913J	Composition: 91,000 ohms $\pm 5\%$ , 1/4 w.	P888 thru P890	4029840-P2	Contact, electrical: sim to AMP 42827-2.	XX851	5491595-P4	Relay: 10 contacts; sim to Allied Control 30054-1.	M2	7491080-P1	Clock, cyclometer: 117 VAC, 60 cycles; sim to Pennwood Numechron 1P-12H.
R10 and R11	3R152-P103K	Composition: 10,000 ohms $\pm 10\%$ , 1/4 w.	P891	4039840-P1	Contact, electrical: sim to AMP 41854.			GRILLE ASSEMBLY 19D402859-G3 and G4			----- METERS -----
R12	3R152-P102K	Composition: 1000 ohms $\pm 10\%$ , 1/4 w.	P892	4033348-P1	Contact, electrical: sim to Bead Chain M 125-34.	DS851 and DS852	19C307037-P20	Lamp, incandescent: 28 v; sim to GE 757.			24 HOUR CLOCK 19A122687-G14 CLOCK ASSEMBLY 19B205805-G3
R13	3R152-P683K	Composition: 68,000 ohms $\pm 10\%$ , 1/4 w.			----- TRANSISTORS -----	LS851	5491260-P7	Permanent magnet, 5-inch: 3.2 ohms $\pm 10\%$ voice coil imp, 15 w max operating; 385 cps $\pm 15\%$ resonance, paper dust cap; sim to Jensen Model P5-VAS12761.	M3	7491080-P6	Clock, cyclometer: 117 VAC, 50 cycles; sim to Pennwood Numechron 1P-24H-AM/PM.
R14	3R152-P103K	Composition: 10,000 ohms $\pm 10\%$ , 1/4 w.	Q851	19A115527-P1	Silicon, NPN.	XDS851 and XDS852	19B209342-P2	Lampholder: sim to Leecraft 7-04-1.			24 HOUR CLOCK 19A122687-G15 CLOCK ASSEMBLY 19B205805-G4
R15	3R152-P473K	Composition: 47,000 ohms $\pm 10\%$ , 1/4 w.	Q852	19A115792-P1	Silicon, PNP.			SWITCH PANEL ASSEMBLY 19C311323-G1	M4	7491080-P2	Clock, cyclometer: 117 VAC, 60 cycles; sim to Pennwood Numechron 1P-24H-AM/PM.
		----- CAPACITORS -----			----- RESISTORS -----			----- RESISTORS -----			----- METERS -----
C801	7772471-P42	Electrolytic: 100-200 $\mu$ f $\pm 100\%$ -10%, 300 VDCW; sim to Mallory Type FP.	R802 and R803	3R79-P103K	Composition: 10,000 ohms $\pm 10\%$ , 2 w.	R851	549687C-P11	Variable, carbon film: 5000 ohms $\pm 20\%$ ; sim to Mallory LC(5K).	1	19A115725-P1	Strain relief. (Used with W801).
C802 and C803	7476442-P20	Electrolytic: 1600 $\mu$ f $\pm 250\%$ -10%, 50 VDCW; sim to PR Mallory WP-068.	R804	3R79-P391K	Composition: 390 ohms $\pm 10\%$ , 2 w.	851		TRANSMIT SWITCH AND INDICATOR ASSEMBLY 19B205756-G1	2	19A115368-P1	Retainer. (Used with K1 on A851 and A853).
C804	5496267-P12	Tantalum: 150 $\mu$ f $\pm 20\%$ , 15 VDCW; sim to Sprague Type 150D.	R805	3R77-P201K	Composition: 200 ohms $\pm 10\%$ , 1/2 w.			----- INDICATING DEVICES -----	3	19B205762-1	Locking pin. (Part of Control panel latch assembly).
C805	7486445-P1	Electrolytic, non polarized: 4 $\mu$ f $\pm 100\%$ -10%, 150 VDCW.	R806	3R77-P224J	Composition: 0.22 megohm $\pm 5\%$ , 1/2 w.			----- SOCKETS -----	4	19B205792-P1	Heat sink. (Used with Q851 and Q852).
C806	5496267-P12	Tantalum: 150 $\mu$ f $\pm 20\%$ , 15 VDCW; sim to Sprague Type 150D.	R807 and R808	3R78-P102K	Composition: 1000 ohms $\pm 10\%$ , 1 w.			----- SWITCHES -----	5	7142162-P91	Spacer. (Used with A852).
C807	19A115028-P49	Polyester: .022 $\mu$ f $\pm 20\%$ , 400 VDCW.	R809 and R810	3R77-P101J	Composition: 100 ohms $\pm 5\%$ , 1/2 w.			----- INDICATING DEVICES -----	6	4036555-P1	Insulator, disc. (Used with Q3 and Q4 on A852 and Q3 on A854 and A855).
C852	7486445-P1	Electrolytic, non polarized: 4 $\mu$ f $\pm 100\%$ -10%, 150 VDCW.	R830	3R77-P563K	Composition: 56,000 ohms $\pm 10\%$ , 1/2 w.	DS853 and DS854	19C307037-P26	Lamp, incandescent: 28 v; sim to GE 387.	7	4029851-P8	Clip, loop. (Located by TB803 and TB804).
C853	5496267-P17	Tantalum: 1.0 $\mu$ f $\pm 20\%$ , 35 VDCW; sim to Sprague Type 150D.	R852	3R79-P270K	Composition: 27 ohms $\pm 10\%$ , 2 w.			----- SWITCHES -----	8	5491595-P8	Retainer. (Used with K851).
C854*	5494481-P27	Ceramic disc: 2700 pf $\pm 20\%$ , 1000 VDCW; sim to RMC Type JF Discap. Added by REV A.	R853	3R79-P331J	Composition: 330 ohms $\pm 5\%$ , 2 w.			----- SOCKETS -----	9	19C311302-P4	Grille.
		----- DIODES AND RECTIFIERS -----	R854 and R855	5494774-P110	Variable, carbon film: 1 megohm $\pm 20\%$ , 0.2 w; sim to CTS Series 70 Control.			----- INDICATING DEVICES -----	10	19A122700-P1	Window. (Used with clock and meter).
CR801 thru CR804	19A122325-P1	Silicon.	R856	3R79-P331J	Composition: 330 ohms $\pm 5\%$ , 2 w.			----- SOCKETS -----	11	19B205766-P1	Escutcheon. (Used with clock and meter).
CR805 and CR806	4037822-P1	Silicon.	R857 and R858	3R77-P101K	Composition: 100 ohms $\pm 10\%$ , 1/2 w.			----- SOCKETS -----	12	19A115873-P1	Bumper. (Located on bottom (back edge) of Control panel).
		----- FUSES -----	R860	3R77-P221K	Composition: 220 ohms $\pm 10\%$ , 1/2 w.			----- METERS -----	13	19A115873-P2	Bumper. (Located on bottom (front edge) of Control panel).
F801	7487942-P5	Slow blowing: 1 amp at 250 v; sim to Bussman MDL-1.			----- SWITCHES -----			----- RESISTORS -----	14	19C311304-P1	Dummy switch.
F851	1R16-P3	Quick blowing: 1 amp at 250 v; sim to Littelfuse 312001 or Bussman AGC-1.	S801	7145098-P1	Slide: DPDT, 0.75 amp at 125 VAC or 0.5 amp at 125 VDC; sim to Stackpole SS-150.			----- RESISTORS -----	15	19A122697-G5	Nameplate.
		----- JACKS AND RECEPTACLES -----	T801	19A115677-P1	Power, step-down, step-up: Pri: 117 VRMS $\pm 20\%$ , Sec: 5.7/18/24/125 VDC.			----- RESISTORS -----	16	19C307029-P3	Retainer. (Used with panel switches).
J801	7117934-P2	Connector, chassis: 4 female contacts; sim to Amphenol Type 91-PC4F.	T851 and T852	19C307069-P1	Audio freq: 300 to 4000 Hz freq range.			----- THERMISTORS -----	17	19A115837-P1	Knob, push on. (For R851).
		----- RELAYS -----			----- TERMINAL BOARDS -----			----- THERMISTORS -----	18	19C307029-P16	Actuator-Holder. (Includes XDS853 and XDS854).
K851	5491595-P3	Armature: 1.5 w operating, 700 ohms $\pm 15\%$ coil res, 2 form C contacts; sim to Allied Control T154-X-101.	T81	7775500-P18	Phen: 8 terminals.			----- TERMINAL BOARDS -----	19	19C307029-P10	Pushbutton-Lens.
		----- PLUGS -----	TB801	7117710-P10	Phen: 10 terminals; sim to Cinch 1799.						
P801 thru P803	4029840-P2	Contact, electrical: sim to AMP 42827-2.	TB802 and TB803	7117710-P8	Phen: 8 terminals; sim to Cinch 1780.	M2	19A115695-P1	Panel, DC: 1 ma mechanism.			
P804	4029840-P1	Contact, electrical: sim to AMP 41854.				R6*	3R77-P511J 3R77-P332J	Composition: 510 ohms $\pm 5\%$ , 1/2 w. Earlier than REV B. Composition: 3300 ohms $\pm 5\%$ , 1/2 w.			
P810 and P811	4029840-P2	Contact, electrical: sim to AMP 42827-2.	TB804	7117710-P6	Phen: 6 terminals; sim to Cinch 1776.			----- THERMISTORS -----			
P813	4029840-P2	Contact, electrical: sim to AMP 42827-2.	TB805 thru TB807	7775500-P28	Phen: 12 terminals.	RT1	5490828-P33	Rod: 2200 ohms $\pm 10\%$ ; sim to Globar Type 0325F.			
P816 and P817	4029840-P2	Contact, electrical: sim to AMP 42827-2.	TB808	7775500-P104	Phen: 2 terminals.			----- TERMINAL BOARDS -----			
P821 thru P830	4029840-P2	Contact, electrical: sim to AMP 42827-2.	TB851 and TB852	7117710-P8	Phen: 8 terminals; sim to Cinch 1780.	TB1	7775500-P24	Phen: 8 terminals.			
P854 thru P857	4029840-P2	Contact, electrical: sim to AMP 42827-2.	VR801	4036887-P10	Silicon, Zener.						


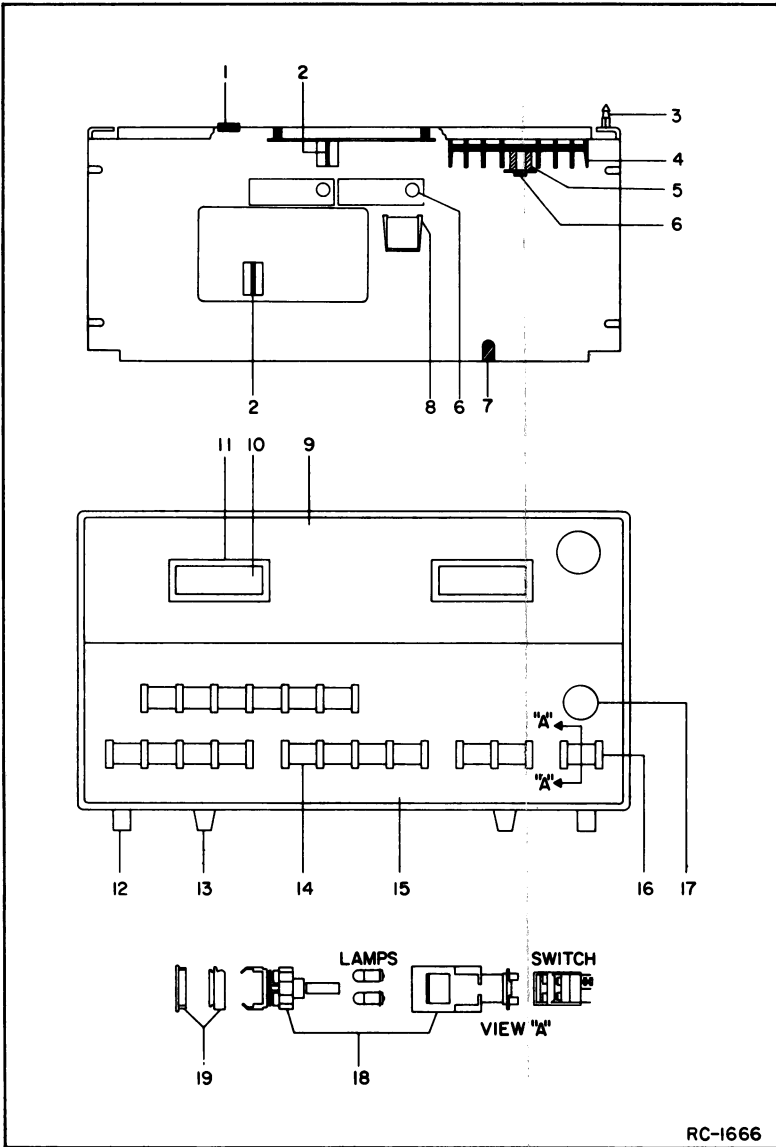


CENTER CONTROL PANEL 4EC76A18

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter", which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.

CONTROL PANEL CHASSIS 19E500862-G2


- Rev. A - To prevent audio oscillation in speaker. Added C854.  
Rev. B - To make Channel Guard and Intercom Options compatible.  
Changed wiring in the Intercom switch circuit.

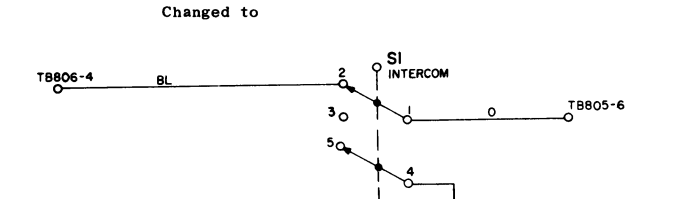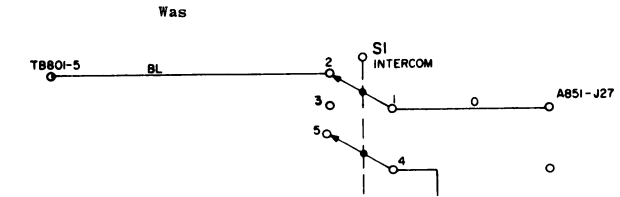

- To provide threshold of compression indication at the center (red line) of the compression meter. Changed R6.  
Rev. C - To prevent oscillation from occurring in speaker amplifier. Added C6 and C17.  
Rev. D - To improve high frequency response. Deleted C17 and added C18.

SCHEMATIC DIAGRAM

STATION 1

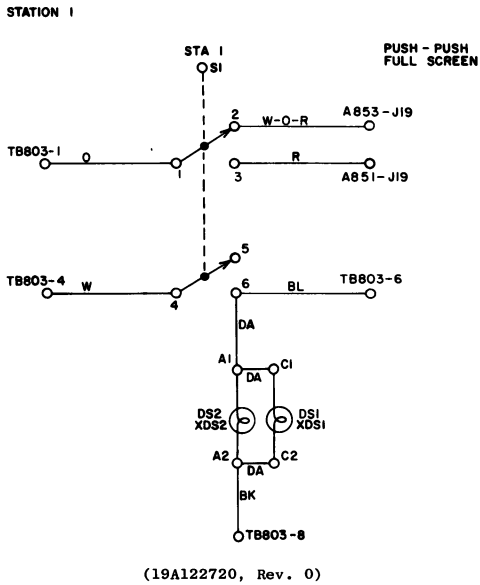

PARTS LIST

STATION 1 and 2 SELECT

SYMBOL	G-E PART NO.	DESCRIPTION
S1**		SWITCH ASSEMBLY 19C311259-G8
DS1 and DS2	19C307037-P26	INDICATING DEVICES Lamp, incandescent: 28 v; sim to GE 387.
	19C307029-P11	SWITCHES Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
XDS1 and XDS2		SOCKETS Part of Actuator and Holder (Refer to RC-1667).
		MECHANICAL PARTS (SEE RC-1667)
2	19C307029-P4	Pushbutton-Lens.
4	19C307029-P16	Actuator-Holder. (Includes XDS1 and XDS2).
** When an optional VU Meter is supplied, the Station 1 Select switch changes as specified in the parts list for the VU Meter option.		

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

PARTS LIST


CALL/MUTE FOR STATION 1 AND 2

SYMBOL	G-E PART NO.	DESCRIPTION
S1		SWITCH ASSEMBLY 19C311259-G8
DS1 thru DS4	19C307037-P26	INDICATING DEVICES Lamp, incandescent: 28 v; sim to GE 387.
	19C307029-P11	SWITCHES Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
XDS1 thru XDS4		SOCKETS Part of Actuator and Holder (Refer to RC-1667).
		MECHANICAL PARTS (SEE RC-1667)
1	19C307029-P15	Pushbutton-Lens.
3	19C307029-P17	Actuator-Holder. (Includes XDS1 thru XDS4).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.


SCHEMATIC DIAGRAM

STATION 1

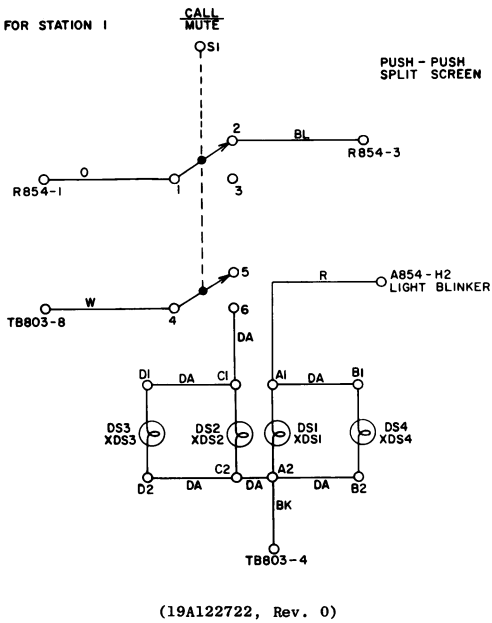


SCHEMATIC DIAGRAM

STATION 2

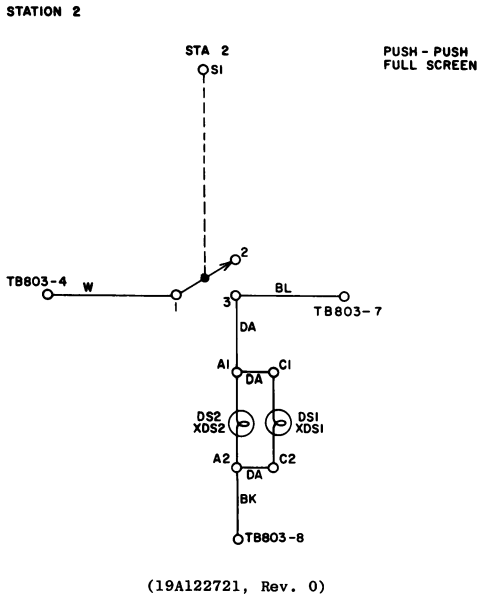


LAMPS

SWITCH

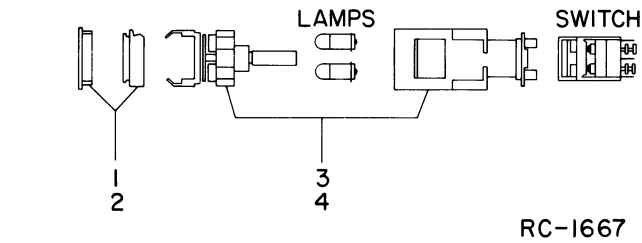

SCHEMATIC DIAGRAM

STATION 2

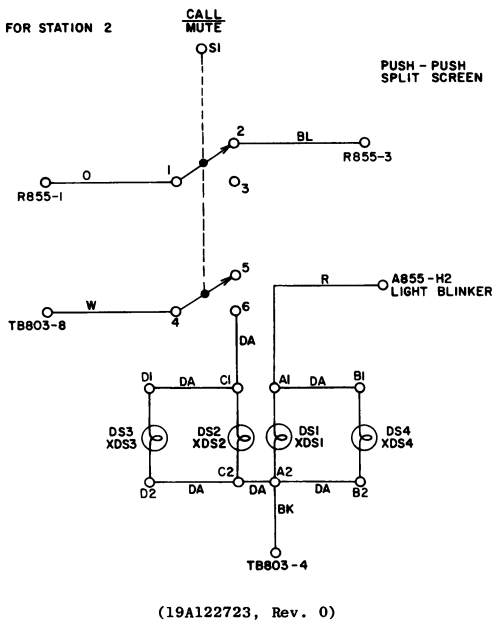


SERVICE SHEET

STATION SELECT  
AND CALL/MUTE

2 FREQ TRANSMIT – 1 FREQ RECEIVE

SCHEMATIC DIAGRAM

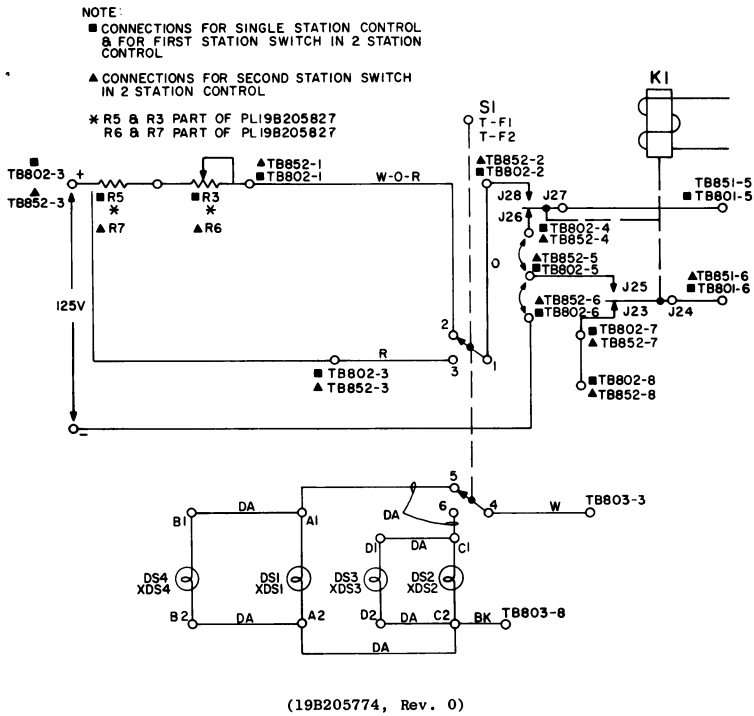

(19B205774, Rev. 0)

PARTS LIST

2 FREQ TRANSMIT – 1 FREQ RECEIVE

SYMBOL	G-E PART NO.	DESCRIPTION
S1		SWITCH ASSEMBLY 19C311259-G1
DS1 thru DS4	19C307037-P26	----- INDICATING DEVICES ----- Lamp, incandescent: 28 v; sim to GE 387.
XDS1 thru XDS4	19C307029-P11	----- SWITCHES ----- Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
		----- SOCKETS ----- Part of Actuator and Holder (Refer to RC-1667).
		MECHANICAL PARTS (SEE RC-1667)
1	19C307029-P15	Pushbutton-Lens.
3	19C307029-P17	Actuator-Holder. (Includes XDS1 thru XDS4).


\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

SERVICE SHEET

2-FREQ TRANSMIT & 1-FREQ RECEIVE;  
1-FREQ TRANSMIT & 2-FREQ RECEIVE AND  
2-FREQ TRANSMIT & 2-FREQ RECEIVE

1 FREQ TRANSMIT – 2 FREQ RECEIVE

SCHEMATIC DIAGRAM

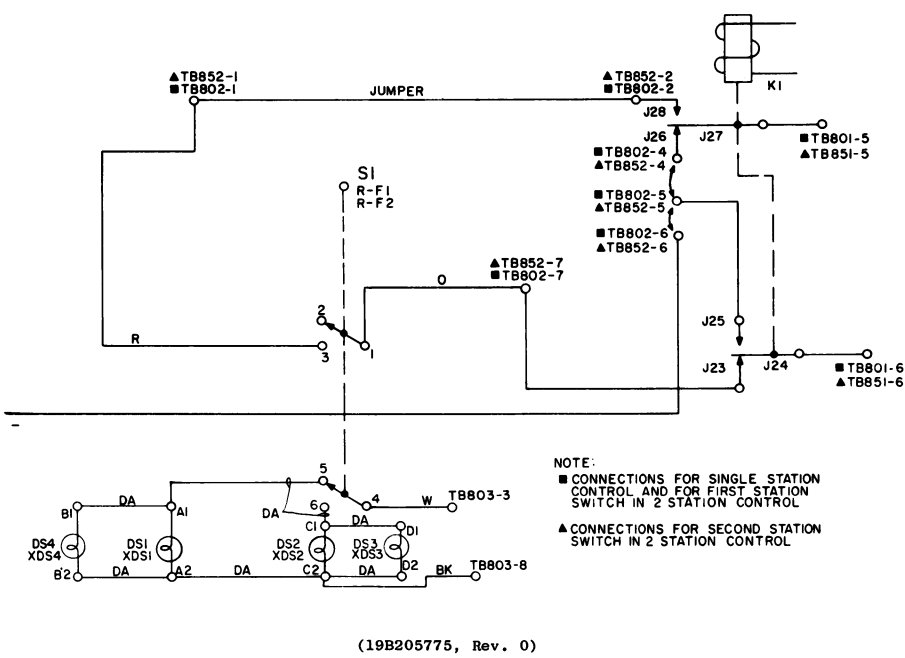


(19B205775, Rev. 0)

PARTS LIST

1 FREQ TRANSMIT – 2 FREQ RECEIVE


SYMBOL	G-E PART NO.	DESCRIPTION
S1		SWITCH ASSEMBLY 19C311259-G1
DS1 thru DS4	19C307037-P26	----- INDICATING DEVICES ----- Lamp, incandescent: 28 v; sim to GE 387.
XDS1 thru XDS4	19C307029-P11	----- SWITCHES ----- Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
		----- SOCKETS ----- Part of Actuator and Holder (Refer to RC-1667).
		MECHANICAL PARTS (SEE RC-1667)
1	19C307029-P15	Pushbutton-Lens.
3	19C307029-P17	Actuator-Holder. (Includes XDS1 thru XDS4).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

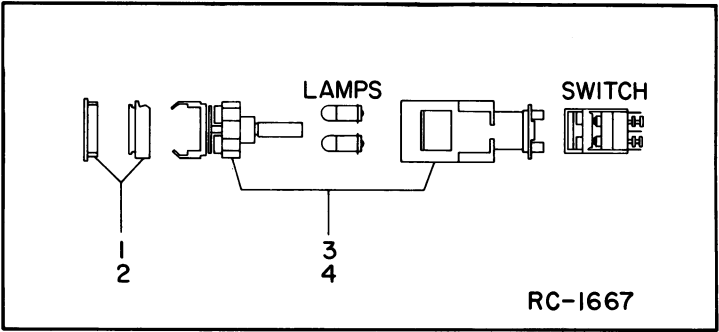

2 FREQ TRANSMIT – 2 FREQ RECEIVE

SCHEMATIC DIAGRAM

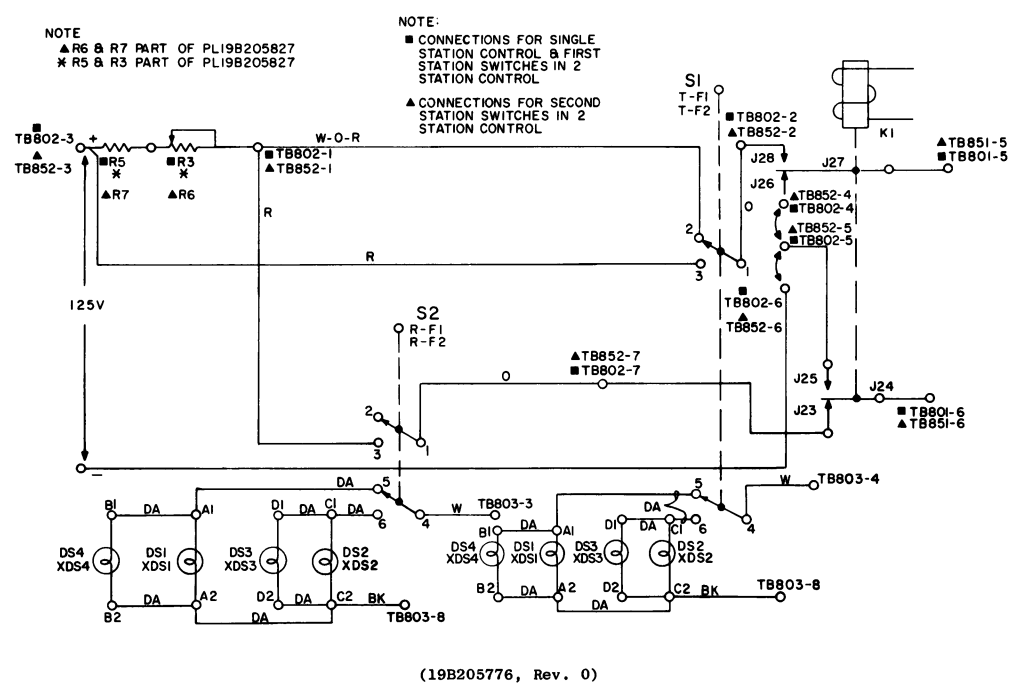

(19B205776, Rev. 0)


PARTS LIST

2 FREQ TRANSMIT – 2 FREQ RECEIVE

SYMBOL	G-E PART NO.	DESCRIPTION
S1 and S2		SWITCH ASSEMBLY 19C311259-G1
DS1 thru DS4	19C307037-P26	----- INDICATING DEVICES ----- Lamp, incandescent: 28 v; sim to GE 387.
XDS1 thru XDS4	19C307029-P11	----- SWITCHES ----- Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
		----- SOCKETS ----- Part of Actuator and Holder (Refer to RC-1667).
		MECHANICAL PARTS (SEE RC-1667)
1	19C307029-P15	Pushbutton-Lens.
3	19C307029-P17	Actuator-Holder. (Includes XDS1 thru XDS4).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.


SCHEMATIC DIAGRAM

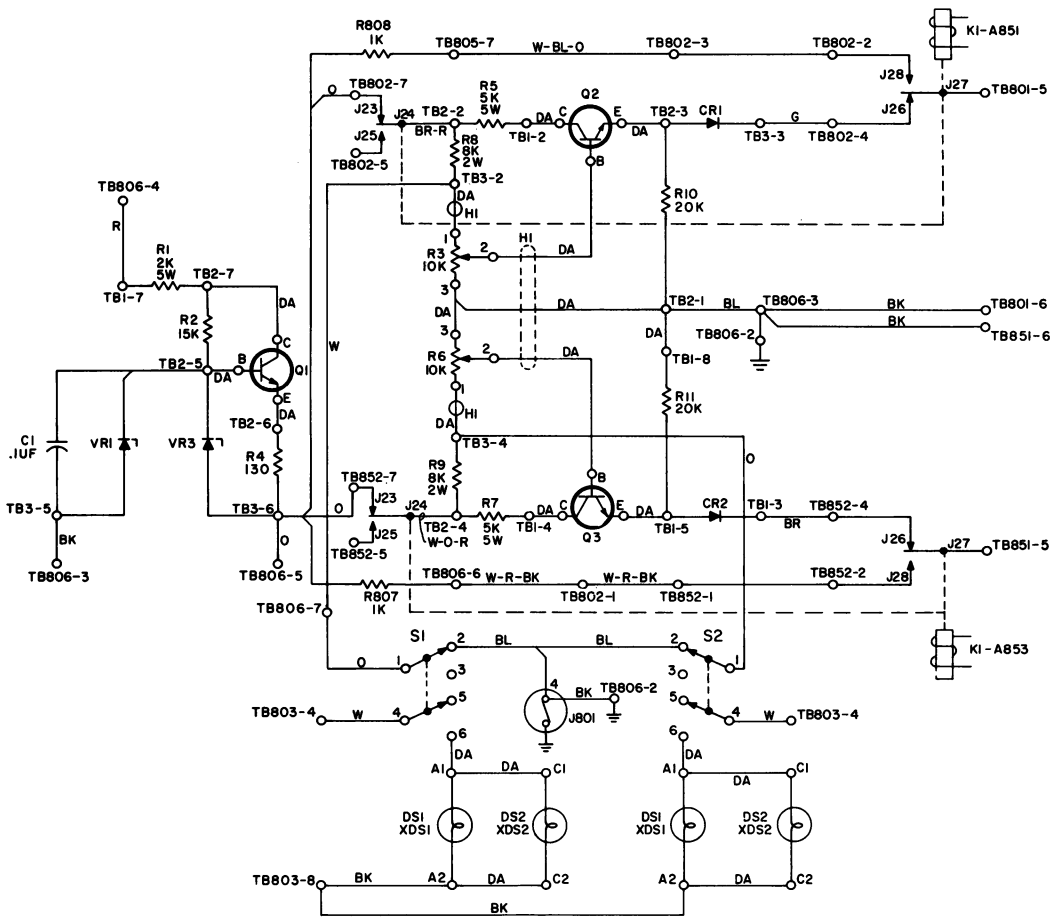

(19C311351, Rev. 2)

OUTLINE DIAGRAM

CHANNEL GUARD REGULATOR  
19A122737-G4

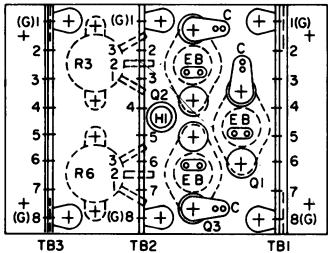

(19A127359, Rev. 0)

PARTS LIST

CHANNEL GUARD

SYMBOL	G-E PART NO.	DESCRIPTION
		MODIFICATION KIT 19A122687-G16 REGULATOR BOARD 19A122737-G4
		----- CAPACITORS -----
C1	19A115028-P14	Polyester: 0.1 $\mu$ f $\pm$ 20%, 200 VDCW.
		----- TRANSISTORS -----
Q1	19A115783-P1	Silicon, NPN.
		----- DIODES AND RECTIFIERS -----
CR1 and CR2	4037822-P1	Silicon.
		----- TRANSISTORS -----
Q1 thru Q3	19A115783-P1	Silicon, NPN.
		----- RESISTORS -----
R1	7478711-P34	Wirewound: 2000 ohms $\pm$ 5%, 7 w; sim to Sprague Type 454E.
R2	3R77-P153K	Composition: 15,000 ohms $\pm$ 10%, 1/2 w.
R3	19B209244-P3	Variable, wirewound: 10,000 ohms $\pm$ 20%, 2 w; sim to CTS Type 117.
R4	3R77-P131J	Composition: 130 ohms $\pm$ 5%, 1/2 w.
R5	7478711-P38	Wirewound: 5000 ohms $\pm$ 5%, 7 w; sim to Sprague Type 454E.
R6	19B209244-P3	Variable, wirewound: 10,000 ohms $\pm$ 20%, 2 w; sim to CTS Type 117.
R7	7478711-P38	Wirewound: 5000 ohms $\pm$ 5%, 7 w; sim to Sprague Type 454E.
R8 and R9	3R79-P822K	Composition: 8200 ohms $\pm$ 10%, 2 w.
R10 and R11	3R77-P203J	Composition: 20,000 ohms $\pm$ 5%, 1/2 w.
		----- TERMINAL BOARDS -----
TB1 thru TB3	7775500-P18	Phen: 8 terminals.
		----- VOLTAGE REGULATORS -----
VR1	19A115528-P28	Silicon, Zener.
VR3	4036887-P5	Silicon, Zener.
		SWITCH ASSEMBLY 19C311259-G2
S1		
		----- INDICATING DEVICES -----
DS1 and DS2	19C307037-P26	Lamp, incandescent: 28 v; sim to GE 387.
		----- SWITCHES -----
	19C307029-P11	Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
		----- SOCKETS -----
XDS1 and XDS2		Part of Actuator and Holder (Refer to RC-1667).
		MECHANICAL PARTS (SEE RC-1667)
2	19C307029-P4	Pushbutton-Lens.
4	19C307029-P16	Actuator-Holder. (Includes XDS1 and XDS2).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.


PARTS LIST

HIGH VOLTAGE REGULATOR  
19A122737-G2

SYMBOL	G-E PART NO.	DESCRIPTION
		----- CAPACITORS -----
C1	19A115028-P14	Polyester: 0.1 $\mu$ f $\pm$ 20%, 200 VDCW.
		----- TRANSISTORS -----
Q1	19A115783-P1	Silicon, NPN.
		----- RESISTORS -----
R1	7478711-P34	Wirewound: 2000 ohms $\pm$ 5%, 7 w; sim to Sprague Type 454E.
R2	3R77-P153K	Composition: 15,000 ohms $\pm$ 10%, 1/2 w.
R3	19B209244-P3	Variable, wirewound: 10,000 ohms $\pm$ 20%, 2 w; sim to CTS Type 117.
R4	3R77-P131J	Composition: 130 ohms $\pm$ 5%, 1/2 w.
R5	7478711-P38	Wirewound: 5000 ohms $\pm$ 5%, 7 w; sim to Sprague Type 454E.
R6	19B209244-P3	Variable, wirewound: 10,000 ohms $\pm$ 20%, 2 w; sim to CTS Type 117.
R7	7478711-P38	Wirewound: 5000 ohms $\pm$ 5%, 7 w; sim to Sprague Type 454E.
		----- TERMINAL BOARDS -----
TB1 and TB2	7775500-P18	Phen: 8 terminals.
		----- VOLTAGE REGULATORS -----
VR1	19A115528-P28	Silicon, Zener.
VR3	4036887-P5	Silicon, Zener.

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.


SCHEMATIC DIAGRAM

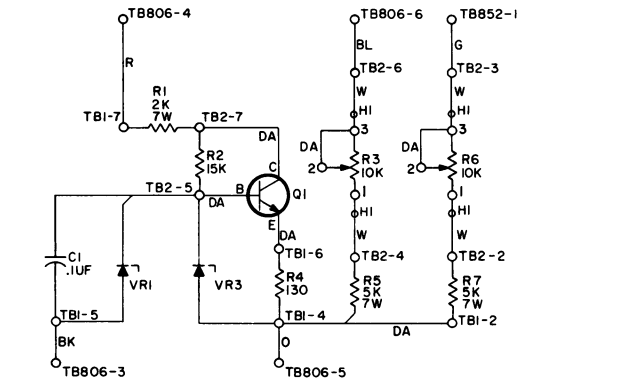


(19B205828, Rev. 3)

OUTLINE DIAGRAM

HIGH VOLTAGE REGULATOR  
19A122737-G2

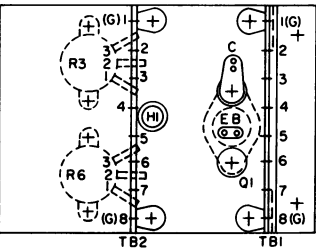


(19A127360, Rev. 0)

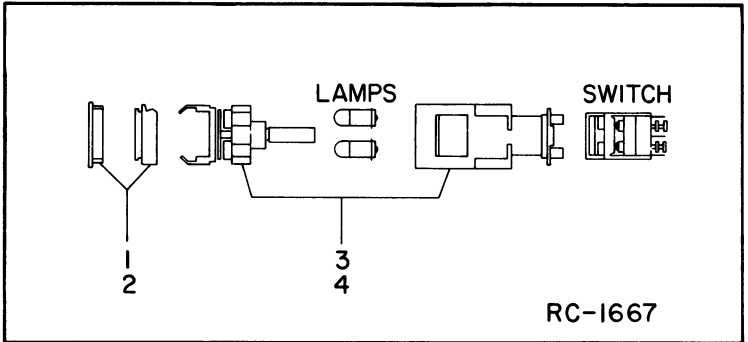

SERVICE SHEET  
CHANNEL GUARD AND  
HIGH VOLTAGE REGULATOR

REPEATER DISABLE  
OPTION 5127

SCHEMATIC DIAGRAM

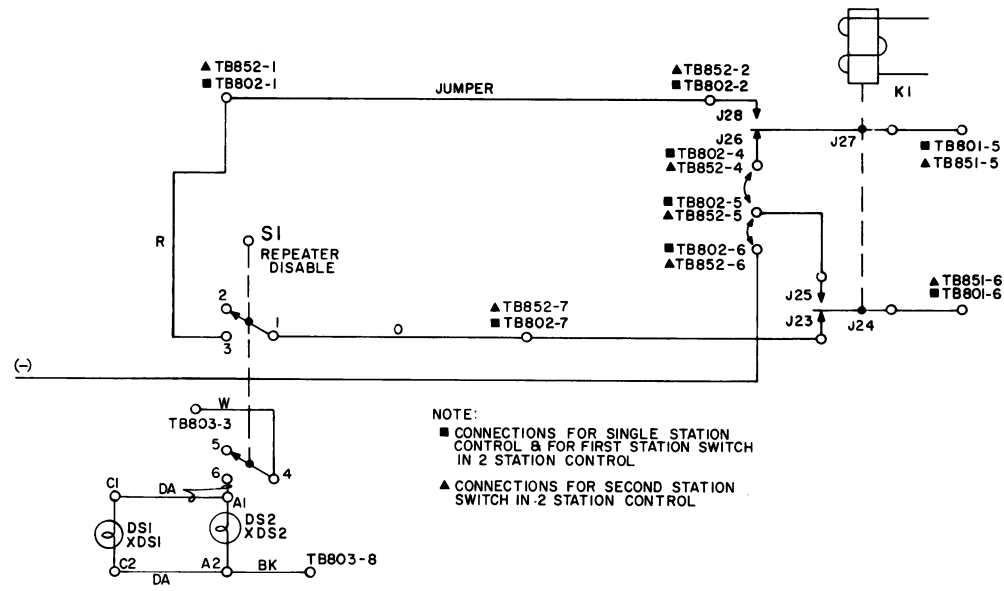

(19B205779, Rev. 0)

PARTS LIST


REPEATER DISABLE (OPTION 5126)

SYMBOL	G-E PART NO.	DESCRIPTION
S1		SWITCH ASSEMBLY 19C311259-G2
DS1 and DS2	19C307037-P26	Lamp, incandescent: 28 v; sim to GE 387.
XDS1 and XDS2	19C307029-P11	Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
2	19C307029-P4	Pushbutton-Lens.
4	19C307029-P16	Actuator-Holder. (Includes XDS1 and XDS2).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

SUPERVISORY CONTROL  
OPTION 5131

SCHEMATIC DIAGRAM

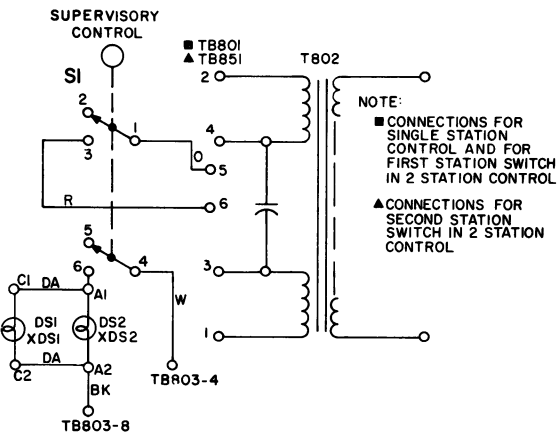


(19A122684, Rev. 0)

PARTS LIST

SUPERVISORY CONTROL (OPTION 5130)


SYMBOL	G-E PART NO.	DESCRIPTION
S1		SWITCH ASSEMBLY 19C311259-G2
DS1 and DS2	19C307037-P26	Lamp, incandescent: 28 v; sim to GE 387.
XDS1 and XDS2	19C307029-P11	Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
2	19C307029-P4	Pushbutton-Lens.
4	19C307029-P16	Actuator-Holder. (Includes XDS1 and XDS2).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

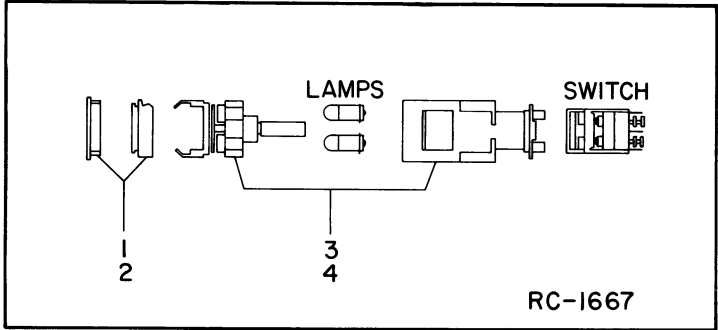

INTERCOM  
OPTION 5161

SCHEMATIC DIAGRAM

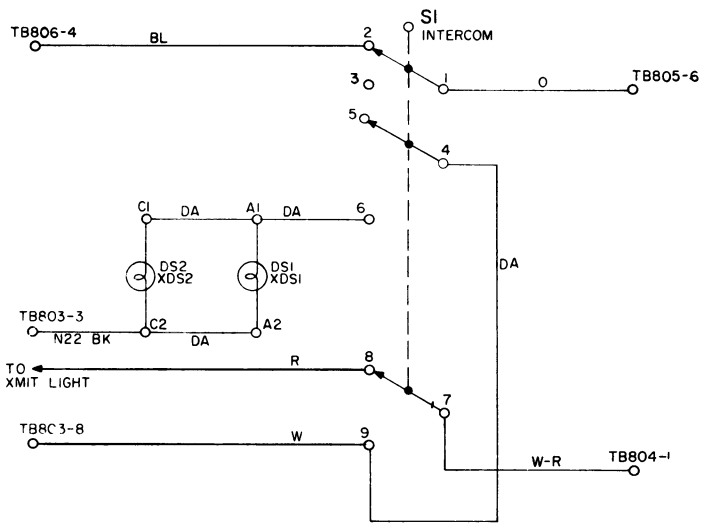

(19B205786, Rev. 3)

PARTS LIST

INTERCOM (OPTION 5161)

SYMBOL	G-E PART NO.	DESCRIPTION
S1		SWITCH ASSEMBLY 19C311259-G1
DS1 thru DS4	19C307037-P26	Lamp, incandescent: 28 v; sim to GE 387.
XDS1 thru XDS4	19C307029-P11	Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
1	19C307029-P15	Pushbutton-Lens.
3	19C307029-P17	Actuator-Holder. (Includes XDS1 thru XDS4).


\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

SERVICE SHEET

REPEATER DISABLE;  
SUPERVISORY CONTROL  
AND INTERCOM

**VU METER  
OPTION 5159**

### SCHEMATIC DIAGRAM

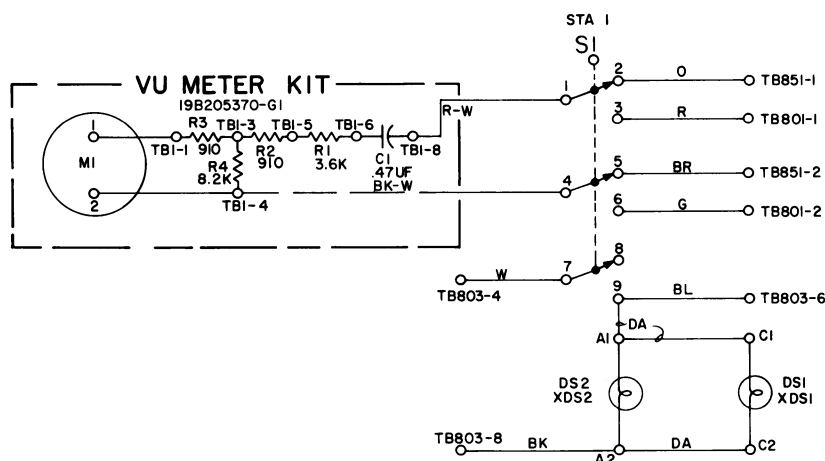

(19B205840, Rev. 0)

## PARTS LIST

VU METER (OPTION 5159)

SYMBOL	G-E PART NO.	DESCRIPTION
		<p>MODIFICATION KIT 19A122687-G17</p> <p>----- CAPACITORS -----</p>
C1	19A115028-P59	Polyester: 0.47 $\mu$ f $\pm$ 20%, 400 VDCW.
		----- METERS -----
M1	19A115713-P1	Audio level, WU: -20 to +3 scale.
		----- RESISTORS -----
R1	3R77-P362J	Composition: 3600 ohms $\pm$ 5%, 1/2 w.
R2 and R3	3R77-P911J	Composition: 910 ohms $\pm$ 5%, 1/2 w.
R4	3R77-P822J	Composition: 8200 ohms $\pm$ 5%, 1/2 w.
		----- TERMINAL BOARDS -----
TB1	7775500-P24	Phen: 8 terminals.
		<p>SWITCH ASSEMBLY (STATION 1 SELECT) 19C311259-G10</p> <p>----- INDICATING DEVICES -----</p>
DS1 and DS2	19C307037-P26	Lamp, incandescent: 28 v; sim to GE 387.
		----- SWITCHES -----
	19C307029-P11	Push: lighted, 2 circuits, SPDT each, alternate action, 5 amps at 250 VAC; sim to Micro Switch 2D26.
		----- SOCKETS -----
XDS1 and XDS2		Part of Actuator and Holder (Refer to RC-1667).
		<p>MECHANICAL PARTS (SEE RC-1667)</p>
2	19C307029-P4	Pushbutton-Lens.
4	19C307029-P16	Actuator-Holder. (Includes XDS1 and XDS2).


\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

## PARTS LIST

**PHONE ALERT (OPTION 5155)**


SYMBOL	G-E PART NO.	DESCRIPTION
		MODIFICATION KIT 19A122687-G1
		----- CAPACITORS -----
C1 thru C4	19A115028-P109	Polyester: 0.022 $\mu$ f $\pm$ 20%, 200 VDCW.
C5	7489162-P35	Silver mica: 220 pf $\pm$ 5%, 500 VDCW; sim to Electro Motive Type DM-15.
		----- DIODES AND RECTIFIERS -----
CR1 thru CR3	19A115250-P1	Silicon.
		----- JACKS AND RECEPTACLES -----
J1 and J2	4033513-P2	Contact, electrical: sim to Bead Chain L93-2.
		----- TRANSISTORS -----
Q1 and Q2	19A115123-P1	Silicon, NPN; sim to Type 2N2712.
		----- RESISTORS -----
R1	3R77-P152K	Composition: 1500 ohms $\pm$ 10%, 1/2 w.
R2 and R3	3R77-P303J	Composition: 30,000 ohms $\pm$ 5%, 1/2 w.
R4	3R77-P152K	Composition: 1500 ohms $\pm$ 10%, 1/2 w.
R5 and R6	3R77-P103K	Composition: 10,000 ohms $\pm$ 10%, 1/2 w.
R7	3R77-P434K	Composition: 0.43 megohms $\pm$ 10%, 1/2 w.
R8	19B209358-P110	Variable, carbon film: approx 500 to 250,000 ohms $\pm$ 20%, 0.25 w; sim to CTS Type X-201.
		----- CABLES -----
W1	19A122228-G1	Cable assembly. Approx 15 inches long. Includes:
	4029840-P2	Electrical contact.
S1		SWITCH ASSEMBLY 19C311259-G3
		----- INDICATING DEVICES -----
DS1 and DS2	19C307037-P26	Lamp, incandescent: 28 v; sim to GE 387.
		----- SWITCHES -----
	19C307029-P6	Push: lighted, 2 circuits, SPDT each, momentary action, 5 amps at 250 VAC; sim to Micro Switch 2D2.
		----- SOCKETS -----
XDS1 and XDS2		Part of Actuator-Holder. (Refer to RC-1667).
		MECHANICAL PARTS (SEE RC-1667)
2	19C307029-P4	Pushbutton-Lens.
4	19C307029-P16	Actuator-Holder. (Includes XDS1 and XDS2).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

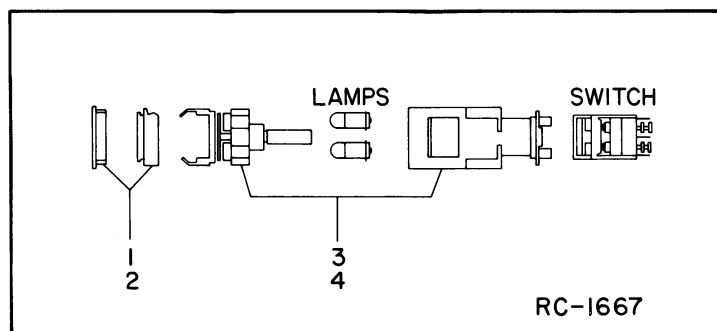


**PHONE**  
**5155**

### SCHEMATIC DIAGRAM

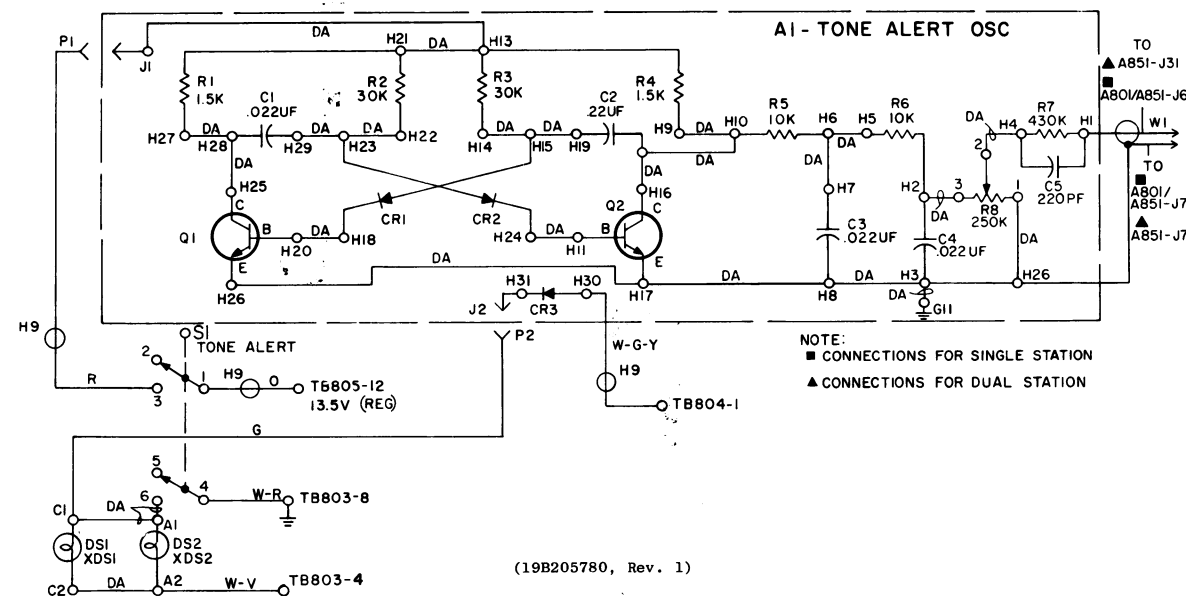

## OUTLINE DIAGRAM

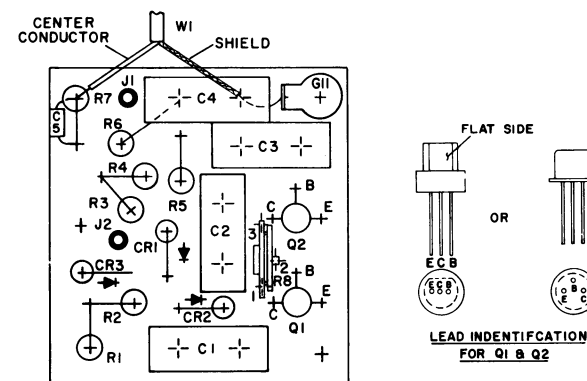

(19B205610, Rev. 1)

## SERVICE SHEET

## TONE ALERT AND VU METER

# Issue 1

19





## ORDERING SERVICE PARTS

Each component appearing on the schematic diagram is identified by a symbol number, to simplify locating it in the parts list. Each component is listed by symbol number, followed by its description and GE Part Number.

Service parts may be obtained from Authorized GE Communication Equipment Service Stations or through any GE Radio Communication Equipment Sales Office. When ordering a part, be sure to give:

1. GE Part Number for component
2. Description of part
3. Model number of equipment
4. Revision letter stamped on unit

---

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance.

Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, contact the nearest Radio Communication Equipment Sales Office of the General Electric Company.

---

# **MAINTENANCE MANUAL**

LBI-3896

DF-4083



MOBILE RADIO DEPARTMENT LYNCHBURG, VIRGINIA 24502 CABLE GEOMPROD

(In Canada, Canadian General Electric Company, Ltd., 100 Wingold Ave., Toronto 19, Ontario)

PRINTED IN U.S.A.