


 **MOBILE RADIO**


MASTR

Progress Line

MAINTENANCE MANUAL

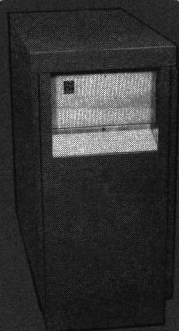

DESK-MATE STATION

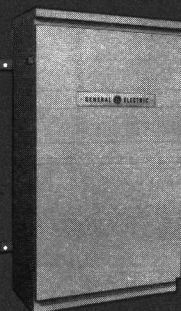

POLE-MOUNT STATION

**952-960 MHz
TWO-WAY FM
STATION COMBINATIONS
REPEATER CONTROL
LBI-4090B**

DF-9023



FLOOR-MOUNT STATION

GENERAL  ELECTRIC

TABLE OF CONTENTS

EQUIPMENT INDEX	iii
SPECIFICATIONS	iv
COMBINATION NOMENCLATURE	1
DESCRIPTION	1
Converter Panel & Signal Generator	1
Transmitter/Driver	2
Receiver	2
Power Supply	2
Control Panel	2
Microphone	2
Speakers	2
Heater	2
METERING CIRCUITS	3
Meter Panel	3
Meter Switching Panel Assembly	3
Circuit Analysis	3
INITIAL ADJUSTMENT	4
Test Equipment Required	4
Transmitter/Driver	4
Transmitter Converter	4
Receiver	4
Receiver Converter	4
Power Supply	4
Control Panel	4
MAINTENANCE	4
Preventive Maintenance	5
Test and Troubleshooting Procedures	5
OUTLINE DIAGRAM (Meter Switching Panel)	6
SCHEMATIC DIAGRAM (Meter Switching Panel)	7
INTERCONNECTION DIAGRAMS	
Desk-Mate & Pole-Mount Stations	9
Floor-Mount Station	11
PARTS LIST	
Meter Switching Panel	8
Desk-Mate Cabinet 7354211G4	10
Pole-Mount Cabinet 7132483G6	10
Floor-Mount Cabinet 19C303465G3	12
Microphone Model 4EM25A10	13
Speaker Assembly 19B219618G1	14
Speaker Model 4EZ16A20	10
Heater Model 4KZ3A1	13

WARNING

No one should be permitted to handle any portion of the equipment that is supplied with high voltage; or to connect any external apparatus to the units while the units are supplied with power. KEEP AWAY FROM LIVE CIRCUITS.

EQUIPMENT INDEX

EQUIPMENT	TYPE OR MODEL NUMBER
Converter Panel & Signal Generator	19D413291G1 19D413397G1
Transmitter	4ET59C42, C43
Receiver	4ER42H11, H17
Desk-Mate (DM) Cabinet Pole-Mount (PM) Cabinet	7354211G4 7132483G6
Floor-Mount (VM) Cabinet	19C303465G4
Station Power Supply	4EP38A10
Repeater Control Panel	4KC19A10
Meter Switching Circuit (VM Station)	19A121460G1
Meter Panel (VM Station)	19C303519G1
Microphone	4EM25A10
Microphone Mounting Kit	7141414G2
Speaker Assembly	19B219618G1
117-VAC Power Cable (DM & VM Stations)	7491206P1
Two-Prong Plug Adapter (DM & VM Stations)	7160486P1
Alignment Tools (hex slug type) (slotted screw type)	4038831P2 4033530G2
Keys (DM & VM Stations)	LL201
Handle (PM Station)	7145676P2

OPTIONAL EQUIPMENT

EQUIPMENT	OPTION NO.	TYPE OR MODEL NUMBER
Transmitter Metering Cover	7648	19C303676G3
Receiver Metering Cover	7649	19C303676G2
220/110 volt Stepdown Transformer Kit	7608	19A121971G1
Line Voltmeter (VM Stations)	7901	19A120042G1
Test Meter Panel (DM & PM Stations)	7609	19A121953G1
Meter Switching Panel (DM & PM Stations)	7609	19A121460G1
Heater Kit (PM Stations)	3551	4KZ3A1
Duplexer Includes: Transmitter Cable Receiver Cable	7751	19B216648P1 19B216679G2 19B216679G1

SPECIFICATIONS *

GENERAL

FCC FILING NUMBER	ES-34-A
DIMENSIONS (H x W x D)	
Desk-Mate Station	30-3/8" x 14" x 25-1/2"
Pole-Mount Station	42" x 23" x 12-1/2"
Floor-Mount Station	69" x 22" x 23"
WEIGHT	
Desk-Mate	Approximately 150 pounds
Pole-Mount	Approximately 200 pounds
Floor-Mount	Approximately 300 pounds
DUTY CYCLE (Transmit & Receive)	Continuous
INPUT VOLTAGE	117 VAC, $\pm 10\%$, 50/60 Hz
INPUT POWER	Transmit: 1.66 amps max, 195 watts Receive: 0.8 amps max, 95 watts
OPERABLE TEMPERATURE RANGE	-30°C (-22°F) to +60°C (+140°F)
FREQUENCY RANGE	952—960 Megahertz

TRANSMITTER (Includes Converter & Driver Transmitter)		RECEIVER (Includes Converter & 450 MHz Rec.)	
RF Power Output:**	10 watts	RF Input Impedance:	50 ohms
RF Output Impedance:	50 ohms	Channel Spacing:	100 kHz
Spurious and Harmonic Emission:	-60 dB	Sensitivity:**	
Modulation Deviation:	0 to ± 15 kHz (36F3)	EIA 12-dB SINAD	1.0 μ V
Frequency Stability:	$\pm 0.0002\%$ from -30°C. to +60°C., +25°C. Reference	20-dB Quieting	1.25 μ V
FM Noise:	-50 dB	Critical Squelch	0.60 μ V
Audio Response:	Within +1 and -3 dB of 6-dB/octave pre- emphasis, 300 to 3000 Hz per EIA	Channel Guard Squelch	10-dB SINAD
Audio Distortion:	Less than 3%	Selectivity:	
		EIA 2-Signal (100 kHz channels)	-90 dB
		Frequency Stability:	$\pm 0.0002\%$ from (1st Oscillator) -30°C. to +60°C. +25°C. Reference
		Modulation Acceptance:	± 19 kHz
		Spurious and Image Rejection:	-60 dB
		Audio Response:	Within +1 and -8 dB of 6-dB/octave de- emphasis, 300 to 3000 Hz
		Audio Output:	5 watts at 3.5 ohms +18 dBm at 600 ohms at less than 5% distortion

* These specifications are intended primarily for use by the serviceman. Refer to the appropriate Specification Sheet for complete specifications.

** Rating is based on using a separate antenna for the receiver and transmitter. When using a single antenna with antenna relay, power output and receiver sensitivity will be 1.5 dB lower.

COMBINATION NOMENCLATURE

1st Digit	2nd Digit	3rd Digit	4th Digit	5th Digit	6th Digit	7th Digit	8th & 9th Digits
Mechanical Package	Operating Voltage	RF Power Output Range	Channel Spacing	Control	Number of Freq.	Options	Frequency Range
D Desk-Mate Station	M 117 VAC	4 8—16 Watts	8 50 kHz (Rating of 450 MHz Receiver)	Y Repeater Control Station	A 1-Freq. T 1-Freq. R	S Standard	99 952—960 MHz
P Pole-Mount Station						U Channel Guard	
V Floor-Mount Station							

DESCRIPTION

The General Electric MASTR Progress Line Repeater Control Stations operate in the 952—960 megahertz band. This band is normally utilized for radio link operation in radio controlled base station systems.

Three Cabinet styles (Desk-Mate, Pole-Mount & Floor-Mount) are available to meet different system requirements. Individual characteristics of the cabinets are listed in the following paragraphs.

- **Desk-Mate** - The Desk-Mate station can be conveniently located adjacent to a desk to provide additional working area, or in some other suitable area as required. Both side panels on the station can be easily removed to gain access to the unit modules for servicing.
- **Pole-Mount** - The Pole-Mount station is ruggedly built and can be mounted outdoors in remote locations regardless of weather conditions. An optional heater kit is available for installations where the climate is such that the cabinet temperature drops below 5°F. The unit modules are mounted to a "swing out" rack to facilitate servicing either side of the equipment.
- **Floor-Mount** - The Floor-Mount station can be placed in the control building adjacent to the antenna installation or it may be located in another area as required. Front and back doors on the station cabinet can be opened to gain access to the unit modules. The rear door is interlocked to protect personnel from contact with voltages. When the rear door is opened, the interlock switch opens the power supply output to the transmitter. A 117 VAC receptacle is mounted inside the rear of the cabinet for plug-in of service equipment.

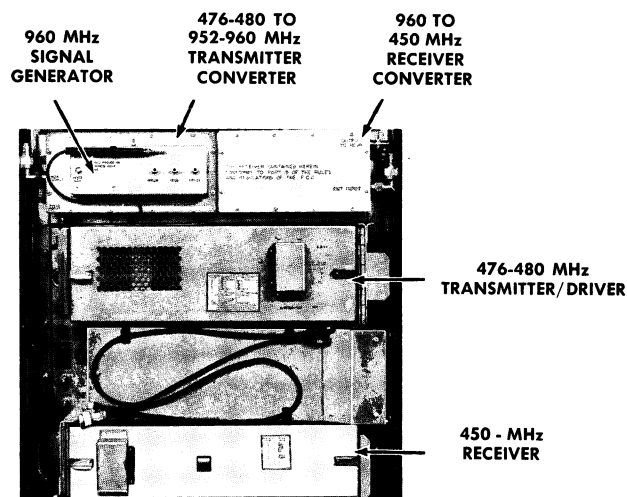


Figure 1 - Typical Station Equipment Arrangement

CONVERTER PANEL & SIGNAL GENERATOR

The Converter Panel with built-in Signal Generator provides both transmit and receive functions in the 952—960 megahertz band. The panel includes:

- 960 to 450 megahertz receiver converter stage.
- 476—480 to 952—960 megahertz transmitter doubler stage.
- 960 megahertz crystal controlled signal generator.

Antenna Circuits

Antenna connections are made to jacks on the converter panel. The transmitter antenna connects to J2152 on the left side of the panel and the receiver antenna connects to J2351 on the right side of the panel.

TRANSMITTER/DRIVER

The Transmitter/Driver is a single frequency transmitter which provides a 476—480 megahertz signal output to the doubler stage of the converter panel. The transmitter/driver is available with or without Channel Guard capability.

RECEIVER (450—470 MHz)

A 450 megahertz output from the receiver converter stage of the converter panel connects to a single frequency, 450—470 megahertz Receiver (Model 4ER42H11 & H17). This receiver acts as an IF amplifier and is available with or without Channel Guard capability. The receiver is completely contained in an aluminum casting, which provides excellent shielding.

POWER SUPPLY

Station Power Supply Model 4EP38A10 provides operating voltages for both the transmitter and receiver. In addition to plate, screen and bias voltages for the transmitter, the power supply provides:

- Regulated -20 volts for the transistorized transmitter exciter-board
- Regulated +10 volts for the receiver, receiver converter and for transmitter Channel Guard
- Regulated +13.4 volts for transmitter filaments, receiver audio, relays and pilot lights

REPEATER CONTROL PANEL

The Control Panel contains the AC input circuit, audio coupler, carrier operated switch, 5-second delay and 3-minute limit timers, and the Channel Guard filter (if used). The panel is mounted on the chassis mounting frame below the Transmitter-Receiver Power Supply.

AC Input

The 117 VAC input is connected directly to TB706-1 and -2. All power to the station is controlled by switch S701 on the control panel. When S701 is turned ON, the green Power-On light on the meter panel will become illuminated.

An optional 110/220 VAC Stepdown Transformer Kit is available for use when the input line voltage is 220 VAC.

WARNING

117-volts AC is always present at TB706-1 and -2. Always use care when servicing the Control Panel, even when S701 is in the OFF position.

MICROPHONE (4EM25A10)

A microphone is provided for use during service and maintenance work by the serviceman. The microphone connects to jack J902 located on the front side of the power supply.

SPEAKERSSpeaker Assembly

Speaker Assembly 19B219618G1 is used in later station combinations, and provides an audio output of 1.5 Watts. The speaker assembly mounts on the chassis of Transmitter-Receiver power supply Model 4EP38A12.

NOTE

When a speaker is not used, a 3.5-ohm, 10-Watt resistor must be connected from TB501-11 to TB502-5 as a substitute for the speaker load impedance.

Speaker 4EZ16A20

Speaker Model 4EZ16A20 is used in earlier station combinations, and provides an audio output of 5 Watts, an attenuator is located on the speaker case for adjustment of audio output level by the serviceman.

The 4EZ1620 is available as an external speaker option.

HEATER MODEL 4KZ3A1 (Optional)

The Heater is an option used with Pole Mount Stations where the climate is such that an auxiliary cabinet heater is required. The heater consists of a 250-watt heater strip and a temperature-operated switch. When the temperature of the cabinet drops below 5°F, the switch closes, thereby applying power to the heater strip. When the temperature rises above 5°F, the heater will be turned off by the opening of the switch. The heater strip is usually mounted on the bottom of the cabinet on the inside in a convenient location. Splice one lead from the temperature switch to a lead from the heater strip. Connect other lead from the temperature switch to Power Supply 4EP38A10, TB502-14 and other lead from heater strip to TB502-15. For complete Installation Instructions of Heater Kit refer to EBI-4353.

METERING CIRCUITS

(Floor-Mount Station)

METER PANEL (19C303519G2)

The Meter Panel is located above the front door on the Floor-Mount station cabinet. The panel contains the following meters for making voltage test readings in the transmitter and receiver:

- Meter M901--measures test voltages in transmitter circuits.
- Meter M902--measures voltages in receiver circuits.
- Line Voltmeter-19A120042G5 (option)--continuously monitors line voltage. The meter is a 0-150 VAC voltmeter connected across the 117 VAC line.

METER SWITCHING PANEL ASSEMBLY (19A121460G1)

The Meter Switching Panel Assembly is mounted on the front of the accessory panel and contains the switches and circuitry for switching from stage to stage in the receiver and transmitter. The voltage readings for each stage is indicated on the meters located in the Meter Panel. The Meter Switching Panel Assembly includes:

- Plug P1001--plugs into transmitter centralized metering jack J102. (or J1001 if optional transmitter top cover is used).
- Plug P1002--plugs into receiver centralized metering jack J442. (or J1002 if optional receiver top cover is used).
- Test Probe P1003--for external metering. (3-volt full scale meter range).

- Switch S1001--to switch transmitter voltage test points into the test meter circuit.
- Switch S1002--to switch receiver voltage test points into the test meter circuit.
- Switch S1004--test probe polarity reversing switch.

Refer to the transmitter and/or receiver maintenance manual for the proper voltage readings for each stage tested.

Transmitter voltages readings will be indicated on transmitter "tune up" meter (M901) and receiver readings will be indicated on the receiver "tune up" meter (M902). Both meters are located on the Meter Panel.

The meter voltage check points are shown in Table 1.

CIRCUIT ANALYSIS

The voltage test point in the receiver and transmitter are connected through the connecting cables to lug terminals on the receiver and transmitter voltage wafer switches. With the receiver switch in the "A" meter switch position for example, the discriminator output voltage is connected by the switch to TB901-11 and 12 through wire numbers 22 and 23 to receiver meter (M902) in the Meter Panel. If the transmitter switch is in the "F" position, for example, the PA grid voltage is connected by the switch to TB901-9 and -10, through wire numbers 20 and 22 to meter (M901) in the Meter Panel.

Switch S1003 is used to connect the 3-volt multiplying resistor into the receiver meter circuit. Test probe P1003 is used for external metering. When using the test probe, turn the transmitter switch S1001 to the "External" position. R1002 is a

TABLE 1

Tx (S1001) & Rx (S1002) Switch Position No.	Transmitter Function	Meter Range Full Scale	Receiver Function	Meter Range Full Scale
A	MULT 1	1 V	DISC	1 V*
B	MULT 2	1 V	2nd IF	1 V*
C	AMPL 3	1 V	1st LIM	1 V*
D	MULT 3	1 V	MULT 1	1 V*
E	AMPL/MULT 4	1 V	MULT 2	1 V*
F	PA GRID	1 V	-----	
G	PA PLATE CURRENT	1 V	AUDIO PA	1 V*
H	POWER OUTPUT	1 V	BLANKER	1 V*
I	20 VOLTS	30 V	-----	
J	PA PLATE VOLTAGE	1,000 V	10-VOLTS	15 V
K	EXTERNAL PROBE	3 V	-----	
L/VM	RECEIVER 2nd IF	1 V	-----	

*can be increased to 3-V by switch S1003.

multiplier resistor in series with the test probe to make the meter 3-volts full scale when using the external probe.

Resistor R1007 is a multiplier resistor in series with the receiver meter when switch S1003 is in the 3-volt position. Silicon rectifiers CR1001, CR1002, resistors R1003 and R1004 in the transmitter meter circuit and CR1003, CR1004, R1005 and R1006 in the receiver meter circuit protect the meters from overload and voltage spikes.

NOTE

For continuous monitoring of test voltages, optional transmitter and receiver top covers, (19C303676-G3 and -G2, respectively) are available. The covers contain external sockets to attach the transmitter and receiver cables from the Meter Switching Panel Assembly.

INITIAL ADJUSTMENT

After the Station has been installed as described in the Installation Manual, the converter panel, transmitter, receiver, power supply, and control panel must be adjusted by an electronics technician who holds a 1st or 2nd Class FCC Radiotelephone or Radiotelegraph license before the station can be placed in operation.

TEST EQUIPMENT REQUIRED

The following test equipment is required for the adjustment of both transmitter and receiver:

1. A tuning tool and a screwdriver.
2. A signal source operating at the system frequency (preferably the transmitter which will normally be monitored by the receiver).
3. The Floor-Mount Station contains built-in metering circuits. For Desk-Mate or Pole-Mount Stations, one of the following is required:

A GE Portable Test Set Model 4EX3A10 or 4EX8K10 which is especially designed for testing the MASTR Station transmitter and receiver -- or a 20,000 ohms-per-volt multimeter--or an optional built-in Station Test Metering Panel.
4. Wattmeter

TRANSMITTER/DRIVER ADJUSTMENT

The initial adjustment for the transmitter/driver includes checking the frequency and modulation. For the initial

adjustment procedure, refer to the MAINTENANCE MANUAL for transmitter Models 4ET59C42 & 43.

TRANSMITTER CONVERTER

The initial adjustment for the transmitter converter includes final tuning, loading, and checking the power output. (While inserting a 25-watt input from the transmitter/driver, check for at least 10 watts at the converter output). For the initial adjustment procedure, refer to the MAINTENANCE MANUAL for the converter panel.

RECEIVER (Models 4ER42H11 & 17)

The initial adjustment for the 450—470 MHz receiver includes adjusting the receiver operating frequency to the output frequency of the receiver converter. To obtain the converter output frequency, subtract the oscillator mixing frequency (marked on the ICOM in the converter) from the system operating frequency. For the initial adjustment procedure, refer to the MAINTENANCE MANUAL for the receiver.

RECEIVER CONVERTER

The initial adjustment from the receiver converter includes matching to the antenna and adjusting frequency to the system operating frequency. For the initial adjustment procedure, refer to the MAINTENANCE MANUAL for the converter panel.

POWER SUPPLY ADJUSTMENT

The initial adjustment for the power supply includes turning switch S501 ON and adjusting VOLUME (R511) and SQUELCH (R512) as follows:

Set the SQUELCH to the point at which the noise disappears; then set VOLUME to optimum listening level.

CONTROL PANEL ADJUSTMENT

The initial adjustment for the repeater control panel includes turning switch S701 ON and adjusting AUDIO COUPLER LEVEL (R2) on Audio Coupler Circuit Board.

For the Initial Adjustment Procedure, refer to the REPEATER CONTROL PANEL MAINTENANCE MANUAL.

MAINTENANCE

PREVENTIVE MAINTENANCE

To insure high operating efficiency and to prevent mechanical and electrical failures

from interrupting system operations, routine checks should be made of all mechanical and electrical parts. This preventive maintenance should include the maintenance checks listed in Table 2.

In addition, specific troubleshooting procedures are available to assist the serviceman in troubleshooting the transmitter, receiver and power supply.

TEST AND TROUBLESHOOTING PROCEDURES

The individual Maintenance Manuals for the transmitter and receiver describe standard test procedures which the serviceman can use to compare the actual performance of the transmitter or receiver against the specifications of the unit when shipped from the factory.

For best results in servicing the station, the TEST PROCEDURES should be used in conjunction with the TROUBLESHOOTING PROCEDURES. Both sheets are listed in the Table of Contents of the applicable Maintenance Manual.


TABLE 2
PREVENTIVE MAINTENANCE PROGRAM

CHECK THE FOLLOWING ONCE A YEAR:	
1. Transmitter frequency and deviation (FCC requires this check-up ONCE a year).	<input type="checkbox"/>
2. Measure and record the forward and reflected power to the antenna system.	<input type="checkbox"/>
3. Check input voltage at TB706-1 and -2 on control panel. Reading should be within 10% of 117 VAC. (Also check during routine service calls).	<input type="checkbox"/>
4. Record transmitter meter readings. Compare with readings taken during initial tune-up. Retune, if necessary.	<input type="checkbox"/>
5. Record receiver meter readings. Compare with readings taken during initial tune-up. Retune, if necessary.	<input type="checkbox"/>
6. Check for positive indication of pressure on transmission line pressure gauge (if pressurized line is used).	<input type="checkbox"/>
7. Clean dust from fan blades and lubricate bearings.	<input type="checkbox"/>

MAKE THE FOLLOWING MAINTENANCE CHECKS DURING ROUTINE SERVICE CALLS:

1. Check antenna lines and mast for mechanical stability.	<input type="checkbox"/>
2. Visually check:	
External cables	<input type="checkbox"/>
Internal cables	<input type="checkbox"/>
plugs	<input type="checkbox"/>
sockets	<input type="checkbox"/>
terminal boards	<input type="checkbox"/>
3. Check for tightness of nuts, bolts, and screws to make sure nothing is working loose from its mounting.	<input type="checkbox"/>
4. Replace tubes as necessary. (It may be convenient to replace all station tubes during the yearly check-up).	<input type="checkbox"/>

(DF-9023)

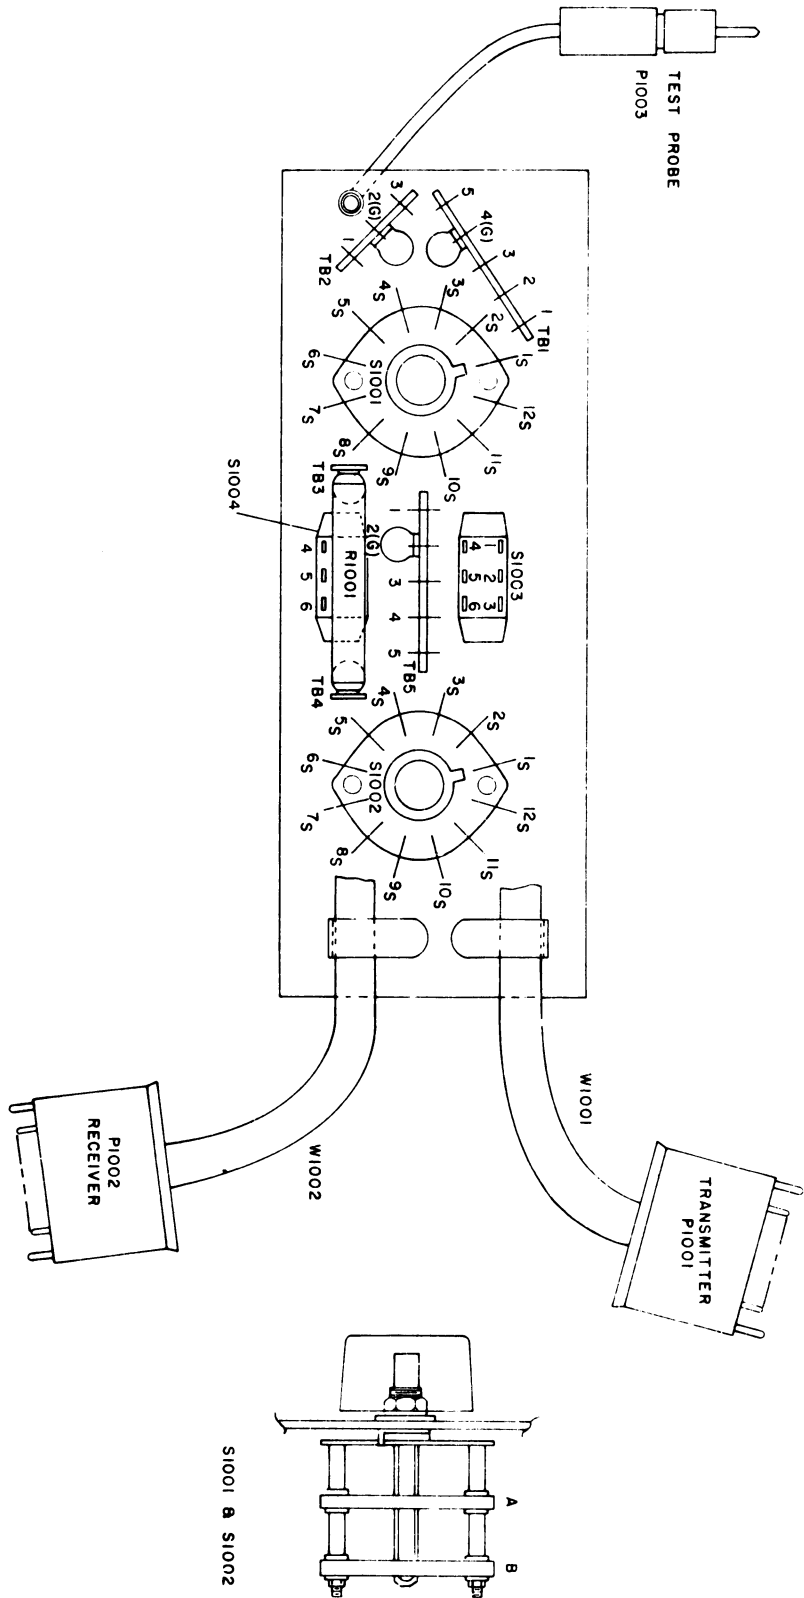


(19C303814, Rev. 1)

OUTLINE DIAGRAM

MASTR FLOOR-MOUNT STATION COMBINATION
METER SWITCHING PANEL

IN ORDER TO RETAIN RATED EQUIPMENT PERFORMANCE, REPLACEMENT OF ANY SERVICE PART SHOULD BE MADE ONLY WITH A COMPONENT HAVING THE SPECIFICATIONS SHOWN ON THE PARTS LIST FOR THAT PART.

ALL RESISTORS ARE 1/2 WATT UNLESS OTHERWISE SPECIFIED AND RESISTOR VALUES IN OHMS UNLESS FOLLOWED BY K=1000 OHMS OR MEG=1,000,000 OHMS. CAPACITOR VALUES IN PICO FARADS (EQUAL TO MICROMICROFARADS) UNLESS FOLLOWED BY UF=MICROFARADS. INDUCTANCE VALUES IN MILLIHENRYS UNLESS FOLLOWED BY MH= MILLIHENRYS OR H= HENRYS.

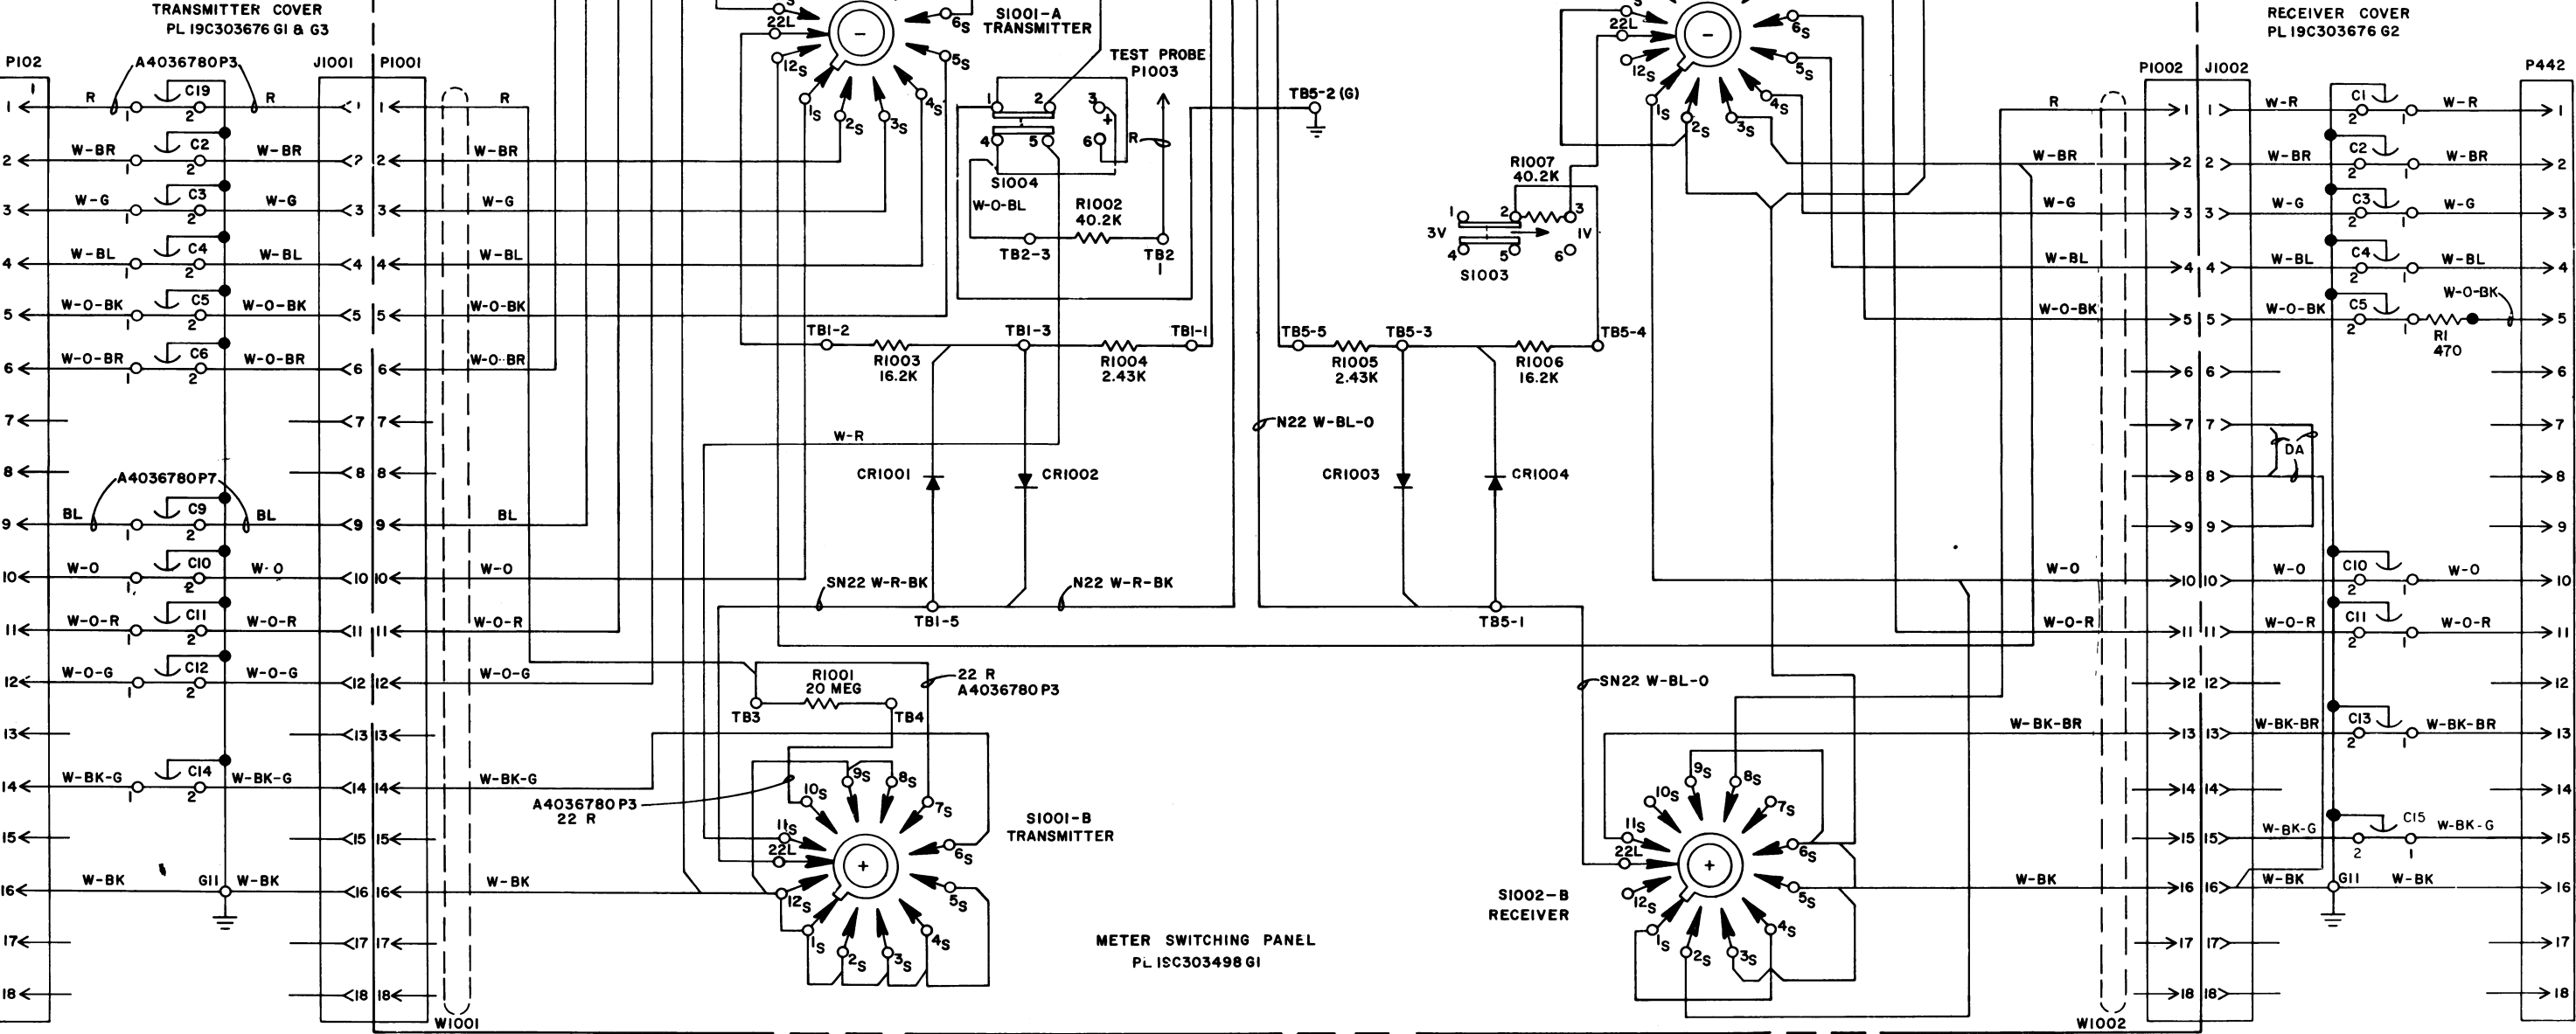

SEE APPLICABLE PRODUCTION CHANGE SHEETS IN INSTRUCTION BOOK SECTION DEALING WITH THIS UNIT, FOR DESCRIPTION OF CHANGES UNDER EACH REVISION LETTER.

THIS ELEM DIAG APPLIES TO
MODEL NO 19C303498G1 REV LETTER A
19C303676G2 B

- NOTES:
1. ALL WIRES ARE DA UNLESS OTHERWISE SHOWN IN METER SWITCHING PANEL.
 2. ALL WIRES ARE SF24 UNLESS OTHERWISE SHOWN IN RECEIVER & TRANSMITTER COVER.
 3. TERMINATE ALL WIRES NOT USED IN W1001 & W1002 BY CUTTING OFF FLUSH WITH CABLE JACKET.

(19D402334, Rev. 9)

SCHEMATIC DIAGRAM
MASTR FLOOR-MOUNT STATION COMBINATION
METER SWITCHING PANEL

(DF-9023)

PARTS LIST

LBI-3505C
METER SWITCHING PANEL ASSEMBLY
19A121460-G1

SYMBOL	G-E PART NO.	DESCRIPTION
		METER SWITCHING PANEL 19C303498-G1
		- - - - - DIODES AND RECTIFIERS - - - - -
CRI001 thru CRI004	5494922-P1	Silicon; sim to Type 1N456.
		- - - - - PLUGS - - - - -
P1001		(Part of W1001).
P1002		(Part of W1002).
P1003	4032797-P1	Probe, test; sim to Birnbach Type 415 (red).
		- - - - - RESISTORS - - - - -
R1001	5496955-P576	Deposited carbon: 20 megohms ±2%, 2 w; sim to Texas Instruments Type CD2R.
R1002	5495948-P359	Deposited carbon: 40,200 ohms ±1%, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1003	5495948-P321	Deposited carbon: 16,200 ohms ±1%, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1004 and R1005	5495948-P238	Deposited carbon: 2430 ohms ±1%, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1006	5495948-P321	Deposited carbon: 16,200 ohms ±1%, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1007	5495948-P359	Deposited carbon: 40,200 ohms ±1%, 1/2 w; sim to Texas Instruments Type CD1/2MR.
		- - - - - SWITCHES - - - - -
S1001 and S1002	19C307113-P2	Rotary: 2 sections, 2 poles, 12 positions, non-shorting contacts, 2 amps at 28 VDC or 1 amp at 110 VDC; sim to Oak 235585-K2.
S1003 and S1004	7145098-P1	Slide: DPDT, 3/4 amp at 125 VAC or 1/2 amp at 125 VDC; sim to Stackpole SS-150.
		- - - - - TERMINAL BOARDS - - - - -
TB1	7775500-P9	Phen: 5 terminals.
TB2	7775500-P7	Phen: 3 terminals.
TB3 and TB4	7775500-P46	Phen: 1 terminal.
TB5	7775500-P9	Phen: 5 terminals.
		- - - - - CABLES - - - - -
W1001	19C303568-P2	Metering: includes 18 pin plug (P1001) rated at 1000 VDC max, approx 38 inches long.
W1002	19C303568-P2	Metering: includes 18 pin plug (P1002) rated at 1000 VDC max, approx 38 inches long.
		- - - - - MISCELLANEOUS - - - - -
	19B204861-G1	Chassis. (Used in 19C303498-G1).
	7763541-P5	Cable, clamp. (Used with W1001 and W1002 in 19C303498-G1).
	7487773-P6	Knob: red; sim to Eastman Chemical 28739. (Used with S1001 and S1002 in 19C303498-G1).
	19B204590-G1	Box. (Used in 19A121460-G1).
	4029030-P11	Rubber channel seal: approx 2-1/2 inches long. (Used in 19A121460-G1).

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

PRODUCTION CHANGES


Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter", which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.

REV. A — To eliminate 3 db loss in receiver sensitivity with cover on. Added R1 to receiver metering cover.

REV. B — To allow audio metering with cover. Added C15.

SYMBOL	G-E PART NO	DESCRIPTION
		COVER ASSEMBLY 19C303676-G1 (TRANSMITTER STATION METERING) 19C303676-G2 (RECEIVER STATION METERING) 19C303676-G3 (TRANSMITTER STATION METERING, VENTILATED)
		- - - - - CAPACITORS - - - - -
C1 thru C6	5493392-P7	Ceramic, feed-thru: .001 µf +100% -0%, 500 VDCW; sim to Allen-Bradley Type FA5C.
C9	19B209282-P1	Ceramic, feed-thru: 680 pf ±20%, 1000 VDCW; sim to Sprague Type 544C.
C10 thru C14	5493392-P7	Ceramic, feed-thru: .001 µf +100% -0% 500 VDCW; sim to Allen-Bradley Type FA5C.
C15*	5493392-P7	Ceramic, feed-thru: .001 µf +100% -0%, 500 VDCW; sim to Allen-Bradley Type FA5C. Added by Rev B.
C19	19B209282-P1	Ceramic, feed-thru: 680 pf ±20%, 1000 VDCW; sim to Sprague Type 544C.
		- - - - - JACKS AND RECEPTACLES - - - - -
J1001 and J1002	19B205689-G2	Connector: 18 contacts.
		- - - - - PLUGS - - - - -
P102	19B204727-P1	Connector: 18 contacts rated at 1000 VDC max.
P442	19B204727-P1	Connector: 18 contacts rated at 1000 VDC max.
		- - - - - RESISTORS - - - - -
R1*	3R77-P471K	Composition: 470 ohms ±10%, 1/2 w. Added by Rev A.

(DF-9023)

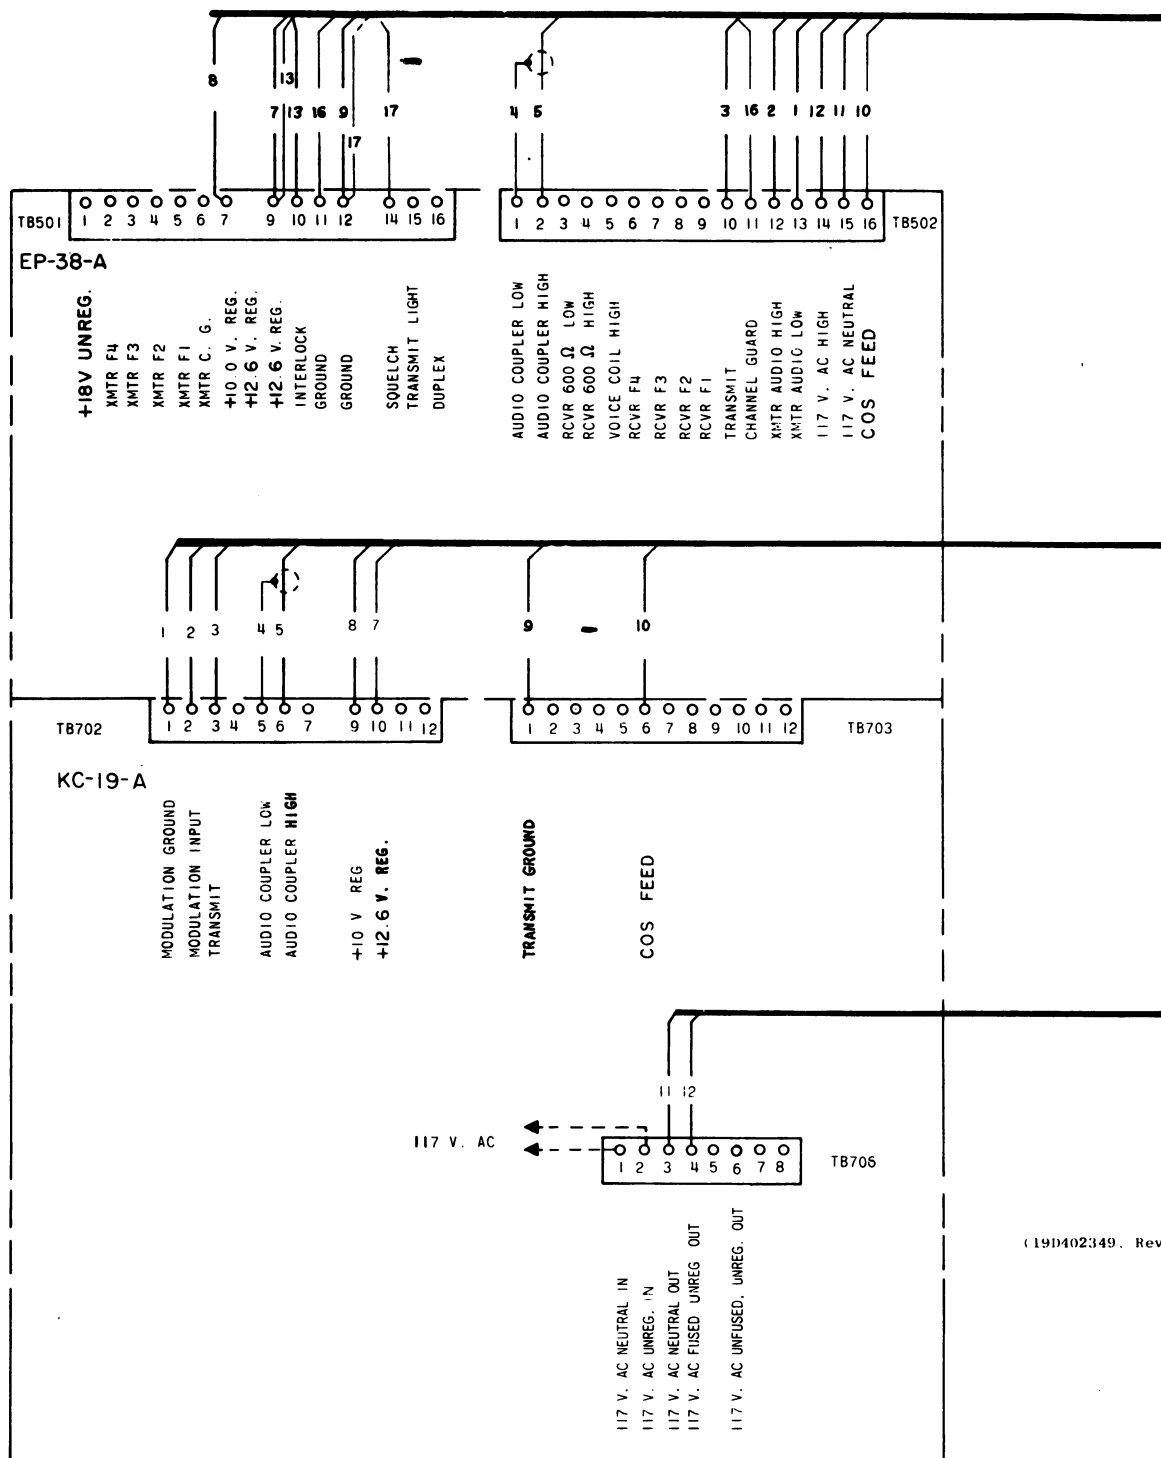

(19D402349, Rev. 9)

NOTES:

1. TB706-1 MUST BE CONNECTED TO GROUND OR NEUTRAL OF THE BUILDING WIRING SYSTEM.
2. MOVE N22-BL WIRE ON 4EP38A10-11 OR N22W-R WIRE ON 4EP38A12 INSIDE 4EP38 FROM TB501-16 TO TB501-7.
3. TO DISABLE RECEIVER CHANNEL GUARD. REMOVE WIRE FROM TB502 11 ON 4EP38A.

INTERCONNECTION DIAGRAM**MASTR POLE-MOUNT STATION COMBINATION
REPEATER CONTROL PANEL**

PARTS LIST

LBI-3562

POLE MOUNT STATION CABINET
PL-7132483-G6

SYMBOL	G-E PART NO.	DESCRIPTION
	7353495-P5, 18, 19, 20	Door Assembly: weather seal: rubber, Manhattan Div. of Raybestos Manhattan Inc., Passaic, N.J. $\frac{1}{2}$ " OD x $\frac{1}{4}$ " ID x 9'7". A12A2A
	7769652-G1	Hinge Assembly: (for swing out mounting bracket) Hinge, door: Stanley, cat #195 with leaves assembled reversed, no swage, without mounting holes. (give all above information when re-ordering)
	7769631-G1	Pull-Latch: Corbin Cab Lock Co. #015642SD. Mounting bracket: (mounts on swing away hinge assembly.)

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

PARTS LISTHEATER
MODEL 4KZ3A1


SYMBOL	G-E PART NO.	DESCRIPTION
HR901		Heater Strip: sim to General Electric 51-344.
S901		Thermo-switch: adjusted to +5°F, sim to Fenwall Inc. A-7300.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

PARTS LISTLBI-3561
DESK MATE STATION CABINET
PL-7354211-G4

SYMBOL	G-E PART NO.	DESCRIPTION
	7354211-P4	Cabinet Assembly
	7354211-P8	Door (fits either side)
	4035449-P5	Bumper, door: rubber, sim to Atlantic India Rubber Co. 1165.
	4033979-P1	Lock and Key: sim to Yale & Towne 6678DX1. Key: Yale & Towne LL201.
	N529P38C	Plug (for cable knockouts at bottom of assembly)
	7354211-P7	Mounting rack (2 drilled angles)

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

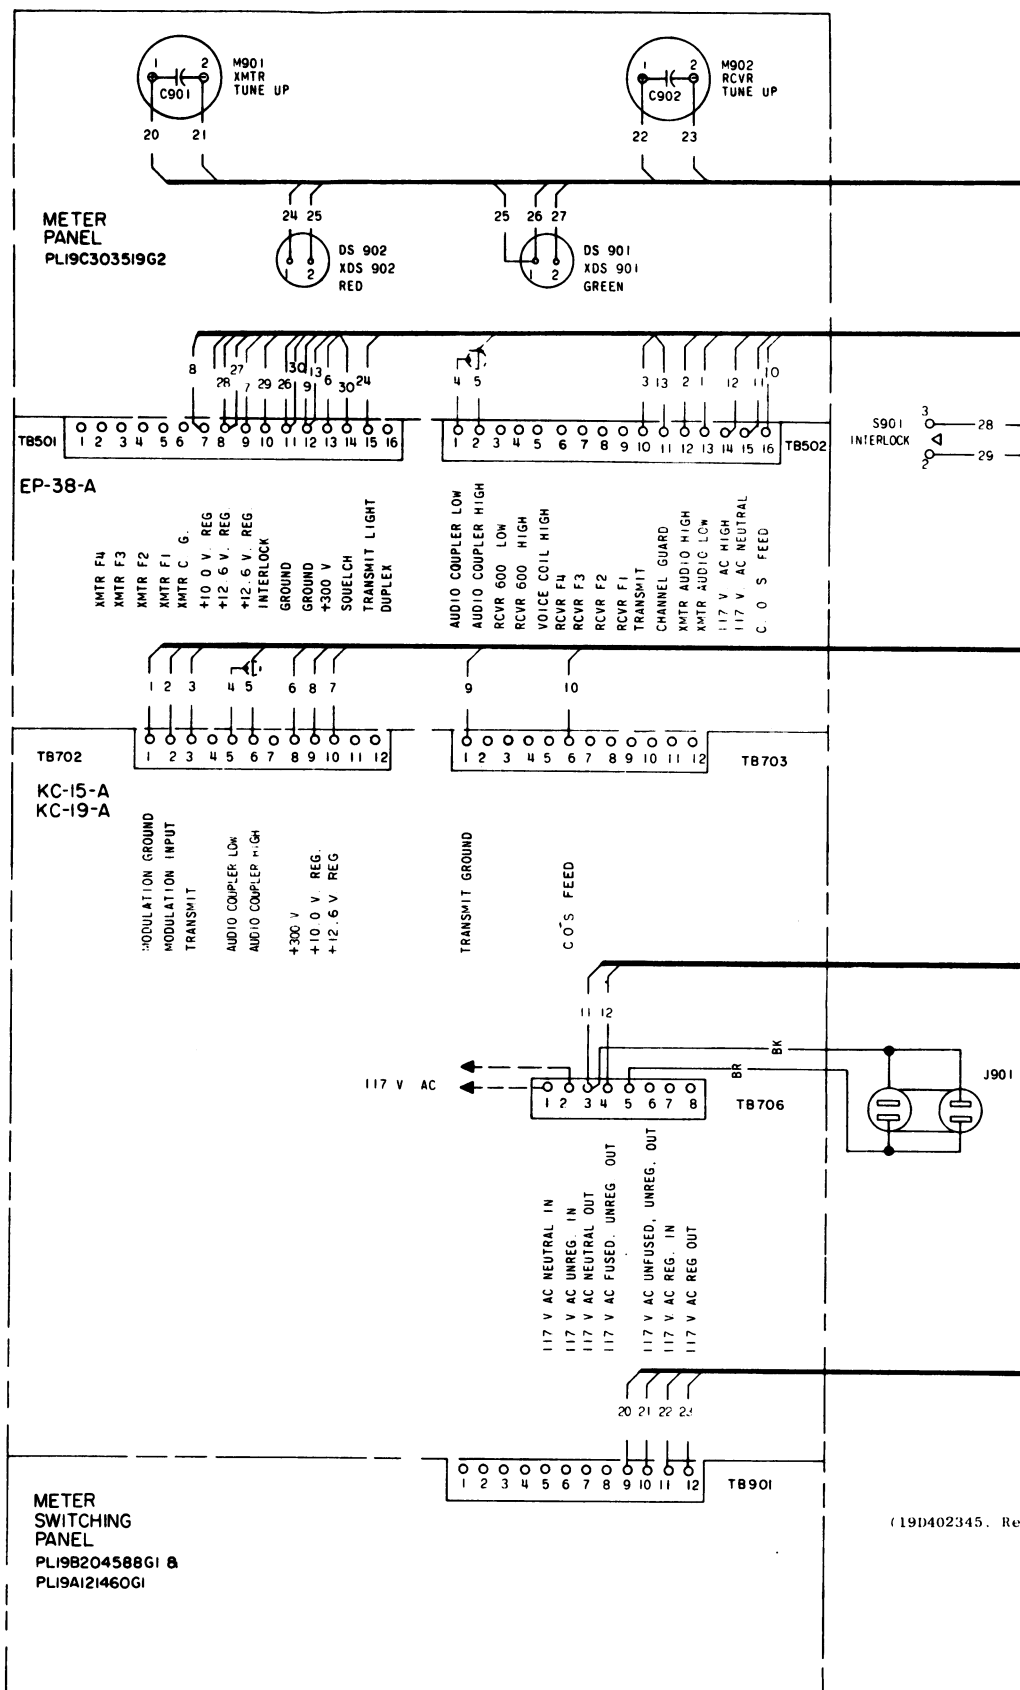

NOTES:

1. TB706-1 MUST BE CONNECTED TO GROUND OR NEUTRAL OF THE BUILDING WIRING SYSTEM.
2. MOVE N22-BL WIRE INSIDE 4EP38A FROM TB501-16 TO TB501-7.
3. TO DISABLE RECEIVER CHANNEL GUARD, REMOVE WIRE FROM TB502-11 ON 4EP38A.

INTERCONNECTION DIAGRAM

MASTR FLOOR-MOUNT
MEDIUM POWER STATION COMBINATION

PARTS LIST

LBI-3563A

MEDIUM POWER FLOOR MODEL STATION CABINET
19C303465-G3 and G4

SYMBOL	G-E PART NO.	DESCRIPTION
J901	4029758-G1	----- JACKS AND RECEPTACLES ----- Duplex outlet, phen: polarized, 15 amps at 125 v.
S901	19A115887-P1	----- SWITCHES ----- Push, door interlock: SPDT, 10 amps at 125 or 250 VAC.
	N529P30C13	----- MISCELLANEOUS ----- Plug button. (Located on top of cabinet).
	5491480-P5	Cable clamp: sim to Adel Precision Type 754. (Located in top of cabinet).
	19B215165-P3	Cable clamp: sim to Thomas and Betts 3302. (Located in bottom of cabinet).
		CABINET ASSEMBLY 19D402873-G1
	5498454-G1	----- MISCELLANEOUS ----- Cabinet shell: approx 69 x 22 x 5/8 inches.
	5495572-G1	Rear door.
	7774537-P1	Angle mounting.
	7488490-P4	Door handle: includes key LL-802; sim to Yale and Towne S1410S.
	5495571-G6	Front door.
	4031566-P1	Rear door grille.
	5493646-G1	Instruction book holder.
		Ground lug. Ilseco SLU-70.
		----- SUBASSEMBLIES -----
		METER PANEL ASSEMBLY 19C303519-G1 (Used in 19C303465-G3) 19C303519-G2 (Used in 19C303465-G4)
C901 and C902	5494481-P11	----- CAPACITORS ----- Ceramic disc: .001 μ f \pm 20%, 1000 VDCW; sim to RMC Type JF Discap.
DS901 and DS902	19C307037-P19	----- INDICATING DEVICES ----- Lamp, incandescent: miniature, 14 v; sim to GE 756.
M901 and M902	5491869-P11	----- METERS ----- Microammeter: -10/0/+50 μ a, 3-1/2 inch; sim to GE Type DO-91.
XDS901	7141855-P13	----- SOCKETS ----- Lamp: Green plastic lens; sim to Dialight 135.
XDS902	7141855-P12	Lamp: red plastic lens; sim to Dialight 135.
	NP243463	----- MISCELLANEOUS ----- Chassis, nameplate: etched aluminum.
		LINE VOLTMETER 19A120042-G5
C1	3R81-P102M	----- CAPACITORS ----- Ceramic disc: .001 μ f \pm 20%, 500 VDCW.
M1	5491869-P7	----- METERS ----- Voltmeter, AC: 0-150 VAC, 100 ohms per volt movement, 3-1/2 inch; sim to GE Type DO-91.


*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

PARTS LIST

LBI-3558B
MILITARY MICROPHONE
MODEL 4EM25A10
(PL-19B209102-P1)
(SEE RC-1163)

SYMBOL	G-E PART NO.	DESCRIPTION
		MECHANICAL PARTS
		MODEL 4EM25A10
1		Cable clamp. Shure Brothers RP-16.
2		Switch. Shure Brothers RP26.
3		Case (back) and mounting button: plastic. Shure Brothers RP-67.
4		Switch button: red plastic. Shure Brothers RP-25.
5		Spring. Shure Brothers RP-1.
6		Shield. Shure Brothers RP-23.
7		Magnetic controlled cartridge. Shure Brothers RP-13.
8		Case (front) plastic. (Part of item 3).
9		Cable and plug: approx 6 feet long. Shure Brothers RP-14.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

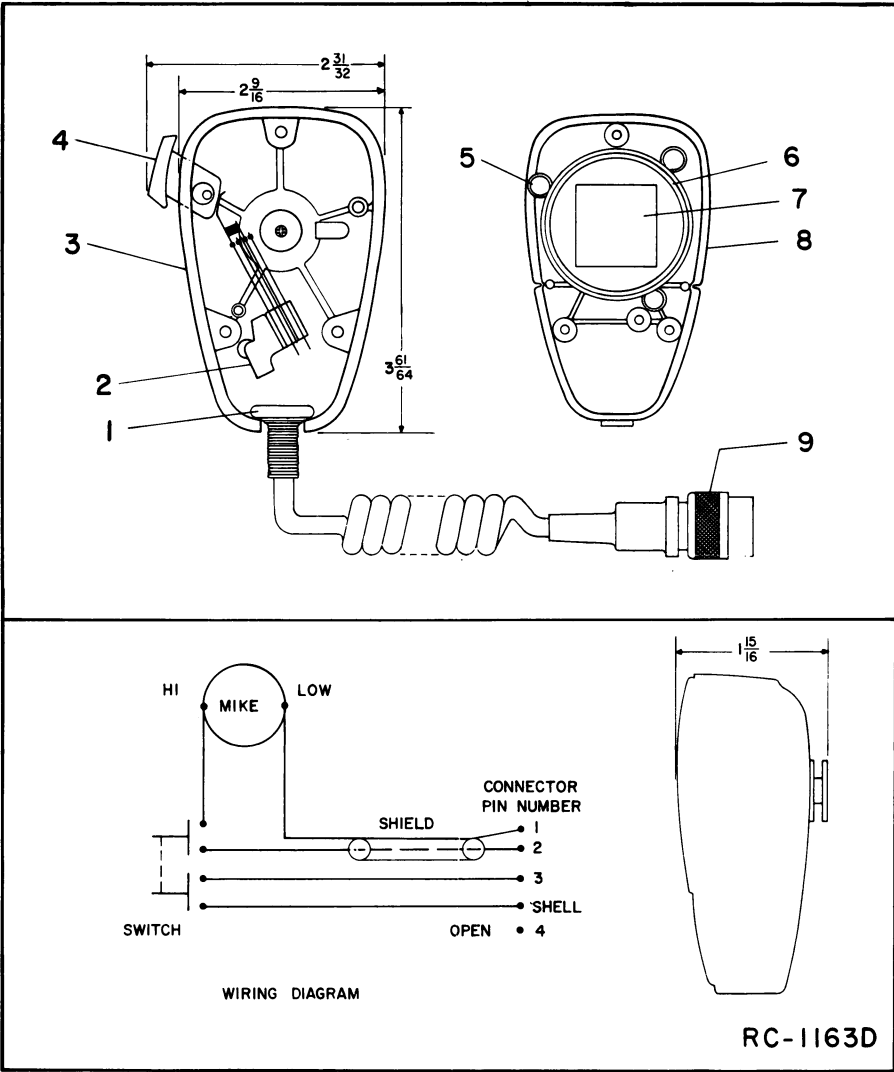




PARTS LIST

LBI-4427
STATION SPEAKER
19B219618G1


SYMBOL	GE PART NO.	DESCRIPTION
LS1	19A115964P1	----- LOUSPEAKERS ----- Weatherproof, Permanent Magnet: 3-1/2 inch, 18 ohm \pm 10% imp at 1000 Hz, 15-19 ohms DC; sim to Oaktron S-9847.
	19B219615P1	----- MISCELLANEOUS ----- Cover.
	19B209260P103	Terminal, solderless: sim to AMP 60495-1.
	5490407P10	Grommet.
	19B201074P304	Tap screw: No. 6-32 x 1/4.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

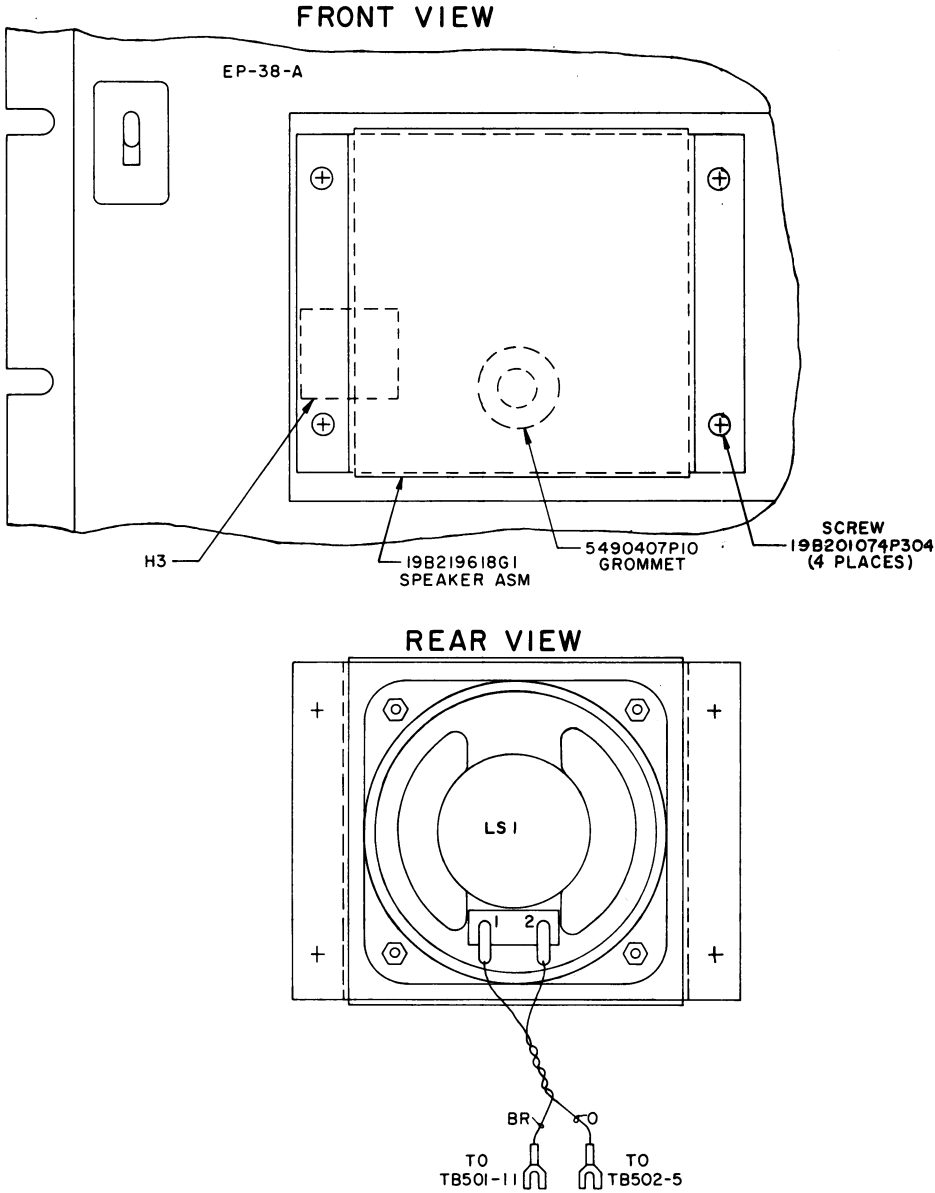


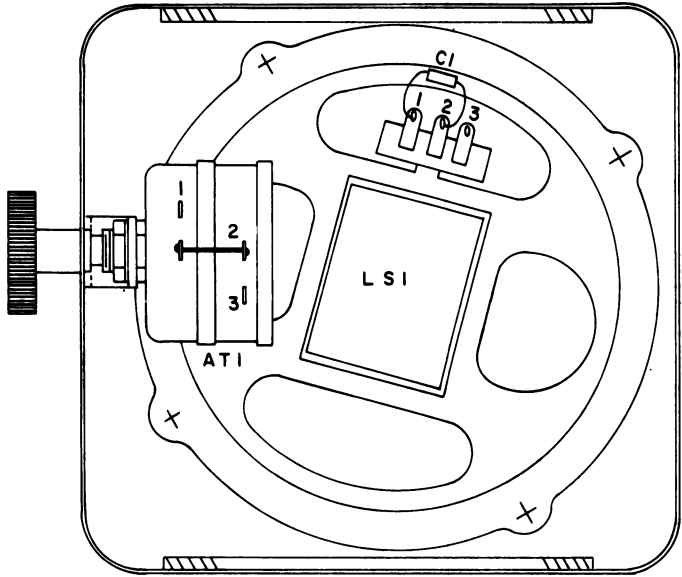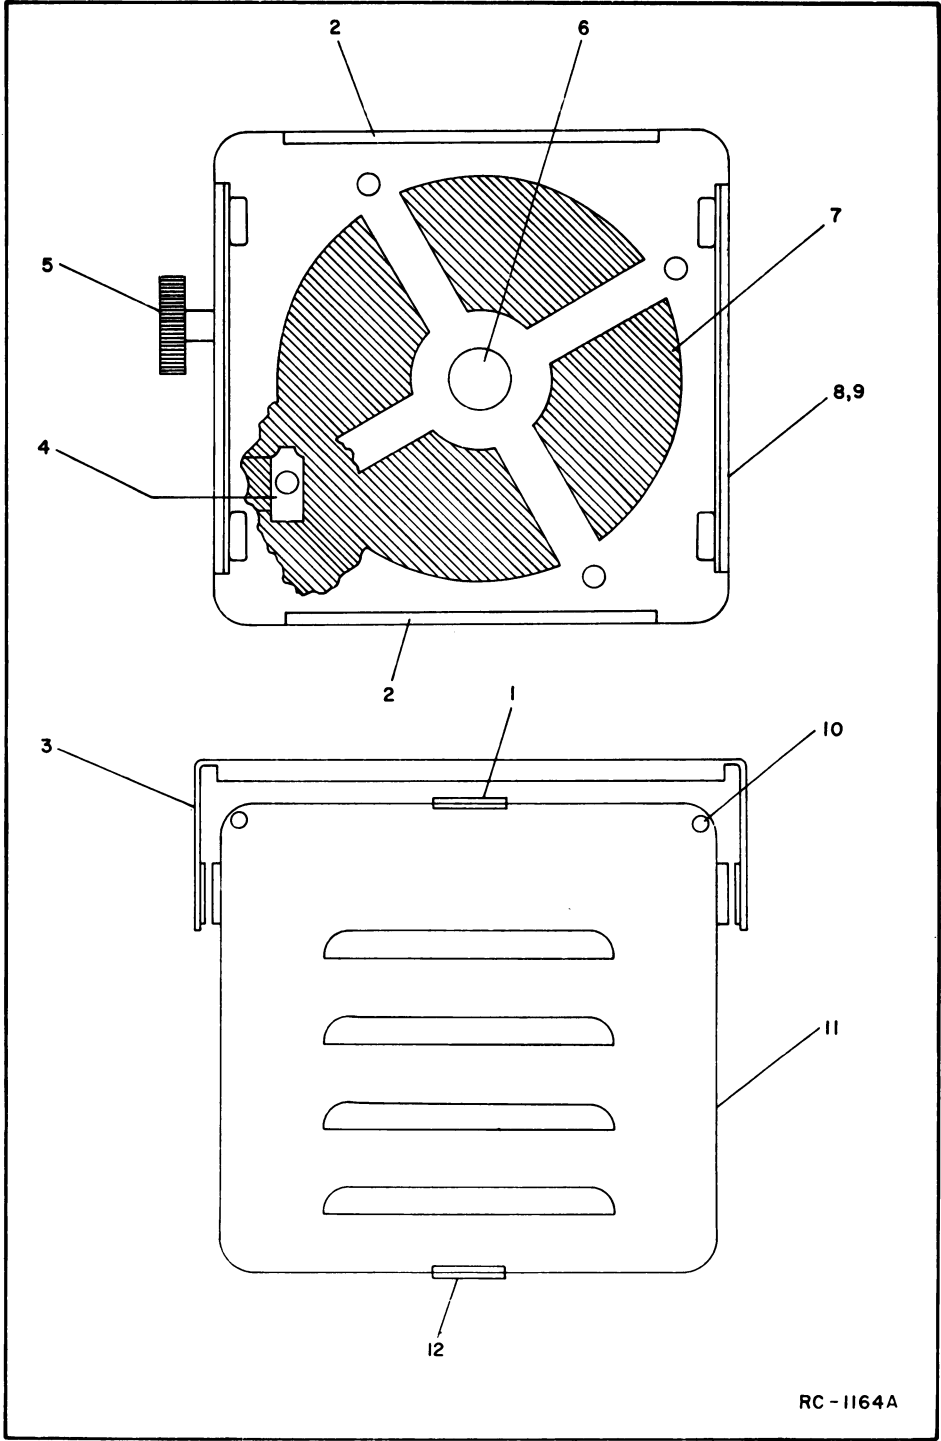

NOTE: ATTENUATOR (AT1) USED ON
MODEL 4EZ16A20 ONLY

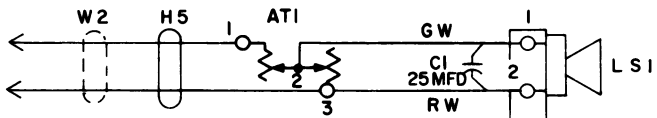

WIRING DIAGRAM - MODEL 4EZ16A20

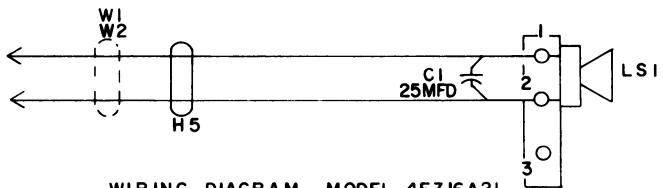

WIRING DIAGRAM - MODEL 4EZ16A21

The speaker leads connect to TB501-11 and TB502-5
on the Transmitter-Receiver Power Supply.

SPECIFICATIONS

Audio Power Input:	5-watts
Frequency Range:	300-3000 Hz
Input Impedance:	3.2 ohms
Attenuator:	3.5 ohms

PARTS LIST

LBI-3953

FIVE-WATT SPEAKER

MODEL 4EZ16A16 19D402449-G9
MODEL 4EZ16A17 19D402449-G10

SYMBOL	G-E PART NO.	DESCRIPTION
----- ATTENUATORS -----		
AT1	7478301-P48	L-pad, variable, audio: 3.5 ohms res, 4 w, 40 db min attenuation max, 294° rotation. (Used in Model 4EZ16A16 only).
----- CAPACITORS -----		
C1	19B209233-P2	Electrolytic, non-polarized: 25 μ f \pm 20%, 25 VDCW; sim to Sprague 41D.
----- LOUDSPEAKERS -----		
LS3	19B209422-P1	Permanent magnet: 5 inch, 3.2 ohms \pm 10% imp, 2.98 ohms \pm 15% DC res, 7.5 w max operating.
----- CABLES -----		
W2	7484521-G7	Speaker: 2 conductor with 2 spade tongue terminals, approx 4 feet long.
MECHANICAL PARTS (SEE RC-1164)		
1	19A115470-P1	Rubber grommet: approx 3/4 inch dia; sim to Atlantic Rubber 2279 (without hole).
2	19A121623-P1	(Not used).
3	PL-19A121521-G1	Mounting support.
4	7160861-P20	(Not used).
5	19A115837-P1	Plastic knob. (Used in Model 4EZ16A16).
6	19A12467-P1	(Not used).
7	19C303500-P1	Aluminum grille.
8	19C303504-G2	Can. (Used in Model 4EZ16A16).
9	19C303504-G1	Can. (Used in Model 4EZ16A17).
10	4037072-P10	(Not used).
11	19A121550-G1	Speaker cover.
12	5490407-P3	Neoprene grommet.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

ORDERING SERVICE PARTS

Each component appearing on the schematic diagram is identified by a symbol number, to simplify locating it in the parts list. Each component is listed by symbol number, followed by its description and GE Part Number.

Service parts may be obtained from authorized GE Communication Equipment Service Stations or through any GE Radio Communication Equipment Sales Office. When ordering a part, be sure to give:

1. GE Part Number for component
2. Description of part
3. Model number of equipment
4. Revision letter stamped on unit

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance.

Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, contact the nearest Radio Communication Equipment Sales Office of the General Electric Company.

MAINTENANCE MANUAL

LBI-4090

MOBILE RADIO DEPARTMENT
GENERAL ELECTRIC COMPANY • LYNCHBURG, VIRGINIA 24502

GENERAL  ELECTRIC

PRINTED IN U.S.A

DF-9023