

 *MOBILE RADIO*


MASTR

PROGRESS LINE

MAINTENANCE MANUAL



**DESK MATE
STATION**

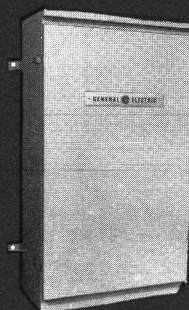

**POLE MOUNT
STATION**

**DC / TONE
REMOTE CONTROL**
LBI-4518B



**FLOOR MOUNT
STATION**

DF-9032

GENERAL  ELECTRIC

TABLE OF CONTENTS

EQUIPMENT INDEX	iii
SPECIFICATIONS	iv
COMBINATION NOMENCLATURE	iv
DESCRIPTION	1
Transmitter	1
Receiver	1
Power Supply	2
Control Shelf Assembly	2
Microphone	2
Speaker Assembly	2
Heater	3
METERING CIRCUITS	3
Meter Panel	3
Meter Switching Panel Assembly	3
CIRCUIT ANALYSIS	4
INITIAL ADJUSTMENT	4
Test Equipment Required	4
Transmitter Adjustment	4
Receiver Adjustment	4
Power Supply Adjustment	4
Control Shelf Adjustment	5
MAINTENANCE	5
Test and Troubleshooting Procedures	5
Preventive Maintenance	5
OUTLINE DIAGRAM (Meter Switching Panel)	6
SCHEMATIC DIAGRAM (Meter Switching Panel)	7
INTERCONNECTION DIAGRAMS	
Desk-Mate & Pole-Mount Stations	9
Floor-Mount Station	11
PARTS LIST	
Meter Switching Panel 19A121460G1	8
Desk-Mate Cabinet 7354211G4	10
Pole-Mount Cabinet 7132483G6	10
Floor-Mount Cabinet 7668242G14	12
Microphone Model 4EM25A10	13
Speaker Assembly 19B219618G1	14
Heater Model 4KZ3A1	10

WARNING

No one should be permitted to handle any portion of the equipment that is supplied with high voltage; or to connect any external apparatus to the units while the units are supplied with power. KEEP AWAY FROM LIVE CIRCUITS.

EQUIPMENT INDEX

EQUIPMENT	TYPE OR MODEL NUMBER
Transmitter	ET-55-A through ET-60-H
Receiver	ER-39-A through ER-42-L
Desk Mate (DT) Cabinet Pole-Mount (PT) Cabinet	7354211G4 7132483G6
Floor-Mount (VT) Cabinet	7668242G14
Station Power Supply	EP-38-A
Antenna Relay (mounts on EP-38-A)	19A121260G1
Control Shelf	19D416725G1
Tone Control Control Shelf System Board (Back Plane) Secur-it Tone Board Transmitter Control Board Receiver Control Board Audio Board	19D416721G1 19D416728G1 19D416660G1-G4 19D416658G2 19D416667G3, G4
DC Control Control Shelf System Board (Back Plane) Control Shelf Blank Panel DC Remote Control Board Audio Board	19D416721G2 19C320228P1 19D416661G1-G4 19D416667G3, G4
Extender Board	19D416760G1
Meter Switching Circuit (VT Station)	19A121460G1
Meter Panel	19C303518G4
Microphone	4EM25A10
Microphone Mounting Kit	7141414G2
Speaker Assembly	19B219618G1
117-VAC Power Cable (DT & VT stations)	7491206P1
Alignment Tools (hex slug type) (slotted screw type)	4038831P2 4033530G2
Handle (PT Station)	7145676P2

SPECIFICATIONS ***GENERAL****DIMENSIONS (H x W x D)**

Desk-Mate Station
Pole Mount Station
Floor-Mount Station

30-3/8" x 14" x 25-1/2"
42" x 23" x 12-1/2"
69" x 22" x 23"

WEIGHT

Desk-Mate
Pole-Mount
Floor-Mount

Approximately 150 pounds
Approximately 200 pounds
Approximately 300 pounds

DUTY CYCLE (Transmit & Receive)

Continuous

INPUT VOLTAGE117-VAC, $\pm 20\%$, 50/60 Hz**INPUT POWER**

Transmit: 1.66 amps max., 195 Watts
Receive: 0.8 amps max., 95 Watts

TEMPERATURE RANGE

-30°C (-22°F) to +60°C (+140°F)

* These specifications are intended primarily for use by the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

COMBINATION NOMENCLATURE

1st Digit	2nd Digit	3rd Digit	4th Digit	5th Digit	6th Digit	7th Digit	8th & 9th Digits
Mechanical Package	Operating Voltage	RF Power Output Range	Channel Spacing	Control	Number of Freq.	Options	Frequency Range
D Desk Mate Station	T 117 VAC	5 16-38 Watts	4 20 kHz	R DC Remote Control Station	A 1-Freq. T 1-Freq. R	S Standard	11 25-33 MHz
P Pole-Mount Station		6 38-64 Watts	5 25 kHz	T Tone Remote Control Station	B 2 Freq. T 1 Freq. R	N Noise Blanker	22 33-42 MHz
V Floor-Mount Station		7 64-128 Watts	6 30 kHz		C 2-Freq. T 2-Freq. R	U Channel Guard	33 42-50 MHz
			7 40 kHz		D 1-Freq. T 2-Freq. R	W Noise Blanker & Channel Guard	44 66-77 MHz
			8 50 kHz			P UHS Receiver	45 77-88 MHz
			9 60 kHz			G UHS Receiver & Channel Guard	55 132-150.8 MHz
							66 150.8-174 MHz
							77 406-420 MHz
							88 450-470 MHz
							89 470-474 MHz
							91 494-512 MHz

DESCRIPTION

General Electric MASTR Progress Line DC or Tone Remote Control Stations are ruggedly built two-way radio stations. Both the transmitter exciter and the receiver are fully transistorized. Silicon transistors are used throughout for added reliability.

Three cabinet styles (Desk-Mate, Pole-Mount, and Floor-Mount) are available to meet different system requirements. Individual characteristics of the cabinets are listed in the following paragraphs.

- **Desk-Mate** - The Desk-Mate station can be conveniently located adjacent to a desk to provide additional working area, or in some other suitable area as required. Both side panels on the station can be easily removed to gain access to the unit modules for servicing.
- **Pole-Mount** - The Pole-Mount station is ruggedly built and can be mounted outdoors in remote locations regardless of weather conditions. An optional

heater kit is available for installations where the climate is such that the cabinet temperature drops below 5°F. The unit modules are mounted to a "swing out" rack to facilitate servicing either side of the equipment.

- **Floor-Mount** - The Floor-Mount station can be placed in the control building adjacent to the antenna installation or it may be located in another area as required. Front and back doors on the station cabinet can be opened to gain access to the unit modules. The rear door is interlocked to protect personnel from contact with voltages. When the rear door is opened, the interlock switch opens the power supply output to the transmitter. A 117-VAC receptacle is mounted inside the rear of the cabinet for plug-in of service equipment.

TRANSMITTER

The transmitter assembly consists of the transistorized exciter board and the power amplifier section. The standard transmitter may be equipped with:

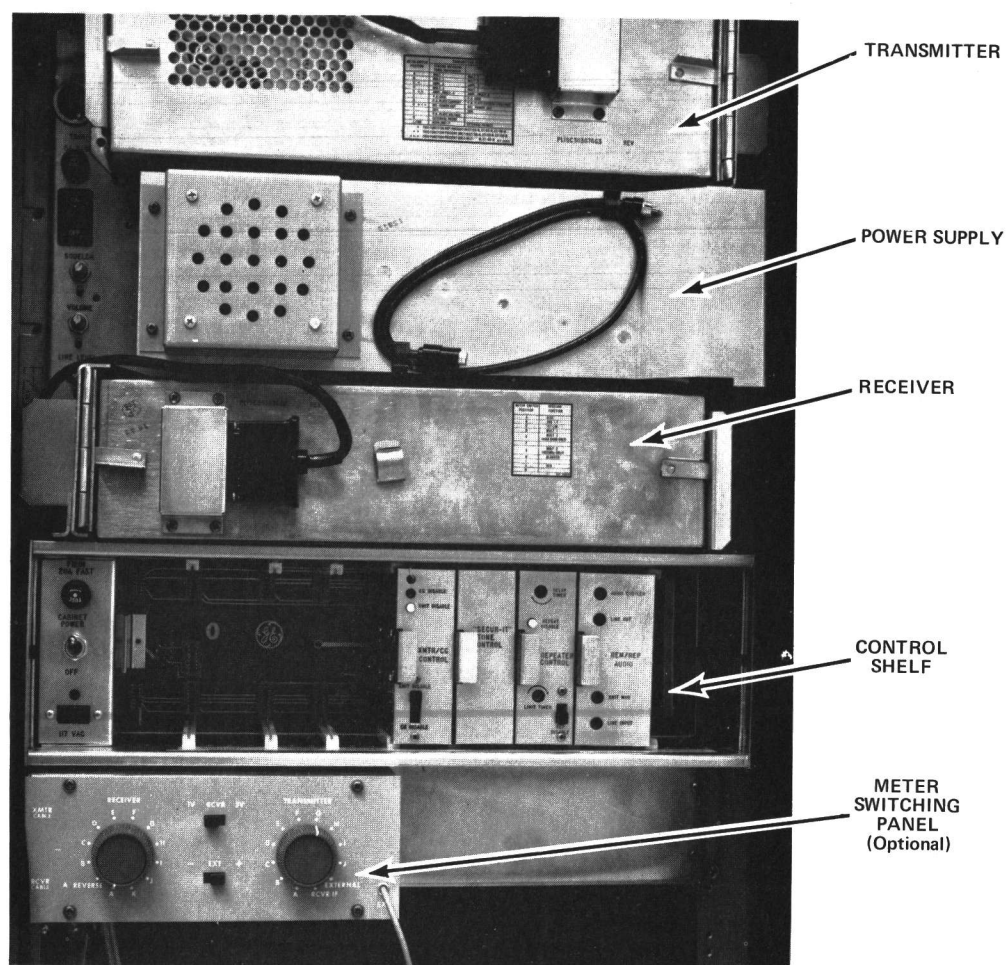


Figure 1 - Typical Station Equipment Arrangement

- One through four frequencies
- Channel Guard (tone squelch)

RECEIVER

The fully transistorized receiver is completely contained in an aluminum casting, which provides excellent electrical shielding and reduces the effects of vibration. The standard receiver may be equipped with:

- One through four frequencies
- Channel Guard (tone Squelch)
- Noise Blanker
- RF Preamplifier

POWER SUPPLIES

Station Power Supply Type EP-38-A provides operating voltages for the transmitter, receiver and the control shelf. In addition to plate, screen and bias voltages for the transmitter, the power supply provides:

- Regulated -20 Volts for the transistorized transmitter exciter-board.
- Regulated +10 Volts for the receiver and for transmitter Channel Guard, and control shelf.
- Regulated +12.6 Volts for transmitter filaments, receiver audio, relays, pilot lights, and control shelf.

Antenna Switching Relay

Antenna switching relay K502 mounts on the power supply. Keying the transmitter energizes the relay, connecting the transmitter output to the antenna. When the transmitter is unkeyed, K502 is de-energized and the receiver is connected to the antenna.

Receiver Power Supply (Optional)

Receiver power supply Type EP-39-A is provided when the station is equipped with a second receiver.

CONTROL SHELF ASSEMBLY

Control Shelf 19D416725G1 contains the System Board, the AC input circuit and plug-in printed wire modules with solid state circuitry for up to six DC Remote Control functions and up to twelve Tone Remote Control functions. The shelf mounts on the chassis mounting frame below the Transmitter-Receiver Power Supply.

AC Input

The 117-Volt AC input connects directly to TB1202-1 and 2. All power to the station is controlled by switch S1201 on the Control Shelf.

An optional 220/110 Volt AC Stepdown Transformer Kit is available for use when the input line voltage is 220 Volts AC.

WARNING

117-Volts AC is always present at TB1202-1 and 2 even when S1201 is in the OFF position. Always use care when servicing the cabinet power module on the control shelf.

Telephone Lines

The key link in a Remote Control installation is the telephone line from the Dispatcher Unit to the Remote Control Station. The telephone line is connected directly from the dispatcher's console to the Remote Station wherever it may be located.

There are three methods of telephone line control:

1. Two telephone pair--one for audio and one for DC control. Tone Remote units send control tones over the audio pair.
2. One metallic pair for both audio and DC control, simplexing the DC control current from the center-tap of the output transformer to ground.
3. One metallic pair for both audio and DC control, simplexing the DC control current from one line to the other by splitting the output transformer with capacitor.

Refer to Control Shelf Maintenance Manual LBI-4490 for complete information on Remote Control Telephone lines.

MICROPHONE

Microphone Model 4EM25A10 is mounted inside the station for use during service and maintenance work by the serviceman. The Microphone connects to the mike jack J902 located on the front side of the power supply.

SPEAKER ASSEMBLY

Speaker Assembly 19B219618G1 is designed for an audio input of 1.5 Watts when used in MASTR Progress Line Remote Stations. The Speaker Assembly mounts on the chassis

of transmitter-receiver power supply Type EP-38-A as an aid to the serviceman.

NOTE

When a speaker is not used, a 3.5-ohm, 10-Watt resistor must be connected from TB501-11 to TB502-5 as a substitute for the speaker load impedance.

HEATER MODEL 4KZ3A1 (Optional)

The Heater is an option used with Pole Mount Stations where the climate is such that an auxiliary cabinet heater is required. The heater consists of a 250-Watt heater strip and a temperature-operated switch. When the temperature of the cabinet drops below 5°F, the switch closes, thereby applying power to the heater strip. When the temperature rises above 5°F, the heater will be turned off by the opening of the switch. The heater strip is usually mounted on the bottom of the cabinet on the inside in a convenient location. Splice one lead from the temperature switch to a lead from the heater strip. Connect the other lead from the temperature switch to the EP-38-A power supply, TB502-14. Connect the other lead from the heater strip to TB502-15. For complete Installation Instructions of Heater Kit refer to EBI-4353.

METERING CIRCUITS

(Floor-Mount Station)

METER PANEL (19C303519G4)

The Meter Panel is located above the front door on the Floor-Mount station

The meter voltage check points are:

Tx (S1001) & Rx (S1002) Switch Position No.	Transmitter Function	Meter Range Full Scale	Receiver Function	Meter Range Full Scale
A	MULT 1	1 V	DISC	1 V*
B	MULT 2	1 V	2nd IF	1 V*
C	AMPL 3	1 V	1st LIM	1 V*
D	MULT 3	1 V	MULT 1	1 V*
E	AMPL/MULT 4	1 V	MULT 2	1 V*
F	PA GRID	1 V	-----	
G	PA PLATE CURRENT	1 V	AUDIO PA	1 V*
H	POWER OUTPUT	1 V	BLANKER	1 V*
I	20 VOLTS	30 V	-----	
J	PA PLATE VOLTAGE	1,000 V	10-VOLTS	15 V
K	EXTERNAL PROBE	3 V	-----	
L/VM	RECEIVER 2nd IF	1 V	-----	

* Can be increased to 3-V by switch S1003

cabinet. The panel contains the following meters for making voltage test reading in the transmitter and receiver:

- Meter M901--measures test voltages in transmitter circuits.
- Meter M902--measures voltages in receiver circuits.
- Line Voltmeter-19A120042G5 (option)--continuously monitors line voltage. The meter is a 0-150 VAC voltmeter connected across the 117 VAC line.

METER SWITCHING PANEL ASSEMBLY
(19A121460G1)

The Meter Switching Panel Assembly is mounted on the front of the accessory panel and contains the switches and circuitry for switching from stage to stage in the receiver and transmitter. The voltage readings for each stage is indicated on the meters located in the Meter Panel. The Meter Switching Panel Assembly includes:

- Plug P1001--plugs into transmitter centralized metering jack J102. (or J1001 if optional transmitter top cover is used).
- Plug P1002--plugs into receiver centralized metering jack J442. (or J1002 if optional receiver top is used).
- Test Probe P1003--for external metering. (3-Volt full scale meter range).
- Switch S1001--to switch transmitter voltage test points into the test meter circuit.

- Switch S1002--to switch receiver voltage test points into the test meter circuit.
- Switch S1004--test probe polarity reversing switch.

Refer to the transmitter and/or receiver maintenance manual for the proper voltage readings for each stage tested.

Transmitter voltages readings will be indicated on transmitter "tune up" meter (M901) and receiver readings will be indicated on the receiver "tune up" meter (M902). Both meters are located on the Meter Panel.

CIRCUIT ANALYSIS

The voltage test point in the receiver and transmitter are connected through the connecting cables to lug terminals on the receiver and transmitter voltage wafer switches. With the receiver switch in the "A" meter switch position for example, the discriminator output voltage is connected by the switch to TB901-11 and 12 through wire numbers 22 and 23 to receiver meter (M902) in the Meter Panel. If the transmitter switch is in the "F" position, for example, the PA grid voltage is connected by the switch to TB901-9 and -10, through wire numbers 20 and 22 to meter (M901) in the Meter Panel.

Switch S1003 is used to connect the 3-Volt multiplying resistor into the receiver meter circuit. Test probe P1003 is used for external metering. When using the test probe, turn the transmitter switch S1001 to the "External" position. R1002 is a multiplier resistor in series with the test probe to make the meter 3-Volts full scale when using the external probe.

Resistor R1007 is a multiplier resistor in series with the receiver meter when switch S1003 is in the 3-Volt position. Silicon rectifiers CR1001, CR1002, resistors R1003 and R1004 in the transmitter meter circuit and CR1003, CR1004, R1005 and R1006 in the receiver meter circuit protect the meters from overload and voltage spikes.

NOTE

For continuous monitoring of test voltages, optional transmitter and receiver top covers, (19C303676G3 and G2, respectively) are available. The covers contain external sockets to attach the transmitter and receiver cables from the Meter Switching Panel Assembly.

INITIAL ADJUSTMENT

After the Station has been installed as described in the Installation Manual, the transmitter, receiver, power supply, and control shelf must be adjusted by an electronics technician who holds a 1st or 2nd Class FCC Radiotelephone or Radiotelegraph license before the station can be placed in operation. Built-in metering circuits are provided with the station.

TEST EQUIPMENT REQUIRED

The following test equipment is required for the adjustment of both transmitter and receiver:

1. A tuning tool and a screwdriver.
2. A signal source operating at the system frequency (preferably the transmitter which will normally be monitored by the receiver).

TRANSMITTER ADJUSTMENT

The initial adjustment for the transmitter includes:

- Loading the power amplifier into the antenna.
- Checking the frequency and modulation.

For the Initial Adjustment procedure, refer to the ALIGNMENT PROCEDURE in the MAINTENANCE MANUAL for the transmitter.

RECEIVER ADJUSTMENT

The initial adjustment for the receiver includes:

- Zeroing the receiver to the system operating frequency.
- Matching the antenna coupling transformer to the antenna.

For the Receiver Initial Adjustment Procedure, refer to the FRONT END ALIGNMENT PROCEDURE in the MAINTENANCE MANUAL for the receiver.

POWER SUPPLY ADJUSTMENT

The initial adjustment for the power supply includes:

- Turning on power switch S501.
- Setting VOLUME control R511 to mid-range, and setting SQUELCH control R512 for quieting.

CONTROL SHELF ADJUSTMENT

The initial adjustment for the remote control shelf includes:

- Turning the power switch S1201 ON.
- Adjusting the required Tone or DC Controls.

For Tone and DC Controls Adjustment Procedures, refer to Maintenance Manual LBI-4490 for the control shelf.

In addition, specific troubleshooting procedures are available to assist the serviceman in troubleshooting the transmitter, receiver and power supply.

For best results in servicing the station, the TEST PROCEDURES should be used in conjunction with the TROUBLESHOOTING PROCEDURES. Both sheets are listed in the Table of Contents of the applicable Maintenance Manual.

MAINTENANCE

TEST AND TROUBLESHOOTING PROCEDURES


Individual Maintenance Manuals for the transmitter and receiver describe standard test procedures the serviceman can use to compare the actual performance of the transmitter or receiver against the specifications of the unit when shipped from the factory.

PREVENTIVE MAINTENANCE

To insure high operating efficiency and to prevent mechanical and electrical failures from interrupting system operations, routine checks should be made of all mechanical and electrical parts. This preventive maintenance should include the maintenance checks listed in the chart on the next page.

PREVENTIVE MAINTENANCE PROGRAM

CHECK THE FOLLOWING ONCE A YEAR:	
1. Transmitter frequency and deviation (FCC requires this check-up ONCE A YEAR.....)	<input type="checkbox"/>
2. Measure and record the antenna system V.S.W.R.....	<input type="checkbox"/>
3. Check input voltage at TB1202-1 and-2 on control shelf. Reading should be within 20% of 117-VAC. (Also check during routine service calls).....	<input type="checkbox"/>
4. Compare and record transmitter meter readings with voltages taken during initial tune-up. Retune, if necessary.....	<input type="checkbox"/>
5. Compare and record receiver meter readings with voltages taken during initial tune-up. Retune, if necessary.....	<input type="checkbox"/>
6. Check for positive indication of pressure on transmission line pressure gauge (if pressurized line is used).....	<input type="checkbox"/>
7. Clean dust from fan blades and lubricate bearings.....	<input type="checkbox"/>
8. Burnish pitted or coated relay contacts to smooth out metallic deposits or remove the coating.....	<input type="checkbox"/>
MAKE THE FOLLOWING MAINTENANCE CHECKS DURING ROUTINE CALLS:	
1. Check antenna lines and mast for mechanical stability.....	<input type="checkbox"/>
2. Visually check:	
External cables.....	<input type="checkbox"/>
Internal cables.....	<input type="checkbox"/>
Plugs.....	<input type="checkbox"/>
Sockets.....	<input type="checkbox"/>
Terminal boards.....	<input type="checkbox"/>
3. Check for tightness of nuts, bolts, and screws to make sure nothing is working loose from its mounting.....	<input type="checkbox"/>
4. Replace tubes as necessary. (It may be convenient to replace all station tubes during the yearly check-up).....	<input type="checkbox"/>

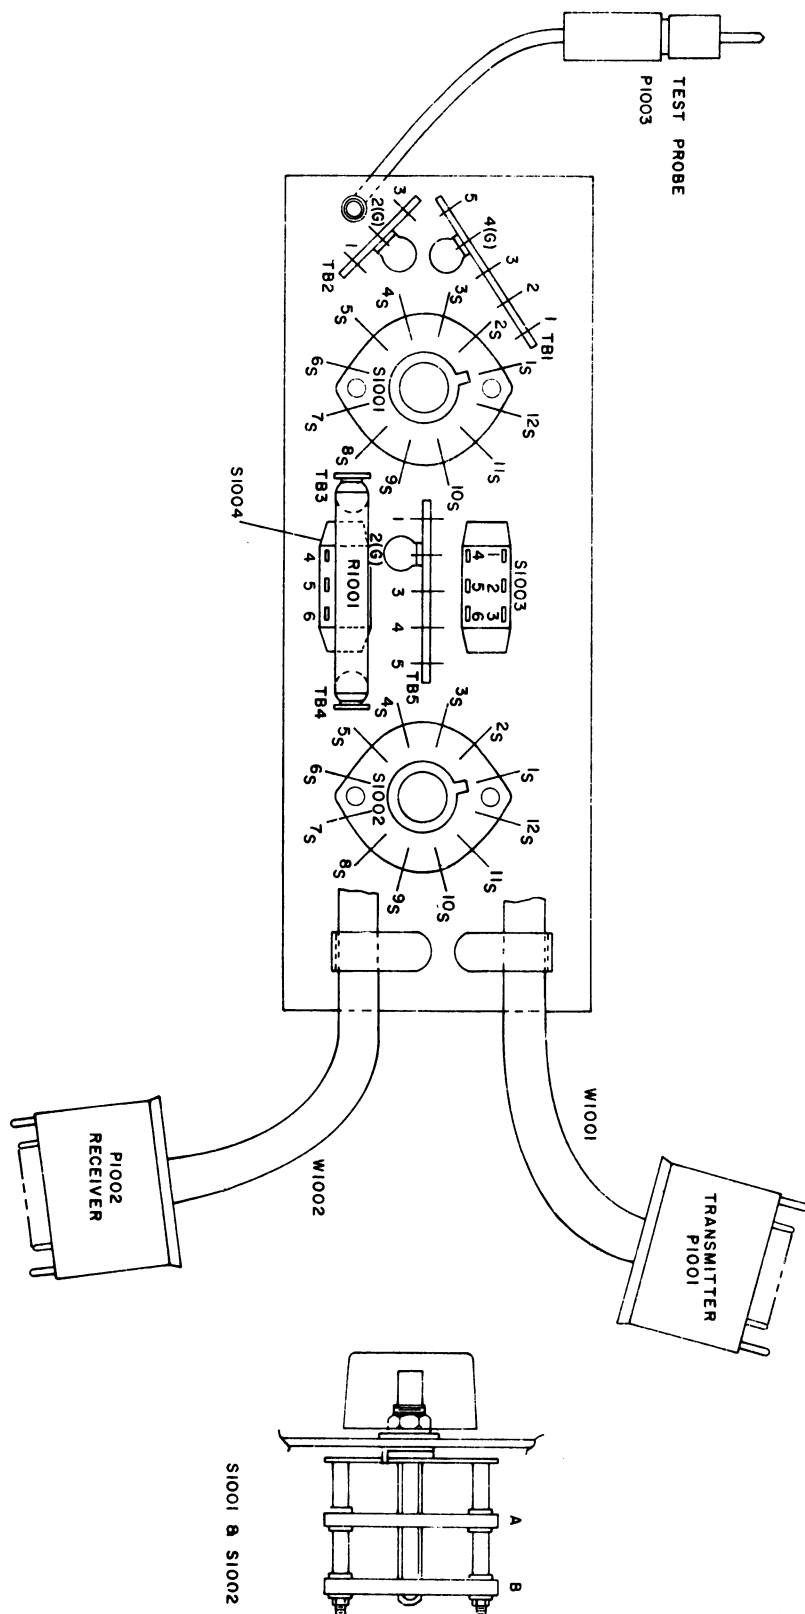


(19C303814, Rev. 1)

OUTLINE DIAGRAM

MASTR FLOOR-MOUNT STATION COMBINATION
METER SWITCHING PANEL ASSEMBLY 19A121460G1

IN ORDER TO RETAIN RATED EQUIPMENT PERFORMANCE, REPLACEMENT OF ANY SERVICE PART SHOULD BE MADE ONLY WITH A COMPONENT HAVING THE SPECIFICATIONS SHOWN ON THE PARTS LIST FOR THAT PART.

ALL RESISTORS ARE 1/2 WATT UNLESS OTHERWISE SPECIFIED AND RESISTOR VALUES IN OHMS UNLESS FOLLOWED BY K=1000 OHMS OR MEG=1,000,000 OHMS. CAPACITOR VALUES IN PICOFARADS (EQUAL TO MICROMICROFARADS) UNLESS FOLLOWED BY UF=MICROFARADS. INDUCTANCE VALUES IN MICROHENRYS UNLESS FOLLOWED BY MH=MILLIHENRYS OR H=HENRYS.

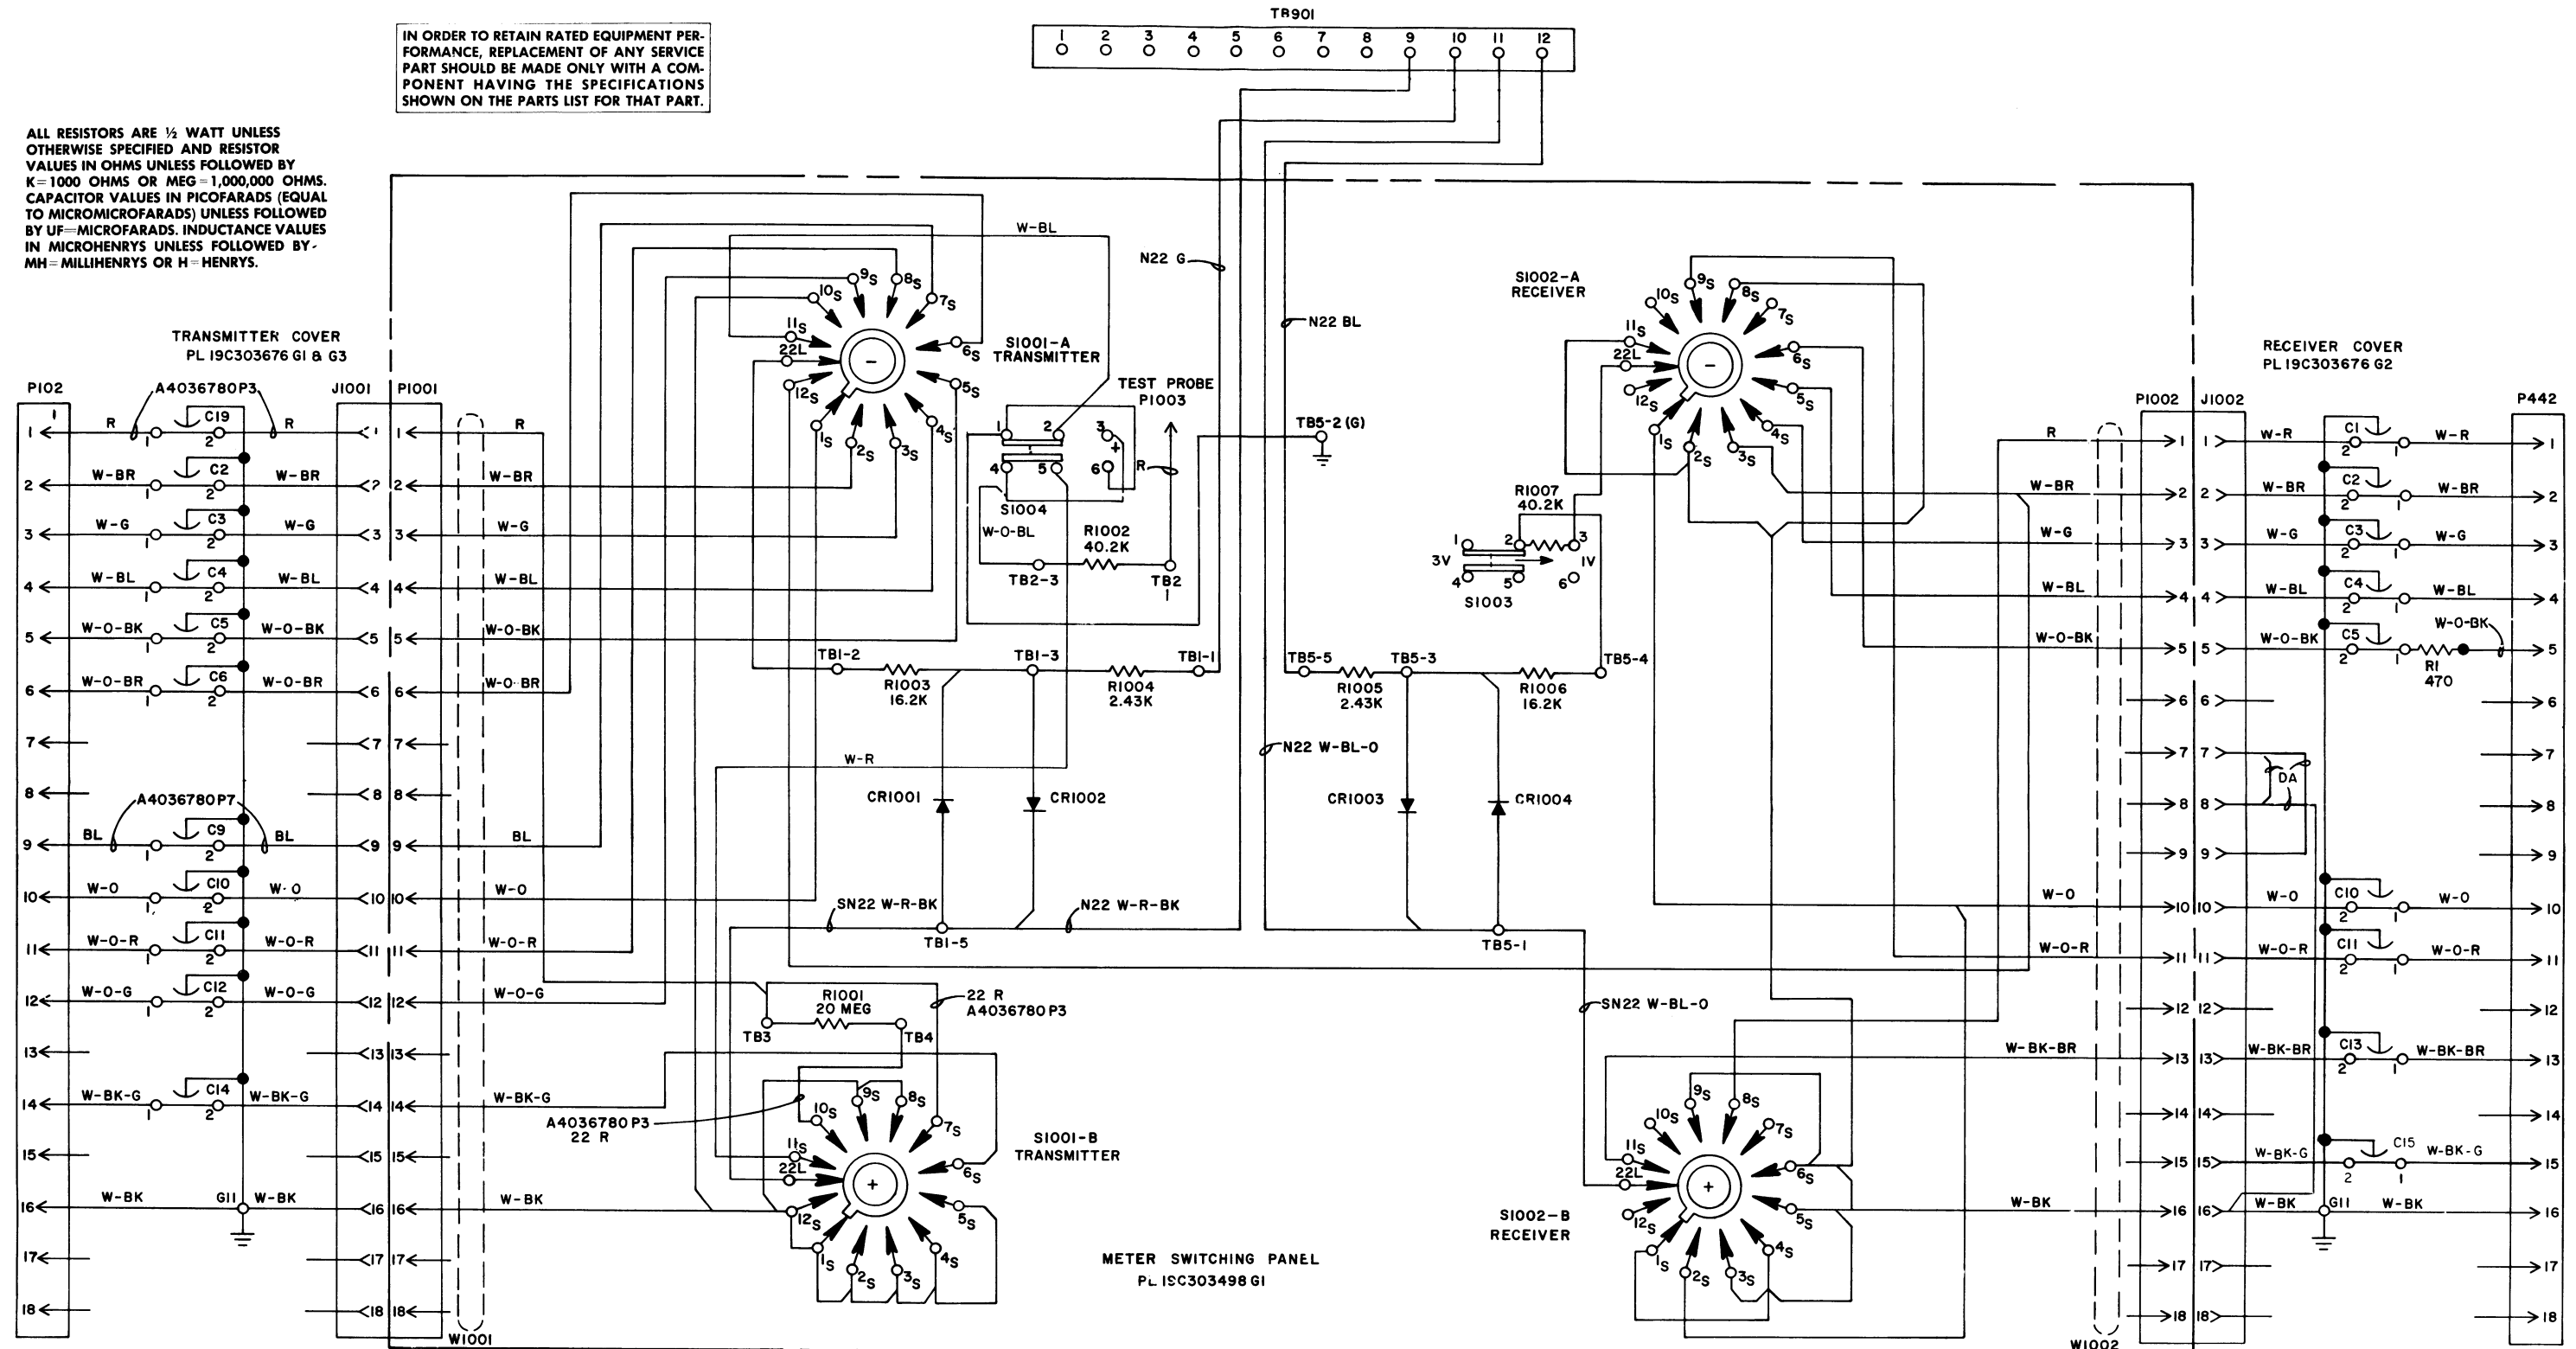

SEE APPLICABLE PRODUCTION CHANGE SHEETS IN INSTRUCTION BOOK SECTION DEALING WITH THIS UNIT, FOR DESCRIPTION OF CHANGES UNDER EACH REVISION LETTER

THIS ELEM DIAG APPLIES TO

MODEL NO	REV LETTER
19C303498G1	A
19C303676G2	B

NOTES:

1. ALL WIRES ARE DA UNLESS OTHERWISE SHOWN IN METER SWITCHING PANEL
2. ALL WIRES ARE SF24 UNLESS OTHERWISE SHOWN IN RECEIVER & TRANSMITTER COVER
3. TERMINATE ALL WIRES NOT USED IN W1001 & W1002 BY CUTTING OFF FLUSH WITH CABLE JACKET.

(19D402334, Rev. 9)

SCHEMATIC DIAGRAM

MASTR FLOOR-MOUNT STATION COMBINATION
METER SWITCHING PANEL ASSEMBLY 19A121460G1

PARTS LIST

LBI-3505C

METER SWITCHING PANEL ASSEMBLY
19A121460-G1

SYMBOL	G-E PART NO.	DESCRIPTION
		METER SWITCHING PANEL 19C303498-G1
		----- DIODES AND RECTIFIERS -----
CR1001 thru CR1004	5494922-P1	Silicon; sim to Type 1N456.
		----- PLUGS -----
P1001		(Part of W1001).
P1002		(Part of W1002).
P1003	4032797-P1	Probe, test; sim to Birnbach Type 415 (red).
		----- RESISTORS -----
R1001	5496955-P57G.	Deposited carbon: 20 megohms $\pm 2\%$, 2 w; sim to Texas Instruments Type CD2R.
R1002	5495948-P359	Deposited carbon: 40,200 ohms $\pm 1\%$, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1003	5495948-P321	Deposited carbon: 16,200 ohms $\pm 1\%$, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1004 and R1005	5495948-P238	Deposited carbon: 2430 ohms $\pm 1\%$, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1006	5495948-P321	Deposited carbon: 16,200 ohms $\pm 1\%$, 1/2 w; sim to Texas Instruments Type CD1/2MR.
R1007	5495948-P359	Deposited carbon: 40,200 ohms $\pm 1\%$, 1/2 w; sim to Texas Instruments Type CD1/2MR.
		----- SWITCHES -----
S1001 and S1002	19C307113-P2	Rotary: 2 sections, 2 poles, 12 positions, non-shorting contacts, 2 amps at 28 VDC or 1 amp at 110 VDC; sim to Oak 235585-K2.
S1003 and S1004	7145098-P1	Slide: DPDT, 3/4 amp at 125 VAC or 1/2 amp at 125 VDC; sim to Stackpole SS-150.
		----- TERMINAL BOARDS -----
TB1	7775500-P9	Phen: 5 terminals.
TB2	7775500-P7	Phen: 3 terminals.
TB3 and TB4	7775500-P46	Phen: 1 terminal.
TB5	7775500-P9	Phen: 5 terminals.
		----- CABLES -----
W1001	19C303568-P2	Metering: includes 18 pin plug (P1001) rated at 1000 VDC max, approx 38 inches long.
W1002	19C303568-P2	Metering: includes 18 pin plug (P1002) rated at 1000 VDC max, approx 38 inches long.
		----- MISCELLANEOUS -----
	19B204861-G1	Chassis. (Used in 19C303498-G1).
	7763541-P5	Cable, clamp. (Used with W1001 and W1002 in 19C303498-G1).
	7487773-P6	Knob: red; sim to Eastman Chemical 28739. (Used with S1001 and S1002 in 19C303498-G1).
	19B204590-G1	Box. (Used in 19A121460-G1).
	4029030-P11	Rubber channel seal: approx 2-1/2 inches long. (Used in 19A121460-G1).

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.


PRODUCTION CHANGES

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter", which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.

REV. A — To eliminate 3 db loss in receiver sensitivity with cover on. Added R1 to receiver metering cover.

REV. B — To allow audio metering with cover. Added C15.

SYMBOL	G-E PART NO	DESCRIPTION
		COVER ASSEMBLY 19C303676-G1 (TRANSMITTER STATION METERING) 19C303676-G2 (RECEIVER STATION METERING) 19C303676-G3 (TRANSMITTER STATION METERING, VENTILATED)
		----- CAPACITORS -----
C1 thru C6	5493392-P7	Ceramic, feed-thru: .001 μf +100% -0%, 500 VDCW; sim to Allen-Bradley Type FA5C.
C9	19B209282-P1	Ceramic, feed-thru: 680 pf $\pm 20\%$, 1000 VDCW; sim to Sprague Type 544C.
C10 thru C14	5493392-P7	Ceramic, feed-thru: .001 μf +100% -0% 500 VDCW; sim to Allen-Bradley Type FA5C.
C15*	5493392-P7	Ceramic, feed-thru: .001 μf +100% -0%, 500 VDCW; sim to Allen-Bradley Type FA5C. Added by Rev B.
C19	19B209282-P1	Ceramic, feed-thru: 680 pf $\pm 20\%$, 1000 VDCW; sim to Sprague Type 544C.
		----- JACKS AND RECEPTACLES -----
J1001 and J1002	19B205689-G2	Connector: 18 contacts.
		----- PLUGS -----
P102	19B204727-P1	Connector: 18 contacts rated at 1000 VDC max.
P442	19B204727-P1	Connector: 18 contacts rated at 1000 VDC max.
		----- RESISTORS -----
R1*	3R77-P471K	Composition: 470 ohms $\pm 10\%$, 1/2 w. Added by Rev A.

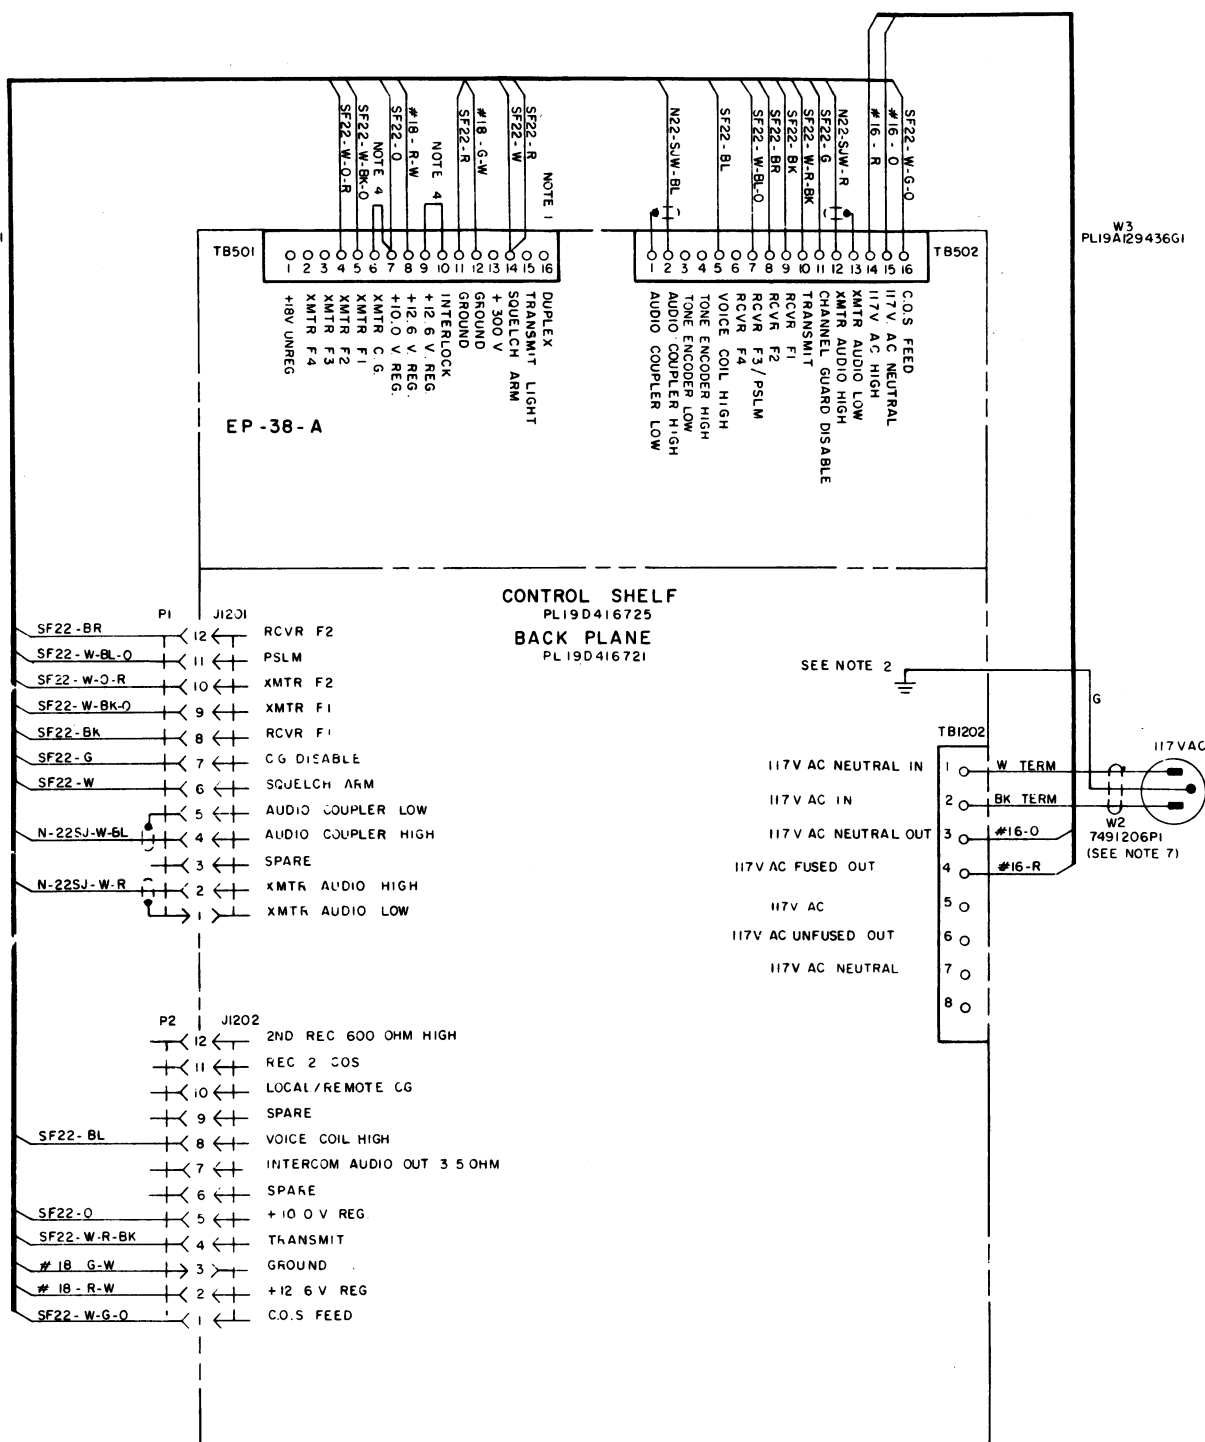W1
PL19C320316G1W3
PL19A129436G1

NOTES:

1. MOVE THE W-R WIRE INSIDE 4EP38A FROM TB501-16 TO TB501-7 FOR REPEAT COMBINATIONS OR IF RECEIVER MUTE IS NOT DESIRED.
2. CONNECT GREEN LEAD TO CONVENIENT CHASSIS MOUNTING SCREW.
3. TO DISABLE RECEIVER CHANNEL GUARD, REMOVE WIRE FROM TB502-11 ON 4EP38A.
4. SUPPLIED WITH W3.
5. IN REMOTE/REPEAT COMBINATIONS WITH CHANNEL GUARD, LIFT SF22-G WIRE ON TB502-11 AND ADD JUMPER BETWEEN TB502-11 AND TB501-11. (JUMPER IS PART OF 19A129451G1 KIT).
6. WHEN TONE REMOTE SQUELCH OPTION IS PRESENT, REMOVE SF22-R WIRE BETWEEN TB501-11 AND TB501-14.
7. W2 IS NOT PART OF POLE MOUNT COMBINATIONS.

(19D416787, Rev. 0)

INTERCONNECTION DIAGRAM

**MASTR DESK-MATE AND
POLE-MOUNT STATION COMBINATIONS
DC/TONE REMOTE CONTROL PANEL**

PARTS LIST

LBI-3562

POLE MOUNT STATION CABINET
7132463-G6

SYMBOL	G-E PART NO.	DESCRIPTION
	7353495-P5, 18, 19, 20	Door Assembly: weather seal: rubber, Manhattan Div. of Raybestos Manhattan Inc., Passaic, N.J. 1/2" OD x 1/2" ID x 9'7", A12A2A
	7769652-G1	Hinge Assembly: (for swing out mounting bracket) Hinge, door: Stanley, cat #195 with leaves assembled reversed, no swage, without mounting holes. (give all above information when re- ordering)
	7769631-G1	Pull-Latch: Corbin Cab Lock Co. #015642SD. Mounting bracket: (mounts on swing away hinge assembly.)

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES


PARTS LISTHEATER
MODEL 4KZ3A1

SYMBOL	G-E PART NO.	DESCRIPTION
HR901 S901		Heater Strip: sim to General Electric 51-344. Thermo-switch: adjusted to +5°F, sim to Fenwall Inc. A-7300.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

PARTS LISTLBI-3561A
DESK MATE STATION CABINET
7354211G4

SYMBOL	GE PART NO.	DESCRIPTION
	7354211P8	Door (fits either side).
	4035449P5	Bumper, door: rubber; sim to Atlantic India Rubber Co. 1165.
	5491682P22	Lock and Key: sim to Yale and Towne 7658. Key: Yale and Towne BF-10A.
	N529P38C	Plug (for cable knockouts at bottom of assembly).
	7354211P7	Mounting rack (2 drilled angles).

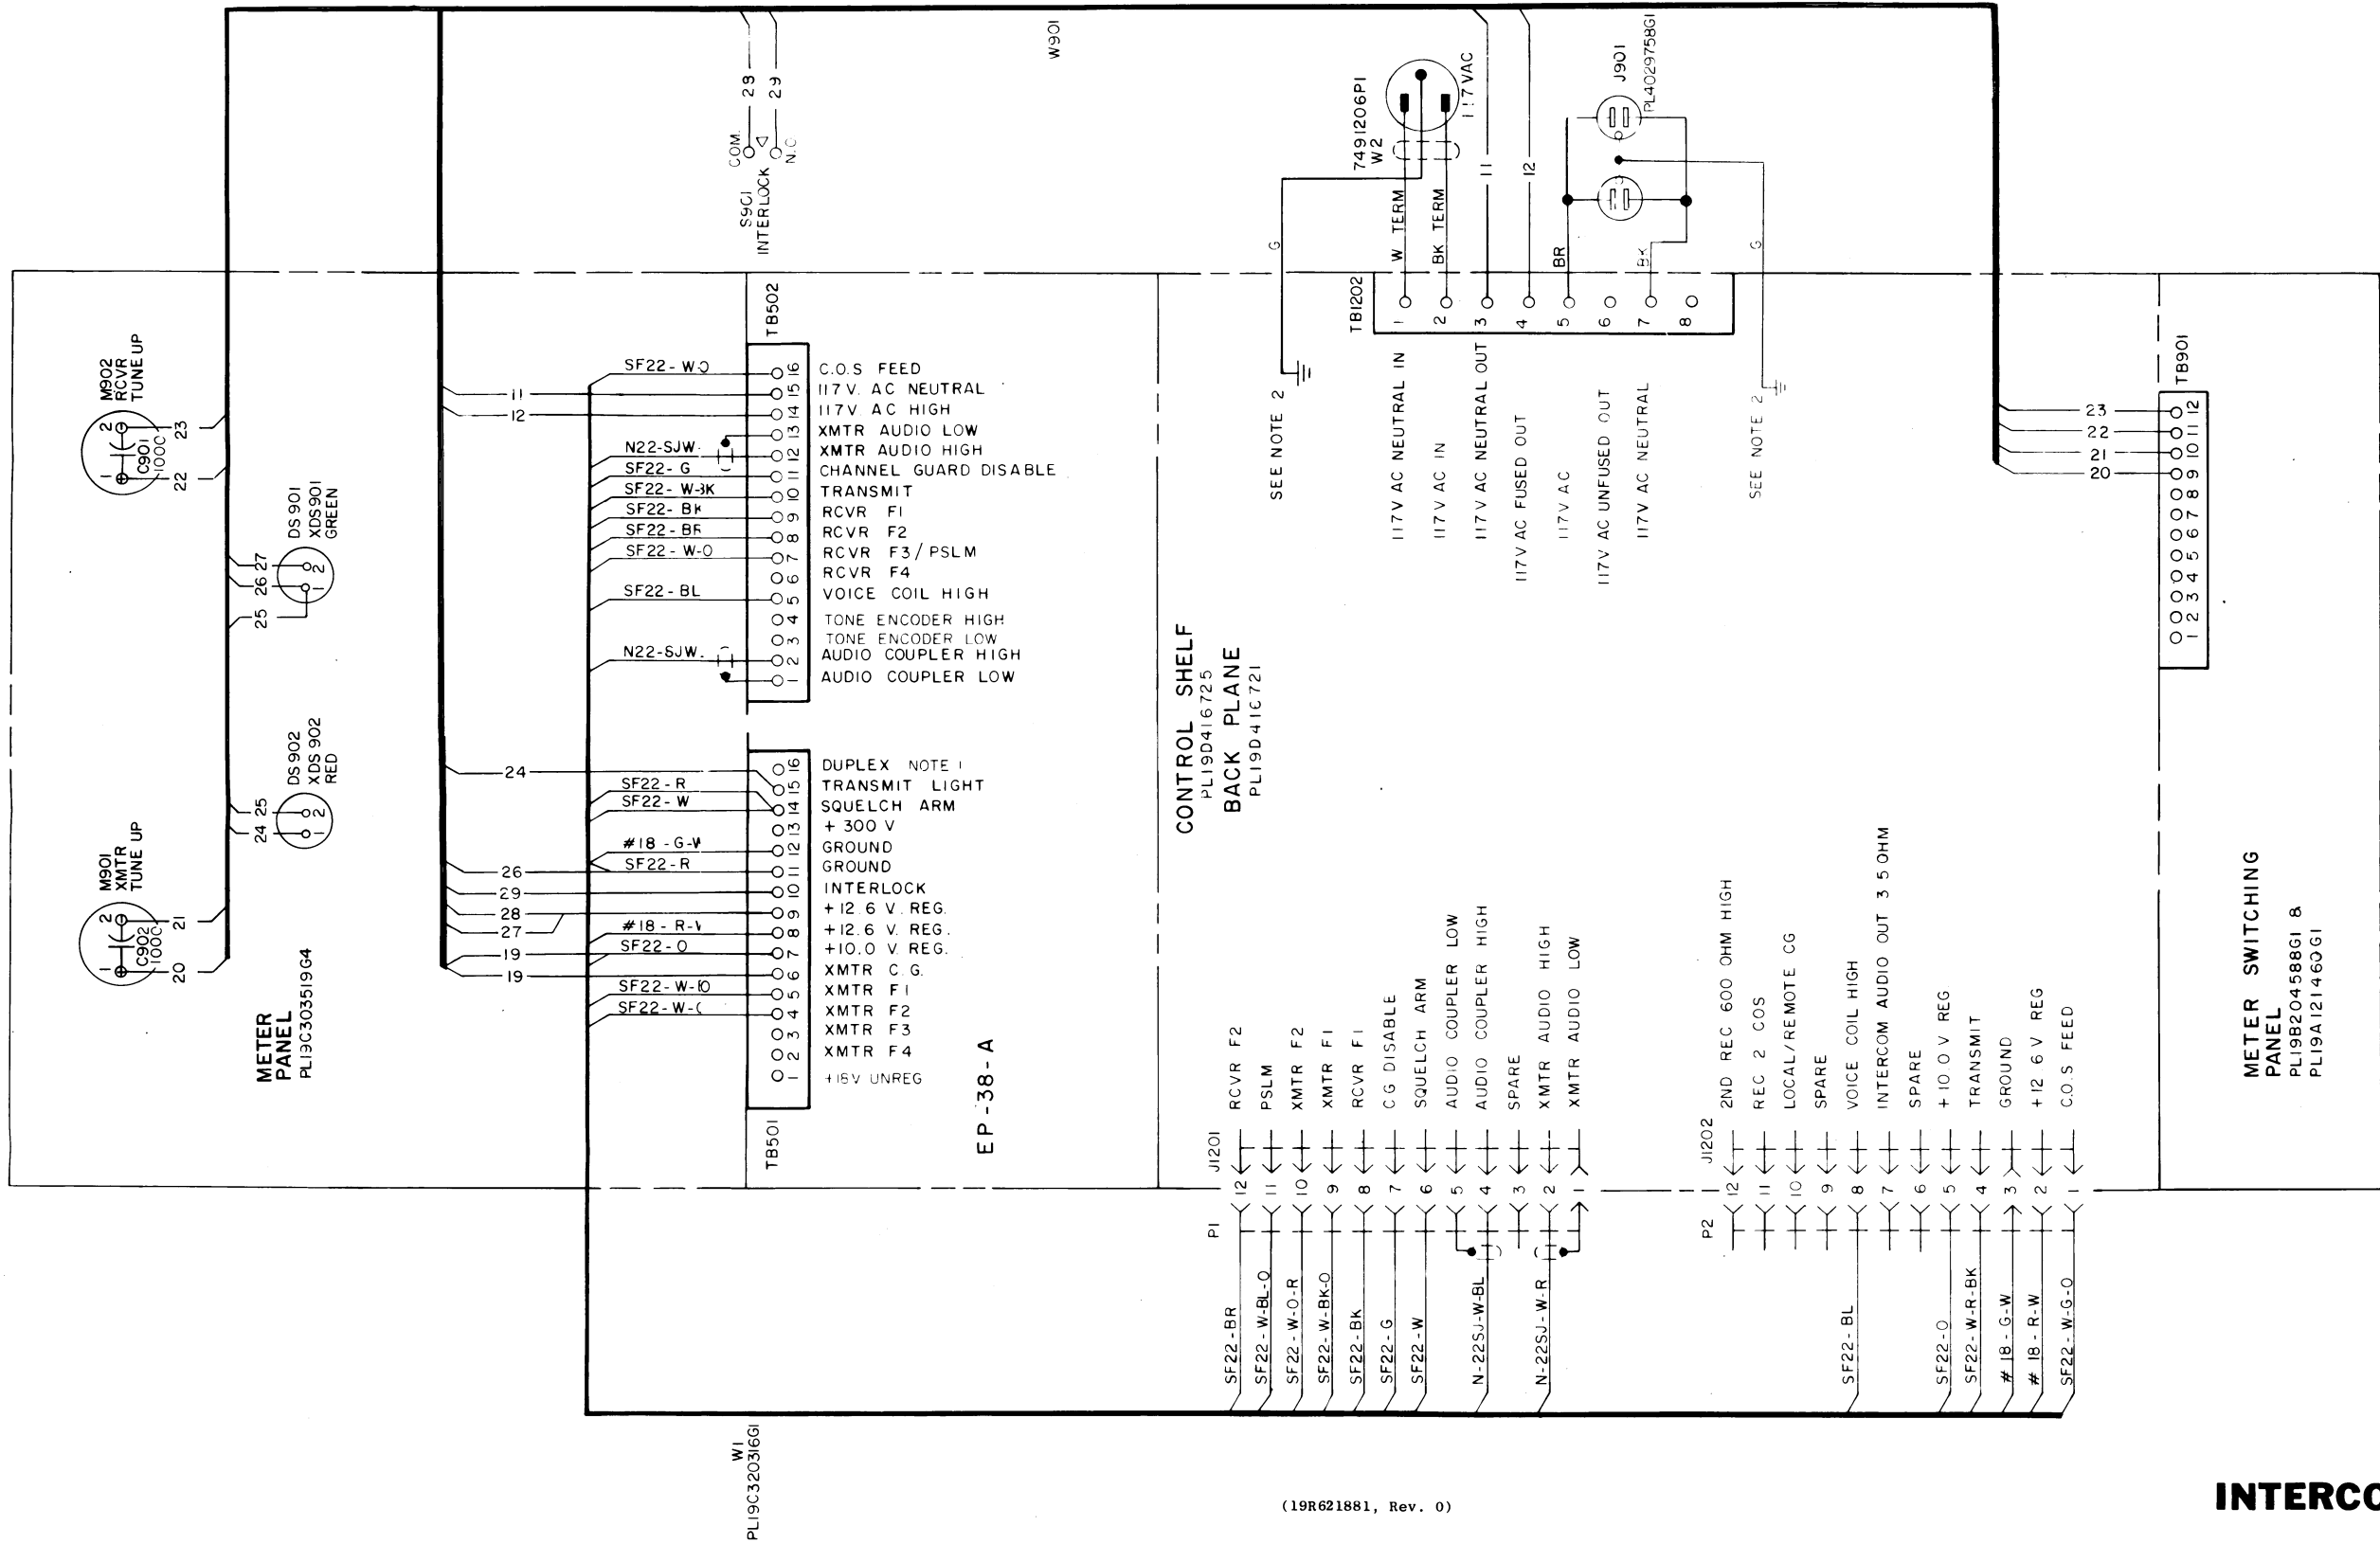

- NOTES:
1. MOVE THE W-R WIRE INSIDE 4EP38A FROM TB501-16 TO TB501-7 FOR REPEAT COMBINATIONS OR IF RECEIVER MUTE IS NOT DESIRED.
 2. CONNECT GREEN LEAD TO CONVENIENT CHASSIS MOUNTING SCREW.
 3. TO DISABLE RECEIVER CHANNEL GUARD REMOVE WIRE FROM TB502-11 ON 4EP38A.
 4. IN REMOTE/REPEAT COMBINATIONS WITH CHANNEL GUARD, LIFT SF22-G WIRE ON TB502-11 AND ADD JUMPER BETWEEN TB502-11 AND TB501-11. (JUMPER IS PART OF 19A12945GI KIT).
 5. WHEN TONE REMOTE SQUELCH OPTION IS PRESENT, REMOVE SF22-R WIRE BETWEEN TB501-11 AND TB501-14.

ALL RESISTORS ARE 1/2 WATT UNLESS OTHERWISE SPECIFIED AND RESISTOR VALUES IN OHMS UNLESS FOLLOWED BY K = 1,000 OHMS OR MEG = 1,000,000 OHMS. CAPACITOR VALUES IN PICOFARADS (EQUAL TO MICROFARADS) UNLESS FOLLOWED BY UF = MICROFARADS. INDUCTANCE VALUES IN MILLIHENRYS OR H = HENRYS.

INTERCONNECTION DIAGRAM

MASTR FLOOR-MOUNT DC/TONE
 REMOTE CONTROL STATION COMBINATION
 MEDIUM POWER

PARTS LIST

LBI-4520A
MEDIUM POWER FLOOR MODEL STATION CABINET
7668242G14

SYMBOL	GE PART NO.	DESCRIPTION
	7488490P4	Door handle: includes key LL-802; sim to Yale and Towne S1410S.
	5491682P19	Rim lock. (Used with door handle).
	19A115141P2	Ground lug.
	5493646G1	Instruction book holder.
		CABINET ASSEMBLY 19D402873G1
	5498454G1	Cabinet shell: approx 69 x 22 x 5/8 inches.
	5495572G1	Rear door.
	7774537P1	Angle, mounting.
	5495571G6	Front door.
	4031566P1	Rear door grille.
		ASSOCIATED ASSEMBLIES
		----- JACKS AND RECEPTACLES -----
J901	4029758G1	Duplex outlet, phen: polarized, 15 amps at 125 v.
		METER PANEL ASSEMBLY 19C303519G4
		----- CAPACITORS -----
C901 and C902	5494481P11	Ceramic disc: 1000 pf ±20%, 1000 VDCW; sim to RMC Type JF Discap.
		----- INDICATING DEVICES -----
	19C307037P19	Lamp, incandescent: 14 v: sim to GE 756.
		----- METERS -----
	5491869P11	Microammeter: -10/0/+50 µa, 3-1/2 inch; sim to GE Type DO-91.
		----- CABLES -----
		CABLE ASSEMBLY 19A129447G1
		----- SWITCHES -----
	19A115887P1	Push: 10 amps at 125/250 VAC; sim to Microswitch 2ACL.
	19B209260P102	Terminal, solderless: sim to AMP 40763. (Quantity 11).
	19B209268P110	Terminal, solderless: sim to AMP 41549. (Quantity 2).
	19B209268P101	Terminal, solderless: sim to AMP 42035-1. (Quantity 4).
		----- SOCKETS -----
	7141855P13	Lamp: green plastic lens; sim to Dialight 135.
XDS901	7141855P12	Lamp: red plastic lens; sim to Dialight 135.
		----- MISCELLANEOUS -----
	NP243463	Meter Panel, nameplate: etched aluminum.
	NP243528	Nameplate (GE).

SYMBOL	GE PART NO.	DESCRIPTION
W1		INTERCONNECTION CABLE 19C320316G1
	19B209288P20	Shell.
	5496809P17	Contact, pin: female, brass: sim to Molex Products 1381-T. (Quantity 15).
	5496809P18	Contact, pin: male, brass: sim to Molex Products 1380-T. (Quantity 2).
	19B209260P102	Terminal, solderless: sim to AMP 40763. (Quantity 5).
C1	19B209260P103	Terminal, solderless: sim to AMP 60495-1. (Quantity 13).
		LINE VOLTMETER 19A120042G5
		----- CAPACITORS -----
	3R81P102M	Ceramic disc: 1000 µf ±20%, 500 VDCW.
		----- METERS -----
M1	5491869P7	Voltmeter, AC: 0-150 VAC, 15,000 ohms ±10%, 100 ohms per volt movement, 3-1/2 inch; sim to GE Type DO-91.


PARTS LIST

LBI-4518

LBI-3558B
MILITARY MICROPHONE
MODEL 4EM25A10
(PL-10B209102-P1)
(SEE RC-1163)

SYMBOL	G-E PART NO.	DESCRIPTION
MECHANICAL PARTS		
MODEL 4EM25A10		
1		Cable clamp. Shure Brothers RP-16.
2		Switch. Shure Brothers RP-26.
3		Case (back) and mounting button: plastic. Shure Brothers RP-67.
4		Switch button: red plastic. Shure Brothers RP-25.
5		Spring. Shure Brothers RP-1.
6		Shield. Shure Brothers RP-23.
7		Magnetic controlled cartridge. Shure Brothers RP-13.
8		Case (front) plastic. (Part of item 3).
9		Cable and plug: approx 6 feet long. Shure Brothers RP-14.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES.

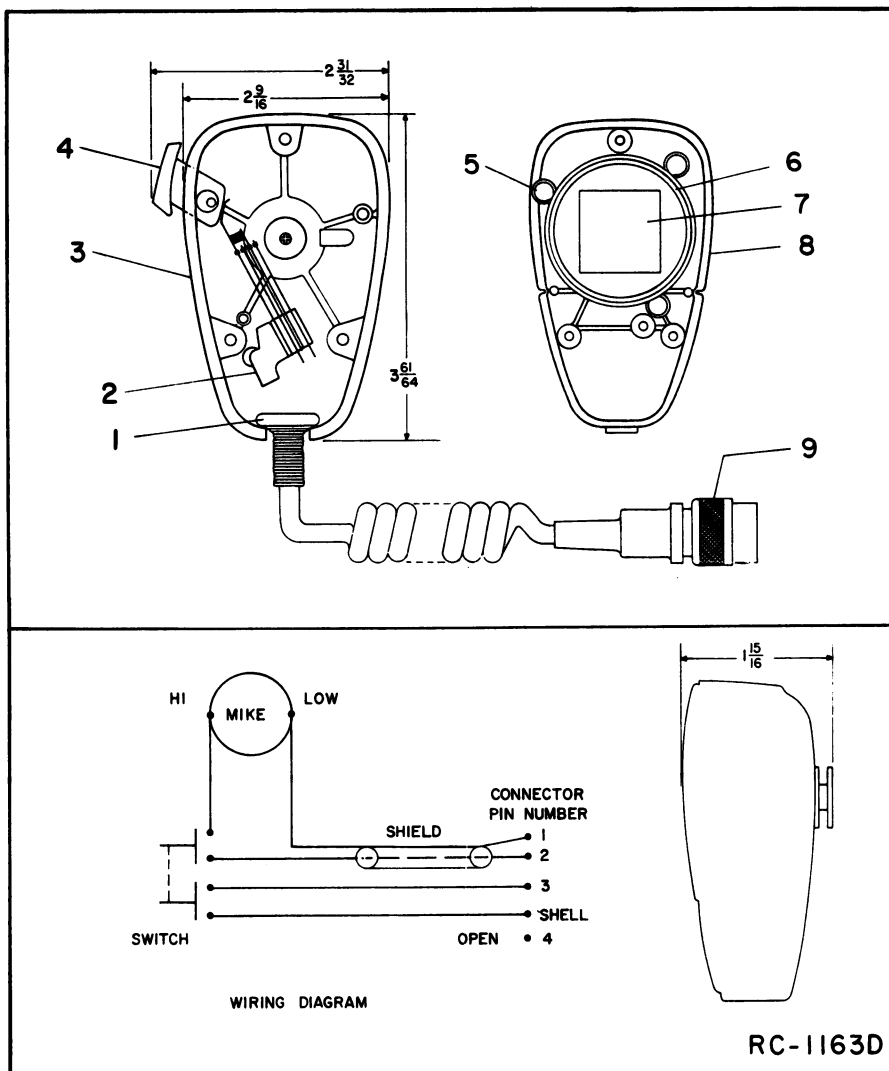


PARTS LIST

LBI-4427
STATION SPEAKER
19B219618G1


SYMBOL	GE PART NO.	DESCRIPTION
LS1	19A115964P1	----- LOUDSPEAKERS ----- Weatherproof, Permanent Magnet: 3-1/2 inch, 18 ohm $\pm 10\%$ imp at 1000 Hz, 15-19 ohms DC; sim to Oaktron S-9847.
	19B219615P1	----- MISCELLANEOUS ----- Cover.
	19B209260P103	Terminal, solderless: sim to AMP 60495-1.
	5490407P10	Grommet.
	19B201074P304	Tap screw: No. 6-32 x 1/4.

*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES


FRONT VIEW

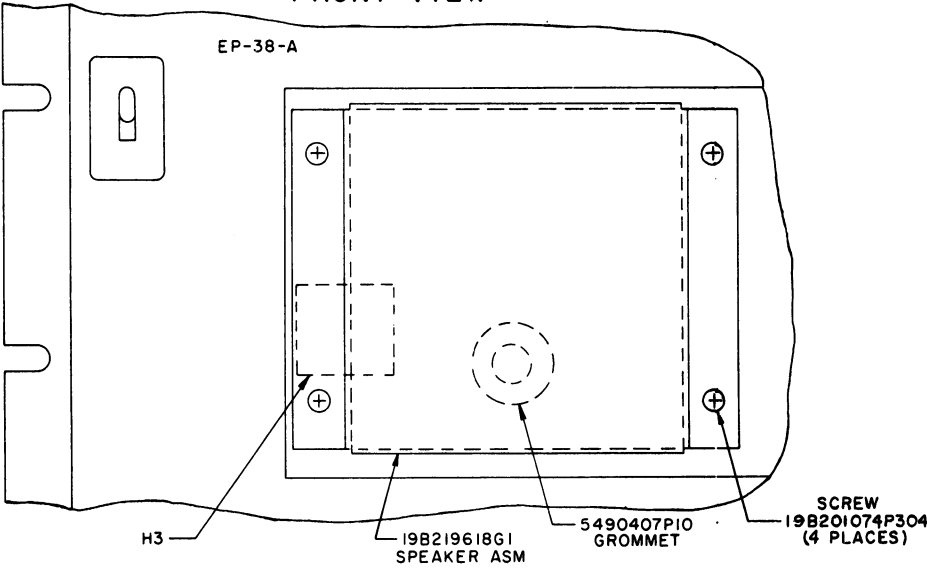

REAR VIEW

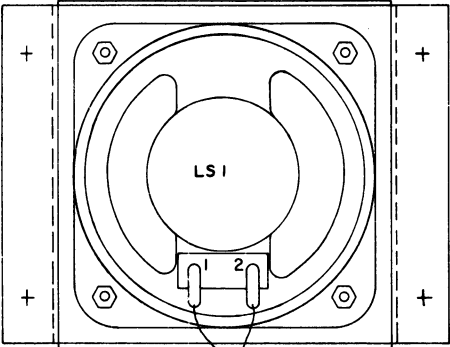

(19C320601, Rev. 1)

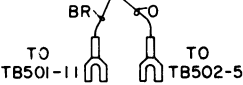

ORDERING SERVICE PARTS

Each component appearing on the schematic diagram is identified by a symbol number, to simplify locating it in the parts list. Each component is listed by symbol number, followed by its description and GE Part Number.

Service parts may be obtained from Authorized GE Communication Equipment Service Stations or through any GE Radio Communication Equipment Sales Office. When ordering a part, be sure to give:

1. GE Part Number for component
2. Description of part
3. Model number of equipment
4. Revision letter stamped on unit

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance.

Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, contact the nearest Radio Communication Equipment Sales Office of the General Electric Company.

MOBILE RADIO DEPARTMENT
GENERAL ELECTRIC COMPANY • LYNCHBURG, VIRGINIA 24502

GENERAL  ELECTRIC

DF-9032