


MASTR[®] *Personal Series*

PROGRESS LINE

PE MODELS

470-512 MHz, RECEIVER MODELS 4ER62B10-11

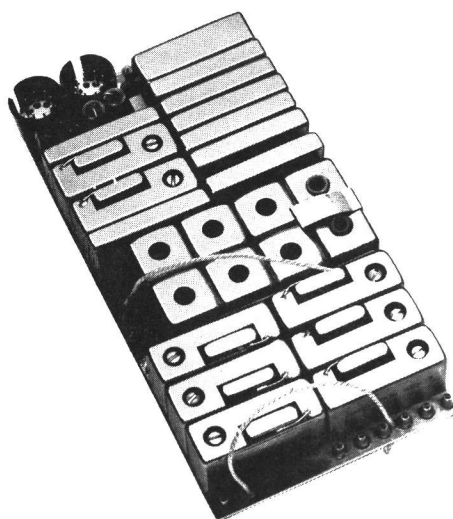

SPECIFICATIONS *

Type Number	ER-62-B
Audio Output (EIA)	500 milliwatts at less than 5% distortion
Channel Spacing	25 kHz
Sensitivity	
12-dB SINAD (EIA Method)	0.35 μ V
20-dB Quieting Method	0.5 μ V
Selectivity	
EIA Two-Signal	-70 dB
20-dB Quieting Method	-100 dB
Spurious Response	-60 dB
Intermodulation (EIA)	-65 dB
Audio Response	Within +2 and -10 dB of a standard 6-dB per octave de-emphasis curve from 300 to 3000 Hz (1000-Hz reference)
Modulation Acceptance	± 7 kHz
Squelch Sensitivity	
Critical Squelch	0.20 μ V
Maximum Squelch	Greater than 20-dB Quieting
Maximum Frequency Spacing	4.0 MHz no degradation

*These specifications are intended primarily for the use of the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

TABLE OF CONTENTS

SPECIFICATIONS	Cover
DESCRIPTION	1
CIRCUIT ANALYSIS	1
Oscillator Module	1
Compensator	2
Front End	3
Multiplier & Mixer	3
Crystal Filters	3
IF Amplifiers	3
Limiter & Discriminator	3
Audio Amplifier	5
Audio PA	5
Squelch	5
MOBILE DETECTOR APPLICATIONS	7
MAINTENANCE	
Alignment Procedure	9
Test Procedures	10
OUTLINE DIAGRAM	11
SCHEMATIC DIAGRAMS	
Front End	12
Receiver Board	13
PARTS LIST & PRODUCTION CHANGES	14
TROUBLESHOOTING PROCEDURE	15
ILLUSTRATIONS	
Figure 1 - Receiver Block Diagram	1
Figure 2 - Typical Oscillator Circuit	2
Figure 3 - Typical Compensator Circuit	3
Figure 4 - Typical IF Amplifier Circuit	4
Figure 5 - Typical Limiter Circuit	4
Figure 6 - Typical Audio Amplifier Circuit	5
Figure 7 - Typical Audio PA Circuit	6
Figure 8 - Typical Squelch Circuit	6

WARNING

No one should be permitted to handle any portion of the equipment that is supplied with high voltage; or to connect any external apparatus to the units while the units are supplied with power. KEEP AWAY FROM LIVE CIRCUITS.

DESCRIPTION

Receiver Models ER-62-B are single conversion, superheterodyne FM receivers for operation on the 470-512 MHz bands. The complete receiver mounts on a single printed wiring board, and utilizes both discrete components and Integrated Circuit modules. The application of each model receiver is shown in the following chart:

Model No.	Freq. Range	Number of Freq.	Tone Option
4ER62B10	470-512 MHz	3 to 8	
4ER62B11	470-512 MHz	3 to 8	Chan.Gd.

References to symbol numbers mentioned in the following text are found on the Schematic Diagram, Outline Diagram and Parts List (see Table of Contents). The typical

circuit diagrams used in the text are representative of the circuits used in the Integrated Circuit modules. A block diagram of the receiver is shown in Figure 1.

Supply voltage for the receiver includes a continuous regulated 5.4 Volts for the compensator module, a continuous 7.5 Volts for the squelch module, and a switched 7.5 Volts for the remaining receiver stages.

CIRCUIT ANALYSIS

OSCILLATOR MODULE

Oscillator Model 4EG28A13 (470-512 MHz) consists of a crystal-controlled Colpitts oscillator similar to the Oscillator Module used in the transmitter (see Figure 2). The entire oscillator is contained in a metal can with the receiver operating frequency printed on the top. The crystal frequency ranges from 22.38 to 23.5 MHz, and the crystal frequency is multiplied 21 times.

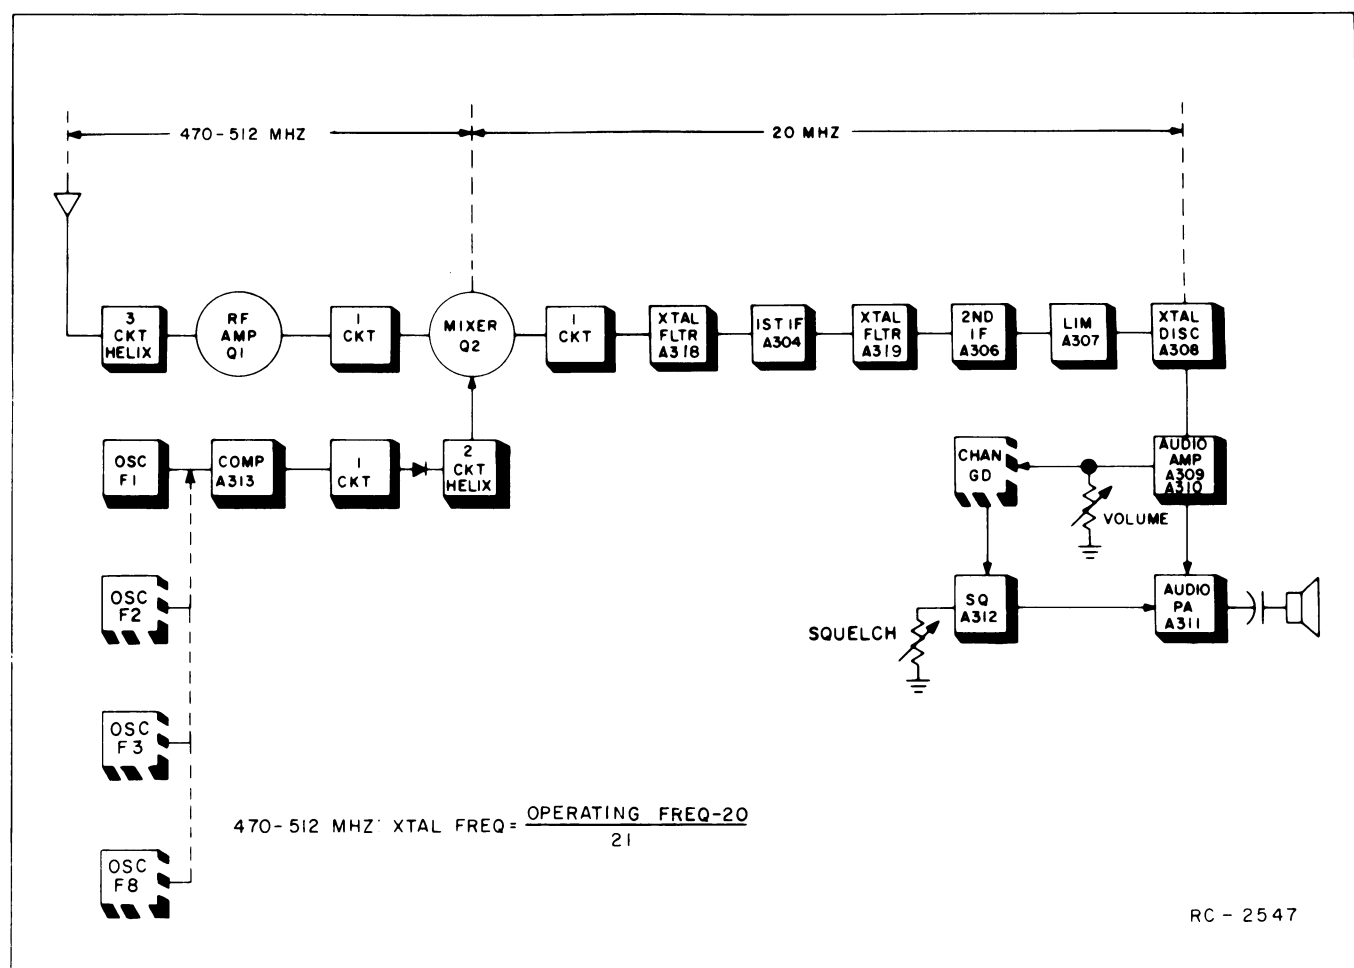


Figure 1 - Receiver Block Diagram

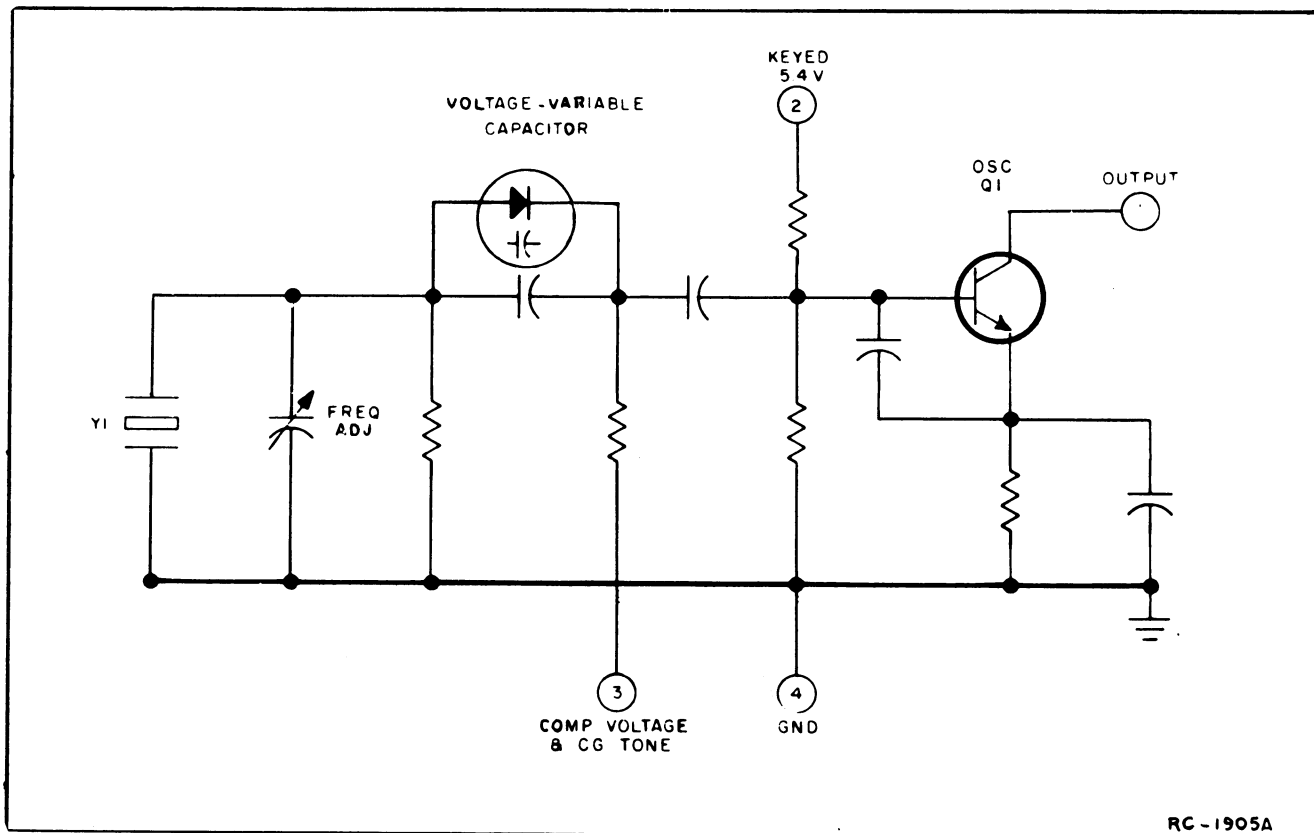


Figure 2 - Typical Oscillator Circuit

The oscillator frequency is temperature compensated to provide instant frequency compensation, with a frequency stability of $\pm 0.0002\%$ from 0°C to $+55^{\circ}\text{C}$ and $\pm 0.0005\%$ from -30°C to $+60^{\circ}\text{C}$. The temperature compensation network is contained in Compensator Module A313.

In single frequency receivers, a jumper from H10 to H11 on System Board A706, connects the oscillator module to the continuous 5.4 Volt supply voltage. The oscillator output is applied to Compensator A313.

In multi-frequency receivers, additional oscillator modules are mounted on the receiver board. The single-frequency supply jumper is removed, and the proper frequency is selected by connecting the 5.4 Volts to the selected oscillator module through frequency selector switch S1 on the control unit.

NOTE

All oscillator modules are individually compensated at the factory and cannot be repaired in the field. Any attempt to remove the oscillator cover will void the warranty.

COMPENSATOR A313

Compensator module A313 contains a buffer-amplifier stage, and the temperature compensation network for the oscillator (see Figure 3).

RF from the oscillator is coupled through a DC blocking capacitor to the base of Q1. The output of Q1 connects to multiplier coil L1 on the Multiplier assembly.

In the compensation network, the regulated 5.4 Volts at Pin 2 is applied to a thermistor-compensated voltage divider. The output at Pin 3 (2.35 Volts measured with a VTVM) is applied to Pin 3 and to the varactor in the Oscillator module. At temperatures below -10°C , the compensated voltage increases to maintain the proper voltage on the oscillator voltage-variable capacitor.

SERVICE NOTE

An abnormally low VTVM reading (or no reading) at Pin 3 may indicate a short or leakage path in the oscillator. This can be checked by unsoldering Pin 3 raising it off the printed board and taking another reading. If this reading is normal, the problem is in the Oscillator module. If the reading remains low (or zero), the problem is in the Compensator.

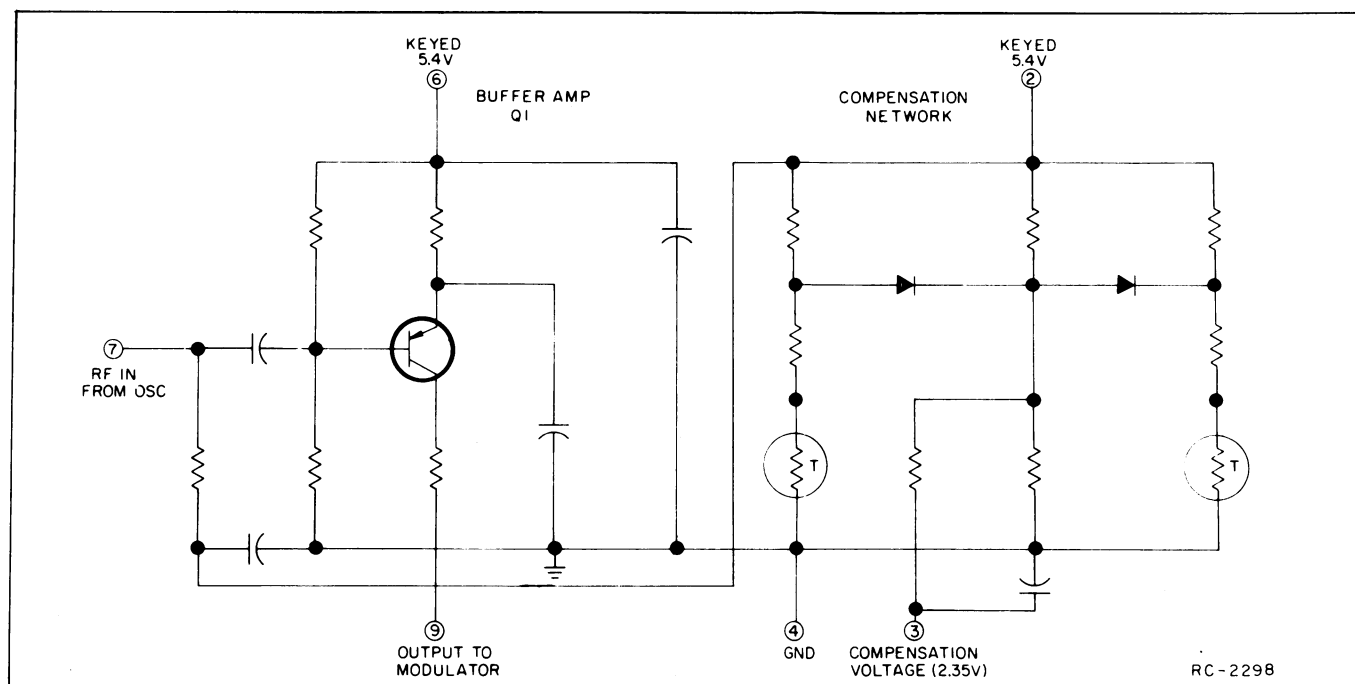


Figure 3 - Typical Compensator Circuit

FRONT END A326

The receiver Front End consists of three tuned helical resonators and an RF amplifier stage. The RF signal from the antenna is coupled through RF cable W301 to a tap on L21. The tap is positioned to provide the proper impedance match to the antenna. RF energy is coupled to the third coil (L23) through openings in the sides of the cans. RF is then coupled from a tap on L23 through C8 to the base of RF amplifier Q1. The output of Q1 is developed across tuned circuit C6 and L4, and is applied to the base of the mixer.

MULTIPLIER & MIXER

The output of the Compensator module is applied to L3 in the Multiplier assembly. L3 is tuned to three times the crystal frequency and is metered at the Mult Test Point (H8) on the receiver board. The output of L3 is applied to the anode of multiplier diode CR2. The two helical resonators following CR2 are tuned to seven times the first multiplier frequency for a total multiplication of 21 times. The output of helical resonators is direct-coupled to the emitter of the mixer transistor. In 470-512 MHz receivers, a low side injection frequency is used.

The RF signal from the RF amplifier is applied to the base of mixer Q2 and the high or low side injection voltage from the multiplier assembly is applied to the emitter. The resultant 20-MHz IF frequency is coupled through the mixer collector tank (L2 & C6)

to Crystal Filter A303. The collector tank also provides impedance matching to the crystal filter.

CRYSTAL FILTERS A303 & A305

Filter A303 follows the Multiplier-Mixer stage, and its output is applied to the 1st IF amplifier module. Filter A305 follows the IF Amplifier module. The two Crystal Filters provide the major selectivity for the receiver. A303 and A305 each provide a minimum of 40-45 dB stop-band attenuation.

IF AMPS A304 & A306

An IF Amplifier module follows each of the crystal filters, and contain the resistor-matching networks for the filters. A typical IF amplifier circuit is shown in Figure 4.

Each of the IF Amplifier modules consists of three R-C coupled amplifier stages that are DC series-connected for reduced drain. The two IF modules provide a total gain of approximately 85 dB.

LIMITER A307 & DISCRIMINATOR A308

Limiter A307 consists of three R-C coupled limiter stages that are DC series connected for reduced drain. The Limiter module also provides some gain. The output of the Limiter is applied to the discriminator. A typical Limiter circuit is shown in Figure 5.

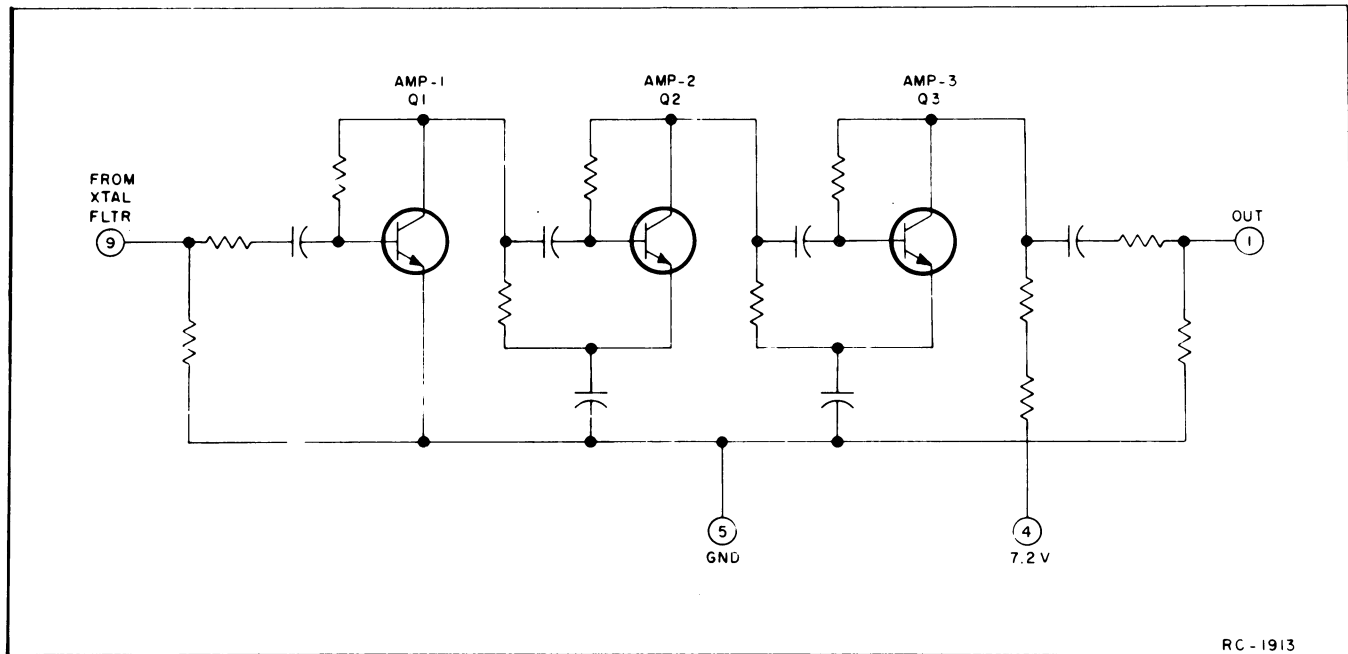


Figure 4 - Typical IF Amplifier Circuit

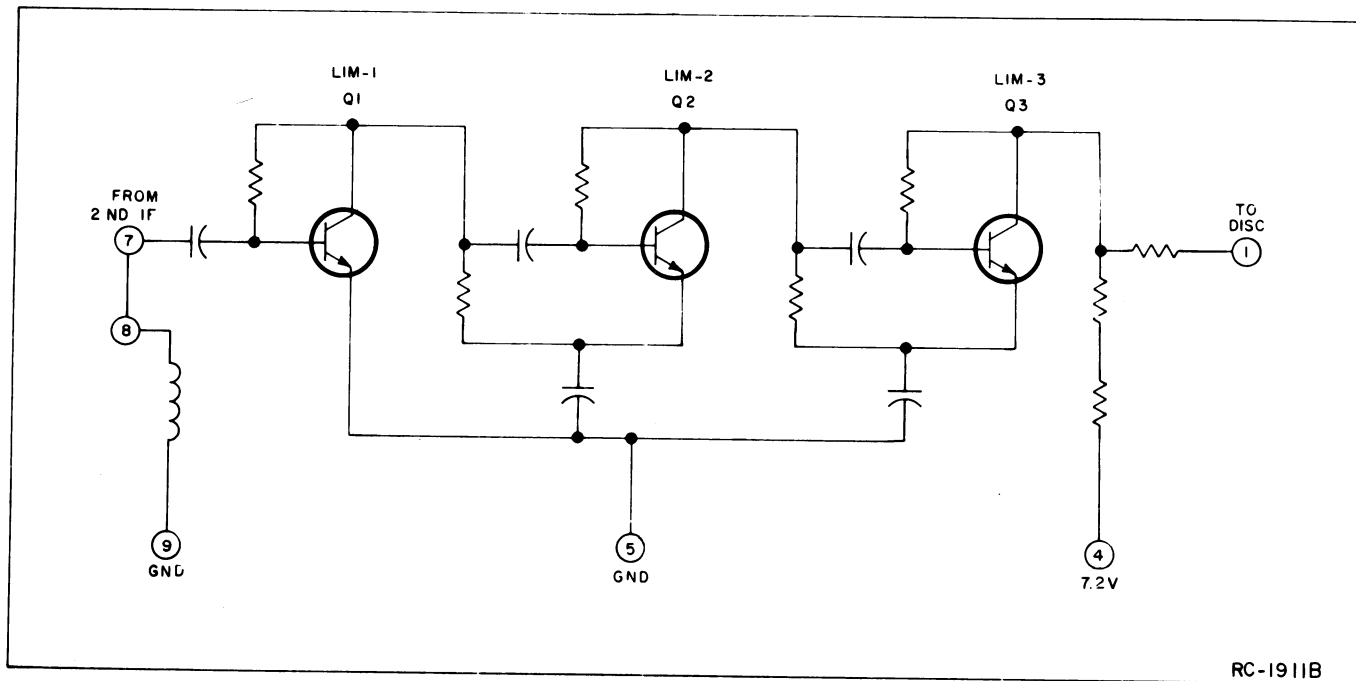


Figure 5 - Typical Limiter Circuit

The receiver uses a 20 MHz, fixed-tuned crystal discriminator (A308) to recover the audio from the IF signal. The Discriminator output is applied to the Audio Amplifier module.

AUDIO AMPLIFIER A309/A310

Audio and noise from the discriminator is applied to Audio Amplifier module A309 (A310 in Channel Guard applications). A typical audio amplifier circuit is shown in Figure 6.

Audio and noise is applied to the base of Q1. This stage operates as an emitter-follower for matching the impedance of the discriminator to the amplifier stage (Q2) and the VOLUME control. The output of Q1 connects from Pin 2 to the base of amplifier Q2 (Pin 4) through the VOLUME control. The output of Q1 is also applied to the input of the Squelch module.

Following amplifier Q2 is an active low-pass filter (Q3). Audio from the filter is connected from Pin 9 to the Audio PA module. In Audio Amplifier module A323, an active high-pass filter is added in series with the low-pass filter to provide the required tone frequency roll-off.

AUDIO PA A311

When the receiver is quieted by a signal, audio from the active filter is

connected from Pin 1 of Audio PA module A311, and then to the base of amplifier Q1. Q1 feeds the audio signal to the base of Q2, which drives PA transistors Q4 and Q5. A typical audio PA circuit is shown in Figure 7.

PA transistors Q4 and Q5 operate as complementary emitter-followers, providing a 500 milliwatt output into an 8-ohm load. Audio from Pin 9 is coupled through capacitor C302 on the receiver board to the loudspeaker.

SQUELCH A312

Noise from Audio Amplifier A309/A310 operates the squelch circuit. A typical squelch circuit is shown in Figure 8.

When no carrier is present in the receiver, the noise output of active high-pass filter Q1 is coupled to the base of noise amplifier Q2 through SQUELCH control R708. R708 controls the gain of the noise amplifier.

The output of noise amplifier Q2 is detected by diodes CR1 and CR2, and the resultant positive voltage turn off the PNP squelch switch Q3. In standard radios, the emitter of Q3 is connected to +7 Volts by means of a jumper from H1 to H2. When noise turns off Q3, its collector drops to ground potential. As the collector of Q3 is connected to the base of amplifier Q1 in the Audio PA module, turning off Q3 also

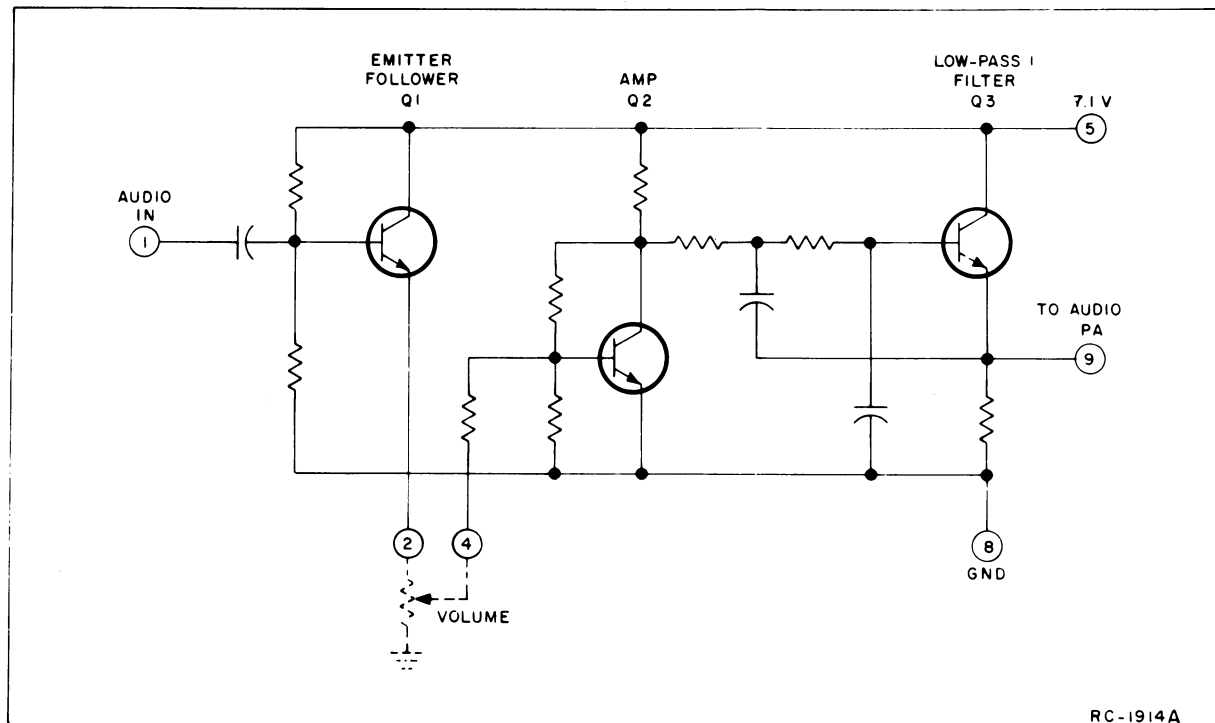


Figure 6 - Typical Audio Amplifier Circuit

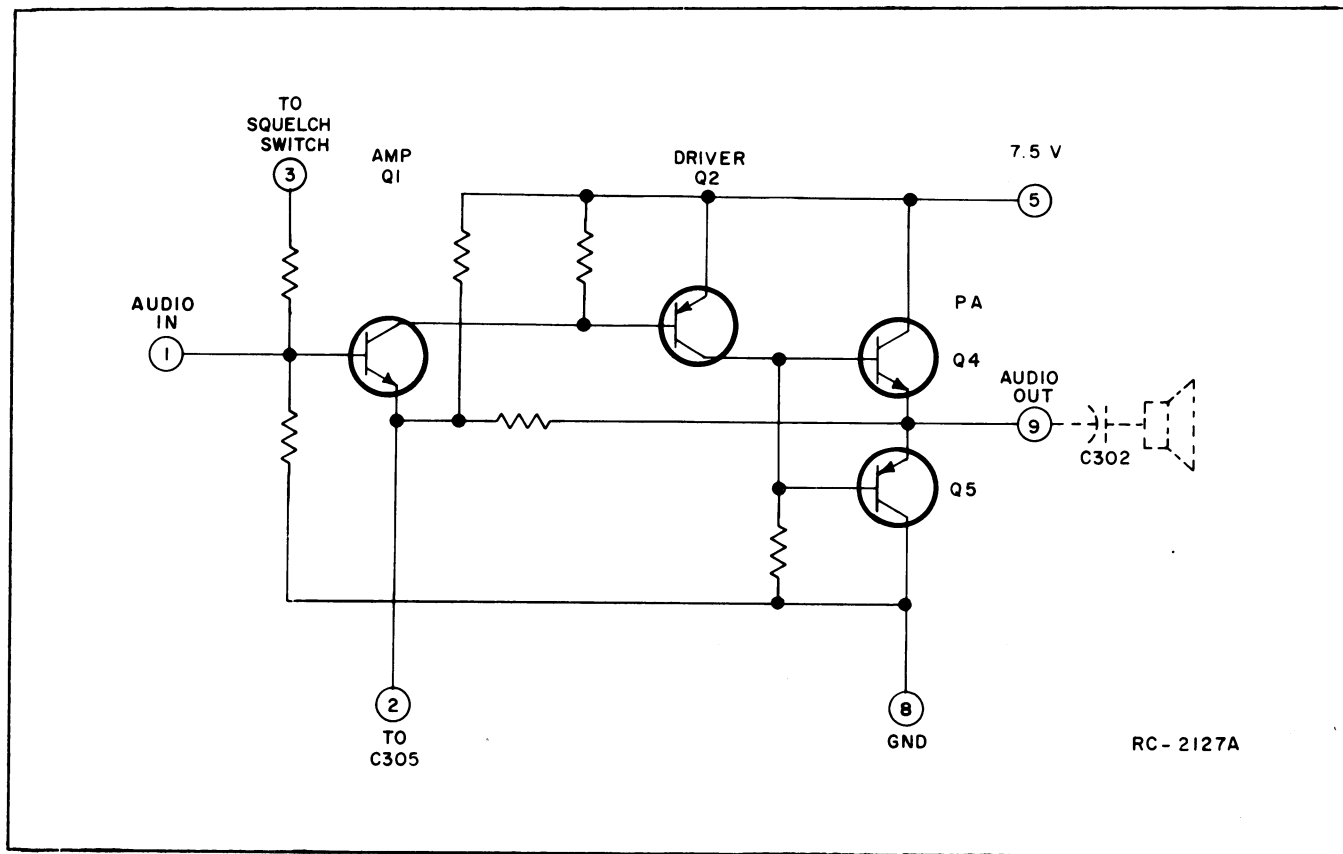


Figure 7 - Typical Audio PA Circuit

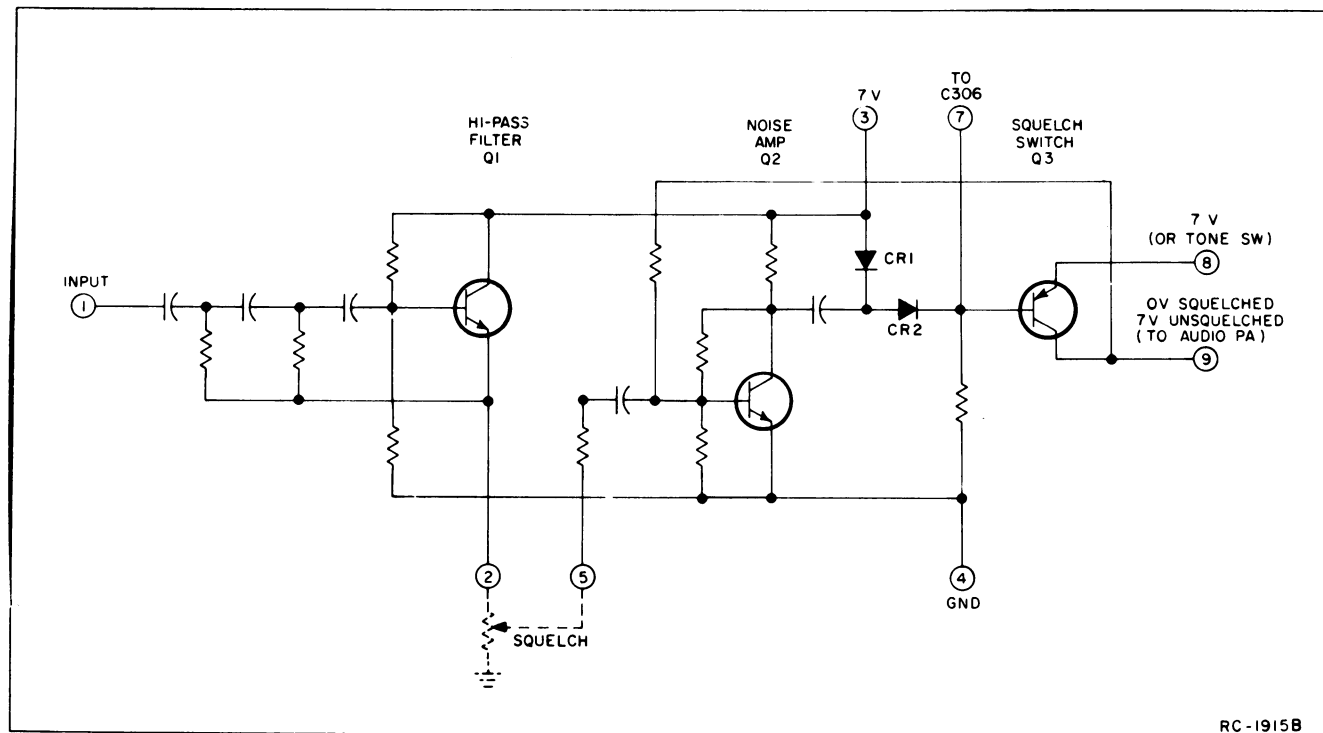


Figure 8 - Typical Squelch Circuit

the Audio PA module, turning off Q3 also turns off Q1, keeping the audio PA turned off.

When the receiver is quieted by a signal, squelch switch Q3 turns on. This applies +7 Volts to the base of amplifier Q1 in the Audio PA module, turning the Audio PA circuit on so that sound is heard at the speaker.

In tone decoder applications, the 7 Volt jumper from H1 to H2 is removed. The emitter of squelch switch Q3 is connected to 7.5 Volts by a DC switch on the decoder board.

An RF adaptor cable is available for connecting the receiver to a signal generator. Connecting the RF adaptor cable to J702 opens a set of contacts on the antenna strip line assembly. This disconnects the antenna and connects the receiver input to

J702-1. Connection to chassis ground is made at J702-4.

MOBILE DETECTOR APPLICATIONS


PE receiver type ER62B is used as a Mobile Detector board in Vehicular Repeater applications. Detector board 19D417493G4 is similar to the PE receiver board except that PA module A311, C302, C305, C345 and R301 are not used. Also, R306 (3R151P103J) is added.

The Mobile Detector monitors the mobile radio transmit frequencies to determine if a second vehicular repeater is repeating portable-to-base station transmissions. If a portable-to-base transmission is in progress, the mobile detector prevents the Vehicular Repeater from becoming the priority unit.


GENERAL ELECTRIC COMPANY • MOBILE COMMUNICATIONS DIVISION
WORLD HEADQUARTERS • LYNCHBURG, VIRGINIA 24502 U.S.A.

GENERAL  ELECTRIC*
U.S.A.

SOLDER SIDE

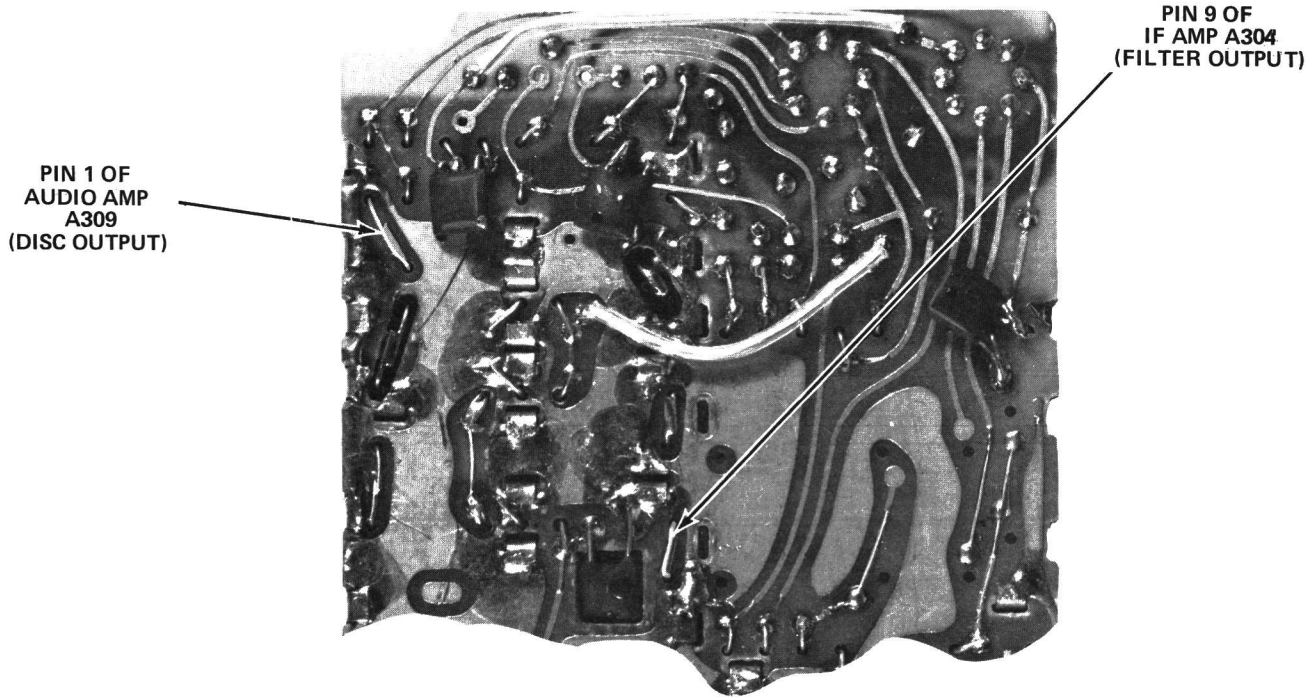

COMPONENT SIDE

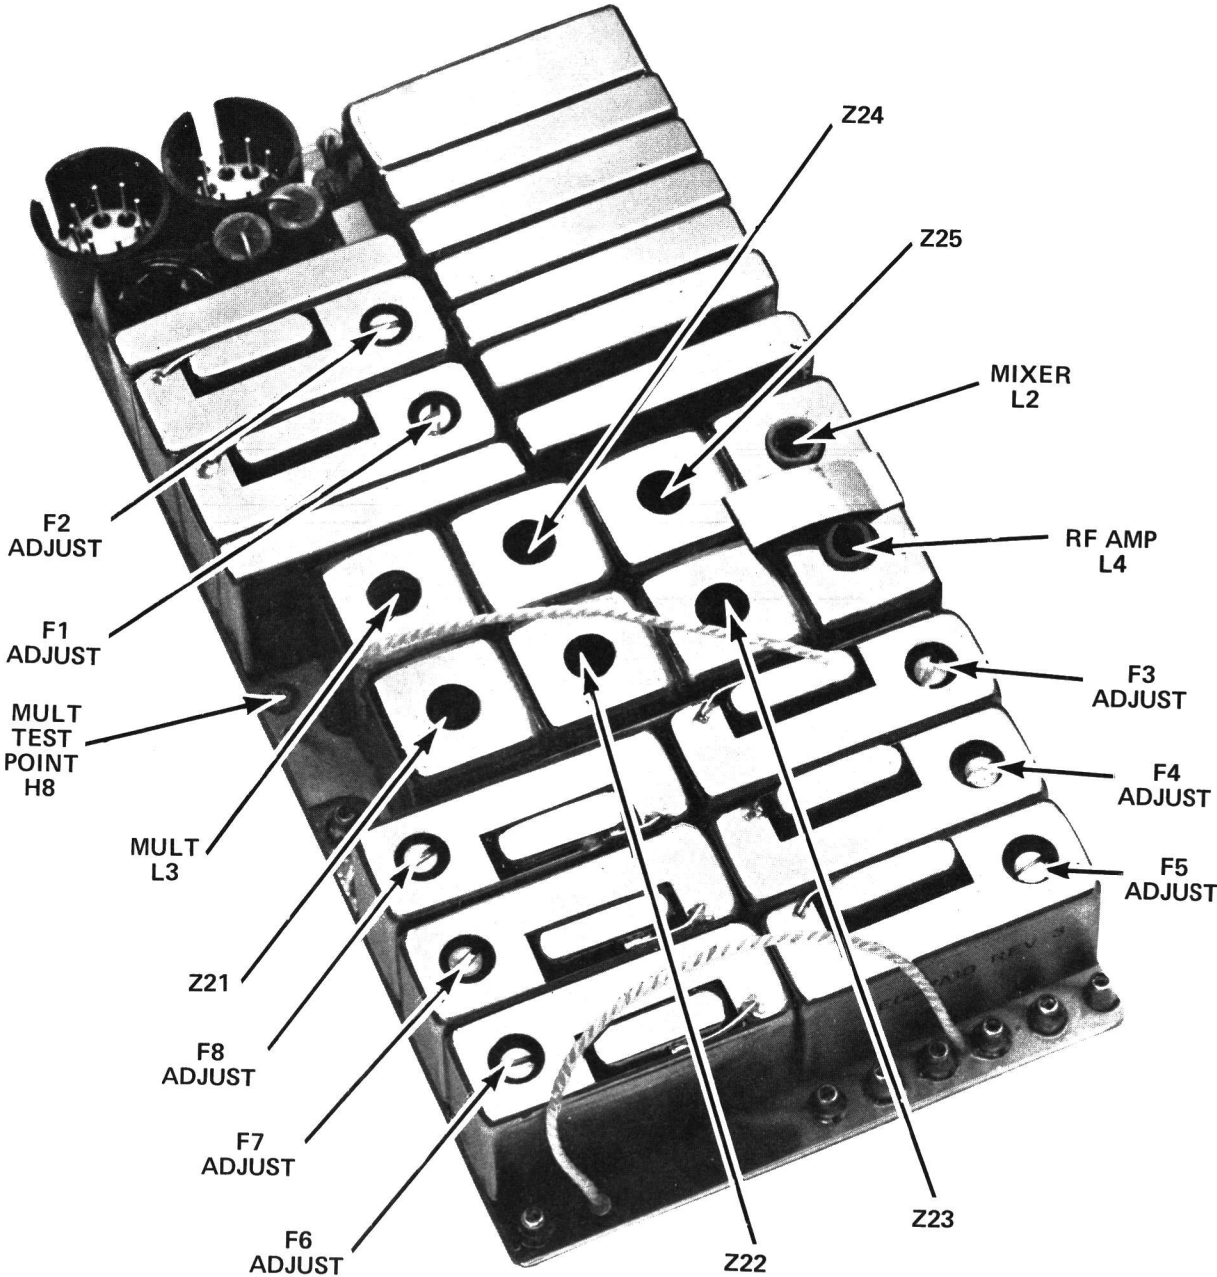

RECEIVER ALIGNMENT

EQUIPMENT

1. A 20-MHz signal source (GE IF Generator Model 4EX9A10 or equivalent) and a 470-512 MHz source connected to Antenna Switch J702 by Receiver Test Cable 19C317633G1.
2. GE Test Set Model 4EX3A11 or 4EX8K11 or voltmeter with equivalent sensitivity.
3. GE Test Amplifier Model 4EX16A10 and RF probe 19C311370G1, or equivalent RF voltmeter.
4. Distortion Analyzer or AC-VTVM.

PRELIMINARY CHECKS AND ADJUSTMENTS

1. In multi-frequency receivers where the maximum frequency spacing is less than one MHz, align the receiver of the F1 channel. Where the frequency spacing is more than one MHz, align the receiver on the center frequency.
2. Set the slugs in Z21 thru Z25 to the bottom of the coil form for frequencies in the low end of the band. Set the slugs near the top of the coil form for frequencies near the high end of the band.
3. Set the slug in RF AMP L4 to the top of the coil form for frequencies in the low end of the band, and near the bottom of the coil form for frequencies near the high end of the band.
4. Connect the negative lead of the DC Test Set to the Mult Test Point (H8), and the positive lead to ground. Connect the Distortion Analyzer or AC-VTVM across the speaker leads.

ALIGNMENT PROCEDURE

Step No.	Tuning Control	Procedure
1.	MULT L3	Adjust L3 for maximum meter reading.
2.	Z24 and Z25	Adjust Z24 and then Z25 for slight change in meter reading.
3.	Z21 thru Z23 and RF Amp L4	Apply an on-frequency signal to J702 and adjust Z21, Z22, Z23, and L4 for best quieting sensitivity.
4.	Mixer L2	Apply an on-frequency signal as above. With the RF probe on Pin 9 of IF Amp A304, tune L2 for maximum meter reading.
5.	MULT L3 Z24 and Z25	De-tune L3. Next, increase the on-frequency input signal and tune Z24 and Z25 for best quieting sensitivity. Now re-adjust L3 for maximum meter reading.
FREQUENCY ADJUSTMENT		
6.		While applying an on-frequency signal to J702, loosely couple a 20-MHz signal to the Mixer. Adjust the Oscillator trimmer(s) for a zero beat frequency between the two signals. Alternate Method: Apply a strong 20 MHz signal to the Mixer. Measure the output of the Discriminator with a DC-VTVM at Pin 1 of A309/A310. Note the reading. Next, remove the 20-MHz signal and apply a strong on-frequency signal to J702. Then tune the oscillator trimmer(s) for the meter reading obtained at Pin 1 of A309/A310.

ALIGNMENT PROCEDURE

470—512 MHz RECEIVER
MODELS 4ER62B10-11

TEST PROCEDURES

These Test Procedures are designed to help you to service a receiver that is operating --- but not properly. The problems encountered could be low power, poor sensitivity, distortion, and low gain. By following the sequence of test steps starting with Step 1, the defect can be quickly localized.


Once the defective stage is pin-pointed, refer to the "Service Check" listed to correct the problem. Additional corrective measures are included in the Troubleshooting Procedure. Before starting with the Receiver Test Procedures, be sure the receiver is tuned and aligned to the proper operating frequency.

TEST EQUIPMENT REQUIRED

- Distortion Analyzer similar to: Heath IM-12
- Signal Generator similar to: Measurements M-803
- 6-dB attenuation pad
- Test Adaptor Model 4EX12A10
- RF Adaptor Cable 19C317633G1

PRELIMINARY ADJUSTMENTS

1. Connect the test equipment to the receiver as shown for all steps of the receiver Test Procedure.
2. Turn the SQUELCH control fully clockwise for all steps of the Test Procedure.
3. Turn on all of the equipment and let it warm up for 20 minutes.

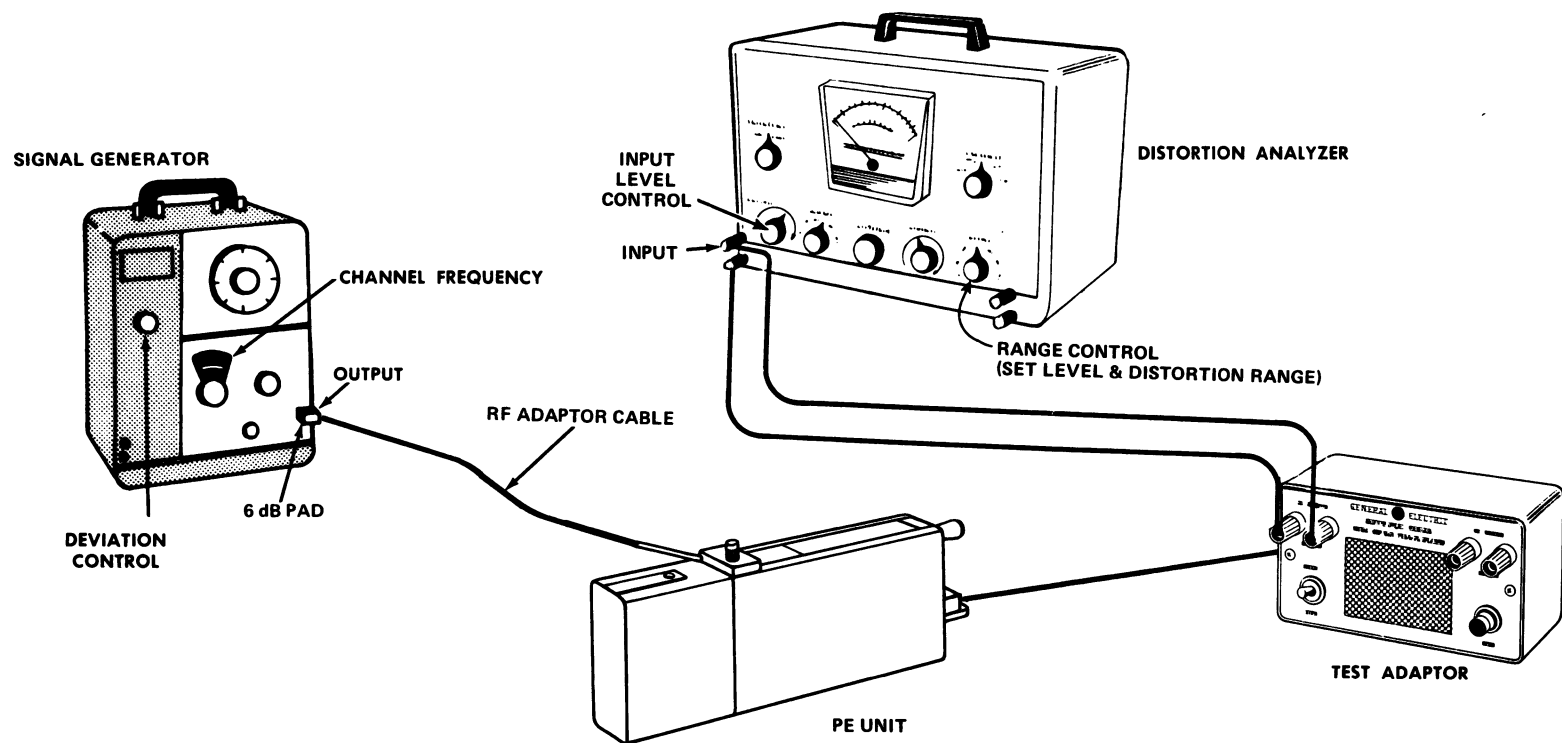

STEP 1

AUDIO POWER OUTPUT AND DISTORTION TEST PROCEDURE

Measure Audio Power output as follows:

- A. Connect a 1,000-microvolt test signal modulated by 1,000 hertz ± 3.0 kHz deviation to the Antenna Switch J702.
- B. Set the Volume Control for a 500 milliwatt output (2 volts RMS).
- C. Make distortion measurements according to manufacturer's instructions. Reading should be less than 5%-10% (5% is typical). If the receiver sensitivity is to be measured, leave all controls and equipment as they are.

SERVICE CHECK

If the distortion is more than 5%, or maximum audio output is less than 0.5 watt, make the following checks:

- D. Battery voltage---low voltage will cause distortion. (Refer to Receiver Schematic Diagram for voltages.)
- E. Audio Gain (Refer to Receiver Troubleshooting Procedure).

STEP 2

USABLE SENSITIVITY (12 dB SINAD) TEST PROCEDURE

If STEP 1 checks out properly, measure the receiver sensitivity as follows:

- A. Apply a 1000-microvolt, on-frequency signal modulated by 1000 Hz with 3.0-kHz deviation to J702.
- B. Place the RANGE switch on the Distortion Analyzer in the 200 to 2000-Hz distortion range position (1000-Hz filter in the circuit). Tune the filter for minimum reading or null on the lowest possible scale (100%, 30%, etc.).
- C. Place the RANGE switch to the SET LEVEL position (filter out of the circuit) and adjust the input LEVEL control for a +2 dB reading on a mid range (30%).
- D. While reducing the signal generator output, switch the RANGE control from SET LEVEL to the distortion range until a 12-dB difference (+2 dB to -10 dB) is obtained between the SET LEVEL and distortion range positions (filter out and filter in).

- E. The 12-dB difference (Signal plus Noise and Distortion to noise plus distortion ratio) is the "usable" sensitivity level. The sensitivity should be less than rated 12 dB SINAD specification with an audio output of at least 250 milliwatts.
- F. Leave all controls as they are and all equipment connected if the Modulation Acceptance Bandwidth test is to be performed.

SERVICE CHECK

If the sensitivity level is more than rated 12 dB SINAD, check the alignment of the RF stages as directed in the Alignment Procedure, and make the gain measurements as shown on the Troubleshooting Procedure.

STEP 3

MODULATION ACCEPTANCE BANDWIDTH (IF BANDWIDTH)

TEST PROCEDURE

If STEPS 1 and 2 check out properly measure the bandwidth as follows:

- A. Set the Signal Generator output for twice the microvolt reading obtained in the 12-dB SINAD measurement.
- B. Set the RANGE control on the Distortion Analyzer in the SET LEVEL position (1000-Hz filter out of the circuit), and adjust the input LEVEL control for a +2 dB reading on the 30% range.
- C. While increasing the deviation of the Signal Generator, switch the RANGE control from SET LEVEL to distortion range until a 12-dB difference is obtained between the SET LEVEL and distortion range readings (from +2 dB to -10 dB).
- D. The deviation control reading for the 12-dB difference is the Modulation Acceptance Bandwidth of the receiver. It should be more than ± 7 kHz (but less than ± 9 kHz).


SERVICE CHECK

If the Modulation Acceptance Bandwidth test does not indicate the proper width, make gain measurements as shown on the Receiver Troubleshooting Procedure.


MOBILE DETECTOR APPLICATIONS

	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8
J301	5.4 V	AUDIO OUT	SWITCHED 7.5V	SQ ARM	VOL ARM	SQ HI	VOL HI	GND
J302		FREQ 1	FREQ 2			7.5V	TONE SWITCH	GND

COMPONENT SIDE

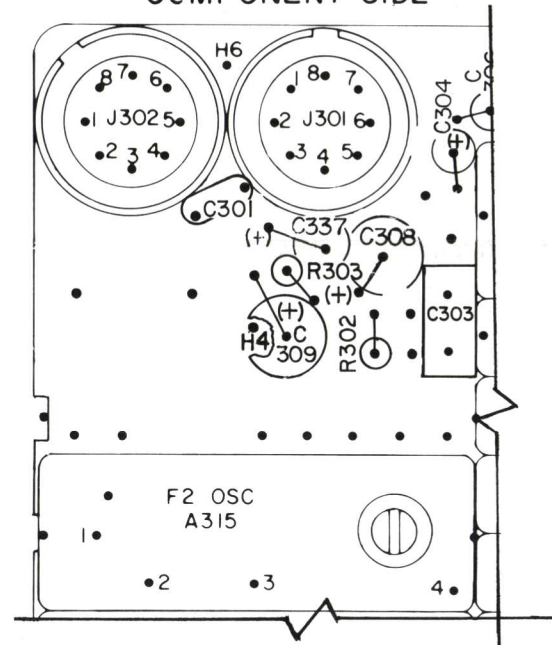


SOLDER SIDE

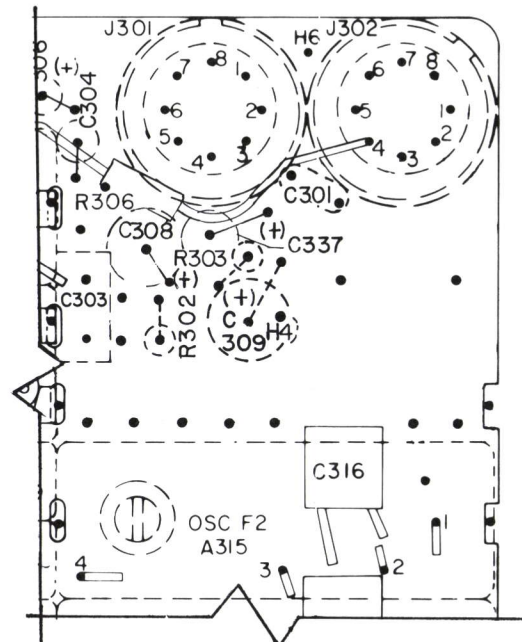


(19D430367, Rev. 1)

COMPONENT SIDE

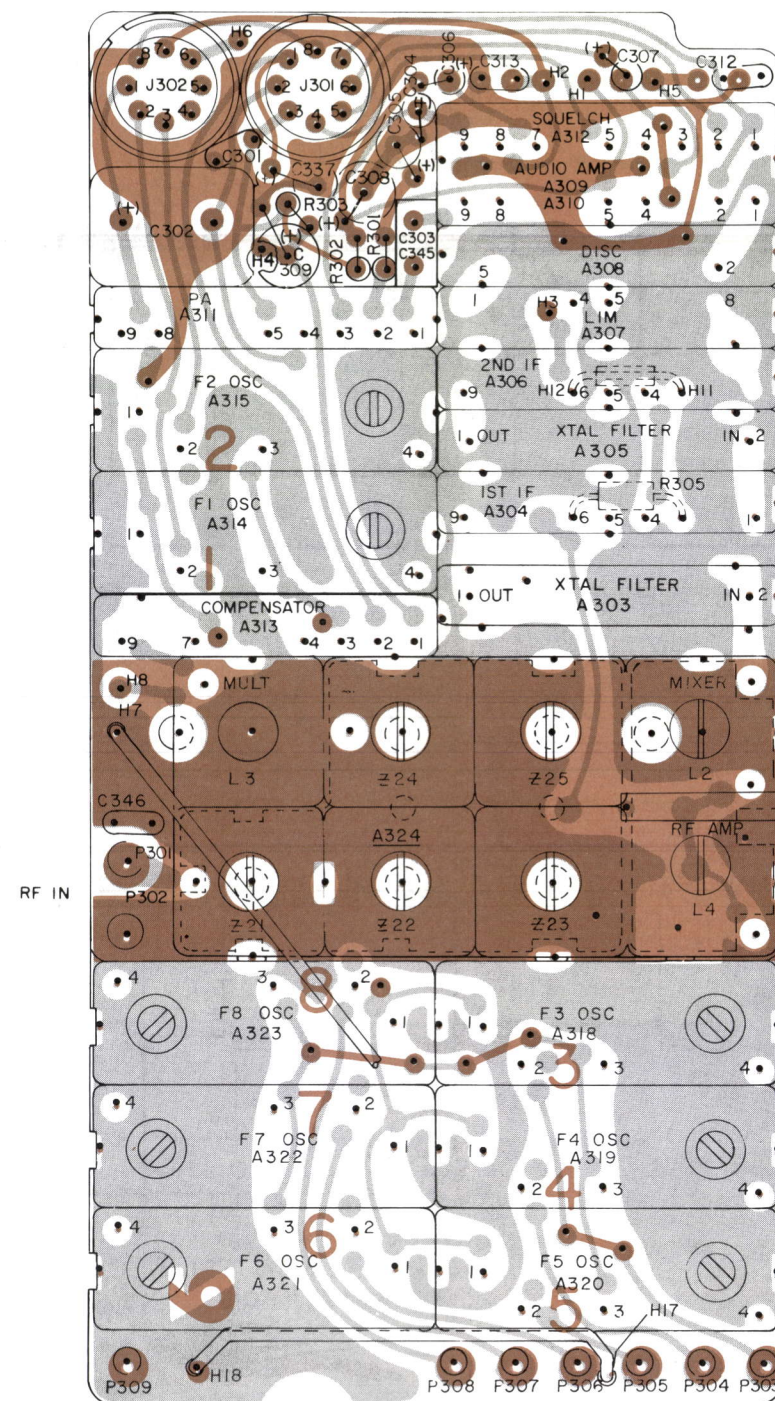


(19D417802, Rev. 7)
(19D416896, Sh. 2, Rev. 7)
(19D416896, Sh. 3, Rev. 6)

SOLDER SIDE

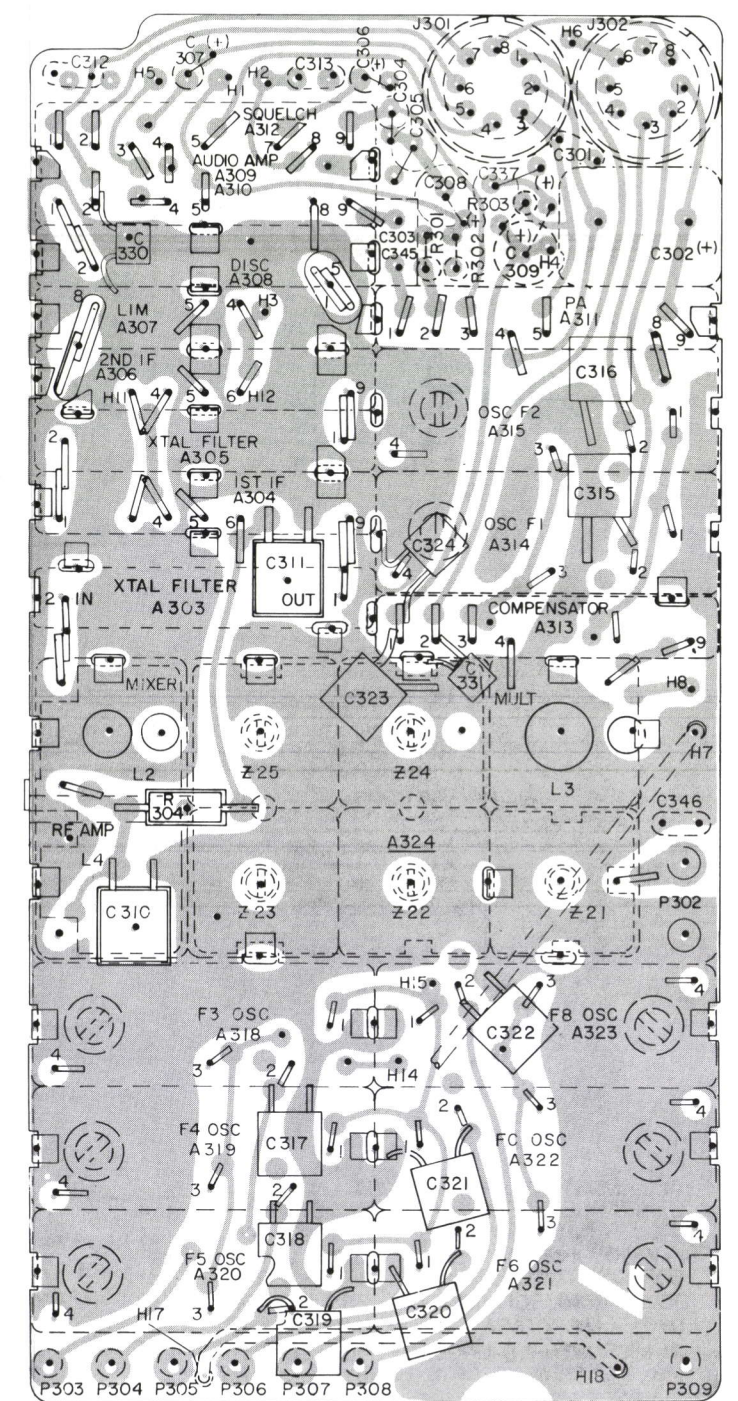


(19D417802, Rev. 7)
(19D416896, Sh. 2, Rev. 7)

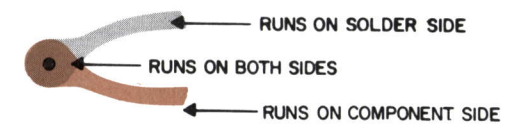

OUTLINE DIAGRAM


470—512 MHz RECEIVER
MODELS 4ER62B10-11

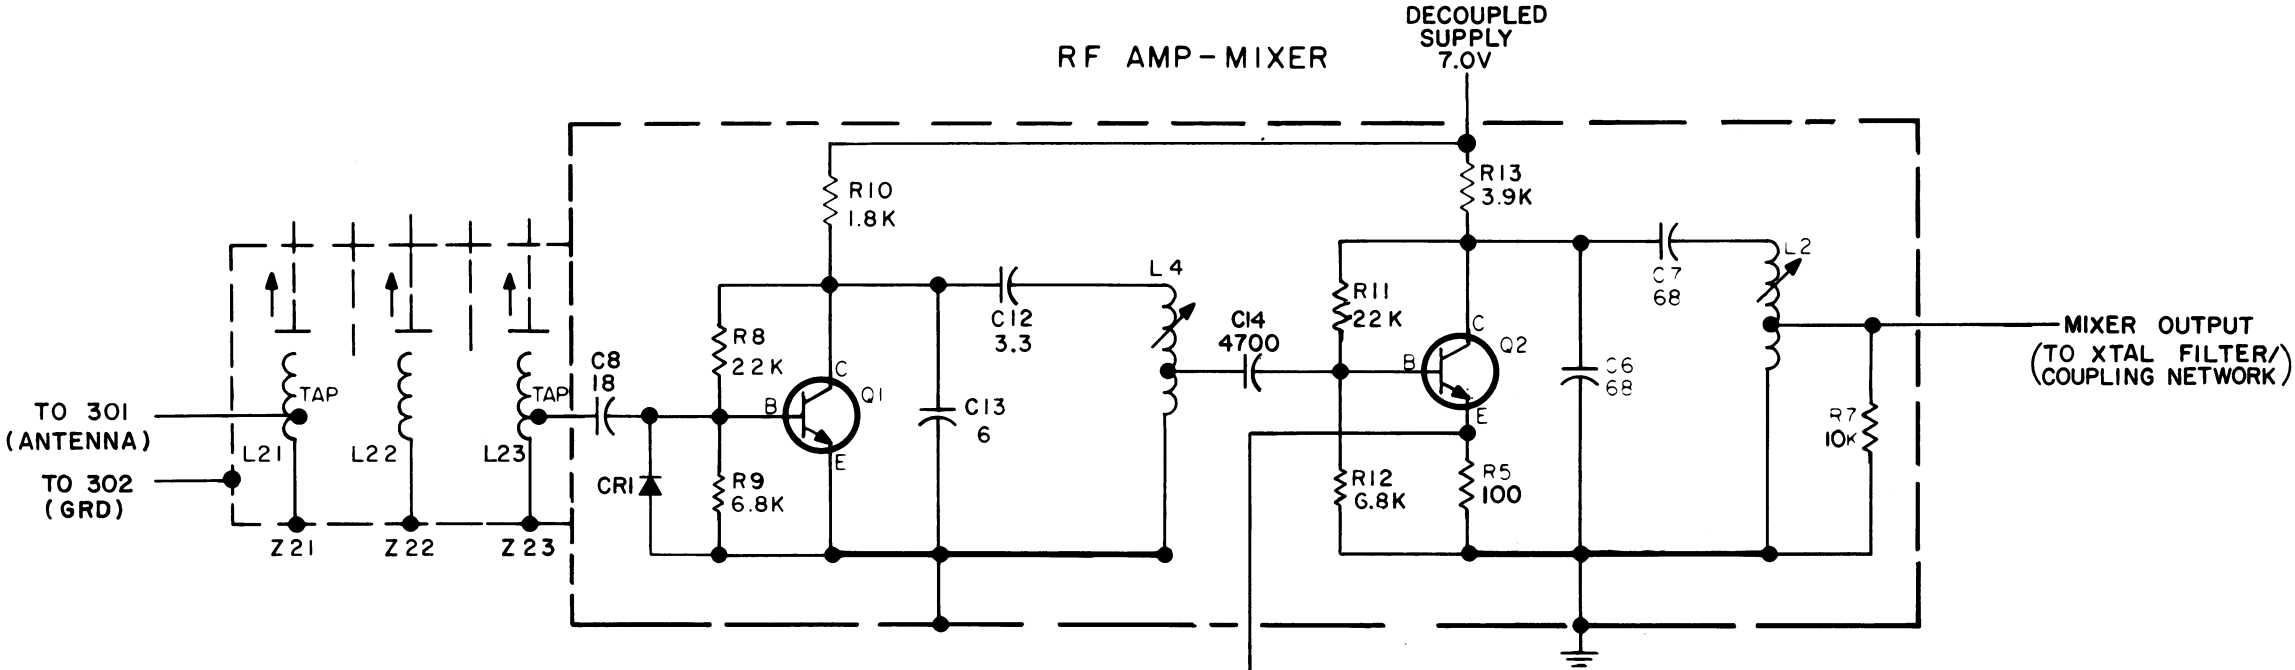

SEE APPLICABLE PRODUCTION CHANGE SHEETS IN INSTRUCTION BOOK SECTION DEALING WITH THIS UNIT, FOR DESCRIPTION OF CHANGES UNDER EACH REVISION LETTER.

THIS ELEM DIAG APPLIES TO

MODEL NO	REV LETTER
19C317295G7	D

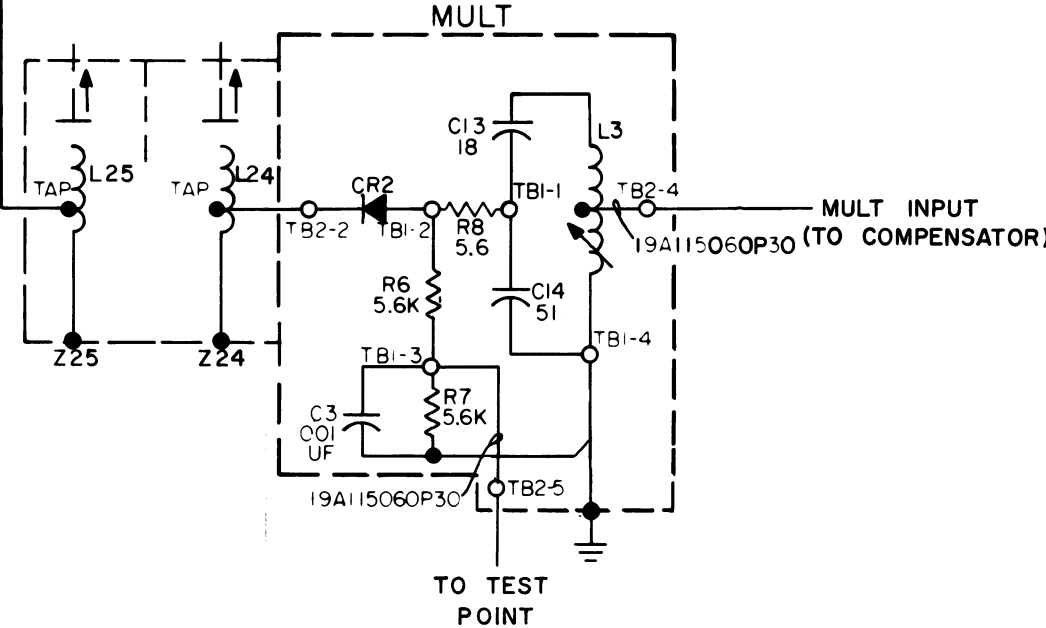

ALL RESISTORS ARE 1/8 WATT UNLESS OTHERWISE SPECIFIED AND RESISTOR VALUES IN OHMS UNLESS FOLLOWED BY K=1000 OHMS OR MEG=1,000,000 OHMS. CAPACITOR VALUES IN PICO FARADS (EQUAL TO MICROMICROFARADS) UNLESS FOLLOWED BY UF= MICROFARADS. INDUCTANCE VALUES IN MICROHENRYS UNLESS FOLLOWED BY MH= MILLIHENRYS OR H= HENRYS.

IN ORDER TO RETAIN RATED EQUIPMENT PERFORMANCE, REPLACEMENT OF ANY SERVICE PART SHOULD BE MADE ONLY WITH A COMPONENT HAVING THE SPECIFICATIONS SHOWN ON THE PARTS LIST FOR THAT PART.


(19C320886, Rev.5)

SCHEMATIC DIAGRAM

470--512 MHz RECEIVER FRONT END
19C317295G7 (A324)

ALL RESISTORS ARE 1/8 WATT UNLESS OTHERWISE SPECIFIED AND RESISTOR VALUES IN OHMS UNLESS FOLLOWED BY K=1000 OHMS OR MEG=1,000,000 OHMS. CAPACITOR VALUES IN PICOFARADS (EQUAL TO MICROMICROFARADS) UNLESS FOLLOWED BY UF= MICROFARADS. INDUCTANCE VALUES IN MICROHENRYS UNLESS FOLLOWED BY MH= MILLIHENRYS OR H=HENRYS

IN ORDER TO RETAIN RATED EQUIPMENT PERFORMANCE, REPLACEMENT OF ANY SERVICE PART SHOULD BE MADE ONLY WITH A COMPONENT HAVING THE SPECIFICATIONS SHOWN ON THE PARTS LIST FOR THAT PART.

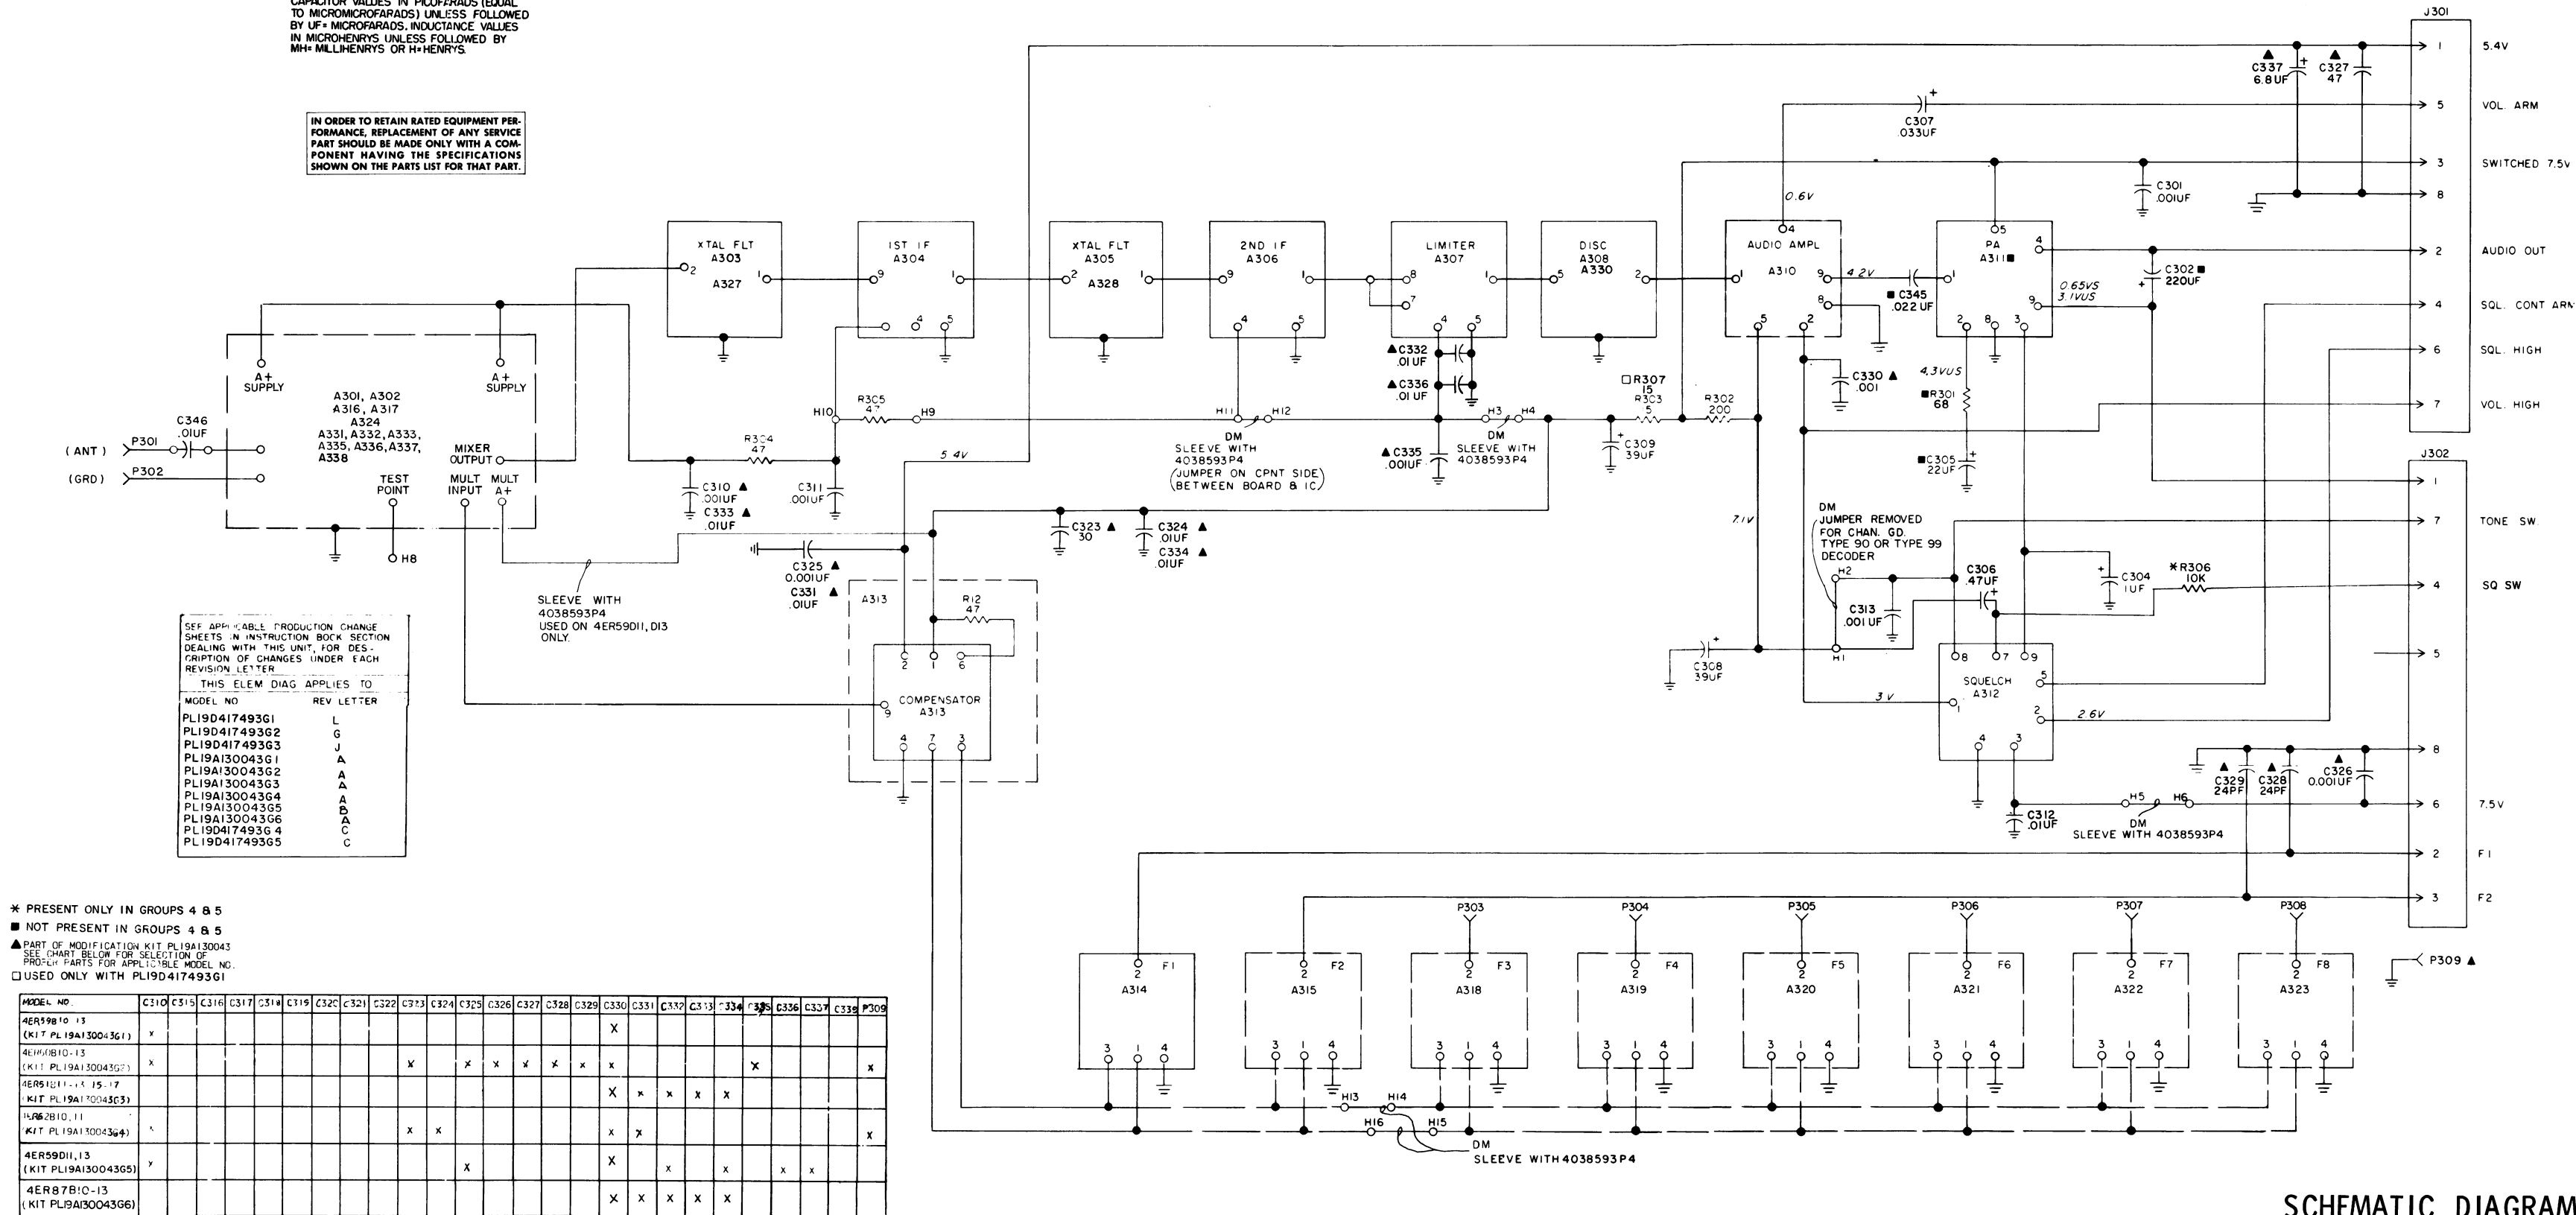

SCHEMATIC DIAGRAM

470--512 MHz RECEIVER BOARD
19C417493G1

PARTS LIST

LB14645D
470-512 MHz RECEIVER
MODELS 4ER62B10, 11

SYMBOL	GE PART NO.	DESCRIPTION
A324		FRONT END 19C317295G7
A10		MULTIPLIER 19C311873G7
C3	5495323P12	Ceramic: .001 μ f +100% -20%, 75 VDCW.
C13	19A116114P2038	Ceramic: 18 pf \pm 5%, 100 VDCW; temp coef -80 PPM.
C14	19A116114P2054	Ceramic: 51 pf \pm 5%, 100 VDCW; temp coef -80 PPM.
CR2	19A116809P1	Silicon.
L3	19B216296P3	Coil.
R7	3R151P562J	Composition: 5600 ohms \pm 5%, 1/8 w.
R8	3R151P586J	Composition: 5.6 ohms \pm 5%, 1/8 w.
R10	3R151P562J	Composition: 5600 ohms \pm 5%, 1/8 w.
	19B200497P5	Tuning slug.
All*		RF AMPLIFIER 19C327300G5 (Added by REV C)
C6 and C7	19A116114P4059	Ceramic: 68 pf \pm 5%, 100 VDCW; temp coef -220 PPM.
C8	19A116114P6038	Ceramic: 18 pf \pm 5%, 100 VDCW; temp coef -470 PPM.
C12	19A116114P2012	Ceramic: 3.3 pf \pm 5%, 100 VDCW; temp coef -80 PPM.
C13	19A116114P2020	Ceramic: 6 pf \pm 5%, 100 VDCW; temp coef -80 PPM.
C14	19A116244P1	Ceramic: 0.0047 μ f \pm 20%, 50 VDCW.
CR1	19A116052P1	Silicon, hot carrier: Fwd. drop .350 volts max.
L2	19B216948G1	Coil.
L4	19A128005G3	Coil. Includes:
	19B209436P1	Tuning slug.
Q1 and Q2	19A116159P1	Silicon, NPN.
R5	3R151P101J	Composition: 100 ohms \pm 5%, 1/8 w.
R7	3R151P103J	Composition: 10K ohms \pm 5%, 1/8 w.
R8	3R151P223J	Composition: 22K ohms \pm 5%, 1/8 w.
R9	3R151P682J	Composition: 6.8K ohms \pm 5%, 1/8 w.
R10	3R151P182J	Composition: 1.8K ohms \pm 5%, 1/8 w.
R11	3R151P223J	Composition: 22K ohms \pm 5%, 1/8 w.
R12	3R151P682J	Composition: 6.8K ohms \pm 5%, 1/8 w.
R13	3R151P392J	Composition: 3.9K ohms \pm 5%, 1/8 w.
	19B209436P1	Tuning slug.
L21	19B216439G16	Helical resonator. (Part of Z21). Includes:
L22	19B216439G12	Helical resonator. (Part of Z22). Includes:
L23	19B216439G13	Helical resonator. (Part of Z23). Includes:
L24	19B216439G15	Helical resonator. (Part of Z24). Includes:
L25	19B216439G14	Helical resonator. (Part of Z25). Includes:
Z21		Consists of L21 and 19D413132P24 can.
Z22		Consists of L22 and 19D413132P3 can.
Z23		Consists of L23 and 19D413132P25 can.
Z24		Consists of L24 and 19D413132P19 can.
Z25		Consists of L25 and 19D413132P20 can.

SYMBOL	GE PART NO.	DESCRIPTION
R11	3R151P223J	Composition: 22K ohms \pm 5%, 1/8 w.
R12	3R151P682J	Composition: 6.8K ohms \pm 5%, 1/8 w.
R13	3R151P392J	Composition: 3.9K ohms \pm 5%, 1/8 w.
All*		RF AMPLIFIER 19C317445G5 (Deleted by REV C)
C6 and C7	19A116114P4059	Ceramic: 68 pf \pm 5%, 100 VDCW; temp coef -220 PPM.
C8	19A116114P6038	Ceramic: 18 pf \pm 5%, 100 VDCW; temp coef -470 PPM.
C12	19A116114P2012	Ceramic: 3.3 pf \pm 5%, 100 VDCW; temp coef -80 PPM.
C13	19A116114P2020	Ceramic: 6 pf \pm 5%, 100 VDCW; temp coef -80 PPM.
C14	19A116244P1	Ceramic: 0.0047 μ f \pm 20%, 50 VDCW.
CR1*	19A116052P1	Silicon, hot carrier: Fwd. drop .350 volts max. Added by REV B.
L2	19B216948G1	Coil.
L4	19A128005G3	Coil.
Q1 and Q2	19A116159P1	Silicon, NPN.
R5	3R151P101J	Composition: 100 ohms \pm 5%, 1/8 w.
R7	3R151P103J	Composition: 10K ohms \pm 5%, 1/8 w.
R8	3R151P223J	Composition: 22K ohms \pm 5%, 1/8 w.
R9	3R151P682J	Composition: 6.8K ohms \pm 5%, 1/8 w.
R10	3R151P182J	Composition: 1.8K ohms \pm 5%, 1/8 w.
R11	3R151P223J	Composition: 22K ohms \pm 5%, 1/8 w.
R12	3R151P682J	Composition: 6.8K ohms \pm 5%, 1/8 w.
R13	3R151P392J	Composition: 3.9K ohms \pm 5%, 1/8 w.
	19B209436P1	Tuning slug.
L21	19B216439G16	Helical resonator. (Part of Z21). Includes:
L22	19B216439G12	Helical resonator. (Part of Z22). Includes:
L23	19B216439G13	Helical resonator. (Part of Z23). Includes:
L24	19B216439G15	Helical resonator. (Part of Z24). Includes:
L25	19B216439G14	Helical resonator. (Part of Z25). Includes:
Z21		Consists of L21 and 19D413132P24 can.
Z22		Consists of L22 and 19D413132P3 can.
Z23		Consists of L23 and 19D413132P25 can.
Z24		Consists of L24 and 19D413132P19 can.
Z25		Consists of L25 and 19D413132P20 can.


SYMBOL	GE PART NO.	DESCRIPTION
		RECEIVER BOARD 19D417493G1 19D417493G4 - VEHICLE REPEATER
A303	19C304824G1	Crystal Filter.
A304	19C311879G3	1st IF Amplifier.
A305	19C304824G1	Crystal Filter.
A306	19C311879G4	2nd IF Amplifier.
A307	19C311876G4	Limiter.
A308	19C304504G3	Discriminator.
A309*	19C311878G2	Audio Amplifier. Deleted by REV G.
A310*	19C330341G1	Audio Amplifier. (Includes Tone Filter). In G1 of REV G-K: In G4 of REV B & earlier:
	19C311995G4	Audio Amplifier. (Includes Tone Filter). Added to 19D417493G1 by REV G.
A311*	19C330710G1	PA. In G1 of REV K & earlier: In G4 of REV B & earlier:
	19C311877G4	PA. In REV E & earlier:
	19C311877G2	PA.
A312*	19C330342G1	Squelch. In G1 of REV K & earlier: In G4 of REV B & earlier:
	19C311880G4	Squelch.
A313	19C320061G1	Compensator.
C301	5495323P12	Ceramic: .001 μ f +100% -20%, 75 VDCW.
C302	19A116178P7	Tantalum: 220 μ f \pm 20%, 6 VDCW.
C303*	19A116089P1	Ceramic: 0.1 μ f \pm 20%, 50 VDCW, temp range -55 to +85°C. Deleted by REV E.
C304	5491674P28	Tantalum: 1.0 μ f \pm 20%, 25 VDCW; sim to Sprague Type 162D.
C305	5491674P35	Tantalum: 22 μ f \pm 20%, 4 VDCW; sim to Sprague Type 162D.
C306	5491674P27	Tantalum: .47 μ f \pm 20%, 35 VDCW; sim to Sprague Type 162D.
C307	5491674P31	Tantalum: .033 μ f \pm 20%, 35 VDCW; sim to Sprague Type 162D.
C308 and C309	5491674P30	Tantalum: 39 μ f \pm 20%, 10 VDCW; sim to Sprague Type 162D.
C311	5495323P12	Ceramic: .001 μ f +100% -20%, 75 VDCW.
C312*	19A116192P1	Ceramic: 0.01 μ f \pm 20%, 50 VDCW; sim to Erie 8121 SPECIAL. In REV A & earlier:
	5495323P12	Ceramic: .001 μ f +100% -20%, 75 VDCW.
C313	5495323P12	Ceramic: .001 μ f +100% -20%, 75 VDCW.
C314*	5495323P12	Ceramic: .031 μ f +100% -20%, 75 VDCW. Deleted by REV D.
C345*	19A116192P6	Ceramic: 0.022 μ f \pm 20%, 50 VDCW; sim to Erie 8131-M050-W5R-223M. Added by REV E.
C346*	19A116192P1	Ceramic: 0.01 μ f \pm 20%, 50 VDCW; sim to Erie 8121 SPECIAL. Added to G1 by REV J. Added to G4 by REV B.
		JACKS AND RECEPTACLES
J301 and J302	19A116122P1	Feed-thru: sim to Warren Co 1-B-2994-4.

SYMBOL	GE PART NO.	DESCRIPTION
P301 thru P308	19A115834P4	----- PLUGS ----- Contact, electrical: sim to AMP 2-332070-9.
R301*	3R151P680J	----- RESISTORS ----- Composition: 68 ohms \pm 5%, 1/8 w. In REV A-C: Composition: 100 ohms \pm 5%, 1/8 w. Earlier than REV A: Composition: 47 ohms \pm 5%, 1/8 w.
R302	3R151P201J	Composition: 200 ohms \pm 5%, 1/8 w.
R303*	3R151P150J	Composition: 15 ohms \pm 5%, 1/8 w. Deleted in G1 by REV K.
R304 and R305	3R151P470J	Composition: 47 ohms \pm 5%, 1/8 w.
R306	3R151P103J	Composition: 10K ohms \pm 5%, 1/8 w.
R307*	19A134564P1	Metal film: 15 ohms \pm 5%, 1/4 w. Added to G1 by REV K.
	19B216316P1	----- MISCELLANEOUS ----- Insulator. (Used with J301 & J302).
		ASSOCIATED ASSEMBLIES
A314 and A315	4EG28A13	----- OSCILLATORS ----- NOTE: When reordering, give GE Part Number and specify exact frequency needed. Oscillator Module. 470-512 MHz. $F_x = \frac{F_o - 20}{21}$
A318 thru A323	4EG28A13	Oscillator Module. 470-512 MHz. $F_x = \frac{F_o - 20}{21}$
		CAPACITOR KIT 19A130043G4
C310	5495323P12	----- CAPACITORS ----- Ceramic: .001 μ f +100% -20%, 75 VDCW.
C315* thru C322*	5495323P12	Ceramic: .001 μ f +100% -20%, 75 VDCW. Deleted by REV A.
C323	19A116114P2045	Ceramic: 30 pf \pm 5%, 100 VDCW; temp coef -80 PPM.
C324	19A116192P1	Ceramic: 0.01 μ f \pm 20%, 50 VDCW; sim to Erie 8121 SPECIAL.
C330	5495323P12	Ceramic: .001 μ f +100% -20%, 75 VDCW.
C331	19A116192P1	Ceramic: 0.01 μ f \pm 20%, 50 VDCW; sim to Erie 8121 SPECIAL.
		----- PLUGS -----
P309	19A115834P4	Contact, electrical: sim to AMP 2-332070-9.

PRODUCTION CHANGES

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter", which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.

- REV. A - Receiver Front End 19C317295G7
To improve operation. Deleted R6 and added R10.
- REV. B - To add protection for RF and mixer transistors. Added CR1.
- REV. A - Receiver Board 19D417493G1
To increase audio sensitivity. Changed R301.
- REV. B - To improve squelch operation. Changed C312.
- REV. C - To improve producibility. Changed A303.
- REV. D - To improve audio stability. Deleted C314 and changed R301.
- REV. E - To improve frequency response. Added C345.
- REV. F - To improve audio. Changed A 313.
- REV. G - To eliminate Non-Channel Guard receiver boards. Deleted callout of A309 and circle (●) in front of A310. Deleted callout of C303 and the circle (●) for C345. Deleted Notes: Use for Non-Channel Guard receivers and use for Channel Guard receivers.
- Schematic Diagram Was:

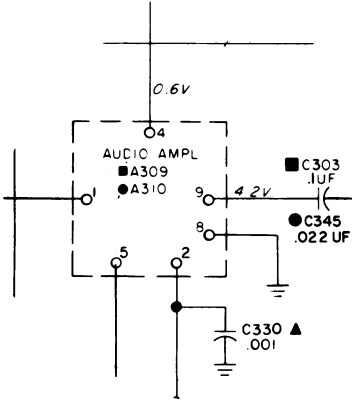

QUICK CHECKS

SYMPTOM	PROCEDURE
No Audio	<ol style="list-style-type: none">1. Check audio waveform at the top of the Volume Control (see Step 2).2. If audio is present, check voltage readings of Audio and Squelch modules (see Schematic Diagram).3. If audio is not present, check gain and current readings of Front End and IF modules (see Steps 1 & 3).
Poor Sensitivity	<ol style="list-style-type: none">1. Measure the gain of the Mixer stage (see Step 3). If low, measure the gain of the RF amplifier and IF modules.
Improper Squelch Operation	<ol style="list-style-type: none">1. Check the noise waveform at the input to the Squelch module and at Squelch Control high (see Step 2).2. Measure the DC voltages for the Squelch module (squelched and unsquelched).

