

# **MASTR II<sup>®</sup>** **MAINTENANCE MANUAL**

**ONE - THRU EIGHT FREQUENCY CONTROL UNIT**



## **SPECIFICATIONS \***

Control Unit (Common Kit)	19A129576G1
One-Frequency Kit	19A129577G1
or	
One thru Eight Frequency Kit	19A129578G1
Controls	Power-On Volume Squelch Channel Selector Switch Option Switch Optional Blanker Disable Switch
Indicators	Power On Light Transmit Light Optional Channel Busy Light Option Light

These specifications are intended primarily for the use of the serviceman. Refer to the appropriate Specification Sheet for the complete specifications.

## TABLE OF CONTENTS

SPECIFICATIONS .....	Cover
DESCRIPTION .....	1
CIRCUIT ANALYSIS .....	1
OPTIONS .....	2
MAINTENANCE .....	4
TRANSMITTER KEYING & POWER DISTRIBUTION DIAGRAM .....	7
OUTLINE DIAGRAM .....	8
SCHEMATIC DIAGRAM .....	9
PARTS LIST & PRODUCTION CHANGES .....	10
Control Unit & Associated Assemblies .....	10
OPTIONAL 18-CONDUCTOR POWER/CONTROL CABLE .....	11
MASTR II/EXEC II INTERFACE POWER/CONTROL CABLE .....	12
MICROPHONE & HOOKSWITCH .....	13
HANDSET & HOOKSWITCH .....	14
SPEAKER .....	15

### OPTIONS

DESCRIPTION	MODEL NUMBER
Internal/External Speaker (Option 1001)	19A129567G1
Public Address (Option 1002)	19A129567G2
Fixed Squelch (Option 1003)	19A129567G3
Squelch Operated Relay (Option 1004)	19A129567G4
Two-Frequency PSLM (Options 1005, 1006, 1007)	19A129567G5
Channel Busy Light (Option 1008)	19A129567G6
Noise Blanker Switch (Option 1009)	19A129567G7
Type 99 Tone Decoder (Option 1012 thru 1015)	19A129567G9
Type 90 Tone Encoder/Decoder (Option 1016 thru 1021)	19A129567G13-15
Dual Control (Option 1023 thru 1026)	19A129567G8
Extender Board (Option 9029)	19C320588G1

### WARNING

Although the highest DC voltage in the radio is supplied by the vehicle battery, high current may be drawn under short circuit conditions. These currents can possibly heat metal objects such as tools, rings, watchbands, etc. enough to cause burns. Be careful when working near energized circuits!

High-level RF energy in the transmitter Power Amplifier assembly can cause RF burns. KEEP AWAY FROM THESE CIRCUITS when the transmitter is energized!

## DESCRIPTION

MASTR II Control Units are attractively styled, highly functional units that are enclosed in a two-piece molded Lexan® housing for durability and ease of disassembly. The Control Units are mounted to the vehicle with a Safety Release Lexan® mounting bracket assembly for passenger safety.

The Control Unit uses a printed wiring board to provide a minimum of wiring. The only internal wires used are on the POWER-ON switch and indicator lights.

Cable plugs are secured to the back of the Control Unit by plastic locking clips. The plugs are equipped with indexing tabs to assure connection to the correct jack. The cable is equipped with a strain relief hook that attaches to a steel plate on the bottom rear of the Control Unit.

The microphone plug is secured to a jack on the bottom of the unit by means of a captive locking screw.

All indicator lights are light-emitting diodes (LEDs) for reliability, long life, and low power consumption.

## CIRCUIT ANALYSIS

The Control Units are equipped with a VOLUME control, SQUELCH control and a POWER-ON rocker switch. The multi-frequency Control Unit is also equipped with a frequency selector switch.

When the POWER-ON switch (S701) is in the OFF position, power is removed from the radio except for the transmitter PA, which is connected to the vehicle battery at all

times. Pushing the switch to the ON position applies power to the radio, provides power for the push-to-talk (PTT) circuit and lights the power-on LED in the Power-ON/Frequency Indicator window.

Pressing the PTT switch on the microphone energizes the antenna switch, keys the transmitter, mutes the receiver, and lights the transmit indicator LED.

Releasing the PTT switch turns off the transmitter and transmit indicator, de-energizes the antenna switch and un-mutes the receiver. Refer to the Table of Contents for a simplified Transmitter Keying and Power Distribution Diagram.

CR701 and CR708 are protective diodes. CR701 will cause the fuse in the yellow lead to blow if the polarity is reversed. CR708 inhibits the PTT circuit if the polarity is reversed.

### MULTI-FREQUENCY SWITCH (S702)

The frequency selector switch is a 12-position switch with a mechanical stop that limits rotation from one through eight positions as required.

The frequency selector switch selects the desired channel for both transmitting and receiving. The switch connects A- to the selected transmitter and receiver ICOM so that the radio operates on the selected channel.

### DC CONVERTER MODIFICATIONS

In radios equipped with the DC converter, the POWER-ON switch is modified so that placing the switch in the ON position applies the input voltage directly to the

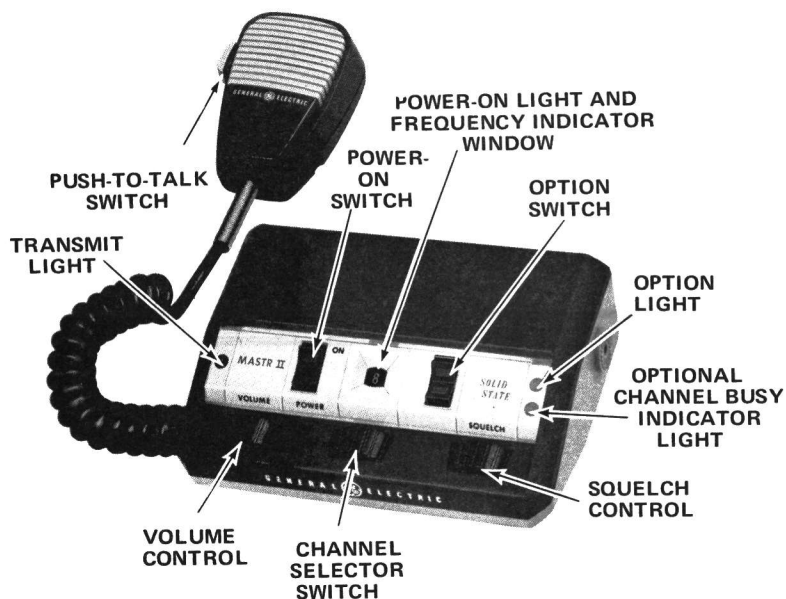


Figure 1 - Control Unit Layout

DC converter. Instructions for the modification are shown on the control unit Schematic Diagram.

## OPTIONS

MASTR II control units may be equipped with different options. All controls and indicator lights (LEDs) are shown in Figure 1.

### Channel Busy Indicator

When no signal is applied to the receiver, the Carrier Activity Sensor (CAS) voltage from the receiver squelch IC is near A-. This forward biases diode CR702 in the control unit, keeping Q701 turned off. When a signal is applied to the receiver (with or without audio), the CAS voltage rises to approximately 10 Volts. This reverse biases CR702, allowing Q701 to conduct, turning on Channel Busy Indicator CR706. The indicator will remain on as long as a signal is applied to the receiver, or until the transmitter is keyed.

### Noise Blanker Disable Switch

Noise Blanker Disable switch S1 mounts on the back of the control unit (see Outline Diagram). Placing the switch in the "OFF" position applies A- to the blanker disable lead. The A- is connected to pin 4 of the receiver blanker IC (U551), disabling the noise blanker circuit. The A- is connected to the blanker disable circuit by a jumper from H63 to H66 on the system board (see Front Panel & System Board Maintenance Manual).

Placing the switch in the "ON" position removes the A- to pin 4 of the blanker IC, allowing the blanker to operate.

### Fixed Squelch

In radios with the Fixed Squelch option, a two-position rotary switch replaces the standard variable squelch potentiometer. A squelch potentiometer is then mounted on J904 on the system board (see Front Panel & System Board Maintenance Manual).

Turning the optional squelch switch on the Control Unit to the right applies A- to the squelch disable lead. The A- is connected to pin 2 of the receiver audio IC (U604), disabling the squelch circuit (and Channel Guard if present). Turning the switch to the left removes the A- to Pin 2 of the squelch IC, enabling the squelch circuit (and Channel Guard).

### Internal/External Speaker

For radios equipped with the Internal/External Speaker option, the control unit

will be equipped with optional SPEAKER switch (marked INT-EXT), an Option indicator light and an Internal/External Speaker component board. The radio also has an external speaker mounted outside of the vehicle passenger compartment (on the roof, under the hood, etc.).

With the switch in the INT (Internal) position, all of the messages received will be heard on the speaker mounted in the vehicle.

Placing the switch in the EXT (External) position turns on the option light, and applies all received messages to both the external and internal speaker. This allows the received messages to be heard while the operator is inside or outside of the vehicle.

For complete details, refer to the Maintenance Manual for the Internal/External Speaker option.

### Public Address

With the Public Address option, the control unit will be equipped with an optional PA-ON switch, an Option indicator light, and a Public Address component board. The vehicle will also have an additional speaker mounted outside of the passenger compartment.

With the PA switch in the "OFF" position, the operator can send and receive messages as he normally does. Placing the PA switch in the ON position lights the Option light, disables the transmitter, and switches the receiver audio output to the external speaker.

Pressing the PTT switch on the microphone switches the microphone output through the receiver audio amplifier circuit so that the amplified message is heard on the external speaker only. No messages can be transmitted in this mode of operation, and all incoming messages will be heard on the external speaker.

For complete details, refer to the Maintenance Manual for the Public Address option.

### Priority Search-Lock Monitor

For radios equipped with Priority Search-Lock Monitor, (PSLM), the control unit will be equipped with a SEARCH-ON switch, a Channel Busy light, and a PSLM board.

With the SEARCH switch in the ON position, the PSLM provides two channel monitoring (depending on the PSLM option used) by alternately sampling a priority channel and then a non-priority channel.

When a signal is received on the priority channel, the PSLM stops searching and locks on the priority channel for the

duration of the message. When a signal is first received on the non-priority channel, the PSLM stops on that channel while monitoring the priority channel. If a signal is received on the priority channel while the PSLM is stopped on the non-priority channel, the PSLM reverts to the priority channel and locks on that channel for the duration of the message.

#### NOTE

The PSLM will operate only when the receiver is squelched. When the receiver is unsquelched, the PSLM will lock on the first channel that receives a message.

The Channel Busy light will glow steadily whenever a message is received on the priority channel. When a message is received on a non-priority channel, the Channel Busy light will flash on and off. Keying the transmitter turns on the red Transmit light, and turns off the Channel Busy light.

Placing the SEARCH switch in the "OFF" position disables the PSLM circuit, and messages can be sent and received only on the channel selected by the frequency selector switch.

For complete details, refer to the Maintenance Manual for the Priority Search-Lock Monitor option.

#### Squelch Operated Relay

In radios equipped with the Squelch Operated Relay option, the control unit will be equipped with an OPTION-ON switch, an Option light and a Squelch Operated Relay component board.

When the switch is in the ON position, the relay will energize and the Option light will turn on each time a message is received (receiver unsquelches). The relay will remain locked up and the Option light will remain on until the OPTION switch is turned "OFF". The relay can be connected to turn on a light, operate an alarm or perform other functions as desired.

For complete details, refer to the Maintenance Manual for the Squelch Operated Relay option.

#### Type 99 Tone Decoders

Type 99 Tone equipment eliminates reception of unwanted calls through the use of a sequential tone decoder. The equipment provides individual or group call capability using either two or four Versatone networks. (Versatone networks determine the tone frequencies that the unit responds to).

Decoder operation is controlled by the Monitor/Reset switch and/or Hookswitch.

When the microphone or handset is removed from the hookswitch, the decoder is deactivated and the receiver reverts to noise squelch operation. Replacing the microphone or handset automatically resets the receiver to respond to only those calls properly tone coded. A Decoder Call Indicator will light each time a properly coded call is received.

An optional External Alarm Relay is controlled by the two position OPTION-ON switch. When a properly tone coded call is received and the OPTION switch is in the ON position, the relay will operate an external horn or light.

For complete details, refer to the Maintenance Manual for the Type 99 Tone Decoder option.

#### Type 90 Tone Encoder and Decoders

Type 90 Tone equipment provides tone coded message transmission to eliminate reception of unwanted calls. All Type 90 Tone Encoders and Decoders operate on a single tone selectable from ten standard frequencies between 1000 and 3000 Hz.

A single tone burst automatically precedes the first transmission in the standard unit. The tone burst is initiated by removing the microphone or handset from the hookswitch and keying the PTT. The Pushbutton TONE-ON switch allows the tone to be sent manually if desired.

Decoder operation is controlled by the Monitor/Reset switch and/or Hookswitch. When the microphone or handset is removed, the receiver reverts to noise squelch operation. Replacing the microphone or handset automatically resets the unit to the decode function. A Decoder Call Indicator will light each time a properly tone coded call is received.

An optional External Alarm Relay is controlled by the two position OPTION-ON switch. When a properly tone coded call is received and the OPTION-ON switch is in the ON position, the Relay will operate an external horn or light.

For complete details, refer to the Maintenance Manual for the Type 90 Tone Encoder/Decoder option.

#### Dual Control

The Dual Control equipment allows the radio to be operated by either of two remotely located control units. Control is transferred between control units by depressing the Control switch on the Control Unit where control is desired.

When the control switch is depressed, the control light indicates the unit with control. Control remains with this unit

until the Dual Control switch on the second control unit is operated.

For complete details, refer to the Maintenance Manual for the Dual Control option.

#### Extender Board

Troubleshooting the component board options in the control unit is facilitated by using Extender Board 19C320588G1 (Option 9029). The Extender Board provides feed throughs for all connections between the Control Unit printed wire board and the option component board.

#### 12-VOLT IGNITION SWITCH CONNECTIONS

In 12-Volt vehicle systems, the Control Unit may be connected for two different modes of operation, depending on the way the ignition switch cables are connected in the vehicle system. The black cable provides the system ground connection. The yellow fused lead provides the receiver hot connections and the transmitter Push-To-Talk hot connection. The two types of operation are:

1. Ignition Switch Control - For ignition switch control, the yellow fused lead connects to the ACCESSORY or ON terminal of the ignition switch. The transmitter and receiver will operate only when the ignition switch is in the ACCESSORY or ON position. Turning the ignition switch OFF removes all power to the radio.
2. Ignition Switch Bypass - For ignition switch bypass, the yellow fused lead connects to the "hot" side of the ignition switch or the vehicle fuse block assembly. Both the transmitter and receiver operate independently of the ignition switch and are turned on and off only by the POWER-ON switch on the Control Unit.

#### DC CONVERTER CONNECTIONS

For combinations equipped with the DC converter, a single red fused lead is used. The fused lead always connects to battery plus in either positive or negative ground systems.

#### CAUTION

When using the DC Converter, do not connect battery ground to the Control Unit A-. To do so may cause failure of the current limiting circuit in the converter.

## MAINTENANCE

#### DISASSEMBLY

To gain access to the inside of the Control Unit, simply remove the two screws on the bottom of the front edge of the unit, and lift off the top cover.

To remove the printed wiring board from the control unit housing:

1. Remove the two screws holding the microphone jack.
2. Remove the screw between J701 and J702 and remove the screw between J702 and J703.
3. Remove the screw at each end of the switch and control mounting bracket.
4. Remove the screw holding Power-On switch S701 to the bottom housing. Then swing the printed wiring board up from the front and lift the board out.

#### RE-INSTALLATION

±12-Volt Systems. If the radio is moved to a different vehicle, always check the battery polarity and voltage of the new system before using the radio.

If the radio is moved to a vehicle with different battery polarity, it will be necessary to change the ignition switch leads to the vehicle system plug. Use the extraction tool as shown in Figure 2, and change the leads as shown in Figures 3 or 4 as required.

#### DC Converter Systems

For radios equipped with the DC Converter, no changes are required in the lead to the vehicle system plug.

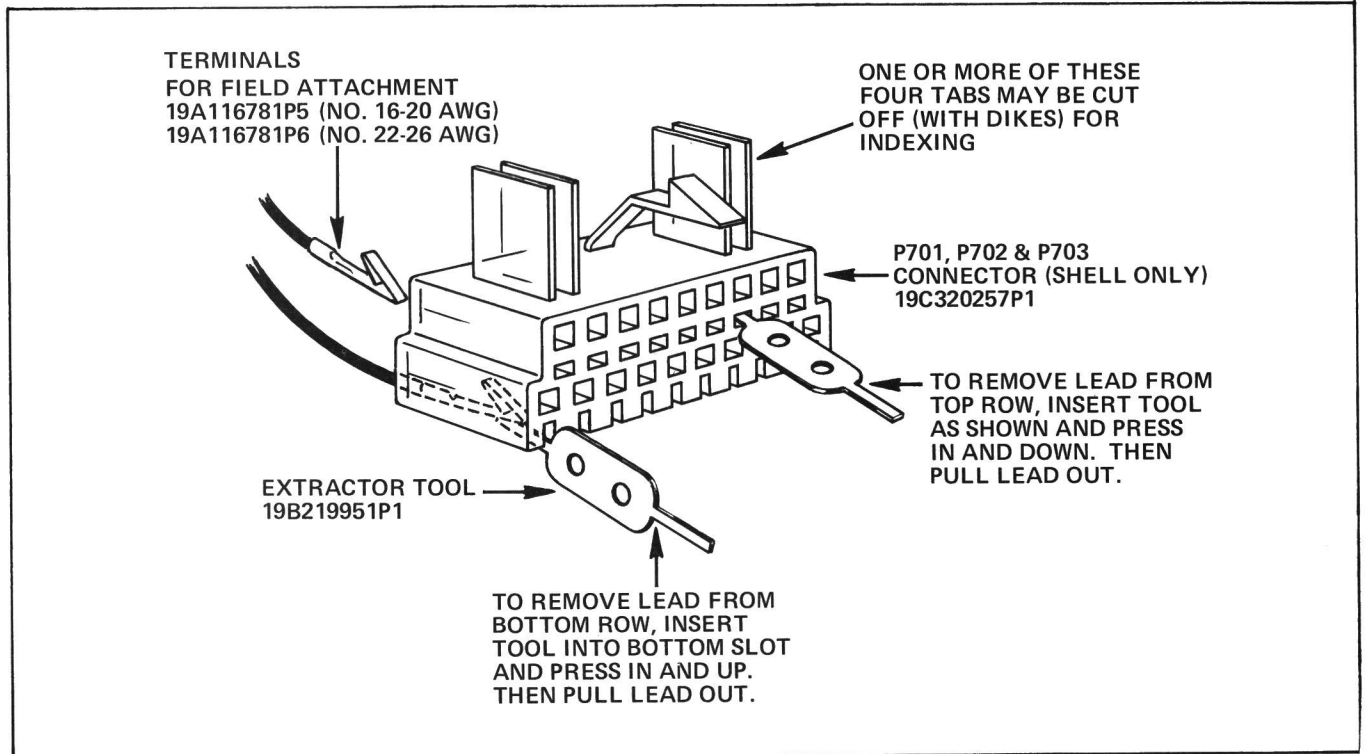


Figure 2 - Using Extraction Tool

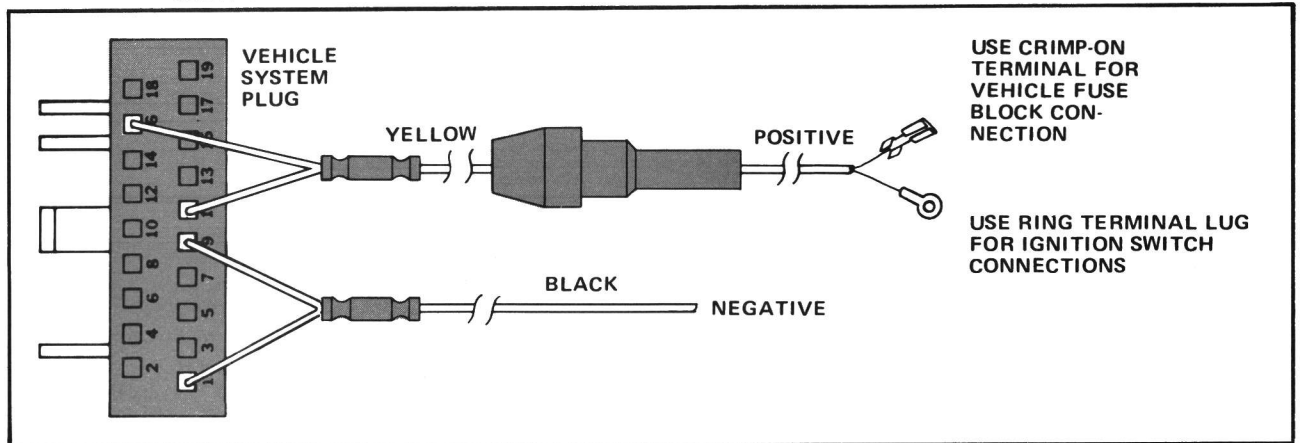


Figure 3 - 12-Volt, Negative Ground Connections



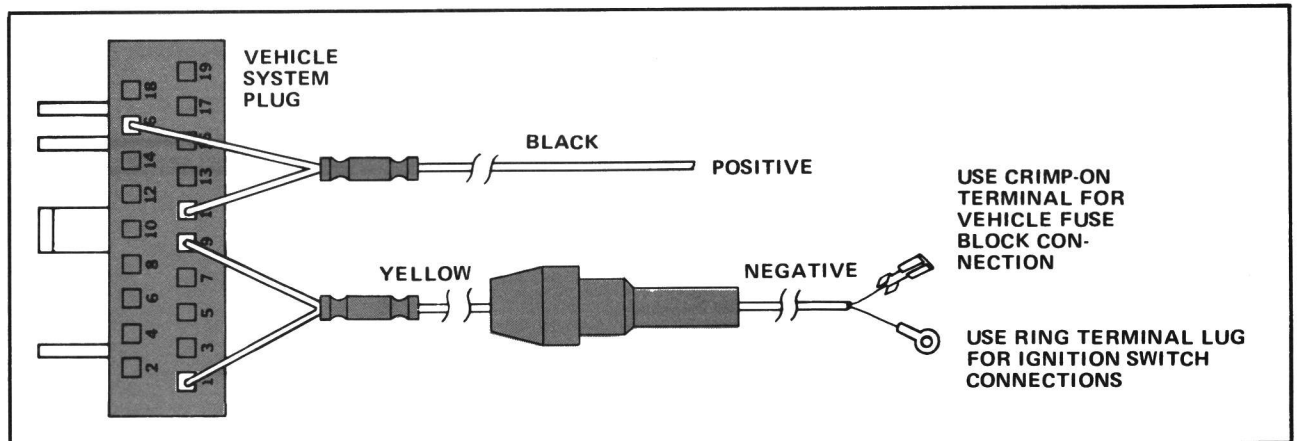


Figure 4 - 12-Volt, Positive Ground Connections





TRANSMITTER KEYING & POWER DISTRIBUTION DIAGRAM

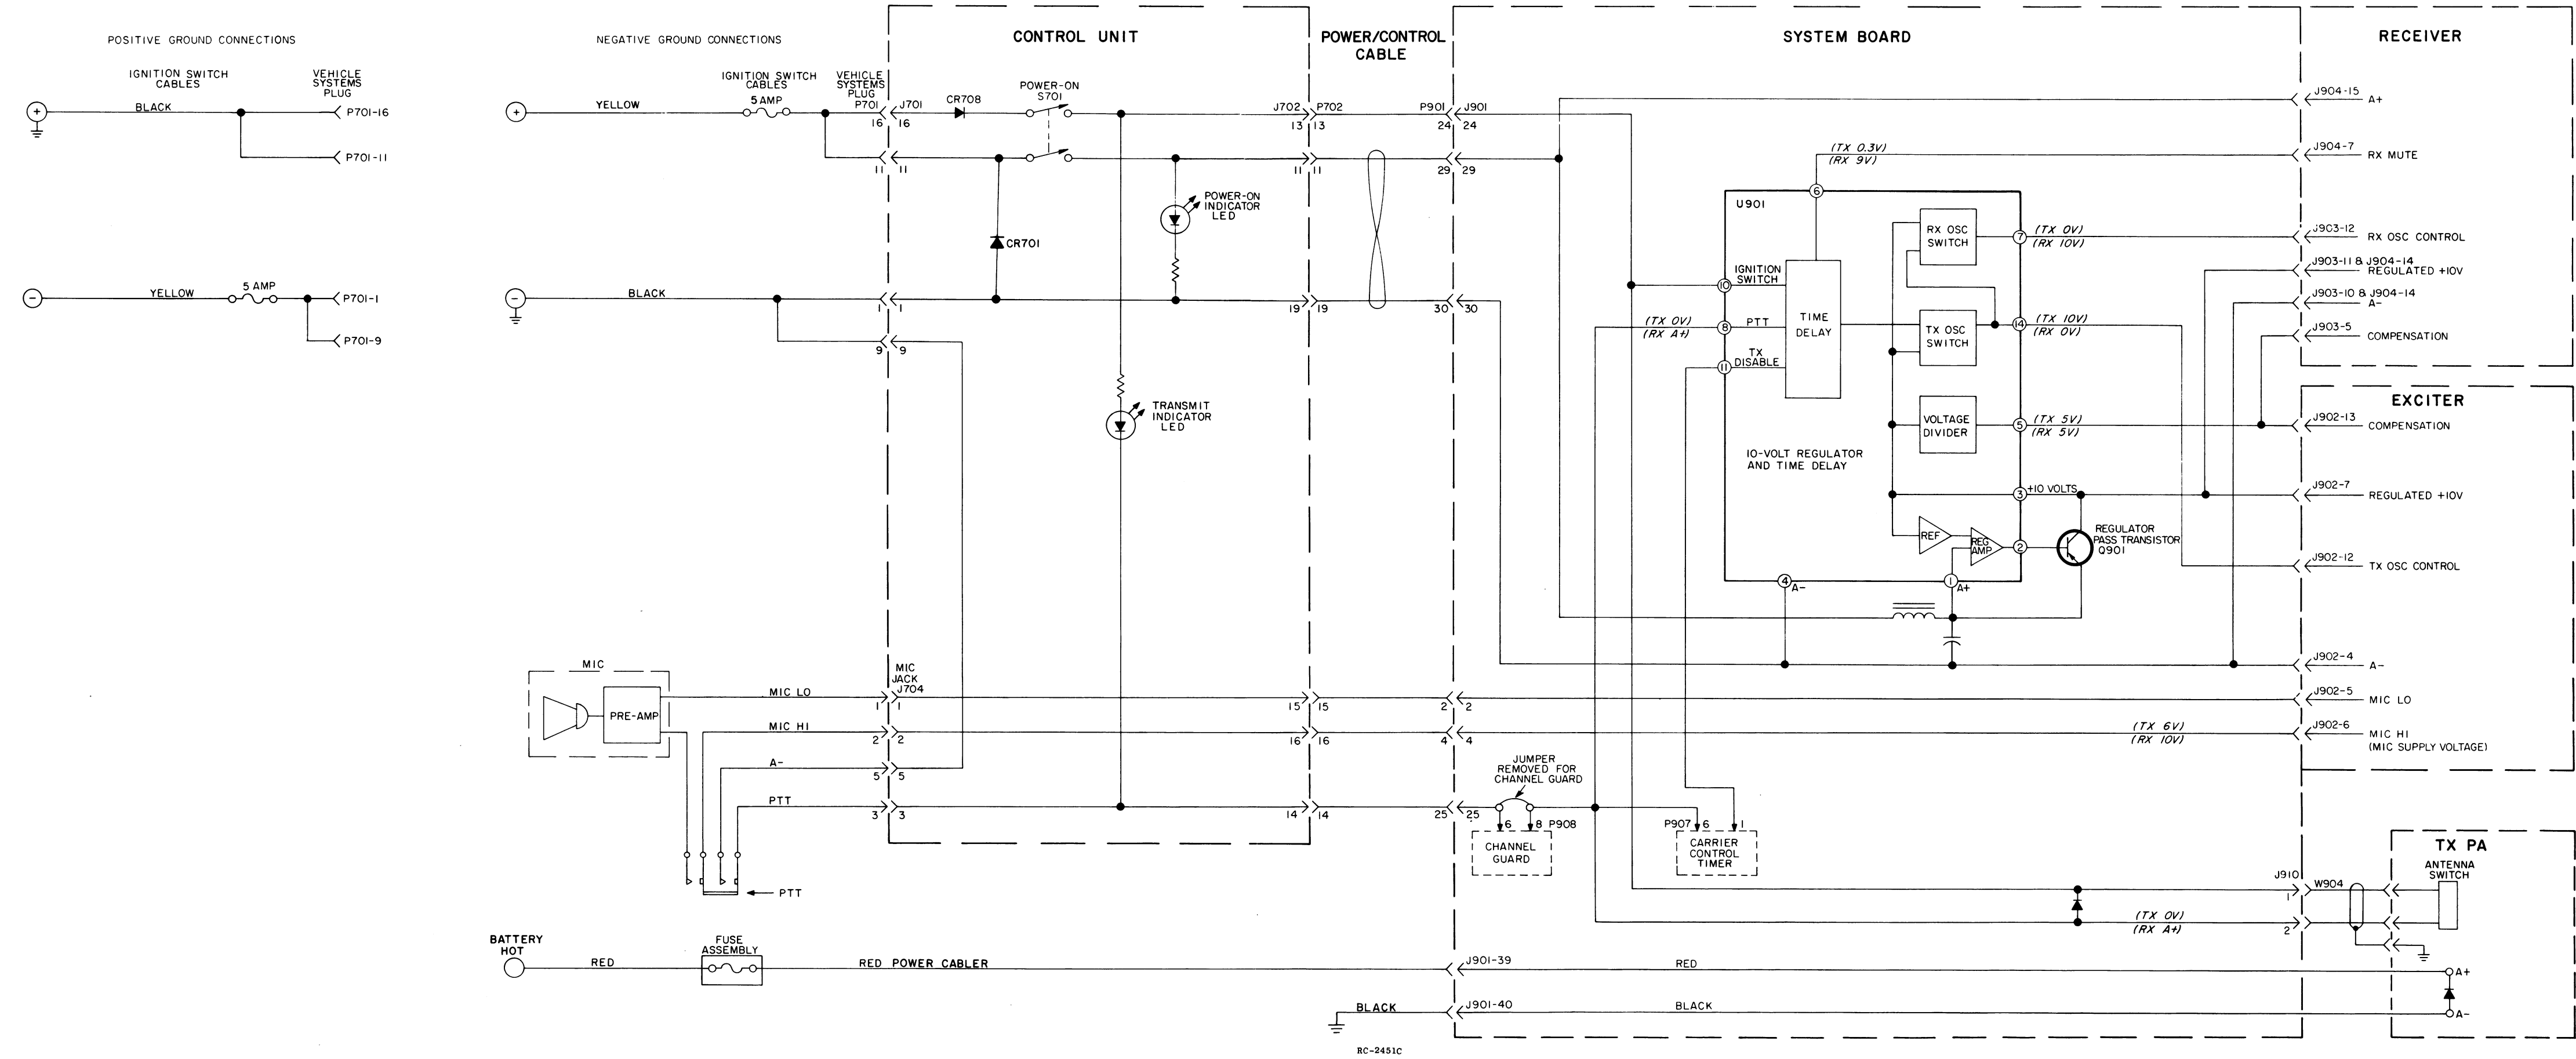


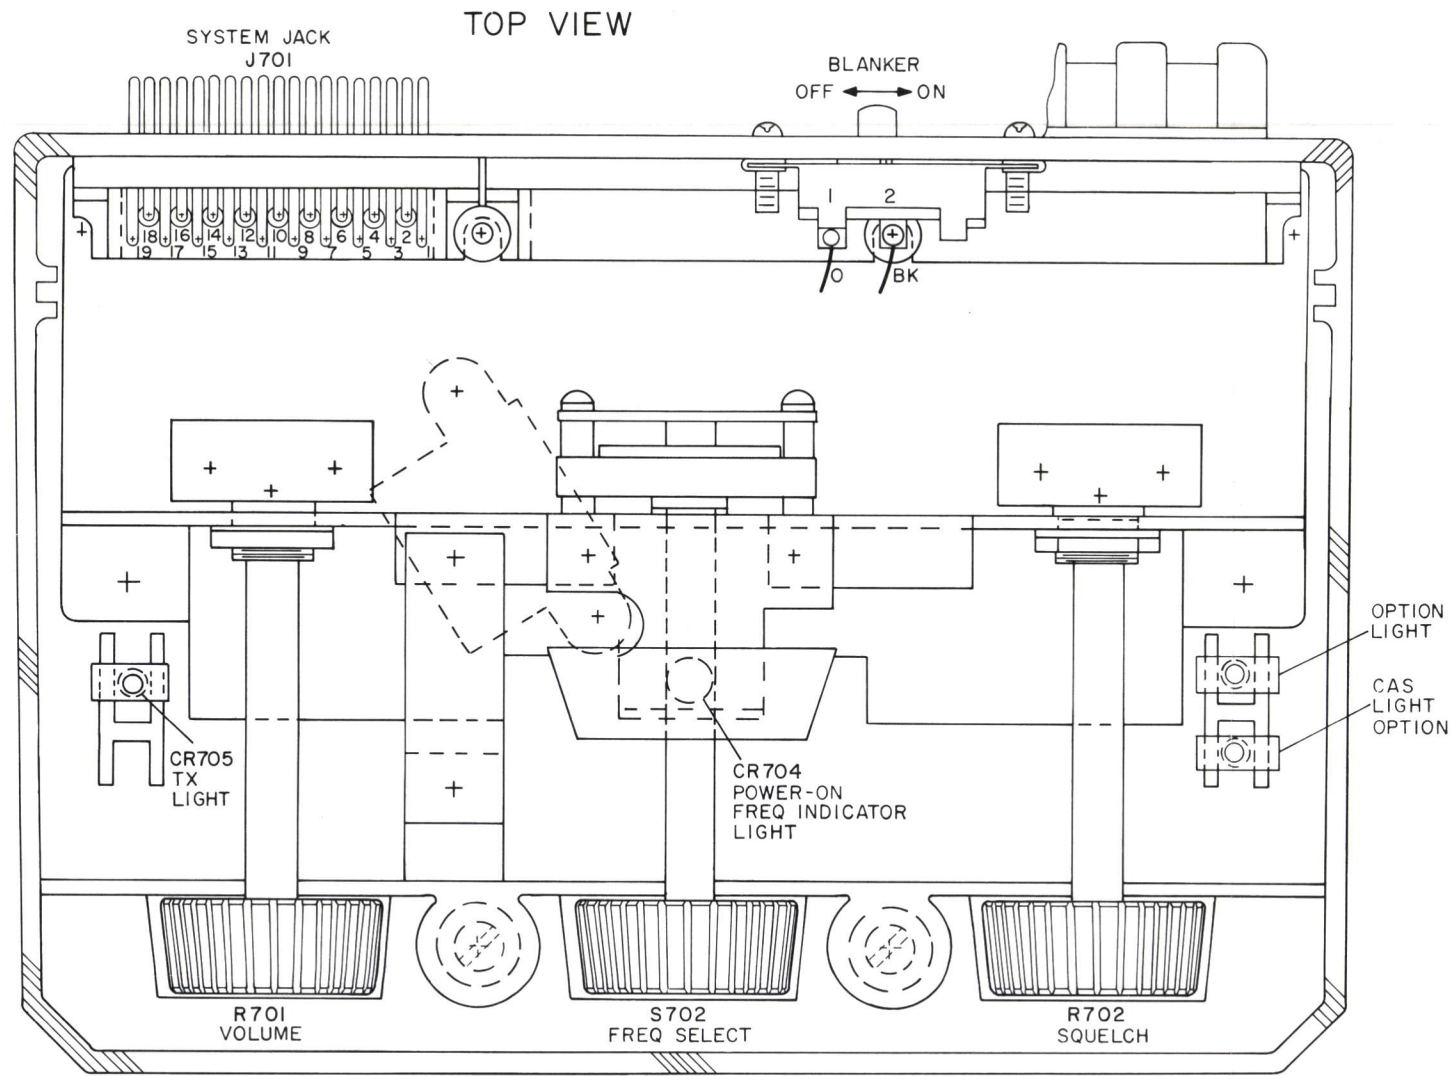

NOTE:  
FOR FIXED SQUELCH OPTION,  
R702 IS REPLACED BY S1701.



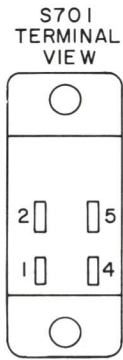
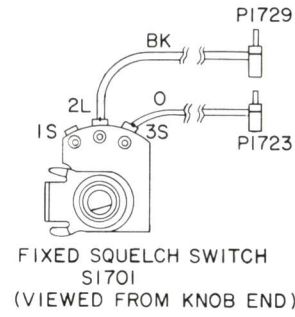


LEAD IDENTIFICATION  
FOR Q701

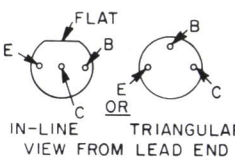

NOTE: LEAD ARRANGEMENT, AND NOT  
CASE SHAPE, IS DETERMINING  
FACTOR FOR LEAD IDENTIFICATION.

LEAD IDENTIFICATION  
FOR LIGHT-EMITTING DIODES (LEDs)

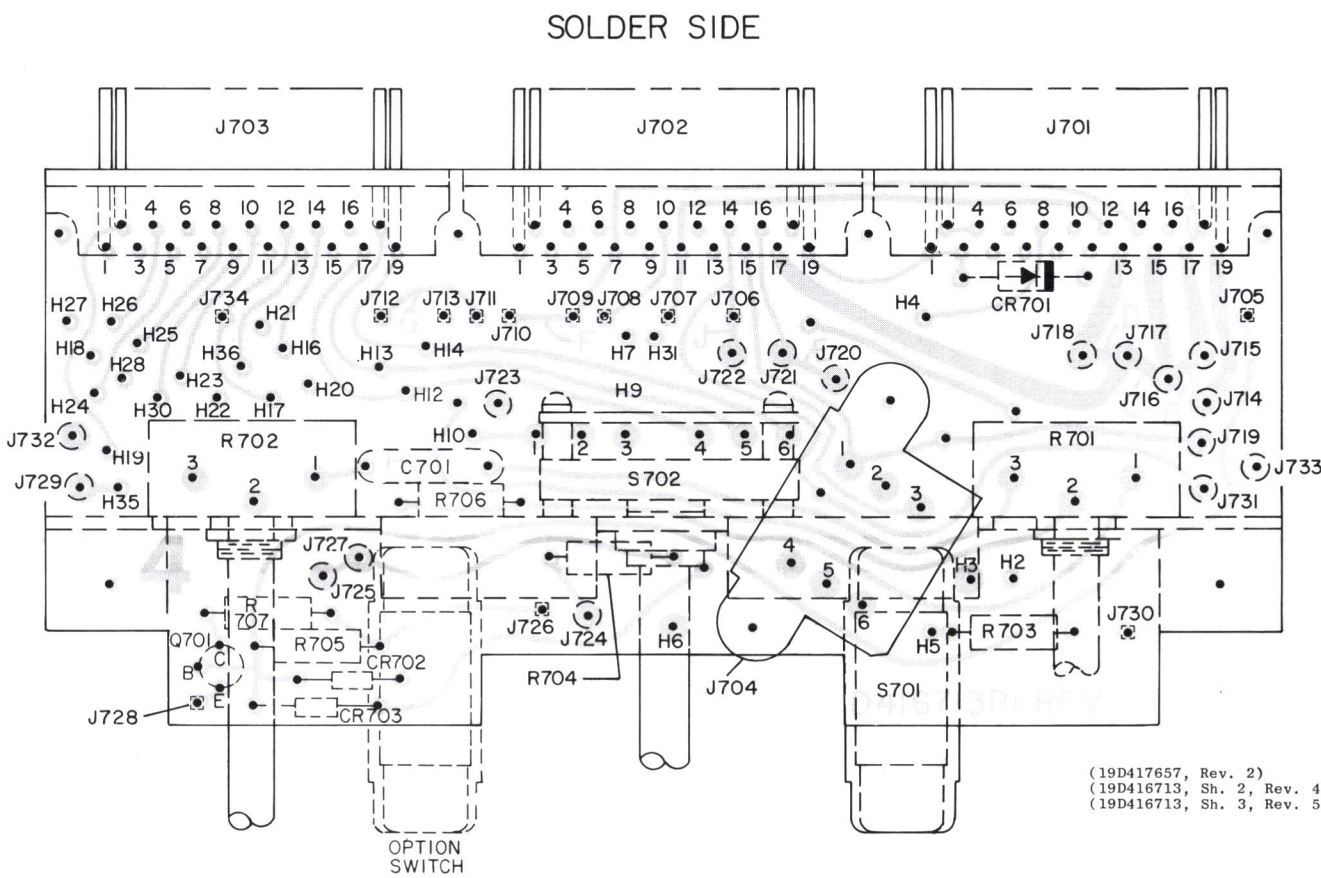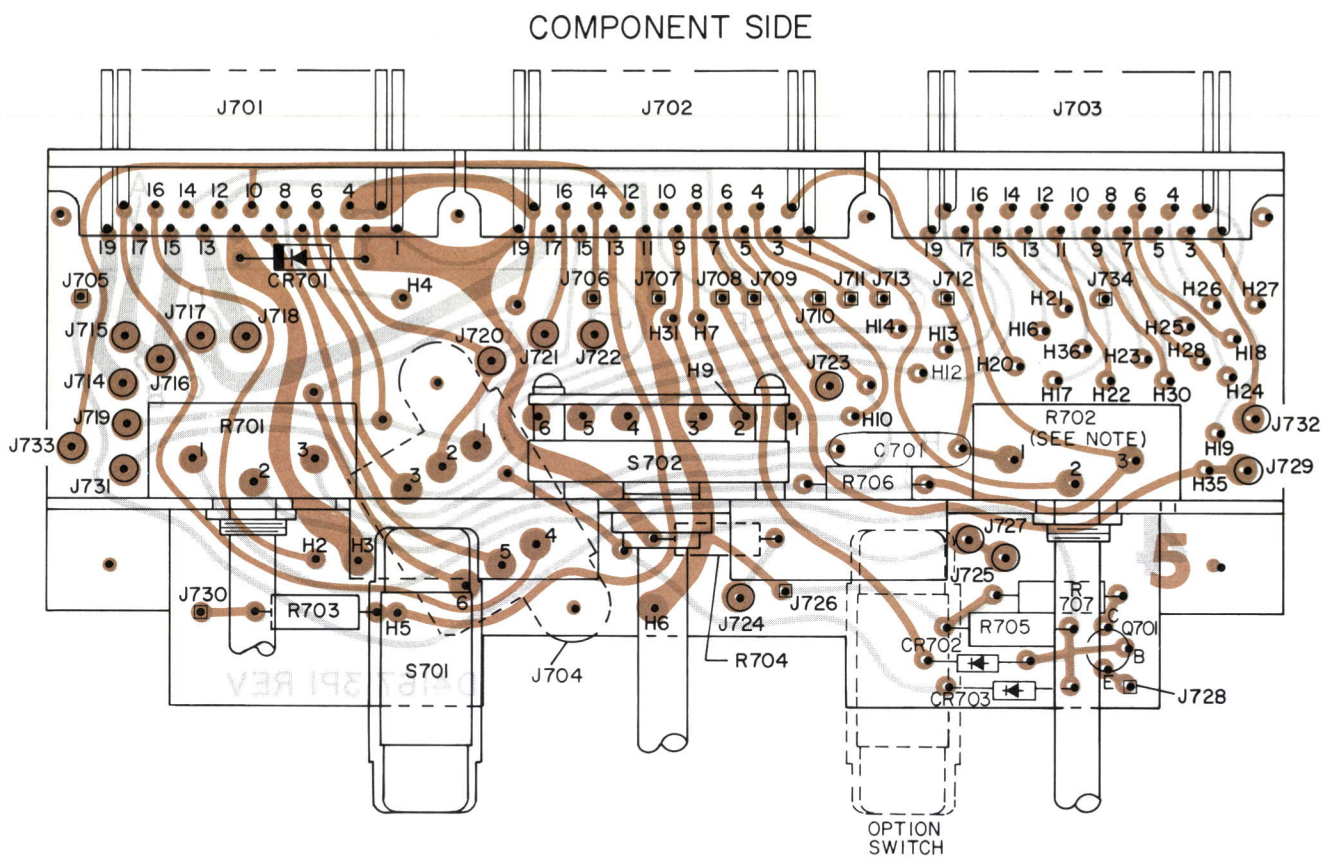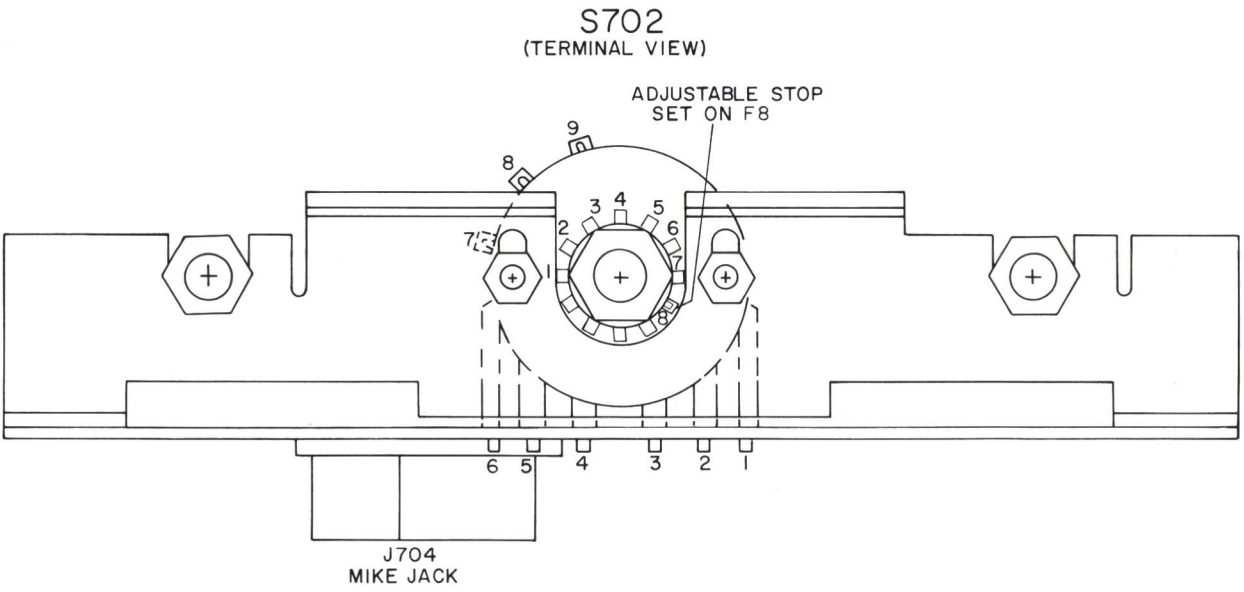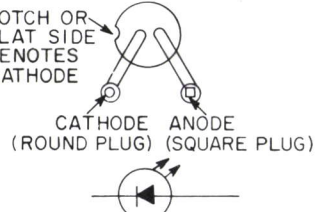

(19D417657, Rev. 2)  
(19D416713, Sh. 2, Rev. 4)  
(19D416713, Sh. 3, Rev. 5)

**OUTLINE DIAGRAM**  
1 THRU 8-FREQUENCY  
CONTROL UNIT

(19D416854, Rev. 8)



PARTS LIST		
LBI-4817B		
1-8 FREQUENCY CONTROL UNIT, AND ASSOCIATED ASSEMBLIES		
SYMBOL	GE PART NO.	DESCRIPTION
R702	19A116687P1	CONTROL UNIT INCLUDES: COMMON KIT 19A129578G1 AND ONE FREQ KIT 19A129577G1 1-8 FREQ KIT 19A129578G1  COMMON KIT 19A129578G1  ----- RESISTORS ----- Variable, carbon film: 10,000 ohms ±20%, 1/2 w; sim to Mallory LC-1A(10K).  COMPONENT BOARD 19D416737G3  ----- CAPACITORS ----- Polyester: 0.068 µf ±10%, 50 VDCW.  ----- DIODES AND RECTIFIERS ----- Silicon. Silicon. Diode, light emitting. Silicon.  ----- JACKS AND RECEPTACLES ----- Pin wafer assembly: 19 contacts.  J701 thru J703 J704 J705 thru J713 J714 thru J725 J726 J727 J728 J729 J730 J731 thru J733 J734
		19C320257P2
		19B219627G1
		19A116779P1
		4033513P4
		19A116779P1
		4033513P4
		19A116779P1
		4033513P4
		19A116779P1
Q701	19A115889P1	----- TRANSISTORS ----- Silicon, NPN.  ----- RESISTORS ----- Variable, carbon film: 10,000 ohms ±20%, 1/4 w; sim to Mallory M204. Composition: 1500 ohms ±10%, 1/2 w.  Composition: 39,000 ohms ±10%, 1/2 w. Composition: 10 ohms ±10%, 1/2 w. Composition: 1500 ohms ±10%, 1/2 w.
		3R77P152K
		3R77P393K
		3R77P100K
		3R77P152K
P701	19A116687P2	Variable, carbon film: 10,000 ohms ±20%, 1/4 w; sim to Mallory M204. Composition: 1500 ohms ±10%, 1/2 w. Composition: 39,000 ohms ±10%, 1/2 w. Composition: 10 ohms ±10%, 1/2 w. Composition: 1500 ohms ±10%, 1/2 w.
		3R77P152K
		3R77P393K
		3R77P100K
		3R77P152K

SYMBOL	GE PART NO.	DESCRIPTION
S701	19A116622P5	----- SWITCHES ----- Push: DPST, 0.5 amp VDC or 3.0 amps at 125 v; sim to Switchcraft 11K1040.  FREQUENCY INDICATOR LIGHT ASSEMBLY 19B219696G2  ----- DIODES AND RECTIFIERS ----- Diode, optoelectronic: red; sim to Opcoa LSM-6.  ----- PLUGS ----- Contact, electrical: sim to Amp 42827-2. Terminal, solderless: sim to Malco 12093-10.  ONE FREQUENCY KIT 19A129577G1  Knob plug. (See RC-2447 item 23). Nut, push on: sim to Tinnerman C1259-014-27. (See RC-2447 item 24). Diffuser. (See RC-2447 item 25).  1-8 FREQUENCY KIT 19A129578G1  ----- SWITCHES ----- Rotary: 1 section, 1 pole, 8 positions (supplied with adj stop), non-shorting contacts, 2 amps at 28 VDC or 1 amp at 110 V RMS; sim to Oak Mfg Type "P". Knob. (See RC-2447 item 6). Frequency Indicator. (Includes items 7-10 on RC-2447). Hex nut: No. 4-40. Lockwasher: No. 4.  CHANNEL BUSY OPTION 19A129578G6  ----- DIODES AND RECTIFIERS ----- Diode, red light emitting. Clip, spring tension. (Secures CR706).
		19A134146P16
		4029840P2
		19A127042P2
		19B219626P1
		7140578P4
		19A130009P1
		19A116697P1
		19B219825G1
		19B219699G1
S702	19A116697P1	7141225P2
		N404P11C6
		19B219800G1
		19A116807P1
		19B219800G2
		19A116807P1
		19B219988G1
		4032480P1
		N80P9006C6
		19A116779P1
S1	19B219988G1	Slide: SPST, 1 pole, 2 positions, .5 amp VDC or 3 amps VAC at 125; sim to Switchcraft 46202LH. Nut, sheet spring. (Secures S1). Machine screw, Phillips: No. 4-40 x 3/8.  FIXED SQUELCH OPTION  ----- SWITCHES ----- SWITCH ASSEMBLY 19A129567G3  ----- PLUGS ----- Contact, electrical: sim to Bead Chain M125-34. Contact, electrical: sim to Bead Chain M125-34.  ----- RESISTORS ----- Resistor, composition: 10,000 ohms ±5%, 1/2 w.  ----- SWITCHES ----- Switch, rotary: 1 section, 1 pole, 2 positions, non-shorting contacts, 2 amp at 28 VDC or 1 amp at 110 V RMS; sim to Oak Type "22" Series.
		4033348P1
		4033348P1
		3R77P103J
		19A129628G1
P1723	4033348P1	Variable, carbon film: 10,000 ohms ±20%, 1/4 w; sim to Mallory M204. Composition: 1500 ohms ±10%, 1/2 w. Composition: 39,000 ohms ±10%, 1/2 w. Composition: 10 ohms ±10%, 1/2 w. Composition: 1500 ohms ±10%, 1/2 w.
		3R77P152K
		3R77P393K
		3R77P100K
		3R77P152K


SYMBOL	GE PART NO.	DESCRIPTION
1	19A116807P1	MECHANICAL PARTS (SEE RC-2447)  Clip, spring tension. Tap screw: thd size No. 7-19 x 3/8. Tap screw, Phillips POZIDRIV®: No. 4-40 x 1/4. Washer: No. 8. Housing. Knob. Frequency indicator. Nameplate. (1-12). Nameplate. (OFF, A-H). Retainer strap: sim to Tinnerman C2386-020-1. Tap screw: No. 4-40 x 1/4. Hex nut: No. 4-40. Lockwasher, internal tooth: No. 4. Adjustable stop. Safety release disc. Retaining bracket. Screw, hexhead, slotted: No. 10-32 x 5/8. (Quantity 1, used with safely release disc and retaining bracket). Screw, hexhead, slotted: No. 10-16 x 3/4. (Quantity 3, used without safely release disc and retaining bracket). Mounting bracket. Cover. Tap screw, assembled washer: No. 13-16 x 3/4 with No. 10 hexhead. Nameplate. (MASTR II SOLID STATE). Knob plug. (Frequency switch S702). Nut, push on: sim to Tinnerman C1259-014-27. (Used with item 23). Diffuser. Washer, spring: sim to Shakeproof 3544-14-00.
		19B209245P103
		19A134241P1
		19B201074P204
		N402P8C6
		19C320389G1
		19B219825G1
		19C320175P1
		NP270754A
		NP270754B
P701	19B226516G3	19A129504G1
		19A129504G1
		19A129504G1
		19A129504G1
		19A129504G1
		19A129504G1
		19A129504G1
		19A129504G1
		19A129504G1
		19A129504G1
P702	19B226516G1	19A116781P5
		19A116781P5
		19A116781P5
		19A116781P5
		19A116781P5
		19A116781P5
		19A116781P5
		19A116781P5
		19A116781P5
		19A116781P5
P703	19B226516G2	19A116781P6
		19A116781P6
		19A116781P6
		19A116781P6
		19A116781P6
		19A116781P6
		19A116781P6
		19A116781P6
		19A116781P6
		19A116781P6
P901	19C307162P1	19A134240P1
		19A134240P2
		19A134240P3
		7138880P14

SYMBOL	GE PART NO.	DESCRIPTION
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1

SYMBOL	GE PART NO.	DESCRIPTION
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1

SYMBOL	GE PART NO.	DESCRIPTION
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1

SYMBOL	GE PART NO.	DESCRIPTION
P701	19B226516G3	19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
		19A129480G1
P701	19B226516G3	19A129480G1
		19A129480G1

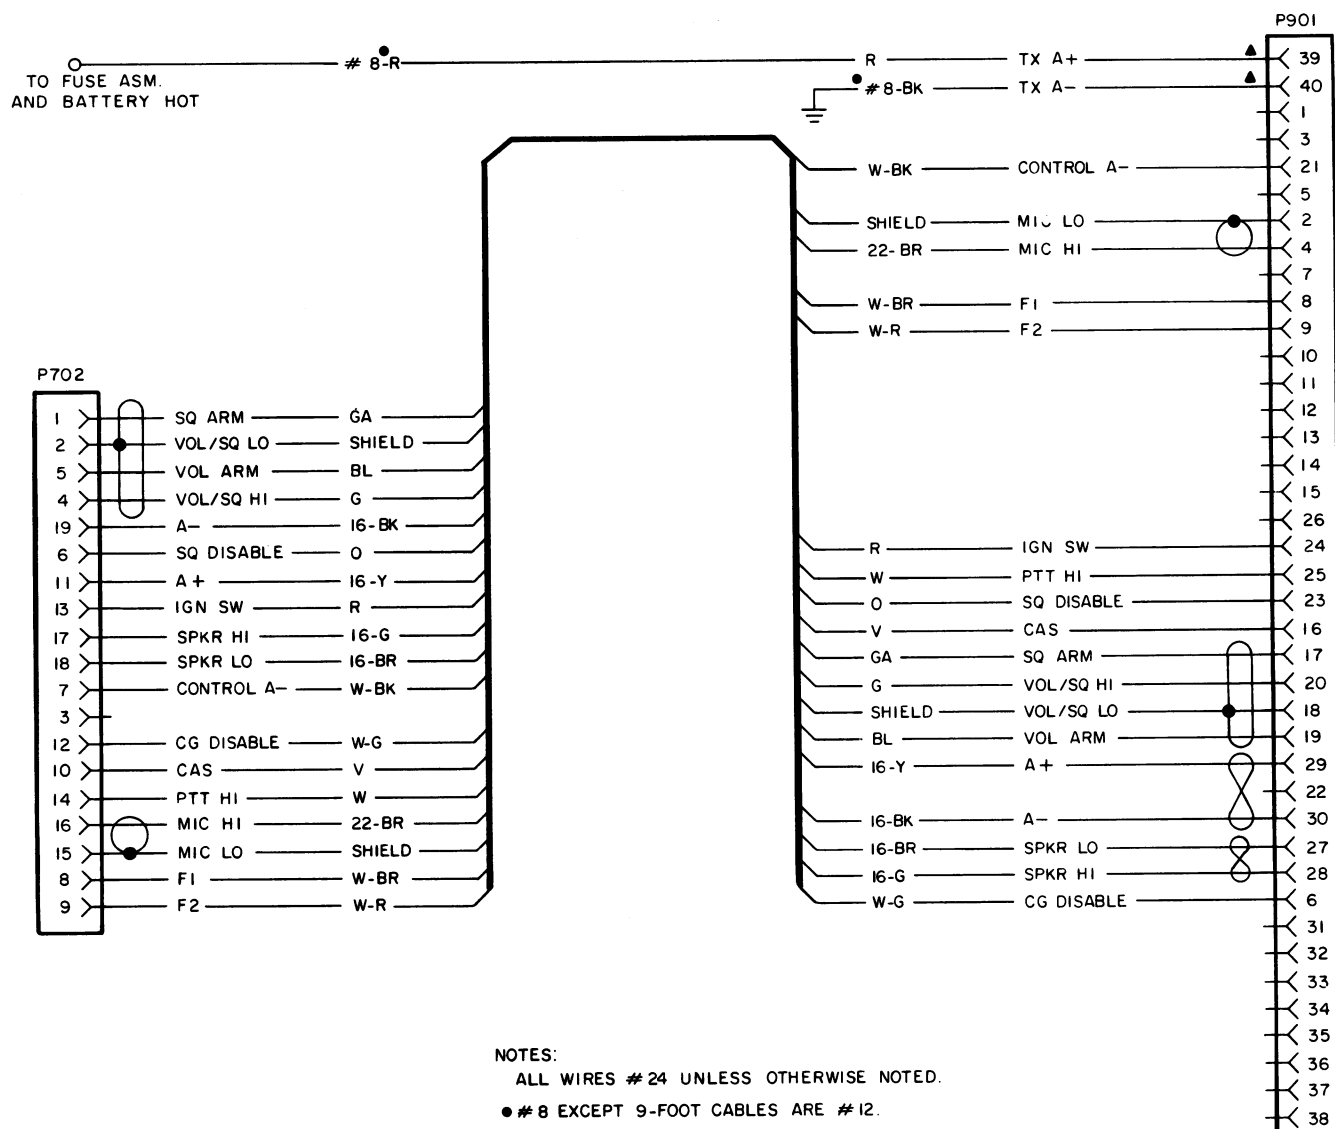

## NOTES:


ALL WIRES # 24 UNLESS OTHERWISE NOTED.

● # 8 EXCEPT 9-FOOT CABLES ARE # 12.

▲ RED AND BLACK TX LEADS ARE SHOWN CONNECTED  
FOR NEGATIVE GROUND. FOR POSITIVE GROUND,  
CONNECT RED LEAD TO P901-40 AND BLACK TO P901-39.

(19C321783, Rev. 2)

**WIRING DIAGRAM****OPTIONAL 18-CONDUCTOR  
POWER/CONTROL CABLE**

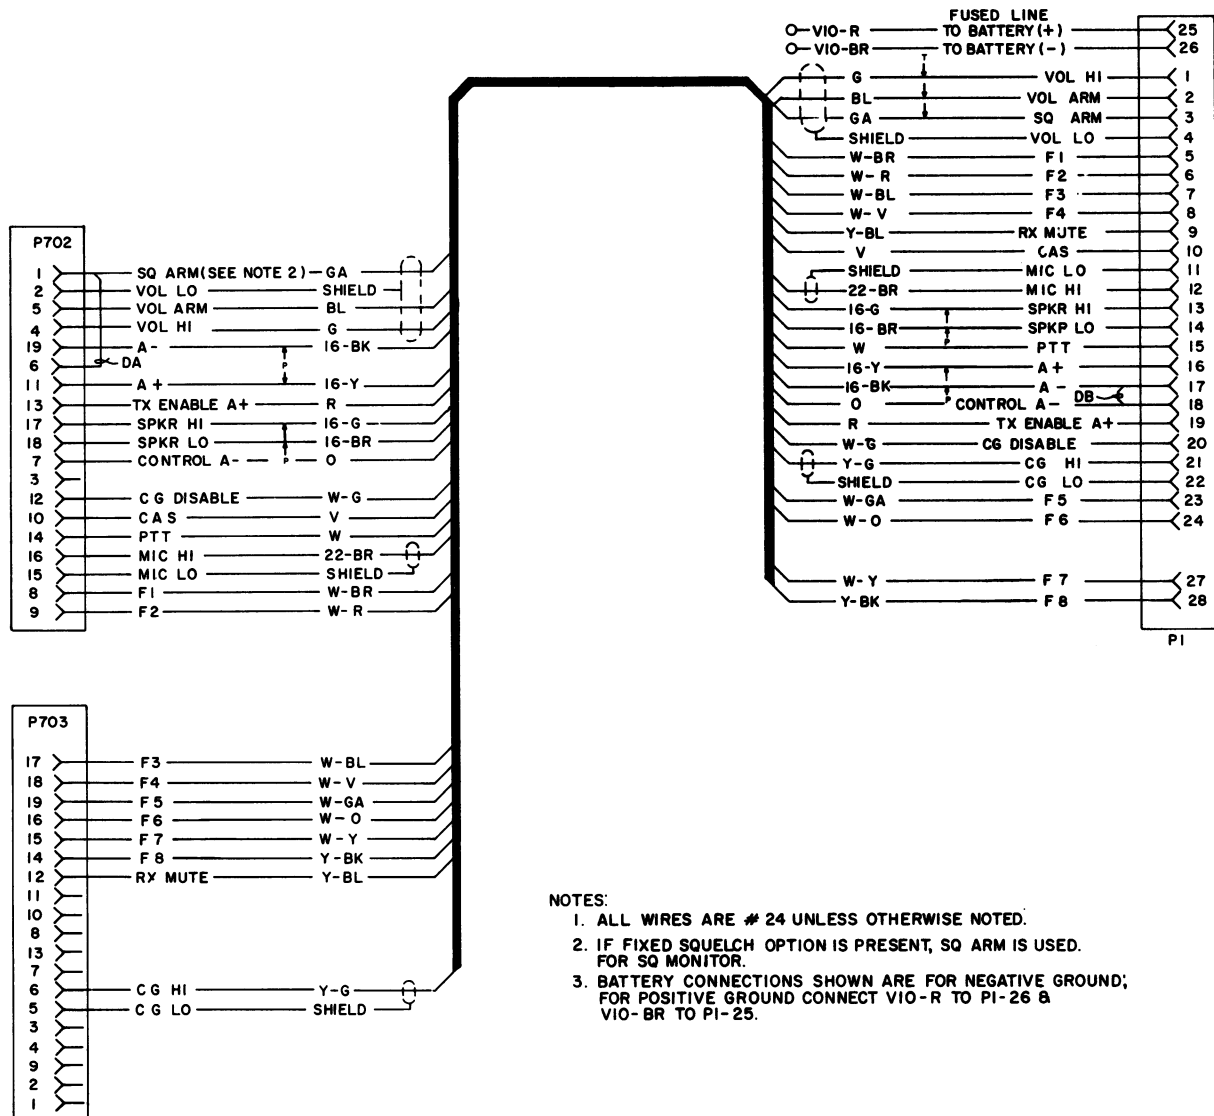

## NOTES:


1. ALL WIRES ARE # 24 UNLESS OTHERWISE NOTED.
2. IF FIXED SQUELCH OPTION IS PRESENT, SQ ARM IS USED. FOR SQ MONITOR.
3. BATTERY CONNECTIONS SHOWN ARE FOR NEGATIVE GROUND; FOR POSITIVE GROUND CONNECT VIO-R TO P1-26 & VIO-BR TO P1-25.

(19C321630, Rev. 3)

**WIRING DIAGRAM**


MASTR II/EXEC II INTERFACE  
POWER/CONTROL CABLE 19C321890G1

OUTLINE DIAGRAM

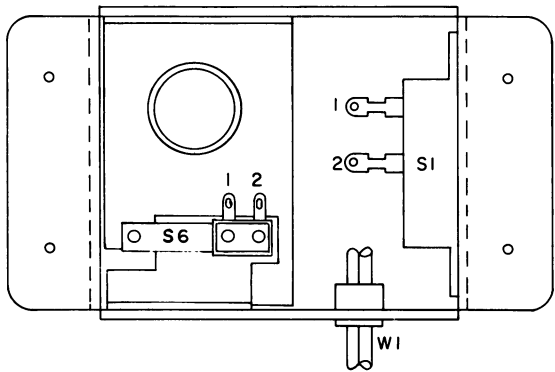

(19B227626, Rev. 0)

SCHEMATIC DIAGRAM

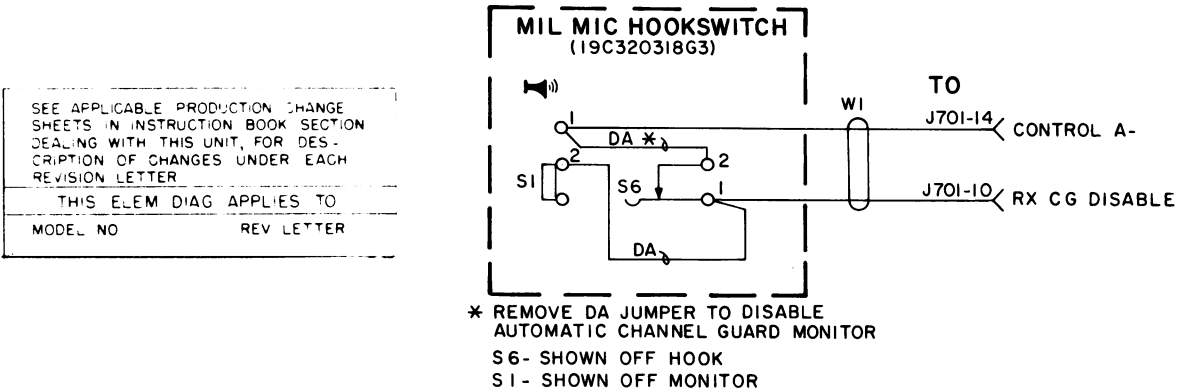

(19A136836, Rev. 0)

PARTS LIST

LBI-30449

MICROPHONE HOOKSWITCH  
19C320318G3

SYMBOL	GE PART NO.	DESCRIPTION
S6	19A134398P1	----- SWITCHES ----- Push: sim to Chicago Switch S-1527-1.
		----- CABLES ----- Cable: 2 conductor; approx 5 feet long, includes (2) 19A116781P3 contacts.
W1	19A129414G1	----- MISCELLANEOUS ----- Base plate.
		Bushing, strain relief: sim to Heyco SR-3P-4.
		Tap screw: No. 8-18 x 5/8. (Secures base plate to mounting surface).
		19B219694P1
		19A116768P6
	N193P1410C	Tap screw: No. 8-18 x 5/8. (Secures base plate to mounting surface).
	19A134398P101	Metal plate. (Used with S6).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES


PARTS LIST

LBI-4481A

TRANSISTORIZED DYNAMIC MICROPHONE  
19C320270G1  
(SEE RC-2454)

SYMBOL	GE PART NO.	DESCRIPTION
1		Front Case Assembly. RP127. (includes items 14, 15).
2		Retaining spring. (Part of item 18).
3		Tap screw, phillips. (Part of item 16).
4		Retaining bar. (Part of item 16).
5	19D416766P1	Connector base.
6	19A129435P1	Contact.
7	7109043P1	Retaining ring.
8	19D416767P1	Connector cover.
9	19B219723G1	Screw.
10	N136AP905C	Tap screw, phillips: No. 4 x 5/16.
11	19A116937P1	Cable clip.
12	19B219749P1	Strain relief.
13		Switch button kit. RP126.
14		Rear Case Assembly. (Part of item 1).
15		Tap screw, phillips. (Part of item 1).
16	19C321016G1	Cable assembly: Includes items 3-12 and cable RP129.
17		Switch Assembly. RP128.
18		Grille Assembly. RP130. (includes items 2, 19, 21).
19		"O" Ring. (Part of item 18).
20		Transistorized Cartridge. RP117.
21		Washer. (Located under cartridge- part of item 18).
22	19C321016G3	Connector assembly: Includes items 5-12.


\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

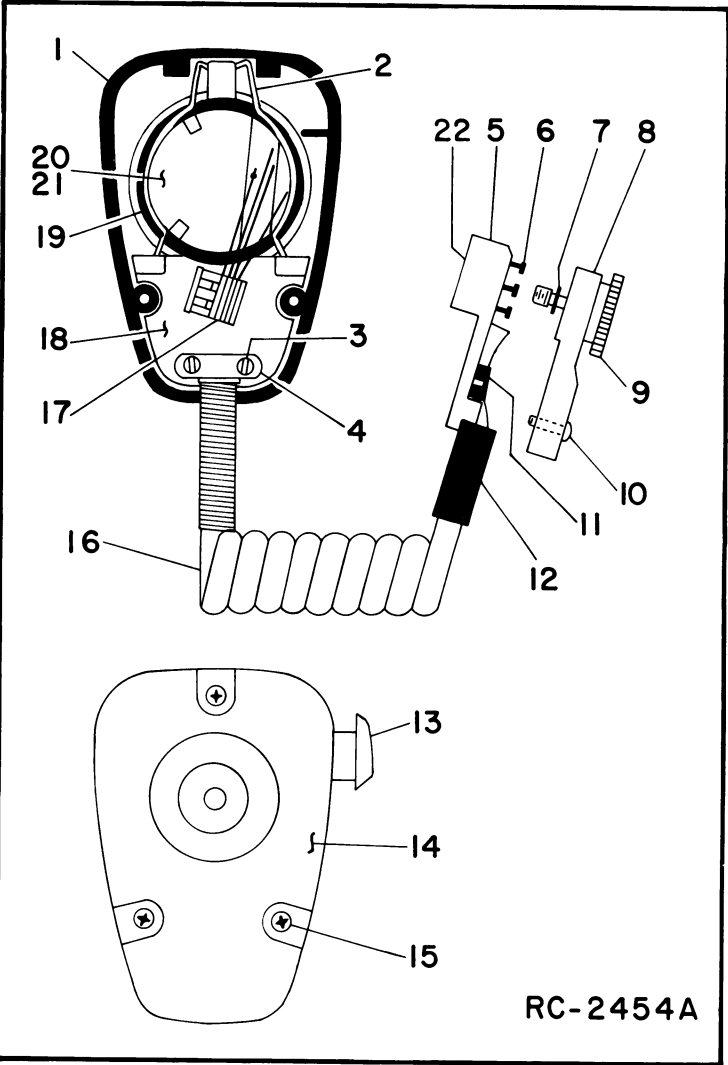

RC-2454A


SERVICE SHEET  
MICROPHONE & HOOKSWITCH

OUTLINE DIAGRAM

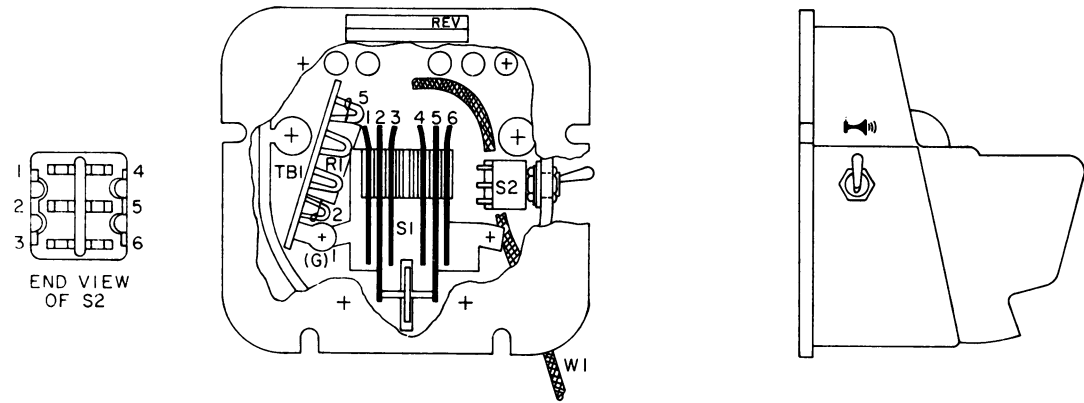

(19B226131, Rev. 0)

SCHEMATIC DIAGRAM

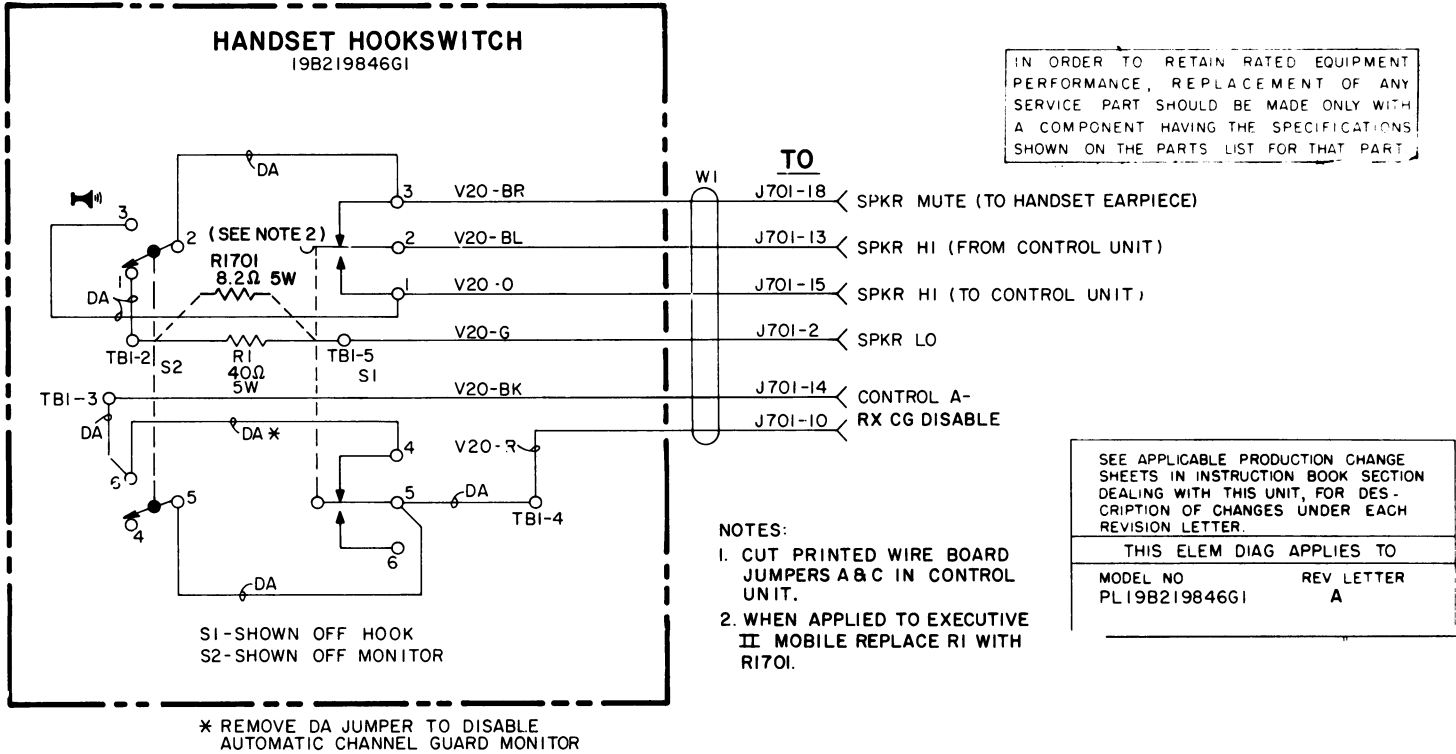

(19B219842, Rev. 7)

SERVICE SHEET  
HANDSET & HOOKSWITCH

PARTS LIST

LBI-4484B

HANDSET HOOKSWITCH  
19B219846G1

SYMBOL	GE PART NO.	DESCRIPTION
R1*	5493035P11	----- RESISTORS ----- Wirewound: 40 ohms ±5%, 5 w; sim to Hamilton Hall Type HR.
	5493035P12	Earlier than REV A: Wirewound: 60 ohms ±5%, 5 w; sim to Hamilton Hall Type HR.
S1	19A129585P1	----- SWITCHES ----- Holder and switch: Thermoplastic case, contact rating 1 amp at 125 v.
	19A116877P6	Toggle: DPDT, 1 ma at 6 VDC; sim to C and K Components 7201G. (CHANNEL GUARD DISABLE).
TB1	7775500P203	----- TERMINAL BOARDS ----- Phen: 5 terminals.
W1	19B219841G1	----- CABLES ----- 6 conductor, 5 feet long.
	N190P1312C	----- MISCELLANEOUS ----- Tap screw, phillips pozidriv: No. 6 x 3/4. (Secures housing to base plate).
	N101P1510P	Tap screw, phillips: No. 8-15 x 5/8. (Used for mounting base plate).
	19A129586P1	Bumper, rubber. (2).
EXECUT.VE II MODIFICATION KIT 19A136767G1		
R1701	5493035P52	Resistor, wirewound: 8.2 ohms ±10%, 5 w; sim to Hamilton Hall Type HR.
	19A136775	Label.

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

PRODUCTION CHANGES

Changes in the equipment to improve performance or to simplify circuits are identified by a "Revision Letter", which is stamped after the model number of the unit. The revision stamped on the unit includes all previous revisions. Refer to the Parts List for descriptions of parts affected by these revisions.

REV. A - Handset Hookswitch 19B219846G1  
To improve the operation of the audio output stage by lowering the off-hook terminating resistance.  
Changed R1.


PARTS LIST

LBI-4482A

TRANSISTORIZED DYNAMIC HANDSET  
19C320478G1

SYMBOL	GE PART NO.	DESCRIPTION
1		Case Assembly. Includes items 1, 2, 4, 5, 11, 12, 26. Shure Brothers RP142.
2		Adapter. Part of item 1.
3		Receiver Cartridge. Shure Brothers RP140.
4		Receiver Cap. Part of item 1.
5		Washer. Part of item 1.
6		Escutcheon. Part of item 27.
7		Flat head screw, socket cap: No. 4-40 x 1/4. Part of item 27.
8		Actuator. Part of item 27.
9		Spring. Part of item 27.
10		Plunger bar. Part of item 27.
11		Transmitter cap. Part of item 1.
12		Washer. Part of item 1.
13		Transmitter cartridge. Shure Brothers RP139.
14	19C321016G2	Cable assembly: Includes items 14-23 and cable RP141.
15	19B219749P1	Flex relief.
16	19A116937P1	Cable clamp: sim to Malco 21012-3.
17	3R77P472K	Resistor, (R1) Composition, 4700 ohms ±10%, 1/2 w.
18	19D416766P1	Connector case.
19	N136AP905C	Screw.
20	19A129435P1	Pin contact.
21	7109043P1	Retaining ring. 3/16 inch, sim to National Lockwasher WA 510.
22	19D416767P1	Connector Cover.
23	19B219723G1	Screw. (Secures cover, item 22 to case, item 18).
24		Screw. Part of item 14.
25		Cable clamp. Part of item 14.
26		Shield. Part of item 1.
27		Switch Assembly. Includes items 6-10. Shure Brothers RP143.
28	19C321016G3	Connector assembly: Includes items 15, 16, 18-23. Does not include resistor, item 17.

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES

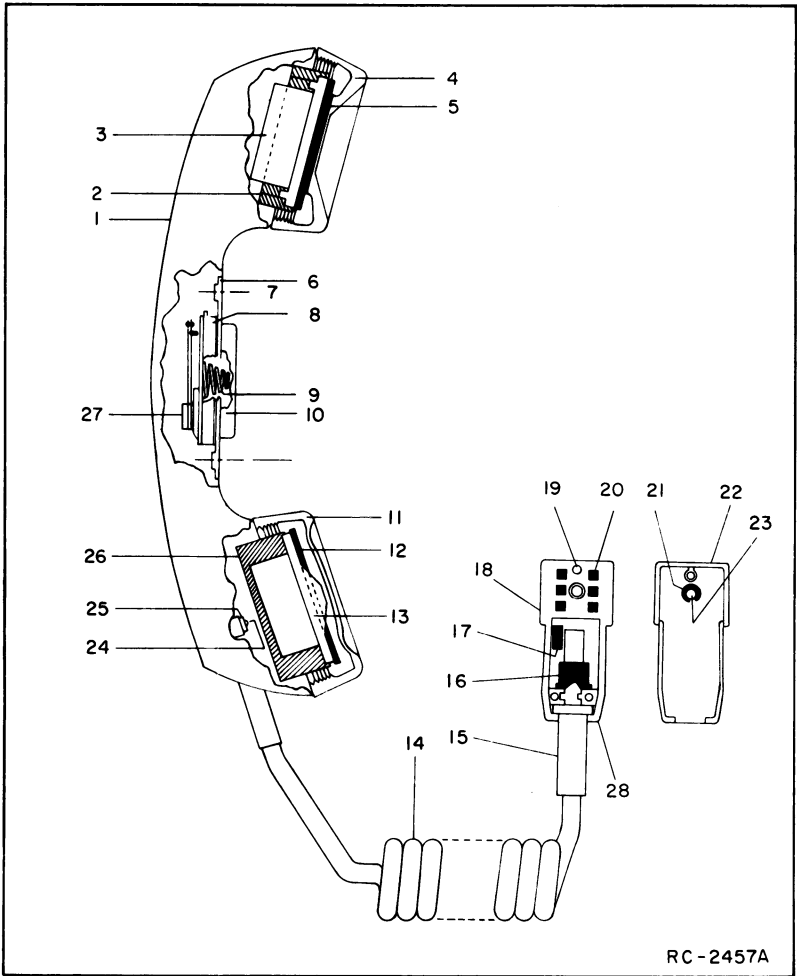

# PARTS LIST

LBI-4760

LBI-4488

SPEAKER  
19C320302G1

SYMBOL	GE PART NO.	DESCRIPTION
LS1	19A116694P1	----- LOUDSPEAKERS ----- Permanent magnet, 5 inch: 20 watts, 8 ohms ±10% imp, 100 to 10,000 Hz response: sim to Oaktron T2877.
		----- CABLES ----- 2 conductor cable: approx 5 feet long, includes (2) 19A116781P3 contacts.
W1	19A129414G1	----- MISCELLANEOUS ----- Grille.
		Housing.
		Mounting bracket. (Located between housing and retaining bracket).
		Retaining bracket. (Located between mounting bracket and safety release disc).
		Safety Release Disc.
		Tap screw, with lockwasher: No. 7-19 x 1/2. (Secures speaker to housing).
		Tap screw, with lockwasher: No. 7-19 x 3/4. (Secures grille to housing).
		Tap screw, with lockwasher: No. 13-16 x 3/4. (Secures mounting bracket to housing).
		Screw, hexhead, slotted: No. 10-32 x 5/8. (Quantity 1- used with safety release disc and retaining bracket).
		Screw, hexhead, slotted: No. 10-16 x 3/4. (Secures mounting bracket or retaining bracket).

\*COMPONENTS ADDED, DELETED OR CHANGED BY PRODUCTION CHANGES





## ORDERING SERVICE PARTS

Each component appearing on the schematic diagram is identified by a symbol number to simplify locating it in the parts list. Each component is listed by symbol number, followed by its description and GE Part Number.

Service parts may be obtained from Authorized GE Communication Equipment Service Stations or through any GE Radio Communication Equipment Sales Office. When ordering a part, be sure to give:

1. GE Part Number for component
2. Description of part
3. Model number of equipment
4. Revision letter stamped on unit

---

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance.

Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser's purposes, contact the nearest Radio Communication Equipment Sales Office of the General Electric Company.

---

MOBILE RADIO DEPARTMENT  
GENERAL ELECTRIC COMPANY • LYNCHBURG, VIRGINIA 24502

